

### Kettle SWKS 2400 A1

61



GB **Kettle**  
IE Operating instructions



<b>CONTENT</b>	<b>PAGE</b>
<b>Intended Use</b>	<b>2</b>
<b>Technical data</b>	<b>2</b>
<b>Safety instructions</b>	<b>2</b>
<b>Items supplied</b>	<b>2</b>
<b>Operating Elements</b>	<b>2</b>
<b>Start-up</b>	<b>3</b>
<b>Boiling water</b>	<b>3</b>
<b>Cleaning and Care</b>	<b>4</b>
<b>Storage</b>	<b>4</b>
<b>Disposal</b>	<b>5</b>
<b>Warranty and Service</b>	<b>5</b>
<b>Importer</b>	<b>5</b>

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

# KETTLE

---

## Intended Use

---

This appliance is intended for the boiling-up of water in domestic households. It is not intended for use with other liquids or for commercial use.

## Technical data

---

Voltage :	220 - 240 V ~ / 50 Hz
Power consumption :	2000 - 2400 W
Volume:	max. 1.7 l min. 0.7 l

ⓘ In older electrical installations, the building fuse (12A) may be triggered due to the high power consumption.

## Safety instructions

---

### **⚠ To avoid potentially fatal injury through electric shock:**

- Ensure that the base with the electrical connections does not come into contact with water! Ensure that the base is completely dry before use, especially if it has accidentally become wet.
- Only use the water boiler with the supplied base.
- Make sure that the power cord never becomes wet or damp during operation. Lay the cord such that it cannot be pinched or otherwise damaged.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Always pull the plug out of the power socket after use. Switching off the appliance is not sufficient because the appliance receives power as long as the power plug is connected to the socket.

### **⚠ To avoid burns and other injuries:**

- Always heat water with the lid closed, otherwise the automatic cut-out may not function. Boiling water can then spray out over the edge.
- Hot steam clouds may be released. The kettle also becomes very hot during use. Wear oven mitts.
- Ensure that the appliance is standing securely and vertically before switching it on. Boiling water can cause an unstable kettle to fall over.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use an external timing switch or a separate remote control system to operate the appliance.

## Items supplied

---

Kettle  
Base  
Operating instructions

## Operating Elements

---

- 1 Lid
- 2 Unlocking button
- 3 On/Off switch
- 4 Base
- 5 Rolled-up cable
- 6 Control lamp
- 7 Scale
- 8 Pourer sieve

## Start-up

---

- Before taking the appliance into use, ensure that ...
- the appliance, the plug and the power cable are in good working order and...
- all packaging materials have been removed from the appliance.
- Fill the appliance with water up to the MAX mark and let it come to a full boil once – as described in the next section.
- Pour this water away when the procedure has been completed.
- Rinse the kettle out with clear water.
- Fill the appliance with water up to the MAX marking on the scale **7** and then bring it to the boil. Once again, pour this water away.

The appliance is now ready for use.

## Boiling water

---

### **Danger**

Never place the electrical base **4** in close proximity to water – a potentially fatal risk!

### **Notice**

Always use freshly drawn water. Do not consume any water that has already stood in the water boiler for longer than one hour. Do not reboil water that has cooled down. Always pour old water away.

Microbes could have formed in it!

- Lift the kettle off of the base when filling it!
- Press the unlocking button **2** and open the lid **1**.
- Hold the kettle upright while filling it. Only in this way can you correctly read the markings on the scale **7**. Fill the kettle...
  - at least to the MIN mark, so that the appliance does not overheat,
  - no higher than the MAX mark, so that no boiling water spills out.
- First close the lid **1**...
- then place the kettle on the base **4** so that it stands straight on the base **4**.
- Now insert the plug into the power socket.
- Press the ON/OFF switch **3** down until it engages downwards.
- The control lamps **6** indicates that the appliance is now heating up.
- The appliance switches itself off and the control lamps **6** go out as soon as the water is on the boil. The ON/OFF switch **3** is released upwards.

### **Warning**

First remove the plug from the wall power socket before you lift the kettle from the base **4**. This avoids the risk that any water splashing out could come into contact with live electrical connections in the base **4**, which could cause a short circuit.

### **Injury hazard**

For safety reasons, the lid **1** should not be opened while the water is boiling or is very hot. There is a risk of receiving severe scalds.

## Cleaning and Care

---

### **Danger**

Do not open any part of the housing. There are no operating elements inside. An open housing can create the risk of a life-threatening electrical shock.



Never submerge any parts of the appliance in water or other liquids! This can create the risk of a life-threatening electrical shock if residual liquid comes into contact with powered components.

### **Before cleaning the appliance,...**

- first, remove the plug from the power socket and allow the appliance to cool down completely.
- Clean the exterior surfaces and the power cable with a slightly damp cloth. Be sure to dry the appliance well before taking it back into use.
- For stainless steel surfaces, you can use appropriate cleaning agents from a specialized dealer.
- Never use any cleansers, abrasive substances or solvents. These can damage the appliance.

### **In the event of scale deposits**

- Before descaling, remove the pourer sieve **8** (see chapter "Removing/replacing the pourer sieve").
- Take any decalcifying agent used for kitchen utensils (e.g. decalcifiers for coffee machines) from a grocery shop. Proceed as detailed in the instructions provided for the use of the decalcifying agent.

### **Removing/replacing the pouring sieve**

- Open the lid **1**.
- Press from the front against the upper lug sitting in the middle of the pouring sieve **8** and at the same time hold it firmly by the flap.
- Remove the pourer sieve **8**.
- Clean the pouring sieve **8** with a lightly moistened dishcloth and under running water.
- After cleaning it, place the pourer sieve **8** from inside against the opening. Ensure that the lower and the lateral lugs grip the opening. Press the pourer sieve **8** until the upper lug engages in the opening.
- Should the scale deposits in the pourer sieve **8** be firmly settled, lay it in a water-vinegar solution, with a ratio of 6:1, for a few hours. The scale deposits will dissolve themselves. Rinse the pourer sieve **8** with lots of clear water.

## Storage

---

Allow the appliance to cool off completely before putting it into storage.

- Wind the power cable around the cable winder **5** under the base **4**.
- Store the appliance in a dry place.

## Disposal

---



**Do not dispose of this appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.



Dispose of the packaging materials in an environmentally responsible manner.

## Warranty and Service

---

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

**GB** DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

**IE** Kompernass Service Ireland

Tel.: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

## Importer

---

KOMPERNASS GMBH

BURGSTRASSE 21

D-44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>