

■ "TOUCH IT" TABLE LAMP



KH 4112




KH 4113




KH 4114

GB "TOUCH IT" TABLE LAMP
IE Operating instructions
CY

KH4112

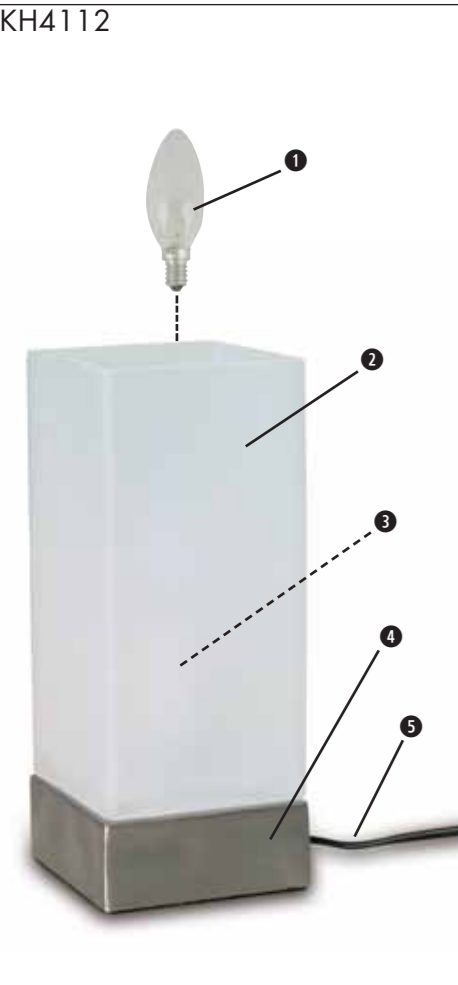

KH4114

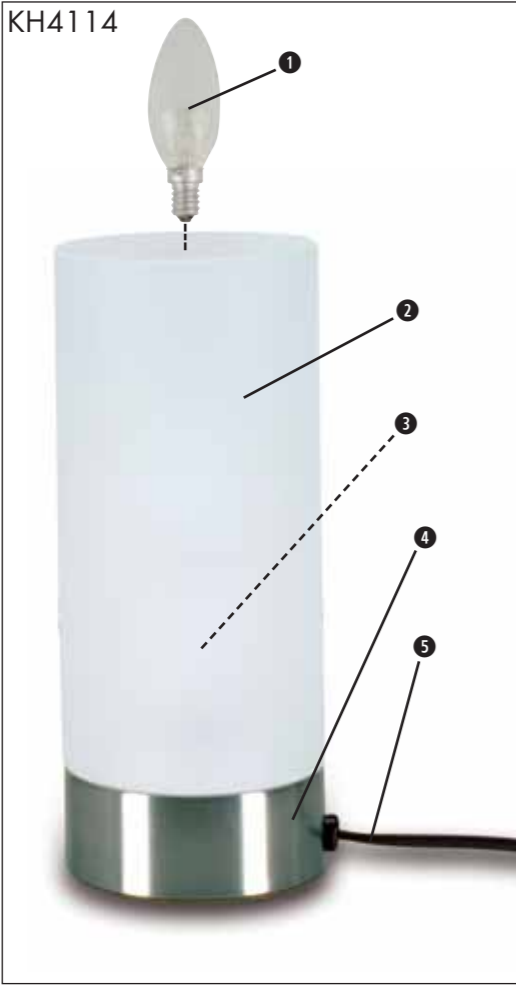

KH4113



"TOUCH IT" TABLE LAMP KH 4112/13/14

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

1. Safety instructions

Danger:

Should moisture/water permeate into the table lamp, ...

- there is the danger of receiving an electric shock!
- it may be irreparably damaged!

Thus:

Do not use or store the table lamp ...

- in a humid environment!
- in close proximity to water! Additionally, never subject the table lamp to spray water or rain. NEVER place receptacles filled with water or other fluids, for example flower vases, on the table lamp!

Risk of Burns!

Hot surfaces. NEVER touch the lamp shade when the appliance is in use.

Risk of personal injury!


- Remove the table lamp plug from the wall power socket before changing the bulb. If the table lamp was previously switched on: allow the table lamp, and the bulb that is to be replaced, to first cool down for at least half an hour.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.

- Clean the table lamp only after you have first withdrawn the plug from the wall power socket. Otherwise, there is the great risk of receiving an electric shock!
- Lay the power cable in such a way that no one can tread on or trip over it.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance..

Beware of appliance damage!

- The table lamp can be irreparably damaged if it tips over or falls down! For this reason, always place the table lamp on a solid, level, slip-proof surface.
- Use only light bulbs that match the specifications detailed in these operating instructions.
- Do not use an extension cable. The appliance plug must be easily accessible in the event of an emergency.

Risk of fire!

-  The table lamp and the bulb will become hot when it is in use!

Thus:

- Do not cover the table lamp while it is switched on. Also, do not hang any objects over the table lamp.
- Do not place any easily inflammable/combustible materials in the immediate vicinity of the table lamp while it is switched on.

i Note:

For damage resulting from ...

- opening of the table lamp base / the transformer housing
- attempted repairs made by non-qualified personnel
- improper use of the table lamp

no liability/warranty is accepted!

2. Proper Use

The table lamp is intended exclusively ...


- as an illumination and decorative object for interior rooms (no damp rooms)
- for domestic, non-commercial use.

3. Items supplied

Table lamp

Operating instructions

4. Technical data

Power supply:	230-240 V ~ 50Hz
Power consumption :	40 W
Bulb:	40W 230V E14
Protection class:	II 

5. Controls

- ① Bulb (not supplied)
- ② Lamp shade
- ③ Socket
- ④ Base with touch sensor as on/off switch and dimmer
- ⑤ Power cable
- ⑥ Covering cap (KH4113 only)

6. Select a suitable installation site

Always place the table lamp on a solid, level, slip-proof surface.

To avoid malfunctioning, do not place the table lamp on metallic surfaces.

Do not place any easily inflammable/combustible materials in the immediate vicinity of the table lamp while it is switched on. Do not cover the table lamp while it is switched on. Also, do not hang any objects over the table lamp.

Do not place the table lamp on metallic objects.

⚠ Otherwise there is a risk of a short-circuit or fire!

7. Preparing the table lamp for use

1. Carefully remove the table lamp from the packaging.
2. KH 4112/KH 4114: Screw the light bulb ① (not supplied) into the bulb holder ③.
3. KH 4113: Carefully remove the lampshade ② upwards from the table lamp. Loosen the covering cap ⑥ from the table lamp. Screw the bulb ① (not supplied) into the bulb socket ③. Replace the lampshade ② back onto the table lamp. Secure it with the help of the covering cap ⑥.
4. Unwind the power cable ⑤ to its full length. Insert the power cable ⑤ into a power plug.

The table lamp is now ready for use.

8. Using the table lamp

- Switch the table lamp on by touching the base ④ with a finger (KH4113: touch the base ④ or the stand). The table lamp now lights up at the lowest brightness level.

- To switch it to the second brightness level: touch the base **4** a second time.
- To switch it on to the third brightness level: Touch the base **4** once again.
- To switch the table lamp off: touch the base **4** once again.

If you do not wish to use the table lamp for an extended period of time: Remove the power cable **5** from the power socket. To avoid damage, be careful not to kink the power **5** cable.

9. Changing the light bulb

Should the bulb **1** in the table lamp be defect, it must be exchanged for a new one. Additionally:

- Remove the power cable **5** of the table lamp from the power socket.

If the table lamp was previously switched on: Allow the lamp shade **2** and the light bulb **1** at least a half-hour to cool down before you continue.

⚠ The risk of burns is ever present!

- KH 41 12/KH 41 14: Screw the light bulb **1** out of the bulb holder **3** in an anti-clockwise direction.
- KH 41 13: Loosen the covering cap **6**. Carefully remove the lampshade **2** upwards from the table lamp. Then screw the old light bulb **1** out of the bulb holder **3**.
- Screw a new light bulb **1** into the bulb holder **3**. Use exclusively light bulbs of the type E14, 40 W.
- KH 41 13: Replace the lampshade **2** onto the table lamp. Secure it with the help of the covering cap **6**.
- Insert the power cable **5** into a power socket. The table lamp is once again ready for use.

10. Cleaning the table lamp

Before cleaning the table lamp, always remove its power cable from the power socket.

Clean the table lamp exclusively with a slightly damp cloth. Ensure that no moisture can permeate into the lamp!

⚠ Otherwise, there is the great risk of receiving an electric shock!

11. Troubleshooting

Problem

The table lamp does not function.

Possible causes / solutions

- Check to ensure that the power cable **5** is inserted into a power socket.
- Check to see if the light bulb **1** of the table lamp needs to be replaced. To do this, follow the steps described in section 9. "Changing the light bulb".
- Check to see if the power socket where the power cord **5** is plugged in is "live". To do this, connect another electrical device to the power socket.
- Check to see if the fuse or circuit breaker for the electrical circuit to which the table lamp is connected has been broken/triggered.

Other defects

Contact one of our service partners in your area if ...

- the listed functional defects cannot be corrected as described or
- other functional defects arise.

12. Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the European directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

13. Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. This appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase date. Should a claim need to be made under the warranty, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers **ONLY** claims for material and manufacturing defects, not for wearing or consumable or for damage to fragile components. This product is for private use only and is not intended for commercial applications.

The warranty will become void in the event of abusive and improper handling, use of force and internal tampering not carried or approved by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

DES Ltd

Units 14-15

Bilston Industrial Estate

Oxford Street

Bilston

WV14 7EG

Tel.: 0870/787-6177

Fax: 0870/787-6168

e-mail: support.uk@kompernass.com

Kompernass Service Ireland

Tel: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

14. Importer

KOMPERNASS GMBH

BURGSTRASSE 21

44867 BOCHUM, GERMANY

www.kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>