



## Strip Cut Shredder UAV 150 A1



 **Strip Cut Shredder**  
 Operating instructions



<b>Content</b>	<b>Page</b>
<b>Intended Application</b>	<b>2</b>
<b>Important safety instructions</b>	<b>2</b>
<b>Technical data</b>	<b>3</b>
<b>Items supplied</b>	<b>3</b>
<b>Appliance description</b>	<b>3</b>
<b>Commissioning</b>	<b>3</b>
<b>Operation</b>	<b>3</b>
<b>Cleaning</b>	<b>4</b>
<b>Non-functionality</b>	<b>4</b>
<b>Disposal</b>	<b>5</b>
<b>Warranty and Service</b>	<b>6</b>
<b>Importer</b>	<b>6</b>

Read the operating instructions carefully before using the device for the first time and preserve this booklet for later reference. Pass this manual on to whoever might acquire the device at a future date.

# Strip Cut Shredder

---

## Intended Application

---

This Strip Cut Shredder is intended exclusively for the shredding of paper. All other usages or modifications are regarded as being contrary to the operating instructions and carry with them a real risk of serious accidents.

## Important safety instructions

---




The following safety instructions must always be complied with when using electrical appliances:

- Do not place the appliance in close vicinity to sources of heat and water sources.
- Do not use the appliance close to inflammable or explosive materials and/or ignitable gases or in dusty environments.
- Do not use the appliance outdoors.

### **To avoid potentially fatal electric shocks:**

- Should the power cable or the plug become damaged, arrange for it/them to be repaired by authorised specialists or Customer Services as soon as possible.
- Arrange for damaged or malfunctioning appliances to be inspected and/or repaired by a qualified specialist or the Customer Service Department as soon as possible.
- Do not expose the appliance to rain and never use it in a humid or wet environment.
- Ensure that the power cable never becomes moist or wet during operation.

### **To avoid the risk of injury:**


- This Strip Cut Shredder attachment should be used by only one person at a time.
- Never leave the appliance unattended whilst in use.
- Keep loose clothing , long hair  and jewellery etc. well away from the cutter opening.
- NEVER place your fingers into the cutter opening .
- Keep pets away from the appliance. They could injure themselves.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- The packaging material can be a source of danger for children. Dispose of the material immediately after unpacking or keep it in a safe place not accessible to children.
- Lay the power cable in such a way that no one can tread on or trip over it.

### **Tips for safety:**

- Place the appliance in the immediate vicinity of an electrical power socket. Do not use an extension cable. Ensure that the appliance and the power socket are easily and quickly accessible in the event of an emergency.
- Never overburden the appliance. This Strip Cut Shredder attachment is designed for brief operating periods only.
- In cases of danger, immediately remove the electrical plug from the socket.
- NEVER use this Strip Cut Shredder attachment for tasks for which it was not designed.

- Always be attentive! Always pay attention to what you are doing and act with common sense. Never use the appliance when you are distracted or don't feel well.

## Technical data

Mains voltage:	220-240 V ~ 50 Hz
Rated current :	0,7 A
Rated output:	150 W
Protection class:	II 
Cutting process for paper:	Strip cut security level 2
Working width:	217 mm
Cutting capacity:	5 Sheets (80g/m <sup>2</sup> )
Collection container size:	
Length	min. 280 mm Max. 410 mm
Width	min. 115 mm

### Overheating protection

This appliance is fitted with overheating protection. Should the motor overheat due to an overload, the appliance switches itself off automatically. In this case, remove the plug and wait until the appliance has cooled down to room temperature. You can then reconnect the plug to the mains power socket and take the appliance back into use.

We recommend that, after 2 minutes of operation, you allow the appliance to cool down for approx. 60 minutes.

## Items supplied

Strip Cut Shredder  
Operating instructions

## Appliance description

- 1 Switch
- 2 Cutter opening
- 3 Power cable
- 4 Telescope arm

## Commissioning

- i Take note:** As every paper shredder is tested for functionality after manufacture, it could happen that paper remnants may be found in the cutters.

  - Place the Strip Cut Shredder attachment onto a suitable container:  
First place the broad end of the appliance on the edge of the container. Then pull the telescope arm **4** out sufficiently to ensure that this also sits securely on the edge of the container.
  - Insert the plug into a mains power socket.

## Operation



You can shred up to 5 sheets (80g/m<sup>2</sup>-Paper) at the same time.

### **Warning:**



Remove all staples and paper clips before feeding paper into the cutter opening **2**. Otherwise the appliance could be damaged.

### Switching the appliance into the Fwd mode:

- Place the switch ❶ for continuous shredding at the position "Fwd" (forward). The appliance runs continuously. Insert paper from above and in portrait format into the cutter opening ❷.

### Switching the appliance into the Auto mode:

- Place the switch ❶ for shredding into the position "Auto". The motor starts automatically and switches itself off automatically if no further paper is inserted.

❶ **Take note:** Always guide smaller papers into the middle of the cutter opening ❷. The contact which starts the cutting process is located there.

### Clearing a material blockage:

- Slide the switch ❶ into the position "Rev" (Reverse = reverse) should the paper to be shredded jam.  
The appliance now goes into reverse and the paper to be shredded is returned.
- Pull the paper to be shredded out of the appliance and then place the switch ❶ at "Auto".
- The appliance is now once again ready for operation.

### Switching the appliance off:

- When you no longer need the appliance, always remove the plug from the mains power socket.

### Notice regarding overheating of the appliance:

If it overheats, the appliance switches off automatically.

#### **Warning:**

Remove the plug from the mains power socket to avoid an unintended starting of the appliance.

- Empty the container.
- Allow the appliance to cool down.
- Re-insert the plug into the mains power socket.

- Switch the appliance on, in that the switch ❶ is placed into the position "Auto".

## Cleaning

---

### **Danger!**

Always remove the power plug before cleaning the appliance. There is a risk of receiving an electric shock!

### **Warning!**

The cutters in the appliance are very sharp! Injury hazard!

- Remove any remnants that may be present in the cutter opening ❷ or the cutter blades with a suitable object, such as a pair of tweezers. Ensure that the plug has been disconnected.
- Clean the appliance with a lightly moistened cloth. For stubborn soiling use a mild detergent on the cloth.

## Non-functionality

---

### If the material to be shredded jams:

This means that you have inserted too much paper into the appliance (max. 5 Sheets 80g/m<sup>2</sup>).

- Slide the switch ❶ into the position "Rev" should the paper to be shredded jam. The appliance now goes into reverse and the material to be shredded is returned.
- Pull the paper to be shredded out of the appliance and then place the switch ❶ at "Auto".
- The appliance is now once again ready for operation.

### If the appliance suddenly ceases operation:

This means that the appliance is overheated and the automatic safety cut-out has activated itself.

### **Warning:**

Remove the plug from the mains power socket to avoid an unintended starting of the appliance.

- Allow the appliance to cool down.
- Replace the plug into the mains power socket.
- Switch the appliance on, in that the switch ❶ is placed into the position "Auto" or "Fwd".

### **If the appliance doesn't allow itself to be switched on:**

- Check that the plug is correctly connected to a mains power socket.
- Try out a different mains power socket.
- The appliance is probably defective. Have the appliance checked by qualified specialists.
- The appliance has overheated and triggered the automatic safety switch-off. For this, proceed as follows:

### **Warning:**

Remove the plug from the mains power socket to avoid an unintended starting of the appliance.

- Allow the appliance to cool down.
- Replace the power plug into the socket.
- Switch the appliance on, in that the switch ❶ is placed into the position "Auto" or "Fwd".

## Disposal

---



**Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of packaging materials in an environmentally responsible manner.

## Warranty and Service

---

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

## Importer

---

KOMPERNASS GMBH  
BURGSTRASSE 21  
44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)

### **GB** Service Great Britain

Tel.: 0871 5000 720 (0.10 £/Min.)

E-Mail: [kompernass@lidl.gb](mailto:kompernass@lidl.gb)

### **IE** Service Ireland

Tel.: 1890 930 034

(0,082 EUR/Min., (peak))

(0,064 EUR/Min., (off peak))

E-Mail: [kompernass@lidl.ie](mailto:kompernass@lidl.ie)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>