 
 
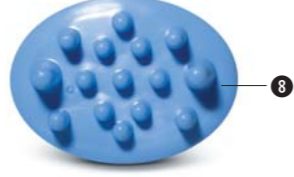 
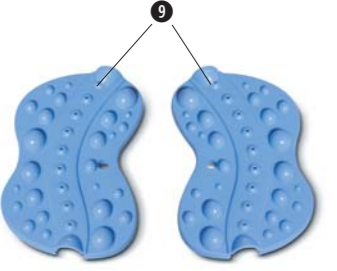 
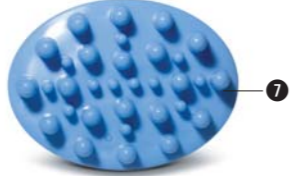 


Foot Spa SFB 85 A1

61

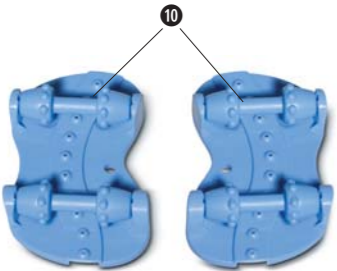

GB **Foot Spa**
IE **Operating instructions**
CY

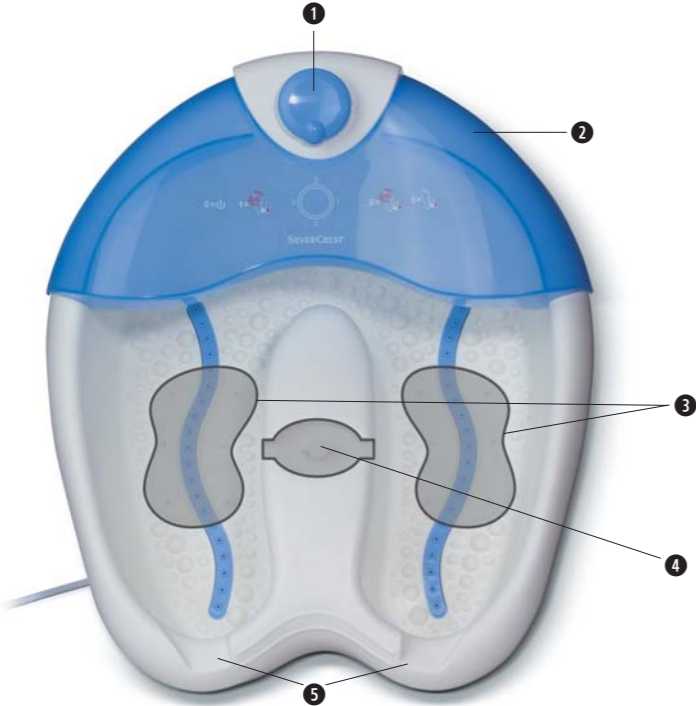

CONTENT	PAGE
Safety instructions	2
Intended Use	3
Delivery Items / Appliance Description	3
Technical data	3
Functions of the Foot Spa	3
Operation	3
Cleaning	5
Disposal	5
Warranty & Service	6
Importer	6

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

Foot Spa

Safety instructions

⚠ To avoid the risk of fatalities from electric shock:

- Make certain that the power cord does not become wet or moist during operation. Place it such that it cannot be crushed or damaged.
- Keep the power cable away from hot surfaces.
- Do not carry out any repairs on the appliance. All repairs must be carried out by the manufacturer or its service agent or a similarly qualified person.
- Unplug the appliance before filling it with water, replacing accessories or cleaning it.
- Do not use the appliance in the bathroom.
- Never separate or connect the appliance from/to a power supply when your feet are in the water.
- Always separate the appliance from the power supply when installing or removing accessory parts.
- Arrange for defective power plugs and/or cables to be replaced as soon as possible by a qualified technician or by our Customer Service Department to avoid the risk of injury.

⚠ To reduce the risk of fire or injury:

- Only use the original accessory parts for this device. Other parts may probably not meet the safety requirements.
- Do not use an external timing switch or a separate remote control system to operate the appliance.
- Do not allow individuals (including children) to use the appliance whose physical, sensorial or mental abilities or lack of experience and knowledge hinder their safe usage of it if they have not previously been supervised or instructed in its correct usage. Tell children about the appliance and its potential dangers so that they do not play with it.

- Consult with your doctor before using the foot spa should you be suffering from vein inflammation, inflamed varicose veins, water retention or rashes on your legs.
- Take care if you are not sensitive to heat. You may not realise how hot the foot support plate can get.
- Never operate the appliance with blocked air-inlet openings. Take care that the air-inlet openings do not become blocked through dust, hair etc.
- If water leaks from the appliance, the appliance should no longer be used.

To avoid damaging the device:

- Do not stand in or on the foot spa. Use it only while seated.
- Never operate the foot spa for longer than 20 minutes (KB-Time: 20 Min.). The appliance is not meant to be used continuously for long periods. Allow the appliance to cool sufficiently before using it again.
- Do not use any foam-producing bath additives. The appropriate bath additives for bubble baths are available from specialised dealers.
- Do not fall asleep whilst using the foot spa.
- Place the function switch to **0** (OFF) before you connect or separate the appliance from the power source.
- NEVER operate the appliance without water!

Intended Use

This foot spa is intended for personal, home use. Its function is only to bathe and massage the feet. It is not suitable for any other purpose. It is not intended for use in the medical/ therapeutic or commercial fields.

Delivery Items / Appliance Description

- ❶ Function switch
- ❷ Cover
- ❸ Recesses for accessories: foot pad
- ❹ Recesses for massage accessories
- ❺ Water drainage
- ❻ Roller massager
- ❼ Accupressure massager
- ❽ Finger massager
- ❾ 2 Accupressure accessories
- ❿ 2 Roller massage accessories

Operating instructions

Technical data

Rated voltage:.....220 - 240 V ~ 50Hz

Rated output:.....85 W

CO Time:20 min.

Protection class:.....II □

CO Time

The CO Time (Continuous Operation Time) details how long an appliance can be operated without the motor overheating and becoming damaged. After the appliance has run for this period it must be switched off until the motor has cooled itself down.

Functions of the Foot Spa

This foot spa has three functions available which can be used in various combinations:

- 1. Bubbles:** Air emerging from the air-jets provides the formation of air bubbles, which massage the feet pleasantly and gently.
- 2. Heat:** The foot pad heats itself and thus provides for a constant water temperature.

- 3. Massage:** The foot accessories with massage nubs create through vibration a pleasant massage effect.

Operation

Setup

- ⇒ Place the foot spa on the floor in front of a chair.
- ⇒ Set the function switch ❶ to 0 (OFF).

Insert the accessories for the foot pads

- ⇒ Select the accessories for the foot pad:
 - Accupressure accessories with nubs ❹ for a gentle vibration massage
 - Roller massage accessories ❿ for an additional point massage of the soles
- ⇒ Place the accessories in the recesses provided for them ❸ in the foot pad. The accessories for the recesses ❸ bear the markings „L“ for left and „R“ for right on their reverse side.

Place massage accessories for the middle console

- ⇒ Select a massage accessory for the point massage.
- 6 Roller massager: stimulating rolling massage of the feet for relaxation of the feet.
 - 7 Accupressure massager: for Shiatsu Massage (Asian finger pressure mas-sage) of the feet.
 - 8 Finger massager: for massaging the feet.
- ⇒ Simply set the respective massage accessory in the recess 4 of the middle console between both footbeds.

Filling with water

⚠ **Danger of an electric shock!**

- Only fill the water container to the marking „MAX“ (ca. 3l). Otherwise, water could overflow during the foot spa.
 - First connect the appliance to the power source when you have filled it with water.
- ⇒ Fill the water bath with warm or cold water.

ⓘ **Note:** The purpose of the heating function is not to heat cold water. It should simply maintain the temperature of the water.

 
- ⇒ You can also use special bath additives. However, do not use any foam-creating bath additives.

Switching on

⚠ **Warning!**

- Do not switch the foot spa on when your feet are in the appliance.
- ⇒ Insert the power plug in the socket.
- ⇒ Sit comfortably on a chair. But do not put your feet into the water yet!

⇒ Adjust the switch 1 to the desired combination. You can set the described functions in the following combinations:

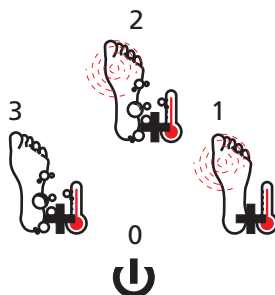

- Function switch position 0: Appliance switched off
- Function switch position 1: Massage + Heat
- Function switch position 2: Massage + Heat + Bubble
- Function switch position 3: Heat + Bubble

Using the foot spa

- ⇒ Now place your feet in the water container.
- ⇒ During the water bath you can alternately massage the soles of your feet on the massage attachments.

⚠ **Caution:** Do not exceed the maximum operating period (KB-Time) of 20 minutes! The appliance could be irreparably damaged. Danger of overheating.

After the foot bath

- ⇒ Turn the appliance off at the function switch 1 and remove the plug from the electrical socket.
- ⇒ Carefully empty the water out through the water drainage feature 5.
- ⇒ Apply skin care oil to your feet.
- ⇒ Then rest for a while.

Cleaning

Warning! Risk of injury!

- Unplug the appliance, before cleaning it.
- Let the appliance cool sufficiently before cleaning it.
- Never immerse the appliance in water or other liquids to clean it.

Warning!

- Do not use any aggressive cleaning liquids or solvents. They could damage the surface.
- ⇒ Wipe the appliance on the inside and outside with a damp cloth.
- ⇒ Remove residues of bath additives with a special synthetic cleaner.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
44867 BOCHUM, GERMANY

www.kompernass.com

GB DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

IE Kompernass Service Ireland

Tel: 1 850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>