

Warranty

This KOOLATRON product is warranted to the retail consumer for 90 days from date of retail purchase, against defects in material and workmanship.

WHAT IS COVERED

- Replacement parts and labor.
- Transportation charges to customer for the repaired product.

WHAT IS NOT COVERED

- Commercial or industrial use of this product.
- Damage caused by abuse, accident, misuse, or neglect.
- Transportation of the unit or component from the customer to Koolatron.

IMPLIED WARRANTIES

Any implied warranties, including the implied warranty of merchantability are also limited to duration of 90 days from the date of retail purchase.

WARRANTY REGISTRATION

Register on-line at www.koolatron.com AND keep the original, dated, sales receipt with this manual.

WARRANTY AND SERVICE PROCEDURE

If you have a problem with your unit, or you require replacement parts, please telephone the following number for assistance: **1-800-265-8456**

A Koolatron Master Service Centre must perform all warranty work. Service after warranty may be obtained at a Master Service Centre or at an authorized service dealer. Purchase Receipt is required to establish warranty eligibility.

Koolatron has Master Service Centres at these locations:

Koolatron U.S.A.

4330 Commerce Dr.
Batavia, NY 14020-4102 U.S.A.

Koolatron Canada

27 Catharine Ave.
Brantford, ON N3T 1X5 Canada



www.koolatron.com

©2009 Koolatron, Inc. All rights reserved.

All specifications are subject to change without notice.

Assembled in Canada

H1S084

03/2010-v2

Download from www.Somanuals.com. All Manuals Search And Download.

The Koolatron logo features the brand name in a bold, italicized sans-serif font. A stylized, curved line resembling a wing or a swoosh arches over the letters 'o' and 'l'.

Wine Cellar

18-bottle wine cooler



WC18

User Manual

FEATURES

This eighteen-bottle wine cooler is designed to accept 750 ml bottles up to 315mm (12.5") tall. There are two temperature zones. The lower zone has a capacity of 12 bottles, and temperature settings between 18°C (65°F) and 12°C (54°F). The upper zone has a capacity of 6 bottles, and temperature settings between 12°C (54°F) and 7°C (45°F). Interior light operated by external switch. Temperature selection, °C or °F, switchable.

PARTS

- Wine cooler - 7 shelves - User manual

SAFETY

- This unit is an indoor appliance. DO NOT use OUTDOORS.
- Household Use Only
- There must be at least 127 mm (5") clearance around the unit to ensure proper ventilation.
- Place unit on a flat surface, away from heat sources
- Do not use the appliance if the plug or cable is damaged. If the power cord is damaged and/or is malfunctioning, please contact the manufacturer.
- Pull the plug out of the outlet to disconnect. DO NOT pull the cord.
- Do not touch the plug with wet hands.
- Unplug the appliance when not in use.

Use of extension cords

Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord. However, if you must use an extension cord, it is absolutely necessary that it is a UL-listed (in the United States) or a CSA-listed (in Canada), 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 15 amperes (minimum) and 120 volts.

SPECIFICATIONS

Power Requirements: AC 120V 60Hz 130 Watts
Capacity: 18 x 750 ml (25.4 oz) bottles
Max. Temp.: 18°C +/- 3°C (64.5°F +/- 5°F) at 22°C (72°F) ambient air temp.
Min. Temp.: 7°C +/- 3°C (44.5°F +/- 5°F) at 22°C (72°F) ambient air temp.
Weight: 20 kg (44 lbs)

INSTALLATION

Choose a location where there is an electrical outlet within reach of the power cord. There must be at least 127 mm (5") clearance around the unit to ensure proper ventilation.

OPERATING INSTRUCTIONS

Fill the Wine Cellar with your favorite wines. It will take approximately 6 hours for the unit to stabilize the temperature. You can adjust the temperature to match the variety of wine by pressing the temperature control button once for each 1° step; after reaching the highest setting, by default, the display will revert to the lowest temperature setting and you will need to start over. Use SET1 for upper zone, and SET2 for lower zone. While flashing, the display for each zone is in the SET mode. When not flashing the display shows the actual temperature.



Wine enthusiasts always say the secret to good wine is the temperature. Each kind of wine should be maintained and served at a particular temperature. The 18-bottle Wine Cellar, with two independent zones allows you to do both. Below, we have included a chart that suggests the storage temperatures for the wine of your choice.

Red Wines	10-18°C (50-65°F)
White Wines	8-10°C (48-50°F)
Rose Wines	8-12°C (48-55°F)
Champagnes	6-11°C (42-52°F)
Fortified Wines	13-18°C (55-65°F)

MAINTENANCE

- Clean the interior using mild detergents or glass cleaning products.
- NEVER use harsh detergents or solvents.
- DO NOT immerse in water.
- Periodically, empty the tray of accumulated condensation located at the back of the unit.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>