

SATURN STROLLER

Operating Instructions

Important: Read and follow these Safety Rules and Assembly Instructions before operating stroller. If you have any questions concerning the safe use of this product, contact InSTEP, LLC at 1-800-242-6110, M-F, 8:00 a.m. – 5:00 p.m. C.T. or visit us at www.instep.net or E-mail us at info@instep.net before using.

Safety Rules:



WARNING: Failure to follow these warnings and assembly instructions could result in serious injury or death.



WARNING: Immediately discard any plastic wrapping.



WARNING: Never allow children to fold, assemble or disassemble the stroller.



WARNING: Maximum weight capacity for the stroller is 50 lbs. or 22.7 kg. Excessive weight may cause a hazardous, unstable condition if this load is exceeded. Maximum height of the child shall not exceed 35" or 89 cm.



WARNING: Never place child in stroller with their head forward and feet rearward unless the child is in an approved infant car seat and it is mounted correctly to the stroller using the specially designed car seat adapter bar. See step 9 in the instruction manual.



WARNING: Avoid serious injury from falling or sliding out. Always use seat belt.



WARNING: Never leave child unattended.



WARNING: Never use this stroller with roller skates or in-line skates.



WARNING: Never allow stroller to be used as a toy or allow children to give rides to others.



WARNING: Never use stroller if it becomes damaged.



WARNING: Always be aware of traffic around you when walking.



WARNING: Always engage brakes when you stop or when you let go of handle.



WARNING: Do not put or hang things on the canopy or handle. Accessories or parcels placed in or on the stroller may cause it to become unstable.



WARNING: Maximum weight for objects in bottom basket is 5 lbs. or 2.2 kg. Excessive weight may cause a hazardous, unstable condition.



WARNING: To avoid burns, never put hot liquids in the parent or child tray. To prevent tipping over do not place more than 2 lbs. or 1 kg on either parent or child tray.



WARNING: Child may slip into leg openings and strangle. Never use in a reclined carriage position unless waist and shoulder straps have been readjusted.



WARNING: Care must be taken when folding and unfolding the product to prevent finger entrapment.

IMPORTANT

We appreciate your purchase of one of our many fine products. We are sure that you will be satisfied with your selection. We regret that although great care and effort have been taken, occasionally problems may occur. PLEASE DO NOT RETURN PRODUCT TO THE STORE. To ensure prompt and correct handling of problems, or to answer questions, please contact us at either our Toll-Free Customer Service number or E-mail us at our address listed below. Service will be quicker if you have your model number (found on the product and box) along with this instruction sheet ready when calling. If you have any questions concerning the safe use of this product, please contact us at 1-800-242-6110 and speak to our Customer Service Representative or E-mail us at info@instep.net or visit us at www.instep.net

Tires are shipped deflated, DO NOT OVERINFLATE. Due to their size, PLEASE INFLATE SLOWLY WITH SHORT BURSTS OF AIR to 20-25 PSI maximum. 25 PSI will provide a comfortable ride for your child.

Model SS100 and SS150 Saturn Stroller Assembly Instructions

Parts List

Description	Qty.	Description	Qty.
Frame Assembly	1	Parent Console	1
Fender	1	Child tray	1
Fender screws #4 x 16mm	4	Infant car seat adapter bar	1
Front Wheel Assembly Dual 8"	1		
Rear Wheels 10"	2		

Stroller Assembly and Use Instructions

Step 1. Unfold Stroller

Grasp frame as shown and open until side latches engage (Figure A1).

To fold stroller:

Pull the one-hand fold handle toward the stroller handle, stroller will automatically begin to fold (Figure A2). You can also fold the stroller by pulling the side latches towards the stroller handle (Figure A3). Continue folding, pushing frame together and hook the storage latch (Figure A4).






Step 2. Rear Wheel Assembly

Turn stroller onto its side. Grasp rear wheel in one hand, slide wheel's axle into hole in rear of frame (Figure B1). Check to see that the wheel is properly inserted by pulling on the wheel firmly, the wheel should not come off if fully inserted/locked. Repeat for other side. To release wheel push up on axle release lever while pulling off wheel (Figure B2).

To engage rear brakes:

Step lightly on the side brake levers or rear brake bar to engage brakes. To disengage, lift up on brake levers or bar (Figure B3).

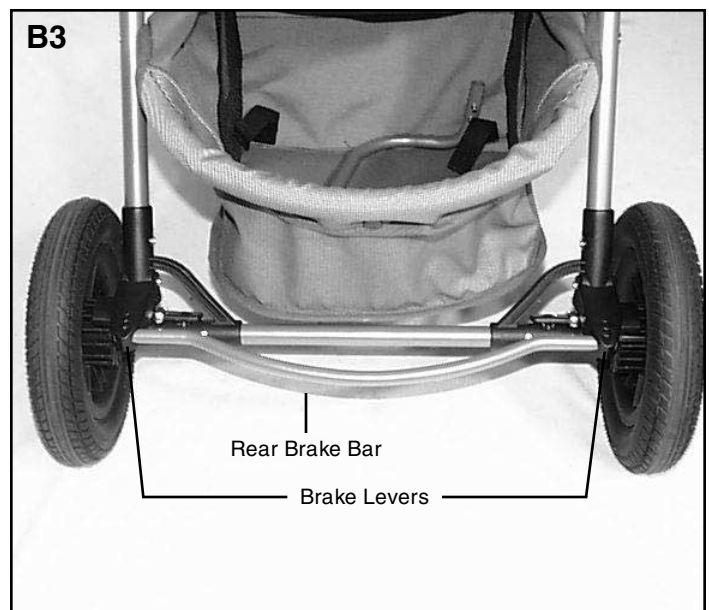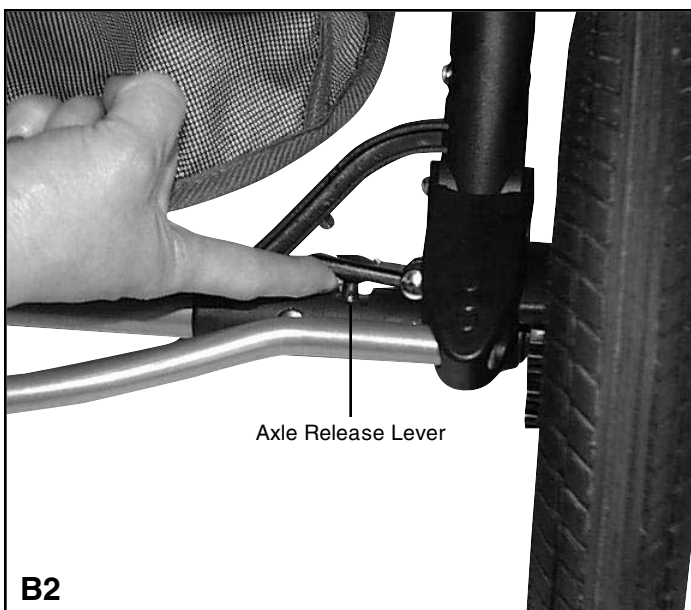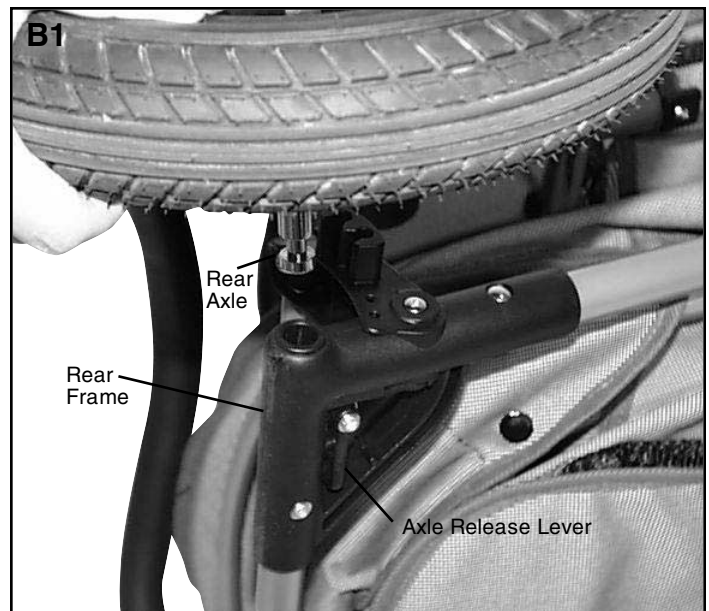

Step 3. Front Wheel Assembly

Turn stroller upright onto its rear wheels, then tip stroller back so the handlebar is down on the ground and the front is up. Slide the front wheel assembly onto the front wheel post, push until the wheel assembly locks into place (Figure C1). Check to see that the wheel assembly is properly inserted by pulling on the wheel firmly. To remove wheel push on release tab and pull off wheel (Figure C2).

To lock the front wheel from turning:





Push down on the front wheel's lock lever to keep the front wheel from turning. To unlock, lift up on lever (Figure C3).

Step 4. Front Fender Assembly

While stroller is still upright on its rear wheels, align the fender's tabs with the holes in the front frame and press on. Insert the #4 – 16mm screws into the hole and tighten with a Phillips screwdriver, repeat for the other 3 holes (Figure D).



WARNING: To avoid burns, never put hot liquids in the parent or child tray. To prevent tipping over do not place more than 2 lbs. or 1 kg on either parent or child tray.

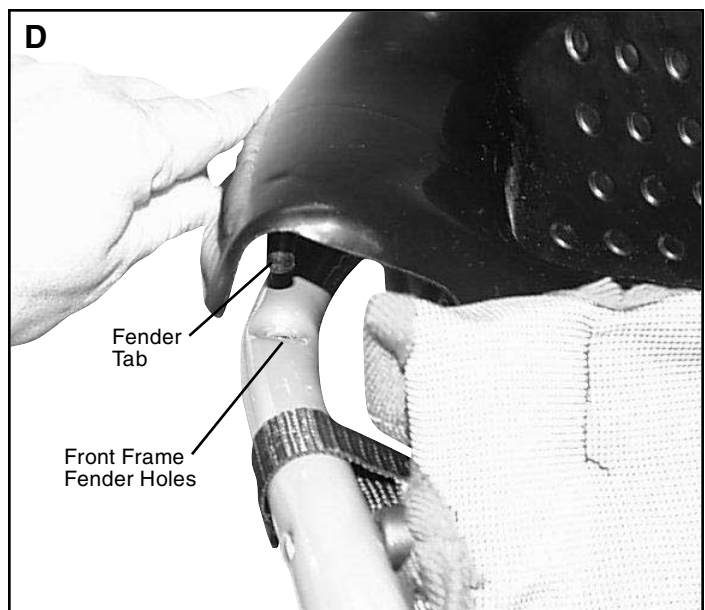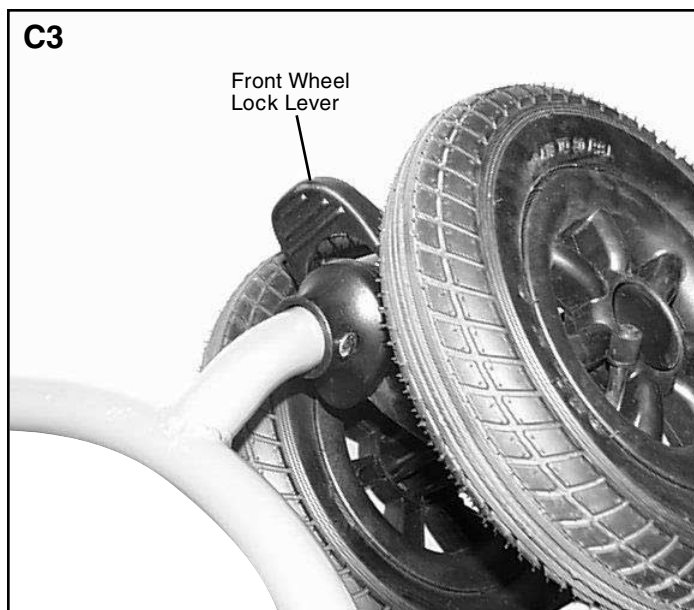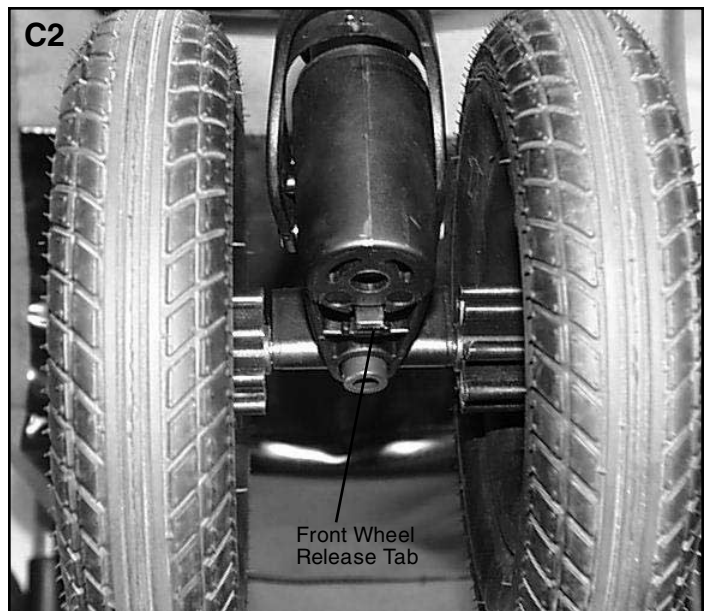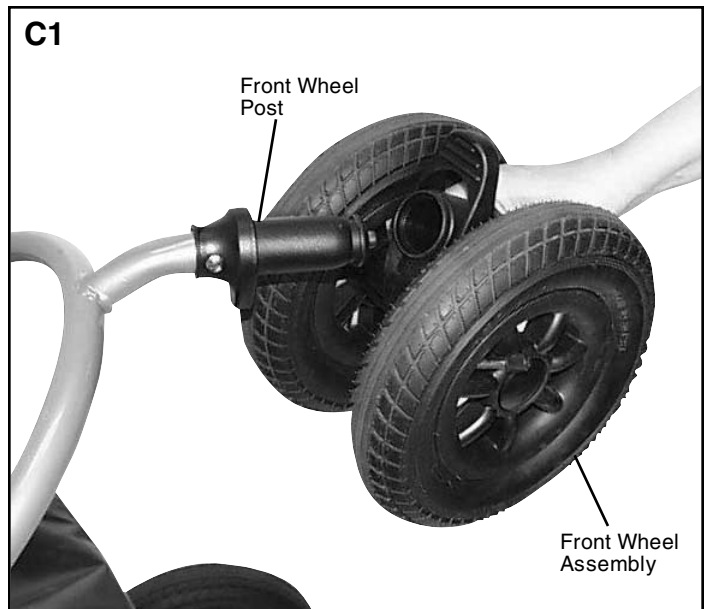

Step 5. Installing Child Tray

Position tray as shown with the levers open, when aligned close both levers to lock in place (Figure E). To remove open both levers and pull off. Note the child tray can not be used when using the car seat adapter bar.

Step 6. Installing Parent's Convenience Tray

Snap parent tray onto the handlebar aligning the tray's holes with the handlebar's knobs (Figure F).

Step 7. Adjusting Handle Height



While pushing both handle buttons in, rotate handle to the desired height (Figure G).

Step 8. Proper use of Seat Belt, Shoulder Straps, and Recline



WARNING: Avoid serious injury from falling or sliding out. Always use seat belt.

1. Place child in stroller seat. Make sure T-shield is between the child's legs.
2. When child is seated, place shoulder straps over the child's shoulders and clip onto the waist ring.
3. Buckle the T-shield buckles into the side waist buckles. Adjust the waist and shoulder straps for snug fit (Figure H).

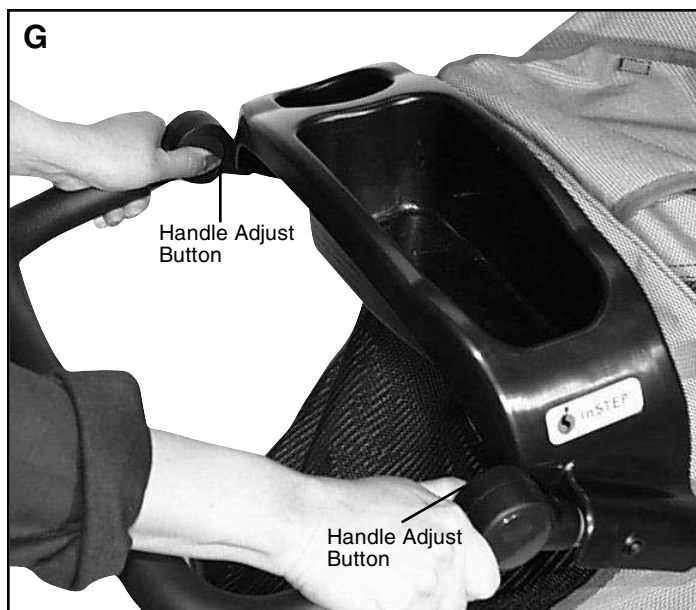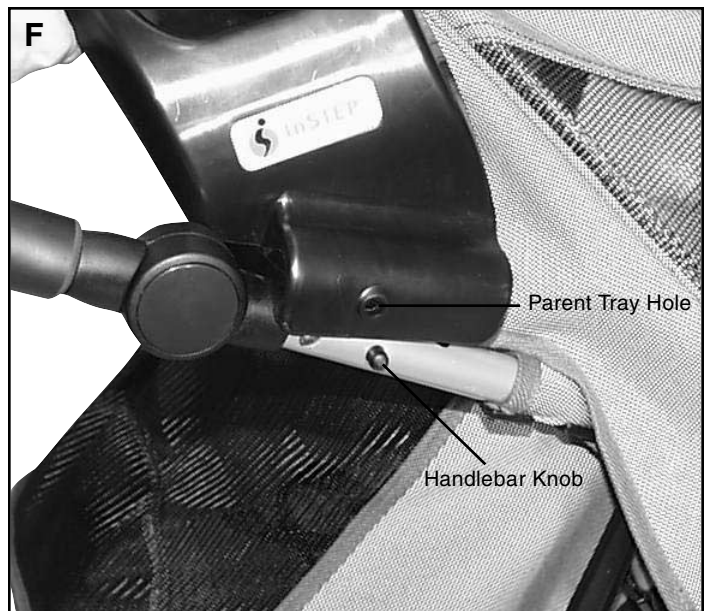

To recline seat:

To fully recline, unhook buckle on back of the seat (Figure I).

To place seat in upright position, push seat forward and reconnect buckle located on back of seat. Extra webbing can be placed in the rear pouch so it does not hang down and drag.

To adjust the recline position, adjust the buckle on the strap.



WARNING: Child may slip into leg openings and strangle. Never use in a reclined carriage position unless the T-shield and shoulder straps have been readjusted to the new seat position.

Step 9. Using the infant car seat adapter bar

When the car seat adapter bar is properly installed onto "The Everyday Stroller," it is designed to be used with the following infant car seat brands and models. Graco® Snug Rider®, Century® Avanta®, Evenflo® On My Way.®

The trade names and trademarks of Graco®, Century®, and Evenflo® are the trademarks of their respective companies.




WARNING: Failure to follow these warnings and assembly instructions could result in serious injury or death.

The front child tray must be removed before using the infant car seat adapter bar.

Lift up the textile cover of the seat's side tubes. Insert adapter bar with buttons on the inside. Push in the spring buttons while pushing adapter bar into the seat's side tubes end (Figure J1). Release button and continue pushing in the bar until the spring buttons lock into the holes located on the inside of the seat's side tubes. Pull on bar to make sure it is locked in place.

To remove adapter bar push in spring buttons with your finger or pen and pull out the bar. Store adapter bar in the under seat basket when not in use (Figure J2).

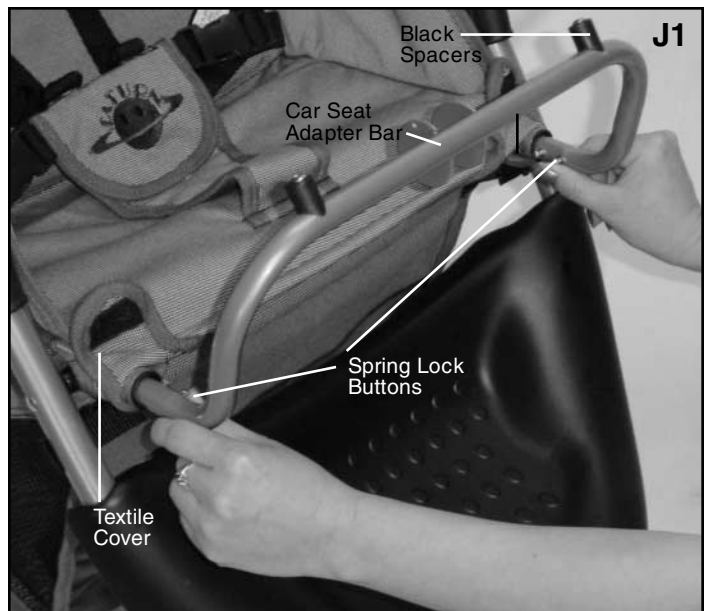



Mounting infant car seat onto the adapter bar

Note: The stroller seat should be in the full recline position with the recline strap unbuckled prior to placing car seat on. With the car seat adapter bar installed on the stroller, position the infant car seat **(WITHOUT CHILD)** so its mounting notch aligns with bar. The car seat will be mounted rearward facing towards the handle of the stroller. Push firmly down on the car seat so the bar is in contact with the car's seat locking device or mounting notch (Figure J3). Note: Some car seats do not lock onto the bar, they just rest on the adapter bar. Using the stroller's recline strap reverse the strap and insert the recline strap around the tubing and slide into the car seat's retention slots on both sides of car seat and buckle (Figure J4). Cinch tight the recline strap around the car seat to anchor in place (Figure J5). Check to make sure the car seat is mounted securely by rocking the car seat front to back. The car seat should not wobble. If it does check and adjust the tension of the recline/restraint strap and make sure that the car seat mounting notch is resting on the adapter bar (Figure J6).

DO NOT CHECK THE CAR SEAT MOUNTING TO THE STROLLER WITH YOUR CHILD IN THE CAR SEAT.



WARNING: Car seats may fall forward if the stroller's retention strap is not used. Do not use the car seat without cinching tight the retention/recline strap around the car seat.

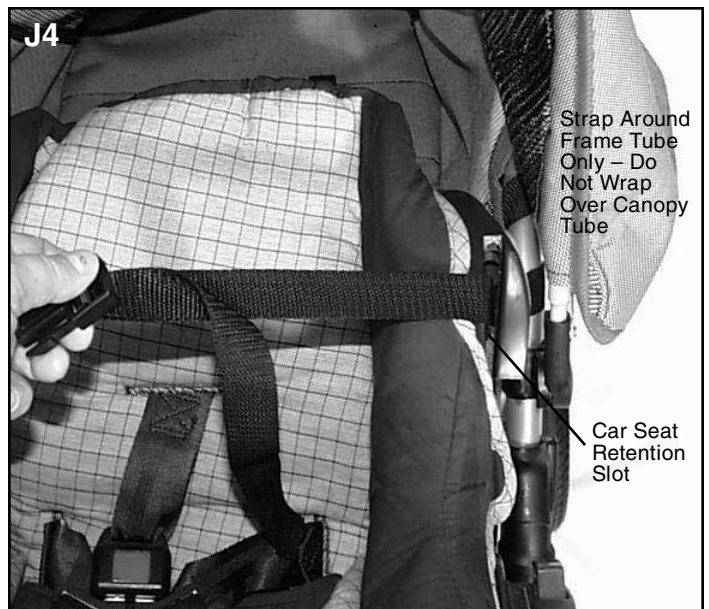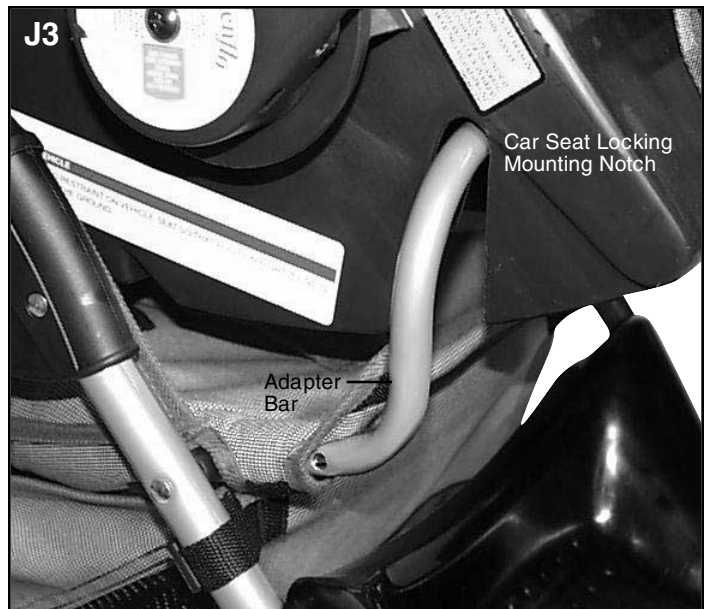

NOTE:
For the Century Avanta models, remove the 2-black spacers from the car seat adapter bar.

If you are unable to securely attach the infant car seat, discontinue use and contact our Customer Service representative.

Please refer to the infant car seat manufacturers instruction's and warnings for harnessing your child in the car seat.

Do not lift stroller by using the infant car seat handle.

Care and Maintenance

Check fasteners

After one hour of use, check all fasteners to make sure they are secure. Adjust if necessary. Periodically check the stroller to ensure that it is in good operating condition.

To clean seat and canopy:

If light cleaning is required, use a soft cloth with warm water and mild soap then air dry. Do not put into washing machine. Do not put in dryer. DO NOT BLEACH.

To clean frame:

Wipe using a soft cloth with warm water and mild soap. Air dry. DO NOT USE polish or abrasives.



WARNING: If you have any questions concerning the safe use of this product, please contact InSTEP LLC before using:



**2425 Enterprise Drive, Suite #900
Mendota Heights, MN 55120 U.S.A.
Tel: 1-800-242-6110**

or visit our website at www.instep.net
E-mail: info@instep.net

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>