INSIGNIA


32"/37"/42"/46" LCD TV

QUICK SETUP GUIDE


NS-32L550A11 / NS-37L550A11 / NS-42L550A11 / NS-46L550A11

Thank You

for purchasing this fine Insignia television. We hope you enjoy the quality and reliability of this product for years to come.

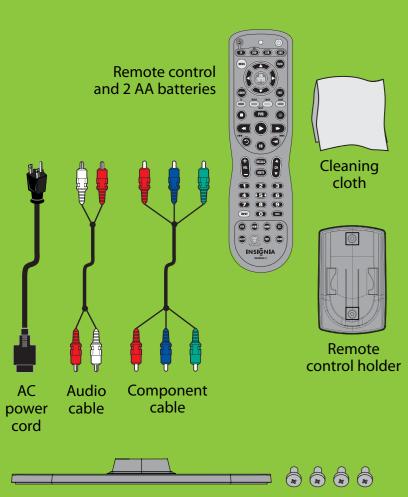


TV stand and screws

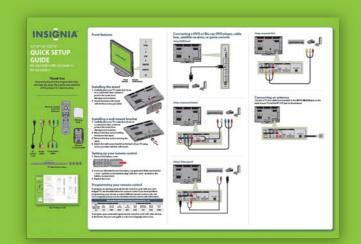


Quick Setup Guide

Front features

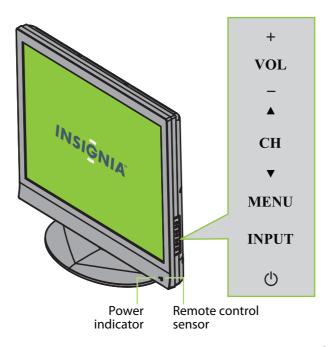

Installing the stand 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.

2 Secure the base to the stand with the four screws provided.

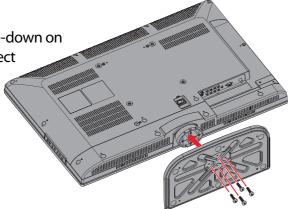


Installing a wall-mount bracket

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.

- 2 Remove the four screws holding the base to the stand.
- **3** Remove the four screws securing the
- 4 Attach the wall-mount bracket to the back of your TV using screws provided with the wall mount.

Setting up your remote control

 1 Remove the battery cover.



- 2 Insert two AA batteries into the battery compartment. Make sure that the + and – symbols on the batteries align with the + and – symbols in the battery compartment.
- **3** Replace the cover.

Programming your remote control

To program an existing universal remote control to work with your new Insignia TV, see the table below for common codes. If you have problems programming your remote or need a different remote control code, visit


www.insigniaproducts.com for the latest remote control code information.

Universal remote control IV codes (for all Insignia TVs manufactured after Jan. 1, 2007)								
Universal remote control makers and models				Set-top box makers and models				
Philips PHDVD5, PH5DSS, PMDVR8, PDVR8	RCA RCU807	One for All URC-6690	Sony RM-VL600	TIVO Series 3, HD	Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	DirectTV RC23
115	135	0464	8043	0091	0463	720	0463	10463


To program your universal Insignia remote control to work with other devices in the home, see your user guide or visit <u>www.insigniaproducts.com</u>.

Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game console


Using HDMI (best)

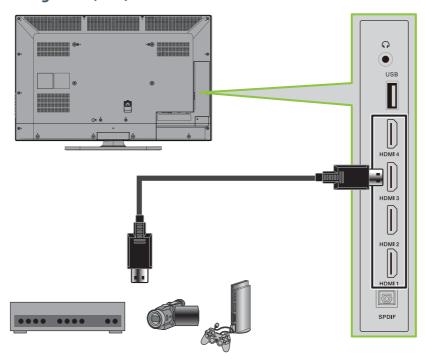


Using component (better)

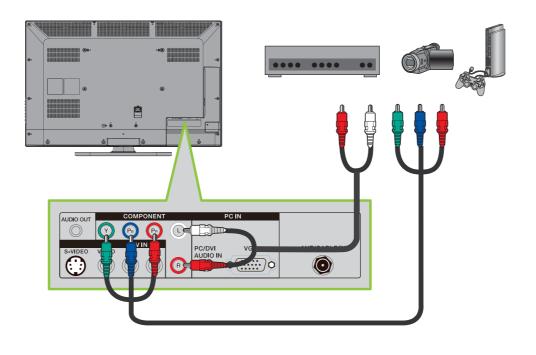

Using S-Video (good)

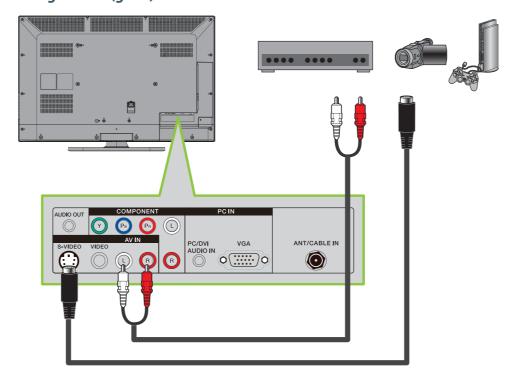


Using composite (fair)

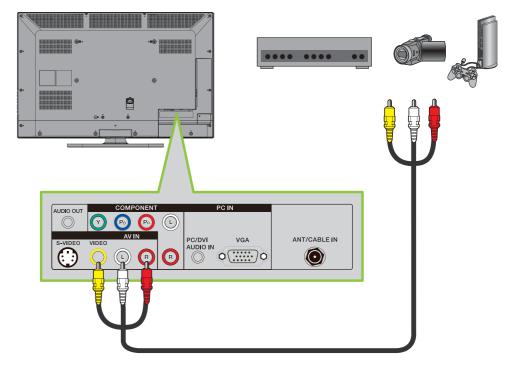

Connecting an antenna

Connect a 75 ohm cable (not included) to the ANT/CABLE IN jack on the back of your TV and the RF OUT jack on the antenna.

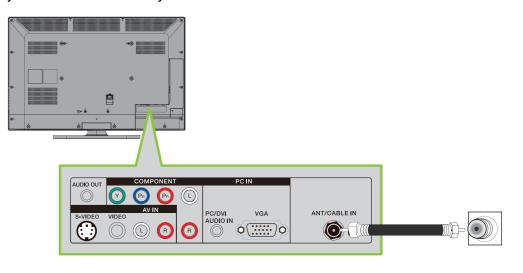


English


Home Mode

Connecting a Home Theater System

Using analog audio

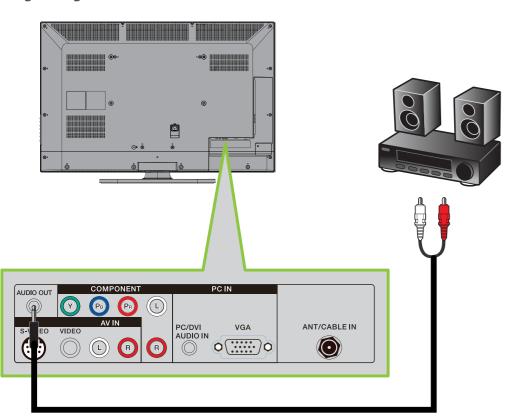


Using digital audio

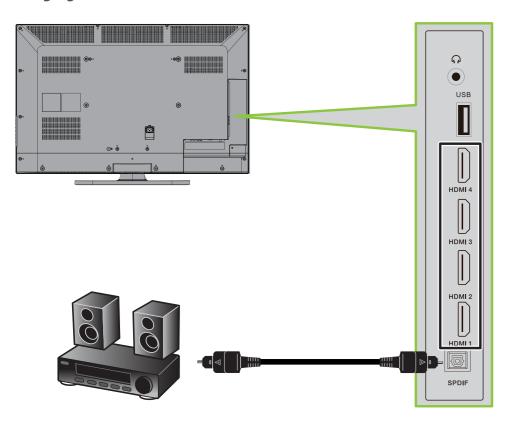

Connecting power

Plug the AC power cord into the AC IN jack on the back of your TV, then plug the other end of the cord into a power outlet.

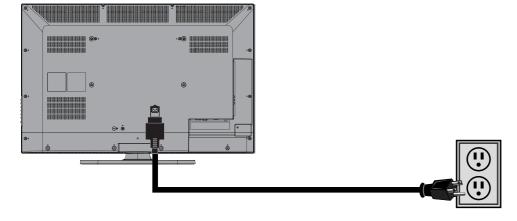

Turning on your TV for the first time

- 1 Connect the power cord, then press (power) to turn on your TV.
- 2 The Choose your menu language screen opens. Press∧ or∨ to highlight the language you want, then press **OK/ENTER**.
- **3** The *Time* screen opens. Press< or> to select **Auto** or **Manual**, then press **OK/ENTER.**
- **4** Press ∧ or ∨ to highlight **Time Zone**, then press < or > to select your time zone.
- **5** Press ∧ or ∨ to highlight **Daylight Savings**, then press < or > to select **On** (if your viewing area observes Daylight Savings Time) or **Off** (if your viewing area does not observe Daylight Savings Time).
- 6 If you selected **Manual** for **Mode**, set the date by pressing ∧ or ∨ to highlight **Year**, **Month**, or **Day**, then press< or>
 to adjust the setting.
- 7 If you selected **Manual** for **Mode**, set the time by pressing ∧ ot ∨ to highlight **Time**, then pressing < or > to select the **hour**, **minute**, or **AM/PM** field. Press^ or ∨ to adjust the setting. Press **OK/ENTER**.
- **8** The Choose your Picture Mode screen opens. Press \land or \lor to highlight **Home Mode** (default) or **Retail Mode**, then press **OK/ENTER**. If you selected Retail Mode, a message appears "Are you sure you want **Retail Mode**? Since Energy saving is not realized." Select **Yes** to continue, or select No to change your selection.
- **9** The *Choose your TV source* screen opens. Press ∧ or ∨ to highlight **Antenna**, Cable, or Cable/Satellite Box (if your cable TV uses a box, select Cable/Satellite Box), then press **OK/ENTER**. If you chose **Antenna** or **Cable**, your TV automatically starts scanning for channels available in your



Selecting the video input source

• Press INPUT, press ▲ or ▼ to highlight a source, then press OK/ENTER. You can also press any of the video source buttons directly.





Adjusting the volume

- Press **VOL**+ or **VOL** to change the volume.
- Press **MUTE** to turn off the sound.

Selecting a channel

- To move to a different channel in the channel list, press CH▲ or CH▼.
- Enter the channel number directly using the number buttons.



Viewing additional information

 Press INFO to see status information such as channel number, channel name (if available), signal source, program desription, and DTV signal strength.



Press **GUIDE** to show the digital program guide, which may show current channel name, program name, time, rating, and summaries, depending on information provided by the

On-screen menu overview

Picture menu



Channels menu




Settings menu



USB menu



Navigating menus with your remote control

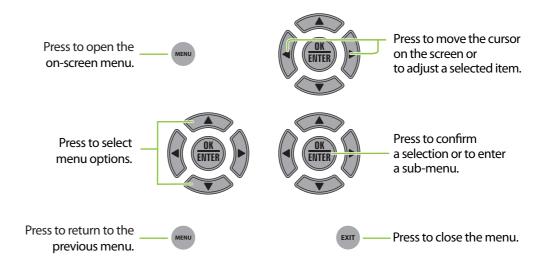

INSIGNIA

Two-year limited warranty

See your *User Guide* or visit www.insigniaproducts.com for details.

Need additional help?

See your *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features.

Check out our **online community forum** at <u>www.insigniaproducts.com</u> for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets) 01 800-926-3000 (Mexico market)

Distributed by Best Buy Purchasing, LLC 7601 Penn Avenue South, Richfield, MN USA

Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349

RFC#BBI0802114Q2

© 2010 BBY Solutions, Inc.

products and brand names are trademarks of their respective owners.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com