

# INSIGNIA flex

8" TABLET with Android  
NS-14T002

## QUICK SETUP GUIDE



### WE ARE GOING GREEN!

 
A copy of your *User Guide* is not provided in the box but is available online. To find your manual, touch the ? icon on your tablet. You can also go to [www.insigniaproducts.com](http://www.insigniaproducts.com), touch **Support & Service**, enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then touch ►.




Before using your new product, please read these instructions to prevent any damage.

### In the box

- Insignia Flex™ Android Tablet
- USB power adapter
- Micro USB cable
- Quick Setup Guide
- Important Information

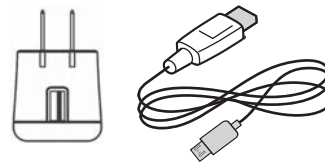

### Features

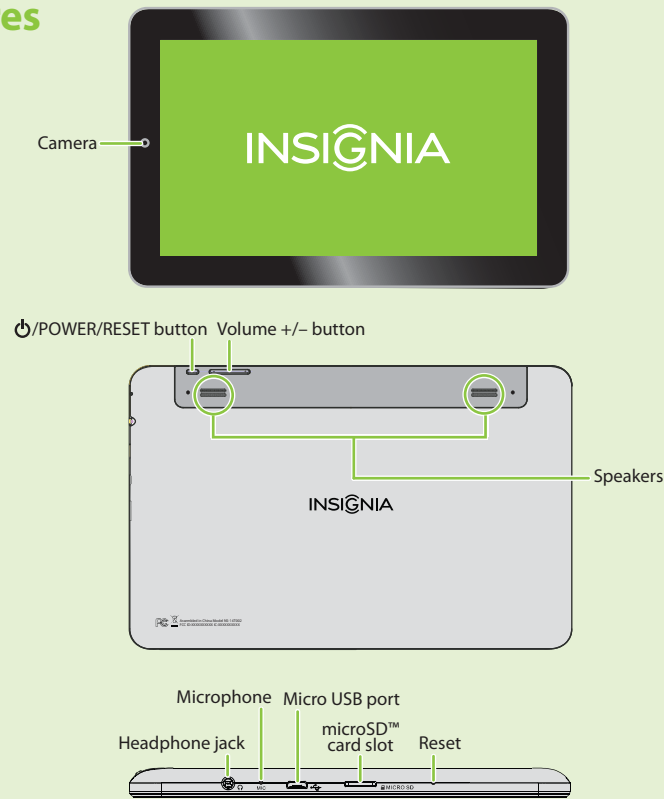 

### Charging the battery

Before using your tablet for the first time, you need to charge the battery for a minimum of eight hours.

 
- 1 Insert the micro USB connector on the Micro USB cable into your tablet's micro USB port.
- 2 Insert the other end of the micro USB cable into the USB power adapter (wall charger), then plug the USB power adapter into a power outlet to start charging the battery. When fully charged, your tablet's battery provides eight hours of continuous video playback (Wi-Fi turned off) or ten hours of continuous Web browsing.



Download from [www.SoftManuals.com](http://www.SoftManuals.com). All Manuals Search And Download.


### Turning on your tablet

Press and hold the (power) button on the top, right side of your tablet.

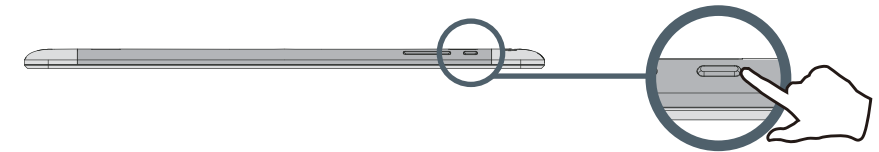

### Setting up your tablet

 When you turn on your tablet for the first time, the *Welcome* screen appears. Follow the instructions displayed on your tablet to complete set up.

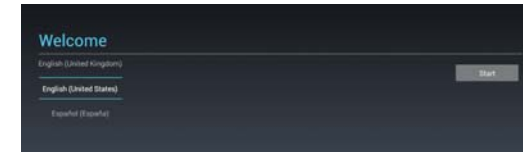

### Connecting to a Wi-Fi access point

To use the Wi-Fi feature, you need access to a wireless access point or hotspot.

 
- 1 Touch the settings icon.



- 2 Touch the **Wi-Fi** to access the list of available networks



- 3 Select the Wi-Fi network you want to connect to.

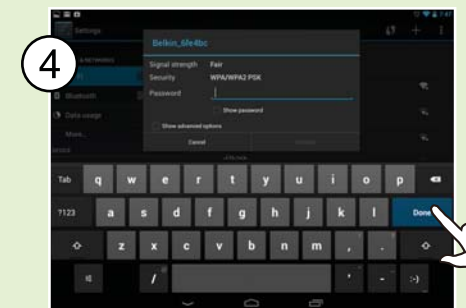


- 4 If you are prompted to enter a password, touch the keys on the on-screen keyboard to enter the password, then touch **Done**.



- 5 Touch **Connect** to connect to the wireless access point. If the connection is successful, the connected icon appears.



## To open an application:

- 1 Touch the  (applications) icon.
- 2 Touch the application you want to open.










## For additional help:


- Touch the **Help** icon. *How Do I...* opens.

 


## Using gestures to navigate


<b>Touch</b>		Touch an application or another item with your finger to open or select it.
<b>Touch and hold</b>		Touch an item with your finger, and do not release it until your tablet responds.
<b>Drag</b>		Touch and hold an item with your finger, then move your finger to the position where you want to place the item.
<b>Flick</b>		Quickly slide your finger either vertically or horizontally across the screen.
<b>Double-touch</b>		Quickly touch the screen twice.
<b>Pinch</b>		Pinch your fingers together or move them apart.
<b>Rotate</b>		To change the screen orientation from portrait to landscape (or from landscape to portrait) turn your tablet sideways. When entering text, you can turn the tablet sideways to switch to landscape mode and make the keyboard larger.

## To turn off your tablet:


- 1 Press and hold  (power) until the *Power off* screen opens.



- 2 Touch **Power Off**.

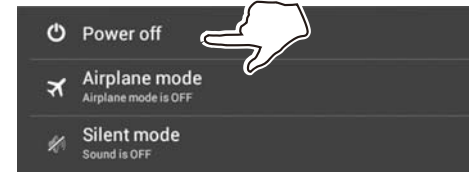 

 - 3 Touch **OK** to turn off your tablet.

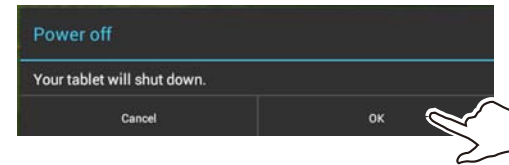

**Caution:** Use only the included power adapter or a qualified 5V/2A power adapter to charge your tablet's battery. An unqualified adapter or an adapter that is not a 5V/2A adapter may damage your tablet.

## Scan to learn more.



### One-year limited warranty

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

### Need additional help?

Check out our online **community forum** at [www.insigniaproducts.com](http://www.insigniaproducts.com) for helpful information from other Insignia Tablet owners.










### We're here for you

[www.insigniaproducts.com](http://www.insigniaproducts.com)

For customer support, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a registered trademark of BBY Solutions, Inc. Registered in some countries.  
Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2013 BBY Solutions, Inc. All Rights Reserved.

## Function buttons

Button	Icon	Function
<b>Text search</b>		Search on Google.
<b>Voice search</b>		Voice search on Google.
<b>Return</b>		Return to the previous screen.
<b>Home</b>		Return to the Home screen
<b>Multi-task</b>		Open the list of recently used and running applications.
<b>APPS</b>		View all applications installed on the tablet.
<b>Option</b>		Open an options menu.
<b>Close</b>		Close the keyboard.
<b>Drop-down</b>		Open a drop-down menu.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>