 


In the box

 
- 7.85" tablet
- Wall charger
- USB data transfer cable
- Quick Setup Guide
- Important Information

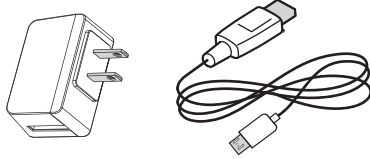

FIND YOUR USER GUIDE ONLINE!

We are going green so a copy of your *User Guide* is not provided in the box but is available online. To find your manual, touch the ? icon on your tablet or go to www.insigniaproducts.com on your computer, then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.

Features

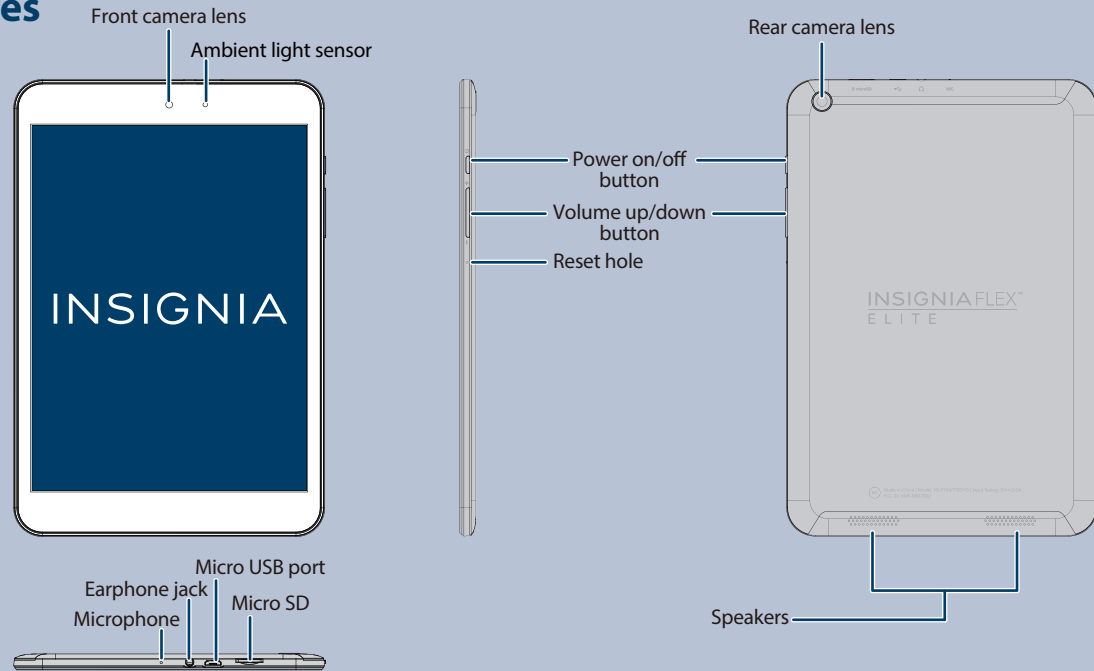

1 Charging the battery

Note: Charge your tablet fully (six hours) before using it the first time.

 
- 1 Connect the micro USB cable to your tablet.
- 2 Connect the other end of the micro USB cable to the USB power adapter (wall charger), then plug the adapter into a power outlet. It takes about six hours to fully charge your tablet.



Caution: Use only the included power adapter or a qualified 5V/2A power adapter to charge your tablet's battery. An incompatible adapter may damage your tablet.

2 Turning on your tablet

- Press and hold the (power) button on the side of your tablet.

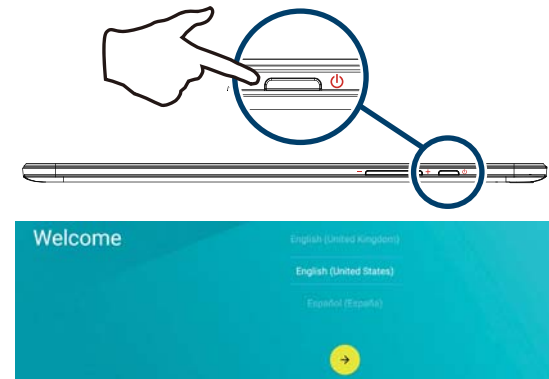


3 Setting up your tablet

When you turn on your tablet for the first time, you'll be prompted to set up things like Wi-Fi and email. Follow the instructions displayed on your tablet to complete setup.


Connecting to Wi-Fi

To use the Wi-Fi feature, you need access to a wireless access point or hotspot.

 
- 1 Tap Apps > Settings > Wi-Fi.
- 2 Tap the slider to turn Wi-Fi **On**, if needed. Your tablet automatically scans for available networks.
- 3 Tap a Wi-Fi network.
 - If the network is open, your tablet connects automatically.
 - If the Wi-Fi icon has a (lock), the network is secured. Enter a password, then tap **CONNECT**. When connected, "Connected" appears under the network name.

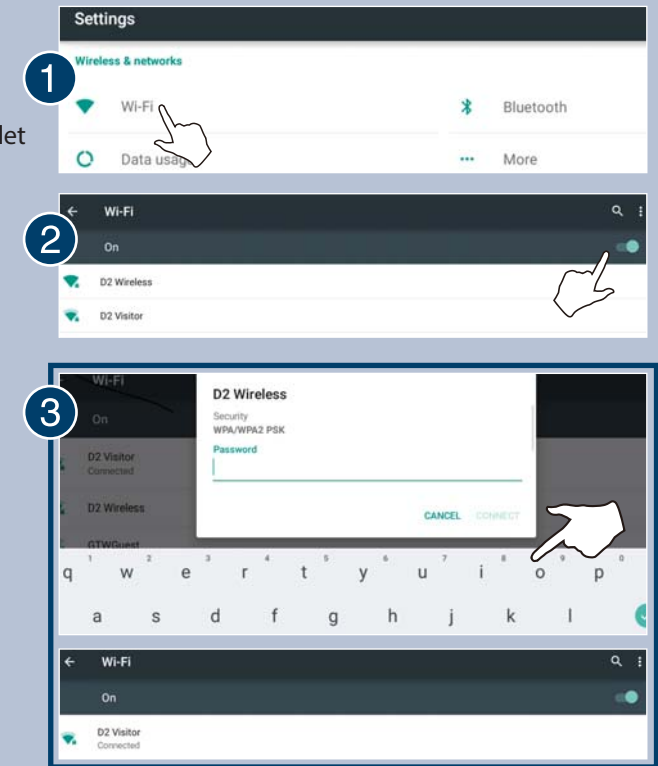

To open an app:

- 1 Tap the  (apps) icon.
- 2 Tap the app you want to open.

 Note: If you don't see the app you want, swipe left on the screen to see more apps.

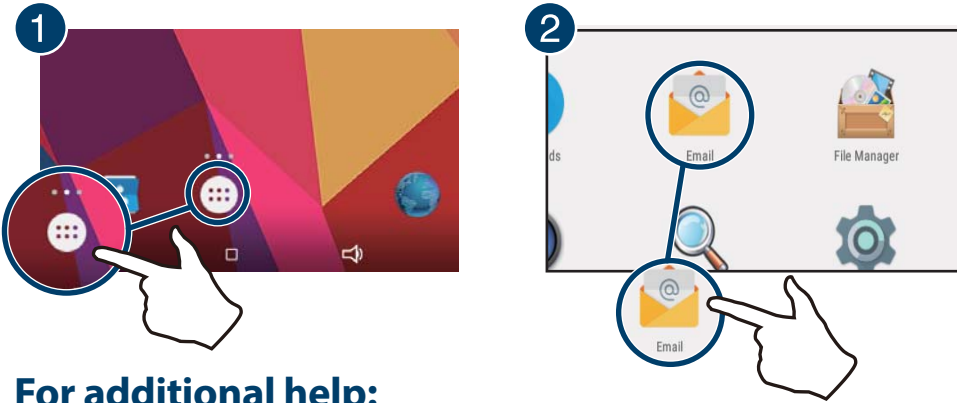







For additional help:


- Tap **? Help** to open the Help app.



Using gestures to navigate

Tap		Tap an app or another item with your finger to open or select it.
Touch and hold		Touch an item with your finger and do not release it until your tablet responds.
Drag		Touch and hold an item with your finger, then move your finger to the position where you want to place the item.
Swipe		Slide your finger across the screen.
Pinch		Pinch your fingers together or move them apart.
Rotate		Turn your tablet sideways to switch between landscape and portrait. Note: If the orientation does not change, swipe down from the top of your screen with two fingers, then touch Landscape or Portrait to turn off the rotation lock.

To turn off your tablet:

- 1 Press and hold  (power) until the *Power off* screen opens.



- 2 Tap **Power Off**.



One-year limited warranty

Visit www.insigniaproducts.com for details.

Need additional help?

Check out our online **community forum** at www.insigniaproducts.com for helpful information from other Insignia Tablet owners.

We're here for you

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

Android, Google, Google Play, and other marks are trademarks of Google, Inc.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.










Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China

Function buttons

BUTTON	ICON	FUNCTION
Text search		Search on Google™.
Voice search		Voice search on Google.
Return		Return to the previous screen.
Home		Return to the Home screen.
Multi-task		Open the list of recently used and running applications.
Apps		View all applications installed on the tablet.
Option		Open an options menu.
Close		Close the keyboard.
Menu		Open the side menu.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>