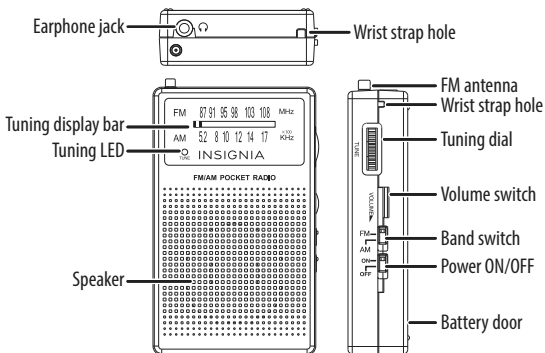


**PACKAGE CONTENTS**

- Radio
- Earphone
- Wrist Strap
- Quick Setup Guide

**FEATURES****INSTALLING THE BATTERIES (NOT SUPPLIED)**

- 1 Open the battery compartment door located at the back of your radio.
- 2 Insert two AAA batteries into the battery compartment. Make sure the + and - on the batteries match the + and - inside the battery compartment
- 3 Replace the battery door.

**BATTERY PRECAUTIONS**

The radio will not work when the batteries are low. If this occurs, replace the batteries.

- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Use only the size and type of battery specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
- Do not mix different types of batteries together (e.g., Alkaline, Rechargeable, and Carbon-zinc) or old batteries with fresh ones.
- If the radio is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow the battery manufacturer's directions.)
- Exhausted batteries must be removed to prevent any battery leakage.

- Dispose of batteries properly according to environmental regulations.
- Battery (installed battery or battery pack) should not be exposed to excessive heat, such as sunshine, fire, or the like.

## RADIO OPERATION

- 1 Slide the POWER switch to the **ON** position.
- 2 Select the radio band by sliding the switch to FM or AM.
- 3 Select your station using the Tuning dial.  
FM: Extend the telescopic FM antenna at the top of the radio.  
AM: Antenna is inside unit. Turn the set to find the best position.
- 4 Adjust the sound with the VOLUME control.
- 5 To turn off the radio, slide the POWER switch to the **OFF** position.

**NOTE:** To listen to the radio using the earphone, insert the earphone into the earphone jack on the top of the radio. When earphones are not connected, sound will come from the speaker on the front of the radio set.

**CAUTION:** Start your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. High volume can impair your hearing!

## MAINTENANCE

Do not expose the radio to rain, moisture, high humidity, sand or excessive heat, such as heating equipment. Use a damp lint-free cloth to wipe dust, dirt, and fingerprints from the radio. Do not use cleaning agents or abrasives as these may damage your radio.

|                            |  |
|----------------------------|--|
| Dimension (W×H×D)          | 2.2" × 3.6" × .8"  |
| Weight (without batteries) | 2.1oz (approx)   |
| Frequency Range            | FM: 87.5-108 MHz, AM: 520-1710 KHz                         |
| Antenna                    | FM: Telescopic antenna<br>AM: Built in ferrite bar antenna |
| Battery                    | 3V DC (1.5V × 2) AAA/R03/UM4                               |

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S.) or 01-800-926-3000 (Mexico)

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>