



## Package contents

Digital-to-analog converter box  
 Remote control  
 AAA battery  
 Coaxial cable  
 RCA audio/video cable

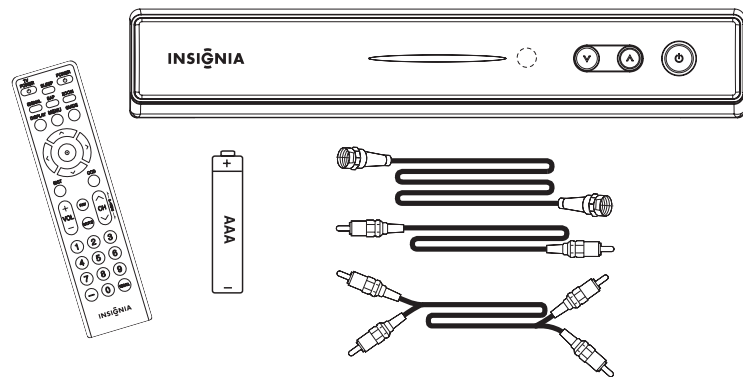


## Install remote control battery

Remove the cover from the back of the remote control, insert the battery as shown, then replace the cover.

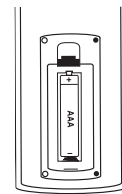


## Connect to antenna and TV

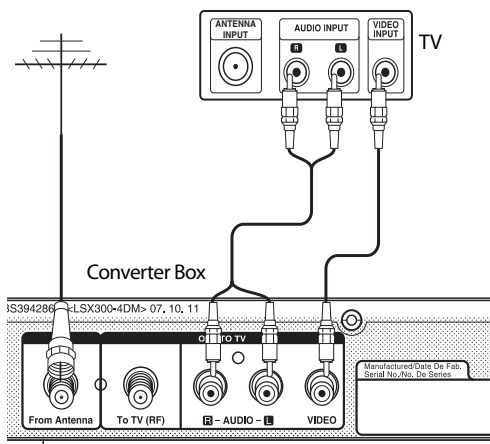

### Method 1 (Better)

- 1 Connect the antenna to the **IN (FROM ANT)** jack on your converter box using a coaxial cable.
- 2 Connect the **R AUDIO**, **L AUDIO**, and **VIDEO** jacks on your converter box to the corresponding jacks on your TV using an A/V cable. TV should be tuned to correct video source (see your TV documentation).
- 3 Plug the power cable into a power outlet or surge protector. This is the preferred method for the best video and audio quality.

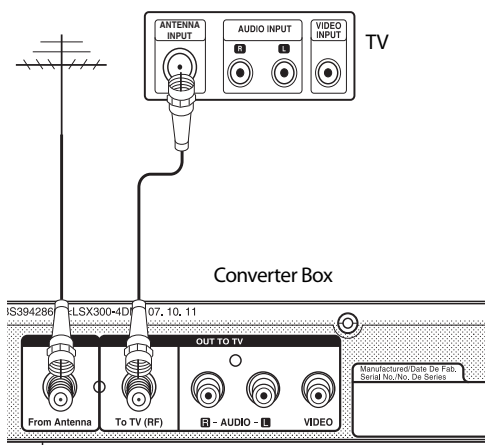


### Method 2 (Good)


- 1 Connect the antenna to the **IN (FROM ANT)** jack on your converter box using a coaxial cable.
- 2 Connect the **OUT (TO TV)** jack on your converter box to the **Antenna IN** jack on your TV using a coaxial cable. Your TV must be tuned to channel **3**. For best performance with this connection, change the Audio Output option in the Options menu to Mono. For more information, see "OPTION menu" on page 9 in your *User Guide*.
- 3 Plug the power cable into a power outlet or surge protector.

### Complete setup


1 Turn on your converter box and TV.

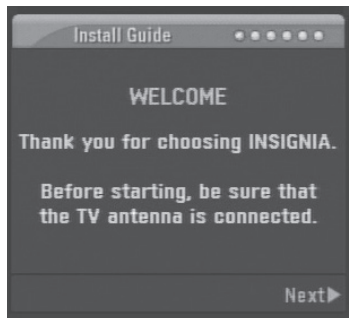

2 Press > on the remote control.

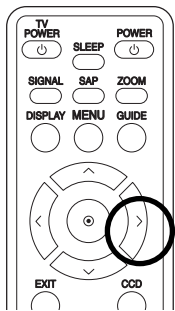

3 Press ^ or v to select a menu language (**English, Spanish, or French**), then press >.


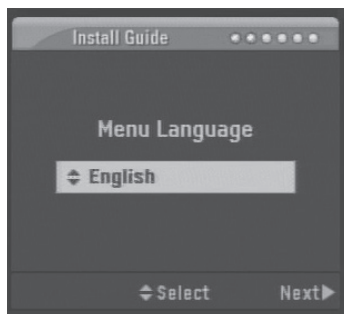


4 Press ^ or v to select your TV aspect ratio, then press >.




**TV aspect ratios:**  
4x3 is standard size  
16 x 9 is widescreen


5 Press ● to start the channel search. When the search is complete, press >.

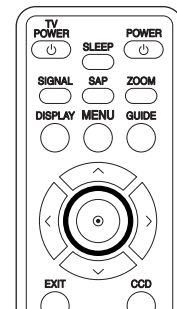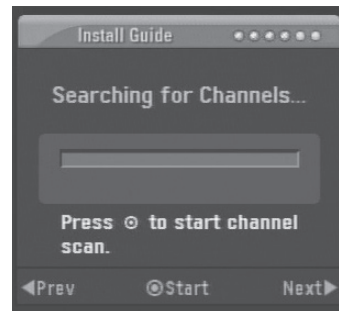

6 Press ^ or v to select your time zone, then press >.

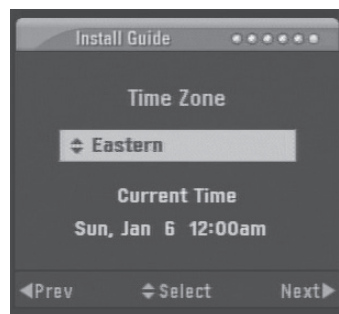

7 Press ● to complete the setup.

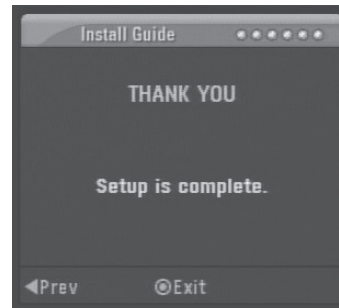

Leave the TV on channel **3** or **Video Input** (as determined in the "Connect" step) and change the channel with the converter box remote control.

**If you have any issues with this product, DO NOT RETURN TO THE STORE. Call INSIGNIA at 1 877 467-4289**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>