

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read, follow, and save all instructions and documentation.
- 2 Make sure that your household voltage corresponds to that stated on the appliance.
- 3 Do not touch hot surfaces. Use handles or knobs.
- 4 To protect against electrical shock, do not immerse the power cord, plugs, or toaster in water or any other liquid.
- 5 **WARNING:** To prevent electric shock, unplug when not in use or before cleaning. Let your toaster cool before putting on or taking off parts.
- 6 Keep out of reach of children and pets. This product is not intended for use by children, by persons with reduced physical, sensory, or mental capabilities, or lacking experience or knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety. Extra caution is always necessary when using this product.
- 7 Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 8 The use of accessories or attachments not recommended by the appliance's manufacturer may cause injuries, fire, or electric shock.
- 9 Do not use outdoors.
- 10 Do not let the cord hang over edge of table or counter, or touch hot surfaces.
- 11 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 12 To disconnect, turn any control to off, then remove the plug from the wall outlet.

- 13 Do not use appliance for other than its intended use.
- 14 Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- 15 A fire may occur if toasters are covered or touching flammable material, such as curtains, draperies, walls, dish cloths, or towels, when in operation.
- 16 Do not attempt to dislodge food when your toaster is plugged in.
- 17 If the bread carriage handle gets blocked during use (for example, because the bread slices are too thick) and the bread starts burning, unplug the appliance immediately and let it cool down before emptying and cleaning it. Should the problem persist, contact a qualified electrician.
- 18 Do not use the appliance for defrosting food other than bread and only insert unbuttered slices of bread of a thickness that does not prevent the bread from coming up. Not following these precautions often causes fires.
- 19 The appliance should not be operated using a separate timer or separate remote device.

### SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

- The electrical rating of the extension cord should be at least that of the appliance. If the electrical rating of the extension cord is too low, it could overheat and burn.
- The resulting extended cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

### POLARIZED PLUG INSTRUCTIONS

This appliance is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug fits into the polarized outlet only one way. If the plug does not fit into the outlet, reverse it. If it still does not fit, contact a qualified electrician. **Do not attempt to modify the plug in any way.**

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### PACKAGE CONTENTS

- Two-slice toaster with see-through glass window
- *Quick Setup Guide*

### FEATURES

- Removable crumb tray
- Single-centering bread guide
- Function button options that include defrost, reheat, bagel, and cancel
- Seven settings for toasting



### BEFORE USING YOUR TOASTER FOR THE FIRST TIME

**Note:** The bread carriage handle will not stay down if the appliance is not plugged in.

- In order to eliminate any manufacturing residues, operate your toaster a couple of times without bread with the browning control selector on a medium browning level. Some smoke might escape, which is normal.

## USING YOUR TOASTER

### Notes:

- Before using your toaster for the first time, make sure that it is clean and the slots are empty.
- Before toasting bread for the first time, run your toaster a couple of times on a medium toasting setting to get rid of any residues of the packaging material. Some smoke may occur. This is normal.

**1** Plug your toaster into a power outlet.

### Notes:

- Make sure the food item is shorter than the slot.
- The maximum thickness allowed is 1.5 in. (38mm).

**2** Place the bread slices or other food item in the slot.

**3** Press down the bread carriage handle until it stops. The grid inside the slots tighten around the bread to keep it away from the quartz heating elements.

When you release the handle, it stays in the lower position and the toasting process begins.

**Tip:** If the handle comes up immediately, make sure that your toaster is plugged into a power outlet. The handle does not stay down when your toaster is not plugged in.

**4** To set the browning level, turn the browning control dial. The dial has levels 1 through 7. The higher the number, the browner the bread will be.

**5** Optional: To select a toasting type, press a function button. You can press:

- **Reheat** to reheat toasted bread or toast bread that is not brown enough. The setting on the browning control dial does not change.
- **Defrost** to toast frozen bread by increasing the heating time.
- **Bagel** to heat bagels. Only the side of the toaster closest to the window heats.


**6** If the bread is toasted enough before your toaster turns off, press the **Cancel** button.

### Notes:

- Always unplug your toaster and let it cool before handling or storing it.
- You can store any excess length of the power cord under the base. When you store your toaster, wind the power cord around the hooks.
- Do NOT touch the metal parts because they will be hot.
- For pop tarts or frozen waffles, follow the instructions that came with the pop tarts or waffles.
- Do NOT toast food, other than bread, unless the food label says you can use a slot toaster.

## MAINTENANCE AND CLEANING

- Before you clean your toaster, make sure that you unplug the power cord and let your toaster cool down.
- To remove bread crumbs, slide the crumb tray out from the side of your toaster.

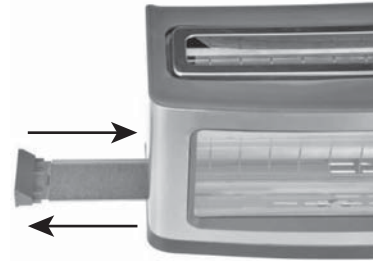

**Caution:** Empty the crumb tray regularly. Crumbs that accumulate in your toaster may burn and cause a fire.

- To clean the exterior of your toaster, wipe it with a soft, damp cloth. Do not use abrasive cleaners or materials like scouring pads because they may damage the finish of your toaster.

### To clean the inside glass panel:

- 1** Empty the crumb tray, then turn your toaster upside down or on its side.
- 2** Press the clamp located underneath the base of the glass panel, then carefully slide the inside glass panel out of your toaster.
- 3** Use warm, soapy water to clean the panel. Carefully rinse the panel, then dry it.
- 4** Slide the panel into the grooves until the clamp locks the panel in place.



- Do not immerse your toaster in water or use near water.
- All other maintenance and repair should be performed by a qualified technician.

## POWER SUPPLY SPECIFICATIONS

- 120V~60Hz, 900W

## TROUBLESHOOTING

- A small amount of smoke is normal for the first couple of times you use your toaster. If your toaster continues to emit smoke, unplug it, let it cool, then empty the crumb tray. Stop using your toaster if it continues to smoke.
- If the toasted bread pieces are too small to be picked up easily from your toaster, raise the bread carriage handle to its highest position, then remove the bread. If you still cannot remove the bread, use thin, heat-resistant tongs to pull the bread from the slot.
- If your toaster jams, the bread might be too thick. Remove the bread from your toaster and slice it thinner.
- If you use your toaster several times in a row, the additional toasting may be browner because your toaster is already hot. Adjust the browning level.

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S.) or 01-800-926-3000 (Mexico)

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Registered in some countries.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2014 Best Buy. All rights reserved.  
Made in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>