

Congratulations on your purchase of a high-quality Insignia product. Your new charger is designed for reliable and trouble-free performance.

## PACKAGE CONTENTS

- Charging stand
- Detachable base
- Controller dongles (2)
- AC adapter
- *Quick Setup Guide*

## FEATURES

- Charge and play without removing dongles
- LED lights to indicate charge status
- Charges two controllers simultaneously
- Compact design also provides convenient storage for your controllers

If you are using the PS4 controller for the first time, you will need to pair it with the console first. To do this, refer to the PS4 instructions on how to pair the controller.

## INSTALLING THE CONTROLLER DONGLE

- 1 Remove any silicon skin or jacket from your PS4 controller to access the charging port.
- 2 Align the controller dongle with the charging port on your controller, then slide it down until it is completely inserted.


**Note:** You can leave the controller dongle in place during gameplay.

**Caution:** This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!




## SETTING UP THE CHARGING STATION

- 1 Align the detachable base with the tabs on the charging stand, then slide it into place.

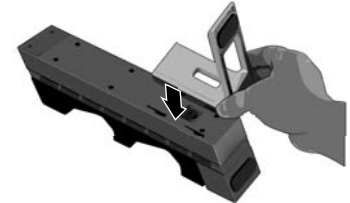

- 2 Place the charging station and stand on a stable surface.
- 3 Insert the DC power connector into the DC In jack behind the charging station.
- 4 Connect the AC power adapter to a standard AC power outlet.

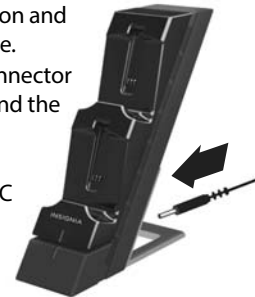

## RECHARGING YOUR PS4 CONTROLLERS

Remove any jacket or silicon skins from your PS4 controllers to permit charging. Make sure that the controller is facing forward.

- When there are no controllers on the charging station, the blue indicator lights are off.
- When one controller is charging, a single indicator light will be blue. When two controllers are charging, both indicator lights will be blue. The top indicator light corresponds to the top controller charging position, while the bottom indicator light corresponds to the bottom controller charging position.
- After a controller has finished charging, its corresponding indicator light turns off.



## TROUBLESHOOTING

Before contacting technical support for help, check the following:

### If the charge base doesn't charge the controllers:

- Make sure that the controller dongle is correctly installed in the PS4 controller.
- Make sure that you have connected the AC power adapter to the charging station and a working AC power outlet.
- If the controller has been stored and/or unused for a long time, it may have become over-discharged. The charging station may not be able to recover the battery.
- Make sure that the surrounding temperature is between 41° and 86°F (5°C - 30°C).
- Make sure that the PS4 controller is correctly installed in the charging station.
- Make sure that you have removed any jacket or silicon skin from your controller.

### If battery life seems short and charging takes a long time:

- Make sure that the surrounding temperature is between 41° and 86°F (5°C - 30°C).
- It is normal for battery life to decrease over time. If the battery life of your controller is affecting gameplay, consider purchasing a new PS4 controller.

## LEGAL NOTICES

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Canada ICES-003

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

## ONE-YEAR LIMITED WARRANTY

For complete warranty, visit [www.insigniaproducts.com](http://www.insigniaproducts.com).

## CONTACT INSIGNIA

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) [www.insigniaproducts.com](http://www.insigniaproducts.com)

All cited trademarks and logos are properties of their respective holders and these respective holders have not sponsored, endorsed or approved this product.

"PS4" is a trademark of Sony Computer Entertainment Inc.

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries.

Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.  
Made in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>