 




Quick Setup Guide NS-DP3CH Infocast™ Internet Media Display

Congratulations on your purchase of a high-quality Insignia product. Your Infocast™ Internet Media Display features state-of-the-art technology and is designed for reliable and trouble-free performance.

Package contents

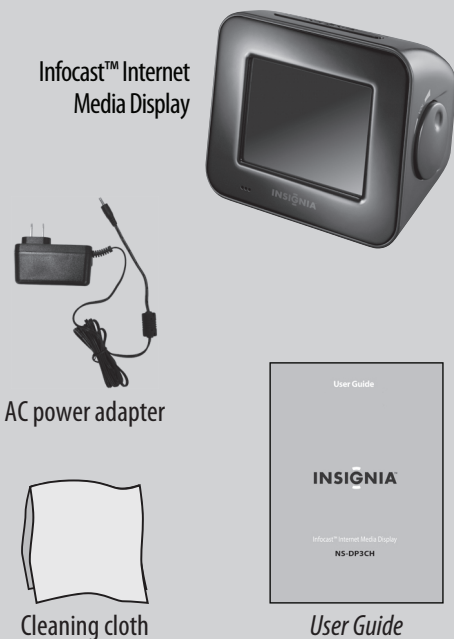 


Features

Front




Back

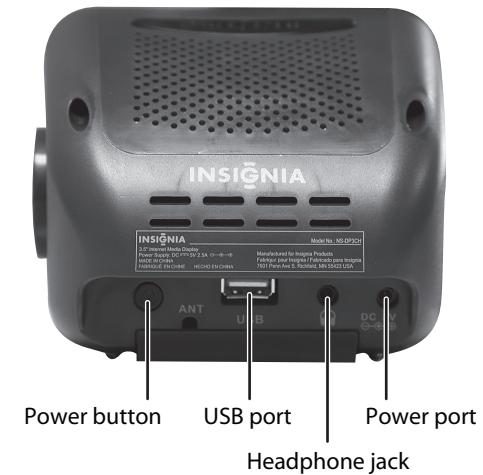

Setting up


Connect the AC power adapter to the back of your Infocast™ Internet Media Display, then plug the adapter into a power outlet.

 Control panel - Press the Insignia button to bring up the control panel. Tap an icon on the screen to make a selection from the control panel.

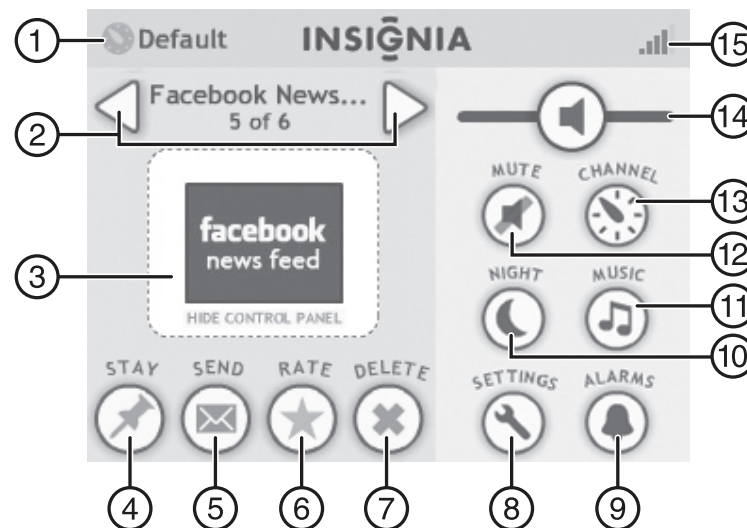

| # | Icon | Description |
|----|--------------------------------|--|
| 1 | Default | Currently playing channel. |
| 2 | Navigation arrows | Tap to change the current app. |
| 3 | Hide Control Panel | Tap to close the control panel and resume normal app playback. |
| 4 | STAY | Tap to stop cycling and stay on the current app. Tap again to resume automatic app playback. |
| 5 | SEND | Tap to open the <i>Send apps to friends</i> screen. |
| 6 | RATE | Tap to open the <i>Rate this app</i> screen. |
| 7 | DELETE | Tap to delete the currently selected app. |
| 8 | SETTINGS | Tap to open the <i>Settings</i> screen. |
| 9 | ALARMS | Tap to open the Alarms screen. |
| 10 | NIGHT | Tap to put your device in night mode. |
| 11 | MUSIC | Tap to see a list of available music sources. |
| 12 | MUTE | Tap to turn off the sound. |
| 13 | CHANNEL | Tap to display option for the currently playing channel. |
| 14 | Volume knob | Drag the button to adjust volume. |
| 15 | WiFi signal strength indicator | WiFi signal strength indicator. |

| | | |
|----|--------------------------------|--|
| 8 | SETTINGS | Tap to open the <i>Settings</i> screen. |
| 9 | ALARMS | Tap to open the Alarms screen. |
| 10 | NIGHT | Tap to put your device in night mode. |
| 11 | MUSIC | Tap to see a list of available music sources. |
| 12 | MUTE | Tap to turn off the sound. |
| 13 | CHANNEL | Tap to display option for the currently playing channel. |
| 14 | Volume knob | Drag the button to adjust volume. |
| 15 | WiFi signal strength indicator | WiFi signal strength indicator. |

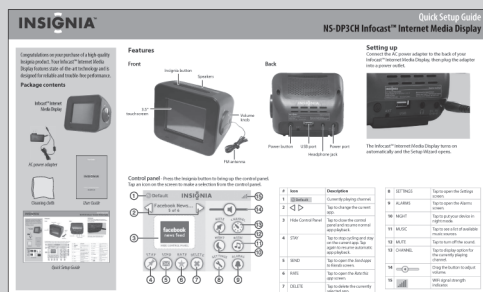 

Quick Setup Guide

 
Using the Infocast™ Internet Media Display for the first time

The first time you plug in your Infocast™ Internet Media Display, it turns on. After it's plugged in, you will need to manually turn it on or off by pressing the power button on the back of the device.

Follow the Setup Wizard to set up your Infocast:

1 Calibrate the screen

Follow the on-screen instructions by touching the series of stars. This helps your Infocast™ Internet Media Display learn precisely where your finger is touching the screen.

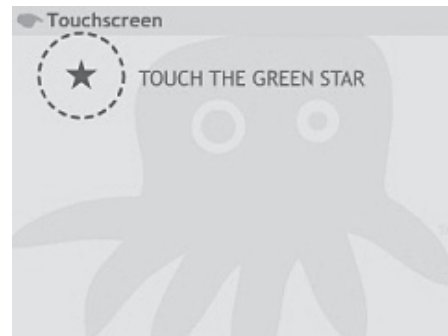

2 Connect to a network

- 1 Tap your network name to select it, then tap **OK**.
- 2 If your network requires authentication (a password or encryption key), select the type of authentication (refer to your wireless router's security configuration), tap **NEXT**, enter the authorization key using your on-screen keyboard, then tap the **OK** key.
- 3 Tap **Automatic** (recommended) or **Manual** to select your IP mode (how your network identifies the Infocast™ Internet Media Display), then tap **OK**. A confirmation screen opens. Most people utilize Automatic IP assignment mode.
- 4 Review your settings, then tap **OK**.
Your Infocast™ Internet Media Display begins connecting to your network. When the network is connected, a success message will be displayed.
- 5 Click **DONE**. The *SET TIME ZONE* screen opens.
For more information or for troubleshooting, see your *User Guide* or visit www.insigniaproducts.com for details.

3 Set the time zone

 
- 1 Tap anywhere on the map to zoom in on that area. Tap the magnifying glass in the lower left corner to zoom out.
- 2 Tap a red dot to see the city's name. If the city is in your time zone, tap **OK**. The Time zone screen opens.



4 Set the time and date

Tap the up or down arrows to change the hours, minutes, seconds, month, day, and year values, then tap **DONE**.

NOTE: *TIME/DATE* will only open if the device cannot get time from the Internet.

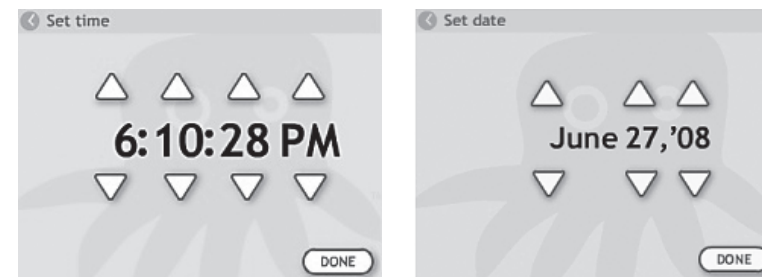

5 Activate your Infocast™ Internet Media Display (optional)

NOTE: To get the most from your Infocast™ Internet Media Display, including access to apps, photos, music, and other content from the Internet, we highly recommend activating your device. It costs nothing.

- 1 Tap **NEXT** on your Infocast.
- 2 At a computer, open a Web browser and go to www.insigniaproducts.com/chumby. If you don't have Internet access right now, tap **LATER** on your device and activate at another time.

- 3 On the site, click the **LOG IN/CREATE NEW ACCOUNT** button to create an account.
- 4 You will be sent a confirmation email with instructions on how to complete the activation of your account. If you do not receive your activation email, please be sure to check the "spam" or "junk mail" folder of your email account.
- 5 Return to www.insigniaproducts.com/chumby and click the **Activate your new Device** button. Follow the instructions on the screen to activate your Infocast.
- 6 When you see the *Congratulations* screen on your Infocast™ Internet Media Display, you have successfully activated your device. If you do not see this screen, visit the help section on www.insigniaproducts.com/chumby.

Playing a channel

- 1 Tap **CHANNEL**, then tap **CHANGE**. The Featured Channel (along with any other channels you've defined) appears in the list.
- 2 Tap a channel to select it, then tap **CHANGE**.
- 3 Press the Insignia button on the top of your Infocast to play that channel.
- 4 Press the Insignia button again to return to the control panel.

6-month limited warranty

See your *User Guide* or visit www.insigniaproducts.com for details.

Need additional help?

See your *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features.

www.insigniaproducts.com

For customer service, call **1-877-467-4289**

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2010 BBY Solutions, Inc. All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>