

# Integra

## Contents

Before Using Your DVD Changer 2

Getting Started 6

Connections 10

Basic Playback 14

Advanced Playback 21

Function Setup 32

Others 40

## DVD/VIDEO CD/CD CHANGER DPC-6.1

### Instruction Manual

Thank you for purchasing the Integra DVD Changer. Please read this manual thoroughly before making connections and turning on the power. Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new DVD Changer. Please retain this manual for future reference.



**WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**AVIS**  
RISQUE DE CHOC ELECTRIQUE  
NE PAS OUVRIR



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# Important Safeguards

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
 

PORTABLE CART WARNING


- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
 

S3125A
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or if placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings, there should be free space of at least 5 cm (2 in.) and an opening behind the appliance.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. **Polarization** - If the appliance is provided with a polarized plug having one blade wider than the other, please read the following information:  
The polarization of the plug is a safety feature. The polarized plug will only fit the outlet one way. If the plug does not fit fully into the outlet, try reversing it. If there is still trouble, the user should seek the services of a qualified electrician. Under no circumstances should the user attempt to defeat the polarization of the plug.
12. **Power-Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, especially near plugs, convenience receptacles, and the point where they exit from the appliance.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
17. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

# Precautions

---

## CAUTION:

VISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. DO NOT STARE INTO BEAM.

## CAUTION:

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

## For U.S. model

The laser is covered by a housing which prevents exposure during operation or maintenance. However, this product is classified as a Laser Product by CDRH (Center for Devices and Radiological Health) which is a department of the Food and Drug Administration.

According to their regulations 21 CFR section 1002.30, all manufactures who sell Laser Products must maintain records of written communications between the manufacturer, dealers and customers concerning radiation safety. If you have any complaints about instructions or explanations affecting the use of this product, please feel free to write to the address on the back page of this manual. When you write us, please include the model number and serial number of your unit.

In compliance with Federal Regulations, the certification, identification and the period of manufacture are indicated on the rear panel.

## FCC INFORMATION FOR USER

## CAUTION:

The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## For Canadian model

For models having a power cord with a polarized plug:

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**NOTE:** THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

## Modele pour les Canadien

Sur les modeles dont la fiche est polarisee:


**ATTENTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

**REMARQUE:** CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

# Precautions

## 1. Regional restriction codes (region number)

Regional restriction codes are built-in to DVD Changers and DVD videos for each sales region. If the regional code of the DVD Changer does not match one of the regional codes of the DVD video, playback is not possible.

The region number can be found on the rear panel of the DVD Changer. (e.g:  Region 1)

## 2. About This Manual

This manual explains the basic procedures for operating your DVD Changer. Some DVD videos do not support the full potential of the DVD technology. Your DVD Changer may therefore not respond to all operating commands. Refer to instruction notes on discs.

A "⊗" mark may appear on the TV screen during operation. It means that the operation is not permitted by the DVD Changer or the disc.

## 3. Warranty Claim

You can find the serial number on the rear panel of this unit. In case of warranty claim, please report this number.

## 4. Recording Copyright

Recording of copyrighted material for other than personal use is illegal without permission of the copyright holder.

## 5. Power

WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.

The voltage of the available power supply differs according to country or region. Be sure that the power supply voltage of the area where this unit will be used meets the required voltage (e.g., AC 120 V, 60 Hz) written on the rear panel.

## 6. Do not touch this unit with wet hands

Do not handle this unit or power cord when your hands are wet or damp. If water or any other liquid enters the case, take this unit to an authorized service center for inspection.

## 7. Location of this unit

- Place this unit in a well-ventilated location.  
Take special care to provide plenty of ventilation on all sides of this unit especially when it is placed in an audio rack. If ventilation is blocked, this unit may overheat and malfunction.
- Do not expose this unit to direct sunlight or heating units as this unit's internal temperature may rise and shorten the life of the pickup.
- Avoid damp and dusty places and places directly affected by vibrations from the speakers. In particular, avoid placing the unit on or above one of the speakers.
- Be sure this unit is placed in a horizontal position. Never place it on its side or on a slanted surface as it may malfunction.
- When you place this DVD Changer near a TV, radio, or VCR, the playback picture may become poor and the sound may be distorted. In this case, place the DVD Changer away from the TV, radio, or VCR.

## 8. Care

From time to time you should wipe the front and rear panels and the cabinet with a soft cloth. For heavier dirt, dampen a soft cloth in a weak solution of mild detergent and water, wring it out dry, and wipe off the dirt. Following this, dry immediately with a clean cloth.

Do not use rough material, thinners, alcohol or other chemical solvents or cloths since these could damage the finish or remove the panel lettering.

## 9. Notes on Handling

- When shipping the DVD Changer, use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the DVD Changer. Do not leave rubber or plastic products in contact with the DVD Changer for a long time. They will leave marks on the finish.
- The top and rear panels of the DVD Changer **may become warm after a long period of use. This is not a malfunction.**
- When the DVD Changer is not in use, be sure to remove the disc and turn off the power.
- If you do not use the DVD Changer for a long period, the unit may not function properly in the future. Turn on and use the DVD Changer occasionally.

## 10. To Obtain a Clear Picture

The DVD Changer is a high technology, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality becomes poor. To obtain a clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment. For details, contact your nearest dealer.

## 11. Notes on Moisture Condensation

**Moisture condensation damages the DVD Changer. Please read the following carefully.**

Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD Changer.

- Moisture condensation occurs in the following cases.
  - When you bring the DVD Changer directly from a cold place to a warm place.
  - When you use the DVD Changer in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
  - In summer, when you use the DVD Changer in a hot and humid place just after you move the unit from an air conditioned room.
  - When you use the DVD Changer in a humid place.
- Do not use the DVD Changer when moisture condensation may occur.  
If you use the DVD Changer in such a situation, it may damage discs and internal parts. Remove the disc, connect the power cord of the DVD Changer to the wall outlet, turn on the DVD Changer, and leave it for two or three hours. After a few hours, the DVD Changer will have warmed up and evaporated any moisture. Keep the DVD Changer connected to the wall outlet and moisture condensation will seldom occur.

# Table of Contents

Important Safeguards/Precautions/Table of Contents .....	2-5
--	-----

## Getting Started

<b>Features</b> .....	6	Handling Discs .....	9
<b>Supplied Accessories</b> .....	7	Cleaning Discs .....	9
<b>Preparing the Remote Controller</b> .....	8	Storing Discs .....	9
Installing the remote controller batteries .....	8	About VIDEO CDs .....	9
Using the remote controller .....	8	Notes on Copyright .....	9
<b>Disc Compatibility and Handling</b> .....	9		
Discs You can Use .....	9		

## Connections

<b>Connecting the DPC-6.1 to a TV</b> .....	10	Connecting to an Amplifier Equipped with Dolby Pro Logic Surround .....	12
Connecting the DPC-6.1 to a TV .....	10	Connecting to an Amplifier Equipped with a DTS Decoder .....	13
<b>Connecting to an Audio System and TV with COMPONENT VIDEO Inputs</b> .....	11	Connecting to an Amplifier Equipped with a Digital Audio Input .....	13
<b>Other Audio Playback Options</b> .....	12		
Connecting to an Amplifier Equipped with a Dolby Digital Decoder .....	12		

## Basic Playback

<b>Playing back Discs</b> .....	14	<b>Locating Titles, Chapters, or Tracks</b> .....	18
Basic Playback .....	14	Locating a Title Using the Title Menu .....	18
Direct Playback, Stop and Pause .....	16	Title Selection with the Numeric Buttons .....	18
Fast Reverse and Fast Forward Playback .....	16	Selecting Chapters or Tracks .....	19
Slow-Motion Playback .....	17	<b>Selecting a Precise Scene or Audio Passage</b> .....	20
Resuming Playback From the Desired Location .....	17	Entering the Time Location .....	20

## Advanced Playback

<b>Repeat Functions</b> .....	21	<b>DVD Video Functions</b> .....	27
Repeating a Title or Chapter/Track .....	21	Zooming in .....	27
Repeating a Given Scene or Passage .....	21	Changing the Camera Angle .....	27
<b>Setting the Desired Playback Order</b> .....	22	Audio Playback Settings .....	28
Programming Memory Sequences .....	22	Using the Subtitle Feature .....	30
<b>Additional Playback Functions</b> .....	24	<b>Using The On-Screen Display Functions</b> .....	31
Next Selection: Preparing the next Audio Track .....	24	Requesting Basic Information .....	31
Using the DVD Changer as CD player .....	25	More Specific Information: Remaining Time and Setting Status .....	31
Random Playback .....	26		

## Function Setup

<b>Advanced Settings</b> .....	32	DISPLAY Settings .....	37
Setting Procedure .....	32	OPERATION Settings .....	37
LANGUAGE Functions .....	34	<b>Table of Languages</b> .....	39
PICTURE Settings .....	35	Table of Languages and Their Abbreviations ....	39
AUDIO Settings .....	36		

## Others

<b>Troubleshooting</b> .....	40	Display .....	42
Symptoms and Corrections .....	40	Remote Controller .....	43
<b>Identification of Controls</b> .....	41	<b>Specifications</b> .....	44
Front Panel .....	41	DVD Changer/Outputs .....	44
Rear Panel .....	41		

# Features

## ■ Highlights that Set the DPC-6.1

- Dolby\* Digital Audio Output
- 6-Disc playback
- DTS\*\* Compatibility
- Video CD playback
- Full 96-kHz/24-bit resolution with 96-kHz/24-bit discs
- Direct digital path for signal purity
- Enhanced black-level setting
- Next Selection

## ■ Video Features


- DTS Compatibility means the DPC-6.1 can pass a DTS-encoded digital signal from discs with DTS soundtracks to an external processor or receiver with a DTS decoder
- Advanced 10-Bit 27 MHz Video D/A Conversion for four times the accuracy of conventional 8-bit, 13.5 MHz systems
- Gold-Plated Component-Video Output to realize the full potential of DVDs
- 3-Mode Picture Magnification enables you to "zoom" in and enlarge in three steps 25 selected areas of the picture
- Enhanced Black-Level Control lets you set the reference black threshold cutoff-especially useful for picture calibration on TVs
- Passes PLUGE Signals to make it easier for you to set the brightness of your monitor when using DVD test discs
- Video CD Playback for enjoying the wide selection of inexpensive Video-CD software, which has the same high audio quality as MiniDiscs, and picture quality comparable to VHS video cassettes
- High Resolution Onscreen Display
- S-Video Output
- Full-Time Active Video Outputs to make using the DVD changer with both the main home-theater television and the display in the bedroom much easier
- 4-Mode Search (title, DVD chapter, CD track, and time)
- Still Frame to view single frames
- Frame Advance
- Slow Motion for DVD playback without sound at 1/2, 1/4, or 1/8th the normal speed
- Fast Forward/Reverse (x2, x8, x30)
- Last Memory Play function for both DVDs and CDs-resumes play from where last stopped, even if the power was turned off
- 6-Mode Repeat allows you to repeat titles, chapters, tracks, all tracks, memory, and a user-selected A-B section on DVDs and CDs
- Programmed Memory Playback
- Random Playback
- Multi-Aspect Ratio
- 8-Language Soundtrack Capability
- 32 Subtitle Languages
- Multi-Camera Angle
- Parental Viewing Control
- Screen Saver

## ■ Audio Features

- Audiophile-Class Audio Performance
- Direct Digital Path
- Full 96-kHz/24-Bit Audio Resolution
- Digital Audio Output (coaxial)
- Optical Digital Audio Output
- 1 Pair of Analog Outputs (RCA)

## ■ Other Features You'll Enjoy


- 5-Disc Exchange
- CD Mode (DVD Skip) Control
- Next Selection
- Direct Disc Access
- Separate indicators for Each Disc (1 to 6)
- Dual-Focus Optical Pickup
- Dynamic Range Control
- Large, Bright, Universal Fluorescent Display
- 2-Mode Display Dimmer (normal, dim)
- Anti-Resonant, Heavy-Gauge, Reinforced-Steel Chassis
- Large Anti-Resonant Feet
- Heavy-Duty Power Cord
- Brushed Aluminum Front Panel
- 54-Key Full-Function Remote Control

\* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol  are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.


\*\* "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc.

# Supplied Accessories


After unpacking, check whether the box contains all items listed below.  
If anything is missing, contact the ONKYO/Integra dealer where you bought the DVD Changer.  
The number of accessories is indicated in brackets.

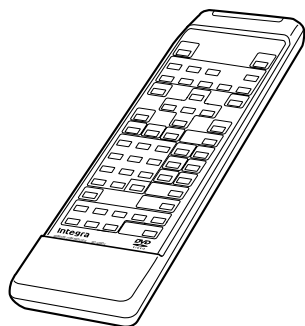


Remote controller (RC-426DV) (1)

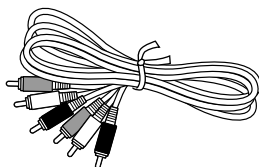


Audio/video connection cable (1)

 

Power cable (1)

 

 
Batteries for the remote controller  
(size AA/UM-3) (2)



S video cable (1)



# Preparing the Remote Controller

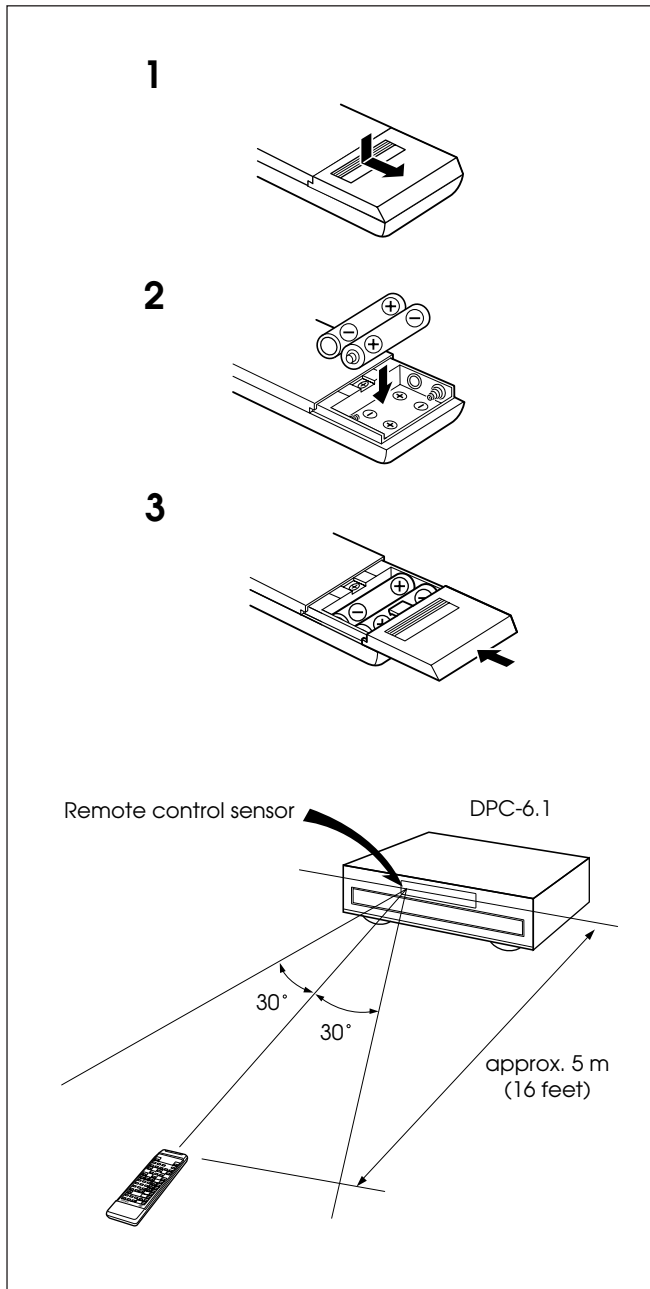

## Installing the remote controller batteries

1. Remove the battery compartment cover by pressing and sliding it away from the remote controller unit.
2. Insert two AA (R6- or UM-3)-size batteries into the battery compartment. Carefully follow the polarity diagram (positive (+) and negative (-) symbols) inside the battery compartment.
3. After batteries are installed and seated correctly, replace the compartment cover.

### Notes:

- Do not mix new batteries with old batteries or different kinds of batteries.
- To avoid corrosion, remove the batteries if the remote controller is not to be used for a long time.
- Remove dead batteries immediately to avoid damage from corrosion. If the remote controller doesn't operate smoothly, replace both the batteries at the same time.
- The life of the batteries supplied is about six months but this will vary depending on usage.

## Using the remote controller

Point the remote controller toward the remote control sensor.

### Notes:

- Place the unit away from strong light such as direct sunlight or inverted fluorescent light which can prevent proper operation of the remote controller.
- Using another remote controller of the same type in the same room or using the unit near equipment which uses infrared rays may cause operational interference.
- Do not put any object such as a book on the remote controller. The buttons of the remote controller may be pressed by mistake and drain the batteries.
- Make sure the audio rack doors do not have colored glass. Placing the unit behind such doors may prevent proper remote controller operation.
- If there is any obstacle between the remote controller and the remote control sensor, the remote controller will not operate.



# Disc Compatibility and Handling

 
In this section, you will learn which discs can be used with your DPC-6.1, and how to handle, clean, and store them.

## Discs You can Use

Your DVD Changer can play back the following discs:

	Disc mark	Contents	Disc size	Maximum playback time
DVD videos		Audio + Video (moving pictures)	12 cm	Approx. 4 hours (single sided disc)
				Approx. 8 hours (double-sided disc)
			8 cm	Approx. 80 minutes (single-sided disc)
				Approx. 160 minutes (double-sided disc)
VIDEO CDs		Audio + Video (moving pictures)	12 cm	Approx. 74 minutes
			8 cm	Approx. 20 minutes
Audio CDs		Audio	12 cm	Approx. 74 minutes
			8 cm (CD single)	Approx. 20 minutes


- You cannot play back discs other than those listed above.
- You cannot play back discs such as CD-R, CD-RW, CD-ROM, DVD-RAM, DVD-RW, etc., even though they may be labelled with one of the above logos.
- This DVD Changer uses the NTSC color system, and cannot play back DVD videos recorded in any other color system (PAL, SECAM, etc.).
- Avoid using heart-shaped or octagonal discs. Playing irregularly shaped discs may damage the DVD Changer's internal mechanism.



- Do not use discs that have residue from adhesive tape, rental discs that have peeling labels, or discs that have custom labels or stickers. Otherwise, you may not be able to eject the discs, or the DVD Changer may become inoperative.

## Handling Discs

- Never touch the playback side (the "blank" side) of the disc.

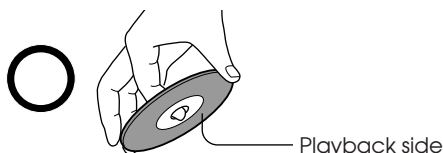


- Never attach paper or tape to discs.



## Cleaning Discs

- Fingerprints and dust on the disc cause a deterioration of the picture and sound quality. Wipe the disc from the center outwards with a soft cloth. Always keep the discs clean.

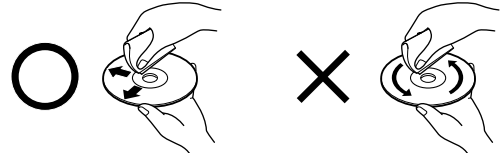

- Stubborn dust or dirt can be removed by wiping the disc lightly with a slightly moistened soft cloth and finishing with a dry cloth.
- Never use solvents such as thinner, benzene, commercially available cleaners, or antistatic spray for vinyl LPs. They may damage the disc.

## Storing Discs

- Do not store discs in places subject to direct sunlight or near heat sources.
- Do not store discs in places subject to moisture and dust, such as in a bathroom or near a humidifier.
- Store discs vertically in their case. Stacking or placing objects on unprotected discs may cause warping and scratches.

## About VIDEO CDs

Your DVD Changer can play back version 1.1 and 2.0 Video CDs. Version 2.0 discs support PBC functionality. (PBC is the abbreviation of Playback Control.)

- VIDEO CDs not equipped with PBC functionality (Version 1.1)**  
Sound and pictures are played back in the same way as an audio CD.
- VIDEO CDs equipped with PBC functionality (Version 2.0)**  
In addition to the functions available for version 1.1 Video CDs, you can use interactive software and search functions. These are accessible via a menu displayed on the TV screen (Menu Playback). However, not all functions described in this Instruction Manual are supported by all Video CDs.

## Notes on Copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.

DVD videos are copy protected, and any copy made from these discs will be distorted.


This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

# Connecting the DPC-6.1 to a TV

Here is how to connect your DVD Changer to your TV set. In this case, both the video and audio signals will be played back by your TV set.

## Connecting the DPC-6.1 to a TV

1. Switch off the DVD Changer and the TV set.
2. Connect the DPC-6.1 to your TV set as shown in the illustration.

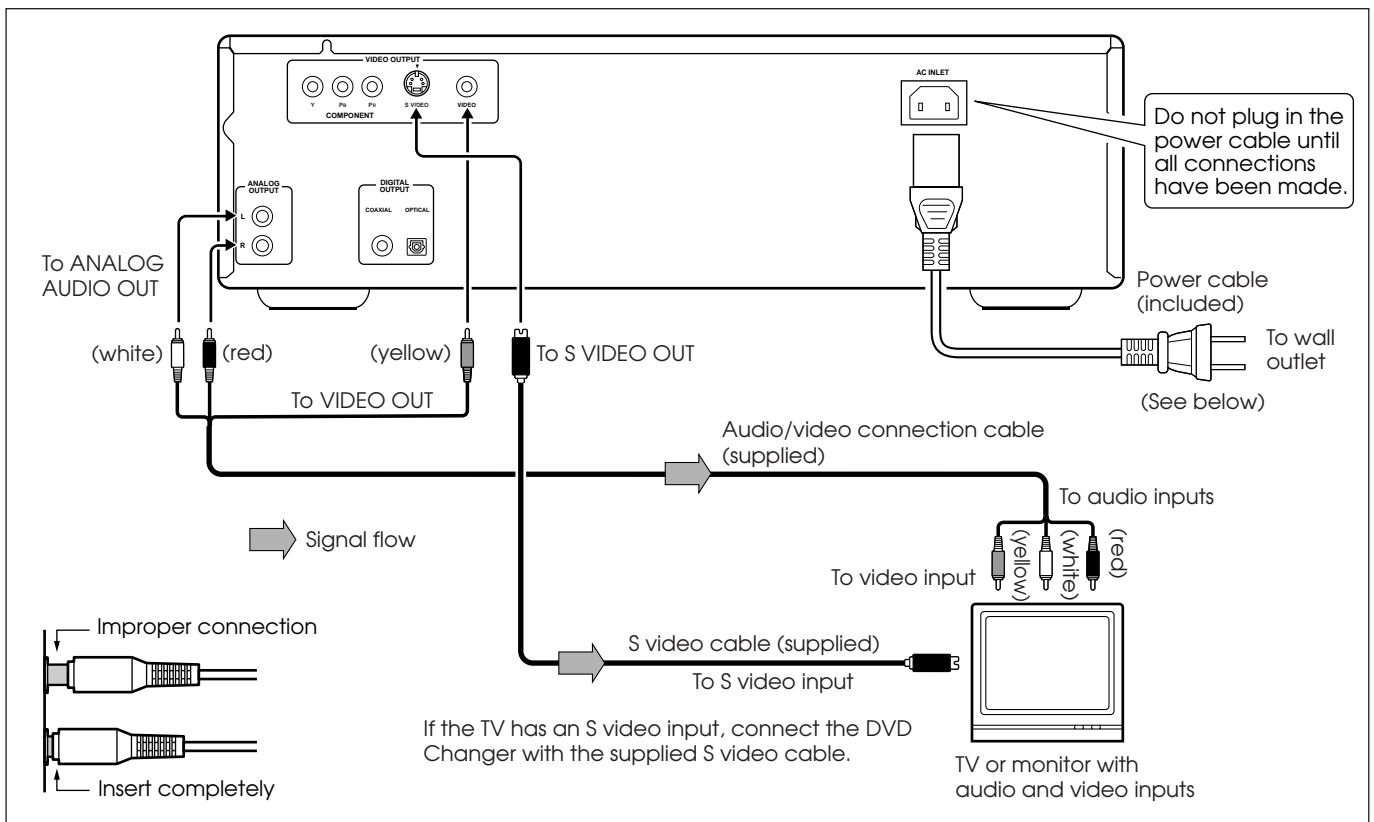


### ■ Selecting the audio outputs

Your DPC-6.1 provides several options for audio playback: you can use the analog or one of the digital audio outputs. If the audio is to be played back by your TV set, connect the ANALOG OUTPUTS to the audio inputs of your TV set and activate them ("Analog 2ch"). See "Audio Settings" on page 36 for details.

### Notes:

- See also the instruction manual of the connected TV on how to select the signals transmitted by the DVD Changer.
- Before connecting the DVD Changer to your TV, be sure to turn off the power to and unplug both units from the wall outlet.
- If your TV set has one audio input (monaural), connect a Y cable adapter to the DPC-6.1's ANALOG OUTPUTS, and the other end of the adapter to the TV's audio input.
- Be sure to establish a direct video connection between the DPC-6.1 and your TV set. Do not route the video signal through your VCR or other video component. Otherwise the picture may be distorted due to the DVD video's copy protection.

### Connecting a power cable

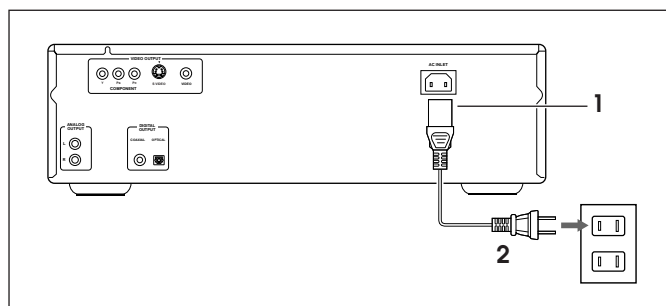

1. Connect the outlet plug on the included power cable to the AC INLET on the DPC-6.1.
2. Plug-in the other end of the cable to a wall AC outlet.

### Notes:

- Do not use any power cable other than the included cable. The included cable is designed for use only with the DPC-6.1. Do not use it for any other device.
- Do not connect or disconnect the outlet plug from the DPC-6.1 while the other end is plugged into the wall AC outlet.

# Connecting to an Audio System and TV with COMPONENT VIDEO Inputs


■ It is also possible to “split” the audio and video signals by sending the video signal to your TV set and the audio signal to an amplifier. Doing so has the advantage that you can:

- Listen to the sound of audio CDs and DVD videos in stereo (via the amplifier) or in Dolby Digital, Dolby Pro Logic Surround or DTS (see pages 12, 13);
- Enjoy a better picture quality of DVD videos on a TV equipped with Component Video inputs than would be possible via an S-video connection.

## Notes

- See also the manuals of your audio amplifier and TV set for establishing the correct connections and making the required settings.
- Before connecting the DVD Changer to other equipment, be sure to turn off the power and unplug all components from the wall outlet.
- This DVD Changer outputs a very dynamic audio signal. Be sure to set the amplifier’s volume to a moderate listening level to avoid damaging your speakers due to sudden volume surges.
- Switch off the amplifier or select another input source before connecting or disconnecting the DVD Changer’s power cable. If you leave the amplifier power on, the speakers may be damaged.

Your DPC-6.1 provides several options for audio playback: you can use the analog or one of the digital audio outputs. If your amplifier only provides analog inputs, use the DPC-6.1’s ANALOG OUTPUTS and select them via the on-screen menu (“Analog 2ch”). See “Audio Settings” on page 36 for details.

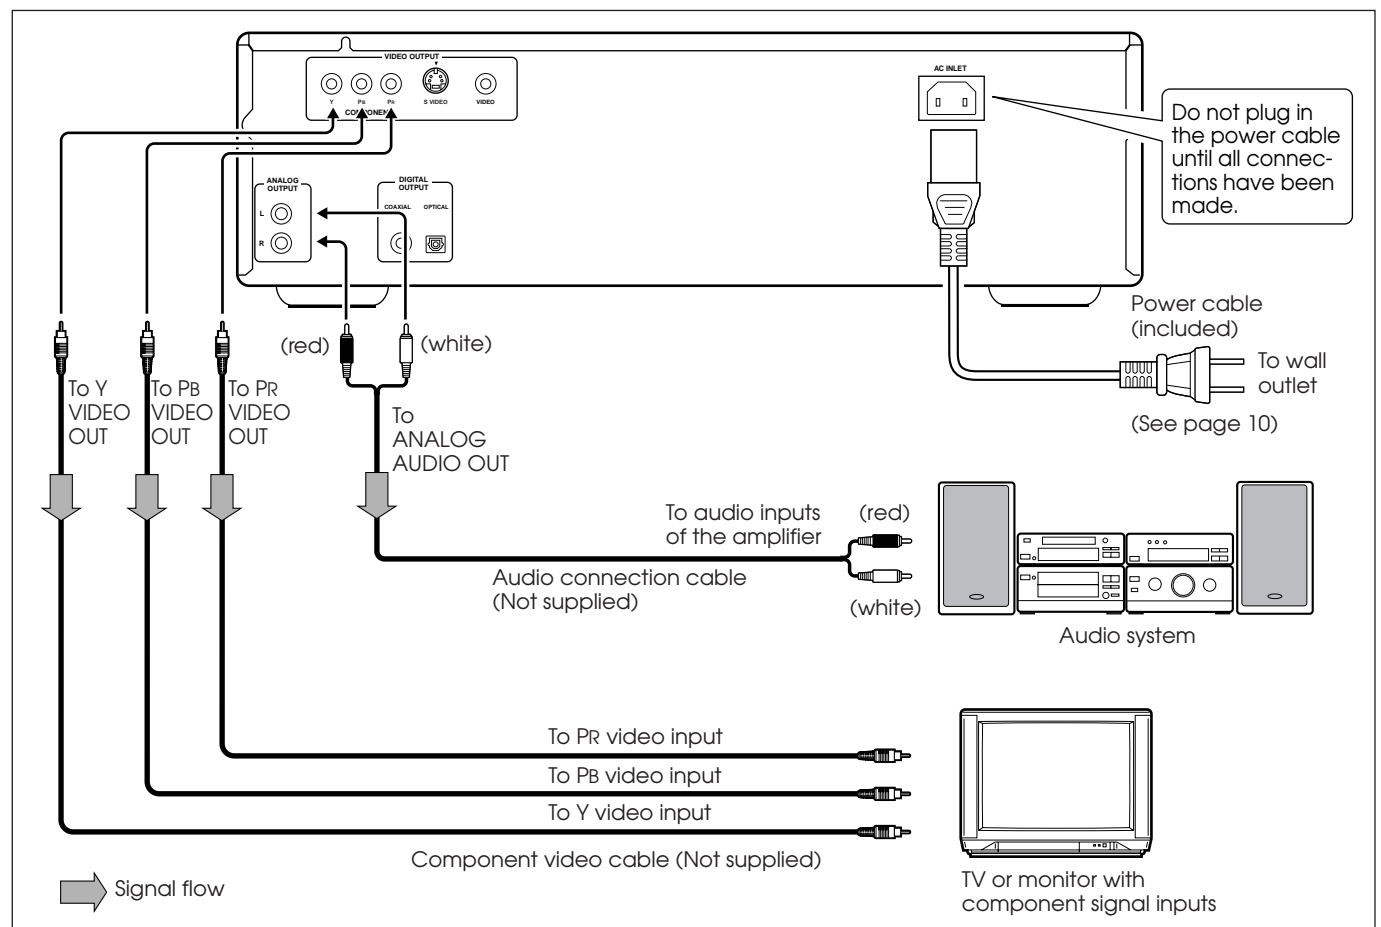

## ■ COMPONENT VIDEO OUT (COLOR DIFFERENCE):

Some TVs or monitors are equipped with Color Difference inputs. Connecting the DPC-6.1 to these inputs allows you to enjoy a better picture quality. Be sure to match the DPC-6.1’s VIDEO OUTPUTS with the Component Video inputs of your TV or monitor (see the illustration).

 
Actual labels for the Color Difference inputs may vary depending on the TV manufacturer (e.g. Y, B-Y, R-Y, etc.). On some TVs or monitors, the color levels of the picture may be reduced slightly, or the tint may change. In such cases, adjust the TV or monitor for optimum performance.

## Note:

If you place the DVD Changer near a tuner or radio, the radio reception might be distorted due to interference. In this case, locate the DPC-6.1 away from the tuner or radio.

# Other Audio Playback Options

■ You can enjoy high-quality surround audio playback by connecting the DPC-6.1 to an amplifier equipped with a Dolby Digital, Dolby Pro Logic Surround, or DTS decoder. Furthermore you can transfer the signal of audio CDs to your amplifier in the digital domain if it is fitted with a digital input. See pages 10 and 11 for the video hookup of the DPC-6.1 to your TV set.




When using an optical digital cable, remove the cap from the DIGITAL OUTPUT OPTICAL connector and firmly fit the cable's jack into the connector. When not using this connector, keep it capped to protect it from dust intrusion.

## Notes:

- Before connecting the DVD Changer to other equipment, be sure to turn off the power and unplug all components from the wall outlet.
- This DVD Changer outputs a very dynamic audio signal. Be sure to set the amplifier's volume to a moderate listening level to avoid damaging your speakers due to sudden volume surges.
- Switch off the amplifier or select another input source before connecting or disconnecting the DVD Changer's power cable. If you leave the amplifier power on, the speakers may be damaged.

## Connecting to an Amplifier Equipped with a Dolby Digital Decoder

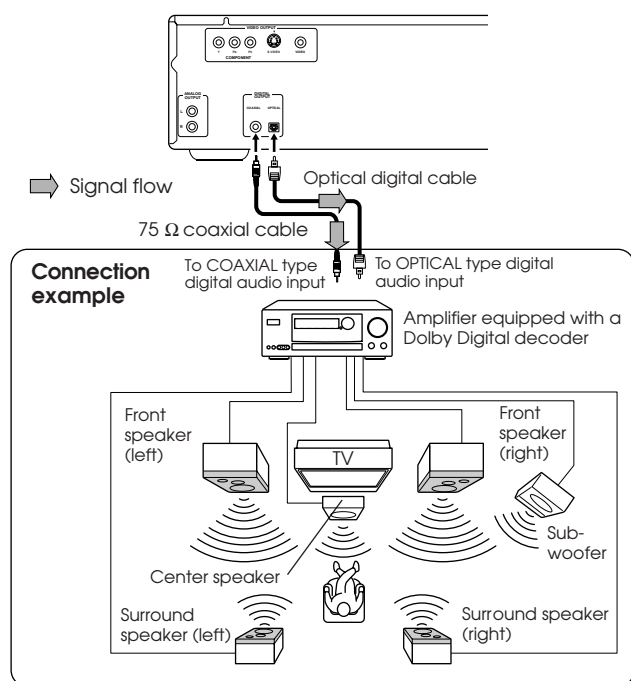

Playback of Dolby Digital-encoded discs requires that you establish a digital connection with the amplifier. The selection of the DPC-6.1's DIGITAL OUTPUT depends on the type of digital input provided on your amplifier. Use either the DIGITAL OUTPUT COAXIAL or OPTICAL connector. See the amplifier's manual for details.

### Dolby Digital


Dolby Digital is a surround sound technology used in movie theaters that is now also available on equipment for a home environment. You can play back motion picture and live-concert DVD videos of this sound format by connecting the DVD Changer to a 6-channel amplifier equipped with a Dolby Digital decoder or Dolby Digital processor. If your amplifier (or separate decoder) supports Dolby Pro Logic Surround, you can even play back Dolby Pro Logic-encoded DVD movies with full 5.1-channel Dolby Digital soundtracks, as well as titles with the Dolby Surround mark.

- This functionality is only available when using DVD videos with Dolby Digital encoding.
- Make the following settings:

Setting	Select:	Page
Audio Out Select	Bitstream	36
Recording system		29

- Select the Dolby Digital or Dolby Pro Logic Surround mode on your amplifier.

## Connecting to an Amplifier Equipped with Dolby Pro Logic Surround

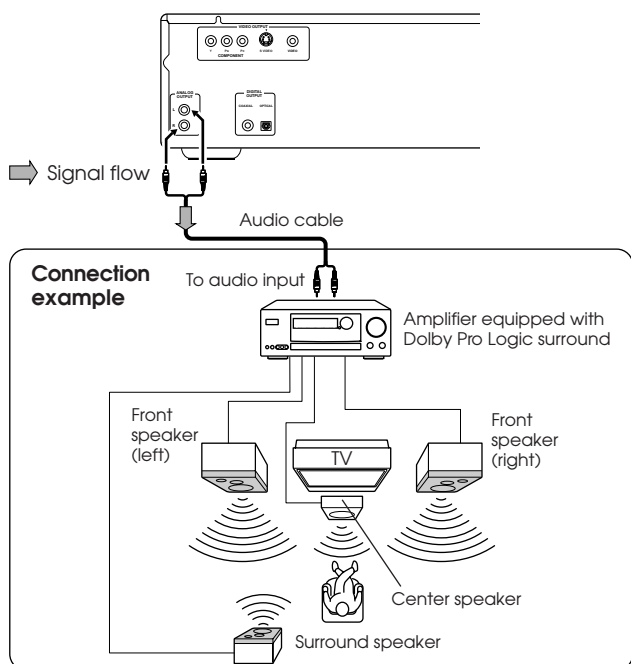

Your DPC-6.1 also supports Dolby Pro Logic Surround. This effect can be obtained in one of two ways: via a digital or an analog connection with an amplifier that supports Dolby Pro Logic Surround (see below).

### Dolby Pro Logic Surround

Playback of Dolby Pro Logic Surround-encoded DVD videos requires that you connect the DPC-6.1 to an amplifier with right and left front speakers, a center speaker, and one or two surround speakers. Feel free to use one or two surround speakers. Be aware, though, that the output sound of the rear channel will be monaural even if you connect two surround speakers.

- **If your amplifier is fitted with a digital input:**  
See the connection for Dolby Digital playback above and make the suggested settings. See also the amplifier's manual for how to select its Dolby Pro Logic Surround mode.
- **If your amplifier has no digital input:**  
Connect the DPC-6.1's ANALOG OUTPUTS as shown in the illustration to the left, and make the following setting:

Setting	Select:	Page
Audio Out Select	Analog 2ch	36

- Select the Dolby Pro Logic Surround mode on your amplifier.

### Note:


Do not forget to select the DVD Changer's AUDIO OUTPUTS ("Analog 2ch"). See "Audio Settings" on page 36 for details.

**Warnings**

- If you connect to the digital input of an amplifier that does not have a Dolby Digital decoder or DTS decoder, set the DPC-6.1's "Audio Out Select" function to "PCM." Any other setting may damage your ears or speakers when using high volume levels.
- During playback of DTS-encoded audio CDs, excessive noise may be output from the ANALOG OUTPUTS. To avoid possible damage to your audio system, we recommend you either break the connection between the DVD Changer's ANALOG OUTPUTS and the amplifier, or to only start playback of your DPC-6.1 after selecting the appropriate digital input source on your amplifier.
- DTS Digital Surround™ playback is only available if you connect an external 5.1-channel DTS Digital Surround™ decoder to a DIGITAL OUTPUT jack of the DVD Changer.

**Connecting to an Amplifier Equipped with a DTS Decoder**

Playback of DTS-encoded discs requires that you establish a digital connection with the amplifier. The selection of the DPC-6.1's DIGITAL OUTPUT depends on the type of digital input provided on your amplifier. Use either the DIGITAL OUTPUT COAXIAL or OPTICAL connector. See the amplifier's manual for details.

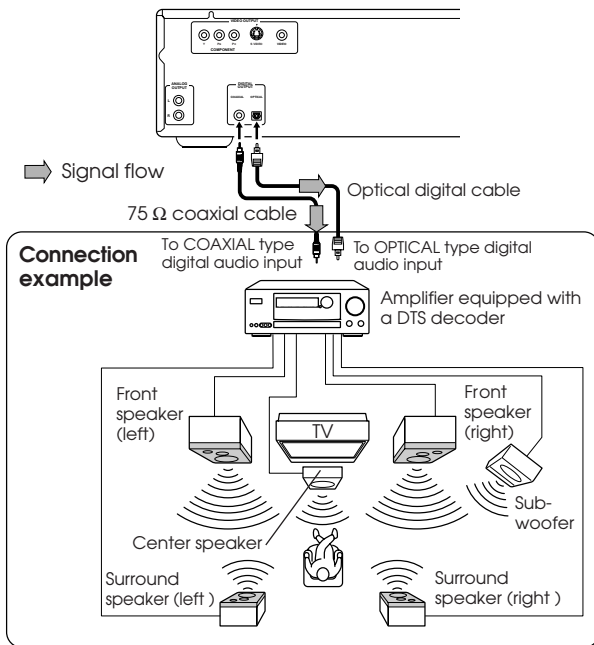

**Digital Theater System (DTS)**

DTS is a high-quality surround technology used in movie theaters that is also available for home use on DVD videos or audio CDs. If you have a DTS decoder or processor, you can obtain the full benefit of 5.1-channel DTS encoded sound tracks.

- DTS functionality is only available when using DVD videos or audio CDs with DTS encoding.
- Make the following settings:


Setting	Select:	Page
Audio Out Select	Bitstream	36
Recording system	DTS	29

- Select the DTS mode on your amplifier.

**Digital Stereo Audio Playback**

The DPC-6.1 also allows you to output a stereo audio signal in the digital domain. The selection of the DPC-6.1's DIGITAL OUTPUT depends on the type of digital input provided on your amplifier. Use either the DIGITAL OUTPUT COAXIAL or OPTICAL connector. See the amplifier's manual for details.

**Connecting to an Amplifier Equipped with a Digital Audio Input**

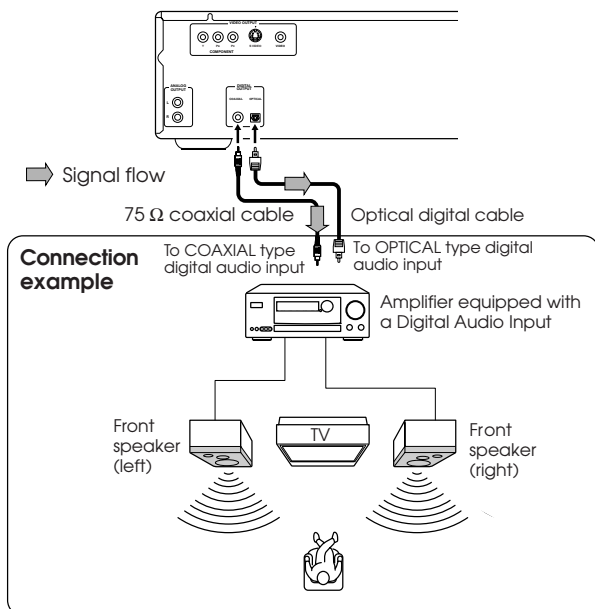

**PCM**

If your amplifier provides a digital audio input, you can establish a digital connection between the DPC-6.1 and the amplifier. Choose this type of connection if your amplifier is equipped with a better D/A converter than your DPC-6.1, or if you also own a dedicated D/A converter.

- **Make the following setting:**

Setting	Select:	Page
Audio Out Select	PCM	36

**Notes:**


- NEVER connect a DIGITAL OUTPUT jack of the DVD Changer to the AC-3 RF input of a Dolby Digital Receiver. AC-3 RF inputs use a different encoding format that is not supported by the DPC-6.1's DIGITAL OUTPUTS.
- The amplifier's coaxial digital input may be labelled "DIGITAL" rather than "COAXIAL". See its manual for details.




# Playing back Discs

## CAUTION

Keep your fingers clear of the disc drawer as it is closing to avoid personal injury.

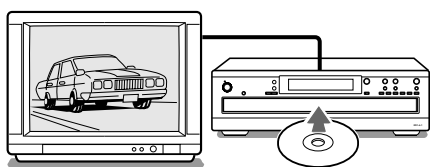

This section shows you the basics on how to playback a disc. Most steps in this manual need to be performed using the supplied remote controller. The relative buttons are usually indicated at the beginning of a section.

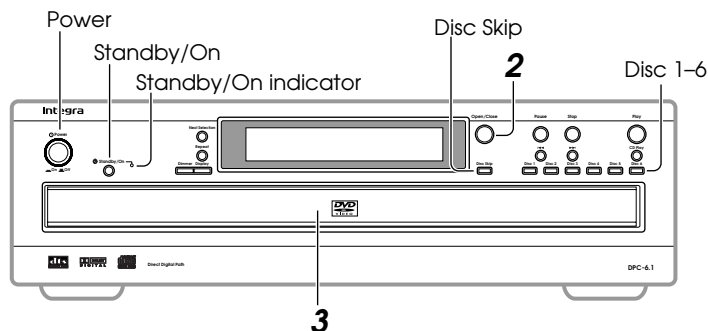


## Basic Playback

### ■ Preparations

- To view a video disc, switch on your TV set and select the video input the DPC-6.1 is connected to. See also pages 10, 11 for how to connect the DVD Changer to your TV set.
- If you are also using an amplifier for separate audio playback (see pages 11, 12, 13), switch on the amplifier and select the input the DPC-6.1 is connected to.

<p><b>1</b></p> <p>② Power</p> <p>On Off</p> <p>③ Standby/On</p> <p>or</p>	<p><b>Connecting to a Wall Outlet and Powering On.</b></p> <ol style="list-style-type: none"> <li>Plug the power cable into a suitable wall outlet.</li> <li>Press the Power button on the main unit to switch it to Standby mode. <b>The Standby/On indicator on the main unit lights.</b></li> <li>Press the Standby/On button on the main unit, or the POWER button on the supplied remote controller to switch on the DVD Changer. <b>The display lights up, and the Standby indicator goes dark.</b></li> </ol>	<p><b>Note:</b></p> <p>When you use the DPC-6.1 for the first time: When the DPC-6.1 is shipped from the factory, the Power switch is set to On (On Off). Therefore, when you plug in the power cable to the AC outlet, the Standby/On indicator lights up and the unit enters Standby mode as described in Step 1- ②.</p>
<p><b>2</b></p> <p>Open/Close</p> <p>or</p>	<p><b>Press the OPEN/CLOSE button.</b> <b>The disc drawer opens, and the disc indicator lights up.</b> (See "DISC INDICATORS ATTENTION" on page 42.)</p>	<p><b>Note:</b></p> <p>The disc drawer can also be opened when the DVD Changer is switched off.</p>
<p><b>3</b></p>	<p><b>Place a disc in the front disc tray (DISC 1).</b></p> <p>Be sure to insert the disc with the playback side down.</p> <p><b>■ Placing discs in the remaining disc trays.</b> Repeatedly press the DISC SKIP button on the main unit to rotate the disc drawer counter-clockwise, and place a disc in each desired tray (1-6).</p>	<p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>The DPC-6.1 supports two disc sizes. To avoid damaging your discs or causing malfunction, be sure to insert the discs in the correct guide.</li> <li>Only use DVD videos, VIDEO CDs or audio CDs. Other data carriers may damage your DVD Changer and/or amplifier/TV set.</li> </ul>
<p><b>4</b></p> <p>Open/Close</p>	<p><b>Press the OPEN/CLOSE button again.</b> The disc drawer closes. Press one of the DISC 1-6 buttons to select the desired disc on the tray for playback.</p>	<p><b>Note:</b></p> <p>Alternatively, press one of the DISC 1-6 buttons to close the disc drawer and play the selected disc automatically.</p>

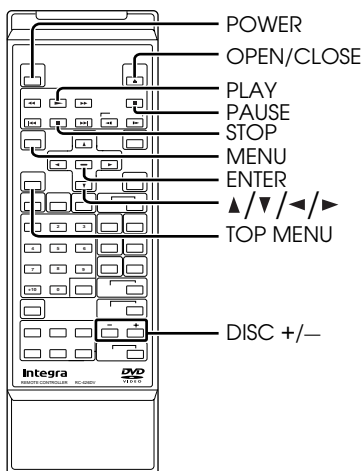

### ■ To obtain a higher picture quality

Occasionally, some picture distortion not usually visible during a normal telecast may appear on the TV screen during playback of a DVD video. This is due to the fact that DVD videos provide a higher resolution and therefore also more data to process. While the amount of noise depends on the TV you connect the DVD Changer to, reducing the sharpness setting on your TV when viewing DVD videos may alleviate the problem.


### ■ About the DVD VCD CD symbols

The DVD VCD CD icons on the heading bars below show the discs that support the function described in the section in question.

**DVD** : This function is available for playback of DVD videos.

**VCD** : This function is available for playback of VIDEO CDs.

 **CD** : This function is available for playback of audio CDs.



5

PLAY



or

Play



### Press the ► PLAY button.

The DVD Changer starts playback.

If you have inserted a DVD video with a title menu or a Video CD with PBC (Playback Control) functionality, a menu screen may appear. See "Direct Playback via the On-Screen Menu" on page 16.

To start playback of a PBC-equipped VIDEO CD from the menu screen, set "PBC" to "ON" via the on-screen menu function. See page 38.

### Notes:

- For PBC (Playback Control) of VIDEO CDs, see "About VIDEO CDs" on page 9.
- Depending on the DVD video you are using, you may need to press the TOP MENU or MENU button to display the menu screen.

### ■ Inserting other discs


1. Press the ▲ OPEN/CLOSE button to open the disc drawer
2. Press the DISC SKIP button on the main unit repeatedly until the disc you wish to replace can be accessed.
3. Remove the disc you wish to replace, and insert another disc.
4. Press the ▲ OPEN/CLOSE button again to close the disc drawer.

### Note:

You can also press the ► PLAY button to automatically close the drawer and start playback of the disc that is currently up front. To start playback of another disc than the one in the front tray, you first need to close the disc drawer.

### ■ Selecting the desired disc for playback

Press one of the DISC 1-6 buttons on the main unit or on the remote controller. The DPC-6.1 starts playing the first title of the selected disc. There is no need to press the ► PLAY button.

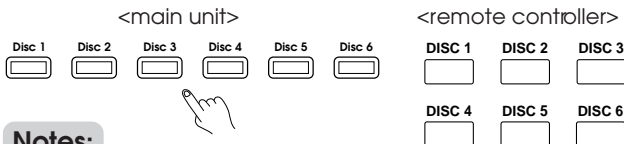

### Notes:

- If you select the desired disc using one of the DISC 1-6 buttons while the DVD Changer is playing back a title of another disc, playback starts with the first title of the newly selected disc.
- You can also press the DISC SKIP button on the unit or DISC +/- button to jump to the disc in the next tray (or from tray #6 to tray #1 if the disc in tray #6 is currently being played back). In that case playback will start with the first title of the disc in the newly selected tray.
- If you select the desired disc by pressing the DISC SKIP button while the DVD Changer is stopped, press the ► PLAY button to start playback of the first title of the selected disc.

### ■ The FIRST SETUP screen

The FIRST SETUP screen is only displayed the very first time you switch on your DPC-6.1. This page allows you to set


the two single most important parameters. Note that you can change these settings any time by selecting the appropriate on-screen menu function. See also page 34, 35.

1. Check the video connection of the DVD Changer to your TV set (see page 10 and following) and switch on your TV.


2. Switch on the DVD Changer .

The following menu screen page is displayed:

3. Press the remote controller's ▲ or ▼ button to select "On-Screen Language" and press the ENTER button.

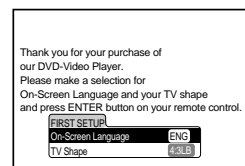

You can select one of the following languages: ENG (English), FRE (French), or SPA (Spanish). That language will be used on all on-screen menu pages and for subtitles. See page 35.

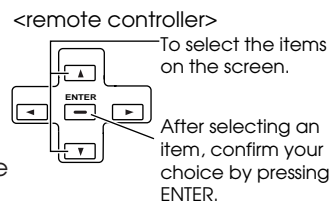

4. Select the desired language using the ▲ or ▼ button and confirm by pressing ENTER.

### Note:

If you agree with the currently selected language, just press ENTER without changing the setting.

5. Press the ▼ button to select the "TV Shape" function and confirm by pressing ENTER.

This function allows you to specify the picture size of your TV. See 35 for details.



6. Use the ▲ and ▼ buttons to specify the screen size and confirm by pressing ENTER.

7. Press the SETUP button to store your settings.

The settings are stored and you are returned to the FIRST SETUP screen page. As stated above, you can also change these settings at a later stage. See page 32.



# Playing back Discs (continued)

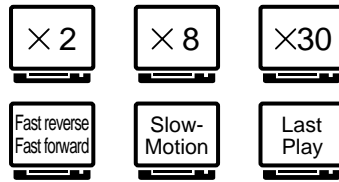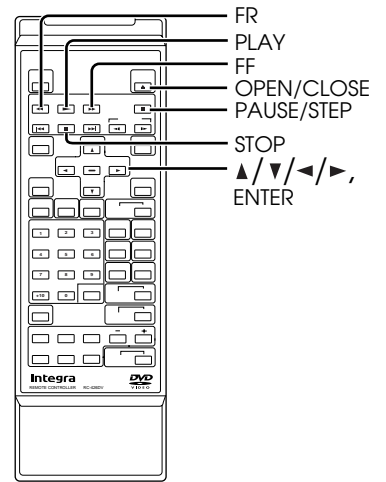


You can play back discs at various speeds, and resume playback in various ways. Use the remote controller for the following functions.

## Direct Playback, Stop and Pause

### Direct Playback via the On-Screen Menu

1. Switch on your TV set.
2. Select the desired title using the ▲ / ▼ / ◀ / ▶ or the number buttons.
3. Press the ENTER button.

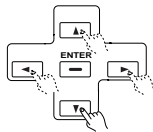

The DVD Changer starts playing back the selected title.

- If you do not need the menu functionality of PBC-encoded Video CDs, set the "PBC" function to "Of". See page 38.

### Pausing Playback: Still mode

1. To pause playback, press the ■ PAUSE/STEP button.
2. Press the ► PLAY button to resume playback.

#### Note:

The DPC-6.1 also provides a function for optimum display of still pictures (only available for DVD videos). See "Pause/Still" on page 37.

### Stopping Playback

Press the ■ STOP button.

If you do not wish to resume playback from this position, see "Resuming Playback from the Beginning of the Current Title" on page 17.

### Removing a Disc

1. Stop playback.
2. Press the ▲ OPEN/CLOSE button.
3. Wait until the disc drawer has opened completely, then remove the disc.

#### Notes:

- Do not move the DPC-6.1 during playback or subject it to strong vibrations to avoid damaging the discs.
- Use the ▲ OPEN/CLOSE button on the remote controller or DVD player to open and close the disc drawer. Do not obstruct the disc drawer while it is moving. Doing so may cause the DVD Changer to malfunction.
- Do not push up the disc drawer or put objects other than discs on it. Doing so may cause the DVD Changer to malfunction.
- In many instances, a menu screen will appear after playback of a movie is completed. Prolonged display of such a menu may damage your television set, permanently etching that image onto the screen. To avoid this, press the ■ STOP button on your remote controller once playback of the movie is finished.
- If you pause a picture and leave it still for a long time, the screen saver of the DPC-6.1 is automatically activated (provided the "Screen Saver" function is set to "On", see page 37). To deactivate the screen saver and resume playback, press the ► PLAY button.

## Fast Reverse and Fast Forward Playback



Press the FR (fast reverse) or FF (fast forward) button during playback.


#### DVD videos

The playback speed changes to twice the normal speed in the selected direction.

Press the button again to further increase the fast forward or reverse speed.

FR: press this button to quickly return to an earlier position.



FF: press this button to advance to a position behind the current position.

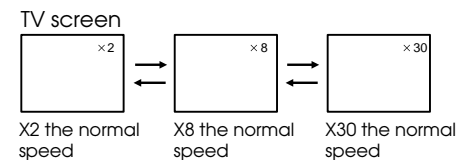

The direction of the arrow varies depending on the button you press.

#### VIDEO CDs/Audio CDs

 For Video and Audio CDs, there are two fast forward and reverse speeds.

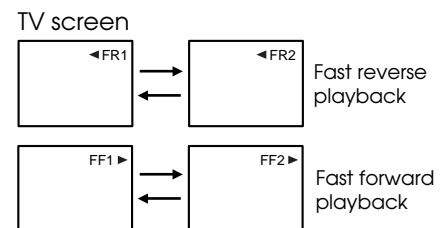



## Resuming Normal Playback after Fast Forwarding/Reversing



After locating the desired position, press the ► PLAY button to resume normal playback.

- The DVD Changer does not play back sound or subtitles during fast reverse or forward scans of DVD videos. The sound of audio CDs, however, is played back at the selected scrolling speed.
- The x2, x8 and x30 speeds are only approximate values. They may vary slightly from disc to disc.

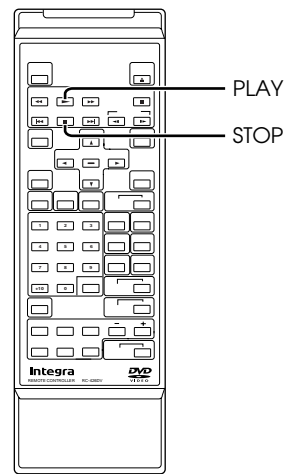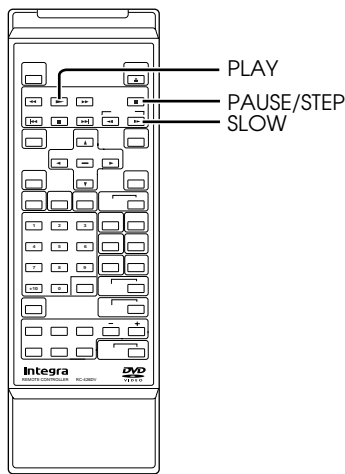

## Slow-Motion Playback

DVD VCD

DVD videos can be played back in slow motion. This is done by reducing the playback speed.

**SLOW**

Press the **◀◀** or **▶▶** **SLOW** button during playback.

By pressing either button repeatedly, you can cycle through the three available playback speeds.

TV screen

1/2 ▶

1/2 the normal speed

1/4 ▶

1/4 the normal speed

1/8 ▶

1/8 the normal speed

or

**SLOW**

Only for the DVD video

TV screen

◀ 1/8

1/8 the normal speed

◀ 1/4

1/4 the normal speed

◀ 1/2

1/2 the normal speed

## Resuming Normal Playback



Press the **▶** **PLAY** button to resume normal playback.

## Using Frame Step

DVD VCD

PAUSE/STEP



While playback is paused, you can step forward one frame at a time by pressing the **||** **PAUSE/STEP** button.

## Resuming Playback From the Desired Location

DVD VCD CD

After stopping playback, you can either resume from the location where it was stopped, or from the beginning of the current title.

**1**

**STOP**

Press the **■** **STOP** button at the location where you want to halt playback.

The DVD Changer memorizes this location.

**2**

**PLAY**

 
Press the **▶** **PLAY** button.

The DVD Changer resumes playback from the location where playback was stopped.

## Resuming Playback from the Beginning of the Current Title

If you do not wish to resume playback from the position where it was stopped, proceed as follows. In this case, playback will be started from the beginning of the last title you played back, or from the beginning of the disc.

### 1. Stop playback by pressing the **■** STOP button twice.



The second press of the **■** STOP button will clear the DVD Changer's location memory.

### 2. Press the **▶** PLAY button.



The location where playback is started depends on the type of disc you are using:

**DVD video:** Playback starts from the beginning of the current title.



**Video CDs/audio CDs:** Playback starts from the beginning of the disc.

- To resume playback a DVD video from the beginning of the disc, press the **■** STOP button, open and close the disc tray by pressing the **▲** OPEN/CLOSE button, then press the **▶** PLAY button.

## Notes:

- The DVD Changer's location memory is also cleared when you:
  - unplug the DVD Changer from the wall outlet after stopping playback.
  - open the disc drawer.
  - adjust/change the Parental Lock function (see page 37) or select another disc menu language (see page 34).
- Depending on the disc, playback may not be resumed at the exact location where it was stopped.
- Other settings you change via the on-screen menu while a location is memorized may be available only after the memory is cleared.

# Locating Titles, Chapters, or Tracks

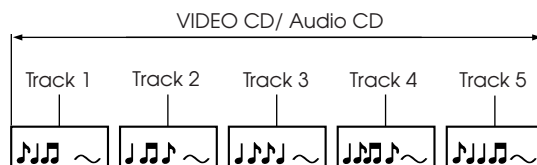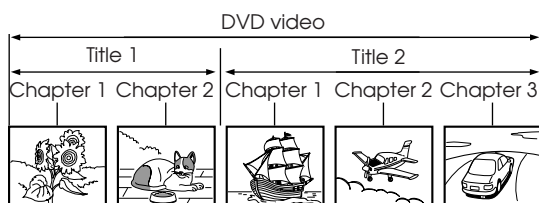

Normally, DVD videos are divided into “titles”, while the titles are themselves sub-divided into “chapters”. VIDEO CDs and audio CDs are divided into “tracks”. You can quickly locate any specific title, chapter, or track.

## Locating a Title Using the Title Menu DVD

If the DVD video you are playing back contains a title menu, you can locate any specific title you wish to play back.

- 1 TOP MENU**

Press the **TOP MENU** button.

A Title menu like the following appears:
- 2**

Use the **▲ / ▼ / ◀ / ▶** buttons to select the title you want to watch.

If the titles in the Title menu are assigned a number, you can directly select the desired title using the numeric buttons on the remote controller.
- 3 ENTER**

Press the **ENTER** button.

The DVD Changer starts playback from Chapter 1 of the selected title.

### Notes:

- The above instructions correspond to the basic procedure. Please note that the exact steps may depend on the contents of the selected DVD video. If different instructions appear on the TV screen, follow those instructions.
- If you display the Title menu during playback and press the TOP MENU button again without selecting a title, the DVD Changer resumes playback from the point where you first pressed the TOP MENU button.

## Title Selection with the Numeric Buttons DVD

If the selected DVD video contains Title numbers, you can select the desired title by entering its number.

- 1 SEARCH**

Press the **SEARCH** button.

Check whether the Title number is highlighted. If it is not, press **▲** to select it.

Example:

Title: **1**

Chapter: 1
- 2**

Press the numeric button of the **T** title you wish to select.

To select a two-digit title, press the digits in order of magnitude (e.g., for 32, press “3” then “2”).

To select Title 2, press (2).

2

Title: **2**

Chapter: 1

To select Title 12, press (1) or (+10) once, then (2).

1 → 2

or

+10 → 2

Title: **12**


Chapter: 1
- 3 PLAY**

Press the **▶ PLAY** button.

The DVD Changer starts playback from Chapter 1 of the selected title. You can also select another Chapter before starting playback.

### Notes:

- Press the CLEAR button if you do not wish to start playback from the Title number you have just entered (before pressing the **▶ PLAY** button). Pressing CLEAR several times will reset both the Title and Chapter numbers. (SEARCH also allows you to directly select the desired Chapter, see next page.)
- See pages 32, 34 for how to select the languages for the on-screen menu displays.

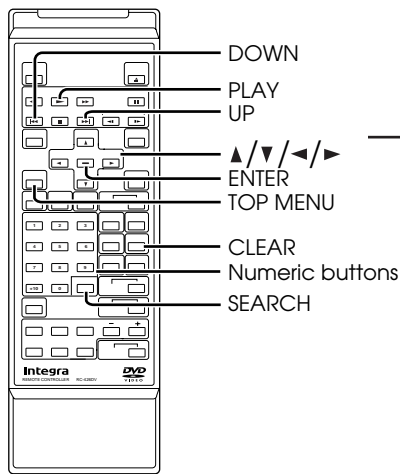

DVD VCD CD




## Selecting Chapters or Tracks

### Direct Selection using the Numeric Buttons

The DPC-6.1 also allows you to directly select a Chapter of a Title (DVD videos) or a Track (Video or audio CD).


#### Note:

Steps 1 and 2 are only necessary for DVD videos. Start with step 3 if you want to select a Track of a Video or audio CD.

<b>1</b>	 <b>Press the SEARCH button.</b> In the case of a DVD video, the following is displayed: <div style="border: 1px solid black; padding: 5px; width: fit-content;">           Title: 1            Chapter: 1         </div>
<b>2</b>	 <b>Press the ▼ button to select the numeric field next to the Chapter entry:</b> <div style="border: 1px solid black; padding: 5px; width: fit-content;">           Title: 1            Chapter: <span style="border: 1px solid black; padding: 2px;">1</span> </div>
<b>3</b>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 100px;"> <div style="display: flex; justify-content: space-between; margin-bottom: 5px;"> <span>1</span><span>2</span><span>3</span></div> <div style="display: flex; justify-content: space-between; margin-bottom: 5px;"> <span>4</span><span>5</span><span>6</span></div> <div style="display: flex; justify-content: space-between; margin-bottom: 5px;"> <span>7</span><span>8</span><span>9</span></div> <div style="display: flex; justify-content: space-between;"> <span>+10</span><span>0</span></div> </div> <div style="width: 100%;"> <p><b>Press the numeric button of the Chapter (or Track) you want to play back.</b></p> <p>To select two-digit numbers, press the +10 button followed by a numeric button.</p> <p>To select Title 25, press (2) once, then (5) or press (+10) twice (for "20") then (5).</p> </div> </div> <div style="margin-left: 20px;"> <p>(Video/ (DVD video) Audio CD)</p> <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">2</div> → <div style="border: 1px solid black; padding: 2px;">5</div> </div> <p>or</p> <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">+10</div> → <div style="border: 1px solid black; padding: 2px;">+10</div> → <div style="border: 1px solid black; padding: 2px;">5</div> </div> </div> <div style="margin-left: 20px; border: 1px solid black; padding: 5px; width: fit-content;">           Title: 1            Chapter: <span style="border: 1px solid black; padding: 2px;">25</span> Track: <span style="border: 1px solid black; padding: 2px;">25</span> </div>
<b>4</b>	 <b>Press the ► PLAY button.</b>

### Selecting Titles and Chapters Simultaneously

As stated above, it is also possible to specify the desired Chapter number after selecting a Title (see the previous page) before starting playback. To select Chapter 25 of Title 2, for example, here is what you need to do.

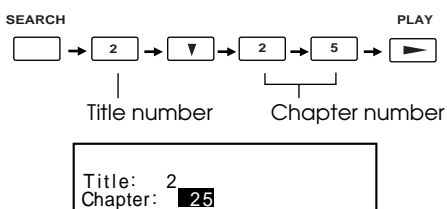



#### Note:

Press the CLEAR button if you do not wish to start playback from the Chapter number you have just entered (before pressing the ► PLAY button). Pressing CLEAR several times will reset both the Title and Chapter numbers.

### Selecting the Next/Previous Chapter or Track

Another way to select Chapters (DVD videos) or Tracks (Video/audio CDs) is by using the UP and DOWN buttons:

 <b>DOWN</b>	<p><b>Use the DOWN ◀◀ or UP ▶▶ button to select the desired Chapter or Track.</b></p> <p>Playback starts automatically, so you do not need to press the ► PLAY button.</p> <p>◀◀: The DOWN ◀◀ button has two functions. If you press it once, the DVD Changer returns to the beginning of the currently selected Chapter or Track. Press it twice to return to the beginning of the preceding Chapter or Track.</p> <p>▶▶: Press UP ▶▶ to jump to the beginning of the next Chapter or Track.</p>
 <b>UP</b>	


#### Notes:

- Some Titles don't contain Chapter numbers. In that case, the DOWN ◀◀ and UP ▶▶ buttons do not work.
- If "Title Stop" is set to "Off" (see page 38), the DOWN ◀◀ and UP ▶▶ buttons also allow you to jump from the last (or first) Chapter of a given Title to the first Chapter of the next (or previous) Title. That is, if you press DOWN ◀◀ after returning to Chapter 1 of the current Title, the DVD Changer jumps to the first Chapter of the previous Title. Pressing UP ▶▶ after selecting the last Chapter of the current Title takes you to Chapter 1 of the following Title. If "Title Stop" is set to "On", the DOWN ◀◀ and UP ▶▶ buttons only allow you to cycle through the Chapters of the currently selected Title.

# Selecting a Precise Scene or Audio Passage



It is also possible to directly select a given location and to start playback from there. This may come in handy when you want to view a given scene (DVD videos/Video CDs) or listen to a specific passage (audio CD) within the currently selected Title or Track.

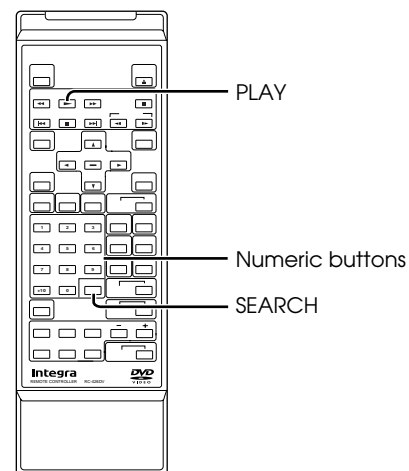

## Entering the Time Location

DVD VCD CD


Here is how to enter the time location of the scene or passage you wish to play back:

<b>1</b> SEARCH 	<b>Press the SEARCH button several times until the following message is displayed:</b>  Time <b>---</b> : <b>---</b> : <b>---</b>
<b>2</b>  1 2 3 4 5 6 7 8 9 0	<b>Enter the desired time value with the numeric buttons.</b> Here is an example: 1 → 2 → 5 → 3 → 0  Time <b>1:25:30</b>
<b>3</b> PLAY 	<b>Press the ► PLAY button.</b> The DVD Changer starts playback from that location.


### Notes:

- Some discs may not respond to this procedure.
- In some cases, there may be a slight shift between the time value you enter and the location where playback starts.
- This method of selecting the desired location is only available within the current Title (DVD videos) or track (Video/audio CDs).

# Repeat Functions

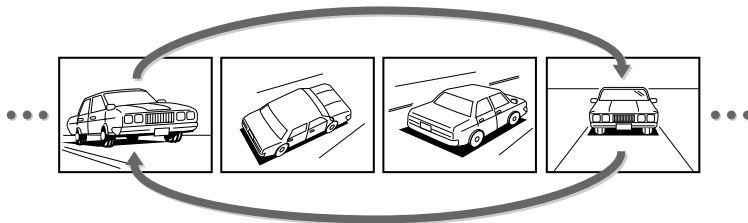


Your DVD Changer allows you to repeat a given Title, Chapter/track or disc indefinitely. It is also possible to repeat a given scene or audio passage (A-B Repeat).

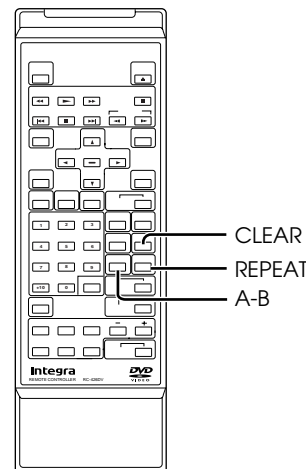

## Repeating a Title or Chapter/Track


DVD VCD CD

Here is what you need to do in order to program a play-back loop of the selected Title, Chapter/track, or disc:

- 1** Select the disc that contains the material to be repeated (or that you want to playback repeatedly in its entirety).  
See "Selecting the desired disc for playback" on page 15.
- 2** Select the Title or Chapter/track you want to repeat.  
See "Locating Titles, Chapters, or Tracks" on page 18 and following.
- 3**  Press the **REPEAT** button to select the desired Repeat function. Pressing this button repeatedly cycles you through the available options. These options depend on the currently selected disc:

Chapter Repeat	Repeats the same chapter.
Title Repeat	Repeats the same title.
Disc Repeat	Repeats the same disc.
All Repeat	Repeats all discs.
Repeat Off	Resumes normal playback.

**Video CDs/audio CDs**

 
Track Repeat	Repeats the same track.
Disc Repeat	Repeats the same disc.
All Repeat	Repeats all discs.
Repeat Off	Resumes normal playback.
- 4**  To cancel the Repeat function at any time, press the **CLEAR** button.


### Note:

Some discs do not support these Repeat functions.


## Repeating a Given Scene or Passage

DVD VCD CD

 - 1** Start playback of the desired Chapter or Track (see page 19 and following for how to select it).
- 2**  Press the **A-B** button at the beginning of the scene or passage you wish to repeat (this position is called "A").

A-
- 3**  Press **A-B** again at the end of the excerpt to be repeated (to store point "B").

A-B


The DVD Changer automatically returns to point "A" and starts repeating the selected excerpt.
- 4**  To cancel the Repeat function at any time, press the **CLEAR** button.

### Notes:


- Some discs do not support the A-B Repeat function.
- The "A" and "B" points must be located within the currently selected Title or Track.
- For DVD videos: The A-B Repeat function is not available for scenes that provide several camera angles.
- In some cases, the "A" and "B" points may be shifted slightly with respect to the positions you selected.



# Setting the Desired Playback Order

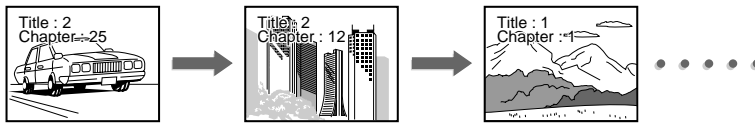

Your DPC-6.1 comes with a special 28-step memory that allows you to program the order in which the Titles and Chapters/tracks are to be played back. Such "sequences" can include material from several discs.

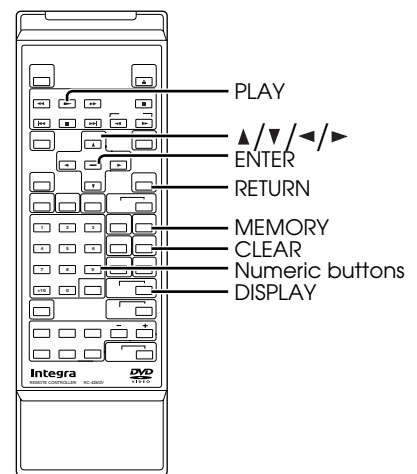

## Programming Memory Sequences

The DPC-6.1's Memory function allows you to program the order in which the material on one or several discs should be played back.

### Note:

If you only want to select the next track for playback, using the Next Selection function is a lot faster. See page 24.

### ■ Programming the D, T and C entries

Here are a few hints that explain the programming system and help you save time:

### Note:




 
For Video and audio CDs, you can only program the disc ("D") and Track numbers. Track numbers are assigned to the "T" entry. The "C" entry only applies to DVD videos.

### Only specify what you does need to change:

**Disc number:** if a subsequent entry refers to the previously selected disc number, you do not need to enter it again for the new step. (Do not change the "—" setting for "D".)

**Title number (DVD videos only):** if a subsequent step refers to another Chapter of the previously selected Title, only entering the Chapter number is enough. (Do not change the "—" setting for the "D" and "T" entries.)


**Chapter number (DVD videos only):** if you want the DPC-6.1 to play back all Chapters of the selected Title, leave the "C" entry blank.

<b>1</b>	<b>Insert the disc(s) you need for programming the desired sequence.</b>																		
<b>2</b>	<b>Switch on your TV set.</b>																		
<b>3</b>	<p><b>MEMORY</b></p>  <p><b>Stop playback if it is still running, and press the MEMORY button.</b></p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="3">MEMORY</th> </tr> <tr> <th>D</th> <th>T</th> <th>C</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>8</td> <td>15</td> </tr> <tr> <td>2</td> <td>9</td> <td>16</td> </tr> <tr> <td>3</td> <td>10</td> <td>17</td> </tr> <tr> <td>4</td> <td>11</td> <td>18</td> </tr> </tbody> </table> <p>The letters on this menu page have the following meaning: D: Disc number, T: Title (or Track) number, C: Chapter number.</p>	MEMORY			D	T	C	1	8	15	2	9	16	3	10	17	4	11	18
MEMORY																			
D	T	C																	
1	8	15																	
2	9	16																	
3	10	17																	
4	11	18																	
<b>4</b>	<p><b>Use the numeric buttons on the remote controller to enter the numbers you wish to include in your Memory sequence.</b></p>  <p>Use the ◀ / ▶ buttons to move the cursor to the "D", "T", or "C" column, depending on whether you want to enter a disc, Title (or Track), or Chapter number.</p>																		
<b>5</b>	<p><b>ENTER</b></p>  <p><b>Confirm your selection by pressing the ENTER.</b></p> <p>The DPC-6.1 now jumps to the next Memory step.</p>																		
<b>6</b>	<b>Program the remaining steps.</b>																		
<b>7</b>	<p><b>PLAY</b></p>  <p><b>Press the ▶ PLAY button to start playback of your memory sequence.</b></p>																		




Here are a few programming examples:


#### Chapters 25 and 12 of Title # 2 on disc #3 (two steps):

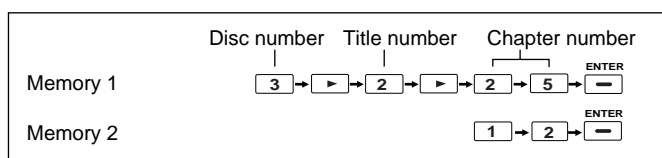

#### All chapters of Title #1 on disc #1:

 

#### Chapter 2 of Title #4 on disc #1:

 

MEMORY			
D	T	C	
1	3	02	25
2	3	02	12
3	1	01	10
4	1	04	02
5			
6			
7			

#### “Copy” the settings of the previous memory:

Doing so allows you to use the settings of the previous memory as a starting point and only change one entry. Example: if memory 1 refers to disc 3/Title 2/Chapter 25, while memory 2 needs to refer to disc 3/Title 2/Chapter 12, you can “copy” memory 1 to memory 2 and modify the “C” (chapter) entry:

- Program the memory to be copied (example: memory 1), and press the ENTER button. The DVD Changer advances to memory 2.
- Use the numeric buttons to enter the chapter number 12 on the black cursor on the “C” entry, then press the ENTER button, “D” and “T” on the memory 1 are copied to memory 2.

## Other Memory Functions

### Leaving the MEMORY display page

To leave the MEMORY display page, press the MEMORY button.

### Correcting an entry of a previously programmed step:

- Use the ▲ / ▼ buttons to move the cursor to the corresponding memory number.
- Select the entry (D, T or C) you wish to change with the ◀ / ▶ buttons.
- Enter the correct value using the numeric buttons.

### Erasing a step

- Stop playback.
- If the Memory sequence is not currently displayed, press the MEMORY button to select it.
- Select the step you wish to erase with the ▲ / ▼ buttons.
- Press the CLEAR button to erase the selected step.

### Erasing the entire Memory sequence

To erase all steps, either switch the DVD Changer off and back on again, or open and close the disc tray.

### Programming the next step during playback

If you press the MEMORY button during playback, a menu page is displayed where you can program a new step.


### Programming several new steps during playback

- Press the MEMORY button followed by the DISPLAY button.  
The Memory menu appears on the TV screen.
- Continue with step 3 on page 22.

### Notes:

- Some discs do not allow Memory playback.
- The Repeat function (see page 21) is also available during playback of your Memory sequence. Press the REPEAT button to activate it for the current step of your Memory sequence.
- You can only program Title (or Track) and Chapter numbers that exist on the selected disc.
- For Video and audio CDs, the “T” entry allows you to select the track, while the “C” entry is not used.
- The Memory function is also available during playback.

# Additional Playback Functions

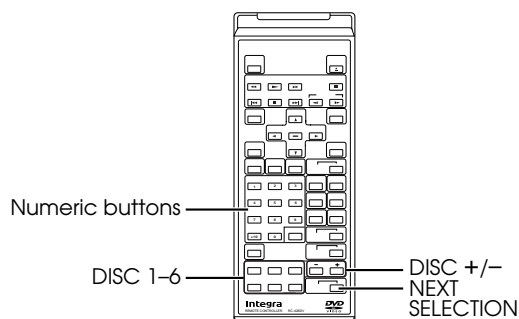


## Next Selection: Preparing the next Audio Track

CD

During playback of an audio CD, you can already prepare the next track that will be played as soon as the current one is finished. The difference with direct selection of a track or disc is that playback of the prepared track starts only after the current track is finished (i.e. not right away).

 
**1** During playback of an audio CD, press the **NEXT SELECTION** button on the **DPC-6.1** or the remote controller to activate this function.



The **NEXT** indicator flashes and the disc number and track number disappear on the display.


**2** Use the **DISC 1 – 6** buttons (or **DISC +** and **DISC –**) to select the disc that contains the next track you want to listen to.

 The number of the selected disc and the “**NEXT**” indicator flash and the “**AL**” appears on the display.



**AL**: means that all tracks will be played back. If you wish to play all tracks of the selected disc, press the **NEXT SELECTION** button again to confirm the operation. Skip to Step 3 to select the track number. If you do not press the **NEXT SELECTION** button, the operation will be confirmed when the number and the “**NEXT**” indicator stop flashing.

 **3** Select the track using the numeric buttons. The number of the selected track lights up on the display. In that case, the display looks as follows:



### Notes:

 
- This function is only available for audio CDs (when the CD indicator lights).
- You need to press one of these buttons within 8 seconds after pressing **NEXT SELECTION**. Otherwise, the Next Selection function will be cancelled. In that case, start again with step 1.

### Tip:

You can also use the **DISC SKIP** button on the **DPC-6.1** to select the next disc.

### Checking the next selection

**1** Press the **NEXT SELECTION** button to confirm your selection. The disc number flashes and the track number lights up continuously. After a few moments, the disc and track numbers of the currently playing track reappear.



You can check the next selection by pressing the **NEXT SELECTION** button.

As soon as the current track is finished, the DVD Changer will playback the prepared track (or disc if you selected “**AL**”).


### Notes:

- The **⏪ / ⏩** buttons are disabled while the Next Selection function is activated. Pressing the **DISC SKIP** buttons or **DISC +/-** buttons will cancel the Next Select function.
- You can only prepare one track with Next Selection. See “Programming Memory Sequences” on page 22 for how to prepare a series of tracks. Preparing yet another track before the previously entered Next Selection command has been executed overrides your first setting, so that only the second Next Selection is carried out.
- If you stop playback by pressing the **■ STOP** button, the Next Selection function is cancelled.

### cancelling the Next Selection function

If you decide not to take advantage of the Next Selection function after all, proceed as follows:

- Press the **NEXT SELECTION** button. The disc numbers flash on the display.
- Press the **CLEAR** button.
- Press the **NEXT SELECTION** button again. The **NEXT** indicator goes dark and the function is cancelled.

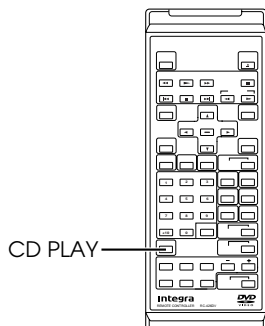


## Using the DVD Changer as CD player CD

Since your DPC-6.1 allows you to insert up to five discs in any combination (DVD videos, Video CDs, audio CDs), there may be times when you only want to listen to music and avoid having to press the DISC SKIP or DISC +/- buttons several times to skip to the next audio CD. In that case, proceed as follows:

**7**

CD PLAY



**Press the CD PLAY button while the DPC-6.1 is stopped or playing back a CD.**

The RPT message appears on the display and the REPEAT indicator lights to signal that all audio CDs will be repeated in sequence.

REPEAT CD CD ▶


REPEAT ●●●●●●

↓ The indication changes in 2-3 seconds.

DISC TRACK REPEAT CD CD ▶

3 1 RPT ●●●●●●

CD PLAY





**Press the CD PLAY button again to cancel CD Mode.**

The RPT message disappears and the REPEAT indicator goes dark again to signal that the DVD Changer has returned to normal playback mode.

### Notes:

- The CD PLAY button does not work while the DPC-6.1 is playing back a disc other than an audio CD. You first need to press the STOP button. Next, press the CD PLAY button to enter CD PLAY Mode. The DVD Changer starts playing back the audio CD in the disc drawer with the lowest number.
- Another way of selecting only audio tracks is to take advantage of the DPC-6.1's Memory function. See "Programming Memory Sequences" on page 22 for details.

# Additional Playback Functions (continued)

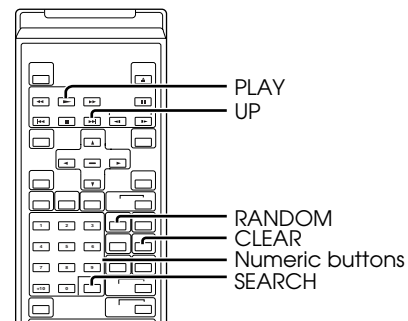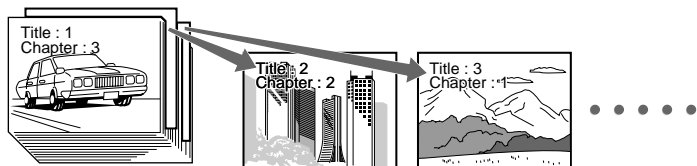




The DPC-6.1's Random playback functions allow you to select a mode where the DPC-6.1 decides which Title or Chapter/track to play next. A similar function is available on most CD players. There are two Random functions: one for DVDs only, and another that is available for both DVDs and Video/audio CDs:

## Random Playback
 
### Title Random

For DVD videos, you can decide to have the DPC-6.1 select the Titles in a random (unpredictable) order:





<b>1</b>	<p><b>Stop playback and select the DVD video whose titles you wish to watch in random order.</b></p> <p>See "Selecting the desired disc for playback" on page 15 for details.</p>
<b>2</b>	<p><b>RANDOM</b></p>  <p><b>Press the RANDOM button to select "Title Random".</b></p> <p>Pressing this button repeatedly will cycle through the following options:</p> <div style="border: 1px solid black; padding: 5px; margin-left: 20px;"> <p>DVD</p> <p>Chapter Random</p> <p>Title Random</p> <p>Random Off</p> </div> <p><b>Note:</b> If you press the RANDOM button during playback, the DPC-6.1 automatically starts random playback after finishing the current title.</p>
<b>3</b>	<p><b>PLAY</b></p>  <p><b>Press the ► PLAY button within 5 seconds after pressing the RANDOM button.</b></p> <p>The DVD Changer starts random playback.</p>
<b>4</b>	<p><b>CLEAR</b></p>  <p><b>Press CLEAR to resume normal playback.</b></p>

#### Notes:

- Some discs may not permit random playback.
- You cannot use this Random function in conjunction with Memory playback (see page 22).
- Select "Random Off" if you do not need the Random function after all.

### Playing Chapters or Tracks in Random Order


This Random function allows you to activate random playback of the Chapters within the currently selected title (DVD videos) or of the tracks on a Video or audio CD.

<b>1</b>	<p><b>Stop playback and select the disc whose titles you wish to watch/listen to in random order.</b></p> <p>See "Selecting the desired disc for playback" on page 15 for details.</p>
<b>2</b>	<p><b>SEARCH</b></p>  <p><b>Press the SEARCH button and use the numeric buttons on the remote controller to select the Title.</b></p> <p>(DVD video)</p> <div style="border: 1px solid black; padding: 5px; margin-left: 20px;"> <p>SEARCH → 2</p> <p>Title: 2 Chapter: 1</p> </div> <p><b>Note:</b> This is only possible for DVD videos. Skip to step 2 for Video/audio CDs.</p>
<b>3</b>	<p><b>RANDOM</b></p>  <p><b>Press the RANDOM button to select "Chapter Random" (DVD) or "Track Random" (Video/audio CD).</b></p> <p>If you press the RANDOM button during playback, the DPC-6.1 automatically starts random playback after finishing the current Chapter or track.</p> <p>(DVD video)</p> <div style="border: 1px solid black; padding: 5px; margin-left: 20px;"> <p>Chapter Random</p> <p>Title: 2 Chapter: 1</p> </div>
<b>4</b>	<p><b>PLAY</b></p>  <p><b>Press the ► PLAY button within 5 seconds after pressing the RANDOM button.</b></p> <p>The DVD Changer starts random playback.</p>
<b>5</b>	<p><b>CLEAR</b></p>  <p><b>Press CLEAR to resume normal playback.</b></p>

#### Notes:

- Some discs may not permit random playback.
- You cannot use this Random function in conjunction with Memory playback (see page 22).
- You can press the UP ► button during Random playback to jump to the next Chapter or track and continue Random playback from there.
- Select "Random Off" if you do not need the Random function after all.

# DVD Video Functions

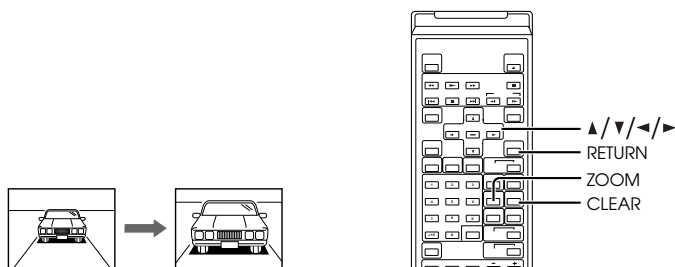


## Zooming in

The Zoom function allows you to magnify a portion of a picture. Feel free to select the area to be magnified.

<b>1</b>	<b>ZOOM</b> 	<p>Press the <b>ZOOM</b> button during normal or slow (see page 17) playback or while playback is paused ("still", see page 16).</p> <p>There are three Zoom levels. Press this button repeatedly to select the desired level.</p> <div style="text-align: center;"> <p>Zoom 1</p> <p>↓</p> <p>Zoom 2</p> <p>↓</p> <p>Zoom 3</p> </div>
<b>2</b>	<b>RETURN</b> 	<p>Press the <b>RETURN</b> button to progressively zoom out again (return to the preceding Zoom level).</p>
<b>3</b>	<p style="text-align: center;"><b>CLEAR</b></p>	<p>Use the <b>▲ / ▼ / ◀ / ▶</b> buttons to shift the zoom point.</p> <p>When the zoom point reaches an edge of the picture, the color of the "Zoom" message changes.</p> <p>Pressing the <b>CLEAR</b> button restores the zoom point to the center of the picture.</p>
<b>4</b>	<b>ZOOM</b> 	<p>To defeat the Zoom function, press the <b>ZOOM</b> button repeatedly until the "Zoom Off" message appears.</p>

### Notes:

- Some DVD videos do not support the Zoom function.
- For certain scenes, the Zoom function is not available.
- The Zoom function does not apply to subtitles or menu screens included on DVD videos.
- During zoom playback, the **▲ / ▼ / ◀ / ▶** buttons are not available for selecting option of a DVD's menu function (they are used to shift the zoom point). If you want to use the menu screens, cancel zoom playback (see above).
- The magnification level varies depending on the picture size you select (see page 32, 35).

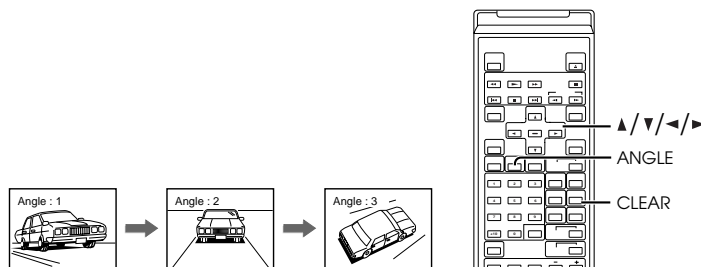

## Changing the Camera Angle


One of the new features of the DVD carrier is that some discs contain scenes shot from different angles. The following function allows you to select the desired angle.

<b>1</b>	<b>ANGLE</b> 	<p>Set the "On-Screen Displays" function to "On" if you want the angle icon (∞) as well as series of other icons to be displayed on screen. See pages 32, 37 for details.</p> <p>If you do not need these on-screen messages, set the above function to "Off".</p>
<b>2</b>		<p>Start playback and look out for the <b>multiangle icon</b> (∞).</p> <p>If this icon appears on the display (and on screen)...</p>
<b>3</b>		<p>...press the <b>ANGLE</b> button.</p> <div style="text-align: center;"> <p>Angle: 1</p> <p>Angle icon</p> <p>Current angle number</p> </div>
<b>4</b>	<b>ANGLE</b> 	<p>Select the desired Angle by repeatedly pressing <b>ANGLE</b>.</p> <p>You can also use the <b>▲</b> and <b>▼</b> buttons to advance to the next or return to the previous angle. <b>ANGLE</b> only allows you to cycle in one direction.</p> <div style="text-align: center;"> <p>Angle: 1</p> <p>Angle: 2</p> <p>Angle: 3</p> </div>
<b>5</b>		<p>Press the <b>CLEAR</b> button to switch off the angle number.</p>


### Notes:

- You can also change the camera angle in pause ("still") mode (see page 16). In that case, the camera angle changes to the new setting when you resume playback.
- If you pause a picture immediately after changing the camera angle, the resumed playback picture may no longer use the new camera angle.

# DVD Video Functions (continued)

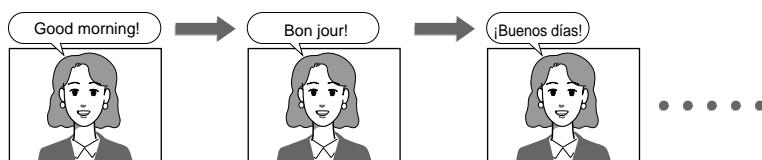

Your DPC-6.1 allows you to select the following audio-related settings. The number of options depends on the DVD video you are playing back. It is not possible to select an option for which there is no data on the DVD.

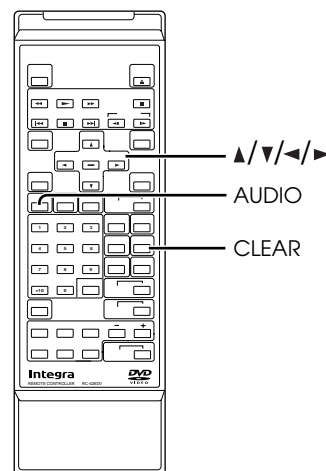

## Audio Playback Settings

**Language:** A DVD video may contain several language versions of a movie. Select the preferred language.


**Recording system:** Select the recording system that best matches the input capabilities of your amplifier or receiver. For example, there is little point in selecting " 6CH" if your amplifier does not support Dolby Digital 5.1. Depending on the selected recording system, the DPC-6.1 automatically converts the audio data to an acceptable format for your amplifier.

The DPC-6.1 accepts the Dolby Digital, DTS, and PCM recording systems. Other systems cannot be played back. See also the conversion table below for details about the available options. Dolby Digital 5.1 Channel is displayed as " 6CH."




**Press the AUDIO button during playback of a DVD video.**

The current Audio settings are displayed for about 3 seconds.

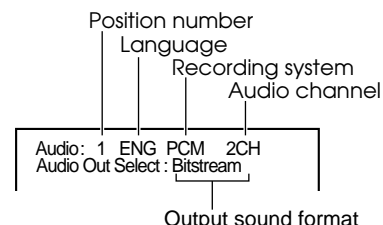

 See page 39 for a list of abbreviations of the available languages and their meaning.




**After making the desired settings, either wait more than 3 seconds, or press the CLEAR button to leave the Audio page.**

## Selecting Sound Channels of Video CDs


A Video CD may have left and right sound channels with different information (sound track on one channel, dialogues on the other; or one language on one channel, and another on the second channel, etc.). You can select the desired channel:

**During playback, press AUDIO repeatedly to select the sound channel.**

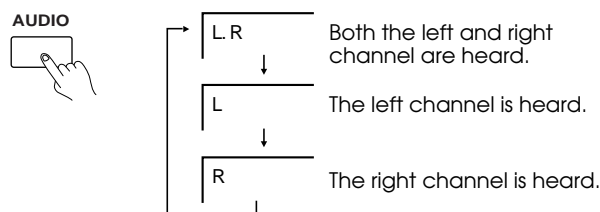

**Press the AUDIO or ▲ button while the above Audio page is still displayed (i.e. within 3 seconds).**

Pressing one of these buttons cycles through the available options.

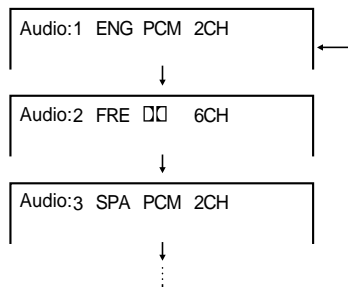

Use the ▼ button to cycle in the opposite direction.

**Notes:**

- Some discs allow you to change Audio settings only via the disc menu. In that case, press the MENU button and choose the desired language.
- The Audio settings are not saved internally. When you switch off the DVD Changer or open the disc tray, the DPC-6.1 returns to the default setting. See page 34.
- When you select an option that is not available on the selected DVD video, the DPC-6.1 ignores your setting and goes on using the previously selected language, etc.

**Recording Systems and Automatic Conversions**

Here are all the Recording systems formats the DPC-6.1 supports as well as the conversions that will be carried according to the Recording system you select (see page 28).

**Output sound conversion table (sampling frequency/quantization bit)**


Discs	Sound recording system	Audio settings on the setting screen (page 32, 36)					
		Bitstream		Analog 2ch Stereo Output		PCM	
		DIGITAL OUTPUT jack	ANALOG OUTPUT jacks	DIGITAL OUTPUT jack	ANALOG OUTPUT jacks	DIGITAL OUTPUT jack	ANALOG OUTPUT jacks
DVD videos	Dolby Digital	Bitstream	48 kHz/16 bit	Bitstream	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit
	Linear PCM	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit
		48 kHz/20 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/20 bit	48 kHz/16 bit
		48 kHz/24 bit	48 kHz/16 bit	48 kHz/16 bit	–	48 kHz/24 bit	48 kHz/16 bit
		96 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	–	96 kHz/16 bit	48 kHz/16 bit
		96 kHz/20bit	48 kHz/16 bit	48 kHz/16 bit	–	96 kHz/20 bit	48 kHz/16 bit
	96 kHz/24 bit	48 kHz/16 bit	48 kHz/16 bit	–	96 kHz/24 bit	48 kHz/16 bit	
	DTS	Bitstream	–	Bitstream	–	–	–
MPEG 2	Bitstream(7.1ch)	–	Bitstream(2ch)	48kHz/16bit	48kHz/16bit	48kHz/16bit	
VIDEO CDs	MPEG1	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
Audio CDs	Linear PCM 44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
	DTS	Bitstream	(Noise)	Bitstream	(Noise)	Bitstream	(Noise)



# DVD Video Functions (continued)



Some DVD videos also contain subtitles – sometimes even in several languages. Here is how to display them and select the language (if several languages are available).

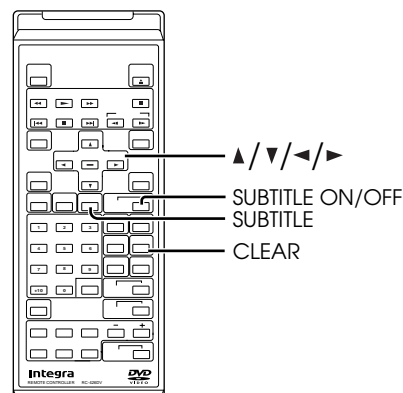

## Using the Subtitle Feature

### Selecting the Subtitle Language

<p><b>1</b></p> <p>SUBTITLE</p>	<p><b>Press the SUBTITLE button during playback.</b></p> <p>The current subtitle setting is displayed for about three seconds.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Subtitle: 1 ENG On</p> <p style="text-align: center;"> </p> <p style="text-align: center;">Language</p> <p style="text-align: center;">Position number</p> </div> <p>Refer to the list of languages and their abbreviations. See page 39.</p>
<p><b>2</b></p> <p>SUBTITLE</p>  	<p><b>Press the SUBTITLE or ▲ button during the above page is displayed.</b></p> <p>Repeatedly press the SUBTITLE or ▲ button to cycle through the options. You can only select a subtitle language for which there are data on the selected DVD video.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Subtitle: 1 ENG On</p> <p style="text-align: center;">↓</p> <p>Subtitle: 2 FRE On</p> <p style="text-align: center;">↓</p> <p>Subtitle: 3 SPA On</p> <p style="text-align: center;">⋮</p> </div> <p>You can also use ▼ button to cycle through the options in the opposite direction.</p>
<p><b>3</b></p> <p>CLEAR</p>	<p><b>Press the CLEAR button to hide the above indication.</b></p>

### Turning Subtitles On or Off


<p><b>1</b></p> <p>SUBTITLE ON/OFF</p>	<p><b>Press the SUBTITLE ON/OFF button during playback.</b></p> <p>The current subtitle setting is displayed for about three seconds.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Subtitle: 1 ENG On</p>     <p>Good morning!</p> </div> <p>Appears for about 3 seconds</p> <p>Subtitles</p> <p>The subtitles are displayed at the bottom of the screen.</p>
<p><b>2</b></p> <p>SUBTITLE ON/OFF</p>	<p><b>Press the SUBTITLE ON/OFF button again to turn the subtitles off.</b></p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Subtitle: 1 ENG Off</p> </div> <p>Appears for about 3 seconds</p> <p>The subtitles disappear.</p>

#### Notes:

- Some DVD videos are set to display subtitles automatically. In that case, you cannot switch off the subtitle function.
- For certain scenes, the subtitle function takes a little longer to become effective (due to heavy data processing). Switching on subtitles may thus not always have an immediate effect.
- Some DVD videos also allow you to select the language and status of the subtitles via the disc menu.
- See page 39 for a list of abbreviations of the available languages and their meaning.
- The Subtitle settings are not saved internally. When you switch off the DVD Changer or open the disc tray, the DPC-6.1 returns to the default settings. See page 34.
- When you select an option that is not available on the selected DVD video, the DPC-6.1 ignores your setting and goes on using the previously selected language, etc.

# Using The On-Screen Display Functions

Information about a disc and its operational status can be monitored on your TV screen. If you want to take advantage of this feature for audio CDs, please remember to connect the DPC-6.1 to your TV set (see pages 10 and 11) and to switch it on. Please note that the information provided on screen is only for reference purposes and cannot be changed.

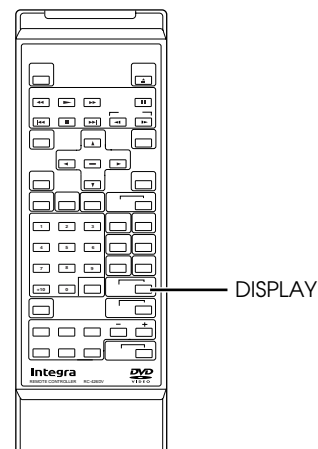

## Requesting Basic Information

This operation allows you to view the current title number, track number, and total playing time of the disc on the TV screen.

**Stop playback and press the DISPLAY button.**

Each time you press the DISPLAY button, the on-screen display changes as follows:

**DVD video**

e.g.

Title: 2	Current title number
Chapter: 1	Current chapter number
Stop	Operational status

Press DISPLAY again to leave this page.

**VIDEO CD/Audio CD**

e.g.

Track: 1	Current track number
Total 0:46:30	Total playing time of the disc
Stop	Operational status

Press DISPLAY again to leave this page.

### Tip:

When you play a disc that contains text data, the unit displays text information, such as the disc title and song titles. If the disc does not contain any text, the unit displays "No Text".

## More Specific Information: Remaining Time and Setting Status

You can also view the elapsed time, remaining time, and setting status of the disc on the TV screen. Though the operation is almost exactly the same as for requesting general information, please note that you need to start playback before being able to access this information.

**Press the DISPLAY button during playback.**

Each time you press the DISPLAY button, the on-screen display changes as follows.

**DVD video**

e.g.

Title: 3	Current title number
Chapter: 2	Current chapter number
Elapsed 0:10:15	Elapsed time and remaining time of the current title
Remain 0:50:45	Elapsed time and remaining time of the current chapter
Chapter Repeat	Operational status
Audio: 1 ENG <input checked="" type="checkbox"/> 2CH	Current sound channel setting
Subtitle: 12 ENG Off	Current subtitle setting
Angle: 1	Current angle setting

See page 39 for a list of abbreviations of the languages.

Bit Rate: 0 106.0 Mbps

Bit Rate (Mbit/sec): Amount of picture, sound and subtitle data on the DVD video transferred per second. The larger the value, the more data need to be processed. Please note that the amount of data provides no information about the picture quality.

Press DISPLAY again to leave this page.


**VIDEO CD/Audio CD**

e.g.

Track: 3	Current track number
Disc 0:05:12	Elapsed time and remaining time of the disc
Track Repeat	Operational status
Elapsed 0:01:20	Elapsed time and remaining time of the current track
Remain 0:02:00	Elapsed time and remaining time of the disc

Press DISPLAY again to leave this page.

# Advanced Settings

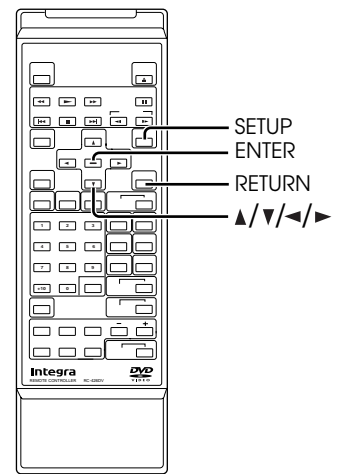

The DPC-6.1 contains a lot more functions than have been covered so far. Most of these functions can only be accessed via the on-screen menu. Please note that not all available functions apply to all disc types supported by the DPC-6.1. Setting the language, for instance, has no effect for audio CDs.

## Setting Procedure

<p><b>1</b></p>	<p>Switch on your TV set.</p>	<p><b>4</b></p>	<p>Use the ▲ / ▼ buttons to choose a function below the selected icon, and confirm by pressing the ENTER button.</p>
<p><b>2</b></p>	<p>Stop playback and press the <b>SETUP</b> button. The following on-screen menu appears:</p>	<p><b>ENTER</b></p>	
<p><b>3</b></p>	<p>Use the ◀ / ▶ buttons to select the menu heading (icon) that provides access to the desired function. See the next page for an overview of the available functions. Here is what the icons stand for:</p>	<p><b>5</b></p>	<p>Enter the desired value with the ▲ / ▼ buttons and confirm by pressing the ENTER button. For the OPERATION function, you will also need the ◀ / ▶ buttons. The exact procedure will be explained in that section.</p>
	<p>Language-related settings.</p>	<p><b>6</b></p>	<p>Repeat steps 4 and 5 to change other settings.</p>
	<p>Picture-related settings.</p>	<p><b>7</b></p>	<p>Press the <b>SETUP</b> button to switch off the on-screen menu. Press the RETURN button to return to the previous display.</p>
	<p>Audio output settings.</p>		
	<p>Settings related to the on-screen menu function.</p>	<p><b>Note:</b> Though the SETUP button may also work during normal playback, certain functions may not be accessible. In that case, a warning message is displayed. Stop playback and press SETUP again to be able to select the desired function.</p>	
	<p>General utility settings.</p>		



Setting		Details	Page
On-Screen Language	DVD VCD CD	Allows you to select the language of the on-screen displays.	34
Disc Menu Language	DVD	Allows you to select the language to be used by the disc menus (menus included on the discs you are playing back).	34
Audio Language	DVD	Allows you to select the sound track language.	34
Subtitle Language	DVD	Allows you to select the subtitle language.	35



TV Shape	DVD	Allows you to adapt the picture size to the aspect ratio of your TV.	35
Black Level	DVD VCD	Allows you to set the "blackness" of the screen.	35



Audio Out Select	DVD VCD CD	Allows you to select the audio outputs (digital or analog) and/or the output format of the digital audio data.	36
Dynamic Range Control	DVD	Allows you to reduce the dynamic range of the audio data (i.e. to reduce the difference between loud and soft sounds).	36
Karaoke Vocal	DVD	Allows you to switch on or mute the vocal track of a DVD Karaoke disc.	36
Extended Audio Features	DVD	Allows you to activate or mute the Extended Audio track for visually impaired persons.	36




On-Screen Displays	DVD VCD CD	Allows you to decide against having the operation status icons displayed on the TV screen.	37
OSD Background Color	DVD VCD CD	Allows you to select the background color for on-screen displays.	37
Extended Subtitle Features	DVD	Allows you to activate or switch off special subtitles for hearing-impaired persons.	37
Screen Saver	DVD VCD	Allows you to switch on or off the screen saver function.	37



Pause/Still	DVD	Allows you to select the resolution of still pictures. (Field/Frame)	37
Parental Lock	DVD	Allows you to set on or switch off the Parental Lock function.	37
Title Stop	DVD	Allows you to switch on or off a feature that automatically stops playback after a Title is finished.	38
PBC	VCD	To select to playback a PBC- controllable video CD.	38

# Advanced Settings (continued)

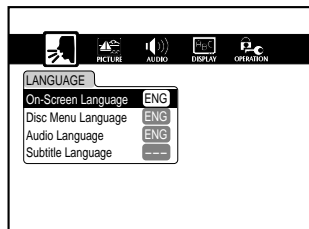

## LANGUAGE Functions

### On-Screen Language

This function allows you to select the language for the on-screen displays.

- English
- French
- Spanish


### Disc Menu Language

This function allows you to select the language used by the disc menus. Note that you can only select a language supported by the DVD video in question.

- English
- French
- Spanish
- Others\*

\* Others : To select another language than the above, proceed as follows:

- a) Press the ENTER button.
- b) See the list on page 39 for the abbreviation of the desired language.
- c) Enter the first character of the abbreviation with the ▲ / ▼ buttons (see the Code field).
- d) Move the cursor to the second position and use ▲ / ▼ for entering the second character of the abbreviation.

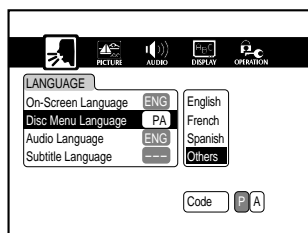

- e) Press the ENTER button.

#### Note:


Some DVD videos may not include the desired language. In that case, the DVD Changer automatically switches to the disc's default disc menu language.

### Audio Language

If the DVD video you are playing back contains multilingual soundtracks, Audio Language allows you to select the desired language.



- English
- French
- Spanish
- Others\*

\* Others : To select another language than the above, see steps (a) – (e) under "Disc Menu Language".

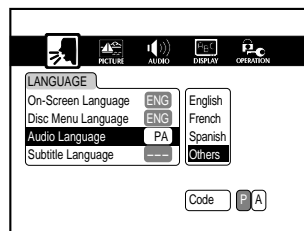

#### Note:

 Some DVD videos could be played back in a different language than the one you selected. This is usually due to the fact that the disc contains a preset language selection.

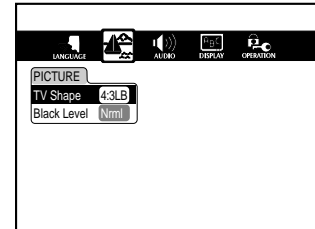


## PICTURE Settings

### Subtitle Language

Use this function to select the subtitle language, or to switch the subtitles off altogether.

- English
- French
- Spanish
- No Subtitle (subtitles are switched off)
- Others: To select another language than the above, see steps (a) – (e) under “Disc Menu Language”.

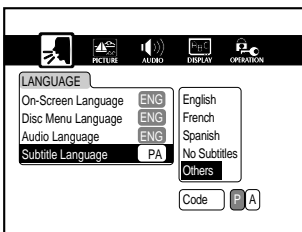

#### Notes:

- If DVD video contains a preset subtitle language setting, your selection is ignored.
- Some DVD videos allow you to change the subtitle language only via the disc menu. If so, press the MENU button and choose the desired subtitle language from the disc menu.

### TV Shape

This is where you can specify the shape of your TV screen. This is important for determining whether you would like to see the whole picture, or a slightly bigger version.

#### 4:3 Letterbox:

Select this setting if you own a standard 4:3 TV set and want to see the whole picture. In that case, masking bars are inserted above and below the picture.



#### 4:3 Normal:

Select this setting for a standard 4:3 TV set if you want the picture to fill the entire screen. In that case, the left and right borders may fall outside the screen's scope.



#### 16:9 Widescreen:

Select this setting for a 16:9 wide-screen TV.

#### Notes:

- The picture size is preset on the DVD video. Therefore, the playback picture may not conform to the picture size you select.
- When you play DVD videos that only contain 4:3 picture size information, any other TV Shape setting you may select is ignored.
- If you select “16:9 Widescreen” while your TV set is equipped with a 4:3 screen, the picture will be horizontally distorted (compressed) during playback. Always set the TV Shape function according to the TV set you are using.


### Black Level

This function allows you to optimize the black picture content (true black instead of dark gray), and hence the video quality.

**Enhanced:** Enhanced black level. (0 IRE)

**Normal:** Standard black level. (7.5 IRE)

# Advanced Settings (continued)

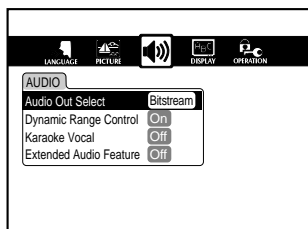

## AUDIO Settings

### Audio Out Select

This function allows you to select the outputs and format for audio playback. Always select the setting that best matches your amplifier's capabilities and input connectors. The "Bitstream" and "PCM" options refer to the DPC-6.1's digital outputs. See also "Other Audio Playback Options" on page 12.

**Bitstream:** Select this option if your amplifier is equipped with a digital input (optical or coaxial) and a Dolby Digital, DTS, MPEG1, or MPEG2 decoder. The DPC-6.1 outputs digital audio information in the Bitstream format when you play back a DVD video with Dolby Digital, DTS, MPEG1, or MPEG2 encoding.

**Analog 2Ch:** Select this option if the DPC-6.1 is connected to the audio inputs of your TV set, or an analog input pair of your external amplifier. Note that even this analog connection may allow you to take advantage of the amplifier's Dolby Pro Logic processor.

**PCM:** Select this option if the DPC-6.1 is connected to a digital input of your amplifier and if you would like the sound to be played back in stereo (e.g. for audio CDs). If you select "PCM", the audio data of DVD videos with Dolby Digital, MPEG1, or MPEG2 encoding is automatically converted to 2-channel PCM, so that you lose the surround information. See also the table on page 29.

### Dynamic Range Control

Dynamic Range Control allows you to "compress" the dynamic range of a DVD's sound track, so that you can lower the volume without losing extremely soft signals. This is especially useful when you are watching a movie late at night.

**Off:** The full dynamic range is maintained.

**On:** Low-level signals are slightly boosted so as to remain audible at a low volume setting.

#### Notes:

- This function is only available during playback of Dolby Digital-encoded DVD videos.
- The degree of dynamic range reduction may differ depending on the DVD video.

### Karaoke Vocal

DVD Karaoke discs sometimes also contain a vocal track you probably don't need for Karaoke applications. That is why the DPC-6.1 allows you to switch the lead vocal off.

**Off:** The lead vocal track is muted.

**On:** If available on the selected DVD Karaoke disc, the lead vocal track is output.

#### Notes:

- The Karaoke Vocal feature is only available during playback of Dolby Digital-encoded (multi-channel) DVD Karaoke discs.
- For optimum Karaoke enjoyment, be sure to use appropriate audio equipment, such as an external amplifier.


 
### Extended Audio Feature

Some DVD videos contain a special track that describes the on-screen actions for visually impaired persons. Your DPC-6.1 is set to automatically output this track if available. If this is not necessary, switch this function off.

**Off:** The Extended Audio Feature track is muted.

**On:** The Extended Audio Feature is active.



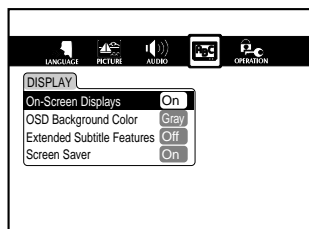

## DISPLAY Settings

### On-Screen Displays

This function allows you to activate or suppress the display of on-screen icons that inform you about the operational status.

- Off:** Operational icons or messages (e.g. "Play", "⏸") are not displayed.
- On:** Operational icons or messages (e.g. "Play", "⏸") are displayed on-screen.

### OSD Background Color

This function allows you to select the background color for the on-screen menu.

- Blue:** Blue background.
- Gray:** Gray background.

### Extended Subtitle Features


Some DVD videos contain special subtitles, an enhancement of closed captioning for hearing-impaired persons. The DVD Changer automatically displays these special subtitles.

- Off:** The special subtitles are not displayed.
- On:** The special subtitles are displayed.

### Screen Saver

The screen saver function protects your TV screen from burn-in of images that are displayed for too long. If you also work with a computer, you probably know how it works. The screen saver is especially useful if you often use the Pause ("still") function and tend to forget to switch it off. See page 16.

- Off:** The screen saver will not blank out the screen after the delay time has elapsed.
- On:** The screen saver will come on whenever necessary.

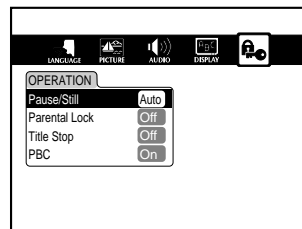

## OPERATION Settings

### Pause/Still

This function allows you to obtain an even better quality for still pictures. Such pictures are displayed when you pause playback of a DVD video. See also page 16.


- Auto:** For normal use. The image quality should be sufficient for most applications.
- Frame:** Still pictures are clearer thanks to a higher resolution.

### Parental Lock

DVD videos equipped with the Parental Lock function allow you to decide what exactly can be viewed on your DPC-6.1, which is especially useful if you have children. For example: you could select a level where violent scenes unsuitable for children are skipped and replaced with more suitable scenes, or prevent playback of a disc altogether. Whether the Parental Lock function actually works depends on the DVD video in question, because it needs to contain the software capable of responding to this function.

Parental Lock is secured by means of a 4-digit code to avoid that your children bypass this function. Ask your dealer or rental service for details about the Parental Lock support of a given DVD video. Also note that the meaning of the Parental Lock levels depends on the country whose rating standards are used by the DVD video.

- Off:** The Parental Lock feature is not active. To select the "Off" setting, perform steps 1 and 2 below.
- On:** Switching on Parental Lock involves specifying the highest level that can be viewed. You cannot just switch this function on without selecting a level. Careful: if you only carry out steps 1 and 2, Parental Lock will be switched off. Be sure to perform steps 1 – 4 below.

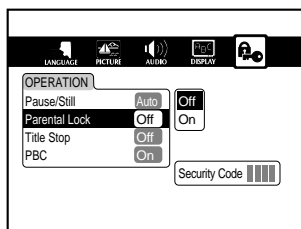


1. Press the ENTER button.
2. Enter the 4-digit code via the numeric buttons on the remote controller, and press the ENTER button. If you entered the wrong code, press the CLEAR button before pressing ENTER, and enter your 4-digit code again.

# Advanced Settings (continued)


## OPERATION Settings (continued)

3. Press the ◀ / ▶ buttons to select the country whose standards were used to rate the DVD video.

See the information supplied with the DVD for details.

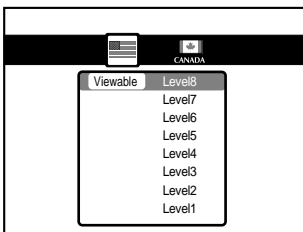

4. Press the ▲ / ▼ buttons to select the Parental Lock level, then press the ENTER button.

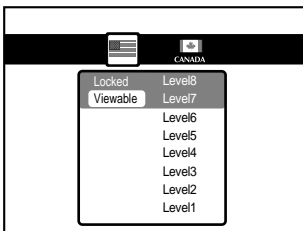

It is now impossible to play back DVD videos rated higher than the selected level. For example, when you select level 7 ("Viewable"), discs rated higher than level 7 are locked out ("Locked") and cannot be played back.

The Parental Lock level is equivalent to the following USA movie ratings:

Level 7: NC-17

Level 6: R

Level 4: PG 13

Level 3: PG

Level 1: G

The parental lock levels for "Canada" are included for future use. Since they are different from the US ratings, carefully check what they correspond to before buying new DVD videos with the Canadian Parental Lock system as they become available.

### ■ Changing the Parental Lock level

Perform steps 2 – 4 above.

### ■ Changing the 4-digit Code

- a) After selecting a level or "Off," press the STOP button four times, followed by the ENTER button.



The current 4-digit code is cleared.

- b) Press the numeric buttons to enter a new 4-digit security code.  
c) Press the ENTER button.  
Be sure to either memorize this code or to write down and store it in a safe place.

### Title Stop

This function allows you to specify what happens when the DPC-6.1 reaches the end of a DVD Title.

- Off:** The DPC-6.1 continues after playback of a Title is completed. Selecting this option also changes the behavior of the DOWN ◀◀ and UP ▶▶ buttons. See "Selecting the Next/Previous Chapter or Track" on page 19.

- On:** The DPC-6.1 stops after playback of a title is completed.

### PBC (Playback Control)

- Off:** The menu screen of the selected Video CD (if available) is not displayed.  
**On:** The menu screen of a Video CD with PBC functionality is displayed on screen.

# Table of Languages

## Table of Languages and Their Abbreviations

Abbreviation of the Language	Language	Abbreviation of the Language	Language	Abbreviation of the Language	Language	Abbreviation of the Language	Language
—	No alternate language	EO	Esperanto	LN	Lingala	SL	Slovenian
CHI (ZH)	Chinese	ET	Estonian	LO	Laotian	SM	Samoan
DUT (NL)	Dutch	EU	Basque	LT	Lithuanian	SN	Shona
ENG (EN)	English	FA	Persian	LV	Latvian, Lettish	SO	Somali
FRE (FR)	French	FI	Finnish	MG	Malagasy	SQ	Albanian
GER (DE)	German	FJ	Fiji	MI	Maori	SR	Serbian
ITA (IT)	Italian	FO	Faroese	MK	Macedonian	SS	Siswati
JPN (JA)	Japanese	FY	Frisian	ML	Malayalam	ST	Sesotho
KOR (KO)	Korean	GA	Irish	MN	Mongolian	SU	Sudanese
MAY (MS)	Malay	GD	Scottish Gaelic	MO	Moldavian	SV	Swedish
SPA (ES)	Spanish	GL	Galician	MR	Marathi	SW	Swahili
AA	Afar	GN	Guarani	MT	Maltese	TA	Tamil
AB	Abkhazian	GU	Gujarati	MY	Burmese	TE	Telugu
AF	Afrikaans	HA	Hausa	NA	Nauru	TG	Tajik
AM	Amharic	HI	Hindi	NE	Nepali	TH	Thai
AR	Arabic	HR	Croatian	NO	Norwegian	TI	Tigrinya
AS	Assamese	HU	Hungarian	OC	Occitan	TK	Turkmen
AY	Aymara	HY	Armenian	OM	(Afan) Oromo	TL	Tagalog
AZ	Azerbaijani	IA	Interlingua	OR	Oriya	TN	Setswana
BA	Bashkir	IE	Interlingue	PA	Panjabi	TO	Tongan
BE	Belorussian	IK	Inupiak	PL	Polish	TR	Turkish
BE	Belorussian	IN	Indonesian	PS	Pashto, Pushto	TS	Tsonga
BG	Bulgarian	IS	Icelandic	PT	Portuguese	TT	Tatar
BH	Bihari	IW	Hebrew	QU	Quechua	TW	Twi
BI	Bislama	JI	Yiddish	RM	Rhaeto-Romance	UK	Ukrainian
BN	Bengali, Bangla	JW	Javanese	RN	Kirundi	UR	Urdu
BO	Tibetan	KA	Georgian	RO	Romanian	UZ	Uzbek
BR	Breton	KK	Kazakh	RU	Russian	VI	Vietnamese
CA	Catalan	KL	Greenlandic	RW	Kinyarwanda	VO	Volapük
CO	Corsican	KM	Cambodian	SA	Sanskrit	WO	Wolof
CS	Czech	KN	Kannada	SD	Sindhi	XH	Xhosa
CY	Welsh	KS	Kashmiri	SG	Sango	YO	Yoruba
DA	Danish	KU	Kurdish	SH	Serbo-Croatian	ZU	Zulu
DZ	Bhutani	KY	Kirghiz	SI	Singhalese		
EL	Greek	LA	Latin	SK	Slovak		

# Troubleshooting

If your DPC-6.1 does not seem to work as expected, check the following table for the possible cause before contacting your ONKYO/Integra dealer or service.

## Symptoms and Corrections


Symptom	Cause	Correction	Page
No power.	<ul style="list-style-type: none"> <li>The power plug is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the power plug firmly.</li> </ul>	10, 11
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so that the DPC-6.1's picture appears on the TV screen.</li> </ul>	14
	<ul style="list-style-type: none"> <li>The video cable is not securely connected.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the video cable into the jacks securely.</li> </ul>	10-13
No sound.	<ul style="list-style-type: none"> <li>The DPC-6.1 has not been selected as input source on the amplifier or receiver.</li> </ul>	<ul style="list-style-type: none"> <li>Select the input source on the amplifier or receiver that corresponds to the input(s) the DPC-6.1 is connected to.</li> </ul>	14
	<ul style="list-style-type: none"> <li>The audio cables are not securely connected.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cable securely.</li> </ul>	10-13
	<ul style="list-style-type: none"> <li>The device you connected the DPC-6.1's audio outputs to is switched off.</li> </ul>	<ul style="list-style-type: none"> <li>Switch on the amplifier or receiver.</li> </ul>	-
	<ul style="list-style-type: none"> <li>The output sound type setting is not correct.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate audio settings.</li> </ul>	29,32 36
The picture occasionally distorts.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Eject the disc and clean it.</li> </ul>	9
	<ul style="list-style-type: none"> <li>The Fast Forward or Fast Reverse function is active.</li> </ul>	<ul style="list-style-type: none"> <li>Sometimes a small amount of picture distortion may be noticeable. This is not a malfunction.</li> </ul>	-
Unstable brightness or picture noise.	<ul style="list-style-type: none"> <li>This is caused by the copy protection signal.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the DPC-6.1 directly to the TV. Never route its picture signal via a VCR or other video device ("daisy chain").</li> </ul>	10
The DPC-6.1 won't start playback.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. (Check whether the "DVD", "VCD" or "CD" indicator lights.)</li> </ul>	42
	<ul style="list-style-type: none"> <li>The inserted disc cannot be read.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type and color system.)</li> </ul>	9
	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the disc with the playback side down.</li> </ul>	14
	<ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc correctly inside the guide.</li> </ul>	14
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>	9
	<ul style="list-style-type: none"> <li>The Parental Lock function is on.</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the Parental Lock function or select another Parental Lock level.</li> </ul>	32,33 37
You hear a voice that describes the action.	<ul style="list-style-type: none"> <li>The DVD video contains an Extended Audio Feature track that is being played back.</li> </ul>	<ul style="list-style-type: none"> <li>Switch off the Extended Audio Feature.</li> </ul>	36
The buttons do not work.	<ul style="list-style-type: none"> <li>Power supply fluctuations or other abnormalities such as static electricity may interrupt correct operation.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the power on or off with the POWER button. Or disconnect the power plug and insert it into the wall outlet again.</li> </ul>	-
The remote controller does not work properly.	<ul style="list-style-type: none"> <li>The remote controller is not pointed at the remote sensor of the DVD Changer.</li> </ul>	<ul style="list-style-type: none"> <li>Point the remote controller at the remote sensor of the DVD Changer.</li> </ul>	8
	<ul style="list-style-type: none"> <li>The remote controller is too far from the DVD Changer.</li> </ul>	<ul style="list-style-type: none"> <li>Operate the remote controller within about 5 m.</li> </ul>	8
	<ul style="list-style-type: none"> <li>The batteries in the remote controller are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the batteries with new ones.</li> </ul>	8

This unit contains a sensitive microcomputer that, under certain circumstances, might fail to operate due to excessive noise interference. In such case, disconnect the power cord from the wall outlet, wait five seconds and connect the power cord again.


# Identification of Controls

See the pages in ( ) for details.

## Front Panel

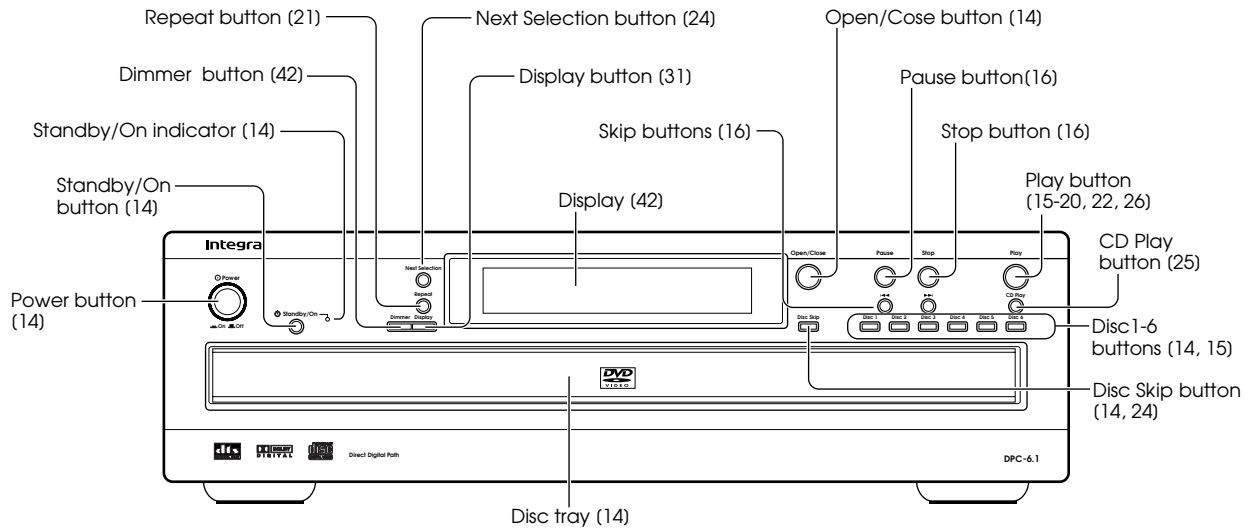



## Rear Panel

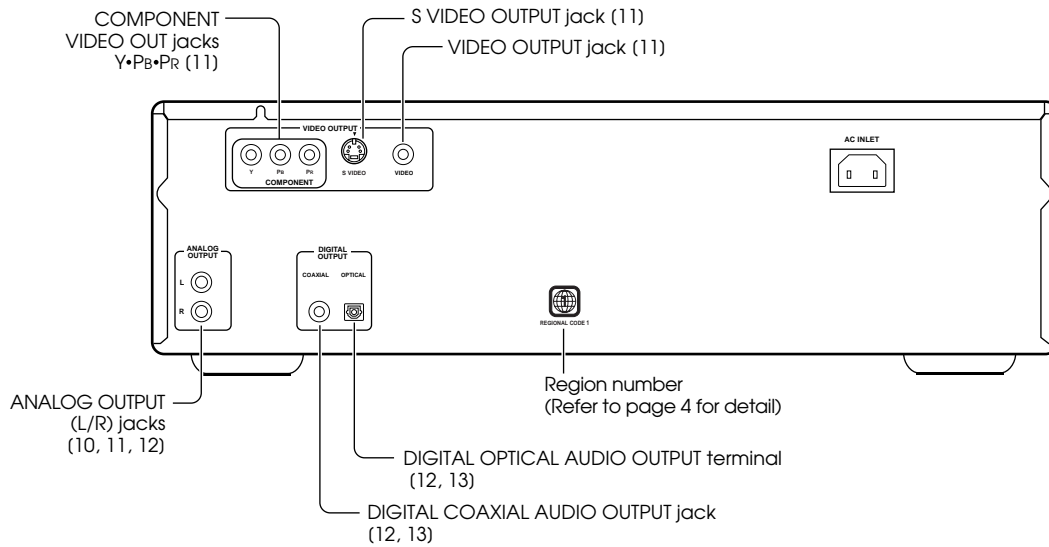

# Identification of Controls (continued)

## Display

 - Pressing of the DIMMER button changes the brightness of the Display.

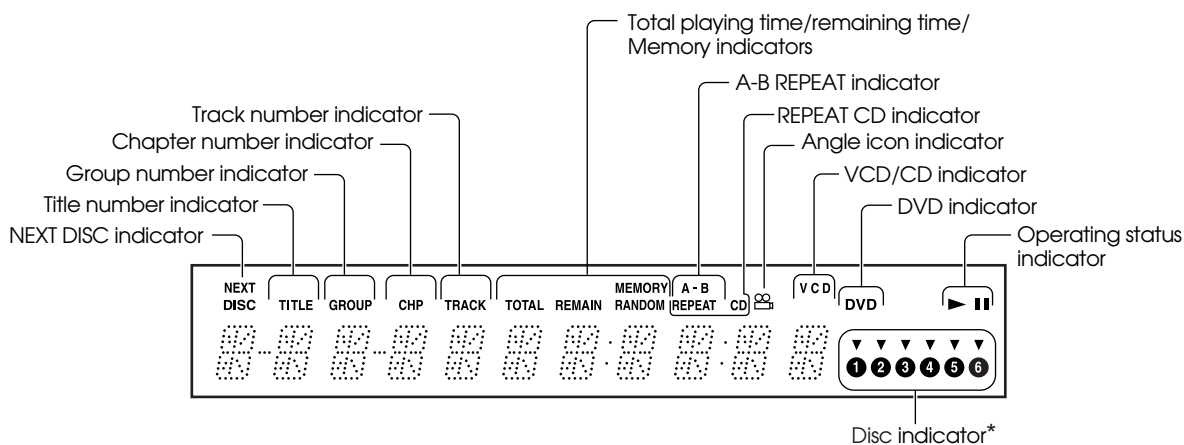

### \* DISC INDICATORS ATTENTION:

 
When the tray is closed, the unit will search to play the first disc loaded; all Disc Indicator will be illuminated. As the unit accesses the disc locations the indicators will either go out or stay lit to indicate the presence of a disc. An indicator may stay lit even if there is no disc loaded until the player has accessed that location. This is not malfunction.

■ The indicators vary depending on the kinds of discs you play.

### ■ DVD video


- When closing the disc tray:

Example



- During playback:

Example

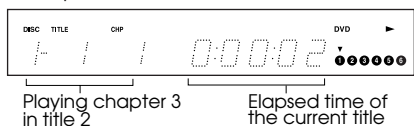


Some DVD videos may not display the chapter numbers or elapsed time.

### ■ VIDEO CD


- When closing the disc tray:

Example

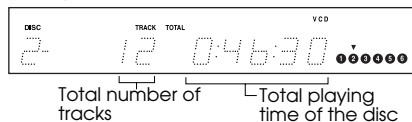

- During playback:

Example

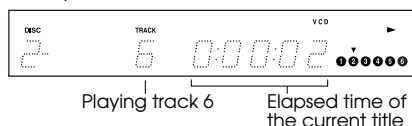


Some VIDEO CDs may not display the track numbers or elapsed time.

### ■ Audio CD


- When closing the disc tray:

Example

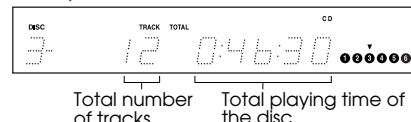

- During playback:


Example

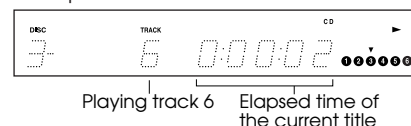



Most steps in this manual need to be performed using the supplied remote controller. That is why the functions of the remote controller's buttons are explained in the relative chapters and sections. See the pages in ( ) for details.

## Remote Controller

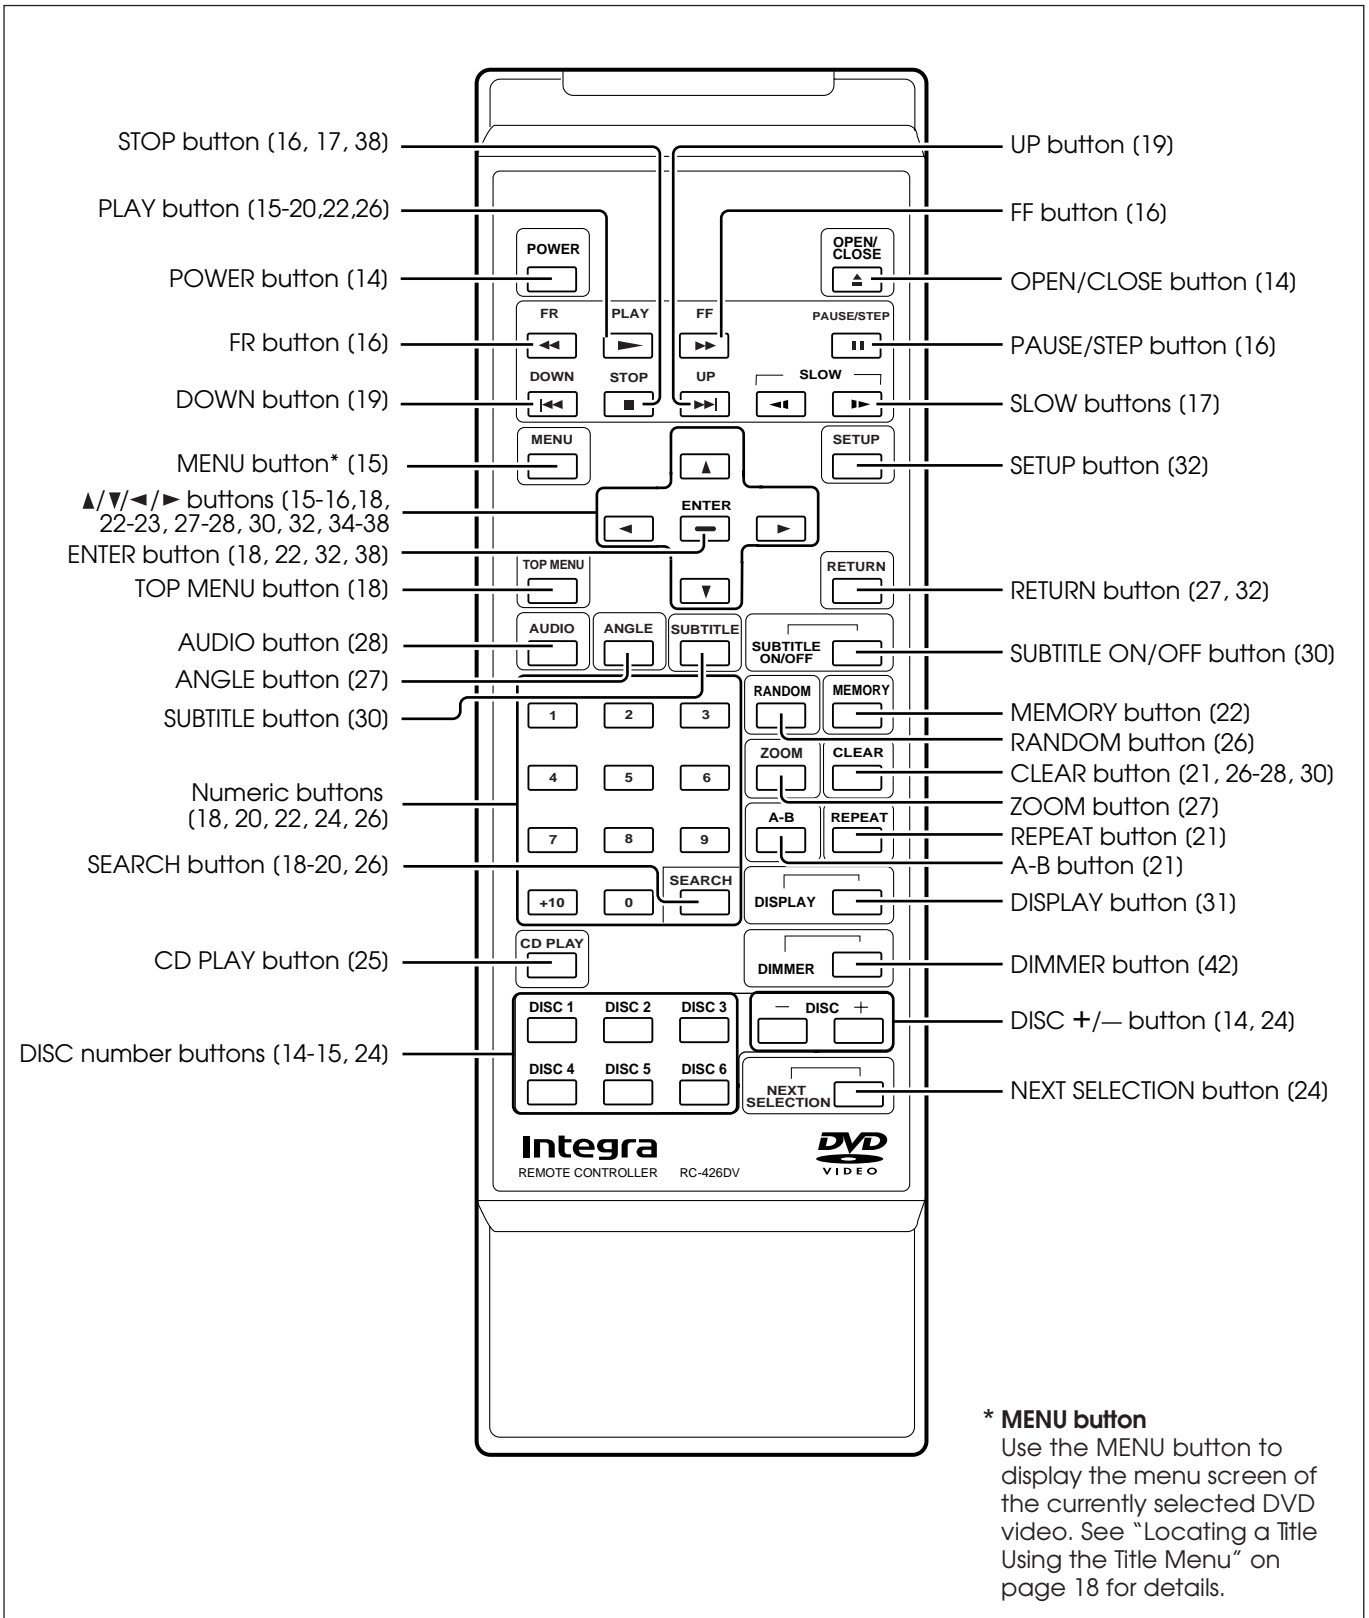

# Specifications

## DVD Changer/Outputs

### DVD Changer

Power supply	AC 120 V, 60 Hz
Power consumption	19 W
Weight	7.0 kg, 15.4 lbs
External dimensions (W/H/D)	435 X 131 X 433 mm, 17-1/8" X 5-3/16" X 17-1/16"
Signal system	Standard NTSC
Regional restriction code	1
Laser	Semiconductor laser, wavelength 650 nm
Frequency range (digital audio)	DVD linear sound : 48 kHz sampling 4 Hz to 22 kHz 96 kHz sampling 4 Hz to 44 kHz Audio CD : 4 Hz to 20 kHz
Signal-to-noise ratio (digital audio)	96 dB
Audio dynamic range (digital audio)	90 dB
Harmonic distortion (digital audio)	0.01 %
Wow and flutter	Below measurable level ( $\pm 0.001$ % (W.PEAK))
Operating conditions	Temperature: 5°C to 35°C (41°F to 95°F), Operation status: Horizontal

### Outputs

Video output	1.0 V (p-p), 75 $\Omega$ , negative sync., pin jack X 1
S video output	(Y) 1.0 V (p-p), 75 $\Omega$ , negative sync., Mini DIN 4-pin X 1 (C) 0.286 V (p-p), 75 $\Omega$
Component Video output	(Y) 1.0 V (p-p), 75 $\Omega$ , negative sync., pin jack X 1 (P <sub>B</sub> )/(P <sub>R</sub> ) 0.7 V (p-p), 75 $\Omega$
Digital Audio output (optical)	Optical connector X 1
Digital Audio output (coaxial)	0.5 V (p-p), 75 $\Omega$ , pin jack X 1
Audio output (analog audio)	2.0 V (rms), 470 $\Omega$ , pin jack (L, R) X 1

- Design and specifications are subject to change without notice.

Integra Division of  
**ONKYO U.S.A. CORPORATION**  
200 Williams Drive, Ramesy, N.J. 07446, U.S.A.  
Tel: 201-825-7950 Fax: 201-825-8150 E-mail: integra@onkyousa.com

Integra Division of  
**ONKYO CORPORATION**  
Sales & Product Planning Div. :  
2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN  
Tel: 072-831-8111 Fax: 072-833-5222

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>