

# 8S661FXM-RZ

Intel Pentium® 4 Processor Motherboard

## User's Manual

Rev. 1101

12ME-S661FXMRZ-1101

### Copyright

© 2004 GIGABYTE TECHNOLOGY CO., LTD

Copyright by GIGA-BYTE TECHNOLOGY CO., LTD. ("GBT"). No part of this manual may be reproduced or transmitted in any form without the expressed, written permission of GBT.

### Trademarks

Third-party brands and names are the property of their respective owners.

### Notice

Please do not remove any labels on motherboard, this may void the warranty of this motherboard.

Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.

The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.



## Preparing Your Computer

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

1. Unplug your computer when working on the inside.
2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
3. Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.



## Installing the motherboard to the chassis

If the motherboard has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

## Table of Content

Chapter 1 Introduction .....	5
Features Summary .....	5
8S661FXM-RZ Motherboard Layout .....	7
Block Diagram .....	8
Hardware Installation Process .....	9
Step 1: Install the Central Processing Unit (CPU) .....	9
Step 1-1: CPU Installation .....	10
Step 1-2: CPU Cooling Fan Installation .....	10
Step 2: Install memory modules .....	11
Step 3: Install expansion cards .....	12
Step 4: Install I/O Peripherals Cables .....	12
Step 4-1: I/O Back Panel Introduction .....	12
Step 4-2: Connectors Introduction .....	13
Chapter 2 BIOS Setup .....	21
The Main Menu (For example: BIOS Ver. : F8c) .....	21
Standard CMOS Features .....	23
Advanced BIOS Features .....	25
Integrated Peripherals .....	27
Power Management Setup .....	29
PnP/PCI Configurations .....	31
PCI Health Status .....	32
MB Intelligent Tweaker (M.I.T.) .....	33
Top Performance .....	34
Load Fail-Safe Defaults .....	35
Load Optimized Defaults .....	35
Set Supervisor/User Password .....	35
Save & Exit Setup .....	36
Exit Without Saving .....	36
Chapter 3 Driver Installation .....	37

## Chapter 1 Introduction

### Features Summary

CPU	<ul style="list-style-type: none"> <li>• Socket 478 for Intel® Micro FC-PGA2 Pentium® 4 processor</li> <li>• Support Intel® Pentium® 4 (Northwood, Prescott) processor</li> <li>• Support Intel® Pentium® 4 Processor with HT Technology<sup>&lt;Note &gt;</sup></li> <li>• Intel® Pentium® 4 800/533/400MHz FSB</li> <li>• 2nd cache depends on CPU</li> </ul>
Chipset	<ul style="list-style-type: none"> <li>• North Bridge:SiS® Chipset 661FX</li> <li>• South Bridge:SiS® 963L</li> </ul>
Memory	<ul style="list-style-type: none"> <li>• 2 184-pin DDR sockets</li> <li>• Supports DDR400/DDR333/DDR266</li> <li>• Supports up to 2 unbuffered DIMM DDR400</li> <li>• Supports up to 2GB (Max)</li> </ul>
Slots	<ul style="list-style-type: none"> <li>• 1 AGP slot 4X/8X (1.5V) device support</li> <li>• 3 PCI slot</li> </ul>
On-Board IDE	<ul style="list-style-type: none"> <li>• 2 IDE bus master (UDMA33/ATA66/ATA100/ATA133) IDE ports for up to 4 ATAPI devices</li> <li>• Supports PIO mode3,4 (UDMA 33/ATA66/ATA100/ATA133) IDE &amp; ATAPI CD-ROM</li> </ul>
On-Board Floppy	<ul style="list-style-type: none"> <li>• Floppy port supports 2 FDD with 360K, 720K,1.2M, 1.44M and 2.88M bytes</li> </ul>
On-Board Peripherals	<ul style="list-style-type: none"> <li>• 1 Parallel port</li> <li>• 1 Serial port (COMA),1 VGA port,COMB on board</li> <li>• 6 x USB 2.0/1.1 (2 x Rear, 4 xFront by cable)</li> <li>• 1 Front Audio Connector</li> <li>• PS/2 Keyboard interface and PS/2 Mouse interface</li> </ul>
On-Board VGA	<ul style="list-style-type: none"> <li>• Build in SiS661FX Chipset</li> </ul>
On-Board LAN	<ul style="list-style-type: none"> <li>• Build in ICS1883 Chipset</li> </ul>
On-Board Sound	<ul style="list-style-type: none"> <li>• CMedia 9761 codec</li> <li>• Line Out / 2 front speaker</li> <li>• Line In / 2 rear speaker(by s/w switch)</li> <li>• Mic In / center&amp; subwoofer(by s/w switch)</li> <li>• SPDIF Out /SPDIF In</li> <li>• CD_In / Game Port</li> </ul>
BIOS	<ul style="list-style-type: none"> <li>• Licensed Award BIOS</li> <li>• Supports Q-Flash</li> </ul>


to be continued.....

I/O Control	<ul style="list-style-type: none"><li>• IT8705</li></ul>
Hardware Monitor	<ul style="list-style-type: none"><li>• CPU/System Fan Revolution detect</li><li>• CPU temperature detect</li><li>• System Voltage Detect</li></ul>
Additional Features	<ul style="list-style-type: none"><li>• Supports EasyTune 4</li><li>• Supports @BIOS</li></ul>
Form Factor	<ul style="list-style-type: none"><li>• 23.0cm x 24.4cm Micro ATX size form factor, 4 layers PCB.</li></ul>




Please set the CPU host frequency in accordance with your processor's specifications. We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Chipsets, Memory, Cards....etc.

## 8S661FXM-RZ Motherboard Layout

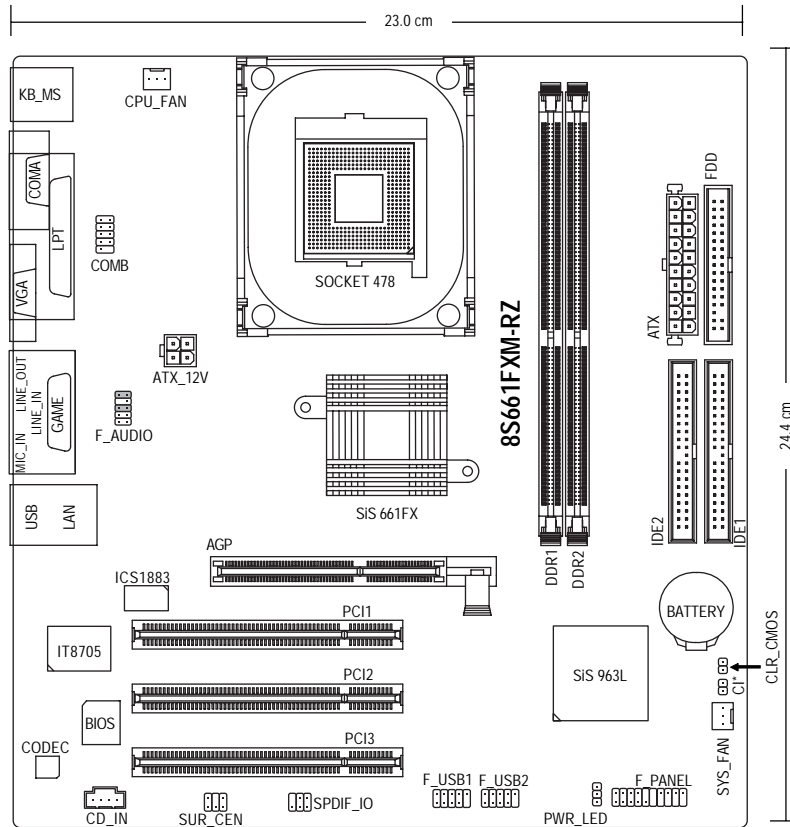

\*\*\* Only for 8S661FXM-RZ Rev. 1.1

### Block Diagram

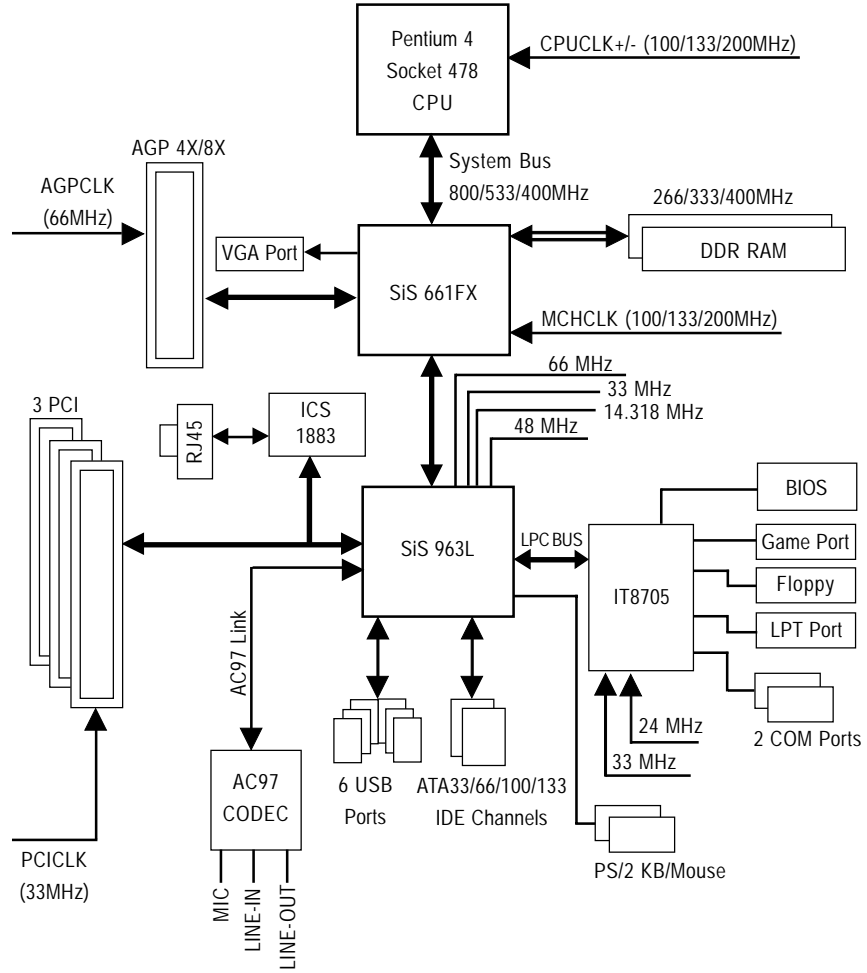




## Hardware Installation Process

To set up your computer, you must complete the following steps:

- Step 1- Install the Central Processing Unit (CPU)
- Step 2- Install memory modules
- Step 3- Install expansion cards
- Step 4- Install I/O Peripherals cables

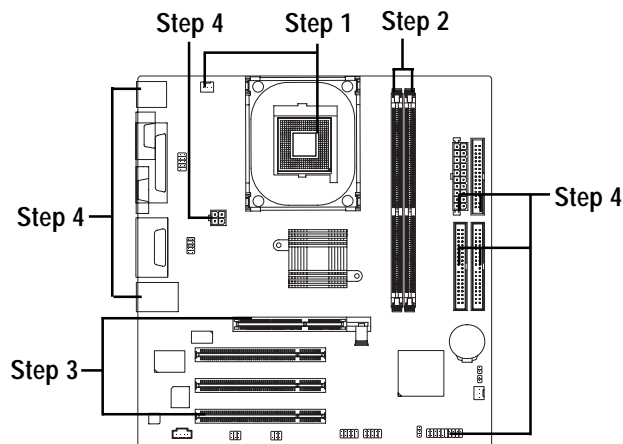

### Step 1: Install the Central Processing Unit (CPU)



Before installing the processor, adhere to the following warning:

1. Please make sure the CPU type is supported by the motherboard.
2. The processor will overheat without the heatsink and/or fan, resulting in permanent irreparable damage.
3. If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.
4. Apply thermal grease between the processor and cooling fan.
5. Never run the processor without the heatsink properly and firmly attached. Permanent damage will result.
6. Please set the CPU host frequency in accordance with your processor's specifications. We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Memory, Cards...etc.



#### HT functionality requirement content :

Enabling the functionality of Hyper-Threading Technology for your computer system requires all of the following platform components:

- CPU: An Intel® Pentium 4 Processor with HT Technology
- Chipset: A SiS® Chipset that supports HT Technology
- BIOS: A BIOS that supports HT Technology and has it enabled
- OS: An operation system that has optimizations for HT Technology

## Step 1-1: CPU Installation

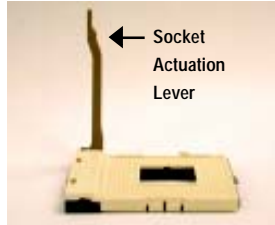


Figure 1.  
Pull the rod to the 90-degree directly.

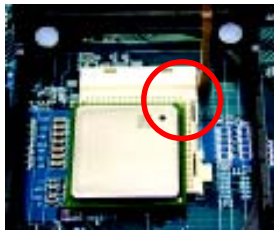


Figure 2.  
Locate Pin 1 in the socket and look for a (golden) cut edge on the CPU upper corner. Insert the CPU into the socket. (Do not force the CPU into the socket.) Then move the socket lever to the locked position while holding pressure on the center of the CPU.

## Step 1-2: CPU Cooling Fan Installation

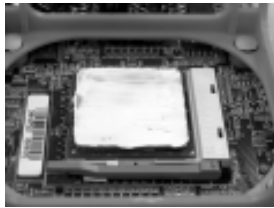


Figure 1.  
Apply the thermal tape(or grease) to provide better heat conduction between your CPU and cooling fan.



Figure 2.  
Fasten the cooling fan supporting-base onto the CPU socket on the motherboard.

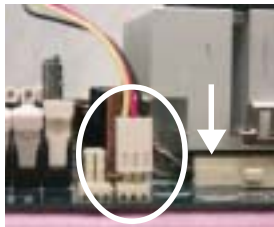



Figure 3.  
Make sure the CPU fan is plugged to the CPU fan connector, than install complete.

## Step 2: Install memory modules




Before installing the memory modules, adhere to the following warning:  
Please note that the DIMM module can only fit in one direction due to the one notch. Wrong orientation will cause improper installation. Please change the insert orientation.

The motherboard has 2 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.

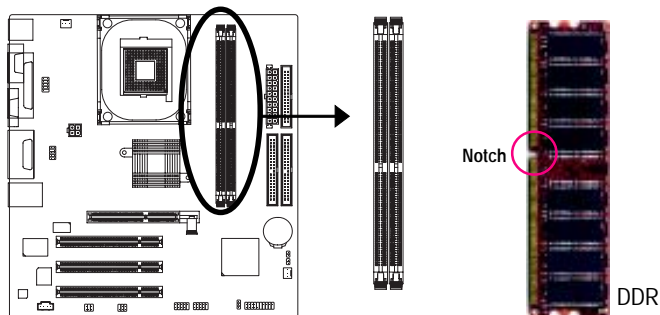

Support Unbuffered DDR DIMM Sizes type:

64 Mbit (2Mx8x4 banks)	64 Mbit (1Mx16x4 banks)	128 Mbit(4Mx8x4 banks)
128 Mbit(2Mx16x4 banks)	256 Mbit(8Mx8x4 banks)	256 Mbit(4Mx16x4 banks)
512 Mbit(16Mx8x4 banks)	512 Mbit(8Mx16x4 banks)	

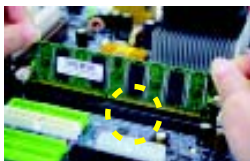

1. The DIMM socket has a notch, so the DIMM memory module can only fit in one direction.



2. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.




3. Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.  
Reverse the installation steps when you wish to remove the DIMM module.

### Step 3: Install expansion cards

1. Read the related expansion card's instruction document before install the expansion card into the computer.
2. Please make sure your AGP card is AGP 4X/8X (1.5V).




3. Please carefully pull out the small white-drawable bar at the end of the AGP slot when you try to install/ Uninstall the AGP card. Please align the AGP card to the onboard AGP slot and press firmly down on the slot. Make sure your AGP card is locked by the small white-drawable bar.

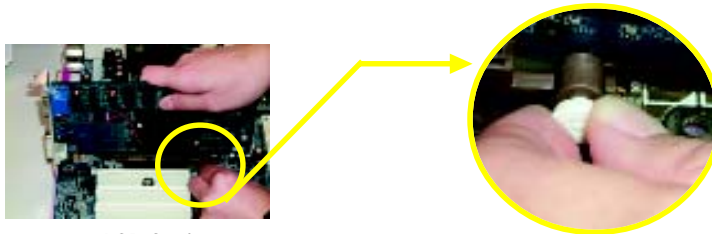

AGP Card

### Step 4: Install I/O Peripherals Cables

#### Step 4-1: I/O Back Panel Introduction

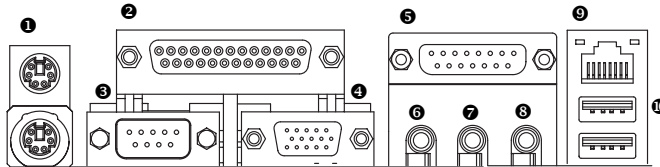

- ❶ **PS/2 Keyboard and PS/2 Mouse connector**  
This connector supports standard PS/2 keyboard and PS/2 mouse.
- ❷ **Parallel port (LPT)**  
Device like printer can be connected to Parallel port.
- ❸ **Serial port (COMA)**  
Mouse and modem etc. can be connected to Serial port.
- ❹ **VGA port**  
Monitor can be connected to VGA port.
- ❺ **Game/MIDI port**  
This connector supports joystick, MIDI keyboard and other relate audio devices.
- ❻ **Line Out jack**  
Connect the stereo speakers or earphone to this connector.
- ❼ **Line In jack**  
Devices like CD-ROM, walkman etc. can be connect to Line In jack.

### ⑨ MIC In jack

Microphone can be connect to MIC In jack.

After installation of the audio driver, you are able to use 2/4/6-channel audio feature by software selection. You can connect "Front speaker" to "Line Out" jack, Connect "Rear speaker" to "Line In" jack and connect "Center/Subwoofer" to "MIC In" jack.


### ⑩ LAN port

LAN is fast Ethernet with 10/100Mbps speed.

### ⑩ USB port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. Have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.



## Step 4-2: Connectors Introduction

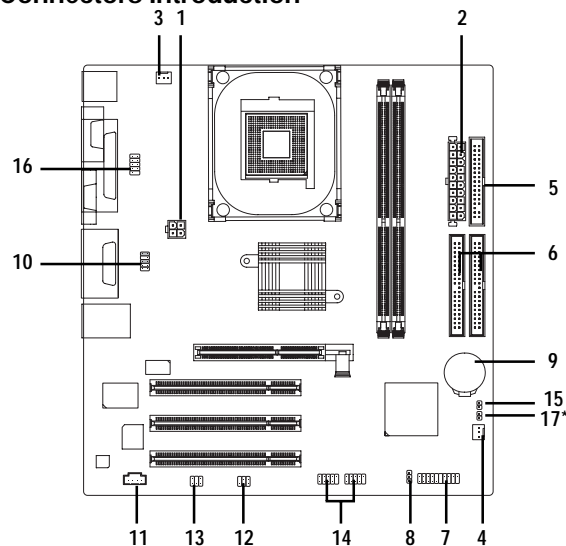

1) ATX_12V	10) F_AUDIO
2) ATX	11) CD_IN
3) CPU_FAN	12) SPDIF_IO
4) SYS_FAN	13) SUR_CEN
5) FDD	14) F_USB1 / F_USB2
6) IDE1 / IDE2	15) CLR_CMOS
7) F_PANEL	16) COMB
8) PWR_LED	17) CI* (***) Only for 8S661FXM-RZ Rev. 1.1)
9) BAT	

### 1) ATX\_12V (+12V Power Connector)

 
This connector (ATX\_12V) supplies the CPU operation voltage (Vcore).  
 If this "ATX\_12V connector" is not connected, system cannot boot.

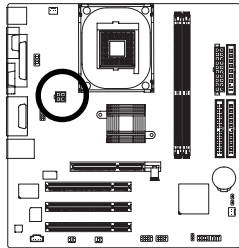

Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

### 2) ATX (ATX Power)


AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

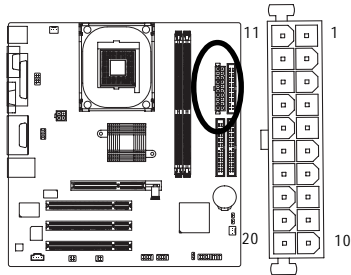

Pin No.	Definition	Pin No.	Definition
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	VCC	14	PS_ON(soft on/off)
5	GND	15	GND
6	VCC	16	GND
7	GND	17	GND
8	Power Good	18	-5V
9	5V SB (stand by +5v)	19	VCC
10	+12V	20	VCC

### 3) CPU\_FAN (CPU FAN Connector)


Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to 600 mA.

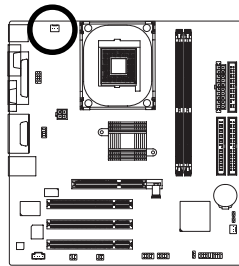

Pin No.	Definition
1	GND
2	+12V
3	Sense

#### 4) SYS\_FAN (System FAN Connector)

This connector allows you to link with the cooling fan on the system case to lower the system temperature.


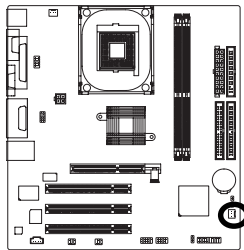


Pin No.	Definition
1	GND
2	+12V
3	Sense

#### 5) FDD (Floppy Connector)

 Please connect the floppy drive ribbon cables to FDD. It supports 360K,720K,1.2M,1.44M and 2.88Mbytes floppy disk types.



The red stripe of the ribbon cable must be the same side with the Pin1.

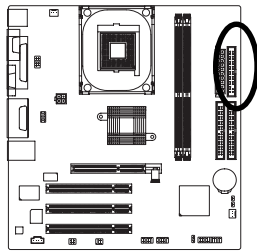

#### 6) IDE1/ IDE2(IDE1/IDE2 Connector)


Please connect first harddisk to IDE1 and connect CDROM to IDE2.

The red stripe of the ribbon cable must be the same side with the Pin1.

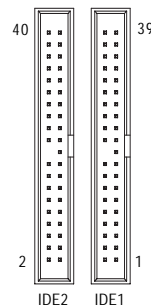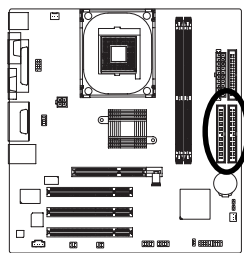

### 7) F\_PANEL (2x10 pins connector)


Please connect the power LED, PC peaker, reset switch and power switch etc of your chassis front panel to the F\_PANEL connector according to the pin assignment above.

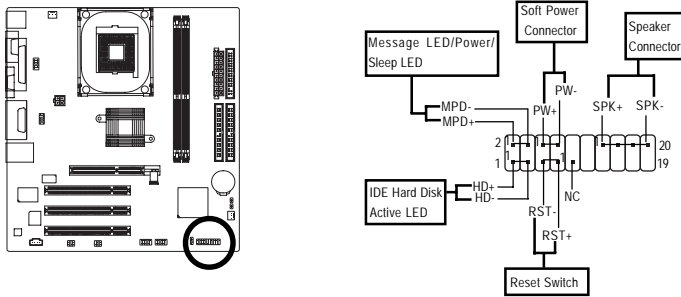

HD (IDE Hard Disk Active LED)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
SPK (Speaker Connector)	Pin 1: VCC(+) Pin 2- Pin 3: NC Pin 4: Data(-)
RST (Reset Switch)	Open: Normal Operation Close: Reset Hardware System
PW (Soft Power Connector)	Open: Normal Operation Close: Power On/Off
MPD(Message LED/Power/ Sleep LED)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
NC	NC

### 8) PWR\_LED

PWR\_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode. If you use dual color LED, power LED will turn to another color.


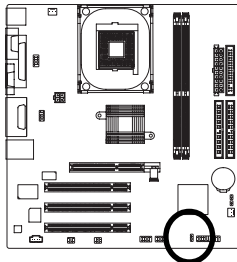


1

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-



### 9) BAT (Battery)

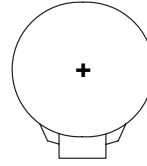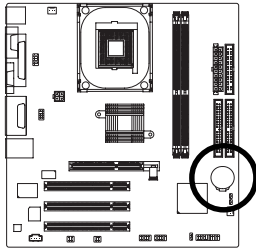

#### CAUTION


- ❖ Danger of explosion if battery is incorrectly replaced.
- ❖ Replace only with the same or equivalent type recommended by the manufacturer.
- ❖ Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

1. Turn OFF the computer and unplug the power cord.
2. Remove the battery, wait for 30 second.
3. Re-install the battery.
4. Plug the power cord and turn ON the computer.

### 10) F\_AUDIO (F\_AUDIO Connector)



If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper. In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignment on the cable is the same as the pin assignment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

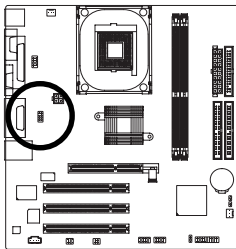

Pin No.	Definition
1	MIC
2	GND
3	REF
4	POWER
5	FrontAudio(R)
6	RearAudio(R)
7	Reserved
8	No Pin
9	FrontAudio(L)
10	RearAudio(L)

### 11) CD\_IN

 
Connect CD-ROM or DVD-ROM audio out to the connector.

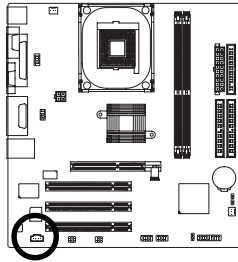

Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD_R

### 12) SPDIF\_IO (SPDIF In/Out)


The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Use SPDIF IN feature only when your device has digital output function. Be careful with the polarity of the SPDIF\_IO connector. Check the pin assignment carefully while you connect the SPDIF\_IO cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional SPDIF\_IO cable, please contact your local dealer.

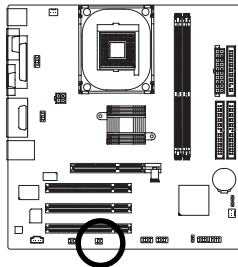

Pin No.	Definition
1	VCC
2	No Pin
3	SPDIF
4	SPDIF
5	GND
6	GND

### 13) SUR\_CEN


Please contact your nearest dealer for optional SUR\_CEN cable.

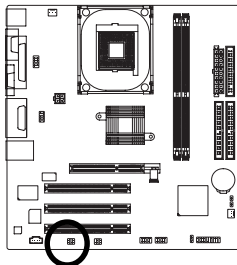

Pin No.	Definition
1	SUR OUTL
2	SUR OUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT

### 14) F\_ USB1 / F\_USB2 (Front USB Connector)




Be careful with the polarity of the F\_USB connector. Check the pin assignment carefully while you connect the F\_USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional F\_USB cable, please contact your local dealer.

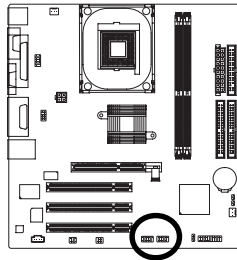

Pin No.	Definition
1	Power
2	Power
3	USB DX-
4	USB Dy-
5	USB DX+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC


### 15) CLR\_CMOS (Clear CMOS)

  You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily short 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.

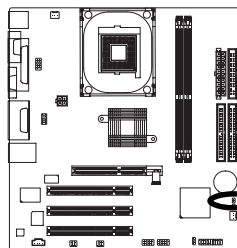

### 16) COMB (COM B Connector)


Be careful with the polarity of the COMB connector. Check the pin assignment carefully while you connect the COMB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional COMB cable, please contact your local dealer.

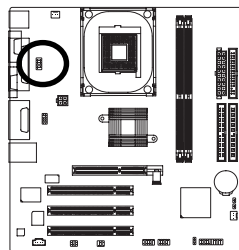

Pin No.	Definition
1	NDCDB-
2	NSINB
3	NSOUTB
4	NDTRB-
5	GND
6	NDSRB-
7	NRTSB-
8	NCTSB-
9	NRIB-
10	No Pin

### 17) CI (Chassis Intrusion, Case Open) \*

This 2-pin connector allows your system to enable or disable the "Case Open" item in BIOS, if the system case begin remove.

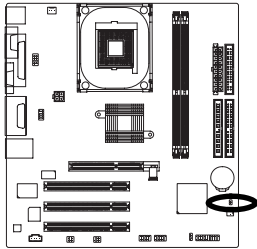

1

Pin No.	Definition
1	Signal
2	GND

\*\*\* Only for 8S661FXM-RZ Rev. 1.1

## Chapter 2 BIOS Setup

Chapter 2 provides an overview of the BIOS Setup Program, which allows users to modify the basic system configurations. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

### ENTERING BIOS Setup

Turning on the computer and pressing <Del> immediately allow you to enter BIOS Setup. If you need more advanced BIOS settings, please press **Ctrl** and **F1** keys on the BIOS main screen to access the the advanced BIOS settings.

### CONTROL KEYS

<↑><↓><←><→>	Move to select item
<Enter>	Select Item
<Esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the file-safe default CMOS value from BIOS default table
<F7>	Load the Optimized Defaults
<F8>	Q-Flash utility
<F9>	System Information
<F10>	Save all the CMOS changes, only for Main Menu

### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

### Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

## The Main Menu (For example: BIOS Ver. : F8c)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

<ul style="list-style-type: none"> <li>▶ Standard CMOS Features</li> <li>▶ Advanced BIOS Features</li> <li>▶ Integrated Peripherals</li> <li>▶ Power Management Setup</li> <li>▶ PnP/PCI Configurations</li> <li>▶ PC Health Status</li> <li>▶ MB Intelligent Tweaker (M.I.T.)</li> </ul>	<ul style="list-style-type: none"> <li>Top Performance</li> <li>Load Fail-Safe Defaults</li> <li>Load Optimized Defaults</li> <li>Set Supervisor Password</li> <li>Set User Password</li> <li>Save &amp; Exit Setup</li> <li>Exit Without Saving</li> </ul>
ESC: Quit	↑↓←→: Select Item
F8: Q-Flash	F10: Save & Exit Setup
Time, Date, Hard Disk Type...	



If you can't find the settings you want, press Ctrl and F1 in BIOS main menu to access the hidden advanced options.

- **Standard CMOS Features**  
This setup page includes all the items in standard compatible BIOS.
- **Advanced BIOS Features**  
This setup page includes all the items of Award special enhanced features.
- **Integrated Peripherals**  
This setup page includes all onboard peripherals.
- **Power Management Setup**  
This setup page includes all the items of Green function features.
- **PnP/PCI Configuration**  
This setup page includes all the configurations of PCI & PnP ISA resources.
- **PC Health Status**  
This setup page includes the information of the System auto-detected temperature, voltage, fan, and speed.
- **MB Intelligent Tweaker (M.I.T.)**  
This setup page allows to control CPU clock and frequency ratio.
- **Top Performance**  
If you wish to maximize the performance of your system, enable Top Performance.
- **Load Fail-Safe Defaults**  
Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.
- **Load Optimized Defaults**  
Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.
- **Set Supervisor Password**  
Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.
- **Set User Password**  
Change, set, or disable password. It allows you to limit access to the system.
- **Save & Exit Setup**  
Save CMOS value settings to CMOS and exit setup.
- **Exit Without Saving**  
Abandon all CMOS value changes and exit setup.

## Standard CMOS Features

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Standard CMOS Features

		Item Help
Date (mm:dd:yy)	Fri, Jan 9 2004	Menu Level▶
Time (hh:mm:ss)	22:31:24	Change the day, month, year
▶ IDE Primary Master	[None]	<Week>
▶ IDE Primary Slave	[None]	Sun. to Sat.
▶ IDE Secondary Master	[None]	<Month>
▶ IDE Secondary Slave	[None]	Jan. to Dec.
Drive A	[1.44M, 3.5"]	<Day>
Drive B	[None]	1 to 31 (or maximum allowed in the month)
Floppy 3 Mode Support	[Disabled]	<Year>
Halt On	[All, But Keyboard]	1999 to 2098
Base Memory	640K	
Extended Memory	127M	
Total Memory	128M	
↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Defaults    F7: Optimized Defaults		

### ☞ Date

The date format is <week>, <month>, <day>, <year>.

- ▶▶ Week      From Sun. to Sat., determined by the BIOS and for display only.
- ▶▶ Month     From Jan. to Dec.
- ▶▶ Day        From 1st to 31st (or the maximum allowed in the month)
- ▶▶ Year       From Year 1999 to 2098

### ☞ Time

The times format in <hour> <minute> <second>. The time is calculated based on the 24-hour military-time clock. For example, 1 p.m. is displayed as 13:00:00.

### ☞ IDE Primary Master, Slave / IDE Secondary Master, Slave

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type automatically detects HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

- ▶▶ Cylinder    Number of cylinders
- ▶▶ Head        Number of heads
- ▶▶ Precomp    Write precomp
- ▶▶ Landing Zone    Landing zone
- ▶▶ Sector      Number of sectors

If a hard disk has not been installed, select NONE and press <Enter>.

### ☞ Drive A / Drive B

The category identifies the types of floppy disk (drive A and drive B) installed in the computer.

- ▶▶ None No floppy disk is installed
- ▶▶ 360K, 5.25" 5.25 inch PC-type standard drive; 360K byte capacity.
- ▶▶ 1.2M, 5.25" 5.25 inch AT-type high-density drive; 1.2M byte capacity (3.5 inch when 3 Mode is Enabled).
- ▶▶ 720K, 3.5" 3.5 inch double-sided drive; 720K byte capacity
- ▶▶ 1.44M, 3.5" 3.5 inch double-sided drive; 1.44M byte capacity.
- ▶▶ 2.88M, 3.5" 3.5 inch double-sided drive; 2.88M byte capacity.

### ☞ Floppy 3 Mode Support (for Japan Area)

- ▶▶ Disabled Normal Floppy Drive. (Default value)
- ▶▶ Drive A Enable Drive A 3 Mode support.
- ▶▶ Drive B Enable Drive B 3 Mode support.
- ▶▶ Both Enable both Drive A and B 3 Mode support.

### ☞ Halt on

The category determines whether the computer will stop if an error is detected during power up.

- ▶▶ All Errors Whenever the BIOS detects a non-fatal error the system will stop.
- ▶▶ No Errors The system boot will not stop for any error that may be detected and you will be prompted.
- ▶▶ All, But Keyboard The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
- ▶▶ All, But Diskette The system boot will not stop for a disk error; it will stop for all other errors.
- ▶▶ All, But Disk/Key The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

### ☞ Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

#### ▶▶ Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

#### ▶▶ Extended Memory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1 MB in the CPU's memory address map.





**⌄ Password Check**

- ▶▶ Setup      The system will boot but will not access to Setup page if the correct password is not entered at the prompt. (Default value)
- ▶▶ System      The system will not boot and will not access to Setup page if the correct password is not entered at the prompt.

**⌄ CPU Hyper-Threading**

- ▶▶ Disabled      Disable CPU Hyper Threading.
- ▶▶ Enabled      Enable CPU Hyper Threading Feature. Please note that this feature is only working for operating system with multi processors mode supported. (Default value)

**⌄ Init Display First**

Select the first initiation of the monitor display from AGP or PCI VGA card.

- ▶▶ PCI      Set Init Display First to PCI.
- ▶▶ AGP      Set Init Display First to AGP. (Default value)



#### ☞ Onboard LAN device

- ▶▶ Enabled Enable Onboard LAN function. (Default value)
- ▶▶ Disabled Disable this function.

#### ☞ USB Controller

- ▶▶ Enabled Enable USB Controller. (Default value)
- ▶▶ Disabled Disable USB Controller.

#### ☞ USB Legacy Support

- ▶▶ Enabled Enable USB Legacy Support.
- ▶▶ Disabled Disable USB Legacy Support. (Default value)

#### ☞ Onboard Serial Port 1

- ▶▶ Disabled Disable onboard Serial port 1.
- ▶▶ 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8. (Default value)
- ▶▶ 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8.
- ▶▶ 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8.
- ▶▶ 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8.
- ▶▶ Auto BIOS will automatically setup the port 1 address.

#### ☞ Onboard Serial Port 2

- ▶▶ Disabled Disable onboard Serial port 2
- ▶▶ 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8.
- ▶▶ 2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8. (Default value)
- ▶▶ 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8.
- ▶▶ 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8.
- ▶▶ Auto BIOS will automatically setup the port 2 address.

#### ☞ Onboard Parallel port

- ▶▶ Disabled Disable onboard LPT port.
- ▶▶ 378/IRQ7 Enable onboard LPT port and address is 378/IRQ7. (Default Value)
- ▶▶ 278/IRQ5 Enable onboard LPT port and address is 278/IRQ5.
- ▶▶ 3BC/IRQ7 Enable onboard LPT port and address is 3BC/IRQ7.

#### ☞ Parallel Port Mode

- ▶▶ SPP Use Parallel port as Standard Parallel Port.
- ▶▶ EPP Use Parallel port as Enhanced Parallel Port.
- ▶▶ ECP Use Parallel port as Extended Capabilities Port. (Default Value)
- ▶▶ ECP+EPP Use Parallel port as ECP & EPP mode.

#### ☞ ECP Mode Use DMA

This feature allows you to select Direct Memory Access(DMA) channel if the ECP mode selected.

- ▶▶ 1 Set ECP Mode Use DMA to 1.
- ▶▶ 3 Set ECP Mode Use DMA to 3. (Default value)

#### Game Port Address

- ▶▶ Disabled      Disable this function.
- ▶▶ 201            Enable gameport and set gameport address to 201. (Default Value)
- ▶▶ 209            Enable gameport and set gameport address to 209.

#### Midi Port Address

- ▶▶ Disabled      Disable this function.(Default Value)
- ▶▶ 300            Enable midiport and set midiport address to 300.
- ▶▶ 330            Enable midiport and set midiport address to 330.

#### Midi Port IRQ

- ▶▶ 5                Set Midi Port IRQ to 5.
- ▶▶ 10              Set Midi Port IRQ to 10. (Default Value)

## Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Power Management Setup

ACPI Suspend Type	[S1(POS)]	Item Help
Soft-Off by PWR_BTTN	[Off]	Menu Level ▶
System After AC Back	[Off]	[S1]
IRQ [3-7, 9-15], NMI	[Enabled]	Set suspend type to
ModemRingOn	[Enabled]	Power On Suspend under
PME Event Wake Up	[Enabled]	ACPI OS
Power On by Keyboard	[Disabled]	
Power On by Mouse	[Disabled]	[S3]
Resume by Alarm	[Disabled]	Set suspend type to
x Month Alarm	NA	Suspend to RAM under
x Day (of Month)	0	ACPI OS
x Time (hh:mm:ss)	0 0 0	
↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Defaults    F7: Optimized Defaults		

#### ACPI Suspend Type

- ▶▶ S1(POS)      Set ACPI suspend type to S1. (Default Value)
- ▶▶ S3(STR)      Set ACPI suspend type to S3.

#### Soft-off by PWR\_BTTN

- ▶▶ Off            Once a user presses the power button, the system will be turned off. (Default Value)
- ▶▶ Suspend      Once a user presses the power button, the system will enter suspend mode.

#### ☞ System after AC Back

- ☞ Off When AC-power back to the system, the system will be in "Off" state. (Default Value)
- ☞ On When AC-power back to the system, the system will be in "On" state.
- ☞ LastState When AC-power back to the system, the system will return to the Last state before AC-power off.

#### ☞ IRQ [3-7, 9-15], NMI

- ☞ Disabled Disable this function.
- ☞ Enabled Enable this function. (Default value)

#### ☞ ModemRingOn

- ☞ Disabled Disable Modem Ring on function.
- ☞ Enabled Enable Modem Ring on function. (Default Value)

#### ☞ PME Event Wake Up

- ☞ Disabled Disable this function.
- ☞ Enabled Enable PME Event Wake up. (Default Value)

#### ☞ Power On by Keyboard

- ☞ Any Key Set Keyboard power on by any key.
- ☞ Password Input password (from 1 to 8 characters) and press Enter to set the Keyboard Power On Password.
- ☞ Disabled Disable this function. (Default Value)

#### ☞ Power On by Mouse

- ☞ Enabled Enable Power On by Mouse function.
- ☞ Disabled Disable this function. (Default Value)

#### ☞ Resume by Alarm

You can enable **Resume by Alarm** and key in month/date/time to turn on system.

- ☞ Disabled Disable this function. (Default Value)
- ☞ Enabled Enable alarm function to POWER ON system.
  - If RTC Alarm Lead To Power On is Enabled.
  - Month Alarm : NA, 1-12
  - Day (of Month) : 0-31
  - Time ( hh: mm: ss ) : (0-23) : (0-59) : (0-59)

## PnP/PCI Configurations

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
PnP/PCI Configurations

PCI 1 IRQ Assignment	[Auto]	Item Help
PCI 2 IRQ Assignment	[Auto]	Menu Level ▶
PCI 3 IRQ Assignment	[Auto]	Device(s) using this INT:
		Display Cntrlr -Bus 1 Dev 0 Func 0
↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Defaults    F7: Optimized Defaults		

### ⏪ PCI 1 IRQ Assignment

- ▶▶ Auto                    Auto assign IRQ to PCI 1. (Default value)
- ▶▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

### ⏪ PCI 2 IRQ Assignment

- ▶▶ Auto                    Auto assign IRQ to PCI 2. (Default value)
- ▶▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

### ⏪ PCI 3 IRQ Assignment

- ▶▶ Auto                    Auto assign IRQ to PCI 3. (Default value)
- ▶▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

## PC Health Status

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
PC Health Status

Reset Case Open Status *	[Disabled]	Item Help
Case Opened *	No	Menu Level ▶
VCORE	1.71V	[Disabled]
DDR2.5V	4.99V	Don't reset case open status
+3.3V	3.29V	[Enabled]
+12V	11.73V	Clear case open status and set to be Disabled at next boot
Current CPU Temperature	27° C	
Current CPU FAN Speed	4821 RPM	
Current SYSTEM FAN Speed	0 RPM	
↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Defaults    F7: Optimized Defaults		

### Reset Case Open Status \*

- ▶▶ Disabled            Don't reset case open status. (Default value)
- ▶▶ Enabled             Clear case open status at next boot.

### Case Opened \*

- If the case is closed, Case Opened will show "No".
- If the case have been opened, **Case Opened** will show "Yes".
- If you want to reset "Case Opened" value, enable **Reset Case Open Status** and save CMOS, your computer will restart.

### Current Voltage (V) VCORE / +3.3V / DDR2.5V / +12V

- ▶▶ Detect system's voltage status automatically.

### Current CPU Temperature

- ▶▶ Detect CPU Temp. automatically.

### Current CPU/SYSTEM FAN Speed (RPM)

- ▶▶ Detect CPU/SYSTEM Fan speed status automatically.

\*\*\* Only for 8S661FXM-RZ Rev. 1.1

8S661FXM-RZ Motherboard

- 32 -



## MB Intelligent Tweaker (M.I.T.)

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
MB Intelligent Tweaker (M.I.T.)

Configure DRAM Timing	[Auto]	Item Help
x Cas Latency Setting	2.5T	Menu Level ▶
x DRAM RAS Active Time	6T	[AUTO] Configure DRAM Timing automatically
x DRAM RAS Precharge Time	3T	[Normal] Configure DRAM Timing by manual
x DRAM RAS to CAS Delay	3T	Warning: Wrong DRAM Timing may make system can't boot. Clear CMOS to overcome wrong Timing issue
CPU Clock Ratio	[10X]	
Linear Frequency Control	[Disabled]	
x CPU Clock (MHz)	100	
x DRAM Clock (MHz)	AUTO	
AGP/PCI Clock Control	[AUTO]	
x AGP Clock (MHz)	66	
x PCI Clock (MHz)	33	
↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Defaults    F7: Optimized Defaults		

### ☞ Configure DRAM Timing

- ▶▶ Auto                    BIOS will automatically setup the DRAM Timing by DRAM SPD data. (Default value)
- ▶▶ Manual                 This item allows user to set DRAM Timing manually.

### ☞ CAS Latency Setting

- ▶▶ 2T/2.5T/3T            Set CAS Latency to 2T/2.5T/3T (Default value is 2.5T).
- ▶▶ Auto                    BIOS will automatically detect CAS Latency.

### ☞ DRAM RAS Active Time

- ▶▶ 4T/5T/6T/7T/8T/9T    Set DRAM RAS Active Time to 4T/5T/6T/7T/8T/9T. (Default value:6T)

### ☞ DRAM RAS Precharge Time

- ▶▶ 3T/2T/4T/5T            Set DRAM RAS Precharge time to 2T/3T/4T/5T. (Default value:3T)

### ☞ DRAM RAS to CAS Delay

- ▶▶ 3T/2T/4T/5T            Set DRAM RAS to CAS Delay to 3T/2T/4T/5T. (Default value:3T)

### ☞ CPU Clock Ratio

This setup option will automatically assign by CPU detection.

#### For Willamette CPU:

8X-23X default: 14X

#### For C-Stepping P4:

8X,10X-24X default: 15X

#### For Northwood CPU:

12X-24X default: 16X

The option will display "Locked" and read only if the CPU ratio is not changeable. ☞

### ☞ Linear Frequency Control

- ▶▶ Disabled                Disable this function. (Default value)
- ▶▶ Enabled                 Enable this function.

#### ☞ CPU Clock (MHz)

- ▶▶ 100-355 Select CPU Clock to 100MHz-355MHz.

If you use FSB400 Pentium 4 processor, please set "CPU Clock" to 100MHz. If you use FSB533 Pentium 4 processor, please set "CPU Clock" to 133MHz. If you use FSB800 Pentium 4 processor, please set "CPU Clock" to 200MHz.

Incorrect using it may cause your system broken. For power End-User use only!

#### ☞ DRAM Clock (MHz)

- ▶▶ Please set DRAM Clock according to your requirement.

If you use DDR200 DRAM module, please set "DRAM Clock(MHz)" to 200. If you use DDR333 DRAM module, please set "DRAM Clock(MHz)" to 333.

Incorrect using it may cause your system broken. For power End-User use only!

#### ☞ AGP/PCI Clock Control

- ▶▶ AUTO Set AGP/PCI clock automatically. (Default Value)

- ▶▶ Manual Set AGP/PCI clock manually.

- ☛ Incorrect using it may cause your system broken. For power End-User use only!

#### ☞ AGP Clock (MHz)

- ▶▶ Please set AGP Clock according to your requirement.


Incorrect using it may cause your system broken. For power End-User use only!

#### ☞ PCI Clock (MHz)

- ▶▶ Please set PCI Clock according to your requirement.

Incorrect using it may cause your system broken. For power End-User use only!

## Top Performance

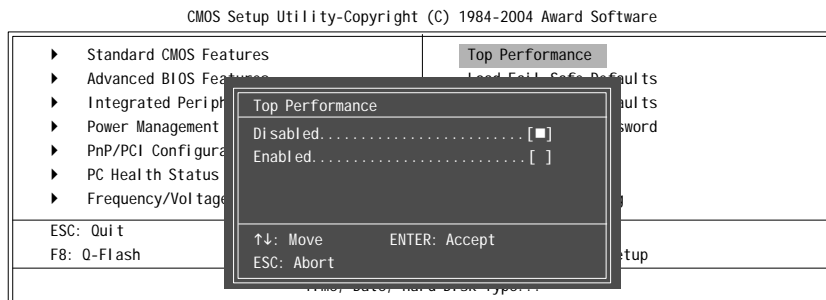


If you wish to maximize the performance of your system, enable "Top Performance."

- ▶▶ Disabled Disable this function. (Default Value)

- ▶▶ Enabled Enable Top Performance function.


☛ "Top Performance" will increase H/W working speed. Different system configuration (both H/W component and OS) will effect the result. For example, the same H/W configuration might not run properly with Windows XP, but works smoothly with Windows NT. Therefore, if your system is not perform enough, the reliability or stability problem will appear sometimes, and we will recommend you disabling the option to avoid the problem as mentioned above.

## Load Fail-Safe Defaults

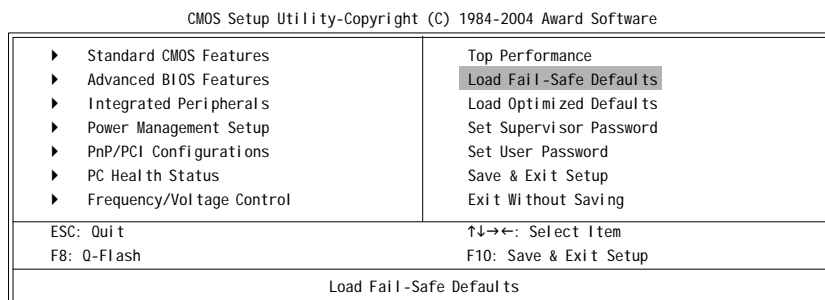


Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

## Load Optimized Defaults

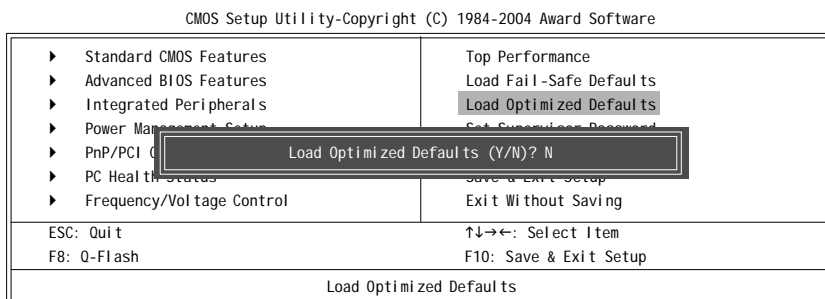

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

## Set Supervisor/User Password

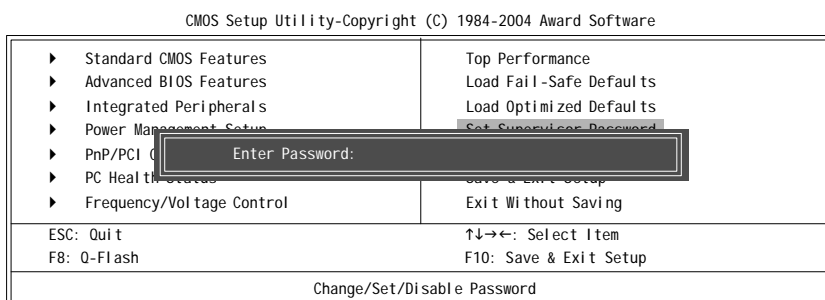

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.


Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password. To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords: SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.you try to enter Setup.


## Save & Exit Setup

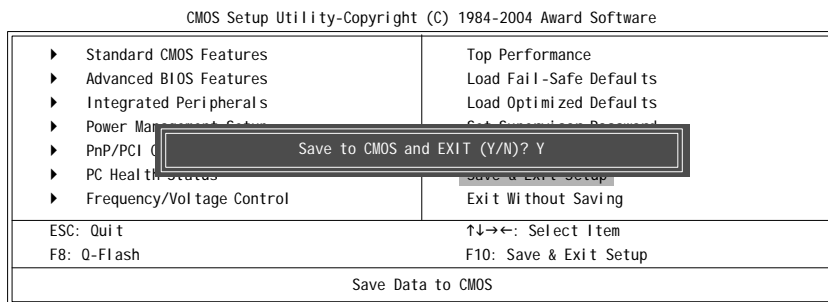

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.

Type "N" will return to Setup Utility.

## Exit Without Saving

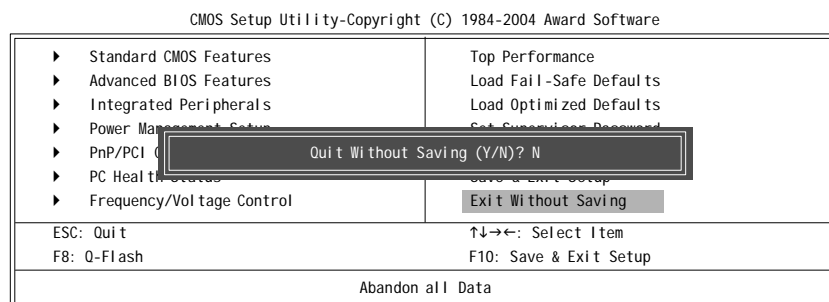

Type "Y" will quit the Setup Utility without saving to RTC CMOS.

Type "N" will return to Setup Utility.

# Chapter 3 Install Drivers


## Install Drivers



**Pictures below are shown in Windows XP**


Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.


### INSTALL CHIPSET DRIVER

This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the  to install the drivers automatically.



Message: Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.

The "Xpress Install" uses the "Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The  will execute the installation for you by itself.

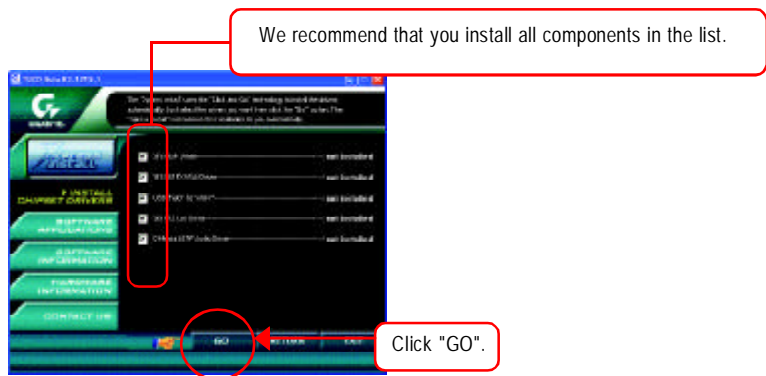



Driver install finished!! you have to reboot system!!

### Item Description

- **SIS AGP Driver**  
AGP interface driver for SiS series chipset.
- **SIS 661FX VGA Driver**  
VGA driver for VGA integrated SiS 661FX chipset.
- **USB Patch for WinXP**  
This patch driver can help you to resolve the USB device wake up S3 hang up issue in XP.
- **SIS PCI Lan Driver**  
SiS Series Lan driver.
- **C-Media AC97 Audio Driver**  
Audio driver for C-Media AC97 codec chipset.
- **SIS USB 2.0 Driver**  
USB2.0 driver for SiS series chipset.



If your CD doesn't have SiS® USB2.0 driver, please download the USB2.0 driver from Microsoft® website ([www.microsoft.com](http://www.microsoft.com)) for USB2.0 devices support. Please also note that Microsoft® USB2.0 driver is currently supported by Windows XP and Windows 2000 only.

Once we get the latest SiS® USB2.0 driver for Windows 98 and Windows ME, we will put the driver on GIGABYTE website asap. (<http://www.gigabyte.com.tw>).



For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).



## CONTACT US

Contact us via the information in this page all over the world.

---

- **Taiwan**

Gigabyte Technology Co., Ltd.  
Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien, Taiwan, R.O.C.  
Tel: 886 (2) 8912-4888  
Fax: 886 (2) 8912-4003  
Tech. Support:  
<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>  
Non-Tech. Support (Sales/Marketing issues):  
<http://gfts.gigabyte.com.tw/nontech.asp>  
Website: <http://www.gigabyte.com.tw>

---

- **USA**

G.B.T. INC.  
Address: 17358 Railroad St, City of Industry, CA 91748.  
Tel: 1 (626) 854-9338  
Fax: 1 (626) 854-9339  
Tech. Support:  
<http://www.giga-byte.com/TechSupport/ServiceCenter.htm>  
Non-Tech. Support (Sales/Marketing issues):  
<http://gfts.gigabyte.com.tw/nontech.asp>  
Website: <http://www.giga-byte.com>

---

- **Germany**

G.B.T. Technology Trading GmbH  
Tel: 49-40-2533040  
49-01803-428468 (Tech.)  
Fax: 49-40-25492343 (Sales)  
49-01803-428329 (Tech.)  
Tech. Support:  
<http://de.giga-byte.com/TechSupport/ServiceCenter.htm>  
Non-Tech. Support (Sales/Marketing issues):  
<http://gfts.gigabyte.com.tw/nontech.asp>  
Website: <http://www.gigabyte.de>

---

- **Japan**

Nippon Giga-Byte Corporation  
Website: <http://www.gigabyte.co.jp>

---

- **U.K**

G.B.T. TECH. CO. LTD.  
Tel: 44-1908-362700  
Fax: 44-1908-362709  
Tech. Support:  
<http://uk.giga-byte.com/TechSupport/ServiceCenter.htm>  
Non-Tech. Support (Sales/Marketing issues):  
<http://gfts.gigabyte.com.tw/nontech.asp>  
Website: <http://uk.giga-byte.com>

---

- **The Netherlands**

Giga-Byte Technology B.V.  
Address: Verdunplein 8 5627 SZ, Eindhoven, The Netherlands  
Tel: +31 40 290 2088  
NL Tech.Support : 0900-GIGABYTE (0900-44422983, ☎ 0.2/M)  
BE Tech.Support : 0900-84034 (☎ 0.4/M)  
Fax: +31 40 290 2089  
Tech. Support:  
<http://nz.giga-byte.com/TechSupport/ServiceCenter.htm>  
Non-Tech. Support (Sales/Marketing issues):  
<http://gfts.gigabyte.com.tw/nontech.asp>  
Website: <http://www.giga-byte.nl>

---

- **China**

NINGBO G.B.T. Tech. Trading CO., Ltd.  
Tech. Support:  
<http://cn.giga-byte.com/TechSupport/ServiceCenter.htm>  
Non-Tech. Support (Sales/Marketing issues):  
<http://gfts.gigabyte.com.tw/nontech.asp>  
Website: <http://www.gigabyte.com.cn>

Beijing

Tel: 86-10-82856054, 86-10-82856064, 86-10-82856094  
Fax: 86-10-82856575

Chengdu

Tel: 86-28-85236930  
Fax: 86-28-85256822

GuangZhou

Tel: 86-20-87586273  
Fax: 86-20-87544306

Shanghai

Tel: 86-21-64737410  
Fax: 86-21-64453227

Shenyang

Tel: 86-24-23960918, 86-24-23960893

Wuhan

Tel: 86-27-87854385, 86-27-87854802  
Fax: 86-27-87854031

Xian

Tel: 86-29-5531943  
Fax: 86-29-5539821



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>