

 
# THE SHARPER IMAGE®

**Salon Pro**  
Ionic Conditioning  
Hair Dryer™  
SI749 Instructions

**SHARPER IMAGE DESIGN™**

CONTAINS IMPORTANT  
SAFETY INFORMATION

READ AND SAVE THESE  
INSTRUCTIONS

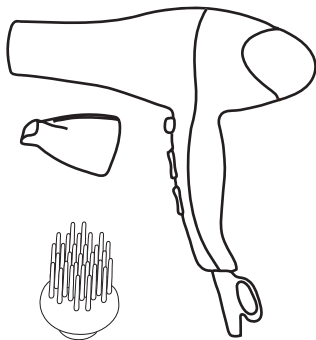

Dear Customer,

Thank you for your purchase of a Sharper Image Design™ product. You have received a quality product, backed with a three-year warranty. Your satisfaction as a Sharper Image® customer means everything to us. We look forward to serving you now and in the future.

Many other affordable, fun, and useful products are available through The Sharper Image® catalog, [sharperimage.com](http://sharperimage.com), and The Sharper Image® retail stores. To receive a copy of our catalog or for the address of the store nearest you, please call our toll-free number 1-800-344-4444.

Enjoy your purchase!



Richard Thalheimer  
Founder and Chairman

**[www.sharperimage.com](http://www.sharperimage.com)**

Shop our complete Internet catalog.

Online ordering is protected by  
Secure Sockets Layer technology.

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.  
KEEP AWAY FROM WATER.**

**DANGER** - As with most electrical appliances, electrical parts are electrically live even with the switch off.

**To reduce the risk of death by electric shock:**

- Always unplug this unit immediately after using.
- Do not use while bathing or showering.
- Do not place or store appliance where it can fall or be pulled into the tub or sink.
- Do not place or drop into water or other liquid.
- If appliance falls into water, unplug immediately. Do not reach into the water while the unit is plugged in.

**WARNING** - To reduce the risk of burns, electrocution, fire or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or the physically challenged.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.

**SAFETY INSTRUCTIONS continued next page**

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING** - To reduce the risk of burns, electrocution, fire or injury to persons:

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center or place of purchase for examination or repair.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface such as a bed or couch, where the openings may be blocked. Keep the air openings free of lint, hair and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors, or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air toward the eyes or other heat sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air intakes.
- Do not use an extension cord with this appliance.
- Do not operate with a voltage converter.

**SAVE THESE INSTRUCTIONS**

# ALCI Safety Plug

 
This appliance is intended for HOUSEHOLD USE ONLY. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized plug outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## Immersion Shock Protection Safety Plug

Due to continuous improvements, the appearance of your Safety Plug may vary from the illustration.

### CHECK ALCI WITH EACH USE:

The hair dryer is provided with a protective device (ALCI) that may make the appliance inoperable under some abnormal conditions (such as immersion of the unit). This device is equipped with a test button so that its operation can be checked. To ensure the plug is safe, it should be checked each time before use.

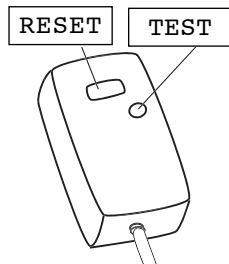


- Plug into power outlet.
- Press the RESET button.
- Press the TEST button, the RESET button should pop up.
- For use, press the RESET button again. Do not use if test fails.
- If plug fails or immersion occurs, this unit should be brought to a service center for examination and repair. Do not try to use it again.

### IF HAIR DRYER STOPS:

 Disturbances in your electrical current can trigger the safety plug. Press the RESET button until it clicks. Your dryer will resume operation.

## Advanced Features

Advanced high-velocity airflow technology gives this energy-efficient 1500-watt conditioning hair dryer the same speed and styling power as a competing 1875-watt hair dryer.

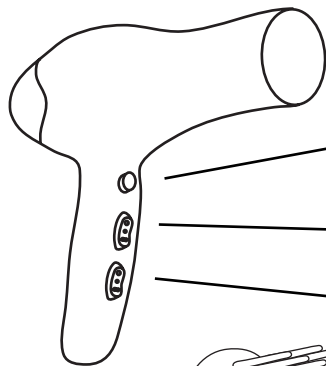

Features independent high-low selectors for both air speed and heat.

“Cold Shot” turns off the heat but maintains air-flow. Press and hold for cool air.

High/Low/Off selection for heat.

High/Low/Off selection for airflow.

Volumizer attachment spreads heat over a large area, focusing it deep into hair's roots.

## Operation

Caution: While it is operating, never obstruct the air intake or outlet and do not place this appliance on any surface.

Attach Concentrator for easier styling.

Dry hair as you normally would with a standard dryer.

 
Avoid over-drying, which can cause hair to become brittle and damaged.



AIR INTAKE

REMOVABLE  
LINT FILTER

AIR OUTLET

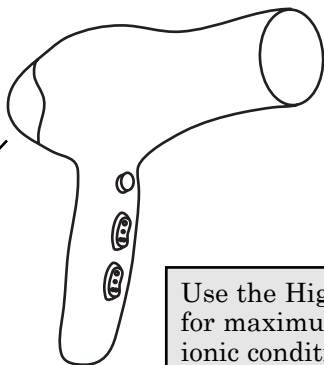

Use the High power setting for maximum ion flow and ionic conditioning.

# Volumizer

## Basic Technique for Adding Volume:

Use the hair dryer without the volumizing attachment first. Keep the dryer at least 8" from your hair to prevent damage.

Start with high speed and temperature, keeping the dryer pointing down the hair shaft. (This gives maximum volume and helps the hair achieve a shiny appearance.)

 
When the hair is about half dry, reduce speed and heat.

Attach the volumizer.

Bend your head forward. Starting at the base of the neck and working side to side in small rows, rotate the dryer tip with volumizer fingers about a quarter turn to wrap the hair root and lift out. Work to the front of the head.

(Repeat as necessary to completely dry your hair.)

Finish by holding in the COOL SHOT button and comb the volumizer fingers through the length of your hair (in the direction your hair naturally falls).

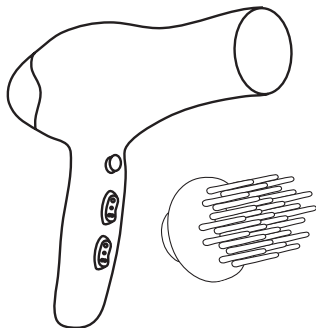




## User Maintenance Instructions

When not in use, unplug the dryer, allow it to cool and store it in its box or in a dry place. Never store it while it is hot or still plugged in. Never wrap the cord tightly around the appliance. Never hang the appliance by the cord. Do not put any stress on the cord where it is attached to the dryer as this could cause the cord to fray and break.

This dryer is virtually maintenance free. No lubrication is needed. Keep all openings clear of dirt, dust and hair.

Unplug the dryer and use a damp cloth to wipe away accumulated dirt or oils from the exterior. The dust filter may be removed by pulling the tabs on the sides of the cover toward the rear and cleaned using warm sudsy water. Allow the filter to dry before returning it to the unit.

 This appliance is equipped with a built-in safety device which operates if extreme internal heating should occur. If this happens, the dryer automatically switches to cool air only. Normal functioning will resume after several seconds.

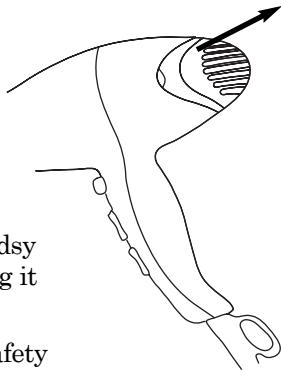

## Stand Accessory

The stand accessory can be used to store your hair dryer or to hold the dryer while it operates, freeing both hands for styling.

Squeeze the buttons on the side of the stand to adjust the angle to your preference.

The handle of the dryer can be slipped into the stand, with the cord guided through the open slot.

**DO NOT leave the hair dryer unattended when the power is turned on.**

# FULL THREE-YEAR WARRANTY

## What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

## How Long Coverage Lasts

This warranty runs for three years from the date of original purchase.

## What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

## What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

## How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department  
2901-A West 60th Street  
Little Rock, AR 72209

## If You Have Questions

Please feel free to contact our customer service representatives at 1-800-344-5555 or by email at [care@sharperimage.com](mailto:care@sharperimage.com).

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2002 Sharper Image Corporation

Made in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>