


## Replaces existing doorbell button

Note: This button is not recommended for use on systems which exceed 16 volts.

### Installation

Push buttons are typically mounted at the same height above the door sill as the door knob or handle between 36" and 44" above the sill. Locate the two door chime wires emanating from the existing door

chime circuit. Test the door chime by touching the two wires together, completing the circuit. If door chime does not sound, check transformer or chime. Turn off power. Attach one wire to each of the screw terminals on the back of the button. Mount button in desired location with two screws provided. Install according to applicable local electrical codes.

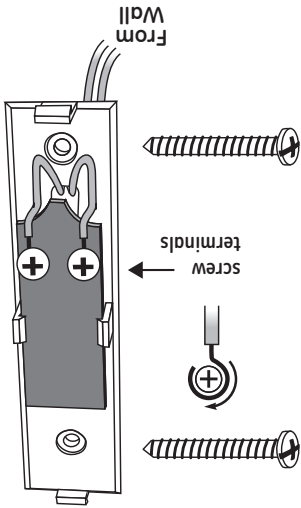

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>