













Find your way!

Color coded packaging

JOB Energy PREMIO batteries feature a unique color coding system making it easy to find the right rechargeable battery!

Simply match your camera manufacturer to the corresponding color and pick the right battery type.

	Canon		PANASONIC
	SONY		FUJIFILM
	KODAK		PENTAX
	OLYMPUS		CASIO
	SAMSUNG		Konica Minolta
	NIKON		Sonstige

ENERGY

PREMIO LINE

Key Features JOB PREMIO Rechargeable Batteries

- High-quality JOB PREMIO rechargeable (Li-Ion) batteries provide a constant capacity across many charging cycles (300 to 500 depending on usage)
- JOB PREMIO batteries do not have a memory effect, are high current and quick charge capable
- Precision contacts guarantee maximum energy transfer
- Built-in fuse protects the battery's electronic microchip against short circuiting, overcharging and overheating
- Built-in temperature sensor (Polyswitch) offers optimum security against overheating and explosion
- Continuous quality checks for the entire PREMIO line of batteries to ensure the highest product quality
- ISO 9001 / 9002 / QS 9000 certified

PREMIO Batteries



Rechargeable batteries for most popular digital cameras and camcorders



JOB0 offers replacement batteries for the following original batteries:

Canon

BP-208, BP-2L12, BP-2L13, BP-2L14, BP-2L5, BP-308, BP-310, BP-315, BP-405, BP-406, BP-407, BP-412, BP-422, BP-508, BP-511, BP-511A, BP-512, BP-514, BP-522, BP-535, BP-608 BP-608, BP-608A, BP-617, BP-711, BP-714, BP-718, BP-722, BP-E818, BP-726, BP-729, BP-E77, BP-915, BP-930, BP-945, NB-1L, NB-1LH, NB-2L, NB-2LH, NB-3L, NB-4L, NB-5L NB-5H, NP-E3

Casio

NP-20, Casio NP-30, Creative NP-60, Fuji Film NP-60, HP: A1812A, L1812A, L1812B, Photosmart R07, Q2232-80001, Kodak Klic-5000, Olympus Li-20B, Panasonic: CGA-S301, CGA-S302A, CGA-S302A/1B, CGA-S302E/1B, CGR-S301, VW-VBA10, VW-VBA20, VW-VBA21, Petax: D-LI2, Ricoh DB-40, Rollei DP-5300, Samsung: SBL-1037, SBL-1137, Toshiba PDR-BT3, Yaesu FNB-82LI, NP-40, NP-50

Epson

EU-94/L-500V, EU-97/P2000, Samsung SBL-1237

Fuji Film

NP-30, Benq LI-102, Fuji Film NP-40, Petax D-LI8, Samsung SBL-0737, Fuji Film NP-50, Pentax D-Li68, Fuji Film NP-70, LEICA: BP-DC04-E, BP-DC4, Panasonic: BP-DC4-J, BP-DC4-U, CGA-S005, CGA-S005A, CGA-S005A/1B, CGA-S005E, CGA-S005E/1B, DMW-BCC12, Ricoh DB-60, Epson EU-85, Fuji Film NP-80, Kodak Klic-3000, Kyocera BP-1100, Leica NP-80, Ricoh DB-20, Toshiba: PDR-BT1, PDR-BT2, PDR-BT2A, NP-95, Fuji Film NP-100, JVC: BN-V101, BN-V101E, DDNP-100, Ricoh DB-30, Toshiba NP-100, Fuji Film NP-120, Kyocera BP-1500S, Pentax D-LI7, Ricoh DB-43, NP-150

Hitachi

Hitachi: DZ-BP07S, DZ-BP14S, DZ-BP14SJ, DZ-BP14SW, DZ-BP21SJ, DZ-BP7S, DZ-BP7SJ, DZ-BP7SW, Panasonic: CGA-DU06, CGA-DU06A/1B, CGA-DU07, CGA-DU07A/1B, CGA-DU07E/1B, CGA-DU12, CGA-DU12A/1B, CGA-DU14, CGA-DU14A/1B, CGA-DU14E/1B, CGA-DU21, CGA-DU21A, CGA-DU21A/1B, CGA-DU21E/1B, CGR-DU07, VW-VBD070, VW-VBD120-H, VW-VBD140, VW-VBD210, Hitachi: DZ-BP14, DZ-BP14R, DZ-BP16, DZ-BP28, PANASONIC: CGA-D07S, CGP-D110, CGP-D14, CGP-D14S, CGP-D210, CGP-D28, CGP-D28A/1B, CGP-D28S, CGP-D28SE/1B, CGP-D320, CGP-D320T1B, CGR-D08, CGR-D08A/1B, CGR-D08R, CGR-D08S, CGR-D08SE/1B, CGR-D120, CGR-D120E/1B, CGR-D120T, CGR-D14, CGR-D16, CGR-D16A/1B, CGR-D16S, CGR-D16SE/1B, CGR-D210, CGR-D220, CGR-D220A, CGR-D220A/1B, CGR-D220E/1B, CGR-D28A/1B, CGR-D28S, CGR-D320, CGR-D320A/1B, CGR-D320E/1B, VBS0419, VSB0418, VW-VBD21, VW-VBD22, VW-VBD25, VW-VBD33, VW-VBD35, VW-VBD40, DZ-BP28

JVC

BN-V107, BN-V114, BN-V306, BN-V312, BN-V408, BN-V416, BN-V428, BN-V438, BN-V507, BN-V514, BN-V607, BN-V615, BN-V712, BN-V714, BN-VF707, BN-VF714, BN-VF733, JVC: BN-VF808, BN-VF815, BN-VF823, BN-VM200, BN-V11U, BN-V12U, BN-V14U, BN-V18U, BN-V20U, BN-V22U, BN-V24U, BN-V25U, Panasonic: HHR-V20A/1B, HHR-V214A/K, HHR-V40A/1B, PV-BP15, PV-BP17, VW-VBH1E, VW-VBH2E, VW-VBR1E, VW-VBR2E, VW-VBS1, VW-VBS1E, VW-VBS2, VW-VBS2E, BN-V20, BN-V6GU, BN-V7GU, BN-V8GU, BN-BP31

Kodak

Klic-5001, Klic-7000, Klic-7001, Klic-7002, Klic-7003, Klic-8000, DB-50

Konica

Konica DR-LB1, Kyocera: BP-800S, BP-900S, BP-1000S, Toshiba PDR-BT9, DR-LB4, Konica DR-LB4, Minolta: NP-500, NP-600

Kyocera/Yashica

BP-760S, BP-780S, BP-800S, BP1100S

Leica

Leica BP-DC1, BP-DC3, Panasonic: CGR-S602, DMW-BL14, Leica BP-DC2, Panasonic: CGA-S001, CGA-S001A/1B, CGA-S001E, CGA-S001E/1B, CGR-S001, DMW-BCA7, Leica BP-DC5, Panasonic: CGA-S006, DMW-BMA7

Minolta

Minolta NP-1, Samsung SBL-0837, NP-200, Minolta NP-400, Pentax D-LI50, Minolta NP-700, Sanyo DB-L30, Minolta NP-800, Nikon EN-EL1, NP-900

Nikon

EN-EL2, EN-EL3, EN-EL3e, EN-EL4, EN-EL5, EN-EL7, EN-EL8, EN-EL9

Olympus

BLM1, BLS-1, Olympus: Li-10B, Li-12B, Sanyo DB-L10, Li-30B, Nikon EN-EL10, Olympus: Li-40B, Li-42B, Pentax D-LI63

Panasonic

CGA-D54, VW-VBD55, CGA-S002, CGR-S002, DMW-BM7, CGA-S303, VW-VBE10, CGA-S004, DMW-BCB7, CGA-S007, DMW-BCD10, CGR-S101E, DMW-BC7, CGR-V114S, CGR-V14, CGR-V26S, CGR-V610, CGR-V620, CGR-V620T, CGR-V620T/1B, Panasonic DMW-BCE10, Ricoh DB-70, Panasonic: HHR-V20, HHR-V211, HHR-V212, HHR-V40, P-V211, P-V212, VSB0200, VW-VBS10, VW-VBS20, CGA-DU07, CGA-DU14, CGA-DU21, HHR-V212, CGA-D110

Pentax

D-Li73

Rollei

Prego 8330

Samsung

SB-L110, SB-L220, SB-L70, SBL-220, SBL-110G, SBL-110G, SBL-70G, SBL-160, SB-L110A, SB-L160, SB-L320, SB-L480, SBL-1137, CSBL-1137C, SBL-1437, SBL-1437, SBL-1974, SBL-1974, SB-LH82, SB-LH82, SB-LSM80, SB-LSM80, SB-LSM160, SB-LSM330, SB-P90A, SB-P90A, DB-L20, DB-L20, DB-L40, DB-L40,

Sharp

BT-70, BT-80BK, BT-BH70, BT-H21, BT-H22, BT-H32, BT-H42, BT-L221, BT-L241, BT-L441, VR-BL90, VR-BL93, VR-BLF20, VR-BLF21, VR-BLF40, VR-BLF41, BT-L225, BT-L445, BT-L665, VR-BLN10, VR-BLN20, VR-BLN8, BT-L226, VR-BL1, VR-BL7, VR-BLZ

Sony

NP-BG1, NP-FG1, NP-FA50, NP-FA70, NP-FC10, NP-FC11, NP-FE1, NP-FF50, NP-FF51, NP-FF70, NP-FF71, NP-FM55H, NP-FM30, NP-FM50, NP-FM51, NP-QM50, NP-QM51, NP-FM30, NP-FM50, NP-FM51, NP-FM70, NP-FM71, NP-FM90, NP-FM91, NP-QM50, NP-QM51, NP-QM70, NP-QM71, NP-QM71D, NP-QM90, NP-QM91, NP-QM91D, NP-FM30, NP-FM50, NP-FM51, NP-FM70, NP-FM71, NP-FM90, NP-FM91, NP-QM50, NP-QM51, NP-QM70, NP-QM71, NP-QM71D, NP-QM90, NP-QM91, NP-QM91D, NP-FP50, NP-FP70, NP-FP90, NP-FP50, NP-FP70, NP-FP90, NP-FP50, NP-FP70, NP-FR1, NP-F10, NP-F20, NP-F30, NP-FS10, NP-FS11, NP-FS12, NP-FS20, NP-FS21, NP-FS22, NP-FS30, NP-FS31, NP-FS32, NP-FS33, NP-FT1, NP-F330, NP-F530, NP-F550, NP-F330, NP-F530, NP-F550, NP-F570, NP-F750, NP-F770, NP-F930, NP-F950, NP-F950/B, NP-F960, NP-F970, NP-1, NP-1A, NP-1B, NP-1H, NP-55, NP-66, NP-77, NP-88, NP-98, NP-99

Toshiba

GSC-BT5

Battery grips

Canon 350D / 400D, Nikon D40, Nikon D80

CR-types

CR-V3, CR-V3 + Charger, CR-123, CR-123 + Charger



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>