

JVC**AC POWER ADAPTER/CHARGER INSTRUCTIONS****AA-V90EK**

 
Thank you for purchasing the JVC AC Power Adapter/Charger. This unit provides DC power for the JVC Digital Video Camera from a household AC outlet. It can be used to recharge the JVC battery pack for exclusive use with the JVC Digital Video Camera, and is capable of charging two battery packs consecutively. To avoid problems and obtain the best results, please read this instruction booklet carefully before use. Before using as a power adapter, make sure that this unit's model number is the same as that of the power supply unit specified in the instruction manual of the equipment you wish to power.

IMPORTANT**Connection to the mains supply in the United Kingdom.**

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

BE SURE to replace the fuse only with an identical approved type, as originally fitted, and to replace the fuse cover.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply. If this product is not supplied fitted with a mains plug then follow the instructions given below: **DO NOT** make any connection to the Larger Terminal coded E or Green. The wires in the mains lead are coloured in accordance with the following code:



If these colours do not correspond with the terminal identifications of your plug, connect as follows:

Blue wire to terminal coded N (Neutral) or coloured black.
Brown wire to terminal coded L (Live) or coloured Red.

If in doubt — consult a competent electrician.

CAUTION:

When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from AC outlet.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

This unit should be used with AC 110 – 240 V~, 50/60 Hz only.

CAUTION:

To prevent electric shocks and fire hazards, do NOT use any other power source.

CAUTION:

To prevent electric shock, do not open the cabinet. No user serviceable parts inside. Refer servicing to qualified service personnel.

NOTE:

The rating plate (Serial number plate) is on the bottom of the unit.

As a AC Power Adapter/Charger, the AA-V90EK is used exclusively with the JVC Digital Video Camera.

CAUTIONS:

- If used near a radio, this unit may interfere with reception.
- Prevent inflammables, water and metallic objects from entering the unit.
- Do not disassemble or modify the unit.
- Do not apply shocks to the unit.
- Do not subject the unit to direct sunlight.
- Avoid using the unit in extremely hot or humid places.
- Avoid using the unit in places subject to vibrations.

A WORD ON THE EXCLUSIVE BATTERY PACKS, BN-V907U

The battery packs are lithium-ion.

Give attention to the following to make the most of their characteristics.

 
For charging: 10°C to 35°C

For operating: 0°C to 40°C

For storing: -10°C to 30°C

CHARGING THE BATTERY PACK

You can charge one battery pack at a time, or two consecutively.

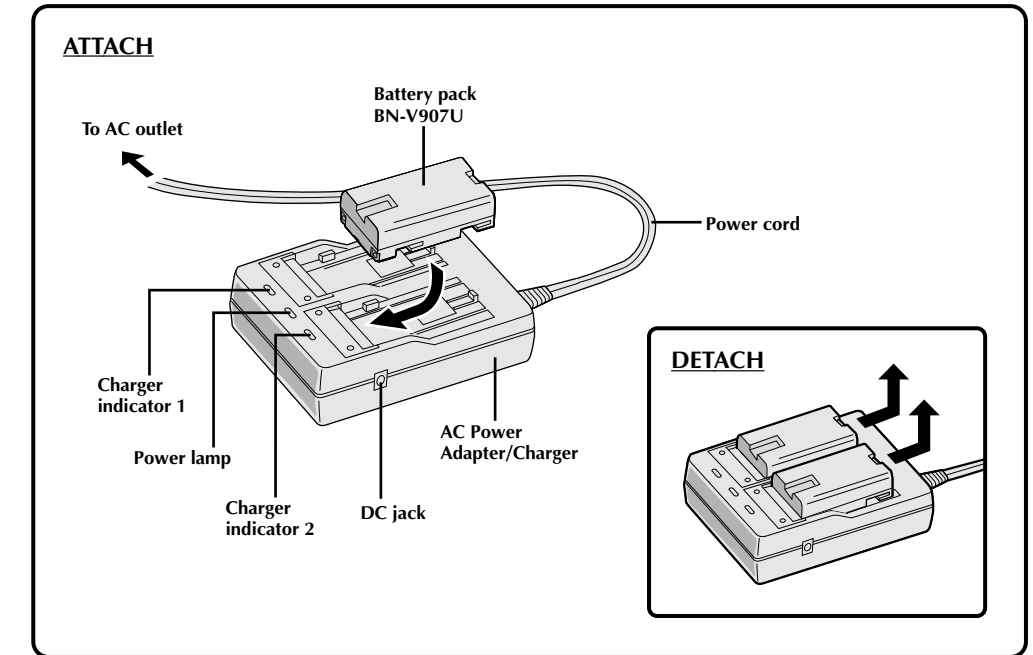**1 SUPPLY POWER TO CHARGER**

Plug the AC Adapter/Charger's power cord into an AC outlet. The power indicator comes on.

2 ATTACH BATTERY/BATTERIES

Remove the battery pack's protective cap and attach while making sure the ⊕⊖ marks are facing down and aligned with the corresponding marks on the AC Power Adapter/Charger.

3 CONFIRM STATUS

When the charger indicator stops blinking but stays lit, charging is finished.

- The Charge Indicator (1 or 2) begins blinking to indicate charging has started.
- If two batteries are attached to the charger, they will be charged in the order that they were attached.

4 DETACH BATTERY/BATTERIES

Slide the battery or batteries in the direction of the arrow and lift off.

- Remember to unplug the AC Adapter/Charger's power cord from an AC outlet.

NOTE:

Perform charging where the temperature is between 10° and 35°C. (20°–25°C is the ideal temperature range for charging.) If the environment is too cold, charging may be incomplete.

BATTERY PACK CHARGING TIME


BATTERY	ONE	TWO
BN-V907U	approx. 100 min.*	approx. 200 min.*

* When charged at temperatures between 20° and 25°C.

- When charging Battery Packs after a long storage period, charging time will be longer than the time indicated above.

SUPPLYING POWER

 You can connect the camcorder or its Docking Station directly to an AC outlet using the AA-V90EK AC Power Adapter/Charger.

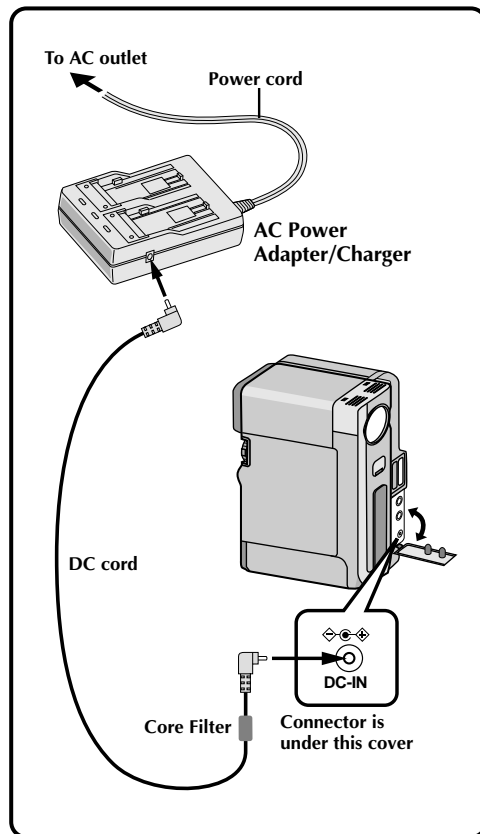

Indoor Use

When using the camcorder indoors, you can use the AC Adapter instead of a battery.

- 1 SUPPLY POWER TO ADAPTER**
Plug the AC Adapter/Charger's power cord in to an AC outlet.
- 2 SUPPLY POWER TO CAMCORDER**
Connect the AC Adapter to the camcorder.

NOTE:

When using the provided DC cord, make sure you connect the end of the cable with the core filter to the camcorder. The core filter improves performance of equipment.

DURING USE . . .

- The AC Power Adapter/Charger AA-V90EK is specifically designed to charge BN-V907U Battery Packs.
- When charging a brand new Battery Pack, or one that's been in storage for an extended period, the Charging Indicator may not come on. In this case, remove the Battery Pack, then reattach and try charging again.
- If you connect the DC Cord to the DC Connector while a Battery Pack is being charged, power will be supplied to the camcorder and charging will end incomplete.
- Vibration noise can sometimes be heard coming from the inside of the AC Power Adapter/Charger. This is normal.
- The AC Power Adapter/Charger processes electricity internally, and will become warm during use. This is normal. Make sure to use the AC Power Adapter/Charger in well-ventilated areas only.
- If the battery operation time remains extremely short even after having been fully charged, the battery is worn out and needs to be replaced. Please purchase a new one.

SPECIFICATIONS

Power	AC 110 — 240 V, 50/60 Hz
Power consumption	20 W
Output power	DC 7.2 V, 0.75 A (When charging) DC 6.3 V, 1.8 A (When supplying power)
Operating temperature	0 — 40°C
Charging temperature	10 — 35°C
Dimensions	94 (W) x 36 (H) x 122 (D) mm
Weight	Approx. 380 g

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>