

# LCD/Blu-ray Disc Combo TV Software Update Procedure

This document describes the procedure to update the software for LCD/Blu-ray Disc Combo TV:

## LT-42B300

### > Tools Required

In preparing for the software update, you must meet the following requirements:

- Access to a PC capable of extracting ZIP archive files
- Access to a PC capable of writing one of the following formats DVD-RW / DVD-R / CD-RW / CD-R (*Only for Blu-ray Player's Software Updating*)

### For Blu-ray Player's Software Update

#### > Step 1 Check the Blu-ray Player's Current Software Version

1. Turn on the unit
2. Press [SETUP] to display the main menu
3. Use [Cursor ▲/▼] to select "BLU-RAY", then press [ENTER]
4. Use [Cursor ▲/▼] to select "⦿", then press [ENTER]
5. Use [Cursor ▲/▼] to select "⚙️", then press [ENTER]
6. Use [Cursor ▲/▼] to select "Software Upgrade", then press [ENTER]
7. Use [Cursor ▲/▼] to select "Current Version", then press [ENTER]

The Blu-ray Player's current software version will be shown on your TV screen



#### > Step 2 Download the Latest Software for Blu-ray Player

1. Visit [firmware.jvc.com](http://firmware.jvc.com)
2. Download the update software for the Blu-ray Player
3. Save the downloaded file to your desktop

#### > Step 3 Unzip and Burn the Contents

Once you have downloaded the correct software for your LCD/Blu-ray combo TV, extract the ZIP file and burn it to a disc

**Note: This procedure will vary depending on the operating system and software you are using**  
**Please refer to the software manufacturer's instructions**

#### > Step 4 Install the Software Update for the Blu-ray Player

Once you have created a software update disc, follow the procedure below to update the software on the unit

**Note: Only Blu-ray settings will be reset to default during update process**

1. Turn on the unit
2. Press [SETUP] to display the main menu
3. Use [Cursor ▲/▼] to select "BLU-RAY", then press [ENTER]
4. Use [Cursor ▲/▼] to select "⦿", then press [ENTER]
5. Use [Cursor ▲/▼] to select "⚙️", then press [ENTER]
6. Use [Cursor ▲/▼] to select "Software Upgrade", then press [ENTER]
7. Use [Cursor ▲/▼] to select "Disc Upgrade", then press [ENTER]
8. Use [Cursor ▲/▼] to select "Yes", then press [ENTER]



9. Insert the software update disc you created in Step 3 into the disc slot of the Blu-ray Player  
The unit will begin to load the disc automatically



**Note:** If the disc does not load or you receive the error message, check your disc and try again.  
Acceptable disc formats are DVD-RW / DVD-R / CD-RW / CD-R.

10. After a brief delay, the “Current Version” and “Insert Version” of Blu-ray Player’s software will be shown on the TV screen  
Use [Cursor ◀ / ▶] to select “Yes”, then press [ENTER]  
The unit will begin to read the disc




**Note:** If the latest Software Version is already installed, a message will appear indicating this  
Press [BACK] to exit the software update

11. After a brief delay, the update process will begin automatically  
**DO NOT TURN OFF THE UNIT AT THIS TIME**



12. After the software update has completed successfully, the "Finish" message will be shown at the bottom right of the TV screen

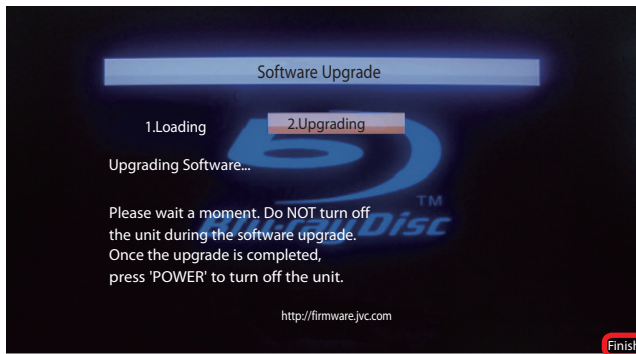

13. Turn off the LCD/Blu-ray Combo TV and wait 30 seconds
14. Turn on the LCD/Blu-ray Combo TV. The software update disc will be ejected automatically  
The Blu-ray Player's software update is now complete

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>