

**JD**  
JENDIGITAL **10.0z3 EasyShot**

# *User's Guide*




## Table of Contents

<b>GETTING STARTED</b> .....	<b>3</b>
STANDARD ACCESSORIES.....	3
<i>Attaching the Wrist Strap</i> .....	3
<i>Using the Soft Case</i> .....	4
NAMES OF PARTS.....	4
INSERTING THE BATTERIES.....	5
<i>Low Battery Indicator</i> .....	5
INSERTING A MEMORY CARD.....	5
<i>About Camera Memory</i> .....	6
<i>DCF Protocol</i> .....	6
SETTING THE DATE AND TIME.....	6
<b>BASIC OPERATIONS</b> .....	<b>7</b>
TURNING THE POWER ON AND OFF.....	7
<i>Power Saving Function</i> .....	7
SWITCHING BETWEEN RECORD AND PLAYBACK.....	7
USING THE MENUS.....	8
<i>Recording Menu / Playback Menu</i> .....	8
<i>ADJ. Menu</i> .....	9
<i>Setup Menu</i> .....	9
USING THE LCD MONITOR.....	11
<i>LCD Screen Indicator</i> .....	11
<i>Switching the Screen Display</i> .....	11
<b>RECORDING</b> .....	<b>12</b>
RECORDING STILL IMAGES.....	12
<i>Using the Zoom Function</i> .....	12
<i>Using the Flash</i> .....	13
<i>Using the Self-timer &amp; Burst</i> .....	13
<i>Using the Macro mode</i> .....	14
RECORDING MOVIE CLIPS.....	15
VOICES RECORDING.....	15
SETTING THE RECORDING FUNCTIONS.....	15
<i>Using the Scene Mode</i> .....	15
<i>Using the Program Mode</i> .....	16
<i>Using the Aperture Priority</i> .....	16
<i>Using the Shutter Priority</i> .....	16
<i>Using the Manual mode</i> .....	17
<i>Setting the Resolution and Quality</i> .....	17
<i>Setting the Movie Size</i> .....	17
<i>Setting the Stabilizer</i> .....	17
<i>Setting the White Balance</i> .....	18
<i>Setting the ISO</i> .....	18
<i>Setting the Exposure</i> .....	18
<i>Setting the Metering</i> .....	19
<i>Setting the Sharpness</i> .....	19
<i>Setting the Photo Effect</i> .....	19
<i>Setting Date Stamp</i> .....	19
<b>PLAYBACK</b> .....	<b>20</b>
PLAYING BACK IMAGES.....	20
<i>Using the Thumbnail</i> .....	20


Magnifying and Trimming Still Images .....	20
<i>Playing Back Movie Clips</i> .....	20
PLAYING BACK SOUNDS .....	21
<i>Recording a Voice Memo</i> .....	21
<i>Playing Back a Voice Memo</i> .....	21
DELETING FILES .....	21
<i>Deleting a Single File</i> .....	21
<i>Deleting All Files</i> .....	22
<i>Protecting Files</i> .....	22
EDITING IMAGES .....	23
<i>Rotating Still Images</i> .....	23
<i>Changing the Image Size</i> .....	23
<i>Setting Photo Effect</i> .....	24
SETTING THE DPOF .....	24
PLAYING A SLIDE SHOW .....	25
COPYING THE FILES .....	25
<b>ADVANCE SETTINGS .....</b>	<b>25</b>
ADJUSTING SOUNDS .....	25
SETTING AUTO REVIEW .....	26
SETTING THE POWER SAVE .....	26
SETTING THE LANGUAGE .....	26
RESETTING THE FILE NUMBERS .....	26
<i>About the Folder &amp; File Name</i> .....	26
<i>File Naming</i> .....	27
SETTING THE TV OUT .....	27
SETTING USB PORT .....	27
CHOOSING A STARTUP IMAGE .....	27
FORMATTING THE MEMORY .....	28
RESETTING TO DEFAULT SETTINGS .....	28
<b>MAKING CONNECTIONS .....</b>	<b>28</b>
CONNECTING THE CAMERA TO A TV .....	28
CONNECTING THE CAMERA TO A PC .....	29
<i>Using the Card Reader</i> .....	29
<i>Connecting the Camera to a Computer with a USB Cable</i> .....	29
<b>PRINTING PICTURES DIRECTLY .....</b>	<b>30</b>
<b>SOFTWARE INSTALLATION .....</b>	<b>31</b>
SYSTEM REQUIREMENTS .....	31
USING THE INSTALLER SPLASH SCREEN .....	31
INSTALLING YOUR CAMERA DRIVER .....	32
INSTALLING XVID CODEC .....	33
INSTALLING WINDOWS MEDIA PLAYER 9 .....	36
INSTALLING ARCSOFT PHOTOIMPRESSION .....	38
INSTALLING ADOBE ACROBAT READER .....	40
USING ARCSOFT PHOTOIMPRESSION .....	43
<b>INSTALLING SOFTWARE-FOR MAC USERS .....</b>	<b>44</b>
<b>APPENDIX .....</b>	<b>45</b>
TROUBLESHOOTING .....	45
SPECIFICATIONS .....	46
GETTING HELP .....	47
SAFETY TIPS AND MANITENANCE .....	48
REGULATORY INFORMATION .....	50

# GETTING STARTED


## STANDARD ACCESSORIES

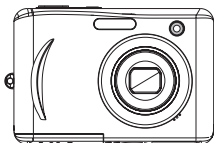


Camera

 

USB Cable

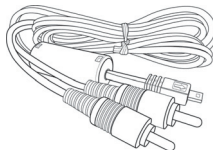


Video out Cable

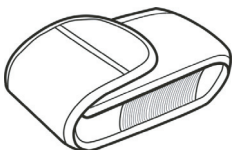


Soft Case




Strap

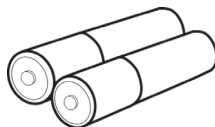


2 x AA Batteries  
(Rechargeable\*)

 

Software Installation CD-ROM

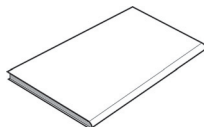

Quick Start Guide

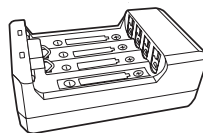

Battery charger(\*)


### NOTE:

- Items marked with (\*) are available as optional accessories.
- Note that the shape of the charger plug depends on the area where you purchased the camera.

### **Attaching the Wrist Strap**


Attach the wrist strap to your camera as shown.

**Note:** Do not swing the camera when carrying by the wrist strap.

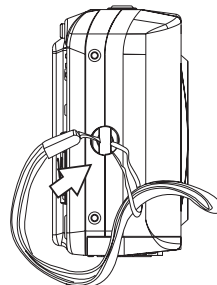


## Using the Soft Case

When not using the digital camera, keep it in the soft case for protection.

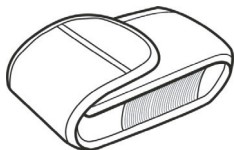


## NAMES OF PARTS


### Top

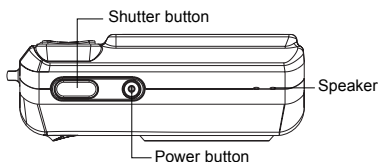


### Front

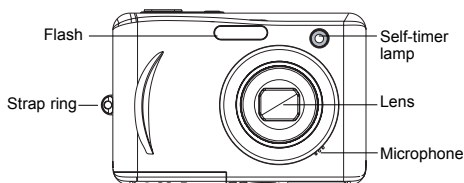


### Bottom

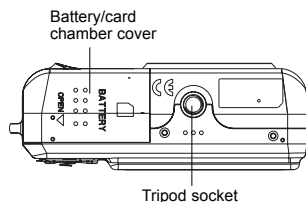


### Back

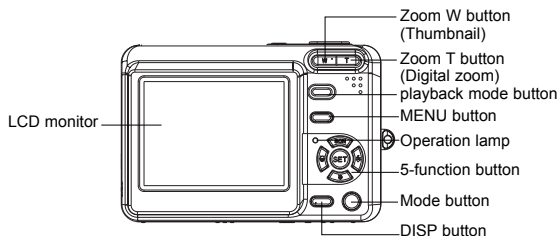

### Side

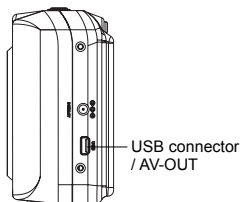


### 5-function button

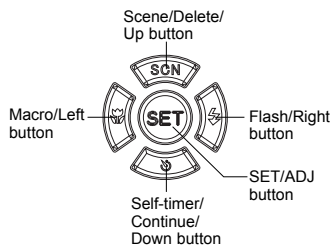


## INSERTING THE BATTERIES

The camera is powered by two AA-size alkaline batteries or rechargeable Ni-MH (min. 2000 mAh / 1.2V to get 250 shots) batteries.

 
1. Slide the battery cover open.




2. Insert two AA-size alkaline batteries with the positive(+) and negative(-) poles matching the directions indicated inside the battery room.

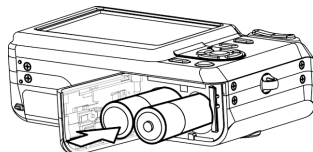

 3. Close the battery cover.



### Low Battery Indicator

A low battery indicator  appears on the LCD screen when the batteries are nearly exhausted. Batteries should be replaced promptly when the low batteries indicator appears.

#### Note:

 
- Do not use manganese batteries. Manganese batteries cannot supply sufficient power to support camera operation.
- Replace all batteries at the same time. Never mix old and new batteries.
- Remove batteries from the camera if you do not plan on using it for more than two weeks.
- The camera body may feel warm after extended use. This is normal.

 

**Important:** Users are not recommended to buy their own adaptor and use it on the camera as power supply.

## INSERTING A MEMORY CARD

You can use SD Card with this digital camera. The memory card slot is located beneath the battery cover, adjacent to the battery compartment.

1. Be sure that the camera is turned off.
2. Slide the battery cover and open it.
3. Insert the SD card as shown in the diagram.
4. Close the battery cover.



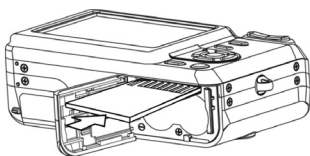

To remove the memory card, gently press on the edge of the card and release it. Pull the card out and close the battery cover.

### About Camera Memory



The digital camera is equipped with internal memory. If the memory card is not inserted in the camera, all images and movie clips recorded by the camera will be stored in the internal memory. If the memory card is inserted, images and movie clips are stored on the memory card.


### DCF Protocol

The DCF protocol defines the format for image file data as well as the directory structure for the memory card. Images that are taken by a DCF camera can be viewed on DCF-compatible cameras from other manufacturers.

## SETTING THE DATE AND TIME

When the camera is first turned on, the date and time setting will not be correct. So before using, be sure to set date and time.

1. Press the **MENU** button, using ◀ or ▶ to select **SETUP** (  ) and press the **SET** button.
2. Press ▲ or ▼ to select **DATE & TIME** (  ) then press ▶ or the **SET** button to launch the Date & Time screen.
3. Press ▲ or ▼ to change the value of the highlighted field. Press ◀ or ▶ to highlight another field.
4. After adjusting the settings, press the **SET** or the **MENU** button to apply the setting.

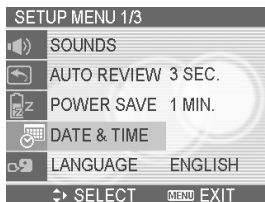



#### Note:



- If you hold down ▲ or ▼ , you can change the value quickly.
- If the batteries are removed for about two days, the Date & Time setting will be lost. In this case, make these settings again.

# BASIC OPERATIONS

## TURNING THE POWER ON AND OFF

1. Press and hold the **POWER** button to turn on the camera in the Record mode. Or you can press the  button to turn on the camera in the Playback mode.
2. Press the **POWER** button again to turn the power off.

**Hint:** You can turn on the camera by pressing and holding the POWER or the  button over 1.5 seconds.

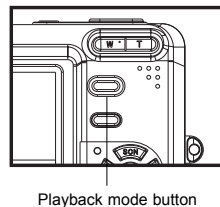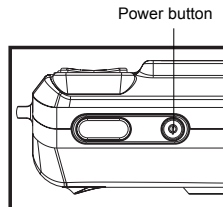

### Power Saving Function


If the camera is turned off by Power Save feature, press any button to turn it on again.

The Power Save feature does not work in the following situation:



- Using the USB connector
- During a slideshow
- Recording movies or voices
- Playing back a video or audio file





## SWITCHING BETWEEN RECORD AND PLAYBACK

You can switch between the Record mode and the Playback mode in following ways:

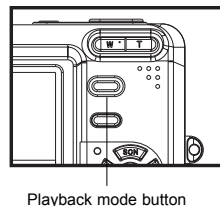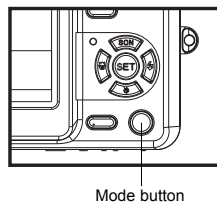- Press the **MODE** button to cycle through the still image shooting, voice recording, and movie recording.
- Press the  button to switch to the Playback mode.

**Note:** If you switch to Playback mode, the lens will retract after approximately 10 seconds.



	Capture Mode	For shooting still images.
	Voice Recording Mode	For recording audio files.
	Video Mode	For shooting video clips.
	Playback Mode	For viewing the recorded images and video clips.



## USING THE MENUS

### Recording Menu / Playback Menu

When a menu screen is displayed, the arrow button and the **SET** button are used to make the desired settings.

- Press the **MENU** button to display the menu.
  - The menu displays depends on whether you are in the Record mode or the Playback mode.
- Press **◀** or **▶** to select a menu item.
- Press **▲** or **▼** to change the setting.
  - In playback menu, press **▲** or **▼** to select an option, and then press the **SET** button to display a confirmation screen or apply the setting.
- Press the **MENU** or the **SET** button to save the settings and close the menu.
  - In playback menu, press the **MENU** button to close the menu.

Menu Item	Available Setting(for still image)
Resolution	$\overline{10M}$ / $\overline{3:2}$ / $\overline{8M}$ / $\overline{5M}$ / $\overline{3M}$ / $\overline{2M}$ / $\overline{VGA}$
Quality	/  /
Metering	/  /
Sharpness	/  /
Effect	Off / B&W / Sepia / Neg. Art
Date Stamp	Off / Date / Date & Time
Digital Zoom	Off / On






Menu Item	Available Setting (for movie)
Movie Size	$\overline{640}$ / $\overline{320}$ / $\overline{160}$
Metering	/  /
Stabilizer	Off / On

Menu Item	Available Setting (for playback)
Protect	Single / Lock All / Unlock All
Delete	Single / All
Slide Show	Playing stored images in a slide show.
DPOF	Single / All / Reset
Copy to Card	Single / All
Effect	B&W / Sepia / Neg. Art / Mosaic/ PhotoRite
Rotate	Right 90 / Left 90 / Horizontal / Vertical
Resize	Reduces image size to smaller.
Voice Memo	Recording a voice memo to a stored image.
S.Image	User 1 / User 2



 

 


**ADJ. Menu**

You can quickly adjust the Aperture Value, Shutter Speed, White Balance, ISO, Exposure in Record mode.

1. Press the **SET** button to display the menu.


					
Program	×	×	○	○	○
Aperture Priority	○	×	○	○	○
Shutter Priority	×	○	○	○	○
Manual	○	○	○	○	×
Video	×	×	○	×	×
					○ : can be adjusted × : can not be adjusted

2. Press **▲** or **▼** to select a menu item.
3. Press **◀** or **▶** to select an option
4. Press the **SET** button to confirm the settings and close the menu.

Menu Item	Available Setting
Aperture Value	F2.8 / F3.2 / F3.6 / F4.0 / F4.5 / F5.1 / F5.7 / F6.4
Shutter Speed	8", 5.6", 4", 2.8", 2", 1.4", 1", 0.7", 1/2, 1/3, 1/4, 1/5, 1/8, 1/11, 1/16, 1/23, 1/30, 1/42, 1/60, 1/85, 1/125, 1/177, 1/250, 1/354, 1/500, 1/707, 1/1000, 1/1414, 1/2000
White Balance	AUTO /  /  /  /  /  /  / 
ISO	AUTO / 50 / 100 / 200
Exposure	-2.0 to +2.0

**Setup Menu**

You can change the basic settings of the camera in Record mode and Playback mode.

1. Press the **MENU** button to display the menu.
  - The menu displays depends on whether you are in the Record mode or the Playback mode.
2. Press **◀** or **▶** to select **SETUP** () and then press the **SET** button to display the Setup menu.
3. Press **▲** or **▼** to select a menu item and then press **▶** or the **SET** button to launch the submenu.
4. Press **▲** or **▼** to select an option and press the **SET** button to apply the setting.
5. Press the **MENU** button to close the menu.

<b>Menu Item</b>	<b>Available Setting</b>
Sounds	Sets the camera sounds and volume.
Auto Review	Off / 3 sec. / 5 sec.
Power Save	1 min. / 3 min. / 5 min.
Date & Time	Sets the date & time.
Language	English / Spanish / German / French / Italian / Portuguese / Dutch / Czech / Hungarian / Polish / Turkish / Russian / Japanese / Korean / S.Chinese / T.Chinese
File No.	Series / Reset
TV Out	NTSC / PAL
USB	Computer / Printer
S.Image	Sets the start-up image.
Format	Formats the internal memory or memory card.
Reset All	Resets all camera settings to initial default.


## USING THE LCD MONITOR

The LCD monitor is used to compose images while recording, adjust settings and replay images.

### LCD Screen Indicator

#### In Recording

- |                      |                   |
|----------------------|-------------------|
| 1 Mode icon          | 11 Aperture value |
| 2 Flash              | 12 Shutter speed  |
| 3 Macro              | 13 Metering       |
| 4 Self-timer / Burst | 14 Exposure       |
| 5 Zoom indicator     | 15 ISO            |
| 6 Battery            | 16 White balance  |
| 7 Storage media      | 17 Sharpness      |
| 8 Focus area         | 18 Quality        |
| 9 Shake warning      | 19 Resolution     |
| 10 Shots remaining   |                   |

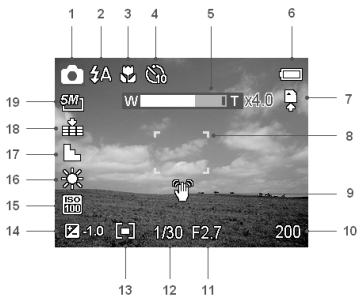

#### In Playback


- |                       |                       |
|-----------------------|-----------------------|
| 1 Mode icon           | 6 Storage media       |
| 2 Protect             | 7 Capture date & time |
| 3 Voice memo          | 8 DPOF Date stamp     |
| 4 File number / Total | 9 DPOF indicator      |
| 5 Battery             | 10 Resolution         |




### Switching the Screen Display

Press the **DISP** button changes the next display mode of the LCD monitor as shown below:

#### In Record mode

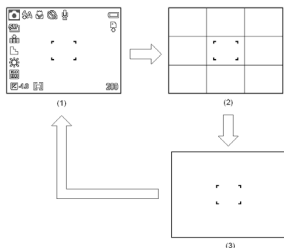

#### In Playback mode

 



- (1) OSD on (2) Guide line (3) OSD off  
 (4) OSD on (5) OSD off

**Hint:** Use the "Guide line" mode to compose images easily before shooting images.

**Note:** When the LCD display is not in "OSD on", press Macro, Self-timer, Flash will change the display mode to "OSD on" automatically.

# RECORDING

## RECORDING STILL IMAGES

1. Hold the camera with both hands and make sure the camera is stable.
2. Set the camera to the  mode.
3. Aim the focus area to the subject that you want to take and press the shutter release button halfway.
  - The focus area on the LCD monitor will light green when the camera is in focus.
  - If the shutter speed is slow or the possibility that image may be blurred, the shake warning icon  may appear on the LCD monitor. To avoid it, use a tripod to stabilize the camera when recording images.
4. Fully press the shutter release button to take an image.


### Note:

- Make sure that your fingers or the wrist strap does not block the lens.
- When the shutter release button is pressed halfway down, check the exposure value that appears on the LCD monitor to make sure that it is appropriate for the lighting conditions.

## Using the Zoom Function

Your camera has a combination of optical and digital zoom functions that allow you to zoom in on far away subjects or zoom out for a wide angle shot.

The optical zoom is achieved by mechanically adjusting the lens of the camera. The digital zoom enlarges or shrinks the image using a software process.

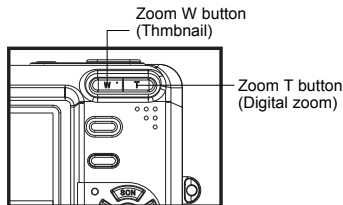

When the zoom lever is pressed, the zoom bar appears on the LCD monitor.

Press **[W]** to zoom out for a wide-angle shot.

Press **[T]** to zoom in for a telephoto shot.





When the optical zoom factor is at maximum, zooming stops temporarily. Press the **[T]** again, the camera switches to the digital zoom automatically and zooming continues.


Digital zoom works by enlarging the center portion of an image through a software interpolation process. The digital zoom is used to achieve magnification levels up to approx. 4 times.






**Note:** Digital zoom is unavailable when recording movies.

### Using the Flash

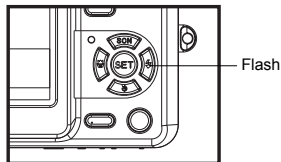
Press flash button on the camera to set the various flash modes. A symbol appears on the LCD screen to indicate the flash mode. The flash cannot be used in movie recording mode.

- Set the camera to the  mode.
  - The flash function is only used in still image recording mode.
- Press the  button to change the flash mode:



Display	Option	Description
	Auto flash	Flash fires automatically when shooting conditions require extra lighting.
	Red eye reduction	Flash strobos to let the subject's eyes adjust to the flash, then fires again to take the actual image. The digital camera will detect the subject brightness and use the flash only when required.
	Always on	Flash fires every time you take a photo, regardless of lighting conditions.
	Slow sync	Flash fires with a slow shutter speed.
	Always off	The flash never fires even in dark situation.


 
- Shoot the image.

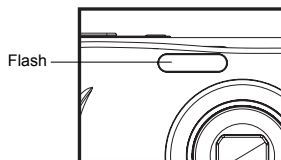


**Note:** The flash charging time may increase when the battery is low.





### Using the Self-timer & Burst

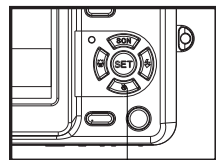Use the self-timer to set a delay from the time the shutter button is pressed to the time the image is shot. Use the burst to record four continuous still images shooting.

- Set the camera to the  mode .
  - This function only used in still image shooting.
- Press the  button to change the settings:



Self-timer

Display	Option	Description
-	Single shot	Record a single image.
	2-SEC	The shutter release will be delay for 2 seconds.
	10-SEC	The shutter release will be delay for 10 seconds.
	Double	Record two images in a shot after pressing the shutter release button 10 and 12 seconds.
	Burst	For capturing 4 images in succession.

3. Shoot the image.







Each option automatically switches to single shot in the following situation:


- After each shot.
- When the mode switched.
- When the camera is turned off.

**Note:** When using the self-timer function, be sure to use a tripod or place the digital camera on a level, stable surface.

### Using the Macro mode

Your camera is equipped with a macro function that allows you to focus on very close subjects. In macro mode you can focus on subjects 5 cm from the lens when in the maximum wide angle (zoomed out) setting and 25 cm in the maximum telephoto (zoomed in) setting.

1. Set the camera to the  mode .
  - You can use the macro mode in still image shooting or movie recording.
2. Press the  button to enter the macro mode.
  - The macro mode icon (  ) appears on the LCD monitor.
3. To leave the macro mode, press the  button again.

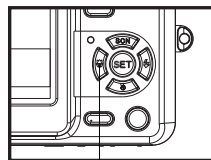


 Macro

**Note:** Distances referred to measure the distance between the camera lens surface and the subject.

## RECORDING MOVIE CLIPS

Your camera can record movie clips with audio.

1. Set the camera to the  mode .
  - The LCD monitor displays the available recording time.
2. Press the shutter to start recording.
3. Press the shutter again to end recording.
  - The camera will stop recording automatically when the memory capacity has been reached.




### Note:

- The voices of the movie clips are recorded from the microphone of the camera. Be careful to avoid touching the microphone while recording.
- The White Balance is set and locked to the settings of the first frame.

## VOICES RECORDING

You can record voices using this camera.

1. Set the camera to the  mode .
  - The LCD monitor displays the available recording time.
2. Press the shutter to start recording.
3. Press the shutter again to end recording.
  - The camera will stop recording automatically when the memory capacity has been reached.




**Note:** The voices are recorded from the microphone of the camera. Be careful to avoid touching the microphone while recording.






 
 







 
## SETTING THE RECORDING FUNCTIONS

### Using the Scene Mode

You can select from various scene mode for specific shooting conditions.

1. Set the camera to the Record mode .
  - The scene mode function only used in still image shooting.
2. Press the  button to show the Scene Mode screen.
3. Use the arrow button to select a desired scene mode and press the **SET** button to confirm the setting.



Display	Option	Description
	Program	All settings can be changed in this mode.
	Aperture priority	The Aperture can be set manually in this mode.
	Shutter priority	The Shutter can be set manually in this mode.
	Manual	The Aperture value and Shutter speed can be set manually in this mode.
	Portrait	Blurring the background to focus on the subject.
	Landscape	Used for the wide scenic views.
	Night Scene	Shooting the subject while keeping the background night scenery.
	Kids	Take a still image to capture moving kids.
	Beach & Snow	Used for the beach or snow scenes.
	Backlight	Shooting the image of backlight object by changing metering.
	Sunset	Enhance the red hue for recording sunset images.
	Close-up	Close-up shooting for small subject.
	Text	Enhance the black & white contrast.
	Sports	Fast shutter speed to capture fast moving subjects.
	Fireworks	Slow shutter speed to take fireworks exploding.

### Using the Program Mode

In this mode, you can specify any settings other than the shutter speed and aperture.

- The aperture value and shutter speed will display on the LCD monitor when you half press the shutter release button.

### Using the Aperture Priority

In this mode, you can set an aperture value to match the brightness. A higher aperture value brings the background out of focus. Selecting a lower aperture value allows you to soft the background.

**Hint:** The larger the aperture value the smaller the lens opening, allowing less light to enter the camera.

### Using the Shutter Priority

In this mode, you can set a shutter speed to match the brightness. Faster shutter speeds allow you to take a sharp picture of a moving subject while slower speeds create a trail effect and allow you to shoot without a flash in dark areas.

**Hint:** 1/250 indicates 1/250 second. And quote marks indicate the decimal place, so that 0"7 indicates 0.7 second and 2" indicates 2 seconds.

## Using the Manual mode


 




You can manually set the shutter speed and aperture to achieve a particular effect.

**NOTE:** If the image would be underexposed or overexposed and correct exposure cannot be obtained, press the shutter release button halfway, the exposure value display on the LCD monitor turns red.




## Setting the Resolution and Quality

You can select lower image resolution and quality to decrease the image size to capture more images. Choose a suitable setting according to the desired image quality and purpose.

### Resolution


 

Option	Description
	3648x2736 - Suitable for printing large size paper.
	3648x2432 - Printing in 3:2 ratio.
	3264x2448 - Suitable for printing normal size paper.
	2560x1920 - Suitable for printing on A4 paper.
	2048x1536 - Suitable for printing on A5 paper.
	640x480 - Suitable for attaching to e-mails or using in websites.

### Quality

Option	Description
	Stores the image with an extremely low compression.
	Stores the image with a low compression.
	Stores the image with normal compression.

## Setting the Movie Size

Movie clips can be shot with different size.

Option	Description
	640x480 - Suitable for viewing on TV.
	320x240 - Suitable for viewing on PC.
	160x128 - Suitable for attaching to e-mails or using in websites.







## Setting the Stabilizer

Use this function to create smooth, gliding shots when you're walking or moving around, reducing the camera shakes. It only works when the memory card has been inserted and the camera is ensured to set in video mode.

Option	Description
Off	Turn off the frame stabilizer.
On	Helps you to prevent camera shake. When you turn on this function, the frame range becomes narrow and preview frames may not display smoothly.

### Setting the White Balance

Adjust the white balance to match different light sources such as sunlight, incandescent (tungsten) lighting or, fluorescent lighting.

Option	Description
AUTO	Automatically corrects white balance. Ideal for general photography.
	Adjusts for bright sun conditions, or natural light conditions.
	Adjusts for cloudy days or twilight conditions
	Adjusts for normal indoor lighting conditions. Corrects the orange hue of household light bulbs. Ideal for indoor photos under tungsten or halogen lighting without a flash.
 / 	Adjusts for fluorescent lighting. Corrects the green hue of fluorescent lighting. Ideal for indoor photos under fluorescent lighting without a flash.
	For more accurate adjustment or when the light source cannot be specified.

**Note:** Point the camera at a white piece of paper or similar object under the lighting conditions for which you want to set the white balance, and then press the **SET** button.

### Setting the ISO

With the initial settings, the ISO sensitivity is automatically set according to the brightness of the subject.

Option	Description
Auto	Sets the ISO sensitivity automatically.
ISO 50	Sets the sensitivity to ISO 50 equivalent.
ISO 100	Sets the sensitivity to ISO 100 equivalent.
ISO 200	Sets the sensitivity to ISO 200 equivalent.




**Note:** Higher ISO speeds increase the image noise. To take clean images, use as low an ISO speed as possible.

### Setting the Exposure

Set the exposure value manually to compensate for unusual lighting conditions such as indirect indoor lighting, dark backgrounds, and strong backlighting.




### Setting the Metering

There are 3 different light metering options available on your camera.


Option	Description
	Light is measured from the entire shooting screen, but gives more importance to the values near the center.
	Selects an exposure based on readings from multiple points in the subject area
	Selects an exposure based on a single reading taken from the center of your picture.

### Setting the Sharpness

You can select whether you want the image to have sharp or soft outlines.

Option	Description
	The edges of the image are emphasized. The edges will become sharp, but noise may occur in the recording image.
	The edges of the image are sharp. This is suitable for printing.
	The edges of the image are softened. This is suitable for editing images on PC.

### Setting the Photo Effect

You can add special effects to your images in  mode.

Option	Description
Off	No effect is added to the image.
B&W	Convert image to black & white.
Sepia	Recorded image will be stored in a sepia tone.
Neg. Art	Opposite what they were in the original image.

**Note:** This function is not available to resolution 8M.

### Setting Date Stamp

The Date Stamp function can be used to add a date to your pictures as you take them.

Option	Description
Off	Do not add the recorded date & time to printed images.
Date	Only add the recorded date to printed images.
Date & Time	Add the recorded date & time to printed images.

# PLAYBACK

## PLAYING BACK IMAGES

1. Set the camera to the Playback mode .
2. Press ◀ to play back the previous image; press ▶ to play back the next image.

**Hint:** Holding down ◀ or ▶ scrolls images in a high speed.

### Using the Thumbnail

When in Playback mode, you can view all your stored images in thumbnail format.

1. Set the camera to the Playback mode .
2. Press the zoom lever [W], a thumbnail screen is displayed.
3. Use the arrow button to select the desired image, and press [T] or the **SET** button to show the selected image in full screen.



### Magnifying and Trimming Still Images

1. Set the camera to the Playback mode.
2. Press ◀ or ▶ to select the image that you want to magnify or trimming.
3. Press [T] to magnify the image, and the central portion of the image is displayed. You can use the arrow button to view different parts of the magnified image.
  - Press the **MENU** button to return to the normal size.
4. Press the **SET** button to set the image trimming.
5. Press the **SET** button again to trim the selected image and save it as a new one.
  - Press the **MENU** button to cancel it.



**NOTE:** Only still images can be magnified and trimmed.

### Playing Back Movie Clips

1. Set the camera to the Playback mode .
2. Press ◀ or ▶ to select the movie clip that you want to playback.
3. Press the **SET** button to start the movie.
  - The movie clip will play on the LCD monitor.
4. Press the **MENU** button to stop the movie, or press the **SET** button to pause the movie.
  - When movie clip paused, press the **SET** button again to resume.



**Hint:**



- During movie playing back, press ▶ to fast forward or press ◀ to rewind it.
- Press the shutter button to capture the still image from the movie clip while it is paused.

## PLAYING BACK SOUNDS

1. Set the camera to the Playback mode .
2. Press ◀ or ▶ to select the audio clip that you want to playback.
3. Press the **SET** button to start playing the audio clip.
4. Press the **MENU** button to stop the audio clip, or press the **SET** button to pause it.
  - When audio clip paused, press the **SET** button again to resume.

### Recording a Voice Memo

You can add a voice memo to the still images after you record it.


1. Set the camera to the Playback mode .
2. Press ◀ or ▶ to select a still image that you want to add a voice memo.
3. Press the **MENU** button, using ◀ or ▶ to select **VOICE MEMO** (  ) and press the **SET** button.
  - If the image already has the voice memo recorded, the  appears on the LCD monitor. The new recording will replace the previous one.
4. Press the **SET** button to start recording for 30 seconds, or press the **MENU** button to cancel it.
5. Press the **SET** button again to end recording.



#### Note:

- The voice memo cannot be added to a movie clip or a protected image.
- You cannot delete only the voice memo. When you delete the image, the attached voice memo is also deleted.


### Playing Back a Voice Memo


1. Set the camera to the Playback mode .
2. Press ◀ or ▶ to select the image that has the voice memo recorded.
  - The image with a voice memo recorded shows  on the LCD monitor.
3. Press the **SET** button to play to voice memo.
4. Press the **MENU** button to stop the voice memo, or press the **SET** button to pause it.
  - When voice memo paused, press the **SET** button again to resume.




## DELETING FILES

### Deleting a Single File


Single image can be deleted using the Playback Menu or pressing the camera button (  ).

1. Set the camera to the Playback mode .
2. Press the **MENU** button, then press ◀ or ▶ to select **DELETE** (  ).
3. Press ▲ or ▼ to select **SINGLE**, and then press the **SET** button
4. Press ◀ or ▶ to select the image you want to delete.

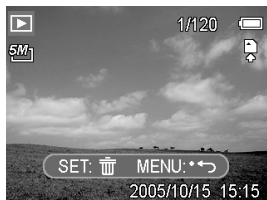


5. Press the **SET** button to delete the image or press the **MENU** button to cancel.
6. Repeat step 4~5 to delete images.

**Hint:**

- To quickly delete the current display image
  1. Select the image you want to delete.
  2. Press the  button to show a confirmation bar.
  3. Press the **SET** button to delete the current display image.

**Deleting All Files**


 
You can use the Playback Menu to delete multiple files.


1. Set the camera to the playback mode .
2. Press the **MENU** button, then press ◀ or ▶ to select **DELETE** (  ).
3. Press ▲ or ▼ to select **ALL**, and then press the **SET** button.
4. Press the **SET** button to delete all images or press the **MENU** button to cancel.



**Note:** The protect images cannot be deleted with the delete function.

**Protecting Files**

Files stored on your camera or on a memory card can be protected to prevent accidental deletion.

1. Set the camera to the Playback mode .
2. Press the **MENU** button, then press ◀ or ▶ to select **PROTECT** (  ).
3. Press ▲ or ▼ to select **SINGLE**, and then press the **SET** button.
4. Press ◀ or ▶ to select the file you want to protect.
5. Press the **SET** button to protect the file or press the **MENU** button to cancel.
  - When the file is locked, the  displays on the LCD monitor.
6. Repeat step 4~5 to protect images.

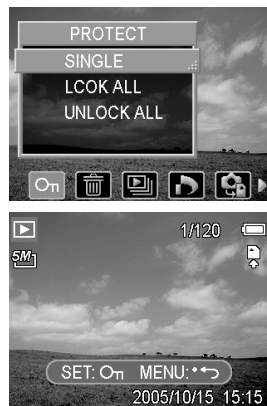
**Hint:**

  
- To unlock the file, press the **SET** button again in step 5. The  will disappear and the file is unlocked.
- To lock / unlock all files at a time
  1. Set the camera to the Playback mode.
  2. Press the **MENU** button, then press ◀ or ▶ to select **PROTECT** (  ).
  3. Press ▲ or ▼ to select **LOCK ALL** (or **UNLOCK ALL**), and press the **SET** button.
    - A confirmation message appears.
  4. Press the **SET** button to lock (or unlock) all files, or press the **MENU** button to cancel.

## EDITING IMAGES

### Rotating Still Images


The still images can be rotated by various degrees.

1. Set the camera to the Playback mode .
2. Press ◀ or ▶ to select the image you want to rotate.
3. Press the **MENU** button, then press ◀ or ▶ to select **ROTATE** (  ).
4. Press ▲ or ▼ to select an option, and then press the **SET** button.
5. Press the **SET** button to confirm the change or press the **MENU** button to cancel.
  - The rotated image will be saved as a new file name.

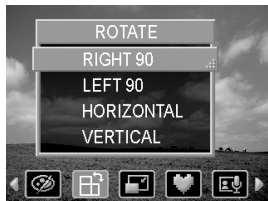

### Changing the Image Size

The resolution of still images that had already been recorded can be changed.

1. Set the camera to the Playback mode .
2. Press ◀ or ▶ to select the image you want to resize.
3. Press the **MENU** button, then press ◀ or ▶ to select **RESIZE** (  ).
4. Press ▲ or ▼ to select an option, and then press the **SET** button.
  - The resized image will be saved as a new file name.




 
 
 

 
 
**Note:** Only a large size image can be resize to a smaller one.



## Setting Photo Effect




 


 
 


 

You can change or correct photo effect directly on the camera. The changed/corrected photos can then be viewed or printed directly without the need to transfer them onto computer for further photo editing or enhancement.

Photo Effect	Description
B&W	Convert color photo into black & white photo.
Sepia	Add sepia tones to photo to make it looks like old photo.
Neg. Art	Convert photo color into its opposite color.
Mosaic	Turn photo into a series of mosaic tiles.
PhotoRite	PhotoRite is an advanced image processing technology for automatic photo enhancement. Photos processed with PhotoRite will have a more well-balanced color and exposure, and details in the scene can be seen more clearly. Problems that PhotoRite can fix are backlit, under-expose, poor contrast, uneven-illumination and color shift.

1. Set the camera to the Playback mode (  ).
2. Press  or  to select the photo that you want to change its effect.
3. Press the **MENU** button, then press  or  to select **EFFECT**.
4. Press  or  to select an option, and then press the **SET** button.
  - The photo with the selected effect will be saved as a new file.

## SETTING THE DPOF

The Digital Print Order Format (DPOF) setting allows you to select images on the memory card for printing and specify the number of print copies in advance using the camera. This is extremely convenient for sending the images to a photo developing service or for printing on a direct print function compatible printer.

1. Set the camera to the Playback mode .
2. Press the **MENU** button, using  or  to select **DPOF** (  ) and press the **SET** button.
3. Press  or  to select **SINGLE**, then press the **SET** button.
4. Press  or  to select the image you want to print out, and the **SET** button.
5. Press  or  to specify the number of copies.
  - The number of copies can be set from 0 to 30.
  - To cancel this image **DPOF** setting, set the number of copies to 0.
6. Press  and then press  or  to set or cancel the date stamp of current image.
7. Press the **SET** button to apply the setting or press the **MENU** button to cancel.
8. Repeat step 4~7 to set other images for printing.
9. After you finished all image settings, press the **MENU** button to apply it.

 
 



### Hint:

- To set the DPOF setting for all images in a time, select **ALL** in step 3 and press the **SET** button.
- To reset all DPOF settings to initial default, select **RESET** in step 3 and press the **SET** button.

## PLAYING A SLIDE SHOW

You can set the camera to display images in a slide show.


1. Set the camera to the Playback mode .
2. Press the **MENU** button, using ◀ or ▶ to select **SLIDE SHOW** (  ) and press the **SET** button.
3. Use the arrow button to set the playback interval (  ) and repeat or not (  ).
  - You can set the interval between 1~10 seconds.
4. Press the **SET** button to start the slideshow, or press the **MENU** button to cancel.
  - During the slideshow, press the **SET** button to pause the slideshow and press the **SET** button again to resume.



**Note:** The slideshow function is not available for the movie clips and voice recording.

## COPYING THE FILES

 You may want to copy the data from the camera's internal memory to the memory card for convenience.

1. Be sure you had inserted a memory card to your digital camera.
2. Set the camera to the Playback mode .
3. Press the **MENU** button, using ◀ or ▶ to select **COPY TO CARD** (  ) and press the **SET** button.
4. Press ▲ or ▼ to select **SINGLE**, then press the **SET** button.
5. Press ◀ or ▶ to select the image you want to copy to a card.
6. Press the **SET** button to start copy.
7. Repeat step 5~6 to copy other images.
8. Press the **MENU** button to complete the setting.




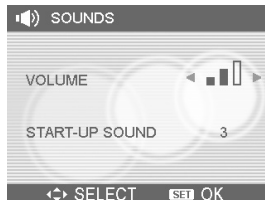
**Hint:** To copy all images to a memory card in a time, select **ALL** in step 4 and press the **SET** button.

## ADVANCE SETTINGS

### ADJUSTING SOUNDS

You can adjust the sound volume and set different sounds as the start-up sound.

1. Set the camera to the Setup Menu .
2. Press ▲ or ▼ to select **SOUNDS** (  ) and then press ▶ or the **SET** button to enter the sounds screen.
3. Use the arrow button to adjust the volume and select a desired start-up sound.
4. Press the **SET** or the **MENU** button to apply the setting.
5. Press the **MENU** button to close the menu.



## SETTING AUTO REVIEW

When Auto Review is enabled, you can view an image for a few seconds after you have taken it.

Option	Description
Off	The captured image will not automatically display after shooting.
3 sec.	The captured image will display for 3 seconds after shooting.
5 sec.	The captured image will display for 5 seconds after shooting.


## SETTING THE POWER SAVE

For power consumption, you can set your camera to turn off automatically for a period of time.

Option	Description
1 min.	The power will turn off automatically after 1 minute.
3 min.	The power will turn off automatically after 3 minutes.
5 min.	The power will turn off automatically after 5 minutes.

## SETTING THE LANGUAGE

The camera can display menus and other information in a number of different languages.

1. Set the camera to the Setup Menu .
2. Press ▲ or ▼ to select **LANGUAGE** (  ) then press ► or the **SET** button to launch the submenu.
3. Press ▲ or ▼ to select a language and press **SET** button to apply the setting.
4. Press the **MENU** button to close the menu.



## RESETTING THE FILE NUMBERS

Use this function if the camera experiences a "Folder cannot be created" error or if you want to restart numbering, for example, after erasing all files.

Resetting the file number is useful for avoiding the file name duplication when images are downloaded to a computer.

Option	Description
Series	Store the latest used file number no matter deleting files or inserting a new memory card.
Reset	Reset file numbering each time the memory card is changed.

### About the Folder & File Name

The digital camera automatically creates a directory of folders in the internal memory or memory card that it uses to organize still images, movie clips and other information.

## File Naming

File names are followed by a 4-digit number that increases in sequence. File numbering starts from 0001 when a new folder is created.

If the highest folder number is 999 and highest file number exceeds 9999, the camera will display the warning message "Folder cannot be created". When it appears, try one of the following ways:

- Reset the file number and plug in a new memory card.
- Format the memory. The folder number and file number are initialized and renumbered from 100 and 0001 respectively.

**Note:** Do not change the folder and file names in the memory card using your computer. It may be unable to playback the data using the digital camera.

## SETTING THE TV OUT

Your camera can be connected to a TV allowing you to preview images and movie clips on the television screen. TV Out should be set to either NTSC or PAL depending on your region.

Option	Description
NTSC	America, Japan, Taiwan, Korea
PAL	All of Europe


 
## SETTING USB PORT

You can set USB mode to connect the camera with a printer or computer.

Option	Description
Computer	To connect your camera to a PC.
Printer	To connect your camera to a printer.

## CHOOSING A STARTUP IMAGE

You can choose a recorded image as the start-up image.


1. Set the camera to the Playback mode.
2. Press ◀ or ▶ to select a desired image.
3. Press the **MENU** button, then press ◀ or ▶ to select **S.IMAGE** (  ).
4. Press ▲ or ▼ to select an option, and then press the **SET** button.
5. Set the camera to the Setup Menu .
6. Press ▲ or ▼ to select **S.IMAGE** (  ) then press ▶ or the **SET** button.
7. Press ▲ or ▼ to select a desired image and press the **SET** or the **MENU** button to apply the setting.
8. Press the **MENU** button to close the menu.

**Note:** The start-up image will not be deleted even if the original image is deleted or memory formatted.



## FORMATTING THE MEMORY


To erase all data stored in the memory card if you are using a card, or all data stored in the internal memory if there is no card inserted.

1. Set the camera to the Setup Menu .
2. Press ▲ or ▼ to select **FORMAT** (  ) then press ► or the **SET** button.
3. Press the **SET** button to start format, or press the **MENU** button to cancel it.
  - A "BUSY...PLEASE WAIT" message displays and the memory card is starting format.
  - A "COMPLETED" message displays when finish formatting.

**Note:** All data will be deleted including protected ones. Be sure to download important files to your computer before formatting.

## RESETTING TO DEFAULT SETTINGS

You can reset the entire menu and button operation settings to initial default.

1. Set the camera to the Setup Menu.
2. Press ▲ or ▼ to select **RESET ALL** (  ) then press ► or the **SET** button to launch the submenu.
3. Press ▲ or ▼ to select **YES** then press the **SET** button to reset all settings.

### Note:

The following settings do not change with this procedure:


- Date & Time setting
- Language setting
- TV out setting

## MAKING CONNECTIONS

### CONNECTING THE CAMERA TO A TV

Images displayed on the camera's monitor screen can also be displayed on a television.

1. Use the included audio/video cable to connect the camera to the TV set.
2. Set the TV input signal to Video In and Audio In. Refer to the documentation included with your TV for more information.
3. Everything that would normally appear on the camera's LCD screen, such as photo and video clip playback, slide shows, and image or video capture, appears on the TV.

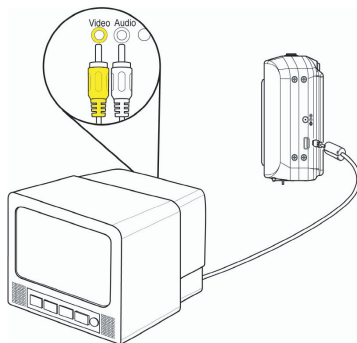

**Note:** The camera LCD screen turns off automatically during video output.


## CONNECTING THE CAMERA TO A PC

There are two ways to download files from the camera's internal memory or memory card to a computer:

- by inserting the memory card into a card reader
- by connecting the camera to a computer using the included USB cable

### Using the Card Reader


1. Eject the memory from the camera and insert it in a card reader that is connected to a computer.
2. Open My Computer or Windows Explorer and double-click the removable drive icon that represents the memory card.
3. Copy images from the card into a directory of your choice on the computer's hard disk.

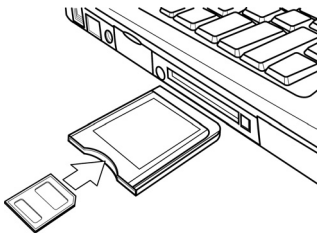

**Note:** If you are using a PC card reader with a notebook computer, first insert the memory card into the PC card adapter (optional), and then insert the PC card adapter into the computer's PC card slot.

### Connecting the Camera to a Computer with a USB Cable

1. Install the USB software driver included with the bundled CD-ROM.
2. Connect the supplied USB cable to the computer's USB port.
3. Turn on the camera.
4. The LCD screen turns off when the connection to the computer has been successfully completed.
5. Open My Computer or Windows Explorer. A "Removable Disk" appears in the drive list.
6. Double-click the "Removable Disk" icon to view its contents.
7. Files stored on camera are located in the folder name "DCIM".

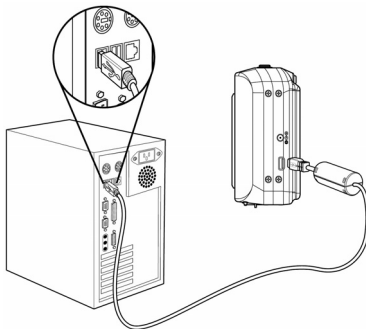

**Note:**

- You don't have to turn off the computer or camera when making this connection.
- Refer to your computer's manual for information regarding the USB port location.
- The camera will turn off automatically if the USB cable is disconnected.
- Windows 98SE: If this is the first time the camera has been connected to the computer, Windows detects the camera as an "Unknown device" and automatically completes the required software installation.

# PRINTING PICTURES DIRECTLY

There are two ways to print the stored pictures without the help of computer:

## **Printing Pictures by Using SD Card**

1. Transfer the stored pictures from internal memory to SD card.
2. Set the DPOF ( refer to the section "Setting the DPOF").
3. Insert the SD card into the SD card slot of the direct printing compatible printer.
4. Refer to the instruction manual of the printer to print the pictures.



## **Printing Pictures by Using a USB Cable**

1. Set the camera to the Playback mode.
2. Press the **MENU** button, using ◀ or ▶ to select **SETUP** menu and press the **SET** button.
3. Press ▲ or ▼ to select **USB**, then press ▶ or the **SET** button to launch the submenu.
4. Press ▲ or ▼ to select **PRINTER** and then press the **SET** button to apply the setting.
5. Connect the camera to the printer with the supplied USB cable. The camera's LCD will show **PICTBRIDGE MENU**.
6. Follow the camera's on-screen display and the printer's instruction manual to print the pictures.



# SOFTWARE INSTALLATION(FOR WINDOWS USERS)

## SYSTEM REQUIREMENTS

### Windows:

- PC with processor better than MMX Pentium 233 MHz
- Windows XP/2000/ME/98SE
- Minimum 32 MB RAM
- USB port
- CD-ROM drive
- 800x600 pixels, 16-bit color display compatible monitor

### Macintosh:

- Power Mac G3 or later
- Mac OS 9.0, 9.1, 9.2 and OS X
- Minimum 64 MB RAM
- USB port
- CD-ROM drive
- 800x600 pixels, 16-bit color display compatible monitor


\*Specifications are subject to change without prior notice.

Option	Description
Camera Driver	Enables you to download the files taken with the camera.
XviD Codec	It's an ISO MPEG-4 compliant video codec and enables you to compress/decompress digital video.
Windows Media Player 9	Enables you to playback the video clips taken with the camera.
Arcsoft Photoimpression 5	Enables you to edit and enhance pictures.
Adobe Acrobat Reader	Enables you to view the electronic version of the User's Guide.
User's Guide	Direct link to the electronic version of the User's Guide in different languages. (All User's Guides are saved in PDF format.)
Concord Support Website	Direct link to our camera support website. Ensure that an internet connection is established before clicking on the link.

## USING THE INSTALLER SPLASH SCREEN




The installer will automatically detect which software applications need to be installed or if they are not necessary. This will be indicated by the buttons on the splash screen that appears when the CD-ROM is inserted into the computer:


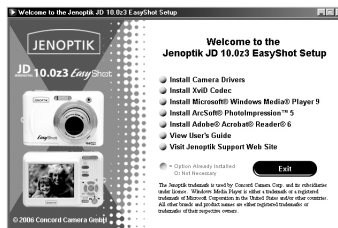
Color	Description
Yellow ( ● )	Required or highly recommended to install.
Gray ( ● )	Already installed or not necessary to install.





## INSTALLING YOUR CAMERA DRIVER

Step 1	Make sure that your camera is not connected to the computer.
Step 2	Make sure the computer is powered on and Windows 98SE/ME/2000/XP is running.
Step 3	Close any other applications or software you may be running.
Step 4	<p>Insert the supplied CD-ROM into the CD-ROM drive. The installer will pop up automatically.</p> <p><b>Note:</b> If the installer does not appear automatically, double click 'My Computer', and then double click the CD-ROM drive.</p>
Step 5	<p>Select the language. Click <b>[OK]</b>.</p> 
Step 6	<p>The installation screen will appear. Click on <b>Install Camera Drivers</b>.</p> 
Step 7	<p>The two warnings will be shown orderly. Please ignore them and click <b>[OK]</b>.</p> 

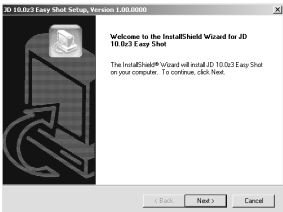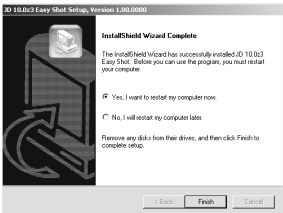




Step 8	Click <b>[Next]</b> .	
Step 9	Install progress bar.	
Step 10	To ensure the complete installation and enable the camera to function well, please do select <b>“restart your computer”</b> .	





## INSTALLING XVID CODEC


**Note:** To ensure the video clips can be played, please install XviD Codec.

Step 1	Make sure that your camera is not connected to the computer.
Step 2	Make sure the computer is powered on and Windows 98SE/ME/2000/XP is running.
Step 3	Close any other applications or software you may be running.
Step 4	Insert the supplied CD-ROM into the CD-ROM drive. The installer will pop up automatically. <b>Note:</b> If the installer does not appear automatically, double click 'My Computer', and then double click the CD-ROM drive.
Step 5	Select the language. Click <b>[OK]</b> .



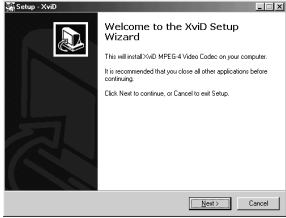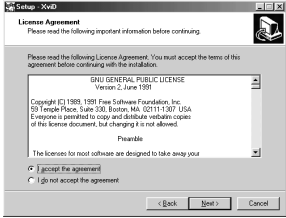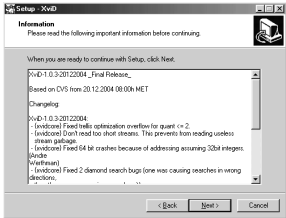

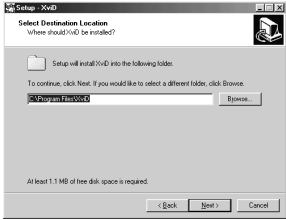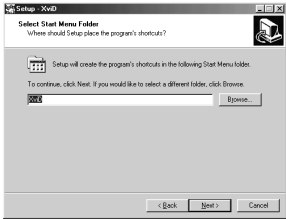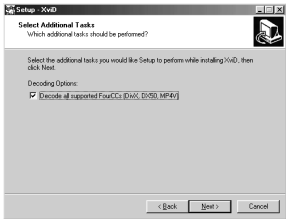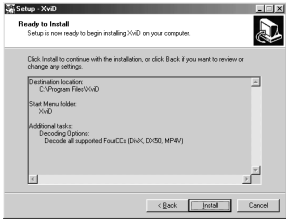
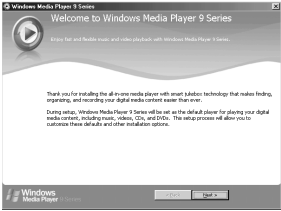
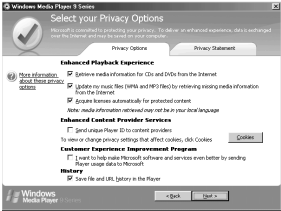

Step 6	The installation screen will appear. Click on <b>Install XviD Codec</b> .	
Step 7	Select the language. Click <b>[OK]</b> .	
Step 8	Click <b>[Next&gt;]</b> .	
Step 9	Select "I accept the agreement" then click <b>[Next&gt;]</b> .	
Step 10	Click <b>[Next&gt;]</b> .	

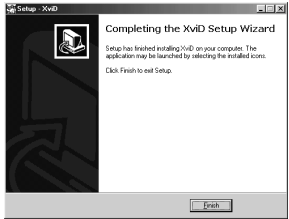
Step 11	Click <b>[Next&gt;]</b> .	
Step 12	Click <b>[Next&gt;]</b> .	
Step 13	Click <b>[Next&gt;]</b> .	
Step 14	Click <b>[Install]</b> .	

<b>Step 15</b>	Install progress bar.
<b>Step 16</b>	<p>Click <b>[Finish]</b>.</p> 


## INSTALLING WINDOWS MEDIA PLAYER 9


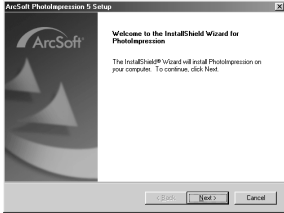
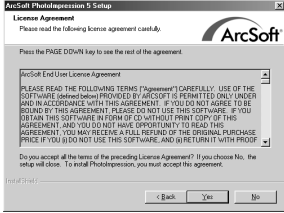
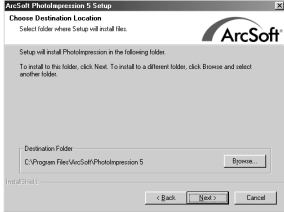
<b>Step 1</b>	Make sure that your camera is not connected to the computer.
<b>Step 2</b>	Make sure the computer is powered on and Windows 98SE/ME/2000/XP is running.
<b>Step 3</b>	Close any other applications or software you may be running.
<b>Step 4</b>	<p>Insert the supplied CD-ROM into the CD-ROM drive. The installer will pop up automatically.</p> <p><b>Note:</b> If the installer does not appear automatically, double click 'My Computer', and then double click the CD-ROM drive.</p>
<b>Step 5</b>	<p>Select the language. Click <b>[OK]</b>.</p> 
<b>Step 6</b>	<p>The installation screen will appear. Click on <b>Install Microsoft Windows Media Player 9</b>.</p> 
<b>Step 7</b>	Installation stars.

Step 8	<p>Read the License Agreement, then click <b>"I Accpet"</b>.</p> 
Step 9	The screen shows installing progress bars.
Step 10	<p>When the installing is complete, the screen shows welcome page. Click <b>"Next"</b>.</p> 
Step 11	<p>Choose the privacy options according to your preference, then click <b>"Next"</b>.</p> 
Step 12	<p>Select or dis-select the file types that will use the Windows Media Player as default player. Then click <b>"Finish"</b>.</p> 



Step 13	<p>The screen shows the Windows Media Player window.</p> 
Step 14	<p>Close the Windows Media player by clicking on the “X” on the left top corner or clicking “File → Exit”.</p> <p><b>Note:</b> If you have downloaded the video clips recorded with the camera onto your computer, you can click “File → Open ...” to view the video clips immediately.</p>

## INSTALLING ARCSOFT PHOTOIMPRESSION FOR ALL WINDOWS USERS(OPTIONAL)


Step 1	Make sure your camera is powered off and not connected to the computer.
Step 2	Make sure the computer is powered on and Windows is running.
Step 3	Close any other applications or software you may be running.
Step 4	<p>Insert the supplied CD-ROM into your computer’s CD-ROM drive.</p> <p><b>Note:</b> If the installer does not start automatically within 30 seconds after the CD-ROM has been inserted, click on <b>My Computer</b> either on the Desktop or in the Start Menu and locate the CD-ROM Drive. Double click on the CD-ROM Drive icon for installation and proceed to Step 5.</p>
Step 5	<p>Select the language. Click <b>[OK]</b>.</p> 



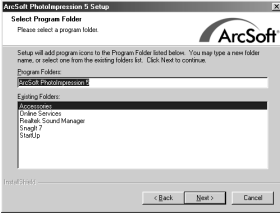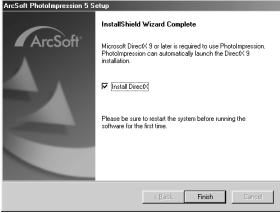


Step 6	<p>The installation screen will appear, Click on <b>Install ArcSoft PhotImpression 5</b>.</p> 
Step 7	<p>Click <b>[Next &gt;]</b>.</p> 
Step 8	<p>Click <b>[Yes]</b>.</p> 
Step 9	<p>Click <b>[Next &gt;]</b>.</p> 







Step 10	Click <b>[Next &gt;]</b> .	
Step 11	The screen will show the status of the installation.	
Step 12	You can choose to install DirectX 9 or not, then click <b>[Finish]</b> .	

## INSTALLING ADOBE ACROBAT READER (OPTIONAL)

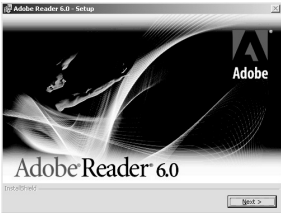
Step 1	Make sure your camera is powered off and not connected to the computer.
Step 2	Make sure the computer is powered on and Windows is running.
Step 3	Close any other applications or software you may be running.
Step 4	<p>Insert the supplied CD-ROM into your computer's CD-ROM drive.</p> <p><b>Note:</b> If the installer does not start automatically within 30 seconds after the CD-ROM has been inserted, click on <b>My Computer</b> either on the Desktop or in the Start Menu and locate the CD-ROM Drive. Double click on the CD-ROM Drive icon for installation and proceed to Step 5.</p>
Step 5	<p>Select the language. Click <b>[OK]</b>.</p> 

Step 6	<p>The installation screen will appear, Click on Install <b>Adobe Acrobat Reader 6.</b></p> 
Step 7	<p>"Recomposing data ..." status bar appear.  <b>Note for Win 98 SE users:</b> As Adobe Reader 6 requires Internet Explorer 5.01 or greater, you may see below information:</p>  <p><b>Note for Win 2000 users:</b> As Adobe Reader 6 need the support of Win 2000 SP2, you may see below information:</p>  <p>In this case, please click <b>[OK]</b> to close the message screen, and then click <b>[Finish]</b> to terminate the Adobe Reader 6 installation. Then go to <a href="http://www.microsoft.com">www.microsoft.com</a> website to upgrade your system and then to install the Adobe Reader 6 again.</p> 
Step 8	<p>If your Internet Explorer is version 5.01 or above, the installation of Adobe Reader 6 will start. The screen shows screen as below. Click <b>[Next &gt;]</b>.</p> 

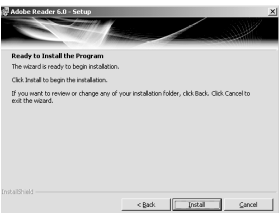Step 9	Click <b>[Next &gt;]</b> .	
Step 10	Click <b>[Next &gt;]</b> . The files will be saved into C:\Program Files\Adobe\Acrobat 6.0 automatically. You may change the default folder by clicking <b>[Change Destination Folder...]</b> and selecting a different folder in your computer.	
Step 11	Click <b>[Install]</b> to start install the Adobe Reader 6.	
Step 12	Click <b>[Finish]</b> .	


## USING ARCSOFT PHOTOIMPRESSION (FOR WINDOWS USERS )

You can use PhotoImpression 5 to transfer photos from the camera to your computer and or to edit/enhance the photos saved on your computer. Follow steps below to transfer photos:

1. Connect the camera with your computer by using the supplied USB cable.
2. Launch **PhotoImpression 5** by double clicking the icon representing the software on the desktop (  ). The screen as shown in figure 1.1 appears:



(Fig. 1.1)

3. Click on **Removable Media** (  ). The screen as shown in fig. 1.2 appears.



(Fig. 1.2)



(Fig. 1.3)



(Fig. 1.4)

4. Click **OK**. The photos stored in the camera will be shown. (Fig. 1.3)
5. Click **OK** to start saving the pictures onto your computer. When it is completed, click **OK** (fig. 1.4).
6. When the photos are shown as fig. 1.5, you can play with the photos, for example, to view a photo in detail, to enhance the photo ... etc. For more information, please refer to the **Help** provided by the software.



(Fig. 1.5)

# INSTALLING SOFTWARE – FOR MAC USERS

**Note for Mac users:** If the video clips recorded with the camera cannot be viewed by using the QuickTime player bundled with your Mac system, please complete the following installation steps.

## For Mac OS 9 Users

1. Start up your computer and insert the software CD into your computer's CD-ROM driver.
2. Double click "**JD10 v100**" icon on your desktop.
3. Double click **DivX 5.1.1 Installer** in the zip file under **MacIOS9** folder to start installing the software.
4. Follow the on-screen instructions to complete the installation, then restart your computer to ensure the successful installation.
5. Copy file named "**XVIDDelegatePPC**" into Extensions folder and restart the OS.



## For Mac OS X Users

1. Start up your computer and insert the software CD into your computer's CD-ROM driver.
2. Double click "**JD10 v100**" icon on your desktop.
3. Double click **DivX 5.2.1 Installer** in the zip file under **MacIOSX** folder to start installing the software.
4. Follow the on-screen instructions to complete the installation.
5. Copy file named "**XVIDDelegate.component**" into **/Library/QuickTime**.



# APPENDIX

## TROUBLESHOOTING

Problem	Cause	Solution
Power does not turn on.	Battery is inserted in the wrong direction.	Reload battery in the correct direction.
	Batteries are dead.	Replace or recharge batteries.
	The battery compartment door is open.	Make sure the battery compartment door is securely closed.
The camera does not take pictures.	The flash is charging.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
	Memory card is not formatted correctly.	The card may be defective, use a new card.
Image is not recorded when the shutter button is pressed.	The Flash is charge.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
The flash does not fire	Flash is set to OFF.	Set the flash to any mode except off.
Image is blurry or out of focus.	The camera was moving when the image was captured.	Hold the camera steady when shooting picture.
	The subject was beyond the range within which the camera can focus.	Turn the Macro mode on to ensure the subject is within 5 cm (zoom out) or 25 cm (zoom in). Do not use Macro mode when shooting distant subjects.
Image is not displayed on the LCD monitor.	A memory card with non-DCIF images (recorded with other camera) is loaded.	This camera cannot display non-DCIF images.
Recorded images are not saved in memory.	The camera was turned off/powerd down before the image was stored in memory.	If the battery low indicator appears on the LCD monitor, replace the battery immediately.
Cannot transfer images to a computer after connecting the USB cable.	USB driver is not installed.	Install the USB driver before you connect the camera to a computer / turn the camera on.

## SPECIFICATIONS

Sensor	10.13 Mega Pixels CCD / Size : 1/2.5 inch
Lens	Focal Length : f=7.94 ~22.71mm , 3X optical zoom, 4X digital zoom
LCD monitor	2.4" TFT color LCD
Focus Range	Normal: 80cm ~ Infinity Macro: (W) 5cm ~ 100cm / (T) 25cm ~100cm
Aperture	F/2.8 ~ 5.1
Shutter	8 ~ 1/2000 sec.
File Format	Still Image: JPEG (EXIF 2.2 compatible) , DCF compatible, Support DPOF, PictBridge available Video: MPEG 4 with Audio / Audio: WAV
Resolution	Still Image: 3648x2736 / 3648x2432(3:2) / 3264x2448 / 2560x1920 / 2048x1536 / 640x480 Video: 640x480 / 320x240 / 160x128
Scene Mode	Aperture priority / Shutter priority / Manual / Portrait / Landscape / Sunset / Night Scene / Text / Backlight / Kids / Beach & Snow/ Close up/ Sports / Fireworks
Sensitivity	Auto / ISO 50 / ISO 100/ ISO 200
White Balance	Auto / Daylight / Cloudy / Tungsten / Fluorescent (H) / Fluorescent (L) / Custom
Exposure Control	-2EV to +2EV in 1/3 step
Metering	Center-weighted / Multi / Spot
Burst	4 shot / snap
Self-timer	2 sec. / 10 sec. / Double
Flash	Auto / Red eye reduction / Always on / Slow sync / Always off
Photo Effect	Black & White / Sepia / Negative Art / Mosaic
Storage	32MB internal memory SD slot
TV system	NTSC / PAL
Power Supply	AA rechargeable Ni-MH battery X2 AA alkaline battery X2
Ambient temperature	Operating: 0°C to 40°C Storage: -20 to 60° C
Microphone	Built-in
Speaker	Built-in
Dimension	89 x 60.5 x 28.1 ( Max. 32.7, lens ~ LCD ) mm
Weight	Camera Body w/o battery : Approx. 140 (g)

\*These specifications are subject to change without notice.

## GETTING HELP

You can get help from the troubleshooting section, FAQ or Customer Support on our website.

### Troubleshooting Section in this User's Guide

Please refer to the Troubleshooting section first, as it contains some of the most common problems that users encounter.

### Website FAQ

Please visit our website at [www.jenoptik-camera.com](http://www.jenoptik-camera.com) to view the Frequently Asked Questions (FAQ).

### Website Customer Support

If the problem you are encountering is not listed in the FAQ section, please send us an email through our web site by clicking on Contact Us.

If you have questions concerning the operation of the camera or software installation, please have the following information ready before you contact us:

#### **Camera Information:**

Name of camera model:

Camera Serial Number:

#### **Computer Information:**

Operation System:

Computer Maker and Model:

Exact Error Message Received:

### For ArcSoft Technical Support on Photo Editing Software, please contact:

#### **In the USA and Canada**

ArcSoft, Inc.  
46601 Fremont Blvd.  
Fremont, CA 94538  
Tel: (510) 440-9901  
Fax: (510) 440-1270  
E-mail: [support@arcsoft.com](mailto:support@arcsoft.com)

#### **China**

ArcSoft Beijing Co., Ltd.  
No. 6 South Capital Gym Road  
Beijing New Century Hotel Office  
Building, #1060  
Beijing 100044, China  
Tel: 8610-6849-1368  
Fax: 8610-6849-1367  
E-Mail: [tech@arcsoft.com.cn](mailto:tech@arcsoft.com.cn)

#### **Japan**

ArcSoft Japan  
9F, 1-21-9, Higashi-Gotanda,  
Shinagawa-ku,  
Tokyo 141-0022, Japan  
Tel: +81-3-5795-1392  
Fax: +81-3-5795-1397  
E-Mail: [support@arcsoft.jp](mailto:support@arcsoft.jp)

#### **Europe**

Unit 14, Shannon Industrial Estate  
Shannon, Co. Clare, Ireland  
Tel: +353 (0) 61-702087  
Fax: +353 (0) 61-702001  
E-Mail: [europe@arcsoft.com](mailto:europe@arcsoft.com)

#### **Taiwan**

ArcSoft Inc. Taiwan Branch  
Tel: +886 (0) 2-2506-9355  
Fax: +886 (0) 2-2506-8922  
E-Mail: [support@arcsoft.com.tw](mailto:support@arcsoft.com.tw)

#### **Latin America (local call only)**

Tel (Brazil): 00817-200-0709  
Tel (Chile): 800-202-797  
E-Mail: [latinsupport@arcsoftsupport.com](mailto:latinsupport@arcsoftsupport.com)



## SAFETY TIPS AND MAINTENANCE

### Cleaning the camera body

Please use a soft dry cloth to clean the camera.

### Cleaning the lens and LCD

1. Blow off dirt or dust with a blower or canned air.
2. Gently wipe the lens and/or LCD with a micro-fiber cloth.
3. To remove dirt or residue, moisten the cloth with lens cleaning fluid and gently wipe the lens and/or LCD.

**CAUTION:** Do not apply the fluid directly onto the lens or LCD.

### Cleaning the battery contacts

As a matter of routine operation and handling, should any debris or foreign contaminant deposit itself on the battery contacts in the camera and/or on the batteries, follow steps below to clean the battery contacts to ensure proper electrical operation:

1. Wet the tip of a cotton bud/swab with rubbing alcohol and squeeze the excess alcohol from the bud/swab.
2. Wipe the battery contacts inside the camera battery compartment and both ends of the batteries lightly with the damp bud.
3. Allow the contacts to dry before placing batteries in the camera.

#### **Caution:**

- 1) Do not press hard during cleaning, as this will cause damage to the battery contacts.
- 2) Do not use water to clean the contacts, as this will increase the chance of oxidation.
- 3) Do not use Acetone or Nail Polish remover to clean the contacts as this may adversely affect camera operation.

### Safety Tips

#### **Precautions for the camera**

- Do not attempt to modify this camera in any way. This may cause a fire, electric shock or severe damage to the camera.
- Do not use the flash in close proximity to people or animals.
- When taking photographs, never point the lens of the camera directly into very strong light.
- Please do not use this product in close proximity to flammable or explosive gases as this could increase the risk of explosion.
- For safety reasons keep this product and accessories out of reach of children or animals to prevent accidents.
- Do not swallow batteries or small camera accessories.
- Keep the camera away from water and other liquids, and never let it get wet. Do not use outdoors when it is raining or snowing.
- Should any form of liquid enter the camera, do not use it. Switch the camera off, and then remove the batteries. Do not continue to use the camera as this may cause a fire or electric shock.
- Do not insert or drop metallic or inflammable foreign objects into the camera through access points e.g. card slot and battery chamber. This may cause a fire or electric shock.
- Do not operate this camera with wet hands. This could pose a risk of electric shock.
- Under the environment with electrostatic discharge, the camera may malfunction and require the user to reset the camera.
- Under the environment with electrical fast transients (EFT), the camera may lose function and require user to reset the camera.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.
- Please avoid using the camera in high or low temperature. Operation temperature range 32°F - 104°F (0°C- 40°C).
- It is normal that the temperature of the camera body rises after being in use for a long period.
- Do not leave this camera in places subject to extremely high temperatures such as in a sealed vehicle, direct sunlight or other places with extreme variances in temperature. Exposure to extreme

temperatures may adversely affect the camera's internal components and could cause a fire.

- Always use the camera and its accessories in a well-ventilated area.
- Allowing dust to accumulate in the camera over a long period of time is hazardous and in extreme circumstances may cause a fire. It is best to clean your camera prior to seasonal periods of high humidity.

#### **Precautions for batteries**

- Dispose of the battery in a manner that complies with applicable laws.
- Leakage, overheating, or burst battery could result in fire or injury.
- Do not short circuit, heat or dispose of batteries in fire.
- Ensure the battery is positioned correctly with regard to polarity.
- Battery may lose power if kept inside the camera for a long time without using. Please remove the battery while the camera is not in use.
- Batteries may not work normally under 32°F (0°C).

#### **Precautions for SD Memory Cards**

- In the event of malfunction or damage, it is possible that data may be lost. Concord Camera is not responsible in any way for such data loss.
- Do not touch the terminals with hands or metal objects.
- Keep dust, water and foreign objects away from the terminal section.
- Avoid heat, liquid and direct sunlight when using and for when storing.
- Do not open the battery/card cover or remove the SD Memory Card while data is being read or written.
- Do not dismantle or modify.
- The recorded data may be lost if the card is affected by strong static electricity, electrical shock, during card repair or malfunction.
- When using SD Memory Cards do not change the attributes (read-only, etc.) of the files (pictures (JPEG) or video clips (AVI) on the card. Doing so may prevent the camera from working properly when deleting, etc.
- Do not change the file names or the directory name of the pictures or video clips using a computer or save files other than pictures or video clips taken by this camera onto the SD memory card. Pictures or video clips that have been edited or added to the SD memory card with the computer may not play back and it may cause the camera to malfunction.
- The SD Memory Card includes a write-protect switch. Sliding this switch downward prevents data from being written to the card and pictures and video clips saved on the card are protected.
- Please note that pictures and video clips cannot be taken or deleted when the write-protect switch is on.
- When using a large-capacity card, writing, reading and deleting may take some time.
- Do not store the card in places with high humidity, dusty places or where static electricity or electromagnetic fields are likely to occur.
- Images stored in the memory card may be ruined or damaged if you turn off the camera while it is in process of reading, writing or formatting etc.
- SD cards are delicate electronic devices. Please do not bend or drop them
- Please do not place the SD card in or near to an environment of strong electronic or magnetic fields such as loud speakers or TV receivers.
- Please keep the SD card in its bag or case when not in use.
- It's normal that the SD card is warm after use.
- Please make sure you switch off the camera before you remove the SD card.
- Do not open the battery/memory card door or remove the SD Memory Card while the camera is reading, writing or formatting the card.

**REGULATORY INFORMATION****FC INFORMATION**

**FCC WARNING:** This equipment meets the limits for a Class B digital device, pursuant to Part 15 of FCC rules. Only the cable supplied with the camera should be used. Operation with other cables is likely to result in interference to radio and TV reception and could void the user's authorization to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

***Tested to comply  
with FCC standards  
for HOME OR OFFICE USE***

Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment.

**USER INFORMATION**

**Note:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CE** - This product is in conformity with Directive 89/336/EEC.



**Disposal of used Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product, or in the in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you have purchased the product.

Visit Concord on the Internet  
[www.jenoptik-camera.com](http://www.jenoptik-camera.com)

JD 10.0z3 EasyShot User's Guide  
Copyright 2006 Concord Camera Corp.

Version 1.0  
586220-00

R1

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>