




JWM-120

AM/FM SHOWER RADIO

LOCATION OF CONTROLS

1. Rotating Hook Handle
2. TUNING Control
3. VOLUME Control (Power On/Off)
4. Speaker
5. AM/FM Band Select Switch
6. Battery Compartment Door

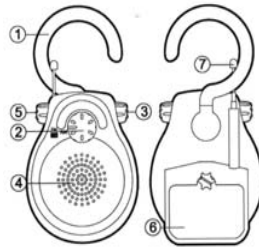

CAUTION: SPLASH RESISTANT

This unit has been constructed to resist mild steam and light splashes from the shower or bath only. It should never be operated under running water and under no circumstances should it ever be fully immersed in water.

POWER SOURCE

This Shower Radio operates on 4 x 'AAA' size (UM-4) batteries (not included).

1. Open the Battery Compartment (located on the rear of the unit) by rotating the screws counterclockwise and lift off the Cover.
2. Following the polarity diagram (+ and -) as shown inside the battery compartment, insert 4 x 'AAA' size (UM-4) batteries.
3. Put the Battery Compartment Cover back on and rotate the screws clockwise to secure it in place.
IMPORTANT: Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
4. For better performance and longer operating time, we recommend only using alkaline-type batteries.
5. (a) Do not mix old and new batteries.
(b) Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
6. If the unit is not to be used for an extended period of time, remove the

batteries. Old or leaking batteries can cause damage to the unit and will void the warranty.

7. Do not dispose of batteries in fire, batteries may explode or leak.

RADIO RECEPTION

1. Turn on the unit by rotating the ON/OFF Volume Control clockwise until a "click" is heard.
2. Set the AM/FM Band Select Switch to "AM" or "FM" for the desired radio band.
3. Turn the TUNING Control to select the desired radio station.
4. Adjust the ON/OFF Volume Control to obtain the desired sound level.
5. Turn off the unit by rotating the ON/OFF Volume Control fully counterclockwise until a "click" is heard.

TIPS FOR BETTER RADIO RECEPTION

1. To insure maximum FM tuner sensitivity, try rotating the unit to obtain the best possible reception.
2. When tuning in AM reception, be sure to place the unit in a vertical position. To insure best AM sensitivity, try repositioning the unit until the best reception is obtained.

CARE AND MAINTENANCE

1. Clean the unit with a damp (never wet) cloth. Solvents or detergents should never be used.
2. Avoid leaving the unit in direct sunlight or in hot or dusty places.
3. Keep the unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. This unit has rubber seals to minimize the risk of moisture getting inside. However, do not immerse it in water since permanent damage to the electrical and mechanical parts will result.
5. Always wipe the outside of the cabinet thoroughly if it becomes wet with moisture or water splashes. This will help to prevent the internal parts of the unit from entry of water and possible moisture damage.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Radio Receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SERVICE

Please refer to the instructions on the enclosed warranty card for returning your unit for service. When returning the unit, please remove batteries to prevent damage to the unit in transit and/or from possible battery leakage. We are not responsible for batteries returned with the product or for the cost of replacement.

*Distributed by:
Spectra Merchandising International, Inc.
Chicago Industry Tech Park
4230 North Normandy Avenue
Chicago, IL 60634, U.S.A.*

Please have model number ready, for Customer Service, call 1-800-777-5331

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>