

JENSEN®

Portable MP3 Speaker



**USER MANUAL
SMPS-85**

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.**

DEAR JENSEN[®] CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on the unit. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SMPS-85

Serial Number: _____



WARNING

- Do not throw the product into fire to avoid danger of explosion.
- Do not immerse into water or get soaked since the battery charging function will be lost.
- Place the product far away from heat sources, and protect the product from direct sunlight.
- Do not use the product where electric appliances are prohibited.
- Protect the product from violent impact and vibrations.
- No compensation responsibility for malfunctions caused by improper use.
- Do not attempt to disassemble or alter any part of the unit that is not expressly described in this guide. Internal inspections, alternations and repairs should be conducted by qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture

The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a set basement.

2. Ventilation

This unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.

3. Heat

The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

4. Power Source

The unit should be operated by the power source described in the operating instructions or as marked on the appliance.

5. Cleaning

The unit should be cleaned properly with care.

6. Objects and Liquid Entry

Care should be taken so that objects do not fall and liquids are not spilled into any opening or vents

located on the product.

7. Attachments

Do not use attachment not recommended by the product manufacturer.

8. Damage Requiring Service

This unit should be serviced by qualified service personnel when:

- A. The audio input cord has been damaged.
- B. Objects have fallen into or fluid has been spilled into the enclosure.
- C. The unit has been exposed to rain.
- D. The unit has been dropped or the enclosure damaged.
- E. The unit exhibits a marked change in performance or does not operate normally.

9. Periods of Nonuse

If the unit is to be left unused for an extended period of time, such as a month or longer, the connecting cord should be unplugged from MP3/iPod to prevent damage or corrosion.

10. Servicing

The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instruction should be referred to qualified service personnel.

POWER SOURCES

The device is operated by 3 pcs of AAA (UM-4) battery (rechargeable/non-rechargeable).

Battery installation

1. Remove the battery compartment cover.
2. Insert 3 x "AAA" (UM-4) batteries. Observe the polarity markings when installing the batteries to avoid damaging the unit.
3. Replace the compartment cover.

Warning

1. Make sure that the batteries are installed correctly. Wrong polarity may damage the unit.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard or rechargeable batteries.
4. Only batteries of the same or equivalent type as recommend are to be used.
5. If the unit is not to be used for an extended period of time, remove the battery.
6. Do not dispose of batteries in fire, batteries may explode or leak.
7. Replace the batteries when the unit stops operating properly.
8. Remove exhausted batteries from the unit, dispose promptly and properly.

ACCESSORIES

Please see below items are included in the package:

1. Stereo Earbuds (compatible with iPhone)
2. Removable Carabiner Clip
3. Neck Strap
4. Shoulder Strap
5. User Manual
6. Warranty Card

PRODUCT OVERVIEW

Outside View



Inside View



OPERATION GUIDE

1. Make sure 3 x “AAA” batteries are installed before using. See “Power Sources” section above for details.
2. Slide the ON/OFF power switch inside the speaker bag to the ON position.
3. The power indicator inside the speaker bag will light.
4. Turn on the external audio player you plan to connect to the speaker bag and set the volume output to a low setting.

5. Fully insert the audio input plug from the speaker bag into the headphone output jack of your external audio player (MP3 player, iPod® or iPhone™).
6. Gradually increase the volume output of the attached player until the desired volume level is reached.
7. During operation the attached external player (MP3 player, iPod or iPhone) can be stored inside the speaker bag. A net pouch is located inside the speaker bag for easy storage.
8. The case can be zipped up to protect your audio player during use.

TROUBLESHOOTING GUIDE

Should you experience difficulties in the use of this unit, please refer to the following chart or call 1-800-777-5331 for Customer Service.

Problems	Possible Solutions
Unit does not turn on after switch on the power switch.	<ol style="list-style-type: none"> 1. Make sure the batteries are inserted properly with the correct polarity as marked inside the compartment. 2. The batteries may be exhausted. Please change all batteries at the same time.
No sound coming from the speaker	<ol style="list-style-type: none"> 1. Make sure the volume on the attached player is not set to zero and also check the connection between the audio input jack and the external player. 2. Song files on your player may be corrupted. Please download from your computer again. 3. External player (MP3 or iPod or iPhone) is not on. 4. Check and make sure the audio input cord is not damaged.
Sound is distorted.	<ol style="list-style-type: none"> 1. Decrease the volume of the external player. 2. Sound source from your player is distorted, please download from your computer again.

SERVICE

Please refer to the instructions on the enclosed warranty card for returning your unit for service. When returning the unit, please remove batteries to prevent damage to the unit in transit and/or from possible battery leakage. We are not responsible for batteries returned with the product or for the cost of replacement.

Distributed by:

Spectra Merchandising International, Inc.

Chicago Industry Tech Park

4230 North Normandy Avenue

Chicago, IL60634, U.S.A.

Please have model number ready, for Customer Service, call 1-800-777-5331

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>