 


JE2269

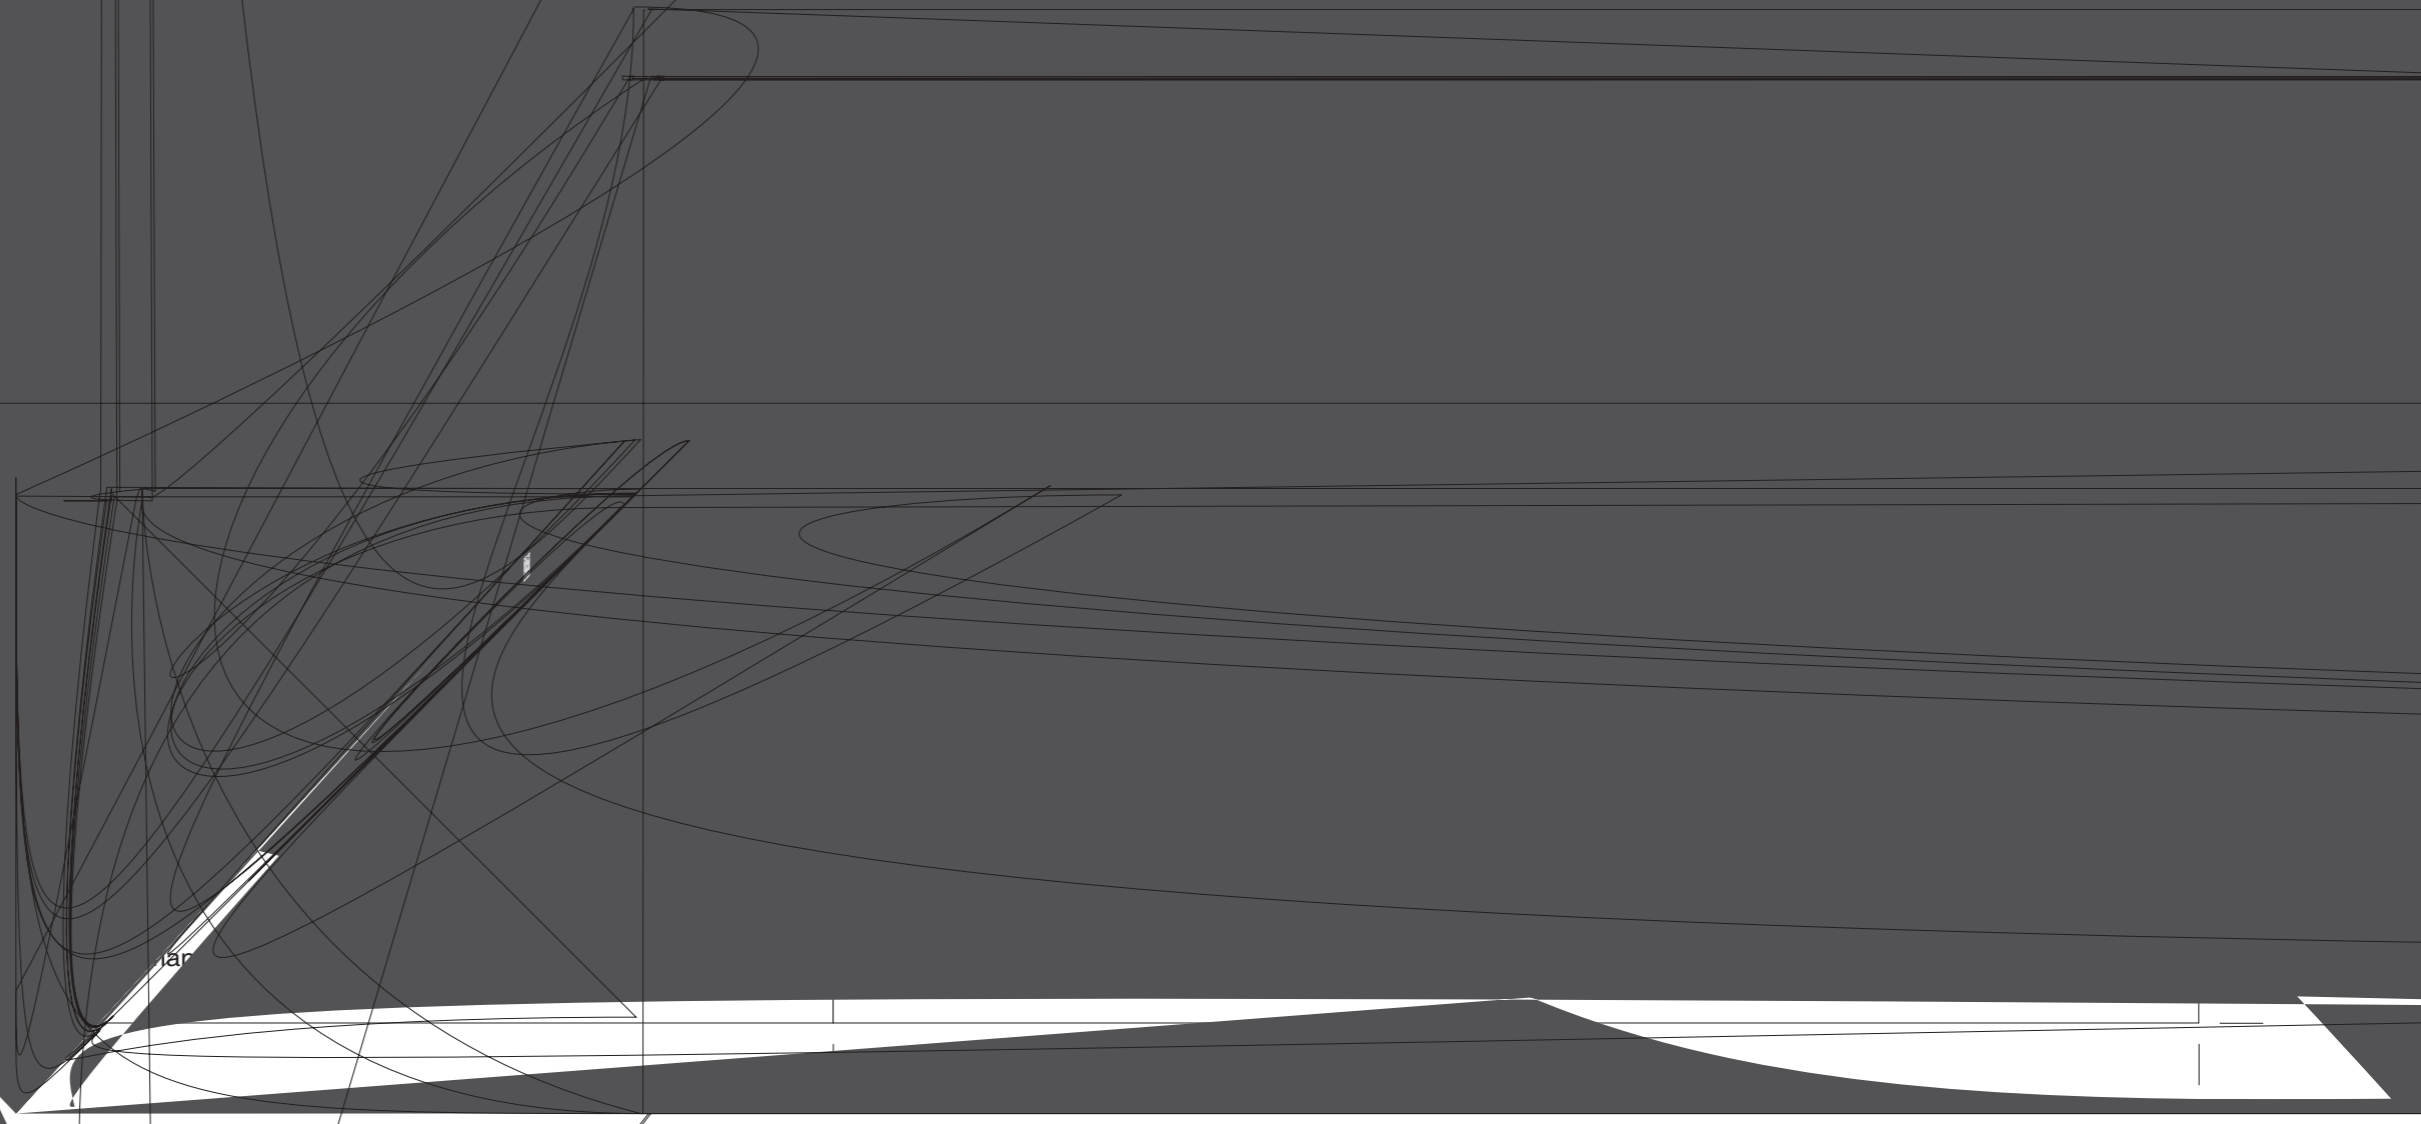

Safety Precautions:

1. Ensure the plug is securely plugged into the main socket before operating the unit.
2. Ensure the Voltage on the main socket is the same as specified on the unit.
3. Use parts only manufactured by the unit manufacturers.
4. Request a repair report from the technician/service personnel.
5. Ensure the battery is correctly installed before using the unit.

In case of the following emergencies, remove plug from the main socket immediately:

1. Plug or cables are damaged.
2. Any form of foreign objects dropped inside the enclosure.
3. Unit is being exposed to rain and/or water.
4. Unit unable to operate under normal operation.



CONTENTS

1. INTRODUCTION

Overview	01
Features	02
Contents/Accessories	03

2. FRONT PANEL CONTROL

Panel Control	04
Input/Output	04

3. REMOTE CONTROL FUNCTION

Controls & Functions	05
----------------------------	----

4. INSTALLATION GUIDE

When Connecting to a TV Cable	06
Connecting to Other Equipment	07
Input (RCA) from other Equipment	08
Output to Other AV Equipment	08
Connect Power	09

5. BASIC FUNCTIONS

Power Signal	10
Mode(SOURCE)	10
Volume Setting	11
Mute Setting	11
Channel Search	11

6. OPERATIONS

Menu Setting	12
Sleep Timer Setting	12
Video Adjust Setting	
Saturation	13
Sharpness	13
Black Level	14

CONTENTS

Contrast	14
Tint	15
Preset	15
Exit	16
Audio Setting	
Type	17
Bass	17
Treble	18
Balance	18
Return	19
CLOSED CAPTION Setting	19
V-CHIP BLOCK Setting	20
FORMAT Setting	21
Others	
Language	21
Channel Scan	22
TV Source Setting	22
External Setting	23
Speaker Setting	23
Return	24
7. ANNEX A	
LCD Maintenance	25
8. ANNEX B	
Troubleshooting	26
Common Problems	26
9. SPECIFICATIONS	27

1. INTRODUCTION

Overview :

New technology in LCD monitor allows enjoyment of more high quality picture display and higher brightness; lighter in weight and slimmer body design, power saving capabilities and low radiation, giving you a safe, relax and environmental-friendly NEW visual enjoyment.

 
Our product uses high quality original imported 22 inches 16:9 (Wide) colored "**Active Matrix TFT**". The Active Matrix TFT high decoding capabilities enable display of complicated or high quality images, presenting a vivid visual reproduction and beautiful visual display. Incorporated with a user-friendly menu, allowing easy customization to user preferences.

The unit comes with built-in screen display controls when used with the remote control, allowing you to make changes to the settings. It even support the use of wireless headphones, therefore you do not need to worry that the volume coming out from the monitor will disturb other people. The Digital True Surround Sound capabilities' from the 3D Stereo Speaker brings you the ultimate enjoyment of audiovisual effects. Digital output function, when connected to other audiovisual devices, gives you the best enjoyment in entertainment relaxation.



Product Specifications


1. 22" Television / monitor
2. 12V DC Power
3. High Performance, 70000:1
4. High Brightness 450cd/m²
5. High contrast ratio 4000:1
6. Ultra wide viewing angle
7. Front controls
8. Cable ready TV tuner
9. High output speaker
10. Built in IR transmitter
11. Wireless remote control
12. Mounting bracket optional
13. Two auxiliary monitors
composite, S-Video
14. HDTV ready

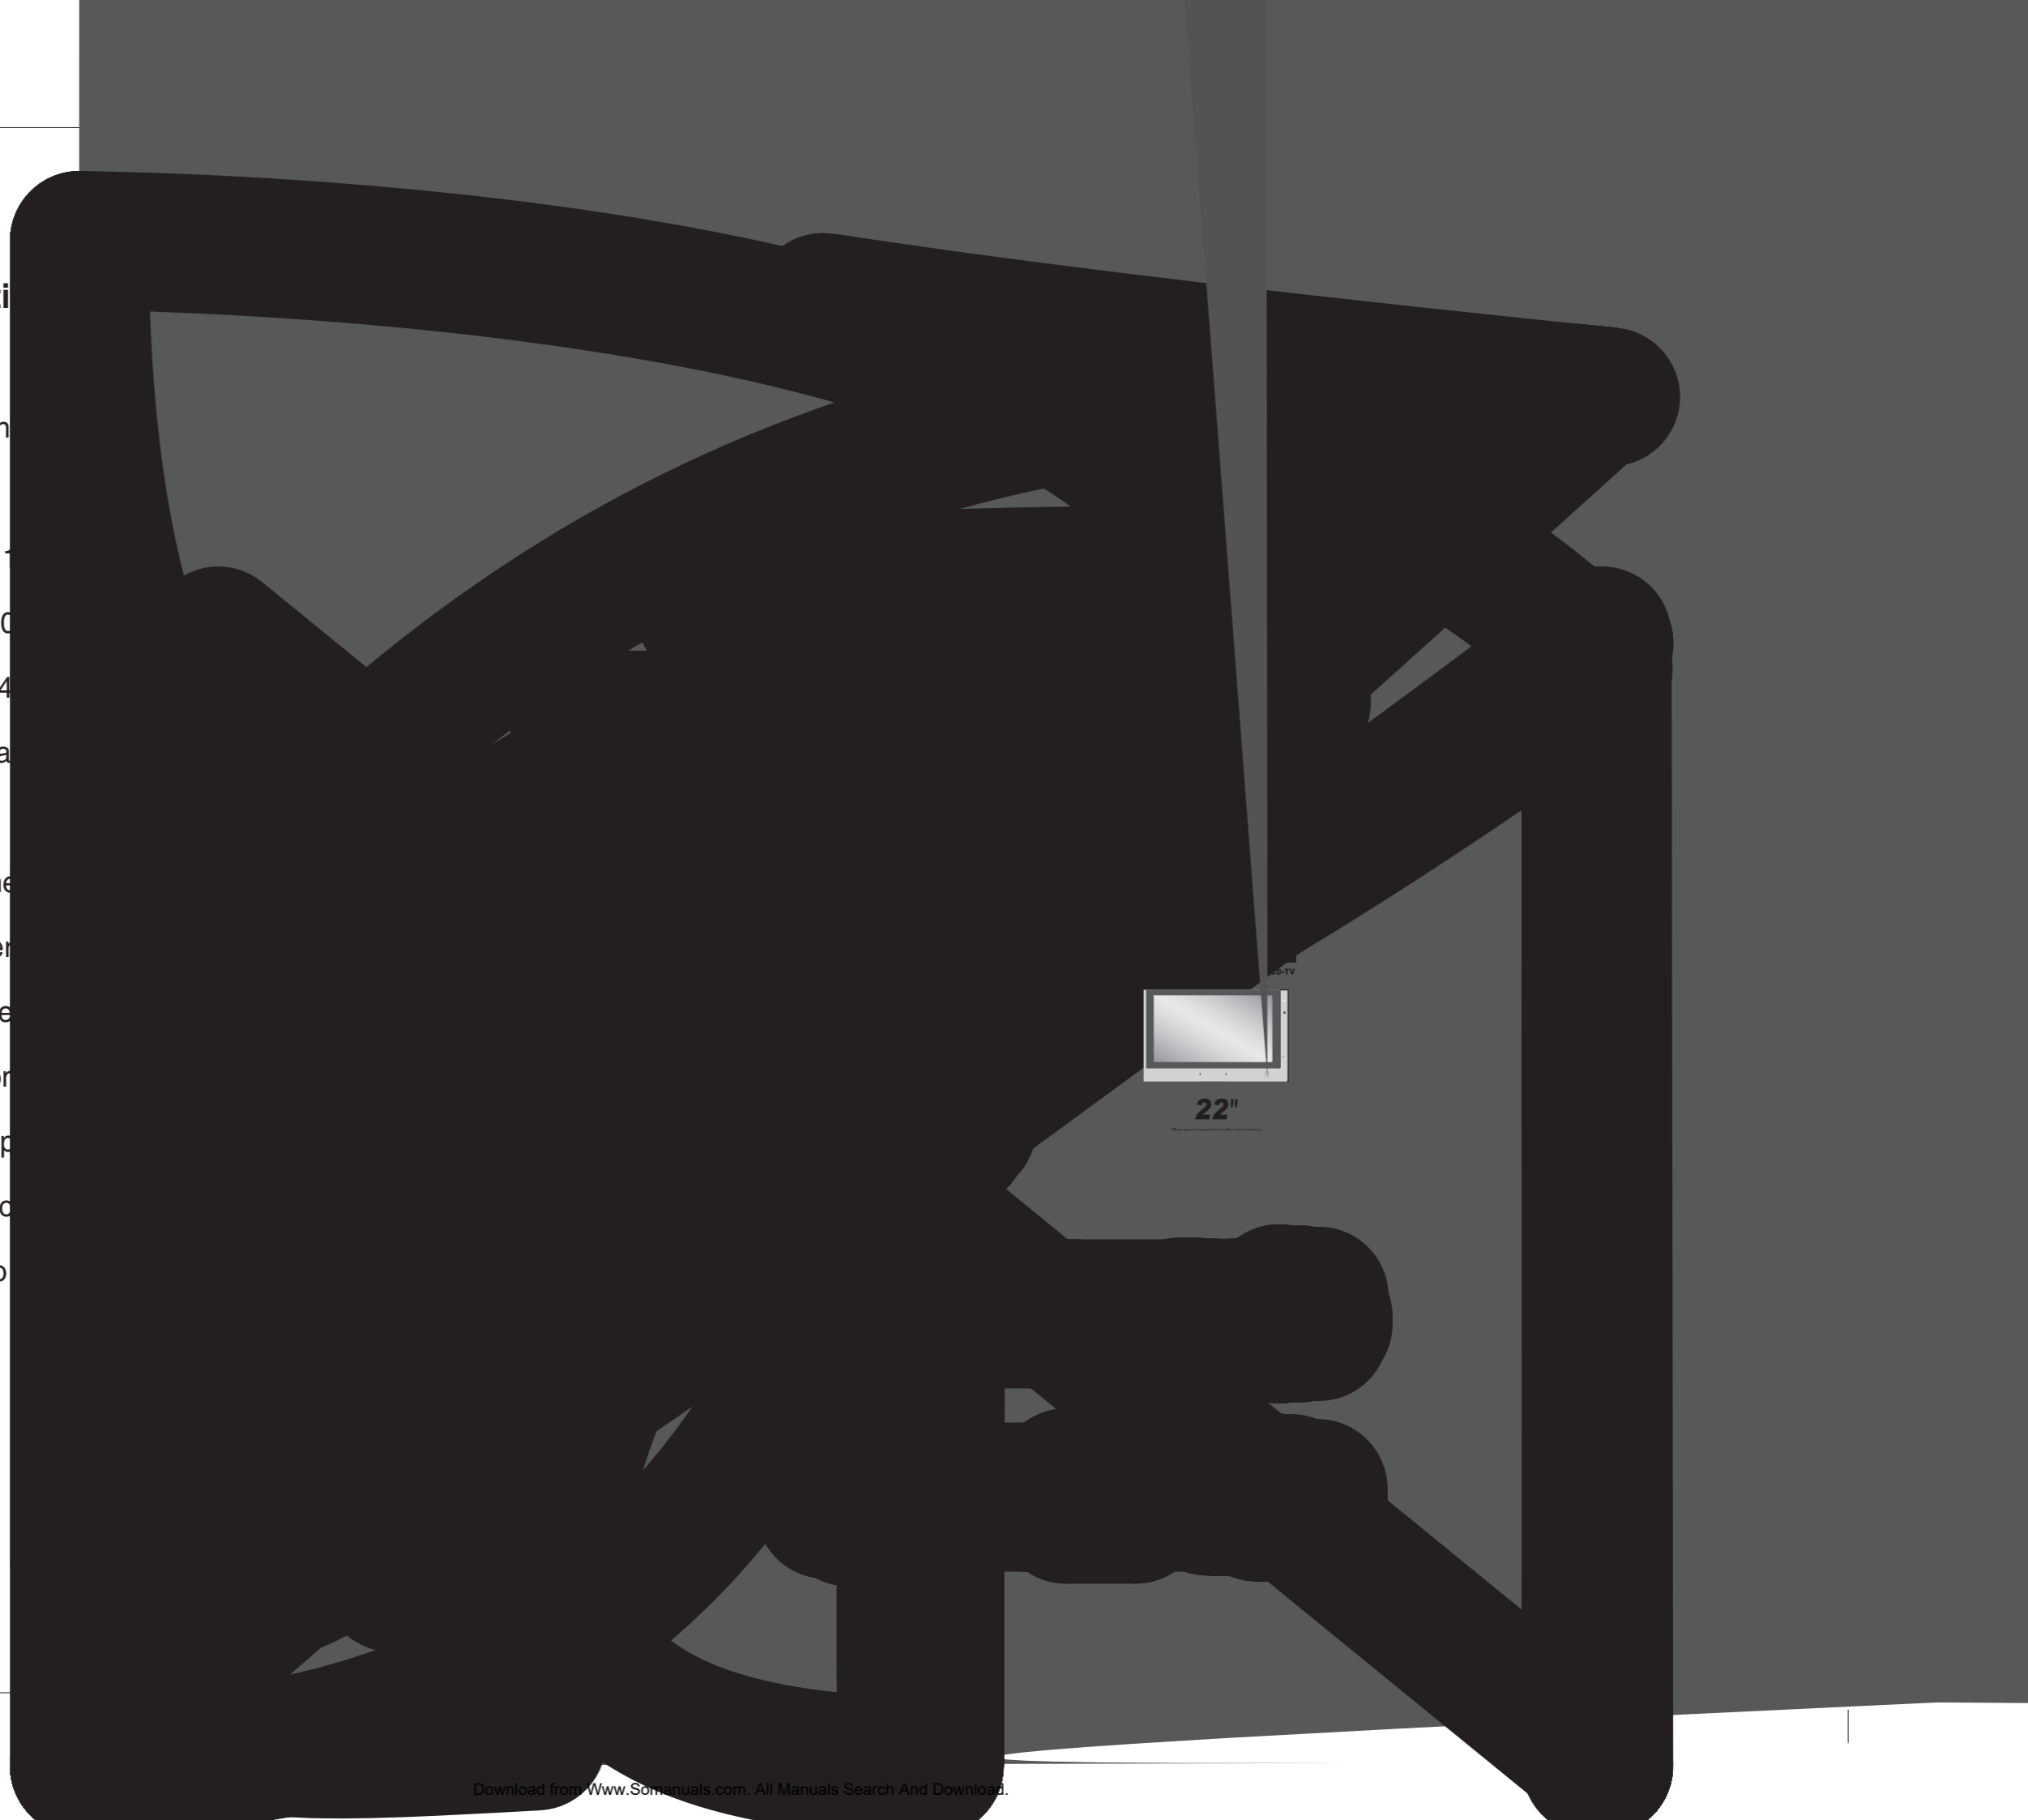

2.FRONT PANEL CONTROLS

PANEL CONTROL :

 1. POWER : Power On/Off
2. MODE : Source Select
3. CHANNEL : Channel Select
4. MENU : Menu Setting
5. VOLUME ⊕ : Increase Volume
6. VOLUME ⊖ : Decrease Volume
7. STAND BY : STANDBY Mode LED
8. SPEAKER : Loud Speaker
9. IR STEREO TRANSMITTER : For Wireless Headphone

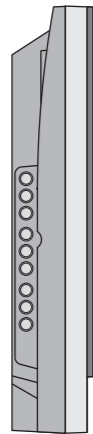

INPUT/OUTPUT :

10. AV1 : S-Video/Component Composite Video Input
11. AV1 : RCA Left Audio Input
12. AV1 : RCA Right Audio Input
13. AV2 : RCA Video Input
14. AV2 : RCA Left Audio Input
15. AV2 : RCA Right Audio Input
16. RCA Video Output
17. RCA Left Audio Output
18. RCA Right Audio Output
19. Antenna Input
20. Power Supply Socket

3. Remote Control Function :

(When using the remote control, point it towards the IR sensor.)

Battery Usage Caution:

 
 
 
 
To prevent battery leakage which may result in bodily injury or damage to the remote :

 
1. Install all batteries correctly, and as marked on the remote control.
2. Do not mix batteries: (OLD and NEW or CARBON and ALKALINE, etc.).
3. Remove batteries when the remote is not used for a long time.

1. POWER : Power On/Off
2. SOURCE : Signal Button
3. AUTO PROGRAM : Channel Scanning
4. CH / : Channel Search Button
5. MEMORY / : Favorite Channel Saved to Memory Button
6. 1/2/3/4/5/6/7/8/9/0 : Numbers Button
7. MUTE : Turn Off Volume
8. SYS MENU : System Main Menu Selection
9. SAVE/ENTER : Enter Button
10. VOLUME / : Volume Up / Down button
11. / / / : Up / Down / Left / Right Button
12. RECALL : TV channel recall button

Connecting to Other Equipment :

1. This unit is able to support various input setting. You can connect your video recorder, amplifier, game console etc, to the unit, to enjoy high quality, digital audio-visual effect.
2. Connect AV equipment using S-Video. (photo.1)
3. Using the S-Video cable, connect your equipment to the S-Video/Component/Composite socket on the TV Side Input Panel.
4. Connect your AV cable to the equipment. (photo.2)
5. Connect your AV cable to the equipment. (photo.3)

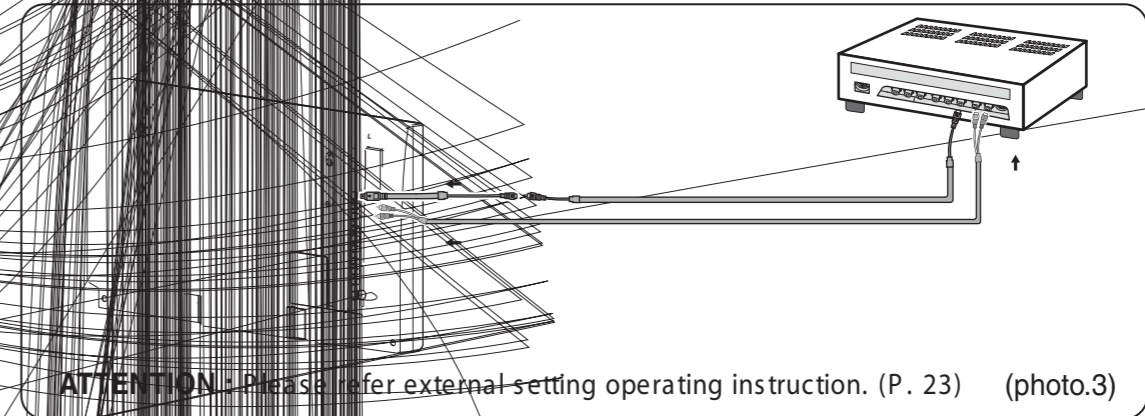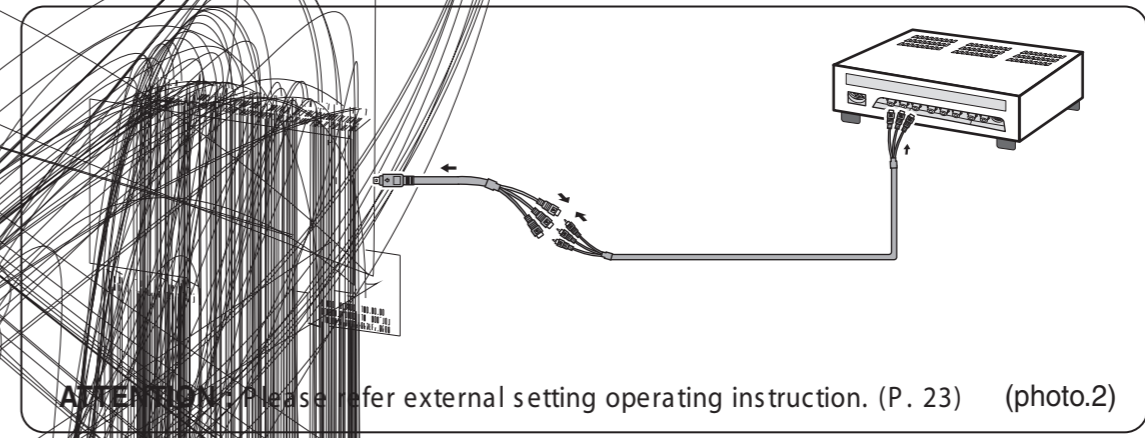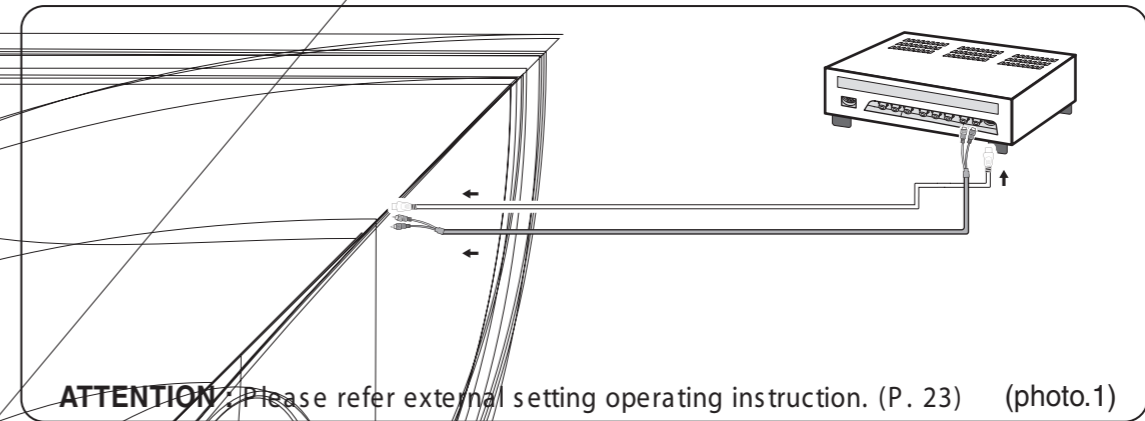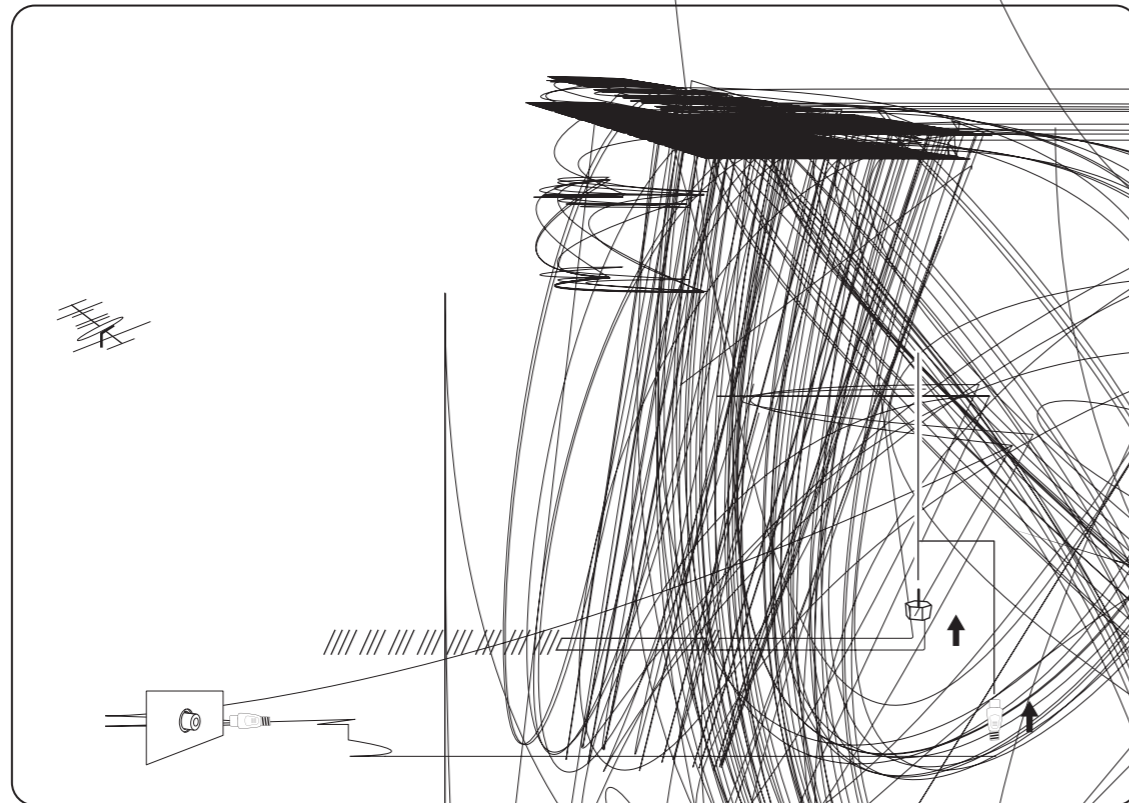

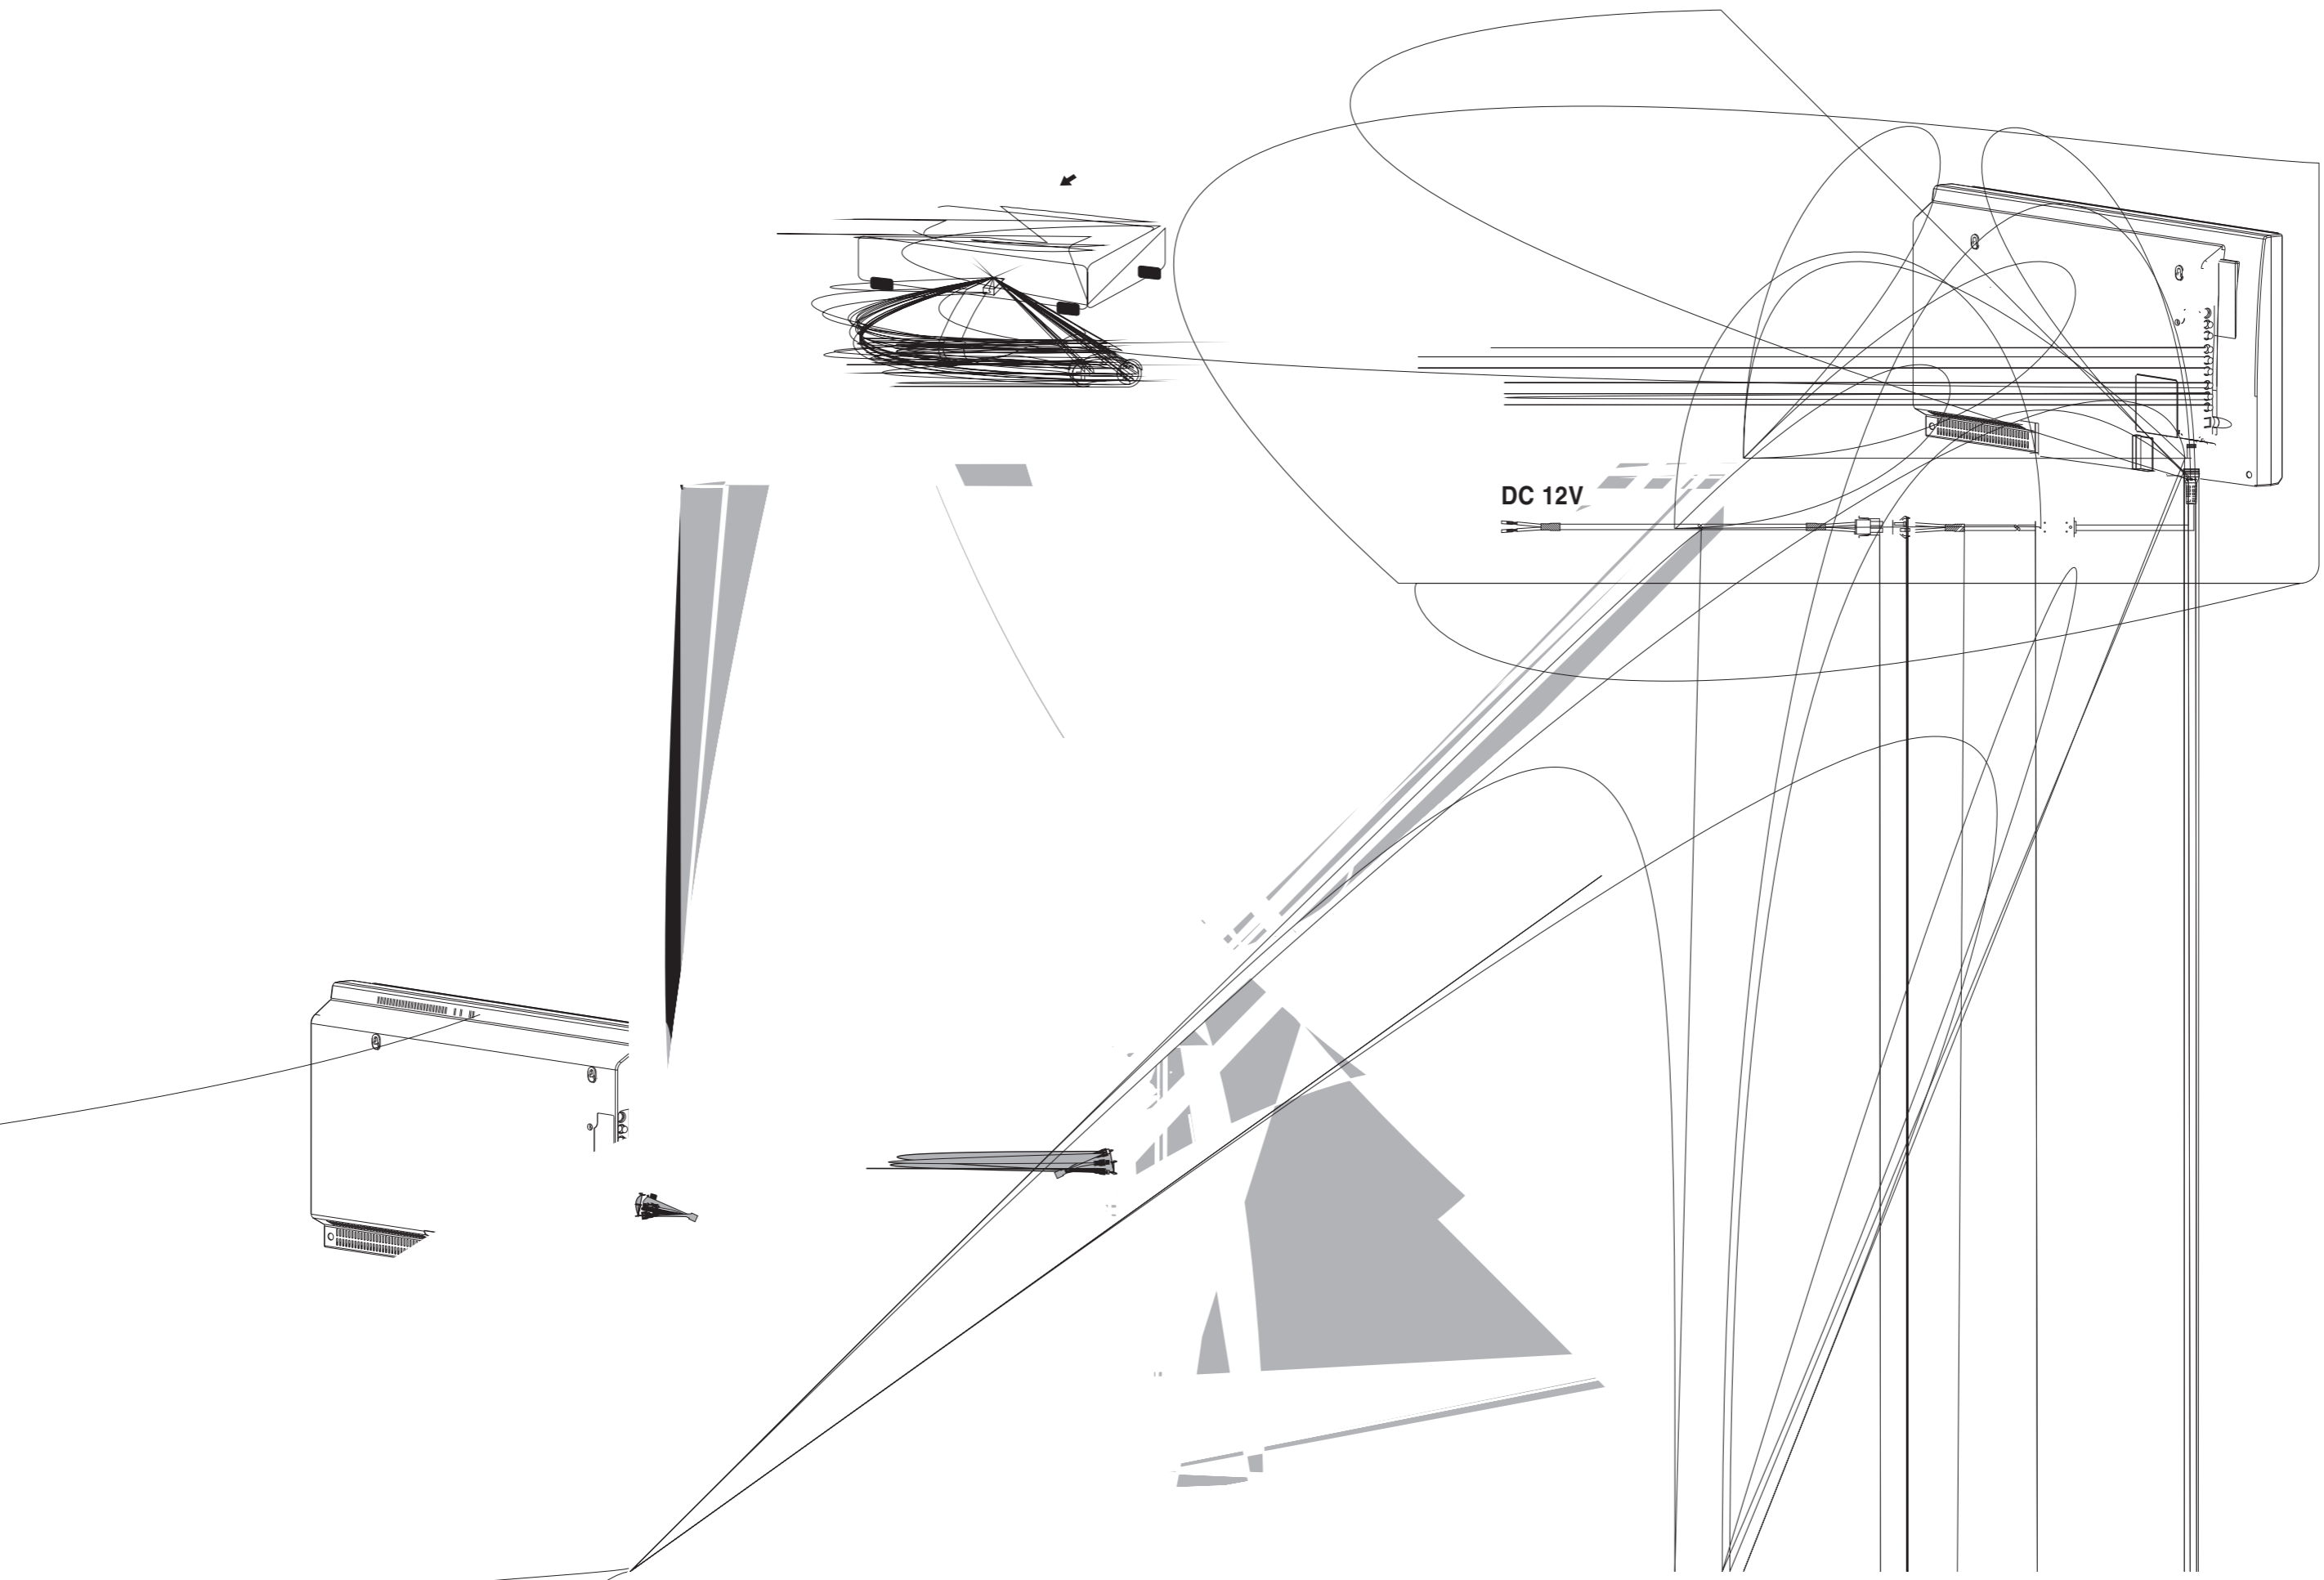

VOLUME SETTING:

Press the "Volume Up/Down" (/) button on the TV front control panel or remote control to adjust the volume level.



MODE (SOURCE):

 
1. Press the "Mode" button on the TV front panel or remote control "SOURCE BUTTON" to select from the various video source.
2. The mode setting status will change each time the "Mode" (SOURCE) button is pressed – "S-VIDEO/CVBS/CHANNEL"

 


CHANNEL SEARCH:

1. Press the "Channel Up/Down" (/) button on the remote control or the TV Front Control Panel to change/select channels.
2. Press on the Number buttons on the remote control to change/select channel directly.

** Please make sure video source is been connected properly.

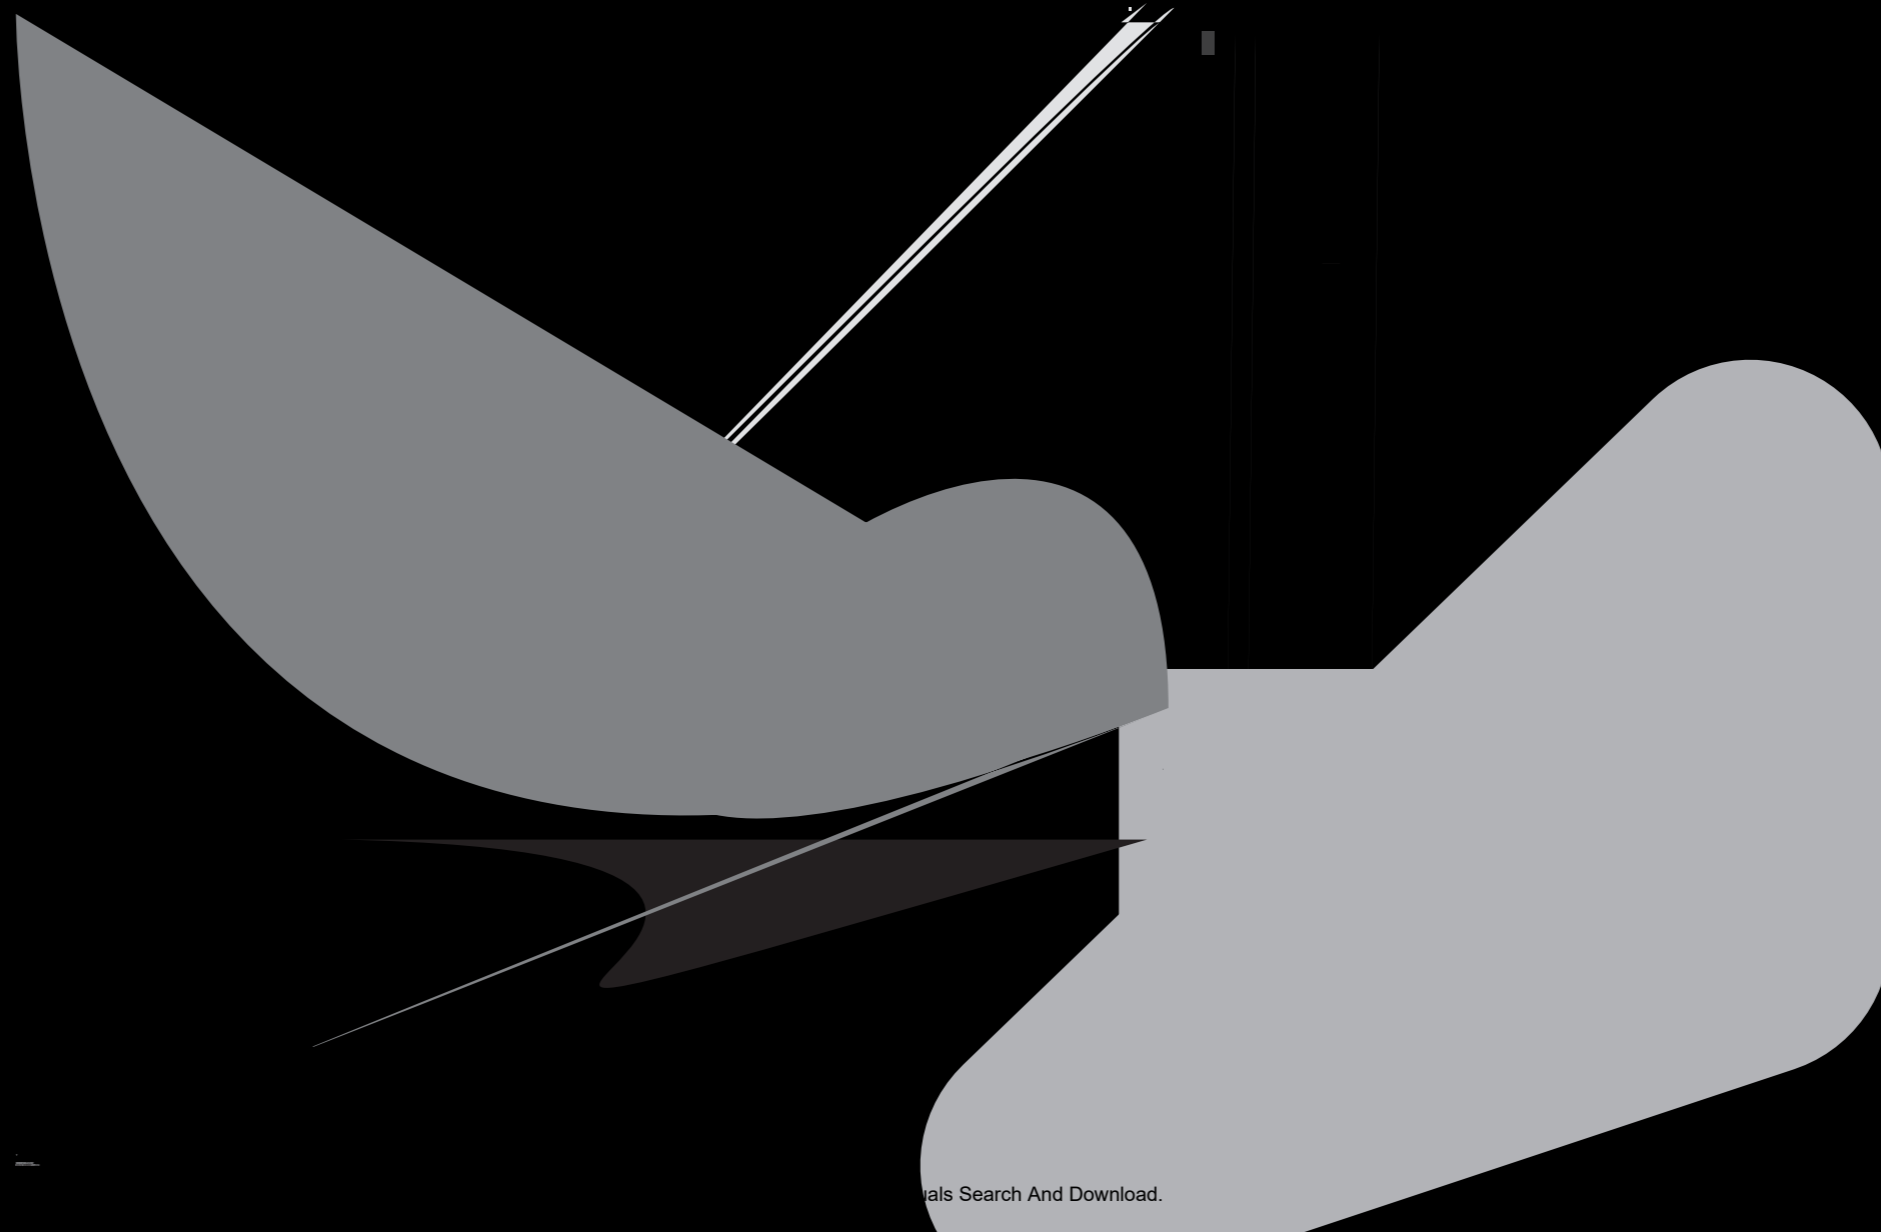

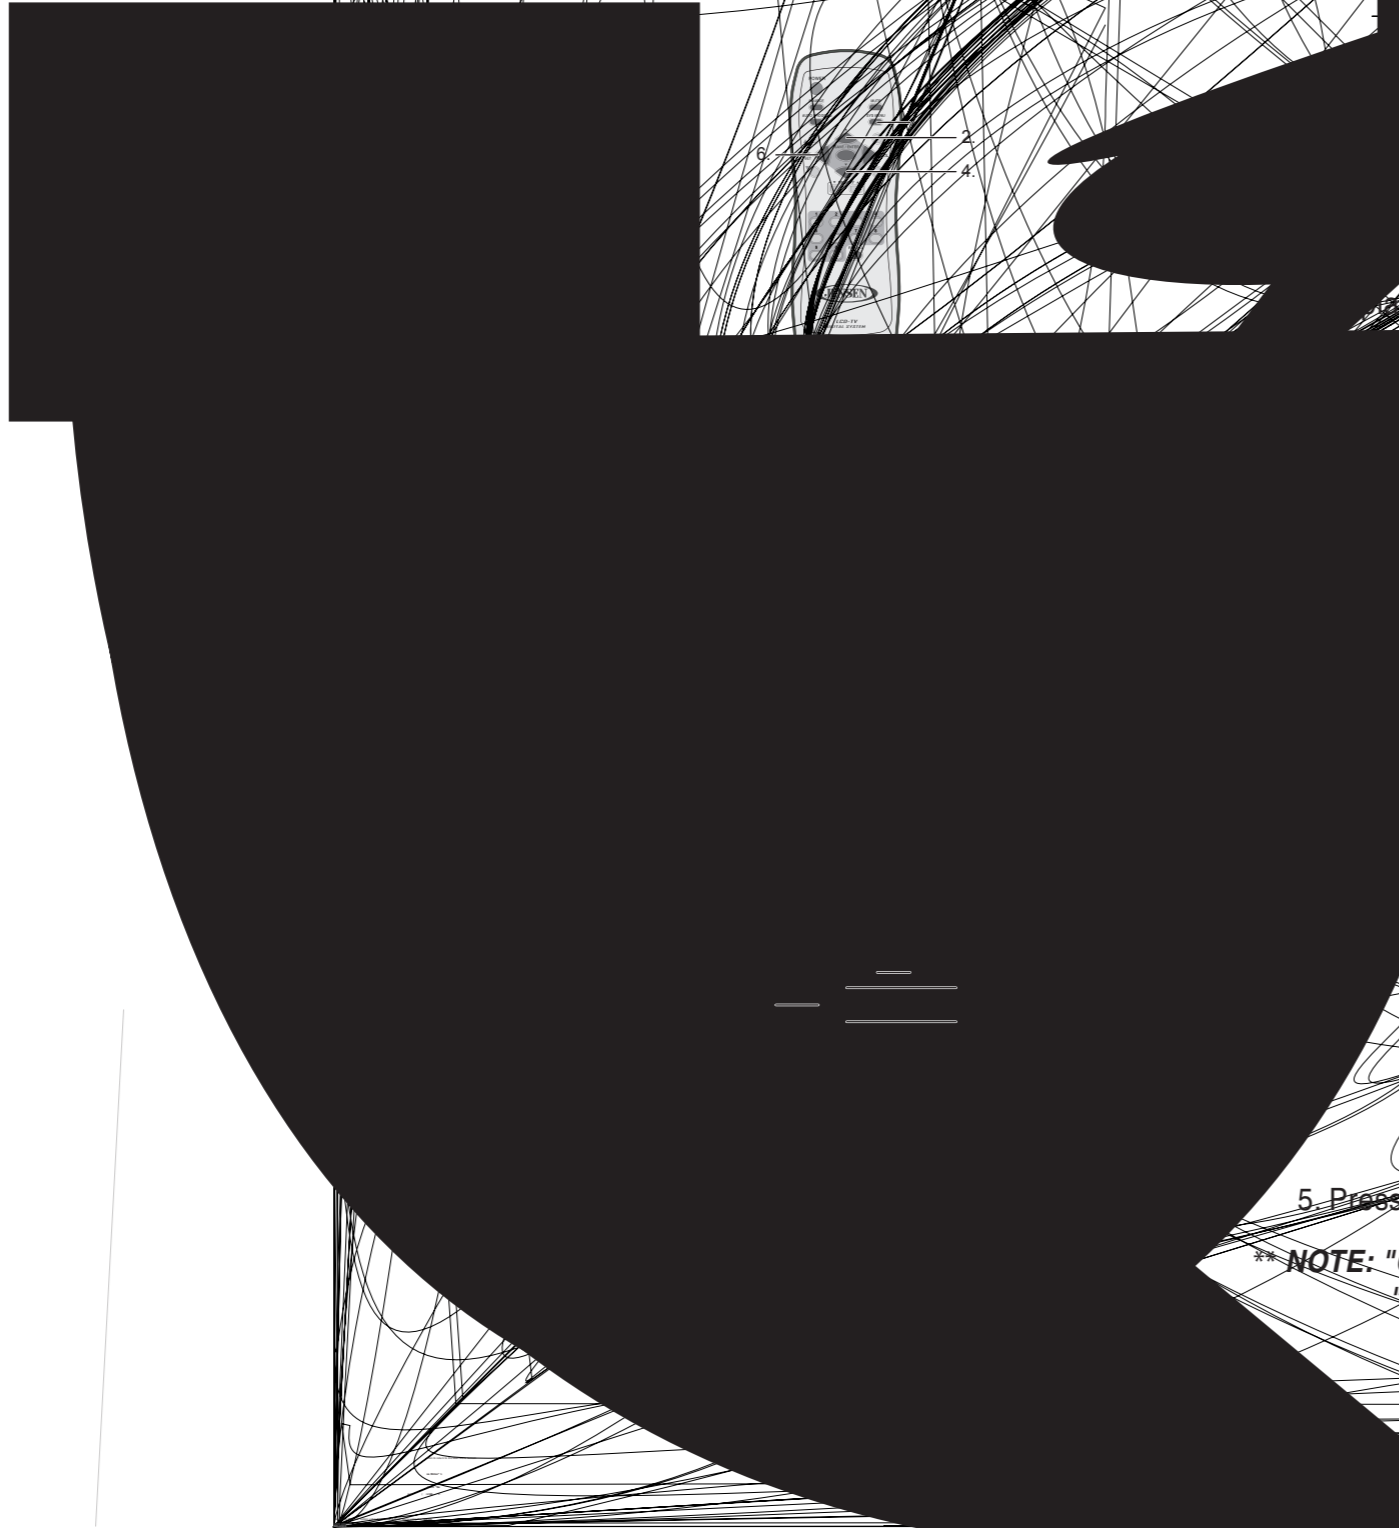

Setting:

Press **Sys Menu** button on the remote control, Main Menu options will be displayed on the TV screen.

Press **Enter** button to select **"Closed Caption"** option.


Press **Enter** button to confirm the selection.

Press **Exit** button, the OSD menu will appear **"CC1/CC2/CC3/CC4/**

MAIN MENU

- SLEEP TIMER
- VIDEO ADJUST
- AUDIO ADJUST
- **CLOSED CAPTION**
- V-CHIP BLOCK
- FORMAT
- OTHERS
- EXIT

- CLOSED CAPTION CC1
- CLOSED CAPTION CC2
- CLOSED CAPTION CC3
- CLOSED CAPTION CC4
- CLOSED CAPTION T1
- CLOSED CAPTION T2
- CLOSED CAPTION T3
- CLOSED CAPTION T4
- CLOSED CAPTION OFF




5. Press **"Sys Menu"** button on the remote control to exit main menu.

**** NOTE: "CLOSED CAPTION" function can only be used on certain system, such as "U.S.A" and "CANADA".**

 V-CHIP BLOCK Setting:


1. Press "**Sys Menu**" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "**Up/Down**" (▲/▼) button to select "**V-CHIP BLOCK**" setting option.
3. Press "**Save/Enter**" button to confirm the selection.
4. the OSD menu will show as below:

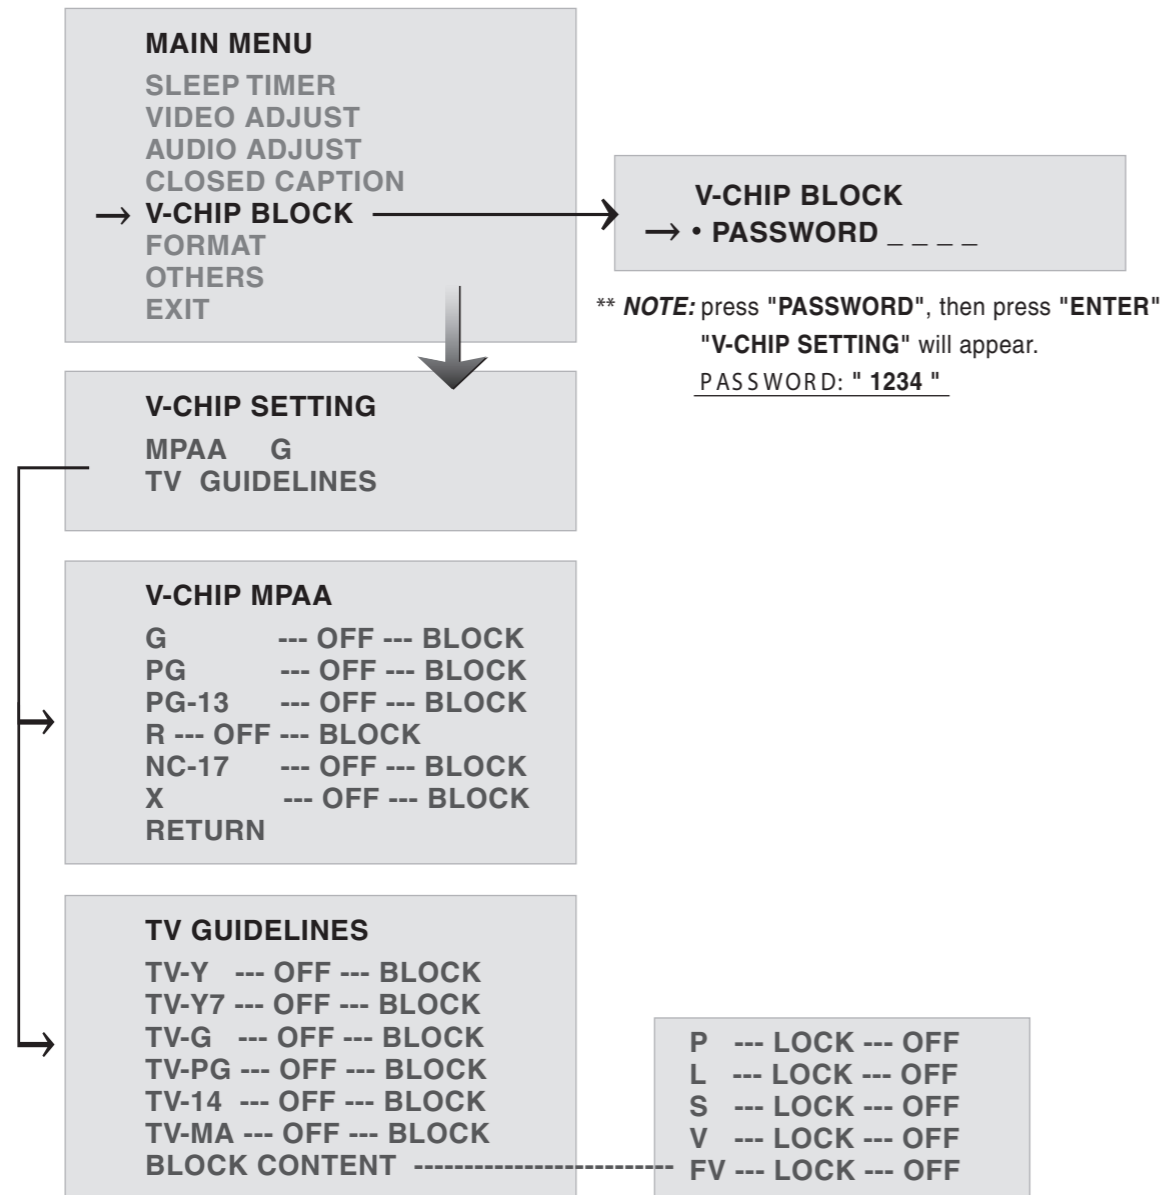

- ** NOTE:** 1. This unit supports Prevention of Violence and Pornography setting. This function is only applicable to certain disc and system with special settings.
2. The function can only be used in certain country like USA, Canada etc.


FORMAT Setting:

 1. Press "**Sys Menu**" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "**Save/Enter**" button to confirm the selection.
3. Press "**Left/Right**" (◀/▶) button to select "**FORMAT**" setting option.
4. the OSD menu will show as below:

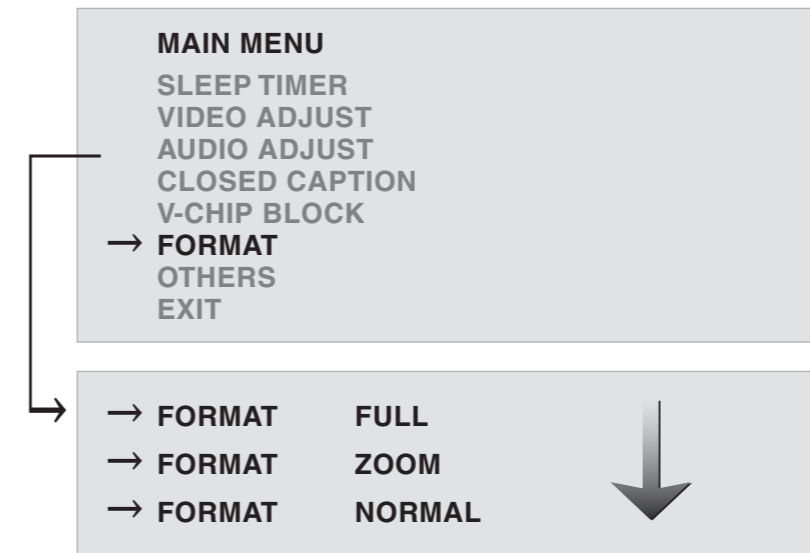

Others: Language:

 1. Press "**Sys Menu**" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "**Up/Down**" (▲/▼) button to select "**Others**" option.
3. Press "**Save/Enter**" button to confirm the selection.

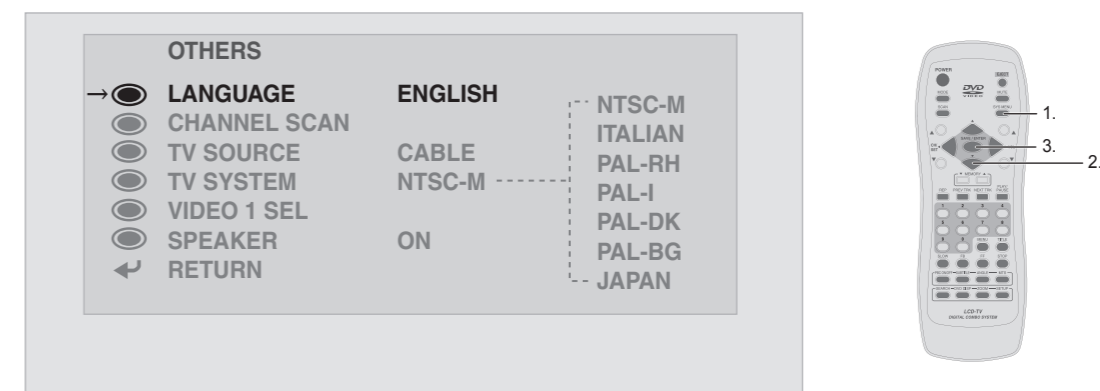


- ** Default Language Setting is preset to English Language.**
**** Only PAL TV TUNER can be selected --- PAL-BG ; PAL-DK ; PAL-I .**

Channel Scan:(Auto Program)


1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Channel Scan" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to Scan for channels and stored them to the system memory.
7. Press "Sys Menu" button on the remote control to exit main menu.

 - OTHERS
- LANGUAGE
- CHANNEL SCAN
- TV SOURCE
- TV SYSTEM
- VIDEO 1 SEL
- SPEAKER
- ← RETURN

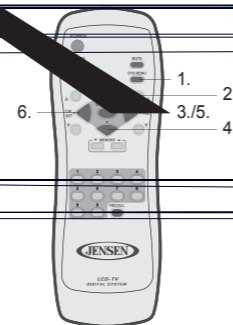

External Setting:

 1. Press remote "SOURCE" button to select video source to "S-VIDEO" mode.
1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Video 1 Select" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to select "S-Video" or "Com(Y/C) / A1 / W2" option.
7. Press "Sys Menu" button on the remote control to exit main menu.

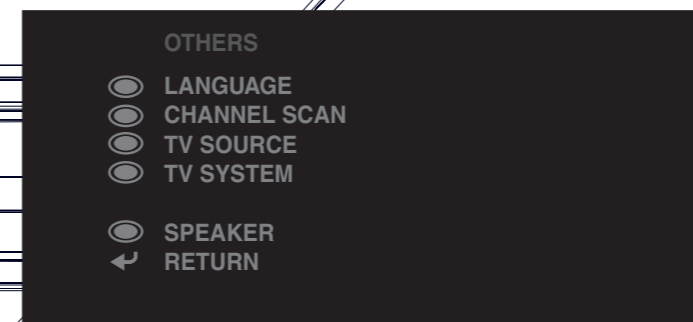


** Please set the option according to the external device specifications. (Page 7)

** After scanning is completed, press the "Save/Enter" button to confirm save.

TV Source Setting:


1. In TV Mode, press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "TV Source" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to select "Antenna" or "Cable/HRC/IRC" Option.
7. Press "Sys Menu" button on the remote control to exit main menu.

 - OTHERS
 - LANGUAGE
 - CHANNEL SCAN
 - ● TV SOURCE
 - TV SYSTEM
 - VIDEO 1 SEL
 - SPEAKER
 - ← RETURN
- CABLE
HRC
IRC
ANTENNA

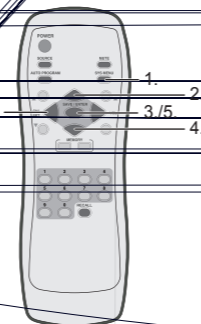

Speaker Setting:


 
1. Press "Sys Menu" button on the remote control, Main Menu options will be displayed on the TV screen.
2. Press "Up/Down" (▲/▼) button to select "Others" option.
3. Press "Save/Enter" button to confirm the selection.
4. Press "Up/Down" (▲/▼) button to select "Speaker" option.
5. Press "Save/Enter" button, the text of the selected option will be highlighted in RED.
6. Press "Left/Right" (◀/▶) button to select "ON/OFF" option.
7. Press "Sys Menu" button on the remote control to exit main menu.

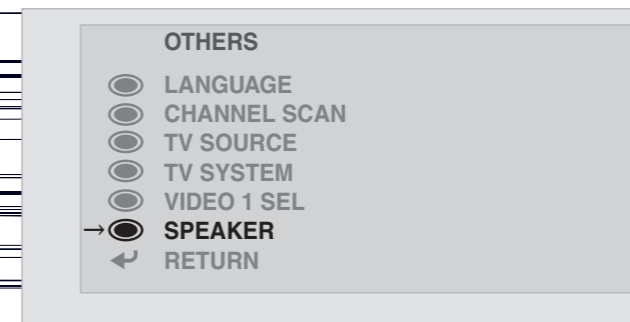

** Once the speaker off is set, the audio output will still active. To mute audio output, press "MUTE" button.

Return:

  1. Select the "Return" option under the "Audio Adjust" Menu using the "Up/Down" (▲/▼) button.
2. Press "Save /Enter" button to return to the Main Menu Screen.

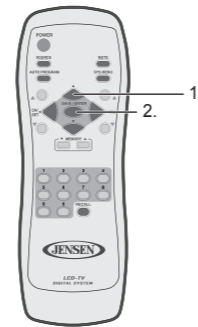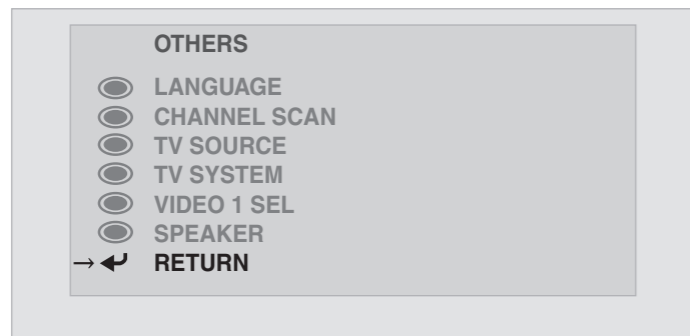

7. ANNEX A

LCD Monitor Care & Cleaning Tips:

To avoid possible shock hazard, be sure the LCD TV is turn off and unplugged from the main electrical outlet before cleaning.

Do not use any form of solvents on the LCD monitor.

Cleaning the LCD Monitor:

1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

Cleaning the Enclosure:

1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

8. ANNEX B

Troubleshooting:

If the unit fails to operate normally, try solving the problems using the guide below. If the problem persists, switch off the unit and ask the dealer or customer services officer for assistance. Do not attempt to repair the defective unit yourself. Do not endanger yourself as high voltage is involved.

1. No Picture

- Check that the power cord is plugged into the main socket and the power supply is turned on.
- Check the contrast and brightness setting.
- Check the Antenna connection to see if it is properly connected to the LCD TV Input Terminal.
- Be sure you have selected the correct source mode.

2. Snowish Picture

- Check to see if the Antenna is correctly connected.
- Check to see if the picture setting is correctly set.

3. Flickers Picture

- Check that the power coming from the main socket is sufficient.
- Check that unit is not placed too near speakers or magnetic objects.
- Check to see that the unit setting is correctly set.

4. No Sound

- Check that mute function is off.
- Increase the volume.

5. Remote Control not Working.

- Check batteries are installed correctly, replaced if necessary.
- Aim the remote controller towards the unit remote sensor.

9. SPECIFICATIONS:

PRODUCT TYPE	22" 16:9 DIGITAL LCD TV
LCD PANEL	22" 16:9 LCD PANEL
BRIGHTNESS	400cd/m ²
RATIO	400:1
BACKLIGHT	50000hrs NORMAL OPERATION
DISPLAY ANGLE	Verhical:160° / Horizontal:160°
AV INPUT/OUTPUT	S-VIDEO/COMPONENT/COMPOSITE AV INPUT/COMPOSITE AV OUTPUT
OSD LANGUAGE	ENGLISH
OPERATING VOLTAGE	DC12V, 7A
IR TRANSMITTER	L:2.3Mhz R:2.8Mhz EFFECTIVE ANGLE:45° EFFECTIVE RANGE:4 METRE
OPERATING VOLTAGE	REMOTE RANGE:5 METRE
TV SPECIFICATION	NTSC
ACCESSORIES(INCL)	1. OPERATING MANUAL 2. REMOTE CONTROL(w/BATTERY) 3. DC POWER HARNESS 4. S-VIDEO SIGNAL CABLE 5. ANTENNA SIGNAL CABLE 6. S-Video to Component Video Conversion Cable 7. S-Video to Composite Video Conversion Cable

WARRANTY

90 DAY / 12 MONTH LIMITED WARRANTY

AUDIOVOX SPECIALIZED APPLICATIONS, LLC (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 days from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. After the initial 90 day period and for a period of 12 months from the date of the original purchase, the Company will supply at no charge a replacement for any defective part(s).

To obtain repair or replacement within the terms of this warranty, the end user should contact the O.E.M. The product is to be delivered to the OEM or original place of purchase, with proof of warranty coverage (e.g. dated bill of sale, and serial number of the unit, and vin#), specification of defect(s), transportation prepaid, to an approved warranty station.

This warranty does not extend to the elimination of externally generated static or noise, to the correction of antenna problems, to costs incurred for removal or reinstallation of the product, or to damage to any tapes, cd's, dvd's, speakers, accessories, or electrical systems.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has been damaged through alteration, improper installation, mishandling, misuse, neglect, or accident. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE, AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THE PRODUCT.

This warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 30 DAYS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

AUDIOVOX SPECIALIZED APPLICATIONS, LLC.
Visit us at www.asaelectronics.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>