



MSR7007 Quick Reference Guide

M A R I N E

Basic Operation

Power On/Off: Push to turn power ON or OFF.

MUTE: Press to MUTE audio.

MODE: With each press of the button the radio will change through the following modes: TUNER (AM/FM selected through BAND button), *SAT, CD, AUX and *IPOD.

AUDIO MENU: With each press of the button choose from the following AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADER (front to back). Press and hold to access the SYSTEM MENU.

EQ/LOUD: Press to choose one of the predefined bass and treble curves. Press and hold to turn loudness ON/OFF.

DISP/SCROLL: (Turn vehicle ignition on and radio off.) Press and hold until time flashes on screen. Use TUNE/TRK to set the hours and minutes.

TUNE/TRK: Press << to adjust the HOURS and >> to adjust the MINUTES. "AM" or "PM" will appear on display. After no adjustment has been made for five seconds, the time will be set.

AM/FM/RBDS/WB Tuner Controls

PTY: Press to get program list type. Use VOLUME buttons to select. Press SEEK < or > to tune to selected program type station.

TUNE: Press > to tune UP in frequency. Press < to tune DOWN in frequency. Press and hold to fast search.

BAND: Press to select preset group FM1, FM2, FM3, AM1, or AM2 each with 6 channel memory locations.

WB: Press and hold to listen to WEATHERBAND.

STATION STORE BUTTONS: Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 18 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

AS/PS: Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

CD/MP3 Player Controls*

EJECT: Slide to the right to open door and EJECT CD. (See backside for details).

TUNE/TRK: Press to tune to next track. Press and hold to FAST FORWARD or REWIND current track playing.

PLAY/PAUSE: Press to PLAY or PAUSE current audio.

INTRO SCAN: Press when CD is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RPT: Press to REPEAT current playing track. Press to release function.

 
RDM: Press when CD is playing to play each track in RANDOM order. Press again for NORMAL play.

DN: Press when in MP3 mode to select folder DOWN.


UP: Press when in MP3 mode to select folder UP.

*Some features may not be available depending on installed factory options.

SIRIUS® Radio Controls*

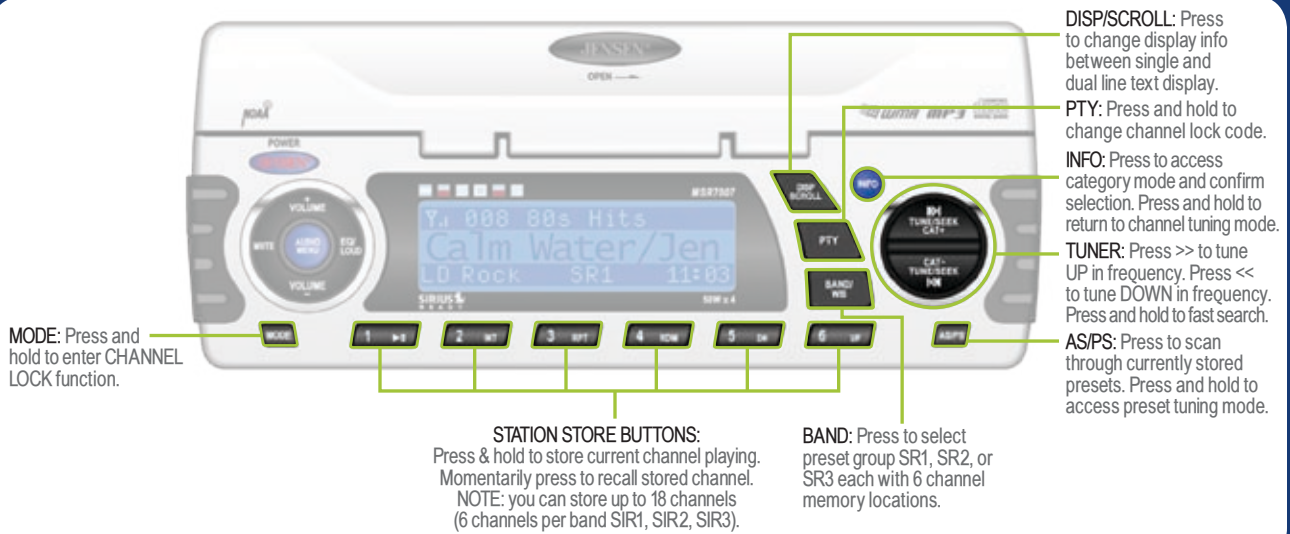


iPod® Controls*

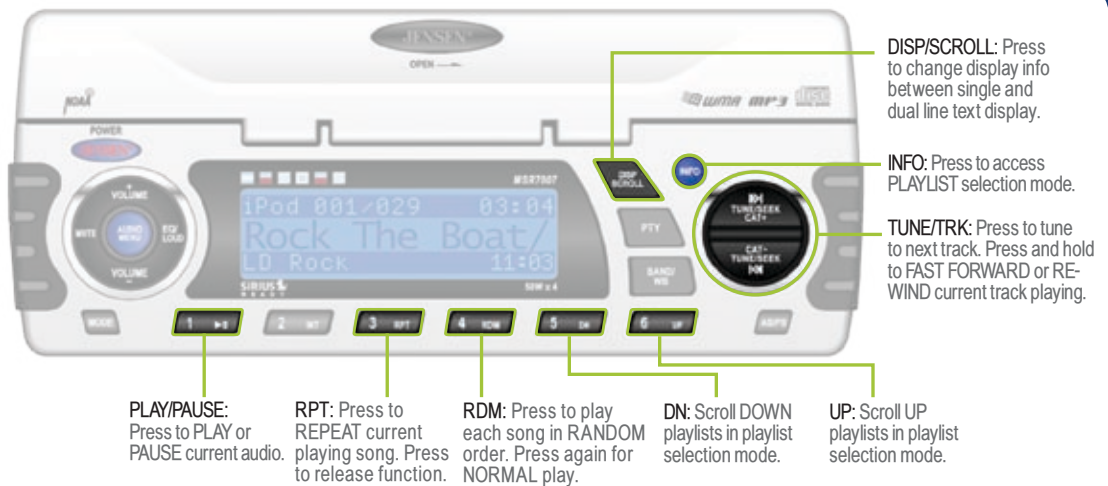 

CD Player Slot

 DISC SLOT: Insert disc label-side up. Disc will automatically begin playing.

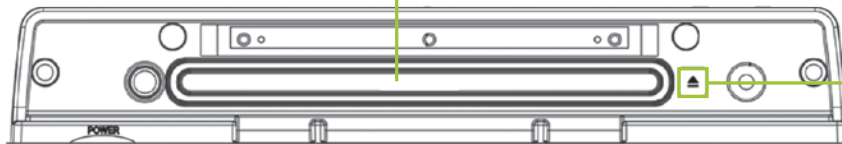

EJECT: Press to stop disc play and EJECT. Unit does not have to be on to eject disc.

FRONT PANEL DOOR ALARM: To prevent damage of water or debris through the CD opening, the front panel door should only be opened for a short period of time during CD loading or ejecting. If the front panel door is left open for longer than 30 seconds, the current playback audio will mute and a beep tone will sound. Close the door to resume normal playback.

Activating your SIRIUS® Subscription —

Before you can listen to Sirius Satellite Radio, you must subscribe to the service.

1. With the radio power ON, press the MODE button to enter Sirius Ready mode. After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels. NOTE: Don't push any buttons or perform any operations until updating has been completed.
2. Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other Sirius Radio channels until you activate your subscription.
3. You will need to access your Sirius ID, which is displayed on channel 000. Press the INFO button on the radio to enter Direct Tuning mode. Using the Tune Adjust UP/DN knob, select digits 000. Press the INFO button to enter your selection. This will display your unit's unique 12-digit SIRIUS ID Number.
4. Write the Sirius ID number down and have your credit card handy.
5. Contact SIRIUS on the Internet: <https://activate.siriusradio.com/>
Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>