



---

**For Connecting Six Pairs of  
Speakers to an Amplifier or  
Receiver, with Precise Volume  
Adjustment in any Zone**

---



# S-6VC

## SIX ZONE SPEAKER SELECTOR WITH VOLUME CONTROLS



### FEATURES

- Safely connect up to six speaker pairs to a single amplifier or receiver
- Individual room on/off switches
- 12 step make before break volume control switch design
- High power handling capability
- Built-in protection circuit
- Compatible with all 4 ohm capable amplifiers or receivers
- Non skid feet for unit stability
- Includes customized room labels

---

### INSTALLATION FRIENDLY DESIGN:

- Accepts up to 10 gauge wire
- Removable connector secures wire in place

---

### SPECIFICATIONS:

- Power handling: 100 watts per channel
- Frequency response: +/- 1.2 dB from 20Hz to 20kHz
- Attenuation: 54dB maximum with 12 step control

---

### WIRING REQUIREMENTS:

- Individual runs of 2-conductor speaker wire to each speaker
- Removable connectors accommodate 14-22 gauge wire (16 gauge recommended)

---

### MOUNTING:

- Table-top

---

### DIMENSIONS:

- 17" wide x 2" high x 9-1/8" deep

---

### WARRANTY:

- 10 year limited

#### JOBSITE SYSTEMS

12331 SW 130 STREET  
MIAMI, FL 33186

**P** 866.4JB.SITE (866.452.7483)

**F** 305.238.0185

WWW.JOBSITEYSTEMS.COM


**PREPARING FOR INSTALLATION:**

The Speaker wires and Amplifier wires must reach the proposed location of the S-6VC speaker selector. Mark the cables with Wire labels, describing where the cables originate from, rather than where they will terminate.

**INSTALLATION:**

1. Select an appropriate location for the S-6VC.
2. Run all the necessary wiring to the S-6VC. Label the wires for future reference.
3. Strip 1/4" of insulation from the end of each wire. Tightly twist the end of each wire until no frayed ends remain.
4. Locate the connector plugs and remove them if they are plugged in.
5. Insert each wire into the appropriate hole on the removable connector plug.
6. Use a small flathead screwdriver to tighten each wire in place.
7. Insert the connector plug into the S-6VC socket and lock it in place, by tightening the screws on each side of connector.
8. Connect the Receiver or Amplifier to the connector terminal labeled AMPLIFIER.
9. Connect the Speakers to the connector terminals labeled SPEAKERS.
10. Locate the pre-printed Room Labels. Affix the appropriate label to the recessed area over each on/off selector button.

**S-6VC INSTALLATION DIAGRAM**

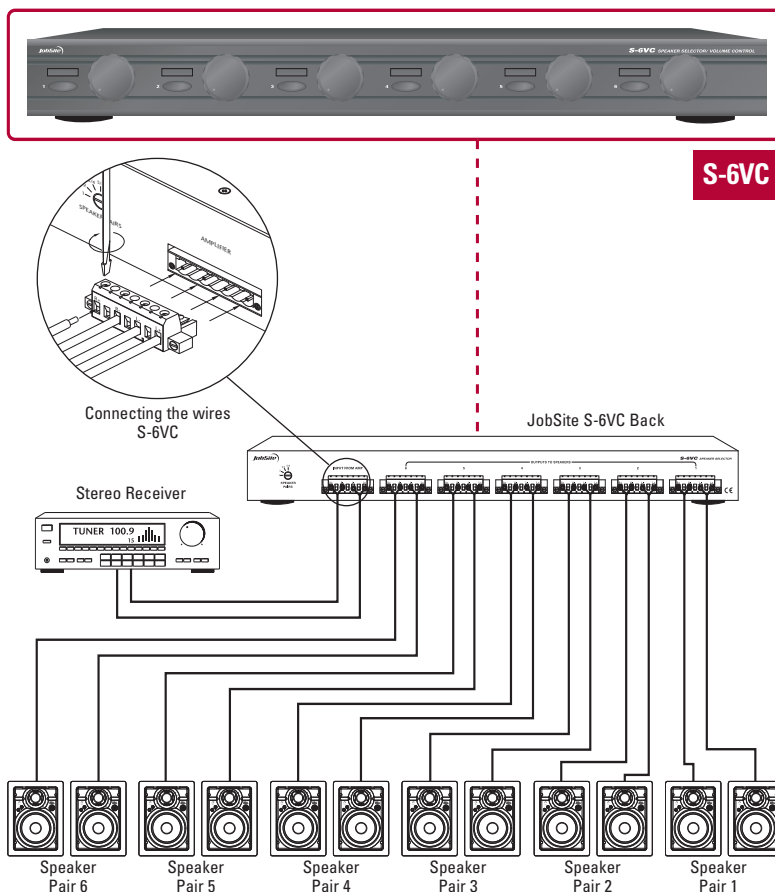

**JOBSITE SYSTEMS**

12331 SW 130 STREET  
MIAMI, FL 33186

**P** 866.4JB.SITE (866.452.7483)  
**F** 305.238.0185

WWW.JOBSITE SYSTEMS.COM

©2004 Niles Audio Corporation. JobSite, Pure Custom and Niles are registered trademarks of Niles Audio Corporation and the JobSite Logo is a trademark of Niles Audio Corporation. JSS6VC.PDF

Specifications subject to change without notice.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>