

JVC



CD RECEIVER

KD-G120R/KD-G120

ENGLISH

RECEPTOR CON CD



KD-G120R/KD-G120

ESPAÑOL


RECEPTEUR CD

KD-G120R/KD-G120

FRANÇAIS

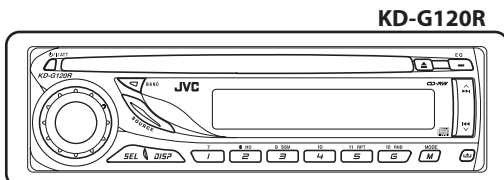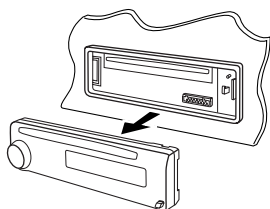

KD-G120R

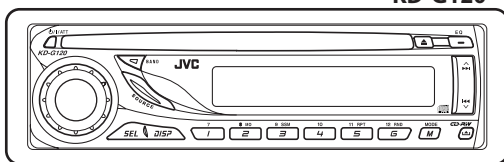

KD-G120

For canceling the display demonstration, see page 6.
Para cancelar la demostración en pantalla, consulte la página 6.
Pour annuler la démonstration des affichages, référez-vous à la page 6.

For installation and connections, refer to the separate manual.
Para la instalación y las conexiones, refiérase al manual separado.
Pour l'installation et les raccordements, se référer au manuel séparé.

For customer Use:
Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

INSTRUCTIONS

MANUAL DE INSTRUCCIONES

MANUEL D'INSTRUCTIONS

GET0330-001A

[J]

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

INFORMATION (For U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

Warning:

 
If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.

How to reset your unit



- Your preset adjustments will also be erased.
- If a disc is loaded, it will eject. Be careful not to drop the disc.

How to forcibly eject a disc




- If this does not work, reset your unit.
- Be careful not to drop the disc when it ejects.

How to use the M MODE button

If you press M MODE, the unit goes into functions mode, then the number buttons work as different function buttons.



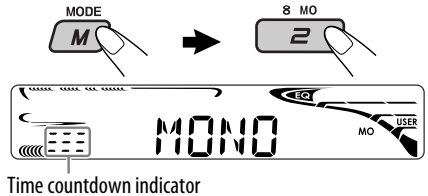


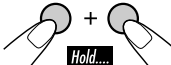 
Ex.: When number button 2 works as MO (monaural) button.




To use these buttons for their original functions again after pressing M MODE, wait for 5 seconds without pressing any of these buttons until the functions mode is cleared or press M MODE again.

How to read this manual


- Button operations are mainly explained with the illustrations in the table below.
- ○ is used to indicate an indicator is displayed for the corresponding operation.
- Some related tips and notes are explained in “More about this unit” (see pages 11 and 12).

	Press briefly.
	Press repeatedly.
	Press either one.
	
	Press and hold until your desired response begins.
	Press and hold both buttons at the same time.


How to detach/attach the control panel

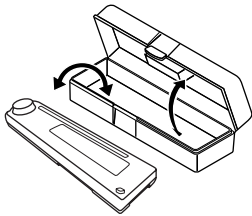

Detaching...

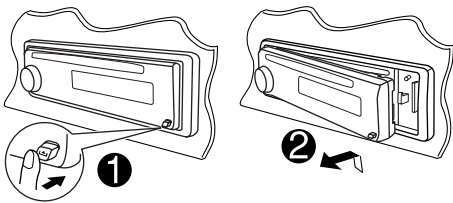

Attaching...

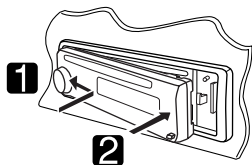

CONTENTS

Control panel — KD-G120R and KD-G120	4
Remote controller — RM-RK50	5
Getting started	6
Basic operations	6
Radio operations	7
Disc operations	8
Playing a disc in the unit	8
Sound adjustments	9
General settings — PSM	9
Maintenance	10
More about this unit	11
Troubleshooting	12
Specifications	13

Caution on volume setting:

Discs produce very little noise compared with other sources. Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level.

For safety...


- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

Temperature inside the car...

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Control panel — KD-G120R and KD-G120

Parts identification

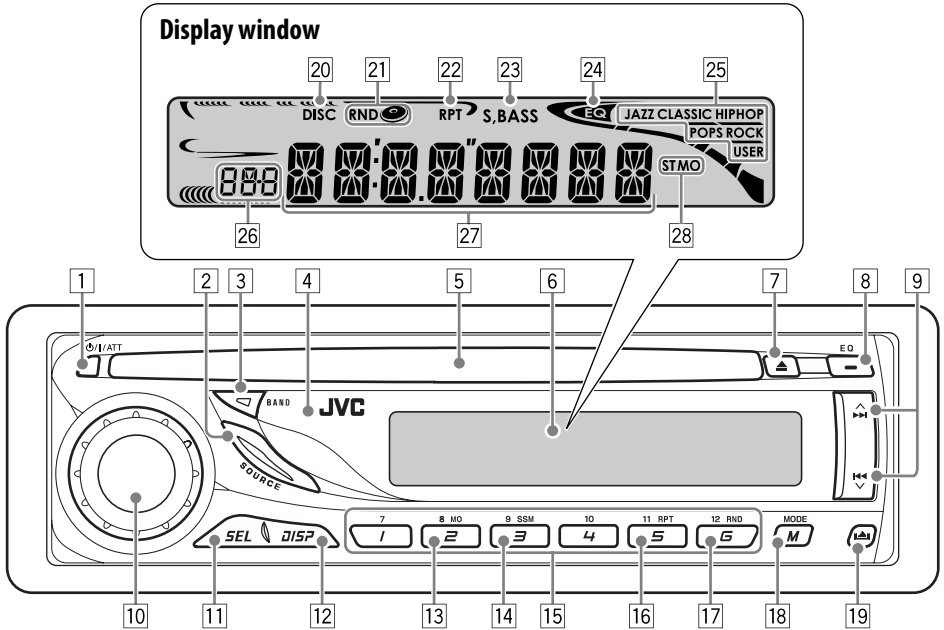

- 1 Φ /I/ATT (standby/on/attenuator) button
- 2 SOURCE button
- 3 BAND button
- 4 Remote sensor—Only for KD-G120R
 - DO NOT expose the remote sensor to strong light (direct sunlight or artificial lighting).
- 5 Loading slot
- 6 Display window
- 7 \blacktriangle (eject) button
- 8 EQ (equalizer) button
- 9 \blacktriangle \blacktriangleright \blacktriangleleft \blacktriangledown buttons
- 10 Control dial
- 11 SEL (select) button
- 12 DISP (display) button
- 13 MO (monaural) button
- 14 SSM (Strong-station Sequential Memory) button
- 15 Number buttons
- 16 RPT (repeat) button

- 17 RND (random) button
- 18 M MODE button
- 19 \blacktriangle (control panel release) button


Display window

- 20 DISC indicator
- 21 RND (disc random) indicator
- 22 RPT (repeat) indicator
- 23 S. BASS (super bass) indicator
- 24 EQ (equalizer) indicator
- 25 Sound mode (C-EQ: custom equalizer) indicators—JAZZ, CLASSIC, HIP HOP, POPS, ROCK, USER
- 26 Source display
- Volume level indicator
- Time countdown indicator
- 27 Main display
- 28 Tuner reception indicators— ST (stereo), MO (monaural)

Remote controller — RM-RK50

- RM-RK50 is supplied only for KD-G120R.

Installing the lithium coin battery (CR2025)

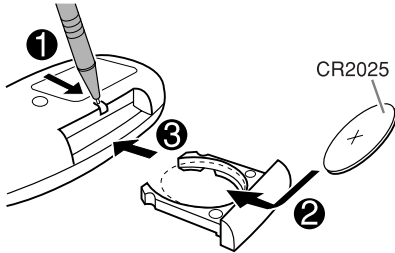


Aim the remote controller directly at the remote sensor on the unit. Make sure there is no obstacle in between.


Warning:

- Do not install any battery other than CR2025 or its equivalent; otherwise, it may explode.
- Store the battery in a place where children cannot reach to avoid risk of accident.
- To prevent the battery from over-heating, cracking, or starting a fire:
 - Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire.
 - Do not leave the battery with other metallic materials.
 - Do not poke the battery with tweezers or similar tools.
 - Wrap the battery with tape and insulate when throwing away or saving it.

Caution:

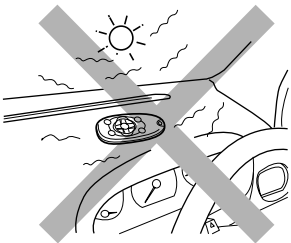

Main elements and features

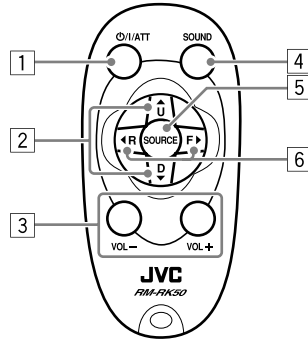

- 1 ϕ /I/ATT (standby/on/attenuator) button
 - Turns the power on if pressed briefly or attenuates the sound when power is on.
 - Turns the power off if pressed and held.
- 2 \blacktriangle U (up) / D (down) \blacktriangledown buttons
 - Changes the FM/AM bands with \blacktriangle U only.
 - Changes the preset stations with D \blacktriangledown only.
- 3 VOL - / VOL + buttons
 - Adjusts the volume level.
- 4 SOUND button
 - Selects the sound mode (C-EQ: custom equalizer).
- 5 SOURCE button
 - Selects the source.
- 6 \blacktriangleleft R (reverse) / F (forward) \blacktriangleright buttons
 - Searches for stations if pressed briefly.
 - Fast-forwards or reverses the track if pressed and held.
 - Changes the tracks of the disc if pressed briefly.

Getting started

Basic operations

1 Turn on the power.




* You cannot select "DISC" as the playback source if there is no disc in the loading slot.


3 For FM/AM tuner



4 Adjust the volume.

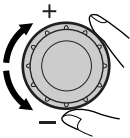

Volume level appears

 


Volume level indicator

5 Adjust the sound as you want. (See page 9.)

<p>To drop the volume in a moment (ATT)</p> <p>To restore the sound, press it again.</p>	
<p>To turn off the power</p>	

Basic settings

• See also "General settings — PSM" on pages 9 and 10.

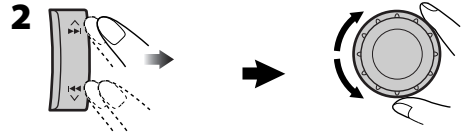

1 Canceling the display demonstrations

Select "DEMO," then "DEMO OFF."

2 Setting the clock

Select "CLOCK H" (hour), then adjust the hour.

Select "CLOCK M" (minute), then adjust the minute.



3 Finish the procedure.



To check the current clock time while...


<p>The power is turned off</p>	
<p>Listening to the radio/a disc</p> <p>Frequency/Elapsed playing time ↔ Clock</p>	

 Radio operations

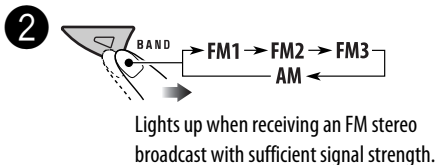

Selected band appears.

 3 **Start searching for a station.**




When a station is received, searching stops.
To stop searching, press the same button again.

To tune in to a station manually


In step 3 above...



2 **Select the desired station frequencies.**

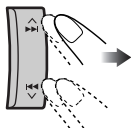

When an FM stereo broadcast is hard to receive

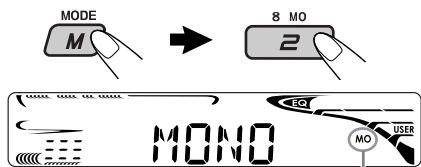

Lights up when monaural mode is activated.

Reception improves, but stereo effect will be lost.

To restore the stereo effect, repeat the same procedure "MONO OFF" appears and the MO indicator goes off.

Storing stations in memory

You can preset six stations for each band.

FM station automatic presetting—SSM (Strong-station Sequential Memory)

1 **Select the FM band (FM1 – FM3) you want to store into.**




"SSM" flashes, then disappears when automatic presetting is over.

Local FM stations with the strongest signals are searched and stored automatically in the FM band.


Manual presetting

Ex.: Storing FM station of 92.5 MHz into preset number 4 of the FM1 band.

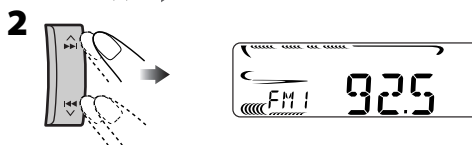

To be continued...


3

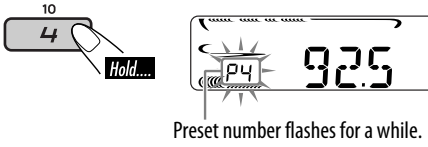


Preset number flashes for a while.

Listening to a preset station

 1




 2 Select the preset station (1 - 6) you want.



Disc operations

Playing a disc in the unit

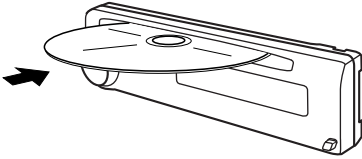


All tracks will be played repeatedly until you change the source or eject the disc.


To stop play and eject the disc	
To fast-forward or reverse the track	
To go to the next or previous tracks	

To locate a particular track directly

 To select a number from 01 - 06:



To select a number from 07 - 12:

 

Prohibiting disc ejection

You can lock a disc in the loading slot.

 


To cancel the prohibition, repeat the same procedure.

Selecting the playback modes

You can use only one of the following playback modes at a time.

1



2 Select your desired playback mode.

Repeat play



Mode	Plays repeatedly
TRK RPT	: The current track.
RPT OFF	: Cancels.

Random play



Mode	Plays at random
DISC RND	: All tracks of the current disc.
RND OFF	: Cancels.

Sound adjustments


You can select a preset sound mode suitable to the music genre (C-EQ: custom equalizer).



Preset values	BAS (bass)	TRE (treble)	S.BS (super bass)
USER (Flat sound)	00	00	OFF
ROCK (Rock or disco music)	+03	+01	ON
CLASSIC (Classical music)	+01	-02	OFF
POPS (Light music)	+04	+01	OFF
HIP HOP (Funk or rap music)	+02	00	ON
JAZZ (Jazz music)	+02	+03	OFF

Adjusting the sound

You can adjust the sound characteristics to your preference.

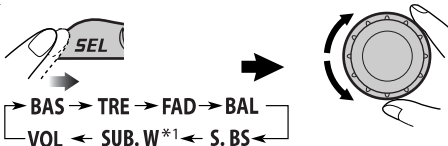

*1 Displayed only when "L/O MODE" is set to "WOOFER" (see page 10).

Indication, [Range]

BAS*2 (bass), [-06 to +06]

Adjust the bass.

TRE*2 (treble), [-06 to +06]

Adjust the treble.

FAD*3 (fader), [R06 to F06]

Adjust the front and rear speaker balance.

BAL*4 (balance), [L06 to R06]

Adjust the left and right speaker balance.

Indication, [Range]

S.BS*2 (super bass), [S.BS ON or S.BS OFF]
[01 to 05]*5

Maintain the richness and fullness of the bass sound regardless of how low you set the volume.

SUB. W (subwoofer), [00 to 08]

Adjust the subwoofer output level when a subwoofer is connected.

VOL (volume), [00 to 30 or 50*6]

Adjust the volume.

*2 When you adjust the bass, treble, or super bass the adjustment you have made is stored for the currently selected sound mode (C-EQ) including "USER."

*3 If you are using a two-speaker system, set the fader level to "00."

*4 This adjustment cannot affect the subwoofer output.

*5 Range adjustment for super bass is adjustable only when it is set to "S.BS ON."

*6 Depending on the amplifier gain control setting. (See page 10 for details.)


General settings — PSM

You can change PSM (Preferred Setting Mode) items listed in the table on page 10.


1



2 Select a PSM item.

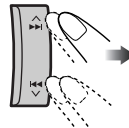

3 Adjust the PSM item selected.

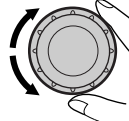

4 Repeat steps 2 and 3 to adjust other PSM items if necessary. Then press SEL to finish the procedure.

To be continued...


Indications	Selectable settings, [reference page]
DEMO Display demonstration	DEMO ON : [Initial]; Display demonstration will be activated automatically if no operation is done for about 20 seconds, [6]. DEMO OFF : Cancels.
CLOCK H Hour adjustment	1 – 12, [6] [Initial: 1 (1:00)]
CLOCK M Minute adjustment	00 – 59, [6] [Initial: 00 (1:00)]
L/O MODE Line output mode	When connecting an amplifier or a subwoofer, set this correctly. REAR : [Initial]; Select if the REAR LINE OUT terminals are used for connecting the speakers through an external amplifier. WOOFER : Select if the REAR LINE OUT terminals are used for connecting a subwoofer.
AMP GAIN Amplifier gain control	You can change the maximum volume level of this unit. LOW PWR : VOL 00 – VOL 30 (Select this if the maximum power of the speaker is less than 45 W to avoid damaging the speaker.) HIGH PWR : [Initial]; VOL 00 – VOL 50
AREA Tuner channel interval	AREA US : [Initial]; Select this when using the unit in North or South America, except Middle South America. (FM: 200 kHz; AM: 10 kHz) AREA EU : Select this when using the unit in any other area than North, Middle South and South America. (FM: 50 kHz—manual tuning, 100 kHz—auto search; AM: 9 kHz) AREA SA : Select this when using the unit in Middle South America. (FM: 100 kHz; AM: 10 kHz)

Maintenance

How to clean the connectors

Frequent detachment will deteriorate the connectors.

To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

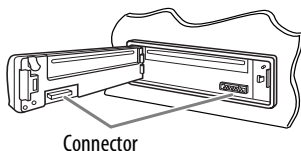

Should this occur, the CD player may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

- Always hold the disc by the edges. Do not touch its recording surface.

When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs into the cases after use.

Center holder



Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

Do not use the following discs:

Warped disc



Sticker



Sticker residue



Disc

Stick-on label

More about this unit

Basic operations

Turning on the power

- By pressing SOURCE on the unit, you can also turn on the power. If the source is ready, playback also starts.

Turning off the power

- If you turn off the power while listening to a disc, disc play will start from where playback has been stopped previously, next time you turn on the power.

Selecting the sources

- When no disc is loaded in the unit, "DISC" cannot be selected.

Tuner operations

Storing stations in memory

- During SSM search...
 - All previously stored stations are erased and stations are stored newly.
 - Received stations are preset in No. 1 (lowest frequency) to No. 6 (highest frequency).
 - When SSM is over, the station stored in No. 1 will be automatically tuned in.
- When storing a station manually, a previously preset station is erased when a new station is stored in the same preset number.

Disc operations

Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

General

- This unit has been designed to reproduce CDs, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA) format.
- When a disc has been loaded, selecting "DISC" for the playback source starts disc play.

Inserting a disc

- When a disc is inserted upside down, the disc automatically ejects.
- Do not insert 8 cm discs (single CD) and unusual shape discs (heart, flower, etc.) into the loading slot.

Playing a CD-R or CD-RW

- Use only "finalized" CD-Rs or CD-RWs.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, and for the following causes:

To be continued...

- Discs are dirty or scratched.
 - Moisture condensation occurs on the lens inside the unit.
 - The pickup lens inside the unit is dirty.
 - CD-R/CD-RW on which the files are written with "Packet Write" method.
 - There are improper recording conditions (missing data, etc.) or media conditions (stain, scratch, warp, etc.).
 - CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
 - Do not use the following CD-Rs or CD-RWs:
 - Discs with stickers, labels, or protective seal stuck to the surface.
 - Discs on which labels can be directly printed by an ink jet printer.
- Using these discs under high temperatures or high humidity may cause malfunctions or damages to the unit.

Changing the source

- If you change the source, playback also stops (without ejecting the disc). Next time you select "DISC" for the playback source, disc play starts from where it has been stopped previously.

Ejecting a disc

- If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (Disc will not play this time.)

General settings—PSM

- If you change the "AMP GAIN" setting from "HIGH PWR" to "LOW PWR" while the volume level is set higher than "VOL 30," the unit automatically changes the volume level to "VOL 30."

Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Remedies/Causes
General	• Sound cannot be heard from the speakers.	• Adjust the volume to the optimum level. • Check the cords and connections.
	• This unit does not work at all.	Reset the unit (see page 2).
FM/AM	• SSM automatic presetting does not work.	Store stations manually.
	• Static noise while listening to the radio.	Connect the antenna firmly.
Disc playback	• Disc automatically ejects.	Insert the disc correctly.
	• CD-R/CD-RW cannot be played back.	• Insert a finalized CD-R/CD-RW. • Finalize the CD-R/CD-RW with the component which you used for recording.
	• Tracks on the CD-R/CD-RW cannot be skipped.	
	• Disc can be neither played back nor ejected.	• Unlock the disc (see page 8). • Eject the disc forcibly (see page 2).
	• Disc sound is sometimes interrupted.	• Stop playback while driving on rough roads. • Change the disc. • Check the cords and connections.
	• "NO DISC" appears on the display.	Insert a playable disc into the loading slot.

Specifications

AUDIO AMPLIFIER SECTION

Power Output:

17 W RMS × 4 Channels at 4 Ω
and ≤ 1% THD+N

Signal to Noise Ratio:

80 dBA (reference: 1 W into 4 Ω)



Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Tone Control Range:

Bass: ±10 dB at 100 Hz

Treble: ±10 dB at 10 kHz

Frequency Response: 40 Hz to 20 000 Hz

Line-Out Level/Impedance:

2.0 V/20 kΩ load (full scale)

Output Impedance: 1 kΩ

Subwoofer-Out Level/Impedance:

2.0 V/20 kΩ load (full scale)

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 107.9 MHz
(with channel interval set to 100 kHz
or 200 kHz)

87.5 MHz to 108.0 MHz
(with channel interval set to 50 kHz)

AM: 530 kHz to 1 710 kHz
(with channel interval set to 10 kHz)
531 kHz to 1 602 kHz
(with channel interval set to 9 kHz)

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μV/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μV/75 Ω)

Alternate Channel Selectivity (400 kHz): 65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μV

Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical
pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage:

DC 14.4 V (11 V to 16 V allowance)

Grounding System: Negative ground

Allowable Operating Temperature:

0°C to +40°C (32°F to 104°F)

Dimensions (W × H × D):

Installation Size (approx.):

182 mm × 52 mm × 150 mm
(7-3/16" × 2-1/16" × 5-15/16")

Panel Size (approx.):


188 mm × 58 mm × 11 mm
(7-7/16" × 2-5/16" × 7/16")

Mass (approx.):

1.2 kg (2.6 lbs) (excluding accessories)

*Design and specifications are subject to change
without notice.*

If a kit is necessary for your car, consult your
telephone directory for the nearest car audio
specialty shop.



Having TROUBLE with operation?
Please reset your unit
Refer to page of How to reset your unit
Still having trouble??

USA ONLY

Call 1-800-252-5722
<http://www.jvc.com>
We can help you!

JVC



EN, SP, FR

© 2005 Victor Company of Japan, Limited

1005DTSMDTJEIN

ENGLISH

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.


WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- **Be sure to ground this unit to the car's chassis again after installation.**

Notes:

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- It is recommended to connect to the speakers with maximum power of more than 45 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 45 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 10 of the INSTRUCTIONS).
- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

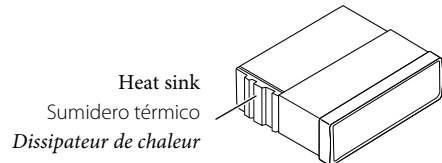

ESPAÑOL

Esta unidad está diseñada para funcionar con **12 V de CC, con sistemas eléctricos de masa NEGATIVA**. Si su vehículo no posee este sistema, será necesario un inversor de tensión, que puede ser adquirido en los concesionarios de JVC de equipos de audio para automóviles.

ADVERTENCIAS

Para evitar cortocircuitos, recomendamos que desconecte el terminal negativo de la batería y que efectúe todas las conexiones eléctricas antes de instalar la unidad.

- **Asegúrese de volver a conectar a masa esta unidad al chasis del automóvil después de la instalación.**

Notas:

- Reemplace el fusible por uno con la corriente especificada. Si el fusible se quemase frecuentemente consulte con su concesionario de JVC de equipos de audio para automóviles.
- Se recomienda conectar los altavoces con una potencia máxima de más de 45 W (tanto atrás como adelante, con una impedancia de **4 Ω a 8 Ω**). Si la potencia máxima es de menos de 45 W, cambie "AMP GAIN" para evitar daños en los altavoces (consulte la página 10 del MANUAL DE INSTRUCCIONES).
- Para evitar cortocircuitos, cubra los cables NO UTILIZADOS con cinta aislante.
- El sumidero térmico estará muy caliente después del uso. Asegúrese de no tocarlo al desmontar esta unidad.

FRANÇAIS

Cet appareil est conçu pour fonctionner sur des sources de courant continu de **12 V à masse NEGATIVE**. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

AVERTISSEMENTS

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil.


- **Assurez-vous de raccorder de nouveau la mise à la masse de cet appareil au châssis de la voiture après l'installation.**

Remarques:

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Il est recommandé de connecter des enceintes avec une puissance de plus de 45 W (les enceintes arrière et les enceintes avant, avec une impédance comprise entre **4 Ω et 8 Ω**). Si la puissance maximum est inférieure à 45 W, changez "AMP GAIN" pour éviter d'endommager vos enceintes (voir page 10 du MANUEL D'INSTRUCTIONS).
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS UTILISÉS avec de la bande isolante.
- Le dissipateur de chaleur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.


PRECAUTIONS on power supply and speaker connections:

- **DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

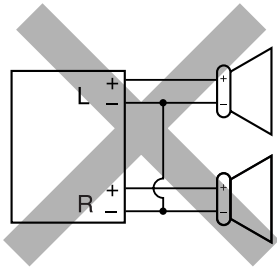


PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces:

- **NO conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.**
- ANTES de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.

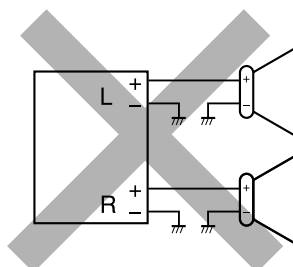

PRECAUTIONS sur l'alimentation et la connexion des enceintes:


- **NE CONNECTEZ PAS les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.**
- AVANT de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.

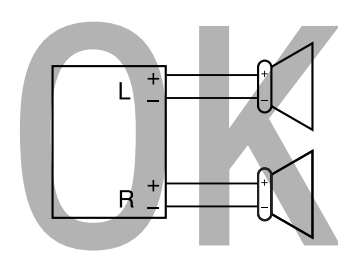


Parts list for installation and connection

The following parts are provided for this unit. After checking them, please set them correctly.


- (A) / (B)
Hard case/Control panel
Estuche duro/Panel de control
Etui de transport/Panneau de commande

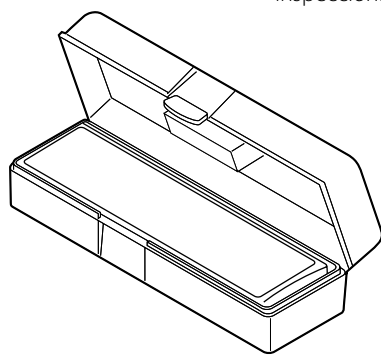


- (C)
Sleeve
Cubierta
Manchon

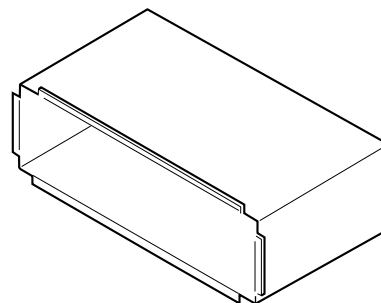

- (D)
Trim plate
Placa de guarnición
Plaque d'assemblage

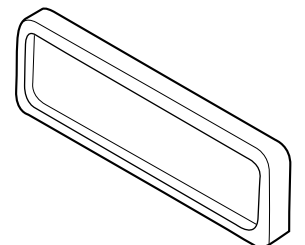

- (E)
Power cord
Cordón de alimentación
Cordon d'alimentation

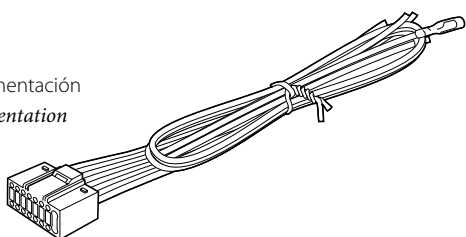


- (F)
Washer (ø5)
Arandela (ø5)
Rondelle (ø5)



- (G)
Lock nut (M5)
Tuerca de seguridad (M5)
Ecrou d'arrêt (M5)



 
- (H)
Mounting bolt—M5 × 20 mm (M5 × 13/16")
Perno de montaje—M5 × 20 mm (M5 × 13/16 pulgada)
Boulon de montage—M5 × 20 mm (M5 × 13/16 pouces)



- (I)
Rubber cushion
Cojín de goma
Amortisseur en caoutchouc




 - (J)
Handles
Manijas
Poignées



Only for KD-G120R / Sólo para KD-G120R / Seulement pour le KD-G120R

- (K)
Remote controller
Control remoto
Télécommande

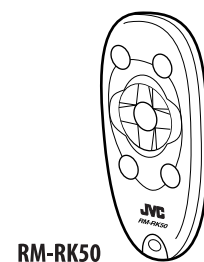

- (L)
Battery
Pila
Pile



INSTALLATION (IN-DASH MOUNTING)

The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

INSTALACION (MONTAJE EN EL TABLERO DE INSTRUMENTOS)



La siguiente ilustración muestra una instalación típica. Si tiene alguna pregunta o necesita información acerca de las herramientas para instalación, consulte con su concesionario de JVC de equipos de audio para automóviles o a una compañía que suministra tales herramientas.

- Si usted no está seguro de cómo instalar correctamente la unidad, hágala instalar por un técnico cualificado.

INSTALLATION (MONTAGE DANS LE TABLEAU DE BORD)

L'illustration suivante est un exemple d'installation typique. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

- Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

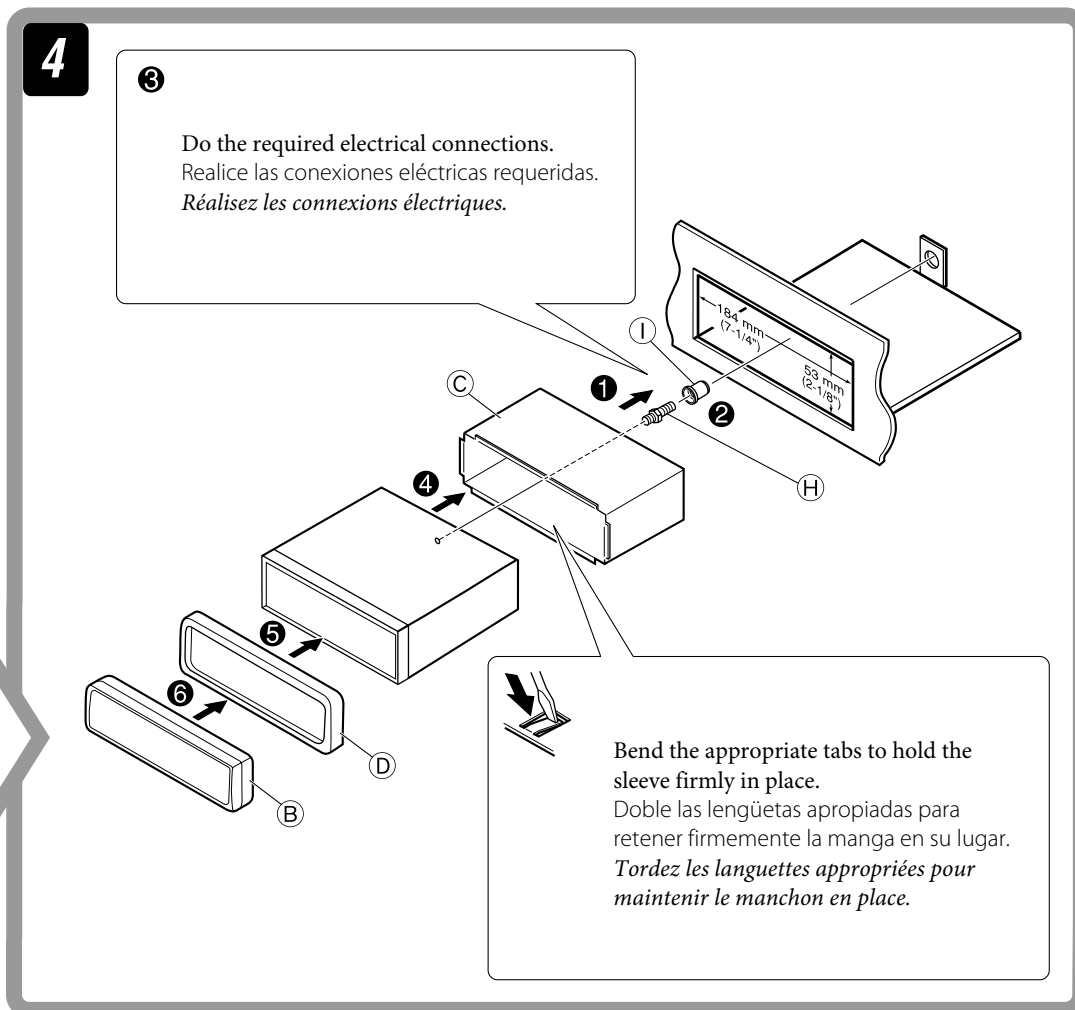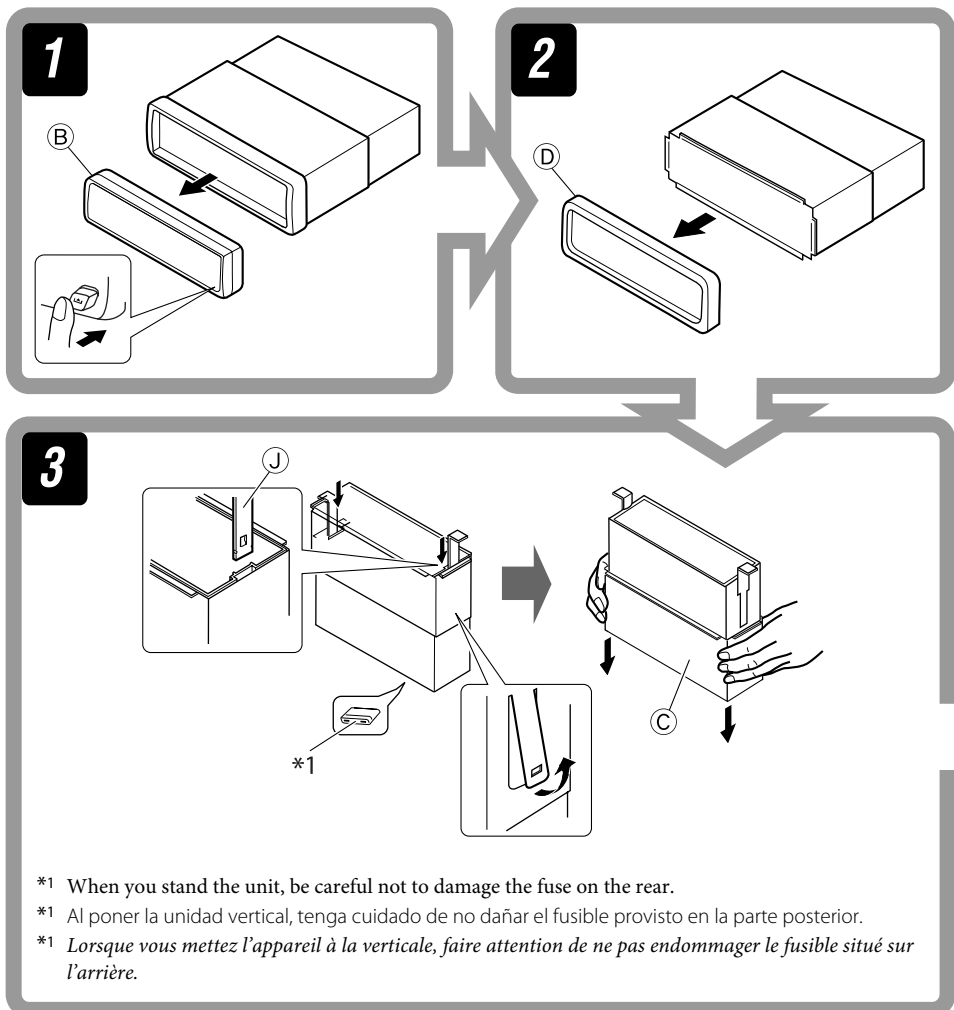

Removing the unit



Before removing the unit, release the rear section.

Extracción de la unidad



Antes de extraer la unidad, libere la sección trasera.

Retrait de l'appareil

Avant de retirer l'appareil, libérer la section arrière.

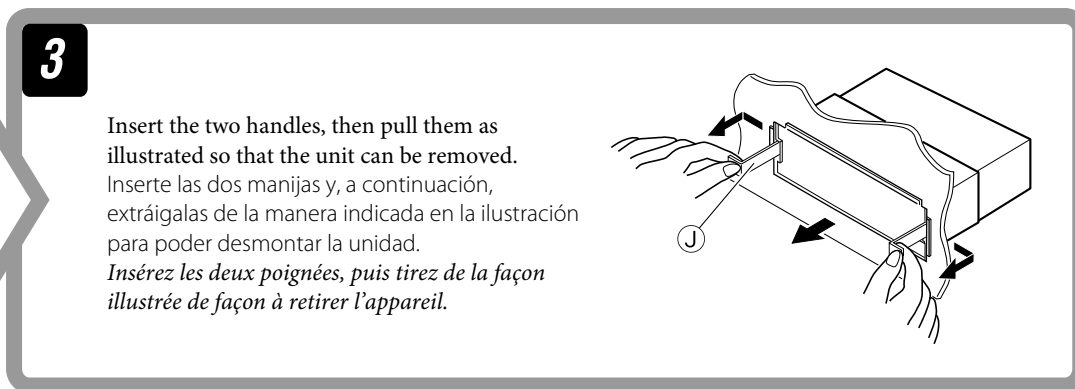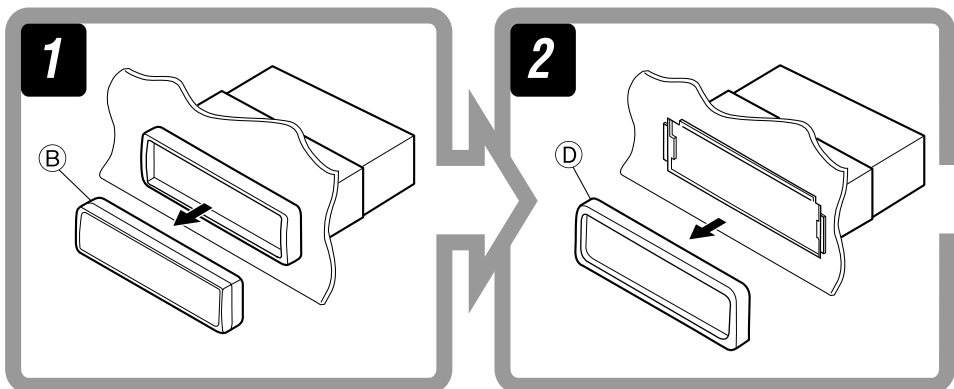

When using the optional stay / Cuando emplea un soporte opcional / Lors de l'utilisation du hauban en option

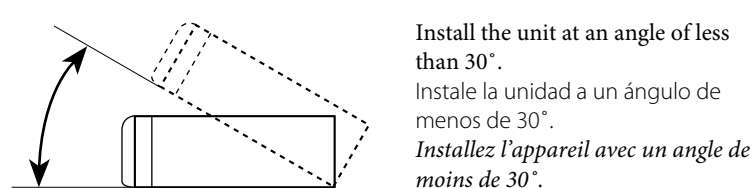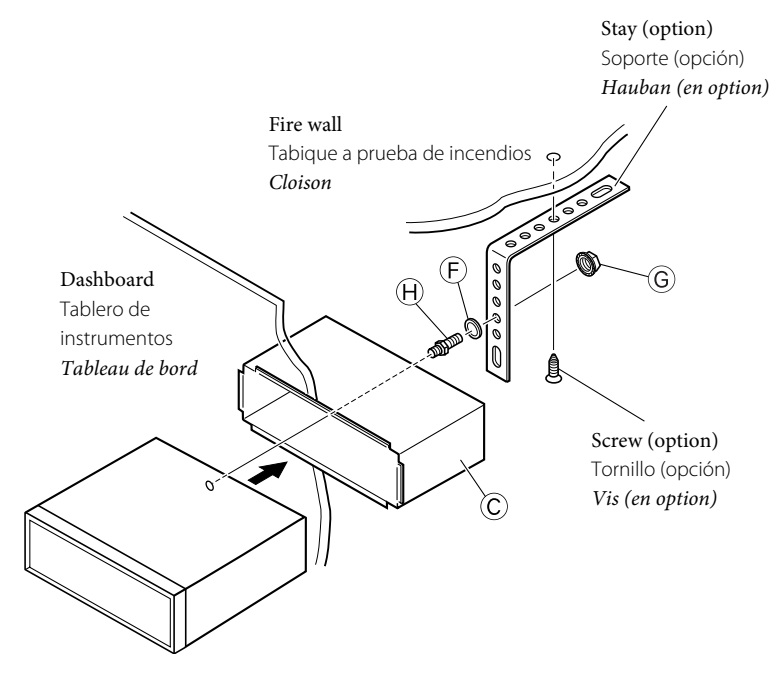


When installing the unit without using the sleeve / Instalación de la unidad sin utilizar la cubierta / Lors de l'installation de l'appareil sans utiliser de manchon

In a Toyota car for example, first remove the car radio and install the unit in its place.
En un automóvil Toyota, por ejemplo, en primer lugar desmonte el autorradio e instale la unidad en su lugar.
Dans une voiture Toyota, par exemple, retirez d'abord l'autoradio et installez l'appareil à sa place.

Flat type screws—M5 × 8 mm (M5 × 3/8")*
Tornillos tipo plano—M5 × 8 mm (M5 × 3/8 pulgada)*
Vis à tête plate—M5 × 8 mm (M5 × 3/8 pouces)*

- * Not supplied for this unit.
- * No suministrado con esta unidad.
- * Non fourni avec cet appareil.

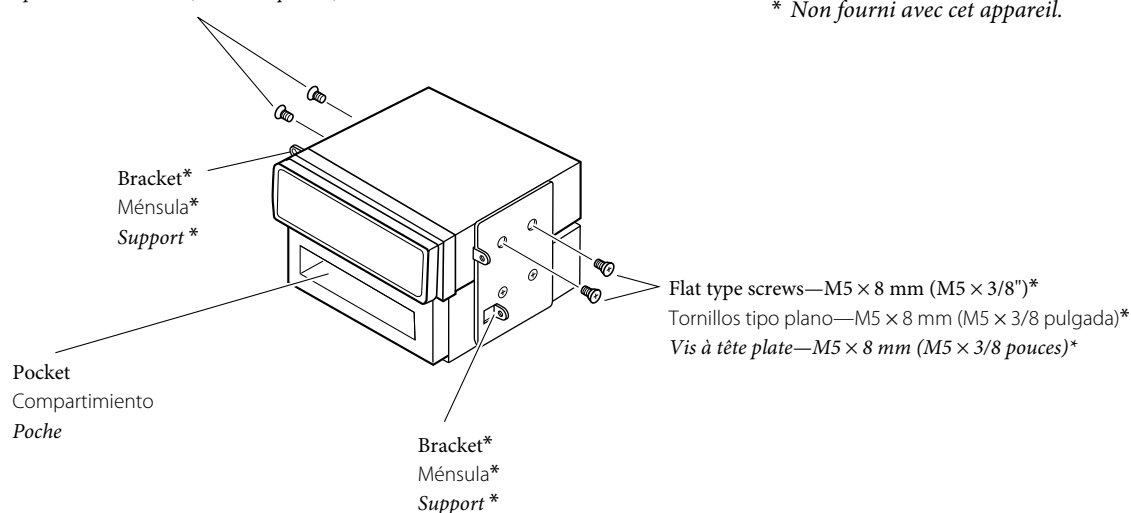

- Note** : When installing the unit on the mounting bracket, make sure to use the 8 mm (3/8")-long screws. If longer screws are used, they could damage the unit.
- Nota** : Cuando instala la unidad en la ménsula de montaje, asegúrese de utilizar los tornillos de 8 mm (3/8 pulgada) de longitud. Si se utilizan tornillos más largos, éstos pueden dañar la unidad.
- Remarque** : Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 8 mm (3/8 pouces). Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.

ELECTRICAL CONNECTIONS

CONEXIONES ELECTRICAS

RACCORDEMENTS ELECTRIQUES

A Typical connections / Conexiones típicas / Raccordements typiques

Before connecting: Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit. The leads of the power cord and those of the connector from the car body may be different in color.


- 1 Connect the colored leads of the power cord in the order specified in the illustration below.
- 2 Connect the antenna cord.
- 3 Finally connect the wiring harness to the unit.

Antes de la conexión: Verifique atentamente el conexionado del vehículo. Una conexión incorrecta podría producir daños graves en la unidad. Los cordones del cable de alimentación y los del conector procedentes de la carrocería del automóvil podrían ser de diferentes en color.

- 1 Conecte los conductores de color del cable de alimentación en el orden especificado en la ilustración de abajo.
- 2 Conecte el cable de antena.
- 3 Por último, conecte el cable de alimentación a la unidad.

Avant de commencer la connexion: Vérifiez attentivement le câblage du véhicule. Une connexion incorrecte peut endommager sérieusement l'appareil. Le fil du cordon d'alimentation et ceux des connecteurs du châssis de la voiture peuvent être différents en couleur.

- 1 Connectez les fils colorés du cordon d'alimentation dans l'ordre spécifié sur l'illustration ci-dessous.
- 2 Connectez le cordon d'antenne.
- 3 Finalement, connectez le faisceau de fils à l'appareil.

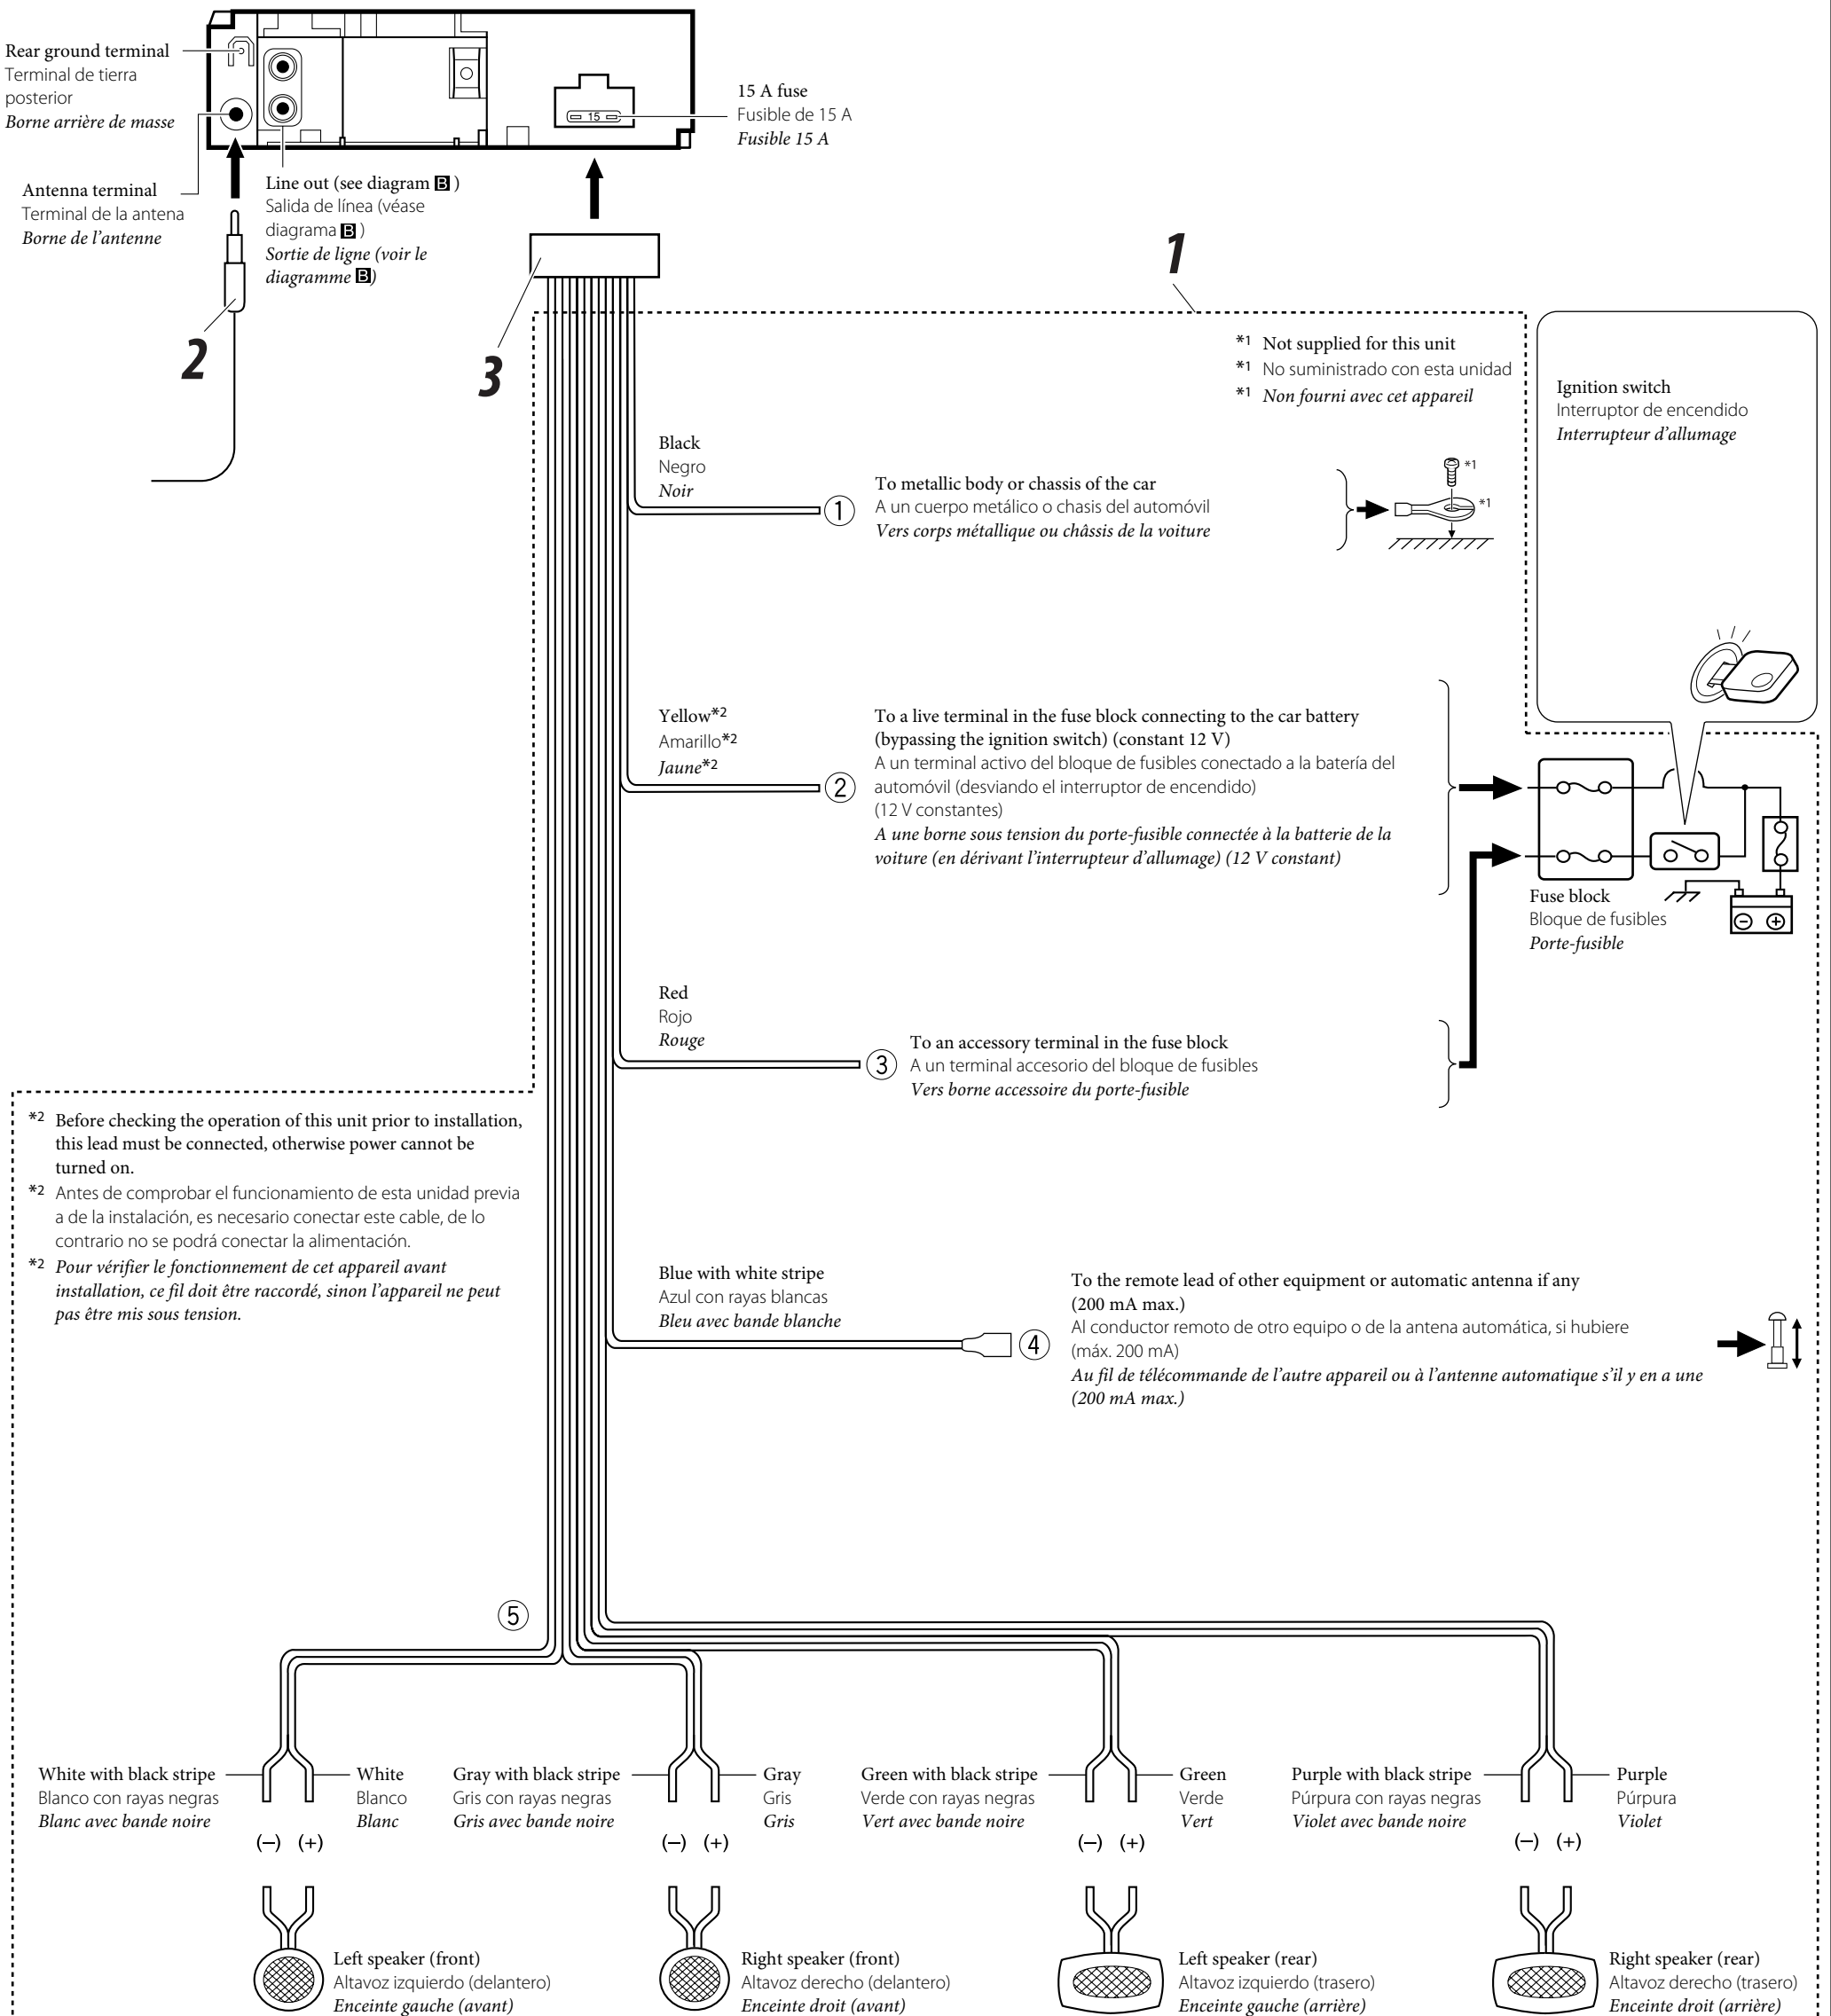

B Connecting the external amplifier or subwoofer / Conexión del amplificador o subwoofer exterior / Connexion d'un amplificateur extérieur ou d'un caisson de grave

You can connect an amplifier to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**

Usted podrá conectar un amplificador para mejorar el sistema estéreo de su automóvil.

- Conecte el conductor remoto (azul con rayas blancas) al conductor remoto del otro equipo para poderlo controlar a través de esta unidad.
- **Desconecte los altavoces de esta unidad y conéctelos al amplificador. Los cables de los altavoces de esta unidad quedan sin usar.**

Vous pouvez connecter un amplificateur pour améliorer votre système autoradio.

- Connectez le fil de commande à distance (bleu avec bande blanche) au fil de commande à distance de l'autre appareil de façon qu'il puisse être commandé via cet appareil.
- **Déconnectez les enceintes de cet appareil et connectez-les à l'amplificateur. Laissez les fils d'enceintes de cet appareil inutilisés.**

Remote lead
Cable remoto
Fil d'alimentation à distance


Y-connector (not supplied for this unit)
Conector en Y (no suministrado con esta unidad)
Connecteur Y (non fourni avec cet appareil)

Remote lead (Blue with white stripe)
Cable remoto (Azul con rayas blancas)
Fil d'alimentation à distance (Bleu avec bande blanche)

To the remote lead of other equipment or automatic antenna if any
Al conductor remoto de otro equipo o de la antena automática, si hubiere
Au fil de télécommande de l'autre appareil ou à l'antenne automatique s'il y en a une


Set "L/O MODE" to "REAR" (See page 10 of the INSTRUCTIONS.)
Ajuste "L/O MODE" a "REAR" (Consulte la página 10 del MANUAL DE INSTRUCCIONES.)
Réglez "L/O MODE" sur "REAR" (Voir la page 10 du MANUEL D'INSTRUCTIONS.)

You can connect a power amplifier for rear speakers.
Puede conectar un amplificador de potencia para los altavoces traseros.
Vous pouvez connecter un amplificateur de puissance pour les enceintes arrière.

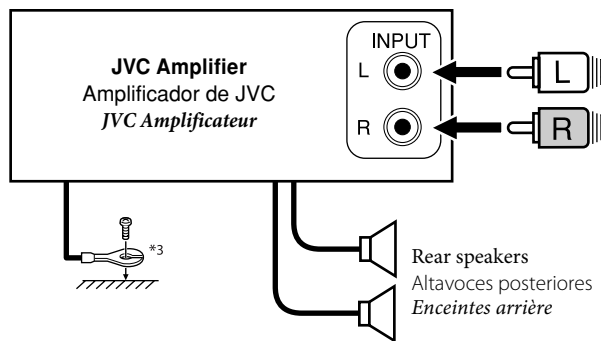

Set "L/O MODE" to "WOOFER" (See page 10 of the INSTRUCTIONS.)
Ajuste "L/O MODE" a "WOOFER" (Consulte la página 10 del MANUAL DE INSTRUCCIONES.)
Réglez "L/O MODE" sur "WOOFER" (Voir la page 10 du MANUEL D'INSTRUCTIONS.)

You can also connect a subwoofer to the REAR LINE OUT terminals.
También puede conectar un subwoofer para los terminales REAR LINE OUT.
Vous pouvez aussi connecter un caisson de grave aux prises REAR LINE OUT.

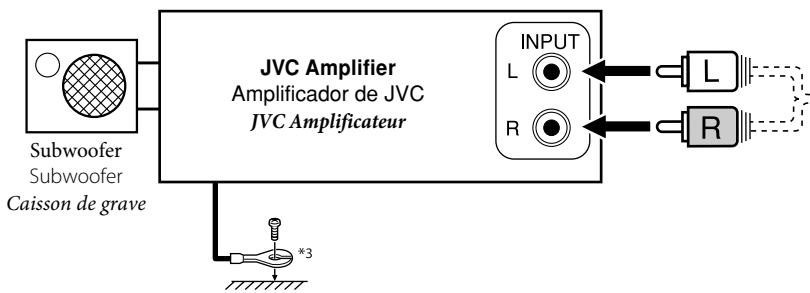

*3 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint (if coated with paint, remove the paint before attaching the wire). Failure to do so may cause damage to the unit.

*4 Signal cord (not supplied for this unit)

*3 Fije firmemente el cable de tierra a la carrocería metálica o al chasis—a un lugar no cubierto con pintura (si está cubierto con pintura, quítela antes de fijar el cable). De lo contrario, se podrían producir daños en la unidad.

*4 Cable de señal (no suministrado con esta unidad)

*3 Attachez solidement le fil de mise à la masse au châssis métallique de la voiture—à un endroit qui n'est pas recouvert de peinture (s'il est recouvert de peinture, enlevez d'abord la peinture avant d'attacher le fil). L'appareil peut être endommagé si cela n'est pas fait correctement.

*4 Cordon de signal (non fourni avec cet appareil)

TROUBLESHOOTING

• The fuse blows.

* Are the red and black leads connected correctly?

• Power cannot be turned on.

* Is the yellow lead connected?

• No sound from the speakers.

* Is the speaker output lead short-circuited?

• Sound is distorted.

* Is the speaker output lead grounded?

* Are the "-" terminals of L and R speakers grounded in common?

• Noise interferes with sounds.

* Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?

• This unit becomes hot.

* Is the speaker output lead grounded?

* Are the "-" terminals of L and R speakers grounded in common?

• This unit does not work at all.

* Have you reset your unit?

LOCALIZACION DE AVERIAS

• El fusible se quema.

* ¿Están los conductores rojo y negro correctamente conectados?

• No es posible conectar la alimentación.

* ¿Está el cable amarillo conectado?

• No sale sonido de los altavoces.

* ¿Está el cable de salida del altavoz cortocircuitado?

• El sonido presenta distorsión.

* ¿Está el cable de salida del altavoz conectado a masa?

* ¿Están los terminales "-" de los altavoces L y R conectados a una masa común?

• Perturbación de ruido.

* ¿El terminal de tierra trasero está conectado al chasis del automóvil utilizando los cordones más corto y más grueso?

• La unidad se calienta.

* ¿Está el cable de salida del altavoz conectado a masa?

* ¿Están los terminales "-" de los altavoces L y R conectados a una masa común?

• Este receptor no funciona en absoluto.

* ¿Reinicializó el receptor?

EN CAS DE DIFFICULTES

• Le fusible saute.

* Les fils rouge et noir sont-ils raccordés correctement?

• L'appareil ne peut pas être mise sous tension.

* Le fil jaune est-elle raccordée?

• Pas de son des enceintes.

* Le fil de sortie d'enceinte est-il court-circuité?

• Le son est déformé.

* Le fil de sortie d'enceinte est-il à la masse?

* Les bornes "-" des enceintes gauche et droit sont-elles mises ensemble à la masse?

• Interférence avec les sons.

* La prise arrière de mise à la terre est-elle connectée au châssis de la voiture avec un cordon court et épais?

• L'appareil devient chaud.

* Le fil de sortie d'enceinte est-il à la masse?

* Les bornes "-" des enceintes gauche et droit sont-elles mises ensemble à la masse?

• Cet appareil ne fonctionne pas du tout.


* Avez-vous réinitialisé votre appareil?

JVC



CD RECEIVER


KD-G124/KD-G123

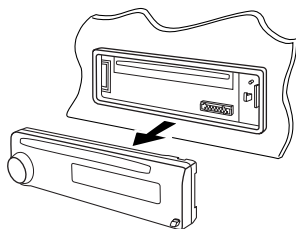


CD-RW

COMPACT
disc
DIGITAL AUDIO

KD-G124

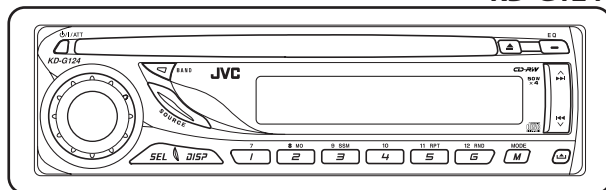

KD-G123

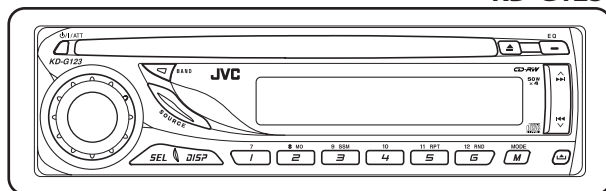

For canceling the display demonstration, see page 5.

For installation and connections, refer to the separate manual.

INSTRUCTIONS

GET0332-001A
[U]

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.	AVVARSEL: Synlig og usynlig laserstråling når maskinen er åpen eller interlocken fejler. Unngå direkte eksponering til strålingen.	VARNING: Synlig og osynlig laserstråling når den åpnes og spåren er urkoppplad. Betrakta ej strålen.	VARO: Avattassa ja suojalukitus ohitettuna tai viallisena olet alittuna näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
--	---	---	---

Warning:

If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.

Caution on volume setting:

Discs produce very little noise compared with other sources. Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level.

How to reset your unit



- Your preset adjustments will also be erased.
- If a disc is loaded, it will eject. Be careful not to drop the disc.

How to forcibly eject a disc




- If this does not work, reset your unit.
- Be careful not to drop the disc when it ejects.

How to use the M MODE button


If you press M MODE, the unit goes into functions mode, then the number buttons work as different function buttons.

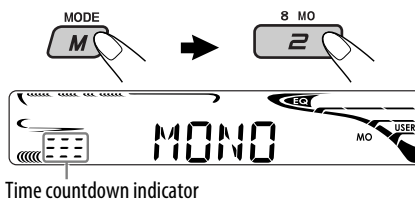




Ex.: When number button 2 works as MO (monaural) button.




To use these buttons for their original functions again after pressing M MODE, wait for 5 seconds without pressing any of these buttons until the functions mode is cleared or press M MODE again.

How to read this manual

   
- Button operations are mainly explained with the illustrations in the table below.
-  is used to indicate an indicator is displayed for the corresponding operation.
- Some related tips and notes are explained in “More about this unit” (see pages 11 and 12).

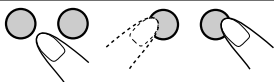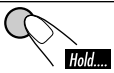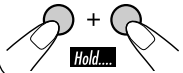	Press briefly.
	Press repeatedly.
	Press either one.
	Press and hold until your desired response begins.
	Press and hold both buttons at the same time.


How to detach/attach the control panel

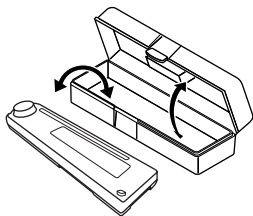

Detaching...

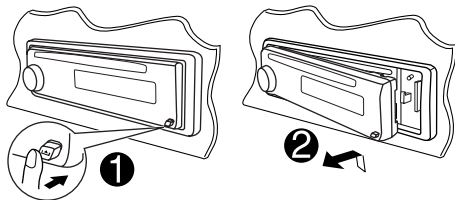

Attaching...

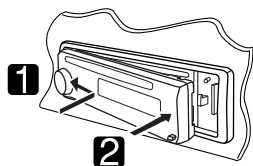

CONTENTS

Control panel — KD-G124 and KD-G123	4
Getting started	5
Basic operations.....	5
Radio operations	6
Disc operations	7
Playing a disc in the unit.....	7
Sound adjustments	8
General settings — PSM	9
Maintenance	10
More about this unit	11
Troubleshooting	12
Specifications	13


For safety...

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

Temperature inside the car...


If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Parts identification

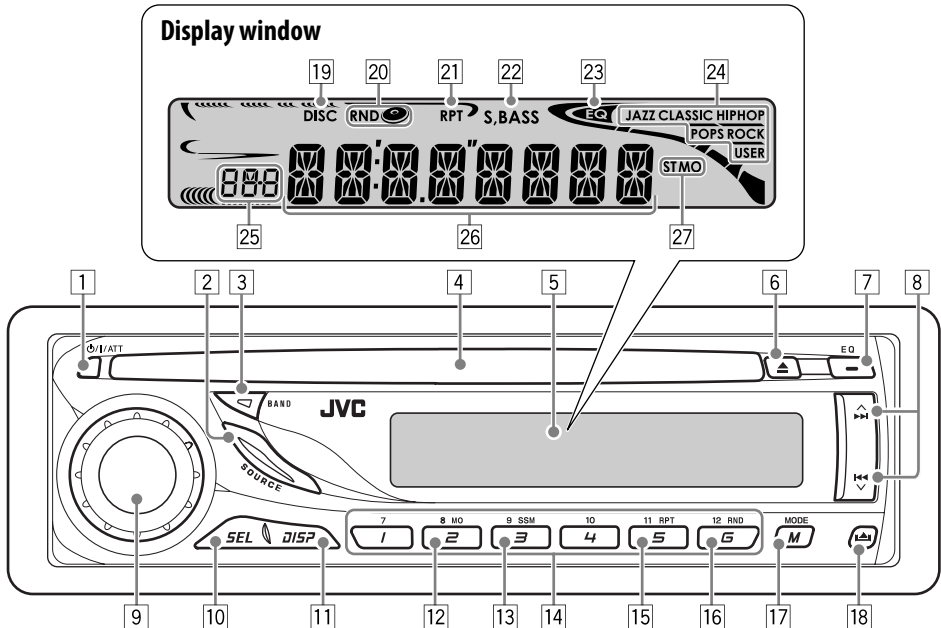

- 1 Φ /I/ATT (standby/on/attenuator) button
- 2 SOURCE button
- 3 BAND button
- 4 Loading slot
- 5 Display window
- 6 \blacktriangle (eject) button
- 7 EQ (equalizer) button
- 8 \blacktriangle \blacktriangleright / \blacktriangleleft \blacktriangledown buttons
- 9 Control dial
- 10 SEL (select) button
- 11 DISP (display) button
- 12 MO (monaural) button
- 13 SSM (Strong-station Sequential Memory) button
- 14 Number buttons
- 15 RPT (repeat) button
- 16 RND (random) button
- 17 M MODE button
- 18 \blacktriangle (control panel release) button

 
Display window

- 19 DISC indicator
- 20 RND  (disc random) indicator
- 21 RPT (repeat) indicator
- 22 S. BASS (super bass) indicator
- 23 EQ (equalizer) indicator
- 24 Sound mode (C-EQ: custom equalizer) indicators—JAZZ, CLASSIC, HIP HOP, POPS, ROCK, USER
- 25 Source display
- Volume level indicator
- Time countdown indicator
- 26 Main display
- 27 Tuner reception indicators—ST (stereo), MO (monaural)

Getting started


Basic operations

- 1 Turn on the power.




* You cannot select "DISC" as the playback source if there is no disc in the loading slot.

 
- 3 For FM/AM tuner



- 4 Adjust the volume.

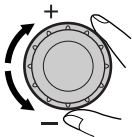

Volume level appears.

 



Volume level indicator

- 5 Adjust the sound as you want. (See page 8.)

<p>To drop the volume in a moment (ATT)</p> <p>To restore the sound, press it again.</p>	
<p>To turn off the power</p>	

Basic settings

- See also "General settings — PSM" on page 9.

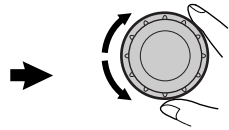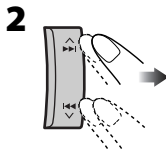

- 1 Canceling the display demonstrations

Select "DEMO," then "DEMO OFF."

- 2 Setting the clock

Select "CLOCK H" (hour), then adjust the hour.



Select "CLOCK M" (minute), then adjust the minute.

- 3 Finish the procedure.




<p>To check the current clock time while the power is turned off</p>	
<p>To check the other information while listening to the radio/a disc</p> <p>Frequency/Elapsed playing time ↔ Clock</p>	

 Radio operations

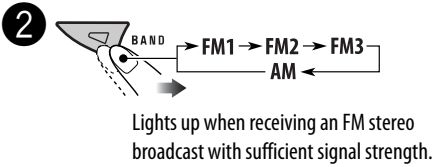

Selected band appears.

 
3 Start searching for a station.




When a station is received, searching stops.
To stop searching, press the same button again.

To tune in to a station manually


In step **3** above...

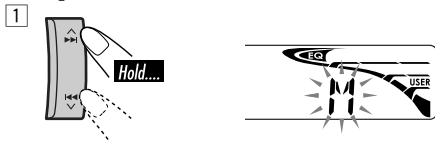

2 Select the desired station frequencies.

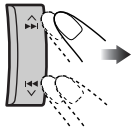

When an FM stereo broadcast is hard to receive

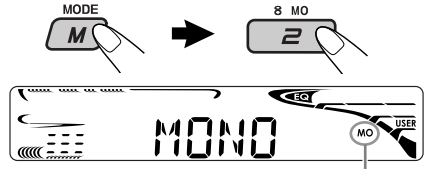

Lights up when monaural mode is activated.

Reception improves, but stereo effect will be lost.

 
 
To restore the stereo effect, repeat the same procedure "MONO OFF" appears and the MO indicator goes off.

Storing stations in memory

You can preset six stations for each band.

FM station automatic presetting—SSM (Strong-station Sequential Memory)

1 Select the FM band (FM1 – FM3) you want to store into.


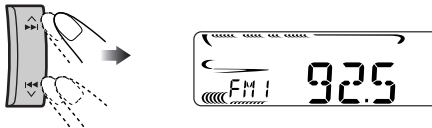
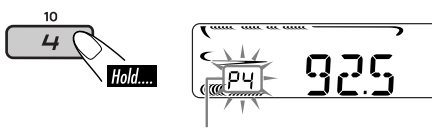


"SSM" flashes, then disappears when automatic presetting is over.

Local FM stations with the strongest signals are searched and stored automatically in the FM band.


Manual presetting

 
Ex.: Storing FM station of 92.5 MHz into preset number 4 of the FM1 band.

- 
- 
- 

Preset number flashes for a while.


Listening to a preset station

- 
- Select the preset station (1 - 6) you want.


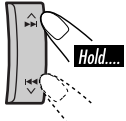
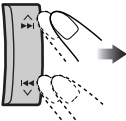


Disc operations

Playing a disc in the unit

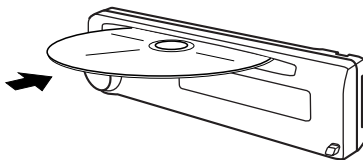


All tracks will be played repeatedly until you change the source or eject the disc.


To stop play and eject the disc	
To fast-forward or reverse the track	
To go to the next or previous tracks	

To locate a particular track directly

 To select a number from 01 - 06:




To select a number from 07 - 12:

 

Prohibiting disc ejection

 
You can lock a disc in the loading slot.



To cancel the prohibition, repeat the same procedure.

Selecting the playback modes

 You can use only one of the following playback modes at a time.



2 Select your desired playback mode.

■ Repeat play



Mode Plays repeatedly

TRK RPT : The current track. **RPT**

RPT OFF : Cancels.

■ Random play



Mode Plays at random

DISC RND : All tracks of the current disc.



RND OFF : Cancels.

Sound adjustments


You can select a preset sound mode suitable to the music genre (C-EQ: custom equalizer).



Preset values	BAS	TRE	S.BS
	(bass)	(treble)	(super bass)
Indication (For)			
USER (Flat sound)	00	00	OFF
ROCK (Rock or disco music)	+03	+01	ON
CLASSIC (Classical music)	+01	-02	OFF
POPS (Light music)	+04	+01	OFF
HIP HOP (Funk or rap music)	+02	00	ON
JAZZ (Jazz music)	+02	+03	OFF

Adjusting the sound

You can adjust the sound characteristics to your preference.

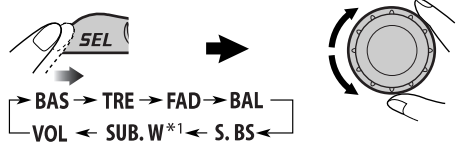

*1 Displayed only when "L/O MODE" is set to "WOOFER" (see page 9).

Indication, [Range]

BAS*2 (bass), [-06 to +06]

Adjust the bass.

TRE*2 (treble), [-06 to +06]

Adjust the treble.

FAD*3 (fader), [R06 to F06]

Adjust the front and rear speaker balance.

BAL*4 (balance), [L06 to R06]

Adjust the left and right speaker balance.

S.BS*2 (super bass), [S.BS ON or S.BS OFF]
[01 to 05]*5

Maintain the richness and fullness of the bass sound regardless of how low you set the volume.

SUB. W (subwoofer), [00 to 08]

Adjust the subwoofer output level when a subwoofer is connected.

VOL (volume), [00 to 30 or 50]*6]

Adjust the volume.

*2 When you adjust the bass, treble, or super bass the adjustment you have made is stored for the currently selected sound mode (C-EQ) including "USER."

*3 If you are using a two-speaker system, set the fader level to "00."

*4 This adjustment cannot affect the subwoofer output.

*5 Range adjustment for super bass is adjustable only when it is set to "S.BS ON."

*6 Depending on the amplifier gain control setting. (See page 9 for details.)


General settings — PSM

You can change PSM (Preferred Setting Mode) items listed in the table that follows.


1



2 Select a PSM item.

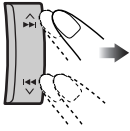

3 Adjust the PSM item selected.

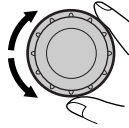

4 Repeat steps 2 and 3 to adjust other PSM items if necessary.

5 Finish the procedure.




Indications	Selectable settings, [reference page]
DEMO Display demonstration	DEMO ON : [Initial]; Display demonstration will be activated automatically if no operation is done for about 20 seconds, [5]. DEMO OFF : Cancels.
CLOCK H Hour adjustment	1 – 12, [5] [Initial: 1 (1:00)]
CLOCK M Minute adjustment	00 – 59, [5] [Initial: 00 (1:00)]
L/O MODE Line output mode	When connecting an amplifier or a subwoofer, set this correctly. REAR : [Initial]; Select if the REAR LINE OUT terminals are used for connecting the speakers through an external amplifier. WOOFER : Select if the REAR LINE OUT terminals are used for connecting a subwoofer.
AMP GAIN Amplifier gain control	You can change the maximum volume level of this unit. LOW PWR : VOL 00 – VOL 30 (Select this if the maximum power of the speaker is less than 50 W to avoid damaging the speaker.) HIGH PWR : [Initial]; VOL 00 – VOL 50

Maintenance

How to clean the connectors

Frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

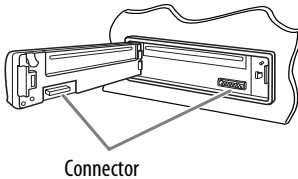

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

Center holder



- Always hold the disc by the edges. Do not touch its recording surface.

When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs into the cases after use.

To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

Do not use the following discs:



More about this unit

Basic operations

Turning on the power

- By pressing SOURCE on the unit, you can also turn on the power. If the source is ready, playback also starts.

Turning off the power

- If you turn off the power while listening to a disc, disc play will start from where playback has been stopped previously, next time you turn on the power.

Selecting the sources

- When no disc is loaded in the unit, "DISC" cannot be selected.

Tuner operations

Storing stations in memory

- During SSM search...
 - All previously stored stations are erased and stations are stored newly.
 - Received stations are preset in No. 1 (lowest frequency) to No. 6 (highest frequency).
 - When SSM is over, the station stored in No. 1 will be automatically tuned in.
- When storing a station manually, a previously preset station is erased when a new station is stored in the same preset number.

Disc operations

Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

General

- This unit has been designed to reproduce CDs, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA) format.
- When a disc has been loaded, selecting "DISC" for the playback source starts disc play.

Inserting a disc

- When a disc is inserted upside down, the disc automatically ejects.
- Do not insert 8 cm discs (single CD) and unusual shape discs (heart, flower, etc.) into the loading slot.

Playing a CD-R or CD-RW

- Use only "finalized" CD-Rs or CD-RWs.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, and for the following causes:
 - Discs are dirty or scratched.
 - Moisture condensation occurs on the lens inside the unit.
 - The pickup lens inside the unit is dirty.
 - CD-R/CD-RW on which the files are written with "Packet Write" method.
 - There are improper recording conditions (missing data, etc.) or media conditions (stain, scratch, warp, etc.).
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- Do not use the following CD-Rs or CD-RWs:
 - Discs with stickers, labels, or protective seal stuck to the surface.
 - Discs on which labels can be directly printed by an ink jet printer.Using these discs under high temperatures or high humidity may cause malfunctions or damages to the unit.

Changing the source

- If you change the source, playback also stops (without ejecting the disc). Next time you select "DISC" for the playback source, disc play starts from where it has been stopped previously.

To be continued...

Ejecting a disc

- If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (Disc will not play this time.)

General settings—PSM

- If you change the “AMP GAIN” setting from “HIGH PWR” to “LOW PWR” while the volume level is set higher than “VOL 30,” the unit automatically changes the volume level to “VOL 30.”

Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Remedies/Causes
General	<ul style="list-style-type: none">• Sound cannot be heard from the speakers.	<ul style="list-style-type: none">• Adjust the volume to the optimum level.• Check the cords and connections.
	<ul style="list-style-type: none">• This unit does not work at all.	Reset the unit (see page 2).
FM/AM	<ul style="list-style-type: none">• SSM automatic presetting does not work.	Store stations manually.
	<ul style="list-style-type: none">• Static noise while listening to the radio.	Connect the antenna firmly.
Disc playback	<ul style="list-style-type: none">• Disc automatically ejects.	Insert the disc correctly.
	<ul style="list-style-type: none">• CD-R/CD-RW cannot be played back.• Tracks on the CD-R/CD-RW cannot be skipped.	<ul style="list-style-type: none">• Insert a finalized CD-R/CD-RW.• Finalize the CD-R/CD-RW with the component which you used for recording.
	<ul style="list-style-type: none">• Disc can be neither played back nor ejected.	<ul style="list-style-type: none">• Unlock the disc (see page 7).• Eject the disc forcibly (see page 2).
	<ul style="list-style-type: none">• Disc sound is sometimes interrupted.	<ul style="list-style-type: none">• Stop playback while driving on rough roads.• Change the disc.• Check the cords and connections.
	<ul style="list-style-type: none">• “NO DISC” appears on the display.	Insert a playable disc into the loading slot.

Specifications

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 50 W per channel

Rear: 50 W per channel

Continuous Power Output (RMS):

Front: 19 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Rear: 19 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Tone Control Range:

Bass: ± 10 dB at 100 Hz

Treble: ± 10 dB at 10 kHz

Frequency Response: 40 Hz to 20 000 Hz

Signal to Noise Ratio: 70 dB

Line-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

Subwoofer-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 108.0 MHz

AM: 531 kHz to 1 602 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz): 65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage:

DC 14.4 V (11 V to 16 V allowance)

Grounding System: Negative ground

Allowable Operating Temperature:

0°C to +40°C

Dimensions (W \times H \times D):

Installation Size (approx.):

182 mm \times 52 mm \times 150 mm

Panel Size (approx.):

188 mm \times 58 mm \times 11 mm

Mass (approx.):

1.2 kg (excluding accessories)

Design and specifications are subject to change without notice.



Having TROUBLE with operation?

Please reset your unit

Refer to page of How to reset your unit

JVC



JVC KD-G124/KD-G123

Installation/Connection Manual

GET0332-002A
[U]

1005DTSMDTJEIN
EN

© 2005 Victor Company of Japan, Limited

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.


WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- **Be sure to ground this unit to the car's chassis again after installation.**


Notes:

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- It is recommended to connect to the speakers with maximum power of more than 50 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 50 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 9 of the INSTRUCTIONS).
- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

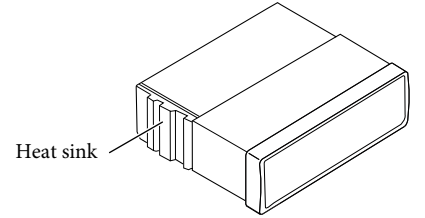


PRECAUTIONS on power supply and speaker connections:

- **DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

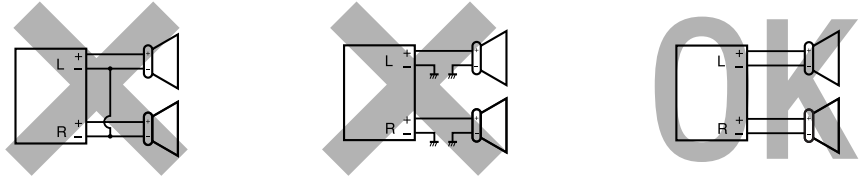

Parts list for installation and connection


The following parts are provided for this unit.
After checking them, please set them correctly.

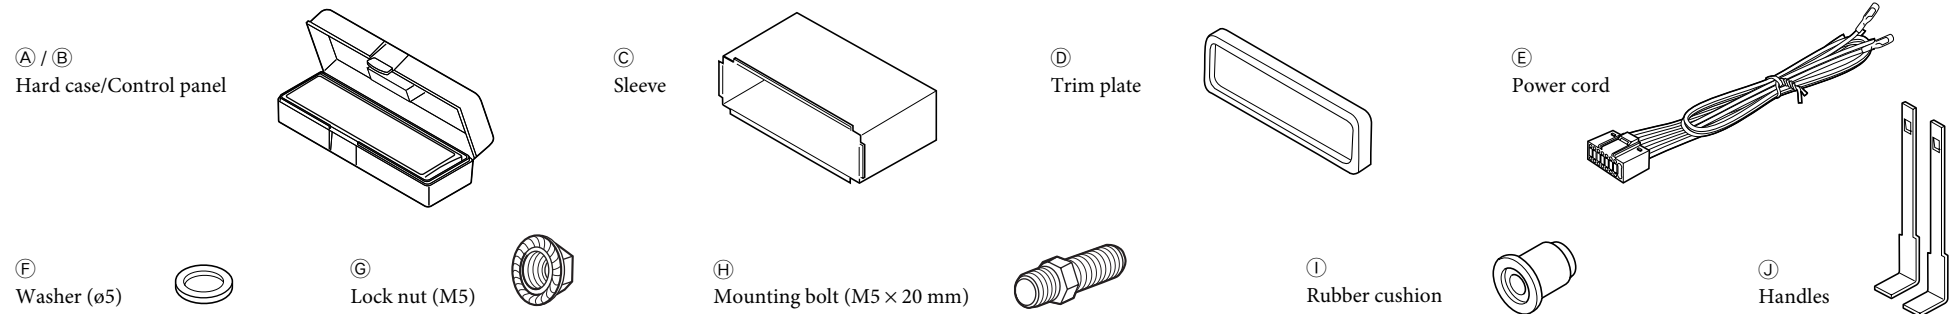

INSTALLATION (IN-DASH MOUNTING)


The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

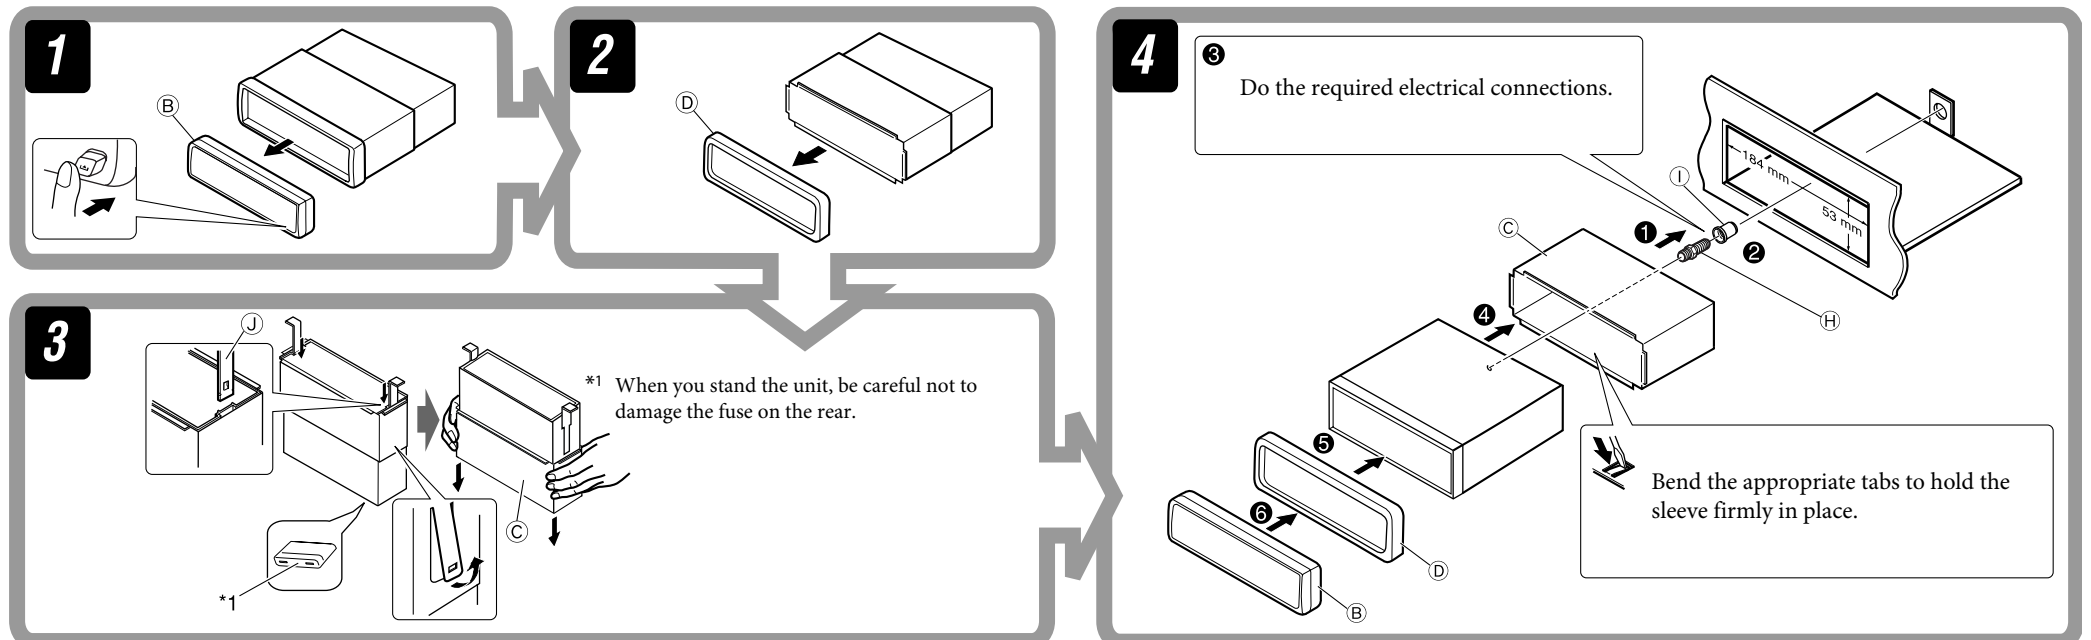


Removing the unit

Before removing the unit, release the rear section.

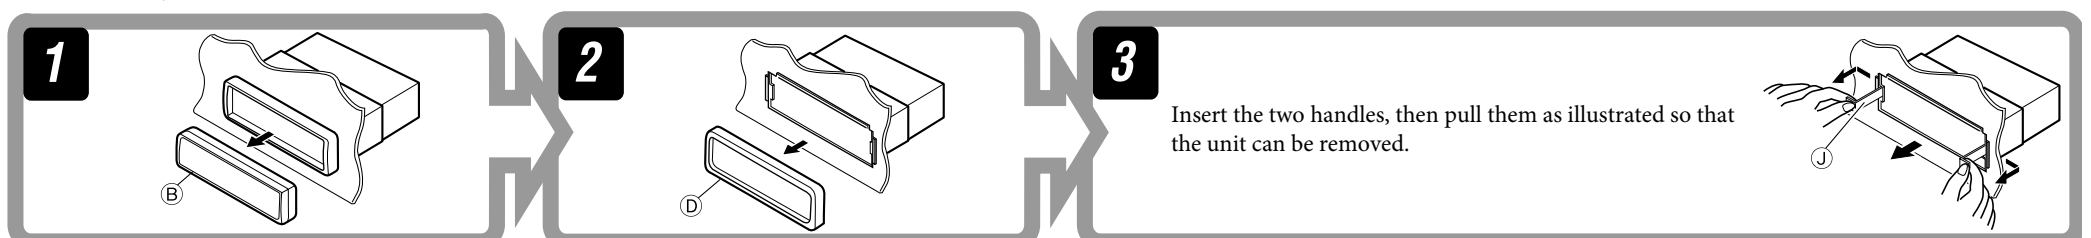


When using the optional stay

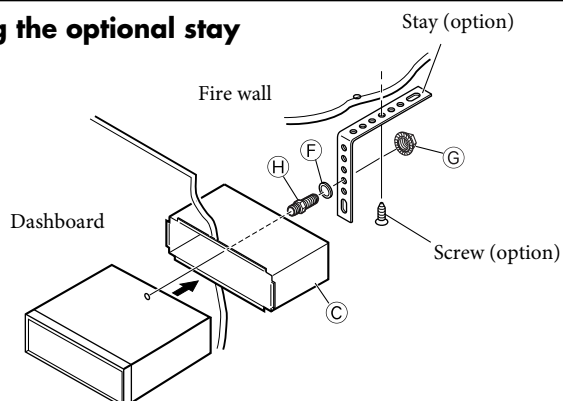

Install the unit at an angle of less than 30°.

When installing the unit without using the sleeve

In a Toyota car for example, first remove the car radio and install the unit in its place.

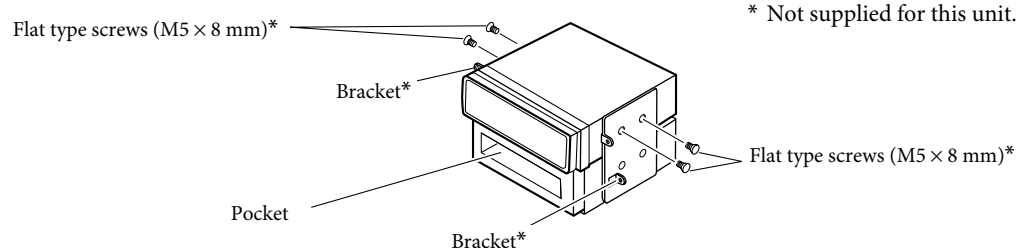


Note : When installing the unit on the mounting bracket, make sure to use the 8 mm-long screws. If longer screws are used, they could damage the unit.

ELECTRICAL CONNECTIONS

A Typical connections

Before connecting: Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit. The leads of the power cord and those of the connector from the car body may be different in color.

- 1 Connect the colored leads of the power cord in the order specified in the illustration below.
- 2 Connect the antenna cord.
- 3 Finally connect the wiring harness to the unit.

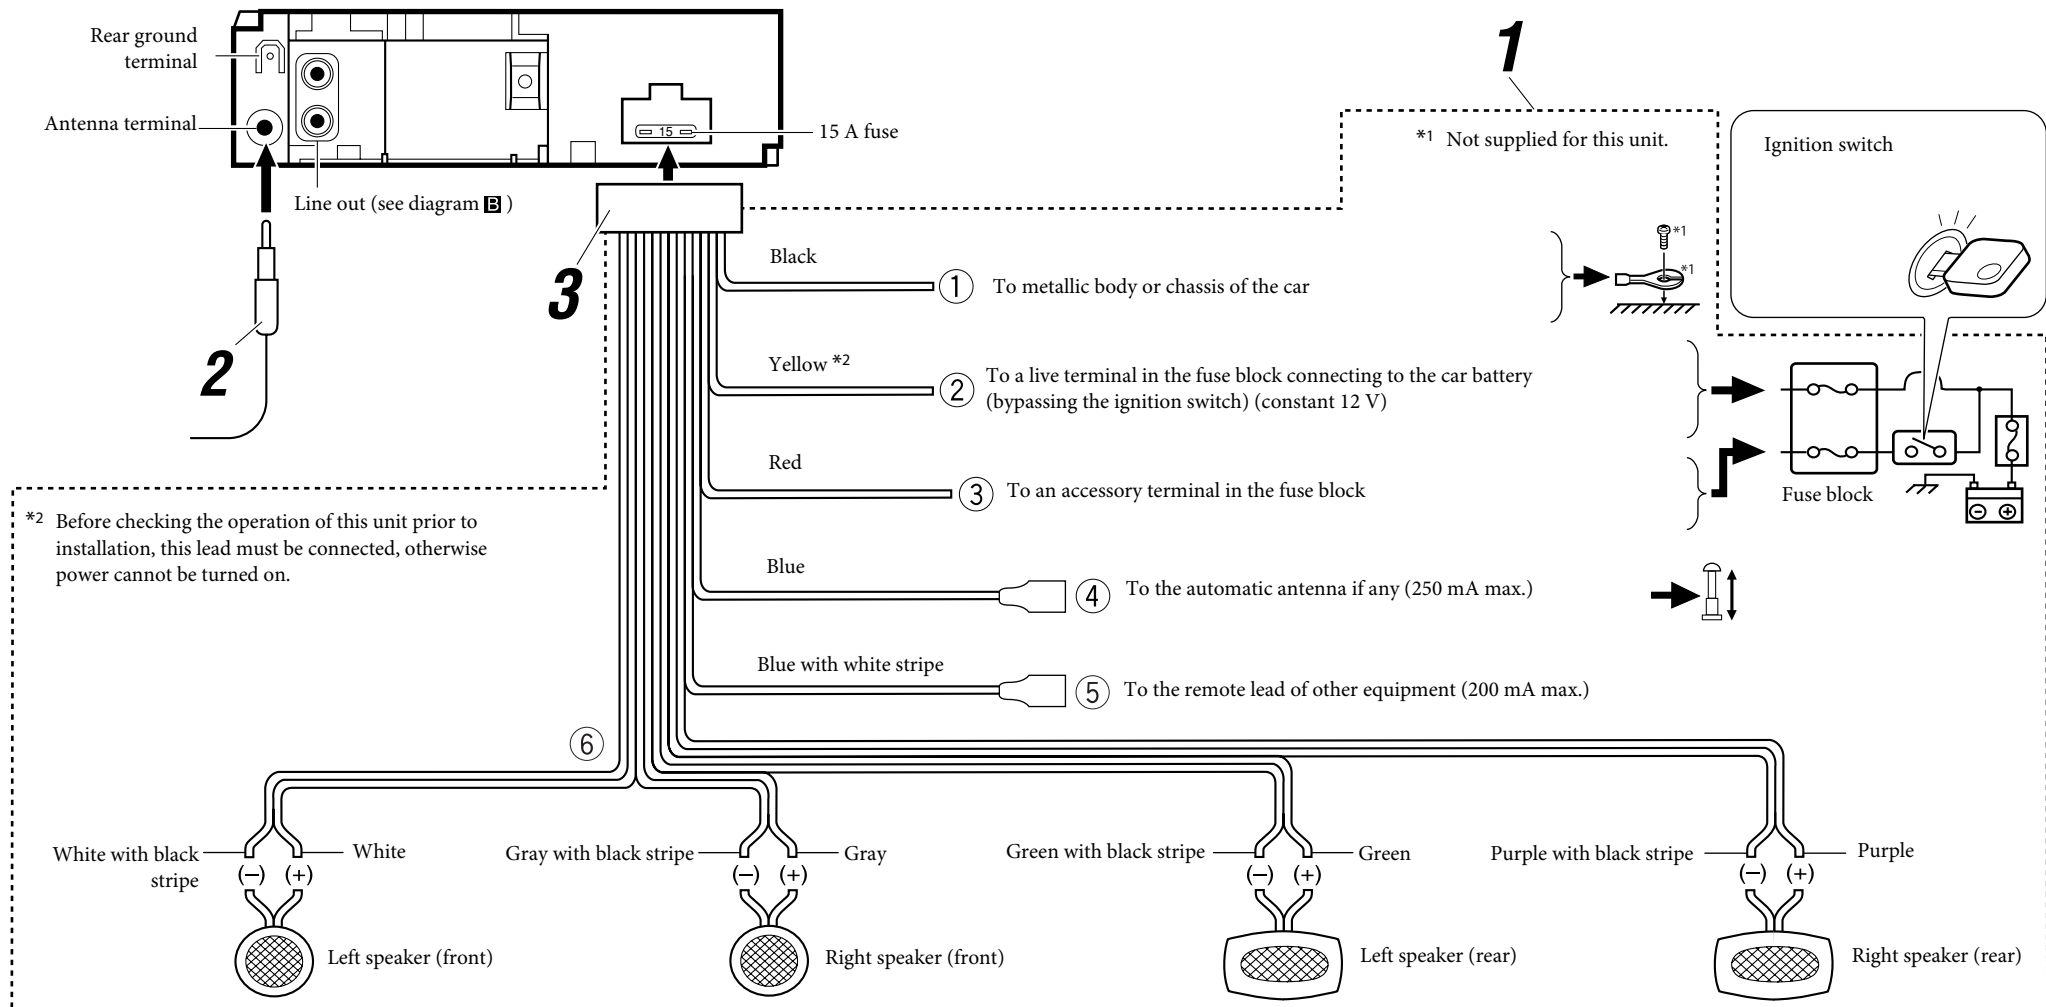


B Connecting the external amplifier or subwoofer

You can connect an amplifier to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**


Set "L/O MODE" to "REAR" (See page 9 of the INSTRUCTIONS.)

You can connect a power amplifier for rear speakers.

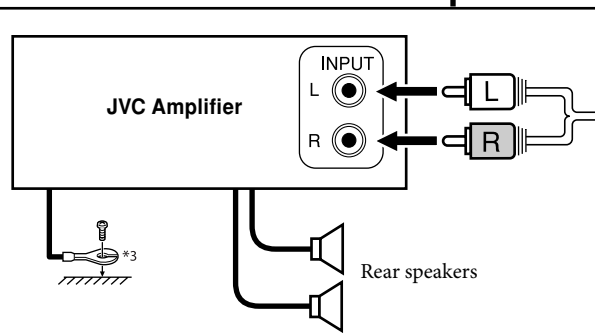

Set "L/O MODE" to "WOOFER" (See page 9 of the INSTRUCTIONS.)

You can also connect a subwoofer to the REAR LINE OUT terminals.

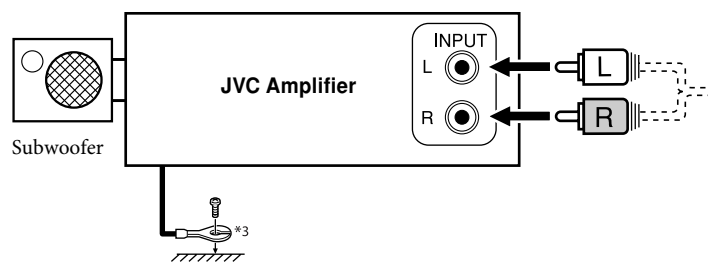

***3** Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint (if coated with paint, remove the paint before attaching the wire). Failure to do so may cause damage to the unit.

***4** Signal cord (not supplied for this unit)

TROUBLESHOOTING

- **The fuse blows.**
 - * Are the red and black leads connected correctly?
- **Power cannot be turned on.**
 - * Is the yellow lead connected?
- **No sound from the speakers.**
 - * Is the speaker output lead short-circuited?
- **Sound is distorted.**
 - * Is the speaker output lead grounded?
 - * Are the "-" terminals of L and R speakers grounded in common?
- **Noise interfere with sounds.**
 - * Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?
- **This unit becomes hot.**
 - * Is the speaker output lead grounded?
 - * Are the "-" terminals of L and R speakers grounded in common?
- **This unit does not work at all.**
 - * Have you reset your unit?




CD RECEIVER

KD-G126/KD-G125

เครื่องเล่น CD


KD-G126/KD-G125

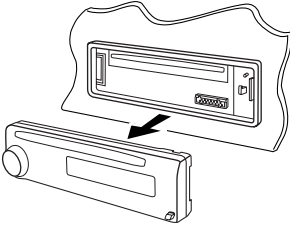


CD-RW

COMPACT
disc
DIGITAL AUDIO

KD-G126

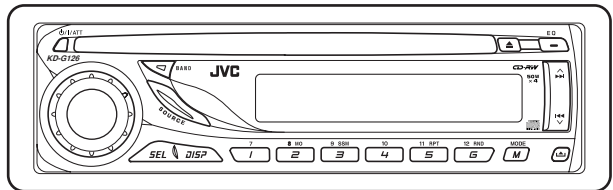

KD-G125

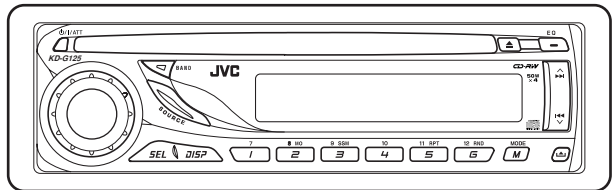

For canceling the display demonstration, see page 5.

ดูที่หน้า 5 เพื่อยกเลิกการสาธิตภาพประกอบ

For installation and connections, refer to the separate manual.

กรุณาดูคู่มือที่แยกต่างหาก ในการติดตั้งและการเชื่อมต่อ

INSTRUCTIONS

คำแนะนำ

GET0331-001A
[U/UH]

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.	ADVARSEL: Synlig og usynlig laserstråling når maskinen er åpen eller interlocken fejler. Undgå direkte eksponering til stråling.	VARNING: Synlig og osynlig laserstråling når den åpnes og spærren er urkoppplad. Betrakta ej strålen.	VARO: Arvattassa ja suojalukitus ohitettuna tai viallisena olet alittuna näkyvälle ja näkymättömälle lasersträilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
(e)	(d)	(s)	(f)

Warning:

If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.

Caution on volume setting:

Discs produce very little noise compared with other sources. Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level.

How to reset your unit



- Your preset adjustments will also be erased.
- If a disc is loaded, it will eject. Be careful not to drop the disc.

How to forcibly eject a disc




- If this does not work, reset your unit.
- Be careful not to drop the disc when it ejects.

How to use the M MODE button

If you press M MODE, the unit goes into functions mode, then the number buttons work as different function buttons.



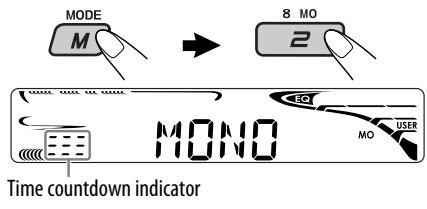


Ex.: When number button 2 works as MO (monaural) button.




To use these buttons for their original functions again after pressing M MODE, wait for 5 seconds without pressing any of these buttons until the functions mode is cleared or press M MODE again.

How to read this manual

 
- Button operations are mainly explained with the illustrations in the table below.
- ○ is used to indicate an indicator is displayed for the corresponding operation.
- Some related tips and notes are explained in “More about this unit” (see pages 11 and 12).

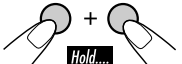	Press briefly.
	Press repeatedly.
	Press either one.
	Press and hold until your desired response begins.
	Press and hold both buttons at the same time.


How to detach/attach the control panel

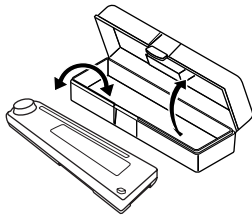

Detaching...

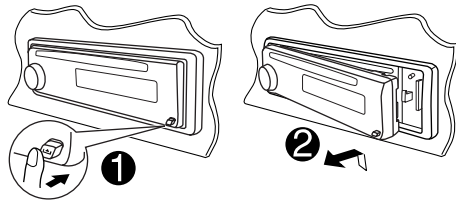

Attaching...

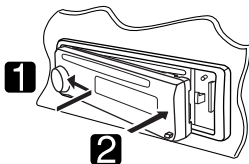

CONTENTS

Control panel — KD-G126 and KD-G125	4
Getting started	5
Basic operations.....	5
Radio operations	6
Disc operations	7
Playing a disc in the unit.....	7
Sound adjustments	8
General settings — PSM	9
Maintenance	10
More about this unit	11
Troubleshooting	12
Specifications	13

For safety...


- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

Temperature inside the car...

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.


Control panel — KD-G126 and KD-G125

Parts identification

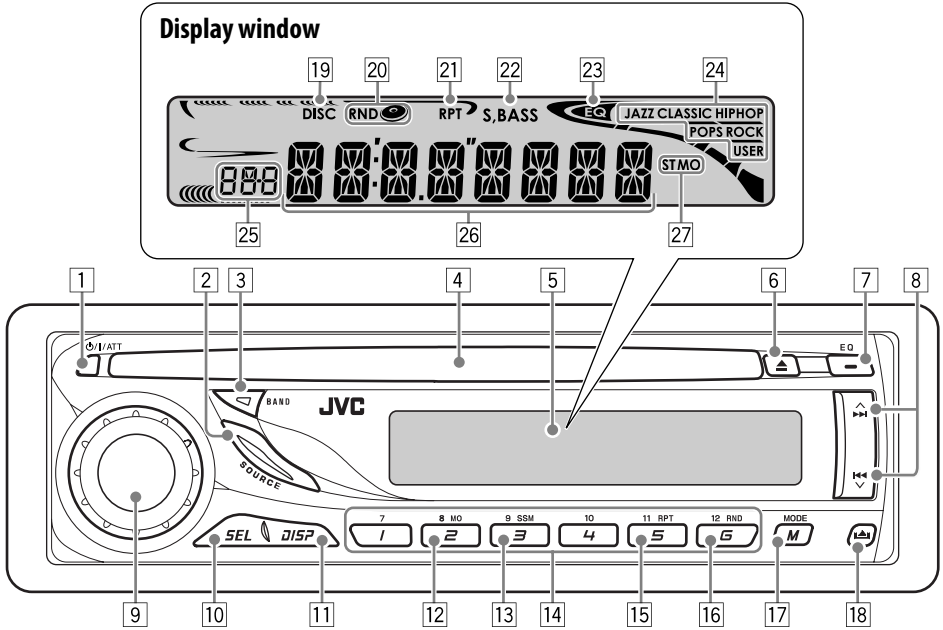

- 1 Φ /I/ATT (standby/on/attenuator) button
- 2 SOURCE button
- 3 BAND button
- 4 Loading slot
- 5 Display window
- 6 \blacktriangle (eject) button
- 7 EQ (equalizer) button
- 8 \blacktriangle \blacktriangleright \blacktriangleleft \blacktriangledown buttons
- 9 Control dial
- 10 SEL (select) button
- 11 DISP (display) button
- 12 MO (monaural) button
- 13 SSM (Strong-station Sequential Memory) button
- 14 Number buttons
- 15 RPT (repeat) button
- 16 RND (random) button
- 17 M MODE button
- 18 \blacktriangle (control panel release) button

 
Display window

- 19 DISC indicator
- 20 RND  (disc random) indicator
- 21 RPT (repeat) indicator
- 22 S. BASS (super bass) indicator
- 23 EQ (equalizer) indicator
- 24 Sound mode (C-EQ: custom equalizer) indicators—JAZZ, CLASSIC, HIP HOP, POPS, ROCK, USER
- 25 Source display
- Volume level indicator
- Time countdown indicator
- 26 Main display
- 27 Tuner reception indicators—ST (stereo), MO (monaural)

Getting started

Basic operations

- 1 Turn on the power.




* You cannot select "DISC" as the playback source if there is no disc in the loading slot.


- 3 For FM/AM tuner



- 4 Adjust the volume.

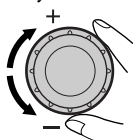

Volume level appears.

 


Volume level indicator

- 5 Adjust the sound as you want. (See page 8.)

Basic settings

- See also "General settings — PSM" on page 9.

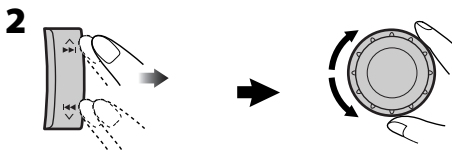

- 1 **Canceling the display demonstrations**

Select "DEMO," then "DEMO OFF."

- 2 **Setting the clock**

Select "CLOCK H" (hour), then adjust the hour.

Select "CLOCK M" (minute), then adjust the minute.


- 3 Finish the procedure.



To check the current clock time while the power is turned off



To check the other information while listening to the radio/a disc
Frequency/Elapsed playing time
↔ Clock

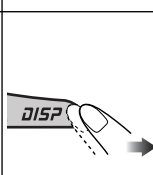

To drop the volume in a moment (ATT)

 

 
To restore the sound, press it again.



To turn off the power




Radio operations

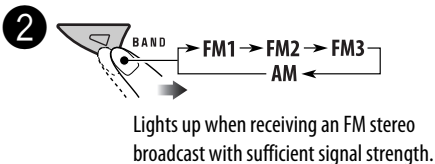

Selected band appears.

 
3 Start searching for a station.




When a station is received, searching stops.
To stop searching, press the same button again.

To tune in to a station manually


In step **3** above...

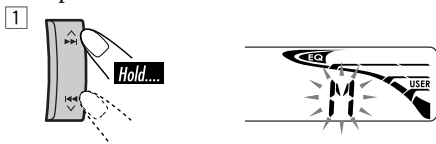

2 Select the desired station frequencies.

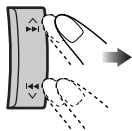

When an FM stereo broadcast is hard to receive

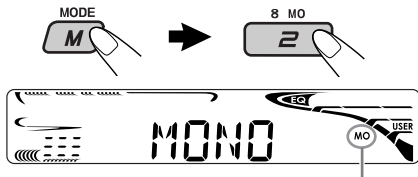

Lights up when monaural mode is activated.

Reception improves, but stereo effect will be lost.

 
 
 
To restore the stereo effect, repeat the same procedure "MONO OFF" appears and the MO indicator goes off.

Storing stations in memory

You can preset six stations for each band.

FM station automatic presetting—SSM (Strong-station Sequential Memory)

1 Select the FM band (FM1 – FM3) you want to store into.



"SSM" flashes, then disappears when automatic presetting is over.

Local FM stations with the strongest signals are searched and stored automatically in the FM band.

Manual presetting

Ex.: Storing FM station of 92.5 MHz into preset number 4 of the FM1 band.


-
-
- Preset number flashes for a while.

Listening to a preset station

-
- Select the preset station (1 - 6) you want.

Disc operations

Playing a disc in the unit

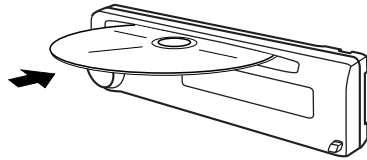


All tracks will be played repeatedly until you change the source or eject the disc.


To stop play and eject the disc	
To fast-forward or reverse the track	
To go to the next or previous tracks	

To locate a particular track directly

 To select a number from 01 - 06:




To select a number from 07 - 12:

 

Prohibiting disc ejection

You can lock a disc in the loading slot.

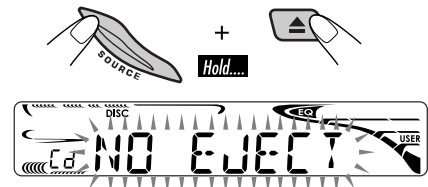

To cancel the prohibition, repeat the same procedure.

Selecting the playback modes

You can use only one of the following playback modes at a time.



2 Select your desired playback mode.

■ Repeat play



Mode Plays repeatedly

TRK RPT : The current track.

RPT OFF : Cancels.

■ Random play



Mode Plays at random

DISC RND : All tracks of the current disc.

RND OFF : Cancels.

Sound adjustments


You can select a preset sound mode suitable to the music genre (C-EQ: custom equalizer).



Preset values	BAS (bass)	TRE (treble)	S.BS (super bass)
Indication (For)			
USER (Flat sound)	00	00	OFF
ROCK (Rock or disco music)	+03	+01	ON
CLASSIC (Classical music)	+01	-02	OFF
POPS (Light music)	+04	+01	OFF
HIP HOP (Funk or rap music)	+02	00	ON
JAZZ (Jazz music)	+02	+03	OFF

Adjusting the sound

You can adjust the sound characteristics to your preference.

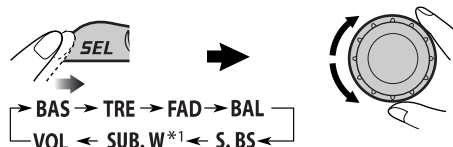

*1 Displayed only when "L/O MODE" is set to "WOOFER" (see page 9).

Indication, [Range]

BAS*2 (bass), [-06 to +06]

Adjust the bass.

TRE*2 (treble), [-06 to +06]

Adjust the treble.

FAD*3 (fader), [R06 to F06]

Adjust the front and rear speaker balance.

BAL*4 (balance), [L06 to R06]

Adjust the left and right speaker balance.

S.BS*2 (super bass), [S.BS ON or S.BS OFF],
[01 to 05]*5

Maintain the richness and fullness of the bass sound regardless of how low you set the volume.

SUB. W (subwoofer), [00 to 08]

Adjust the subwoofer output level when a subwoofer is connected.

VOL (volume), [00 to 30 or 50]*6]

Adjust the volume.

*2 When you adjust the bass, treble, or super bass the adjustment you have made is stored for the currently selected sound mode (C-EQ) including "USER."

*3 If you are using a two-speaker system, set the fader level to "00."

*4 This adjustment cannot affect the subwoofer output.

*5 Range adjustment for super bass is adjustable only when it is set to "S.BS ON."


*6 Depending on the amplifier gain control setting. (See page 9 for details.)

General settings — PSM


You can change PSM (Preferred Setting Mode) items listed in the table that follows.



2 Select a PSM item.

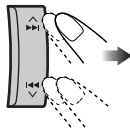

3 Adjust the PSM item selected.

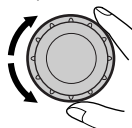

4 Repeat steps 2 and 3 to adjust other PSM items if necessary.

5 Finish the procedure.




Indications	Selectable settings, [reference page]
DEMO Display demonstration	DEMO ON : [Initial]; Display demonstration will be activated automatically if no operation is done for about 20 seconds, [5]. DEMO OFF : Cancels.
CLOCK H Hour adjustment	1 – 12, [5] [Initial: 1 (1:00)]
CLOCK M Minute adjustment	00 – 59, [5] [Initial: 00 (1:00)]
L/O MODE Line output mode	When connecting an amplifier or a subwoofer, set this correctly. REAR : [Initial]; Select if the REAR LINE OUT terminals are used for connecting the speakers through an external amplifier. WOOFER : Select if the REAR LINE OUT terminals are used for connecting a subwoofer.
AMP GAIN Amplifier gain control	You can change the maximum volume level of this unit. LOW PWR : VOL 00 – VOL 30 (Select this if the maximum power of the speaker is less than 50 W to avoid damaging the speaker.) HIGH PWR : [Initial]; VOL 00 – VOL 50

Maintenance

How to clean the connectors

Frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

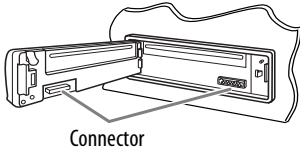

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

- Always hold the disc by the edges. Do not touch its recording surface.

When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs into the cases after use.

Center holder



To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.



To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.

- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzene, etc.) to clean discs.



Do not use the following discs:



More about this unit

Basic operations

Turning on the power

- By pressing SOURCE on the unit, you can also turn on the power. If the source is ready, playback also starts.

Turning off the power

- If you turn off the power while listening to a disc, disc play will start from where playback has been stopped previously, next time you turn on the power.

Selecting the sources

- When no disc is loaded in the unit, "DISC" cannot be selected.

Tuner operations

Storing stations in memory

- During SSM search...
 - All previously stored stations are erased and stations are stored newly.
 - Received stations are preset in No. 1 (lowest frequency) to No. 6 (highest frequency).
 - When SSM is over, the station stored in No. 1 will be automatically tuned in.
- When storing a station manually, a previously preset station is erased when a new station is stored in the same preset number.

Disc operations

Caution for DualDisc playback

- The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

General

- This unit has been designed to reproduce CDs, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA) format.
- When a disc has been loaded, selecting "DISC" for the playback source starts disc play.

Inserting a disc

- When a disc is inserted upside down, the disc automatically ejects.
- Do not insert 8 cm discs (single CD) and unusual shape discs (heart, flower, etc.) into the loading slot.

Playing a CD-R or CD-RW

- Use only "finalized" CD-Rs or CD-RWs.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, and for the following causes:
 - Discs are dirty or scratched.
 - Moisture condensation occurs on the lens inside the unit.
 - The pickup lens inside the unit is dirty.
 - CD-R/CD-RW on which the files are written with "Packet Write" method.
 - There are improper recording conditions (missing data, etc.) or media conditions (stain, scratch, warp, etc.).
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- Do not use the following CD-Rs or CD-RWs:
 - Discs with stickers, labels, or protective seal stuck to the surface.
 - Discs on which labels can be directly printed by an ink jet printer.Using these discs under high temperatures or high humidity may cause malfunctions or damages to the unit.

Changing the source

- If you change the source, playback also stops (without ejecting the disc). Next time you select "DISC" for the playback source, disc play starts from where it has been stopped previously.

To be continued...

Ejecting a disc

- If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (Disc will not play this time.)

General settings—PSM

- If you change the “AMP GAIN” setting from “HIGH PWR” to “LOW PWR” while the volume level is set higher than “VOL 30,” the unit automatically changes the volume level to “VOL 30.”

Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Remedies/Causes
General	<ul style="list-style-type: none"> • Sound cannot be heard from the speakers. 	<ul style="list-style-type: none"> • Adjust the volume to the optimum level. • Check the cords and connections.
	<ul style="list-style-type: none"> • This unit does not work at all. 	Reset the unit (see page 2).
FM/AM	<ul style="list-style-type: none"> • SSM automatic presetting does not work. 	Store stations manually.
	<ul style="list-style-type: none"> • Static noise while listening to the radio. 	Connect the antenna firmly.
Disc playback	<ul style="list-style-type: none"> • Disc automatically ejects. 	Insert the disc correctly.
	<ul style="list-style-type: none"> • CD-R/CD-RW cannot be played back. • Tracks on the CD-R/CD-RW cannot be skipped. 	<ul style="list-style-type: none"> • Insert a finalized CD-R/CD-RW. • Finalize the CD-R/CD-RW with the component which you used for recording.
	<ul style="list-style-type: none"> • Disc can be neither played back nor ejected. 	<ul style="list-style-type: none"> • Unlock the disc (see page 7). • Eject the disc forcibly (see page 2).
	<ul style="list-style-type: none"> • Disc sound is sometimes interrupted. 	<ul style="list-style-type: none"> • Stop playback while driving on rough roads. • Change the disc. • Check the cords and connections.
	<ul style="list-style-type: none"> • “NO DISC” appears on the display. 	Insert a playable disc into the loading slot.

Specifications

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 50 W per channel

Rear: 50 W per channel

Continuous Power Output (RMS):

Front: 19 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Rear: 19 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Tone Control Range:

Bass: ± 10 dB at 100 Hz

Treble: ± 10 dB at 10 kHz

Frequency Response: 40 Hz to 20 000 Hz

Signal to Noise Ratio: 70 dB

Line-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

Subwoofer-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 108.0 MHz

AM: 531 kHz to 1 602 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz): 65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage:

DC 14.4 V (11 V to 16 V allowance)

Grounding System: Negative ground

Allowable Operating Temperature:

0°C to +40°C

Dimensions (W \times H \times D):

Installation Size (approx.):

182 mm \times 52 mm \times 150 mm

Panel Size (approx.):

188 mm \times 58 mm \times 11 mm

Mass (approx.):

1.2 kg (excluding accessories)

Design and specifications are subject to change without notice.

Having TROUBLE with operation?

Please reset your unit

Refer to page of How to reset your unit

หากมีปัญหาในการใช้งาน
กรุณาถอดปลั๊กตั้งค่าเริ่มต้นใหม่
กรุณาดูหน้าวิธีตั้งค่าเครื่องใหม่

JVC



EN, TH

© 2005 Victor Company of Japan, Limited

1005DTSMDTJEIN

ENGLISH

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.


WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- **Be sure to ground this unit to the car's chassis again after installation.**




Notes:

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- It is recommended to connect to the speakers with maximum power of more than 50 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 50 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 9 of the INSTRUCTIONS).
- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

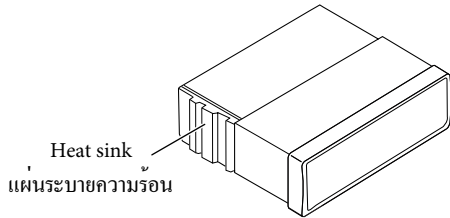

PRECAUTIONS on power supply and speaker connections:

- **DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

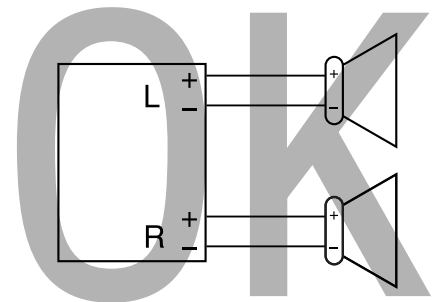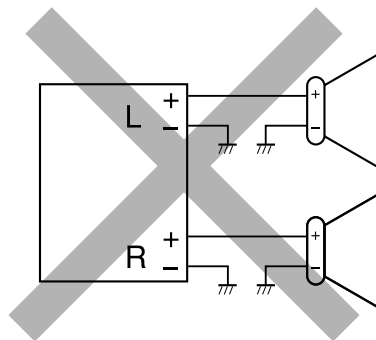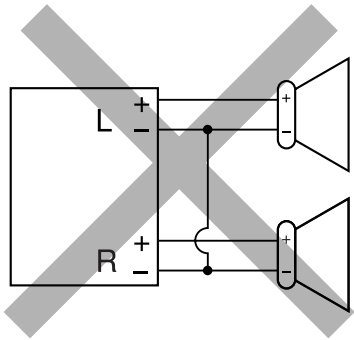


ข้อควรระวังสำหรับการต่อแหล่งจ่ายกำลังและลำโพง:

- อย่าต่อสายตะกั่วเคเบิลกำลังของลำโพงเข้ากับแบตเตอรี่รถยนต์ มิฉะนั้น ชุดประกอบจะได้รับความเสียหายมาก
- ก่อนที่จะต่อสายตะกั่วเคเบิลกำลังของลำโพงเข้ากับลำโพง ให้ตรวจสอบการเดินสายไฟลำโพงในรถของคุณให้เรียบร้อยเสียก่อน


Parts list for installation and connection

The following parts are provided for this unit. After checking them, please set them correctly.


(A) / (B)
Hard case/Control panel
ลิ้นบรรจุ/หน้าปัด

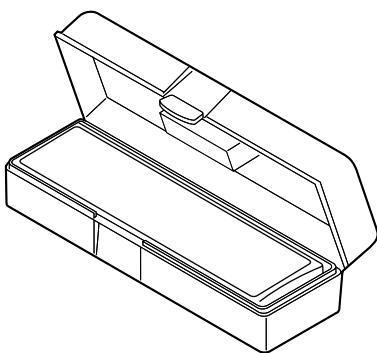


(C)
Sleeve
ปลอกหุ้ม

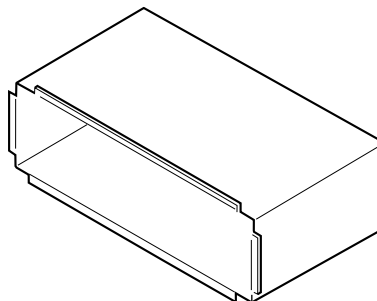

(D)
Trim plate
แผ่นโลหะขอบแต่ง

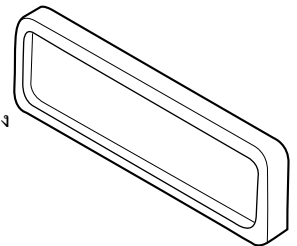

(E)
Power cord
สายเคเบิลกำลัง

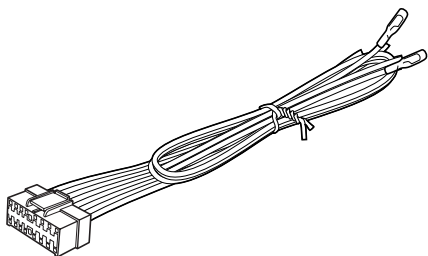


(F)
Washer (ø5)
ประเก็นวงแหวน (ø5)



(G)
Lock nut (M5)
นอตล็อก (M5)



 
(H)
Mounting bolt (M5 × 20 mm)
สลักติด (M5 × 20 มม.)



(I)
Rubber cushion
ยางกันกระแทก



 (J)
Handles
คันบังคับ



INSTALLATION (IN-DASH MOUNTING)

The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

การติดตั้ง (การประกอบแผงหน้าปัดเข็ม)

ภาพตัวอย่างต่อไปนี้แสดงถึงการติดตั้งแบบทั่วไป หากคุณมีปัญหาหรือต้องการข้อมูลเกี่ยวกับชุดติดตั้ง กรุณาปรึกษากับผู้ขายเครื่องเสียงรถยนต์ JVC ของท่านหรือบริษัท

- ชุดประกอบ ถ้าคุณไม่แน่ใจว่าติดตั้งชุดประกอบนี้ถูกต้องหรือไม่ ให้หาช่างผู้เชี่ยวชาญเป็นผู้ติดตั้ง

1 Insert the sleeve into the front of the unit.

2 Push the sleeve into the dash panel.

3 Push the unit into the dash panel. **1 When you stand the unit, be careful not to damage the fuse on the rear. *1 เมื่อคุณตั้งชุดประกอบขึ้น ระวังอย่าทำให้ฟิวส์บริเวณส่วนท้ายเสียหาย*

4 Do the required electrical connections. *ต่อสายไฟตามที่กำหนดไว้ทั้งหมด*

5 Bend the appropriate tabs to hold the sleeve firmly in place. *งอแผ่นเพื่อยึดปิดล็อกให้ตอกันเข้าที่*

6 Push the sleeve into the dash panel.

Removing the unit

Before removing the unit, release the rear section.

การถอดชุดประกอบ

ก่อนจะถอดชุดประกอบ ให้ปลดหน้าตัดส่วนท้ายก่อน

1 Release the rear section of the dash panel.

2 Push the sleeve into the dash panel.

3 Insert the two handles, then pull them as illustrated so that the unit can be removed. *ใส่คันบังคับ 2 อันลงในร่องสำหรับใช้พันลวด ดังภาพ จากนั้นให้เลื่อนชุดประกอบออก ในขณะที่ค่อยๆ ดึงคันบังคับทั้งสองอันออกจากกัน*

When using the optional stay / เมื่อใช้ตัวยึดแบบเลือกได้

Stay (option) ตัวยึด (เลือกได้)

Fire wall ผนังกันไฟ

Dashboard แผงหน้าปัดเข็ม

Screw (option) กรู (เลือกได้)

Install the unit at an angle of less than 30°. *ติดตั้งชุดประกอบที่มุมต่ำกว่า 30° องศา*

When installing the unit without using the sleeve / เมื่อติดตั้งชุดประกอบโดยไม่ใช้ปลอกหุ้ม

In a Toyota car for example, first remove the car radio and install the unit in its place.

ตัวอย่างเช่น ในรถยนต์โตโยต้า ให้ถอดวิทยุติดรถยนต์ออกก่อน แล้วจึงติดตั้งเครื่องนี้เข้าแทนที่

Flat type screws (M5 × 8 mm)* กรูหัวเรียบ (M5 × 8 มม.)*

Bracket* แท่นรองรับ*

Pocket กะเปาะ

Bracket* แท่นรองรับ*

Flat type screws (M5 × 8 mm)* กรูหัวเรียบ (M5 × 8 มม.)*

* Not supplied for this unit. * ไม่ได้ใหม่กับชุดประกอบนี้

Note : When installing the unit on the mounting bracket, make sure to use the 8 mm-long screws. If longer screws are used, they could damage the unit.

หมายเหตุ : เมื่อติดตั้งชุดประกอบลงในแท่นรองรับไว้ ให้ใช้สกรูยาวขนาด 8 มม. ถ้าใช้สกรูยาวกว่านี้อาจทำให้ชุดประกอบเสียหายได้

ELECTRICAL CONNECTIONS

การเชื่อมต่อโดยใช้ไฟฟ้า


A Typical connections / การเชื่อมต่อแบบปกติ

Before connecting: Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit.
The leads of the power cord and those of the connector from the car body may be different in color.

- 1 Connect the colored leads of the power cord in the order specified in the illustration below.
- 2 Connect the antenna cord.
- 3 Finally connect the wiring harness to the unit.

ก่อนทำการเชื่อมต่อ: ตรวจสอบสายไฟในรถอย่างละเอียด การเชื่อมต่อที่ไม่ถูกต้องอาจก่อให้เกิดความเสียหายร้ายแรงต่อชุดประกอบชุดที่ภาคเชื่อมต่อผิดพลาดอาจทำให้เกิดความเสียหายร้ายแรงแก่ชุดประกอบชุดที่ภาคเชื่อมต่อผิดพลาดของสายไฟ และของอุปกรณ์เชื่อมต่อจากตัวรถ จดลวดที่มีสีไม่เหมือนกัน

- 1 ต่อสายไฟสีตามลำดับที่ระบุในรูปด้านล่าง
- 2 เชื่อมต่อกับสายอากาศ
- 3 สุดท้าย ต่อส่วนควบคุมการเดินสายไฟเข้ากับชุดประกอบชุดนี้

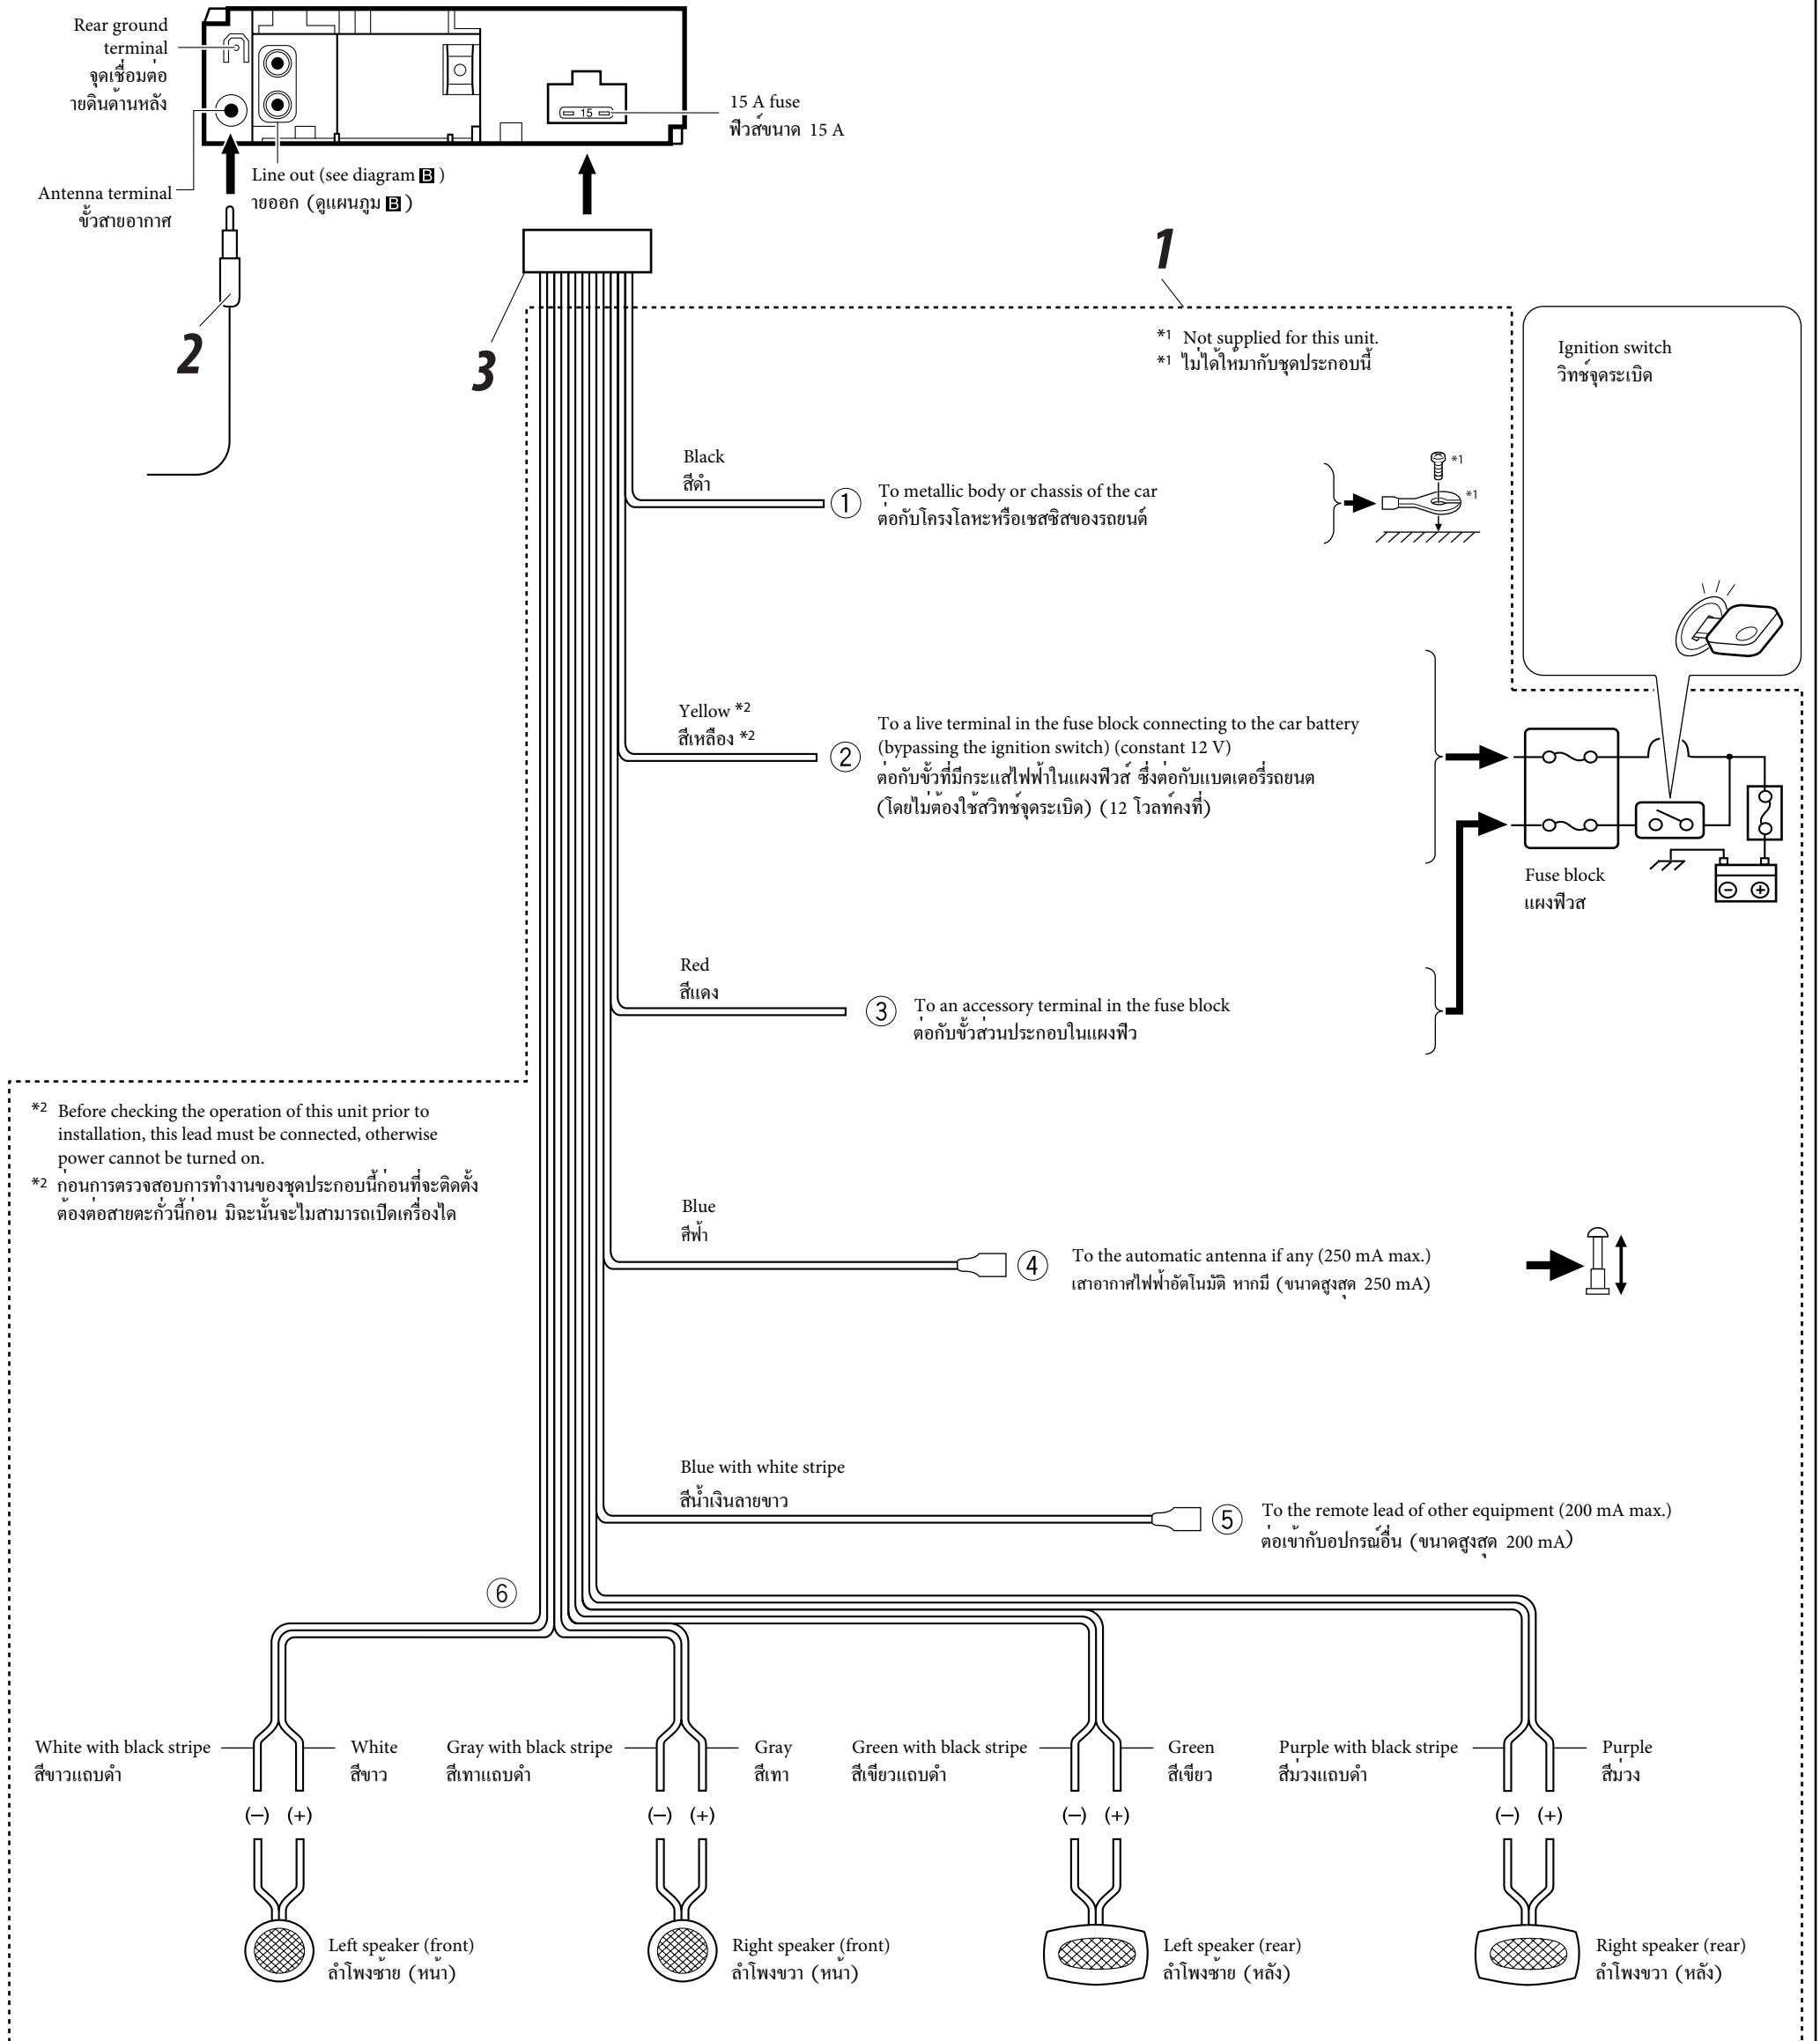


B Connecting the external amplifier or subwoofer / ต่อแอมป์ไฟเออร์หรือซับวูฟเฟอร์ด้านหลัง

You can connect an amplifier to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**

คุณสามารถต่อกับแอมป์ไฟเออร์ เพื่อเพิ่มคุณภาพเสียงให้กับระบบสเตอริโอของรถยนต์

- ต่อสายตัวกระชาก (สีน้ำเงินลายขาว) เข้ากับสายตัวกระชากของอุปกรณ์อื่น ๆ เพื่อจะสามารถควบคุมโดยชุดประกอบนี้ได้
- **ถอดลำโพงออกจากชุดประกอบนี้ แล้วต่อเข้ากับเครื่องขยาย ทั้งสายตัวลำโพงของชุดประกอบนี้ไว้**

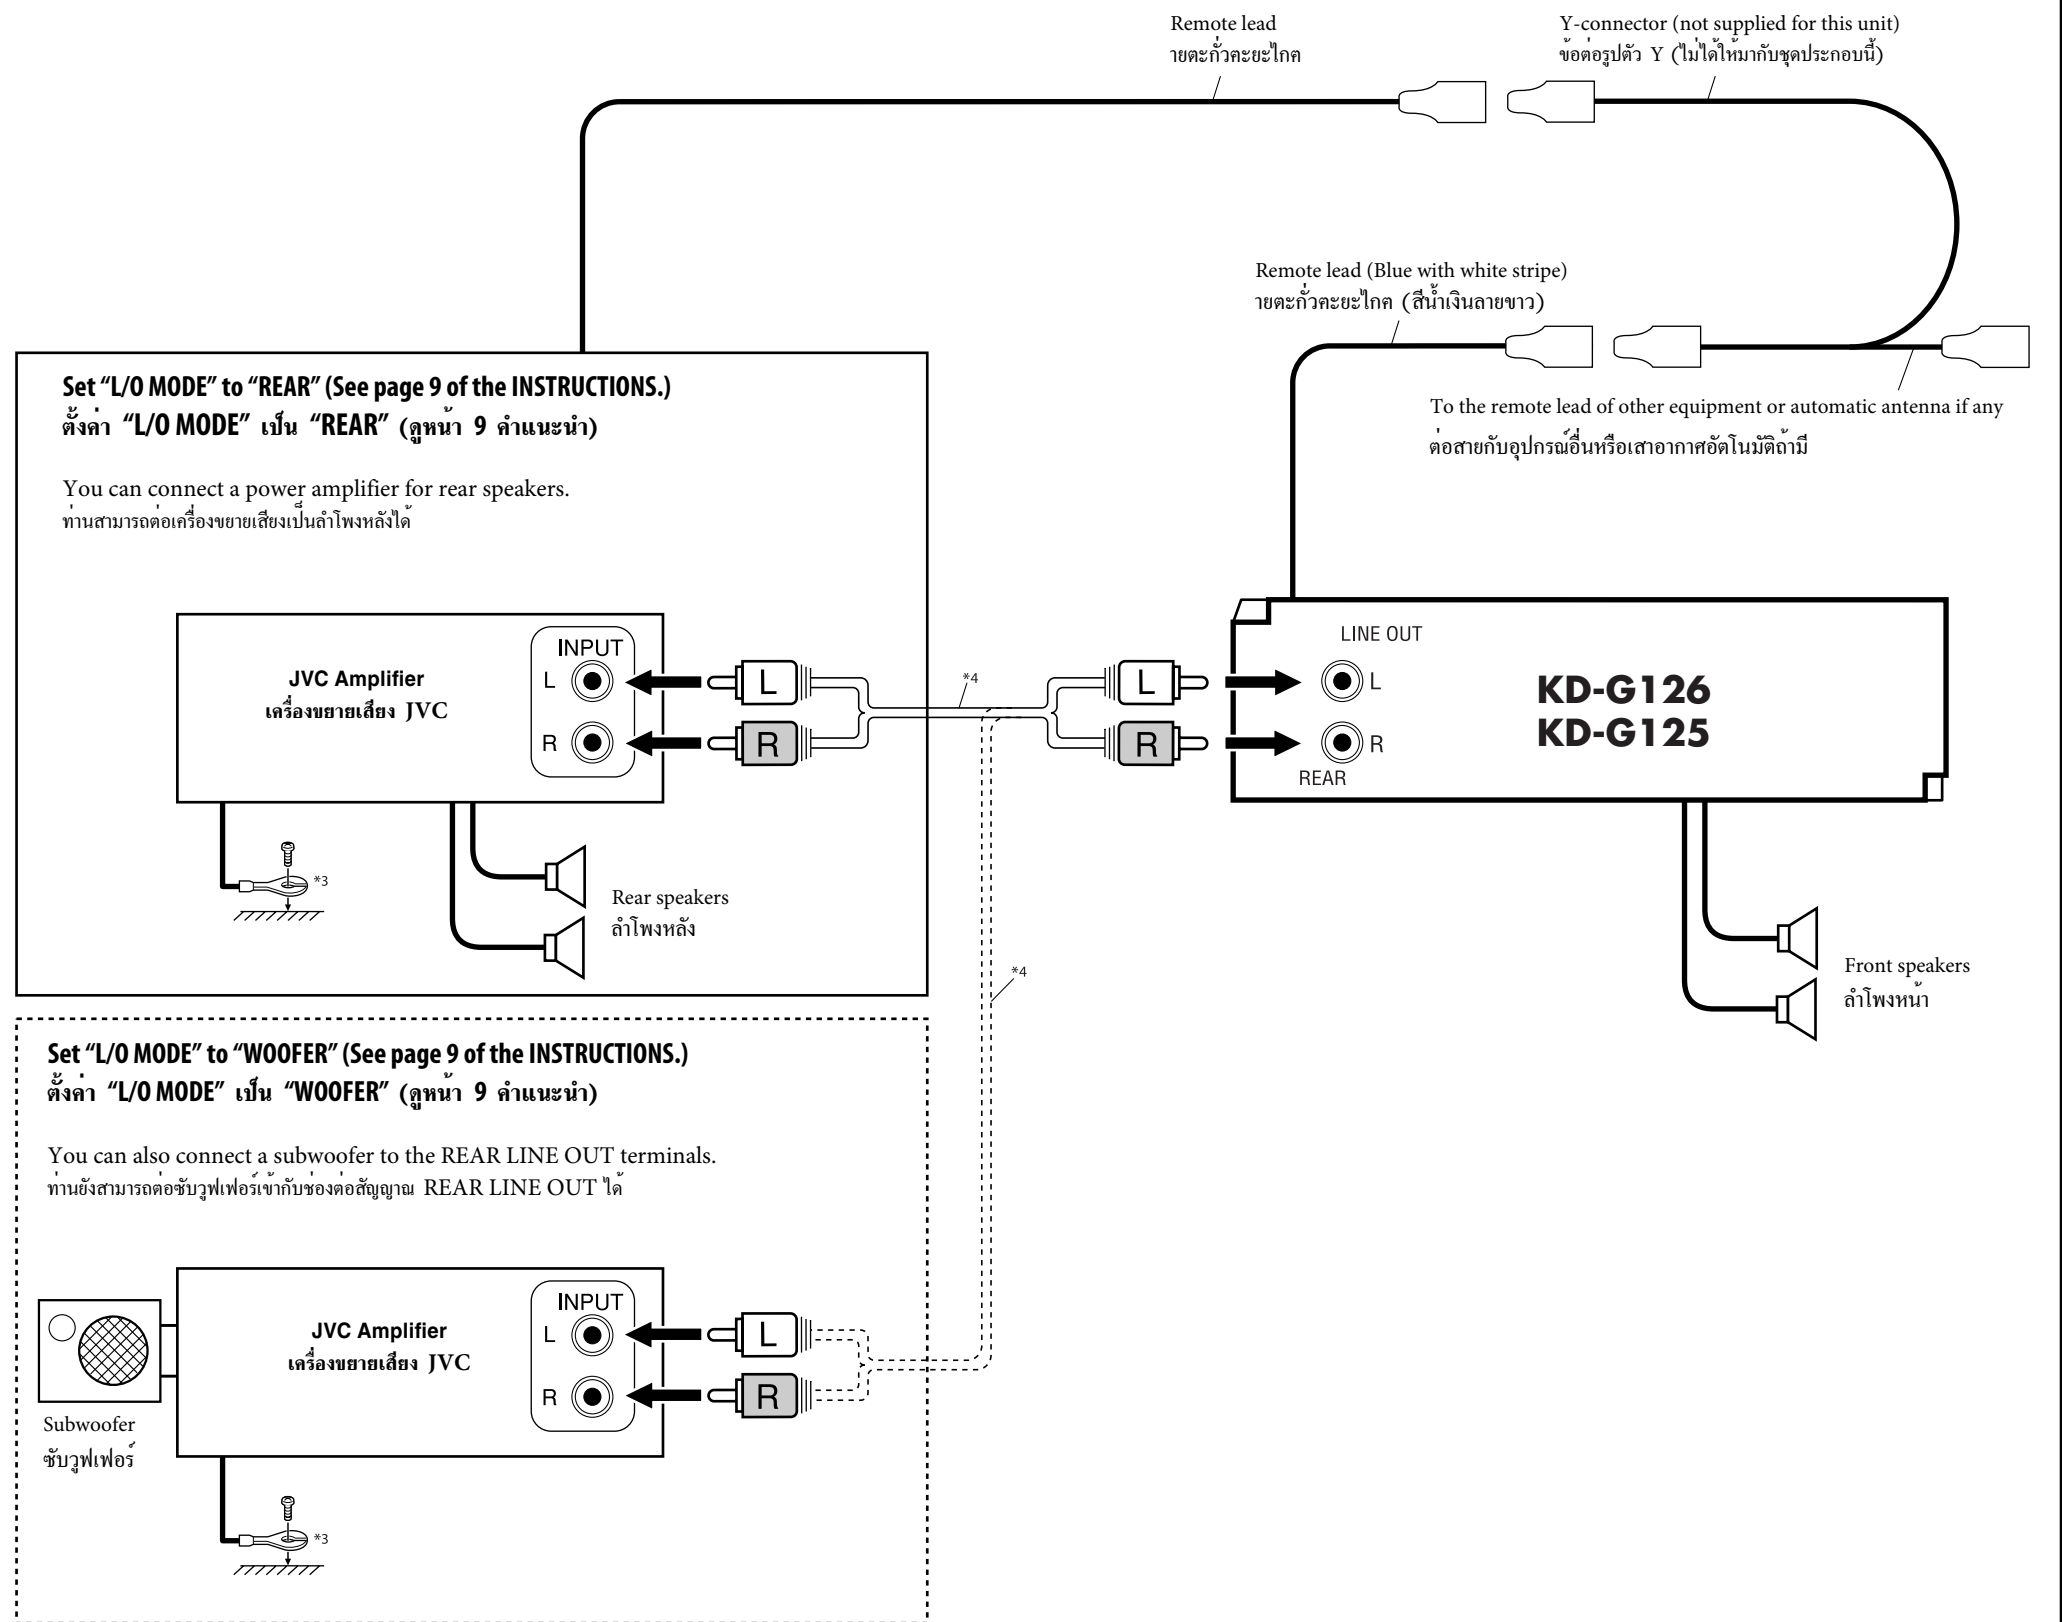

TROUBLESHOOTING

• The fuse blows.

- * Are the red and black leads connected correctly?

• Power cannot be turned on.

- * Is the yellow lead connected?

• No sound from the speakers.

- * Is the speaker output lead short-circuited?

• Sound is distorted.

- * Is the speaker output lead grounded?
- * Are the "-" terminals of L and R speakers grounded in common?

• Noise interfere with sounds.

- * Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?

• This unit becomes hot.

- * Is the speaker output lead grounded?
- * Are the "-" terminals of L and R speakers grounded in common?

• This unit does not work at all.

- * Have you reset your unit?

การตรวจสอบปัญหาขัดข้อง

• ฟิวส์ขาด

- * มีการเชื่อม ขดเคเบิลสีแดงและสีดำอย่างถูกต้องหรือไม่

• ไม่สามารถเปิดเครื่องได้

- * มีการเชื่อมสายตัวกระชากสีเหลืองหรือไม่

• ไม่มีเสียงออกจากลำโพง

- * สายตัวลำโพงที่ออกทางลำโพงเกิดไฟฟ้าลัดวงจรหรือไม่

• เสียงเพี้ยน

- * สายตัวลำโพงที่ออกทางลำโพงต่อลงดินหรือไม่
- * สายขั้วลบ "-" ของลำโพงด้านซ้ายและขวาต่อลงดินตามปกติหรือไม่

• เสียงรบกวน

- * มีการใช้สายสั้นๆ หรือหนาๆ ต่อจากเครื่องส่วนที่ติดตั้ง ไว้บนพื้นด้านหลังกับตัวถังรถยนต์หรือไม่

• ชุดประกอบร้อนขึ้น

- * สายตัวลำโพงที่ออกทางลำโพงต่อลงดินหรือไม่
- * สายขั้วลบ "-" ของลำโพงด้านซ้ายและขวาต่อลงดินตามปกติหรือไม่

• เครื่องรับนี้ทำงานไม่

- * ท่านได้ตั้งเครื่องใหม่แล้วหรือยัง

JVC






ENGLISH

FRANÇAIS

CD RECEIVER
RECEPTEUR CD

KD-G162/KD-G161

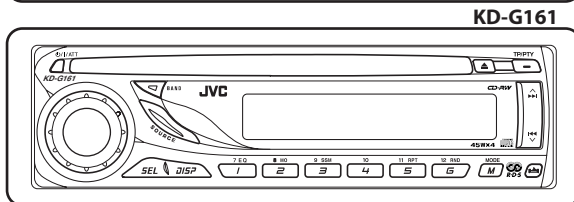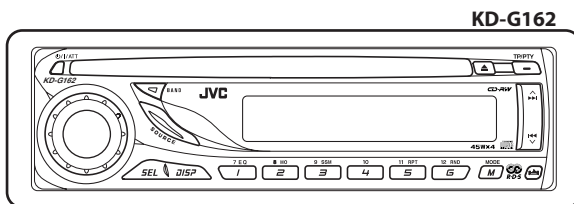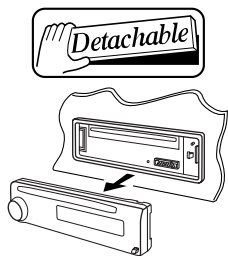

For canceling the display demonstration, see page 5.

Pour annuler la démonstration des affichages, référez-vous à la page 5.

For installation and connections, refer to the separate manual.

Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS

MANUEL D'INSTRUCTIONS

GET0334-003A
[EX/EU]

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

IMPORTANT FOR LASER PRODUCTS


1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.	ADVARSEL: Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling.	WARNING: Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Beträkta ej strålen.	VARO: Avallattassa ja suojalukitus ohitettuna tai viallisena olet alittina näkyväille ja näkymättömälle lasersträilylle. Vältä säteem kohdistumista suoraan iksesi. (f)
--	---	--	--

Warning:


If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.

How to reset your unit

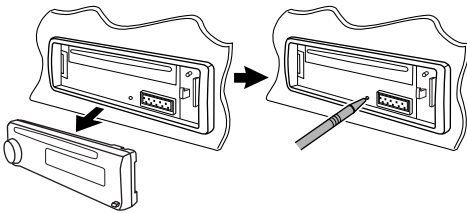


• Your preset adjustments will also be erased.

 How to forcibly eject a disc




- If this does not work, reset your unit.
- Be careful not to drop the disc when it ejects.


How to detach/attach the control panel

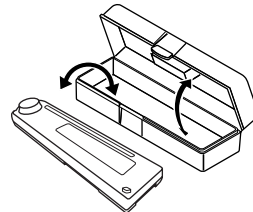

Detaching...

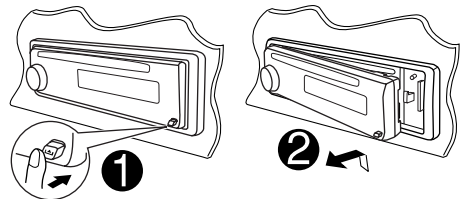

Attaching...

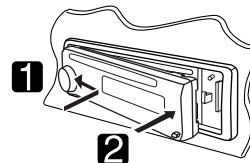






Note: Only for [EX] model users in UK and European countries

For security reasons, a numbered ID card is provided with this unit, and the same ID number is imprinted on the unit's chassis. Keep the card in a safe place, as it will help the authorities to identify your unit if stolen.

How to read this manual

 
- Button operations are mainly explained with the illustrations in the table below.
- ○ is used to indicate an indicator is displayed for the corresponding operation.
- Some related tips and notes are explained in “More about this unit” (see pages 14 and 15).

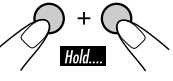	Press briefly.
	Press repeatedly.
	Press either one.
	Press and hold until your desired response begins.
	Press and hold both buttons at the same time.

How to use the M MODE button

If you press M MODE, the unit goes into functions mode, then the number buttons work as different function buttons.

Ex.: When number button 2 works as MO (monaural) button.

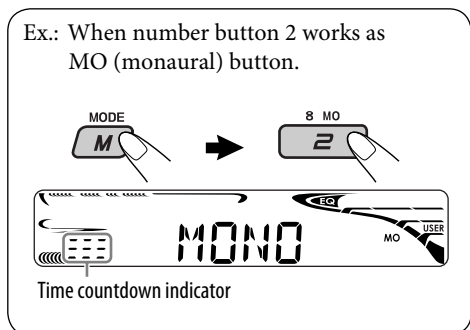

To use these buttons for their original functions again after pressing M MODE, wait for 5 seconds without pressing any of these buttons until the functions mode is cleared or press M MODE again.

CONTENTS

Control panel — KD-G162 and KD-G161	4
Getting started	5
Basic operations.....	5
Radio operations	6
FM RDS operations	7
Searching for your favorite FM RDS programme ...	7
Disc operations	9
Playing a disc in the unit	9
Sound adjustments	10
General settings — PSM	11
Maintenance	13
More about this unit	14
Troubleshooting	16
Specifications	17

Caution on volume setting:

Discs produce very little noise compared with other sources. Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level.

For safety...


- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

Temperature inside the car...

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Control panel — KD-G162 and KD-G161


Parts identification

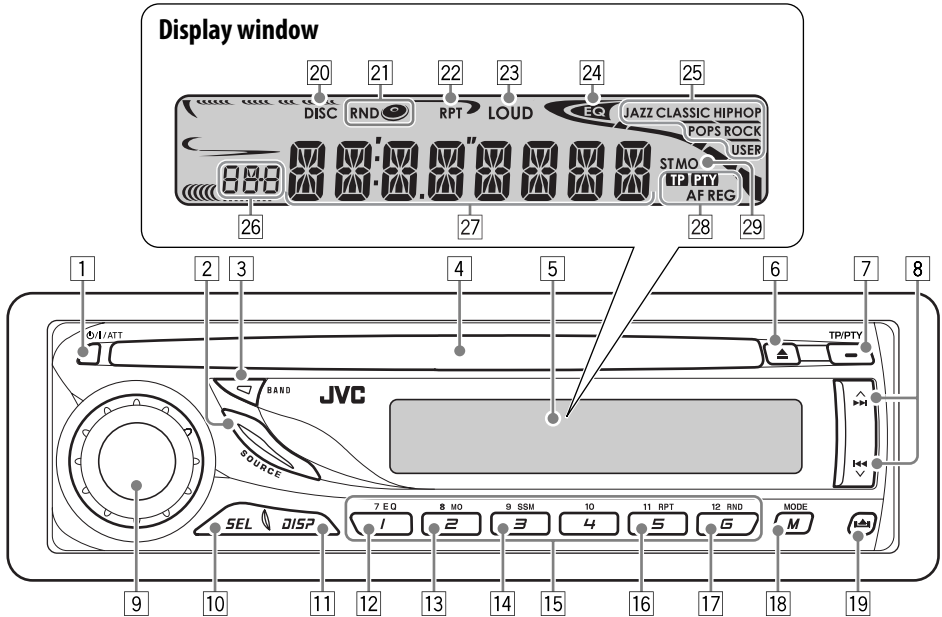

- 1 Φ /I/ATT (standby/on/attenuator) button
- 2 SOURCE button
- 3 BAND button
- 4 Loading slot
- 5 Display window
- 6 \blacktriangle (eject) button
- 7 TP/PTY (traffic programme/programme type) button
- 8 \blacktriangle \blacktriangleright /I/ \blacktriangleleft \blacktriangledown buttons
- 9 Control dial
- 10 SEL (select) button
- 11 DISP (display) button
- 12 EQ (equalizer) button
- 13 MO (monaural) button
- 14 SSM (Strong-station Sequential Memory) button
- 15 Number buttons
- 16 RPT (repeat) button
- 17 RND (random) button

- 18 M MODE button
- 19 \blacktriangle (control panel release) button

 
Display window

- 20 DISC indicator
- 21 RND  (disc random) indicator
- 22 RPT (repeat) indicator
- 23 LOUD (loudness) indicator
- 24 EQ (equalizer) indicator
- 25 Sound mode (C-EQ: custom equalizer) indicators—JAZZ, CLASSIC, HIP HOP, POPS, ROCK, USER
- 26 Source display / Volume level indicator / Time countdown indicator
- 27 Main display
- 28 RDS indicators—TP, PTY, AF, REG
- 29 Tuner reception indicators—ST (stereo), MO (monaural)

Getting started


Basic operations

- 1 Turn on the power.




* You cannot select "DISC" as the playback source if there is no disc in the unit.

 
- 3 For FM/AM tuner



- 4 Adjust the volume.

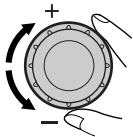

Volume level appears.

 


Volume level indicator

- 5 Adjust the sound as you want. (See page 10.)

<p>To drop the volume in a moment (ATT)</p> <p>To restore the sound, press it again.</p>	
<p>To turn off the power</p>	

Basic settings

- See also "General settings — PSM" on pages 11 and 12.

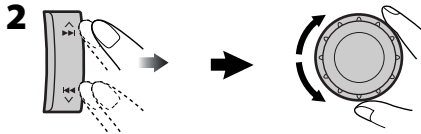

- 1 **Canceling the display demonstrations**

Select "DEMO," then "DEMO OFF."

- 2 **Setting the clock**

Select "CLOCK H" (hour), then adjust the hour.

Select "CLOCK M" (minute), then adjust the minute.

Select "24H/12H," then "24H" (hour) or "12H" (hour).




- 3 Finish the procedure.




To check the current clock time while...

<p>The power is turned off</p>	
<p>Listening to...</p>	
<p>An FM (non-RDS) or AM station: Frequency ↔ Clock</p>	
<p>An FM RDS station: Station name (PS) → Station Frequency → Programme type (PTY) → Clock → (back to the beginning)</p>	
<p>Listening to a disc...</p>	
<p>Elapsed playing time with track number ↔ Clock</p>	

  Radio operations

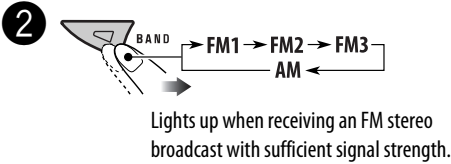

Selected band appears.

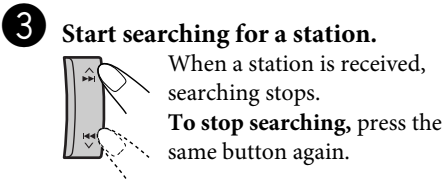


To tune in to a station manually


In step 3 above...



2 **Select the desired station frequencies.**

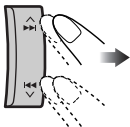

When an FM stereo broadcast is hard to receive

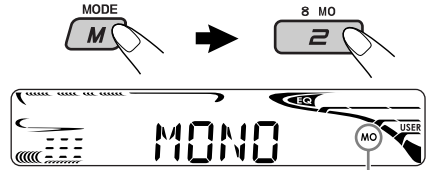

Lights up when monaural mode is activated.

Reception improves, but stereo effect will be lost.

 
 
 
To restore the stereo effect, repeat the same procedure. "MONO OFF" appears and the MO indicator goes off.

Storing stations in memory

You can preset six stations for each band.

FM station automatic presetting—SSM (Strong-station Sequential Memory)

1 **Select the FM band (FM1 – FM3) you want to store into.**




"SSM" flashes, then disappears when automatic presetting is over.

Local FM stations with the strongest signals are searched and stored automatically in the FM band.


Manual presetting

Ex.: Storing FM station of 92.5 MHz into preset number 4 of the FM1 band.

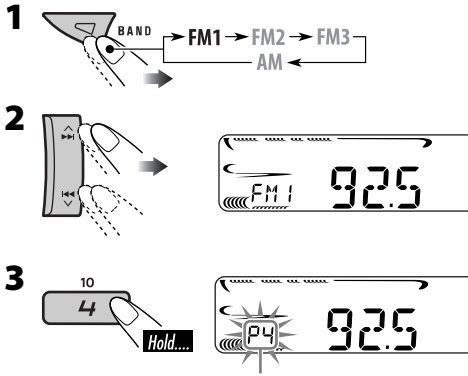

Preset number flashes for a while.

Listening to a preset station

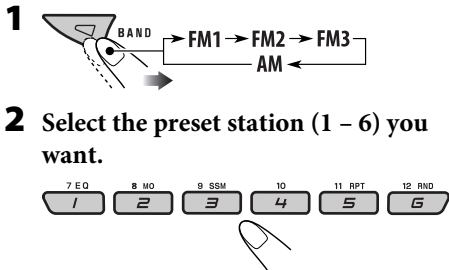

2 Select the preset station (1 – 6) you want.



FM RDS operations

What you can do with RDS

RDS (Radio Data System) allows FM stations to send an additional signal along with their regular programme signals.

 
By receiving the RDS data, this unit can do the following:

- Programme Type (PTY) Search (see the following)
- TA (Traffic Announcement) and PTY Standby Receptions (see pages 8 and 12)
- Tracing the same programme automatically —Network-Tracking Reception (see page 9)
- Programme Search (see page 12)


Searching for your favorite FM RDS programme

You can tune in to a station broadcasting your favorite programme by searching for a PTY code.

- To store your favorite programme types, see page 8.




The last selected PTY code appears.

 


or

Select one of the PTY codes (see page 15).

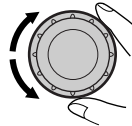

To be continued...

 - 3** Start searching for your favorite programme.



If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in.


Storing your favorite programme types

You can store six favorite programme types.

Preset programme types in the number buttons (1 to 6):

1	2	3	4	5	6
POP M	ROCK M	EASY M	CLASSICS	AFFAIRS	VARIED

- Select a PTY code (see page 7).
- Select the preset number (1 – 6) you want to store into.

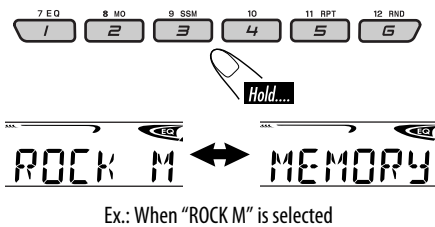

- Repeat steps 1 and 2 to store other PTY codes into other preset numbers.
- Finish the procedure.



Using the standby receptions

TA Standby Reception

TA Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) from any source other than AM. The volume changes to the preset TA volume level if the current level is lower than the preset level (see page 12).

To activate TA Standby Reception

TP/PTY

 The TP (Traffic Programme) indicator either lights up or flashes.

- If the TP indicator lights up, TA Standby Reception is activated.
- If the TP indicator flashes, TA Standby Reception is not yet activated. (This occurs when you are listening to an FM station without the RDS signals required for TA Standby Reception.)

To activate TA Standby Reception, tune in to another station providing these signals. The TP indicator will stop flashing and remain lit.

To deactivate the TA Standby Reception

TP/PTY

 The TP indicator goes off.

PTY Standby Reception

PTY Standby Reception allows the unit to switch temporarily to your favorite PTY programme from any source other than AM.

To activate and select your favorite PTY code for PTY Standby Reception, see page 12.

The PTY indicator either lights up or flashes.

- If the PTY indicator lights up, PTY Standby Reception is activated.
- If the PTY indicator flashes, PTY Standby Reception is not yet activated.

To activate PTY Standby Reception, tune in to another station providing these signals. The PTY indicator will stop flashing and remain lit.

To deactivate the PTY Standby Reception,

select "OFF" for the PTY code (see page 12).

The PTY indicator goes off.


Tracing the same programme— Network-Tracking Reception

When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM RDS station of the same network, possibly broadcasting the same programme with stronger signals (see the illustration on page 15).

When shipped from the factory, Network-Tracking Reception is activated.
To change the Network-Tracking Reception setting, see “AF-REG” on page 11.

Disc operations

Playing a disc in the unit

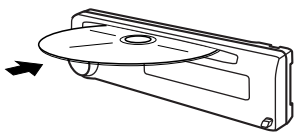


All tracks will be played repeatedly until you change the source or eject the disc.


To stop play and eject the disc	
To fast-forward or reverse the track	
To go to the next or previous tracks	

To locate a particular track

 To select a number from 01 – 06:




To select a number from 07 – 12:

 

Prohibiting disc ejection

 
You can lock a disc in the loading slot.



To cancel the prohibition, repeat the same procedure.

Selecting the playback modes

 You can use only one of the following playback modes at a time.



2 Select your desired playback mode.




Mode	Plays repeatedly
TRK RPT	: The current track. RPT
RPT OFF	: Cancels.



Mode	Plays at random
DISC RND	: All tracks of the current disc. RND
RND OFF	: Cancels.

Sound adjustments

You can select a preset sound mode suitable to the music genre (C-EQ: custom equalizer).

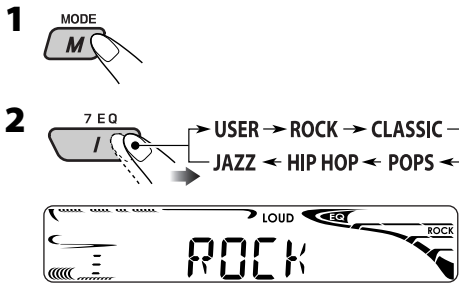


Ex.: When "ROCK" is selected

Preset values	BAS	TRE	LOUD
Indication (For)	(bass)	(treble)	(loudness)
USER (Flat sound)	00	00	OFF
ROCK (Rock or disco music)	+03	+01	ON
CLASSIC (Classical music)	+01	-02	OFF
POPS (Light music)	+04	+01	OFF
HIP HOP (Funk or rap music)	+02	00	ON
JAZZ (Jazz music)	+02	+03	OFF

Adjusting the sound

You can adjust the sound characteristics to your preference.

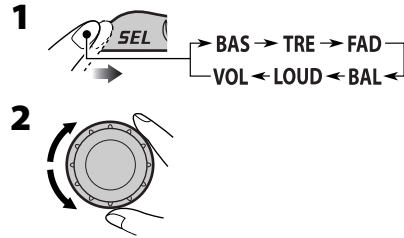

Indication, [Range]

BAS*1 (bass), [-06 to +06]

Adjust the bass.

TRE*1 (treble), [-06 to +06]

Adjust the treble.

FAD*2 (fader), [R06 to F06]

Adjust the front and rear speaker balance.

BAL (balance), [L06 to R06]

Adjust the left and right speaker balance.

LOUD*1 (loudness), [LOUD ON or LOUD OFF]

Boost low and high frequencies to produce a well-balanced sound at low volume level.

VOL (volume), [00 to 30 or 50*3]

Adjust the volume.

*1 When you adjust the bass, treble, or loudness, the adjustment you have made is stored for the currently selected sound mode (C-EQ) including "USER."

*2 If you are using a two-speaker system, set the fader level to "00."


*3 Depending on the amplifier gain control setting. (See page 12 for details.)

General settings — PSM


You can change PSM (Preferred Setting Mode) items listed in the table below.



2 Select a PSM item.

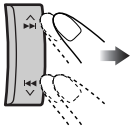

3 Adjust the PSM item selected.

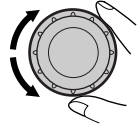

4 Repeat steps 2 and 3 to adjust other PSM items if necessary.

5 Finish the procedure.



Indications	Selectable settings, [reference page]
DEMO Display demonstration	DEMO ON : [Initial]; Display demonstration will be activated automatically if no operation is done for about 20 seconds, [5]. DEMO OFF : Cancels.
CLOCK H Hour adjustment	0 – 23 (1 – 12), [5] [Initial: 0 (0:00)]
CLOCK M Minute adjustment	00 – 59, [5] [Initial: 00 (0:00)]
24H/12H Time display mode	12H ⇄ 24H, [5] [Initial: 24H]
CLK ADJ Clock adjustment	AUTO : [Initial]; The built-in clock is automatically adjusted using the CT (clock time) data in the RDS signal. OFF : Cancels.
AF-REG Alternative frequency/ regionalization reception	When the received signals from the current FM RDS station become weak... AF : [Initial]; Switches to another station (the programme may differ from the one currently received), [9]. • The AF indicator lights up. AF REG : Switches to another station broadcasting the same programme. • The AF and REG indicators light up. OFF : Cancels.

To be continued...

Indications	Selectable settings, [reference page]
PTY-STBY PTY standby	Activates PTY Standby Reception with one of the PTY codes, [8]. OFF [Initial] → PTY codes, [15] → (back to the beginning)
TA VOL Traffic announcement volume	[Initial: VOL 15]; VOL 00 — VOL 30 or 50*, [8]
P-SEARCH Programme search	ON : Using the AF data, the unit tunes in to another frequency broadcasting the same programme as the original preset RDS station is if the preset station signals are not sufficient. OFF : [Initial]; Cancels.
TEL Telephone muting	MUTING 1/MUTING 2 : Select either one which mutes the sounds while using a cellular phone. OFF : [Initial]; Cancels.
AMP GAIN Amplifier gain control	You can change the maximum volume level of this unit. LOW PWR : VOL 00 – VOL 30 (Select this if the maximum power of the speaker is less than 45 W to prevent them from damaging the speaker.) HIGH PWR : [Initial]; VOL 00 – VOL 50
IF BAND Intermediate frequency band	AUTO : [Initial]; Increase the tuner selectivity to reduce interference noises between close stations. (Stereo effect may be lost.) WIDE : Subject to the interference noises from adjacent stations, but sound quality will not be degraded and maintains the stereo effect.


* Depends on the amplifier gain control.

Maintenance

How to clean the connectors

Frequent detachment will deteriorate the connectors.

To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

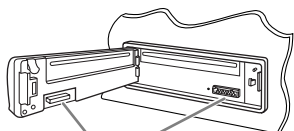

Connector

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

- Always hold the disc by the edges. Do not touch its recording surface.

When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs into the cases after use.

Center holder



To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzene, etc.) to clean discs.

To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

Do not use the following discs:



More about this unit

Basic operations

Turning on the power

- By pressing SOURCE on the unit, you can also turn on the power. If the source is ready, playback also starts.

Turning off the power

- If you turn off the power while listening to a disc, disc play will start from where playback has been stopped previously, next time you turn on the power.

Selecting the sources

- When no disc is loaded in the unit, “DISC” cannot be selected.

Tuner operations

Storing stations in memory

- During SSM search...
 - All previously stored stations are erased and stations are stored newly.
 - Received stations are preset in No. 1 (lowest frequency) to No. 6 (highest frequency).
 - When SSM is over, the station stored in No. 1 will be automatically tuned in.
- When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number.

FM RDS operations

- Network-Tracking Reception requires two types of RDS signals—PI (Programme Identification) and AF (Alternative Frequency) to work correctly. Without receiving these data correctly, Network-Tracking Reception will not operate correctly.
- If a Traffic Announcement is received, the volume level automatically changes to the preset level (TA VOL) if the current level is lower than the preset level.

- When Alternative Frequency Reception is activated (with AF selected), Network-Tracking Reception is also activated automatically. On the other hand, Network-Tracking Reception cannot be deactivated without deactivating Alternative Frequency Reception. (See page 11.)
- If you want to know more about RDS, visit «<http://www.rds.org.uk>».

Disc operations

Caution for DualDisc playback

- The Non-DVD side of a “DualDisc” does not comply with the “Compact Disc Digital Audio” standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

General

- This unit has been designed to reproduce CDs, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA format).
- When a disc has been loaded, selecting “DISC” for the playback source starts disc play.

Inserting a disc

- When a disc is inserted upside down, the disc automatically ejects.
- Do not insert 8 cm discs (single CD) and unusual shape discs (heart, flower, etc.) into the loading slot.

Playing a CD-R or CD-RW

- Use only “finalized” CD-Rs or CD-RWs.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following causes:
 - Discs are dirty or scratched.
 - Moisture condensation occurs on the lens inside the unit.
 - The pickup lens inside the unit is dirty.
 - CD-R/CD-RW on which the files are written with “Packet Write” method.
 - There are improper recording conditions (missing data, etc.) or media conditions (stained, scratched, warped, etc.).
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- Do not use the following CD-Rs or CD-RWs:
 - Discs with stickers, labels, or protective seal stuck to the surface.
 - Discs on which labels can be directly printed by an ink jet printer.

Using these discs under high temperatures or high humidities may cause malfunctions or damage to the unit.

Changing the source

- If you change the source, playback also stops (without ejecting the disc).
Next time you select “DISC” for the playback source, disc play starts from where it has been stopped previously.

Ejecting a disc

- If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (Disc will not play this time.)

General settings—PSM


- If you change the “AMP GAIN” setting from “HIGH PWR” to “LOW PWR” while the volume level is set higher than “VOL 30,” the unit automatically changes the volume level to “VOL 30.”

PTY codes

NEWS, AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, POP M (music), ROCK M (music), EASY M (music), LIGHT M (music), CLASSICS, OTHER M (music), WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M (music), OLDIES, FOLK M (music), DOCUMENT

Network-Tracking Reception

Programme A broadcasting on different frequency areas (01 – 05)

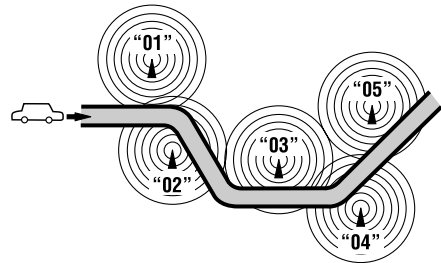

Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Remedies/Causes
General	<ul style="list-style-type: none"> • Sound cannot be heard from the speakers. 	<ul style="list-style-type: none"> • Adjust the volume to the optimum level. • Check the cords and connections.
	<ul style="list-style-type: none"> • The unit does not work at all. 	Reset the unit (see page 2).
FM/AM	<ul style="list-style-type: none"> • SSM automatic presetting does not work. 	Store stations manually.
	<ul style="list-style-type: none"> • Static noise while listening to the radio. 	Connect the aerial firmly.
Disc playback	<ul style="list-style-type: none"> • Disc cannot be played back. 	Insert the disc correctly.
	<ul style="list-style-type: none"> • CD-R/CD-RW cannot be played back. • Tracks on the CD-R/CD-RW cannot be skipped. 	<ul style="list-style-type: none"> • Insert a finalized CD-R/CD-RW. • Finalize the CD-R/CD-RW with the component which you used for recording.
	<ul style="list-style-type: none"> • Disc can be neither played back nor ejected. 	<ul style="list-style-type: none"> • Unlock the disc (see page 9). • Eject the disc forcibly (see page 2).
	<ul style="list-style-type: none"> • Disc sound is sometimes interrupted. 	<ul style="list-style-type: none"> • Stop playback while driving on rough roads. • Change the disc. • Check the cords and connections.
	<ul style="list-style-type: none"> • “NO DISC” appears on the display. 	Insert a playable disc into the loading slot.

Specifications

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 45 W per channel

Rear: 45 W per channel

Continuous Power Output (RMS):

Front: 17 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Rear: 17 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Tone Control Range:

Bass: ± 10 dB at 100 Hz

Treble: ± 10 dB at 10 kHz

Frequency Response: 40 Hz to 20 000 Hz

Signal-to-Noise Ratio: 70 dB

Line-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 108.0 MHz

AM: (MW) 522 kHz to 1 620 kHz

(LW) 144 kHz to 279 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz): 65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 30 dB

Capture Ratio: 1.5 dB

[MW Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

[LW Tuner]

Sensitivity: 50 μ V

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of Channels: 2 channels (stereo)

Frequency Response: 5 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage:

DC 14.4 V (11 V to 16 V allowance)

Grounding System: Negative ground

Allowable Operating Temperature:

0°C to +40°C

Dimensions (W \times H \times D):

Installation Size (approx.):

182 mm \times 52 mm \times 150 mm

Panel Size (approx.):

188 mm \times 58 mm \times 11 mm

Mass (approx.):

1.2 kg (excluding accessories)

Design and specifications are subject to change without notice.



Having TROUBLE with operation?

Please reset your unit

Refer to page of How to reset your unit

**Vous avez des PROBLÈMES de
fonctionnement?**

Réinitialisez votre appareil

Référez-vous à la page intitulée Comment réinitialiser votre appareil

 
 
JVC



EN, FR

© 2005 Victor Company of Japan, Limited

1005DTSMDTJEIN



ENGLISH

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC IN-CAR ENTERTAINMENT dealers.


WARNINGS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit.

- **Be sure to ground this unit to the car's chassis again after installation.**

Notes:

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC IN-CAR ENTERTAINMENT dealer.
- It is recommended to connect to the speakers with maximum power of more than 45 W (both at the rear and at the front, with an impedance of **4 Ω to 8 Ω**). If the maximum power is less than 45 W, change "AMP GAIN" setting to prevent the speakers from being damaged (see page 12 of the INSTRUCTIONS).
- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

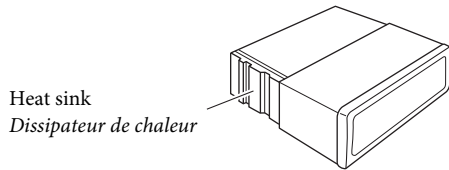

FRANÇAIS

Cet appareil est conçu pour fonctionner sur des sources de **courant continu de 12 V à masse NEGATIVE**. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

AVERTISSEMENTS

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil.




- **Assurez-vous de raccorder de nouveau la mise à la masse de cet appareil au châssis de la voiture après l'installation.**

Remarques:

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Il est recommandé de connecter des enceintes avec une puissance de plus de 45 W (les enceintes arrière et les enceintes avant, avec une impédance comprise entre **4 Ω et 8 Ω**). Si la puissance maximum est inférieure à 45 W, changez "AMP GAIN" pour éviter d'endommager vos enceintes (voir page 12 du MANUEL D'INSTRUCTIONS).
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS UTILISÉS avec de la bande isolante.
- Le dissipateur de chaleur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.

PRECAUTIONS on power supply and speaker connections:

- **DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

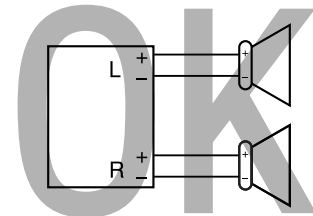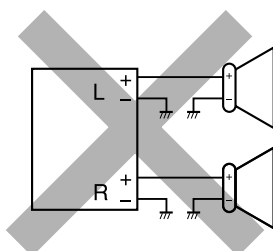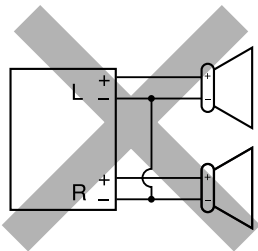


PRECAUTIONS sur l'alimentation et la connexion des enceintes:

- **NE CONNECTEZ PAS les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.**
- AVANT de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.


Parts list for installation and connection

The following parts are provided for this unit. After checking them, please set them correctly.


(A) / (B)
Hard case/Control panel
Etui de transport/Panneau de commande

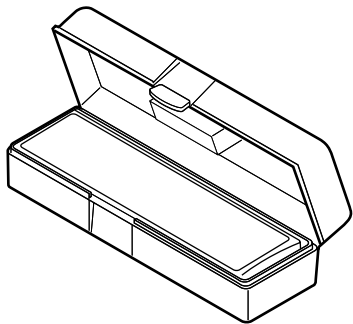


(C)
Sleeve
Manchon

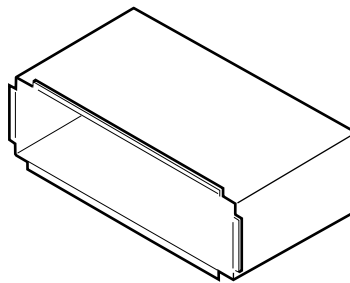

(D)
Trim plate
Plaque d'assemblage

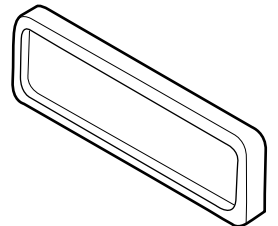

(E)
Power cord
Cordon d'alimentation

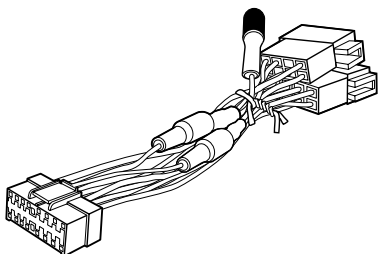


(F)
Washer (ø5)
Rondelle (ø5)



(G)
Lock nut (M5)
Ecrou d'arrêt (M5)



 
(H)
Mounting bolt (M5 × 20 mm)
Boulon de montage (M5 × 20 mm)



(I)
Rubber cushion
Amortisseur en caoutchouc



 
(J)
Handles
Poignées



INSTALLATION (IN-DASH MOUNTING)

The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your JVC IN-CAR ENTERTAINMENT dealer or a company supplying kits.


- If you are not sure how to install this unit correctly, have it installed by a qualified technician.

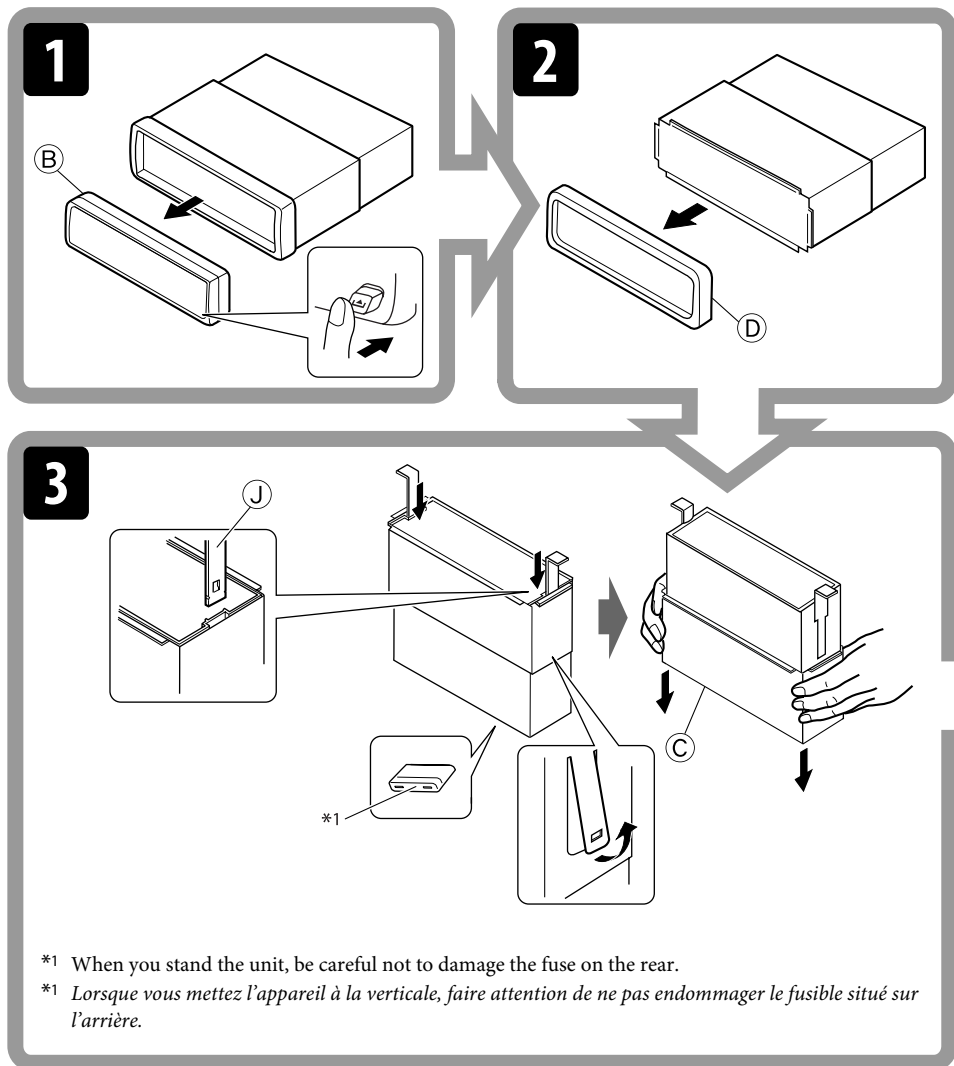

INSTALLATION (MONTAGE DANS LE TABLEAU DE BORD)


L'illustration suivante est un exemple d'installation typique. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

- Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

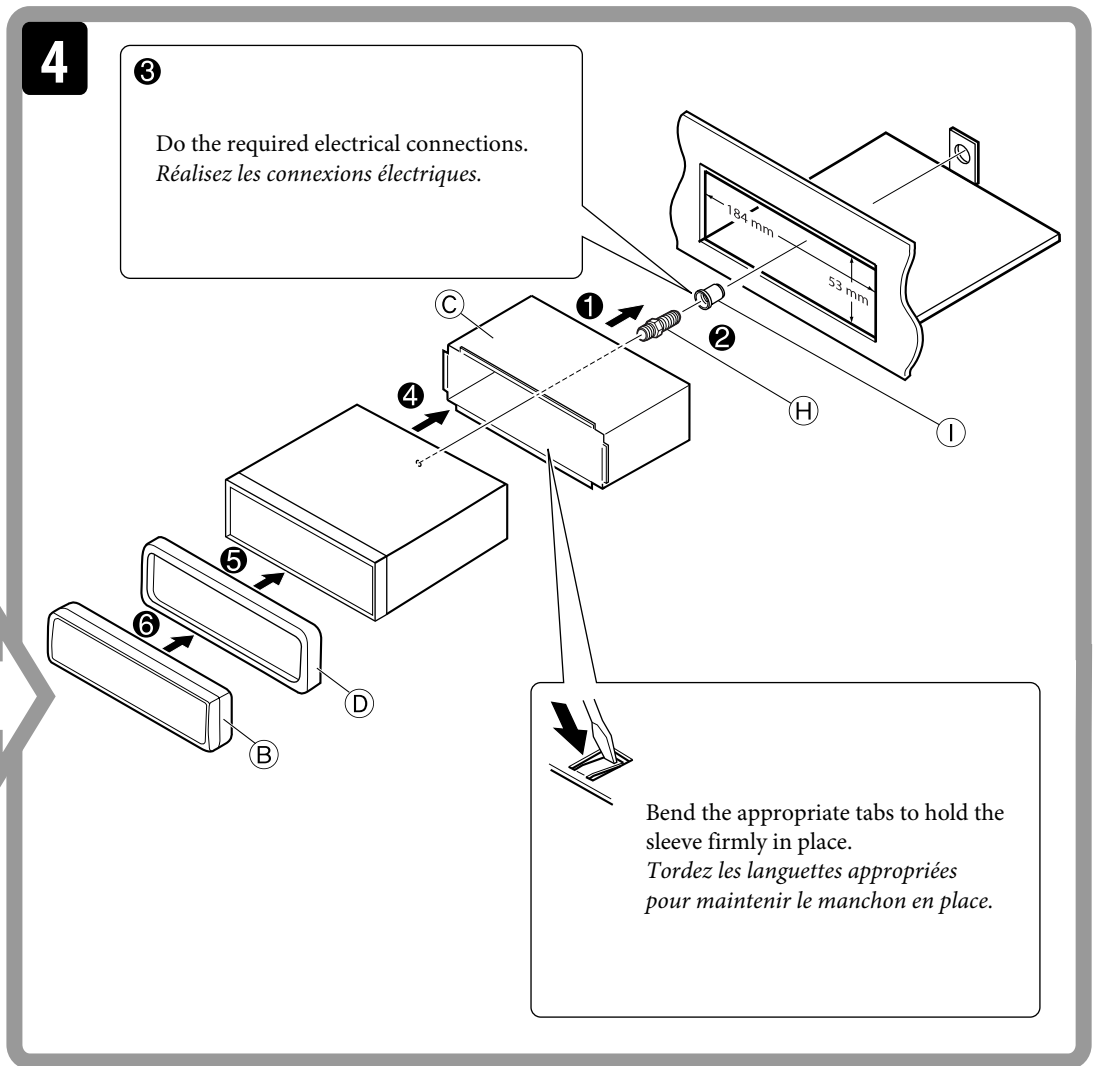

Removing the unit



Before removing the unit, release the rear section.

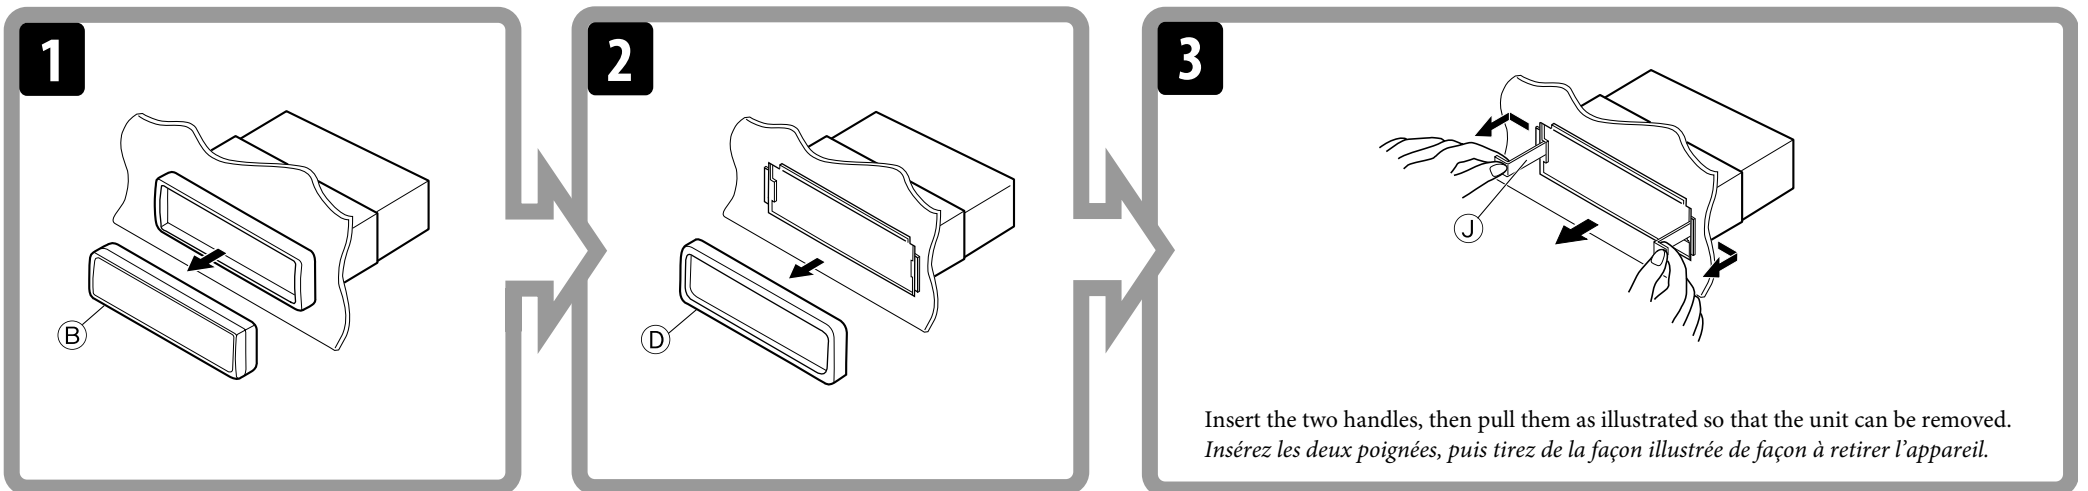

Retrait de l'appareil

Avant de retirer l'appareil, libérer la section arrière.


When using the optional stay / Lors de l'utilisation du hauban en option

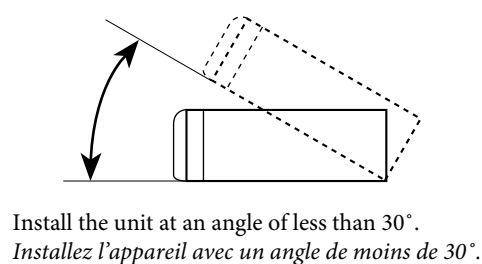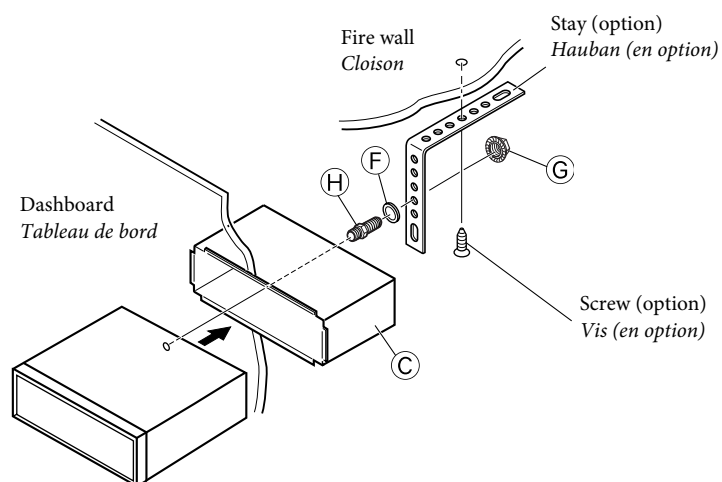

When installing the unit without using the sleeve / Lors de l'installation de l'appareil sans utiliser de manchon

In a Toyota car for example, first remove the car radio and install the unit in its place.
Par exemple dans une Toyota, retirer d'abord l'autoradio et installer l'appareil à la place.

Flat type screws (M5 × 8 mm)*
Vis à tête plate (M5 × 8 mm)*

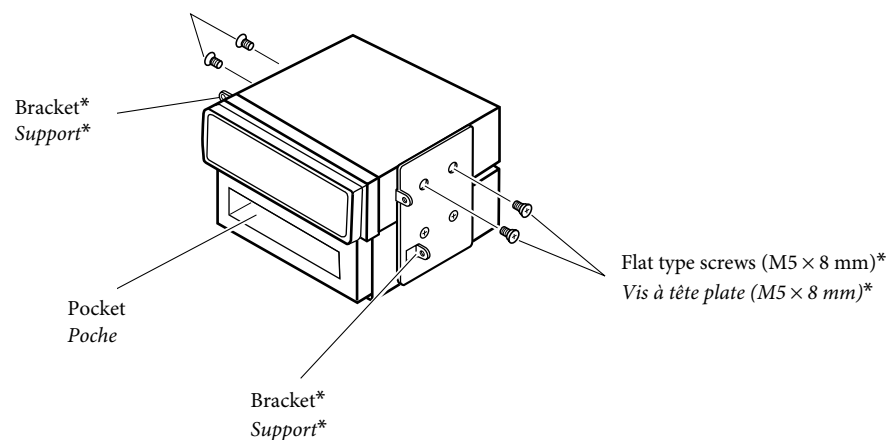


* Not supplied for this unit.
* Non fourni avec cet autoradio.

- Note** : When installing the unit on the mounting bracket, make sure to use the 8 mm-long screws. If longer screws are used, they could damage the unit.
Remarque : Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 8 mm. Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.


A If your car is equipped with the ISO connector / Si votre voiture est équipée d'un connecteur ISO

- Connect the ISO connectors as illustrated.
- Connectez les connecteurs ISO comme montré sur l'illustration.

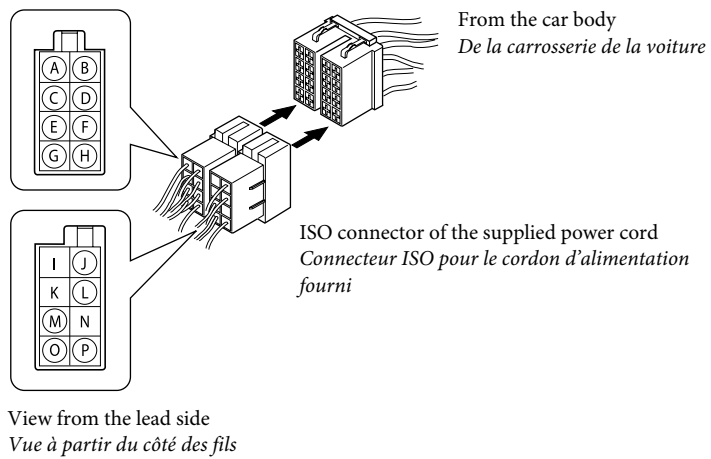

For some VW/Audi or Opel (Vauxhall) automobile / Pour certaine voiture VW/Audi ou Opel (Vauxhall)

- You may need to modify the wiring of the supplied power cord as illustrated.
- Contact your authorized car dealer before installing this unit.
 - Vous aurez peut-être besoin de modifier le câblage du cordon d'alimentation fourni comme montré sur l'illustration.
 - Contactez votre revendeur automobile autorisé avant d'installer l'appareil.

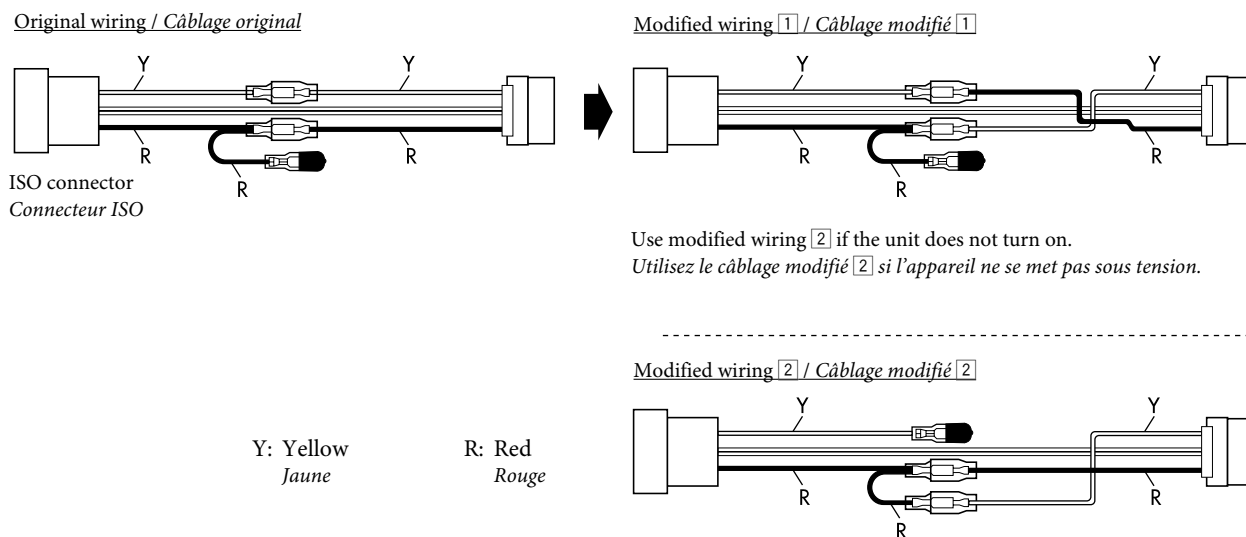


B Connections without using the ISO connectors / Connexions sans l'utilisation des connecteurs ISO

Before connecting: Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit.
The leads of the power cord and those of the connector from the car body may be different in color.

- 1 Cut the ISO connector.
- 2 Connect the colored leads of the power cord in the order specified in the illustration below.
- 3 Connect the aerial cord.
- 4 Finally connect the wiring harness to the unit.

Avant de commencer la connexion: Vérifiez attentivement le câblage du véhicule. Une connexion incorrecte peut endommager sérieusement l'appareil.
Le fil du cordon d'alimentation et ceux des connecteurs du châssis de la voiture peuvent être différents en couleur.

- 1 Coupez le connecteur ISO.
- 2 Connectez les fils colorés du cordon d'alimentation dans l'ordre spécifié sur l'illustration ci-dessous.
- 3 Connectez le cordon d'antenne.
- 4 Finalement, connectez le faisceau de fils à l'appareil.

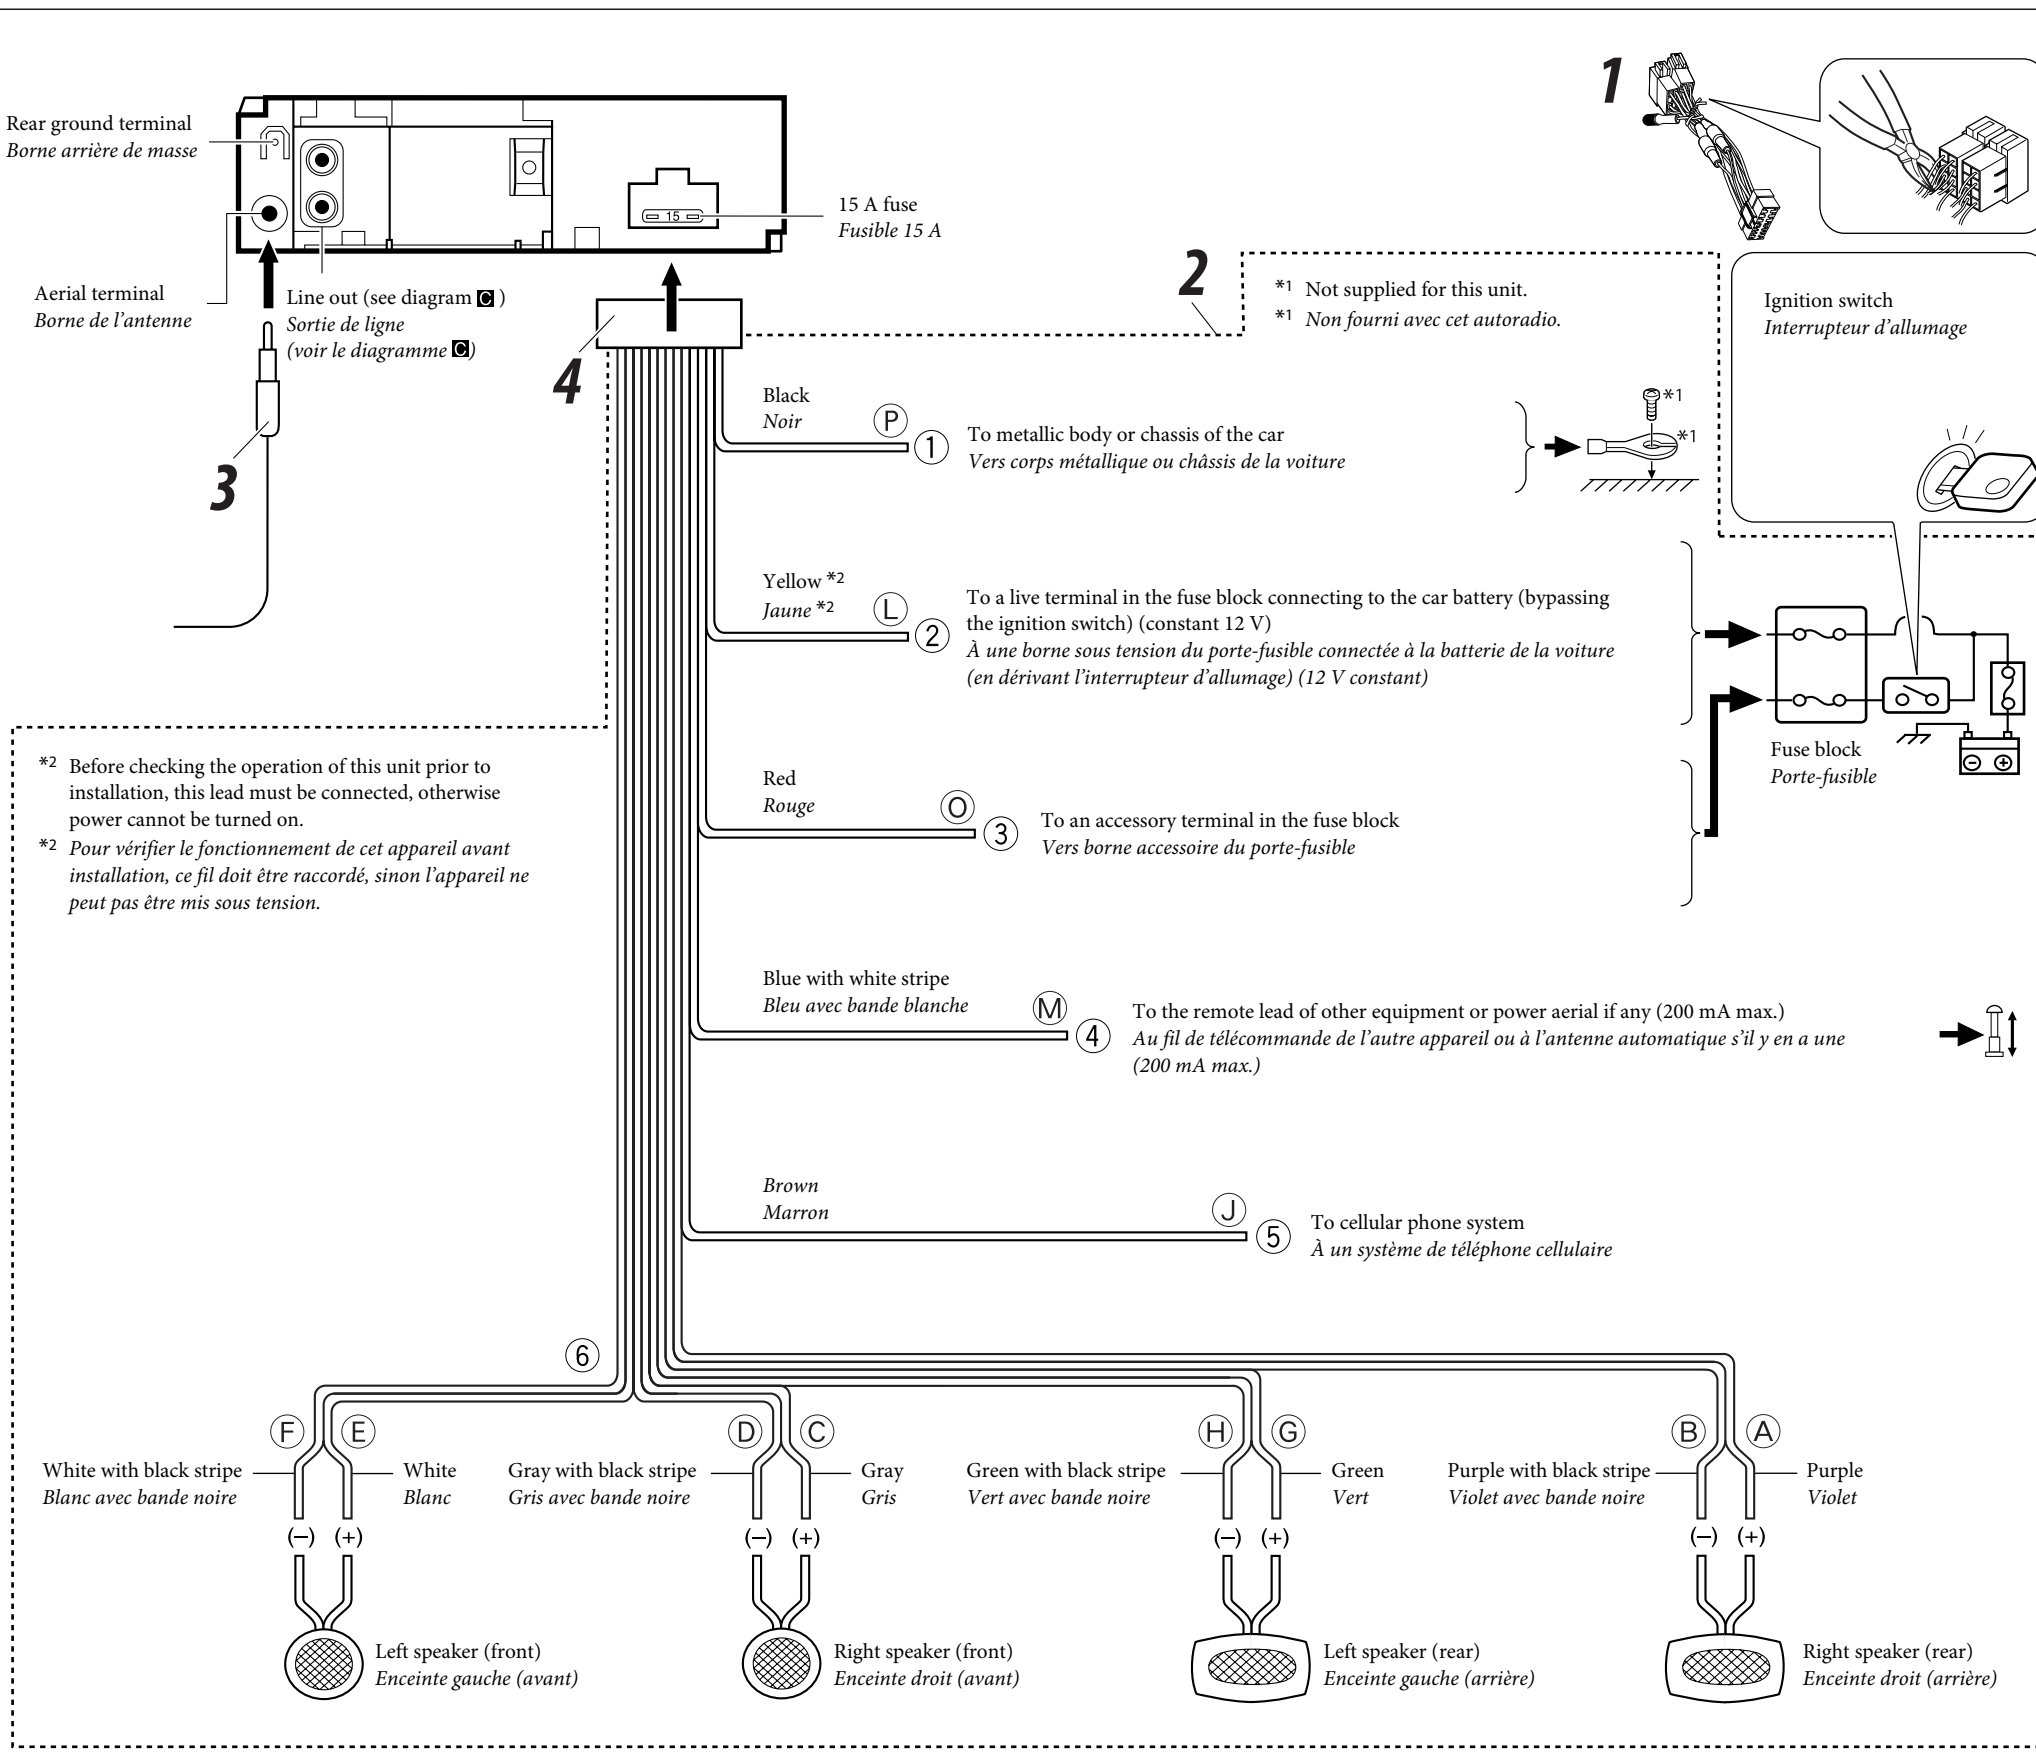

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>