

# JVC



## PORTABLE CD PLAYER

LECTOR PORTÁTIL DE DISCOS COMPACTOS

PORTABLE DRAAGBARE CD-SPELER

## **XL-PG38BP**



COMPACT  
**disc**  
DIGITAL AUDIO



## **OPERATING INSTRUCTIONS** **INSTRUCCIONES DE FUNCIONAMIENTO** **GEBRUIKSAANWIJZING**

LVT0978-010A [E]

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

**Warnings, Cautions and Others**  
**Avios, precauciones y otras notas**  
**Waarschuwingen, voorzorgen en andere mededelingen**

**CAUTION!**

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

**WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Marking sign is located on bottom of the unit.

**¡ADVERTENCIA!**

ESTE APARATO UTILIZA UN LÁSER. EL USAR LOS CONTROLES, HACER LOS REGLAJES O LOS PASOS REQUERIDOS EN FORMA DIVERSA DE LA AQUÍ EXPUESTA PUEDE REDUNDAR EN EXPOSICIÓN PELIGROSA A LA RADIACIÓN. NO ABRA LAS TAPAS NI HAGA REPARACIONES USTED MISMO. EN CASO DE PRODUCIRSE ANOMALÍAS SOLICITE AYUDA DE PERSONAL CUALIFICADO.

**AVISO:**

PARA REDUCIR EL RIESGO DE INCENDIOS O SACUDIDAS ELÉCTRICAS, NO LO EXPONGA A LA LLUVIA O HUMEDAD.

La marca de seguridad se encuentra en la parte inferior de la unidad.

## **WAARSCHUWING!**

**IN DIT APPARAAT WORDT EEN LASER GEBRUIKT. HET GEBRUIK VAN REGELAARS EN HET MAKEN VAN AFSTELLINGEN OF BEDIENINGEN DIE NIET IN DEZE GEBRUIKSAANWIJZING STAAN BESCHREVEN, KAN LEIDEN TOT BLOOTSTELLING AAN GEVAARLIJKE STRALING. MAAK HET APPARAAT NIET OPEN EN GA NIET ZELF REPAREREN. LAAT HET ONDERHOUD AAN ERKENDE VAKMENSEN OVER.**

## **WAARSCHUWING:**

**TENEINDE HET GEVAAR VOOR BRAND OF ELEKTRISCHE SCHOKKEN TE VERKLEINEN, MAG DIT APPARAAT NIET WORDEN BLOOTGESTELD AAN REGEN OF VOCHT.**

Het kenteken bevindt zich op de onderzijde van het apparaat.

### **CAUTION:**

- Do not block the ventilation opening or holes. (If the ventilation openings of holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### **PRECAUCIÓN:**

- No obstruya las rendijas o los orificios de ventilación. (Si las rendijas o los orificios de ventilación quedan tapados con un periódico, un trozo de tela, etc., no se podrá disipar el calor).
- No ponga sobre el aparato ninguna llama al descubierto, como velas encendidas.
- Cuando tenga que descartar las pilas, tenga en cuenta los problemas ambientales y observe estrictamente los reglamentos o las leyes locales sobre disposición de las pilas.
- No exponga este aparato a la lluvia, humedad, goteos o salpicaduras. Tampoco ponga recipientes conteniendo líquidos, como floreros, encima del aparato.

### **VOORZICHTIG:**

- Zorg dat u de ventilatieopeningen en -gaten niet afsluit. (Als de ventilatieopeningen en -gaten worden afgesloten door bijvoorbeeld papier of een doek, kan er hitte in het apparaat worden opgebouwd.)
- Zet geen bronnen met open vuur, zoals brandende kaarsen, op het apparaat.
- Wees milieubewust en gooi lege batterijen niet bij het huishoudelijk afval. Lege batterijen dient u in te leveren met het KCA of bij een innamepunt voor batterijen.
- Stel dit apparaat niet bloot aan regen, vocht, drupwater of spatwater en plaats geen enkel voorwerp waarin zich een vloeistof bevindt, zoals een vaas, op het apparaat.

DANGER	INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	AVATTAESSA, JA SUOJALUKITUS OHITETTAESSA OLET ALLTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLÄ. ÄLÄ KATSO SÄTEESEEN.
VARNING	OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.
ADVARSEL	USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNDGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	UNSICHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.

(Bottom of product)

(Påsat under apparatet)

 
(Tuotteen pohjassa)

(Apparatens undersida)

(Produktets underside)

(Unterseite des Gerätes)

Bottom of the unit  
Parte inferior del aparato  
Onderzijde van het apparaat

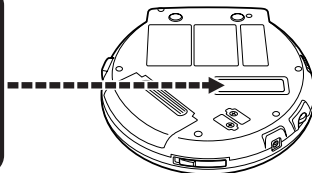

1. CLASS 1 LASER PRODUCT

2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

1. PRODUCTO LASER CLASE 1

2. **PELIGRO:** En el interior hay radiación láser invisible. Evite el contacto directo con el haz.

3. **PRECAUCIÓN:** No abra la tapa superior. En el interior de la unidad no existen piezas reparables por el usuario; deje todo servicio técnico en manos de personal calificado.

1. KLAS 1 LASERPRODUKT

2. **GEVAARLIJK:** Onzichtbare laserstraling wanneer open en de beveiliging faalt of uitgeschakeld is. Voorkom het direkt blootstaan aan de straal.

3. **VOORZICHTIG:** De bovenkap niet openen. Binnenin het toestel bevinden zich geen door de gebruiker te repareren onderdelen; laat onderhoud uitvoeren door gekwalificeerd personeel.

Thank you for purchasing this JVC product.  
Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.


## Table of Contents

 Location of Controls .....	1
Power Supply Preparations .....	2
Accidental Operation Prevention Function (Hold Mode) .....	4
Basic Play .....	5
Other Play Methods .....	7
Anti-Shock Protection EX .....	10
Concerning Compact Discs .....	11
Cautions .....	12
Troubleshooting Guide .....	15
Specifications .....	16
Maintenance .....	16

### Supplied Accessories

Check the packing carton for these accessories.  
Stereo headphones ..... 1 pc.

## Location of Controls

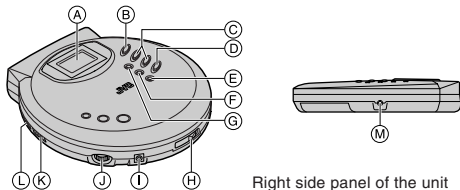

- (A) Display
- (B) Play / pause button (▶/II)
- (C) Skip / search buttons (◀◀, ▶▶)
- (D) Stop / power off button (■)
- (E) PROGRAM button
- (F) A.S.P. (Anti-shock protection EX) button
- (G) MODE button
- (H) Lid open switch (OPEN ▶)
- (I) DC in jack (DC IN 4.5 V ⚡)
- (J) Headphones volume control (VOLUME ▶)
- (K) HOLD switch
- (L) Hyper-bass sound switch (HBS)
- (M) Headphones jack (⌋)

# Power Supply Preparations

 
## Using rechargeable batteries (not included)

Be sure to recharge the rechargeable batteries BN-R1211 before using them.

For information about these, see "When purchasing rechargeable batteries" on page 13.

### Recharging procedure

#### 1 Insert the special rechargeable batteries into the unit.

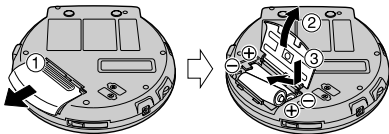


#### Caution:

Do not open the battery lid too wide. It can break if you forcibly open it beyond approximately 90°.

#### 2 Connect the AC adaptor. (not included)

 \* Recharging will be completed after 10 hours.

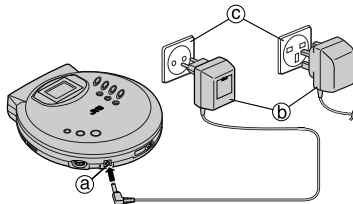

- (a) DC IN jack (DC IN 4.5 V  $\diamond$   $\ominus$   $\ominus$   $\diamond$ )
- (b) AC adaptor
- (c) AC power outlet

#### 3 When recharging is complete, unplug the AC adaptor from the power outlet and the DC IN jack.

 
#### Notes:

- To operate the unit on batteries, the AC adaptor must be disconnected from the DC IN jack.
- It takes approximately 10 hours to recharge the rechargeable batteries.
- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the batteries have reached the end of their service life and should be replaced.

- Recharging takes place only when the unit is powered off.
- The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is normal and is not a malfunction.

## Using the AC adaptor (not included)

Connect the AC adaptor.

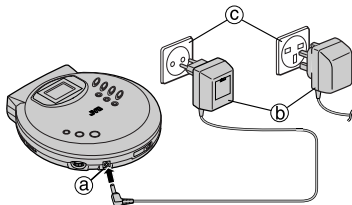

- Ⓐ DC IN jack (DC IN 4.5 V  $\diamond$ -C- $\diamond$ )
- Ⓑ AC adaptor
- Ⓒ AC power outlet

### Note:

 
The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always “live” as long as the AC adaptor is connected to an electrical outlet.

## Using dry-cell batteries (not included)

After disconnecting the AC adaptor, insert two “R6” (LR-6) alkaline batteries.

The procedure for inserting and removing dry-cell batteries is identical to that for rechargeable batteries.

## Battery indicator



- Ⓓ Battery indicator

This indicator flashes on and off when the batteries are almost out of power. Power is cut off completely a short while later.


### Tip:

 Turning off the Anti-Shock Protection EX will save the battery power more or less. For details, see “Anti-Shock Protection EX” on page 10.

**If the unit malfunctions or freezes during use, disconnect the power source (the AC adaptor and batteries) once. Then, re-connect the power source and continue operation.**

## Accidental Operation Prevention Function (Hold Mode)

This function causes the unit to ignore short, accidental button presses.

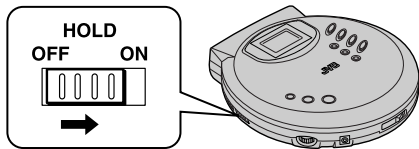



### The accidental operation prevention function prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly in the middle of a track.

### To use the accidental operation prevention function

- To prevent the unit from powering up accidentally, set the HOLD switch to the ON position.
- To prevent the unit from unexpected operation during play, set the HOLD switch to the ON position after you start playing the disc.

#### “”

When the unit is in the hold mode according to the HOLD switch setting in the main unit, “” lights up if the  button is pressed.

### To release the function

 
 
 
Move the HOLD switch back to the OFF position.

#### **Note:**

If the HOLD switch is set to the ON position, you cannot turn on the unit.



# Basic Play

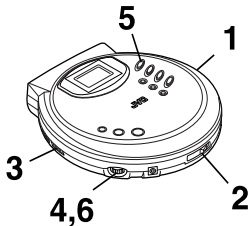

- ① Label must face upward.  
Press the area near the center hole of the disc until it clicks into position.



- 4 Set the volume level to minimum position before playing the disc.



Play now starts.

② Track number in play

③ Elapsed playing time of each track

Play stops automatically when all the tracks have been played.

- 6 Adjust the volume level.



(To be continued on the next page)

**For your reference:**

“DISC”

This indication appears for about 30 seconds if the ►/|| button is pressed when no disc is loaded in the unit or if the disc is not properly seated. Then, the unit is automatically shut off.

“\_ \_”

This indication appears to let you know the status of the unit.

- Preparation period before playing the track  
Flashes for several seconds after you have press the ►/|| button to play the disc.  
(Flashes until the rotational speed of disc becomes constant or until the contents of disc is read.)

“OP EN”

 
- Opened lid  
Stays lit for 30 seconds when the lid is opened.

**Note:**


Never insert foreign objects into the body.

**Auto power off function**

If the unit is left in stop mode for 30 seconds, the unit powers itself off automatically to prevent the batteries from running down.

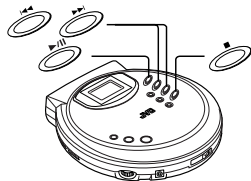**To pause play**

 During play, press.  
Press again to resume play.

**To stop play** Stop mode

During play, press.  
 a Total number of tracks  
 b Total playing time

**To turn off the unit** Off mode

In stop mode, press.

## Fast forward/reverse



### Skip function

During play, press.

### Search function

 
Keep depressed during play.

© Reverse direction

© Forward direction

- To skip back to the previous track, quickly press the I◀◀ button twice.
- During program play, the button is used to fast forward or back through the programmed sequence of tracks.
- During random play, the skip button cannot be used to skip back to tracks that were played previously in the random sequence.

## Removing discs

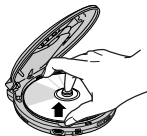


Turn off the unit and, after the disc has stopped rotating, remove the disc.

# Other Play Methods
 
## Random play

You can play all tracks in a random order. After playing all tracks, the unit stops.

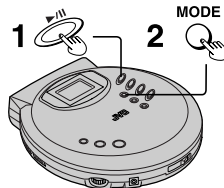

### Follow steps 1–2.

In step 1, play the disc.

In step 2, press MODE until “RANDOM” flashes.

### Release

 
Press MODE until “RANDOM” goes out, or press the ■ button to stop the disc.

### For your reference:

- You can also select random play in stop mode. In stop mode, press MODE until “RANDOM” lights up. Then, press the ▶/|| button to start random play.
- During program play (“PROG.” appears on the display), random play is not selectable.

## Program play

You can program up to 20 tracks in any desired order including the same tracks.

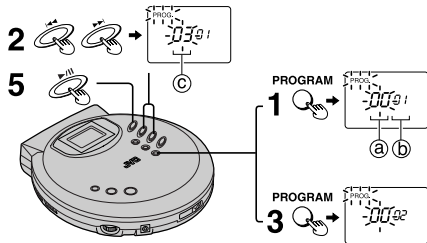

**4** Repeat steps 2 and 3 to program all the desired tracks.

### Follow steps 1–5.

In step 1, during playback or in stop mode, press PROGRAM.

(a) Track number to be programmed

00: Not programmed yet.

(b) Program sequence number

In step 2, select the desired track.

(c) e.g. Track number 3

In step 3, register in sequence.

The track is registered, and “00” and the next program sequence number appear.

In step 4, when you program exceeding 20 tracks, the program sequence number returns to “01” and will overwrite the previous setting.

In step 5, the tracks are played in the programmed order, and then the unit stops.

### ■ To confirm the programmed tracks

In stop mode, press PROGRAM repeatedly. The programmed track number will successively appear together with the program sequence number. At this time, you can change the program, if required.

 
If the programmed tracks are less than 20, track number “00” appears for the youngest programmable sequence number, enabling further programming.

### ■ To delete the entire programmed sequence

Turn off the unit, or set the track number to 00 for the first program sequencer number, “01”.

## Repeat function

You can repeatedly play one track or all tracks.

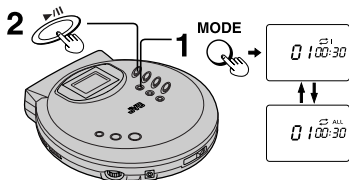

In step 1, during playback or in stop mode, press MODE until the repeat indicator lights up.

In step 2, press the ►/|| button, if in stop mode.

### Cancelling

Press MODE until the repeat indicator goes out and the unit returns to normal play mode.

 
### For your reference:

Repeat function is also effective for program play.

## Intro play

You can successively play the first 10 seconds of every track from the first track.

Intro play stops after playing the last track.

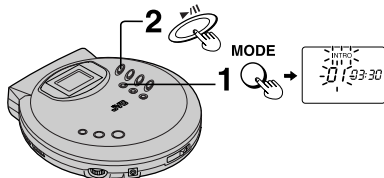

In step 1, during playback, press MODE until "INTRO" flashes.

In step 2, the "INTRO" play will start from the first track.

### Cancelling

Press MODE until "INTRO" goes out and the unit returns to normal play mode.

### To normally play the track being played

 
Press the ►/|| button.

### For your reference:

- You can also enter intro play in stop mode.
- You can also use intro play for program play.

## Hyper-Bass Sound effect

You can enjoy powerful bass sound.



### To get the hyper-bass sound effect

Set HBS switch to "1".

Set HBS switch to "2" to set more effect.

### To cancel the effect

 
Set HBS switch to "OFF".

## Anti-Shock Protection EX

This function has been developed to achieve excellent performance against sound interruption caused by vibrations. You will be able to enjoy listening to music during jogging (not vigorous jogging). This function is achieved by utilizing the high-performance servo circuit and audio data that has been stored in the memory ahead of time (up to 45 seconds worth).



When the disc is played, as the audio data gradually stored in the memory, the "ANTI SHOCK" indicator changes.



[Fully stored]

## To cancel the Anti-Shock Protection EX

A.S.P.



Press the A.S.P. button in stop mode or during playback. The "ANTI SHOCK" indicator goes out on the display.

 
## To activate the Anti-Shock Protection EX again

Press the A.S.P. button again.

### Notes:

- During Anti-Shock Protection EX operation, the disc rotates at a higher rate than usual in order to collect extra audio data. This may cause the batteries to run out faster and could result in a slight increase in disc rotation noise.
- The Anti-Shock Protection EX function can be switched ON and OFF during playback. However, this may cause a slight interruption in the sound because the disc's rotational speed changes.


## Concerning Compact Discs



Only compact discs bearing this mark can be used with this unit.

However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit. CD-R and CD-RW discs recorded with the audio CD format can be played back, though some may not be played back because of the disc characteristics or recording condition.



### How to remove a disc from its case

 

### How to store the disc in its case



  (To be continued on the next page)

**How to hold a disc****If the disk surface is dirty****(a) Play surface (shiny surface)**

Wipe it with a damp cloth and then wipe dry.

Wipe from the center toward the outer edge.

**If moisture has formed on a disc**

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe off the moisture using a soft dry cloth.

**When storing discs**

Avoid locations which are

- Exposed to direct sunlight.
- Susceptible to high levels of humidity or dust.
- Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

**Handling precautions**

- On the label side (the side with writing)  
Do not write anything using a pencil, ball-point pen, etc. Do not use adhesive paper or labels.
- On the disc (shiny) side  
Handle this side carefully to keep it free from

fingerprints or scratches. Do not use record cleaners, solvents, etc.

- Do not attach labels or stickers to CDs.  
Do not use CDs with exposed adhesive from tape or left over peeled off stickers.
- Do not use scratch-proof protectors or covers other than those specified for use with this unit.

---

## Cautions

---

### Rechargeable batteries

---

- Only the BN-R1211 battery can be recharged.
- If the power delivered by the batteries lasts for a very short time after recharging, it means that the batteries' service life is over. Do not use them any more.
- Recharging already charged batteries will shorten their service life.
- When recharging batteries for the first time or when they have not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the batteries. This will restore them to their regular state.
- Do not allow any metal objects to touch the terminals of rechargeable batteries since this may cause short-circuiting which is dangerous.



- Do not peel off the plastic covering on the rechargeable batteries. Short-circuiting may occur which is dangerous.

## Dry cell batteries/rechargeable batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the  $\oplus$  and  $\ominus$  polarities properly when inserting the batteries.
- Do not mix different types or makers of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

## Carrying dry cell batteries/rechargeable batteries around

When putting dry cell or rechargeable batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

## When purchasing rechargeable batteries

As a safety precaution, the portable CD players made by JVC have a construction designed to make it impossible to recharge ordinary batteries.

To use rechargeable batteries, be absolutely sure to purchase the rechargeable Ni-Cd batteries designed especially for this unit.

### Special rechargeable Ni-Cd batteries: BN-R1211 (set of 2)

For details, check with your dealer.

Special rechargeable  
batteries



Ordinary dry cell  
batteries/  
rechargeable  
batteries



### Notice about the rechargeable battery

The battery is designated recyclable.  
Please follow your local recycling regulations.

---

## AC adaptor

---

- Handle the AC adaptor carefully. Improper handling is dangerous.
  - Do not touch it with wet hands.
  - Do not place heavy objects on top of it.
  - Do not forcibly bend it.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.

---

## When purchasing AC adaptor

---

To use AC adaptor, be absolutely sure to purchase the AC adaptor designed especially for this unit.

**AC adaptor : AA-R4515 (for the U.K.)**  
**: AA-R4514 (for other area)**

For details, check with your dealer.

---

## Unit

---

### No altering or remodeling

This can cause malfunctioning.

### No dropping or strong impacts

This may damage the unit.

### Locations to be avoided

Avoid using the unit in the following locations since they can cause malfunctioning.

1. Bathrooms and other moisture-prone places.
2. Warehouses and other dusty places.
3. Very hot places near heating appliances, etc.

### Do not leave the unit exposed to direct sunlight for long periods of time

This may deform or discolor the cabinet and may also cause malfunctioning.

---

## Listening precautions

---

- Do not play your headphones at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

# Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

Problem	Check this
<b>Does not turn on.</b>	<ul style="list-style-type: none"> <li>• Are the batteries charged?</li> <li>• Is the AC adaptor securely connected?</li> <li>• Is the HOLD switch set to HOLD position?</li> </ul>
<b>Cannot close cover.</b>	Is the disc properly secured in place?
<b>Cannot play discs.</b>	<ul style="list-style-type: none"> <li>• Is the unit in HOLD status?</li> <li>• Is the disc properly secured in place?</li> <li>• Is there moisture condensation on the lens? (Wait for about an hour and then try again.)</li> </ul>
<b>Cannot hear music—too noisy.</b>	<ul style="list-style-type: none"> <li>• Are the headphone plug and the wire remote control plug inserted all the way?</li> <li>• Is the plug dirty? (Wipe away dirt on the plug.)</li> </ul>
<b>TV picture is distorted. Radio reception is noisy.</b>	Are you using the unit body too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)
<b>“diSC” or “Er” is displayed when a disc is in the player.</b>	<ul style="list-style-type: none"> <li>• Is the disc damaged?</li> <li>• Is the disc playable on this player?</li> <li>• Has the disc been inserted upside down?</li> </ul>

## Specifications

Type	: Compact disc player
Signal detection system	: Non-contact optical pickup (semiconductor laser)
Pickup system	: 3 beam laser
Number of channels	: 2 channels (stereo)
Frequency response	: 20 Hz to 20 000 Hz
Wow & flutter	: Unmeasurable
Output	: Headphone (3.5 mm dia. stereo × 1) 9 mW/ch at 10 % THD/16 Ω matching impedance (16 Ω to 1 kΩ)
Duration of battery (with Anti-Shock Protection EX OFF)	: Approx. 3 hours when using two rechargeable batteries (BN-R1211) charged for 10 hours. Approx. 20 hours when using two alkaline batteries (LR6)
Power requirements	: DC 3 V ("R6" size battery × 2) DC 2.4 V (rechargeable battery × 2) DC IN 4.5 V
Dimensions (W×H×D)	: 134 mm × 30 mm × 144 mm (Excluding buttons and controls)
Mass	: 237 g (without batteries)

\* Design and specifications are subject to change without notice.

 
## Maintenance

### Maintaining the unit

Wipe the unit with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry.

- If you intend to use a chemically treated cleaning cloth, read its directions first.
- Do not use alcohol or paint thinners.

### Maintaining the lens

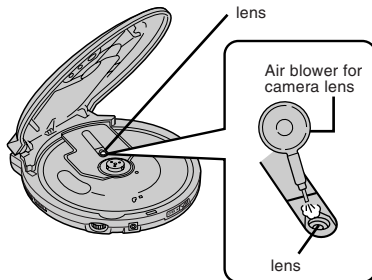

# JVC

VICTOR COMPANY OF JAPAN, LIMITED



EN, SP, NL

©2003 VICTOR COMPANY OF JAPAN, LIMITED

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.



0303SKMCREORI

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>