

# JVC

ENGLISH  
DEUTSCH  
FRANÇAIS  
NEDERLANDS  
CASTELLANO  
ITALIANO  
PORTUGUÊS

**AV-32H5SU**  
**AV-28H5SU**  
**AV-28H5SL**  
**AV-32H5BU**  
**AV-28H5BU**  
**AV-28H5BL**

**T-V LINK**

## COLOUR TELEVISION

## INSTRUCTIONS


**FARBFERNSEHGERÄT**  
**TELEVISEUR COULEUR**  
**KLEURENTELEVISIE**  
**TELEVISOR A COLOR**  
**TELEVISORE A COLORI**  
**TELEVISOR A CORES**

**BEDIENUNGSANLEITUNG**  
**MANUEL D'INSTRUCTIONS**  
**GEBRUIKSAANWIJZING**  
**MANUAL DE INSTRUCCIONES**  
**ISTRUZIONI**  
**INSTRUÇÕES**


## How to move the TV

When moving the TV, make sure that it is held by two people as shown in the illustration. Be careful not to trap your hands when putting the TV down.


1

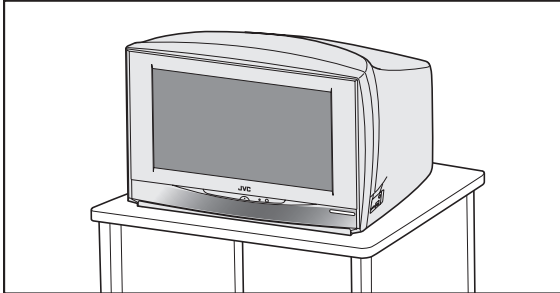

2

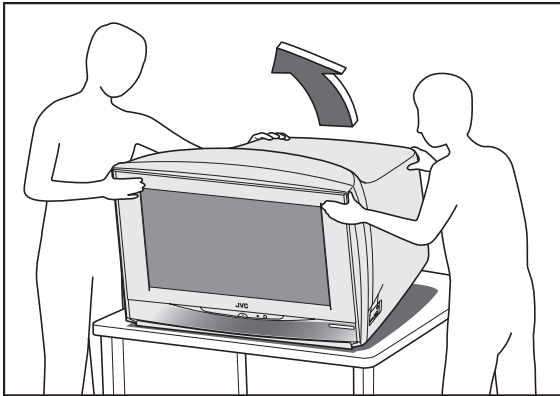

3

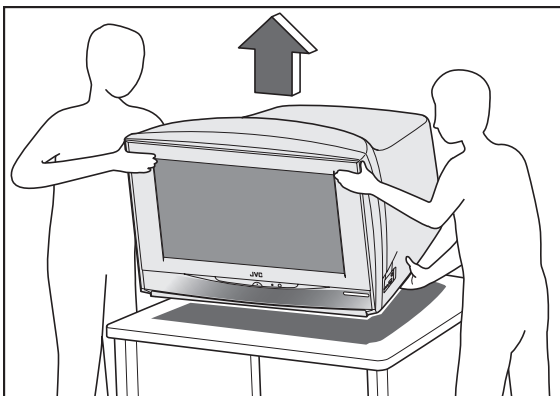

Thank you for buying this JVC colour television.

To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### CAUTION:


- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.
- Avoid damaging the AC plug and power cord.
- When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.

### Distance recommendations

Avoid improper installation and never position the unit where good ventilation is impossible.

When installing this TV, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture.

Keep to the minimum distance guidelines shown for safe operation.

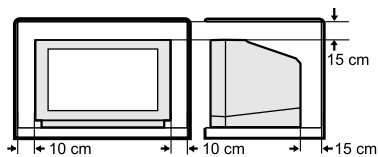

**Failure to take the following precautions may result in damage to the TV or remote control.**

**DO NOT block the TV's ventilation openings or holes.**

(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)

**DO NOT place anything on top of the TV.**

(such as cosmetics or medicines, flower vases, potted plants, cups, etc.)

**DO NOT allow objects or liquid into the cabinet openings.**

(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

**DO NOT place any naked flame sources, such as lighted candles, on the TV.**

The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it hard. Never use any cleaner or detergent on it.

In the event of a fault, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

# CONTENTS

<b>Setting up your TV</b> .....	<b>4</b>	<b>PICTURE menu</b> .....	<b>21</b>
Connecting the aerial and VCR .....	4	PICTURE MODE .....	21
Connecting the power cord to the AC outlet .....	5	CONTRAST .....	21
Putting the batteries into the Remote control .....	5	BRIGHT .....	21
Initial settings .....	5	SHARP .....	21
T-V LINK FUNCTIONS .....	9	COLOUR .....	21
<b>TV buttons and functions</b> .....	<b>11</b>	HUE .....	21
Turn the Main power on .....	11	COLOUR TEMP .....	21
Turn the TV on from standby mode .....	11	FEATURES .....	22
Choose a TV channel .....	11	<b>SOUND menu</b> .....	<b>24</b>
Adjust the volume .....	11	STEREO / I • II .....	24
<b>Remote control buttons and functions</b> .....	<b>12</b>	BASS .....	24
Turn the TV on or off from standby mode ...	12	TREBLE .....	24
Choose a TV channel .....	12	BALANCE .....	24
Watch images from external devices .....	13	HYPER SOUND .....	24
Adjust the volume .....	14	<b>FEATURES menu</b> .....	<b>25</b>
Displaying the current time .....	14	SLEEP TIMER .....	25
ZOOM function .....	15	CHILD LOCK .....	25
HYPER SOUND function .....	16	BLUE BACK .....	27
Return to TV channel instantly .....	16	<b>SET UP menu</b> .....	<b>28</b>
Operating a JVC brand VCR or DVD player .....	16	AUTO PROGRAM .....	28
<b>Teletext function</b> .....	<b>17</b>	EDIT/MANUAL .....	28
Basic operation .....	17	LANGUAGE .....	32
Using the List Mode .....	17	PICTURE TILT .....	32
Hold .....	18	DECODER (EXT-2) .....	33
Sub-page .....	18	EXT SETTING .....	34
Reveal .....	18	<b>Additional preparation</b> .....	<b>37</b>
Size .....	18	Connecting the external devices .....	37
Index .....	18	<b>CH/CC numbers</b> .....	<b>39</b>
Cancel .....	19	<b>Troubleshooting</b> .....	<b>41</b>
<b>Using the TV's menu</b> .....	<b>20</b>	<b>Specifications</b> .....	<b>44</b>
Basic operation .....	20		

# Setting up your TV

## Caution

- Turn off all the equipment including the TV before connecting anything.

## Connecting the aerial and VCR


- The connecting cables are not provided.
- For further details, refer to the manuals provided with the devices to be connected.

- If connecting a VCR, follow ① → ② → ③.


- If not connecting a VCR, follow ①.

To operate T-V LINK functions, a T-V LINK compatible VCR must be connected to the EXT-2 terminal on the TV. For details about T-V LINK functions, see “T-V LINK FUNCTIONS” on page 9.

- A video can be viewed from the VCR without performing ③. For details, refer to your VCR instruction manual.
- To connect additional external devices, please see “Additional preparation” on page 37.
- To connect speakers and amplifier, please see “Connecting Speakers/Amplifier” on page 38.
- When a decoder is connected to a T-V LINK compatible VCR, set the DECODER (EXT-2) function to ON. For details, see “DECODER (EXT-2)” on page 33. Otherwise, you will not be able to view scrambled channels.

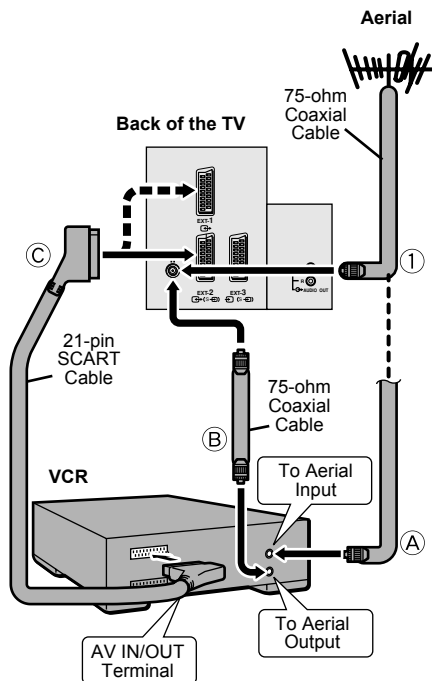

## ■ Rear Panel

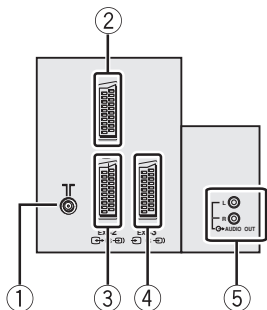


- ① Aerial socket (4)
- ② EXT-1 terminal (4, 34, 37)
- ③ EXT-2 terminal (4, 9, 34, 37)
- ④ EXT-3 terminal (34, 37)
- ⑤ AUDIO OUT terminal (38)

## Connecting the power cord to the AC outlet


### Caution

- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.

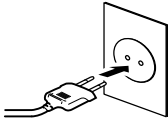

## Putting the batteries into the Remote control


Use two AA/R6 dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

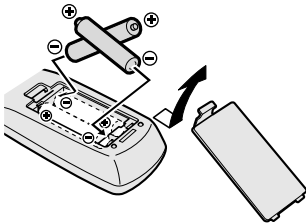

- Follow the warnings printed on the batteries.
- Battery life is about six months to one year, depending on your frequency of use.
- The batteries we supply are only for setting up and testing your TV, please replace them as soon as necessary.
- If the remote control does not work properly, replace the batteries.


## Initial settings

When the TV is first turned on, it enters the initial setting mode, and the JVC logo is displayed. Follow the instructions on the on-screen display to make the initial settings.

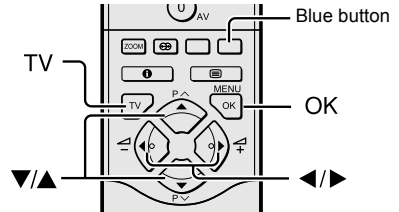

### 1 Press the Main power button on the TV

The Power lamp lights, and the JVC logo is displayed.

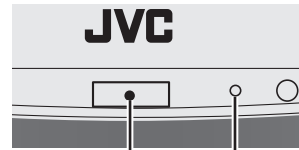

Main power button

Power lamp

- The JVC logo does not appear when your TV has been turned on once. In this case, use the “LANGUAGE” and “AUTO PROGRAM” functions to make the initial settings. For details, see “SET UP menu” on page 28.

**2 Press the OK button**

The LANGUAGE menu appears.




D0002(E)-EN

**3 Press the ◀/▶ and ▼/▲ buttons to choose ENGLISH. Then press the OK button**

English is set for the on-screen display description. The COUNTRY menu appears as a sub-menu of the AUTO PROGRAM function.

There are two COUNTRY menus. Pressing the yellow button changes the COUNTRY menu as follows:

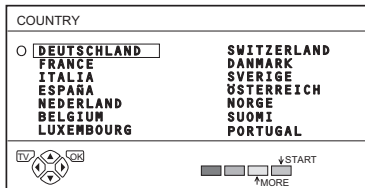


D0003-EN

**4 Press the ◀/▶ and ▼/▲ buttons to choose the country where you are now located**

**5 Press the blue button to start the AUTO PROGRAM function**

The AUTO PROGRAM menu appears and received TV channels are automatically registered in the Programme numbers (PR).

- To cancel the AUTO PROGRAM function: Press the TV button.

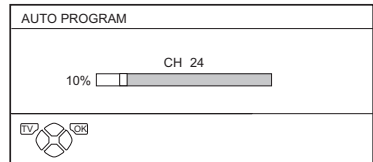


D0004-EN




**After the TV channels have been registered in the Programme numbers (PR), the EDIT menu appears**

- You can proceed to edit the Programme numbers (PR) using the EDIT/MANUAL function. For details, see “EDIT/MANUAL” on page 28.
- If you do not need to use the EDIT/MANUAL function, go to the next step.

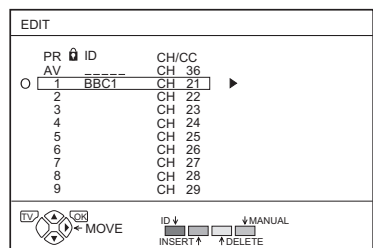

D0038-EN

## 6 Press the **OK** button to display the **T-V LINK** menu

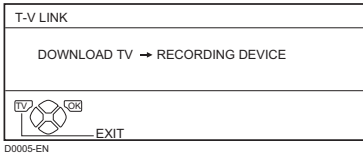

## 7 If you do not have a **T-V LINK** compatible **VCR** connected:

Press the **TV** button to exit the T-V LINK menu.

The T-V LINK menu disappears.

## If you have a **T-V LINK** compatible **VCR** connected to the **EXT-2** terminal:

Follow the operating procedure “Downloading the data to VCR” on page 8 to transmit the Programme number (PR) in which the TV channel has been registered.

## Now, the initial settings are complete, and you can watch the TV

- When your TV can detect the TV channel name from the TV channel broadcast signal, it automatically registers the TV channel name (ID) to the Programme number (PR) in which the TV channel has been registered.
- If a TV channel you want to view is not set to a Programme number (PR), manually set it using the **MANUAL** function. For details, see “EDIT/MANUAL” on page 28.
- The TV channel is not registered in Programme number PR 0 (AV). When you want to register a TV channel to PR 0 (AV), manually set it using the **MANUAL** function. For details, see “EDIT/MANUAL” on page 28.

## ■ **ACI** function

This TV has an ACI function which decodes the ACI (automatic Channel Installation) data.

Using the ACI function allows all TV channels transmitted from the cable TV station to be properly registered quickly according to the data from the cable TV station.

## Caution

- If your cable TV station broadcasts ACI data and if “ACI START/ACI SKIP” appears in the **AUTO PROGRAM** menu, the ACI function is enabled. In all other cases, it is disabled.

### 1 Press the **▼/▲** buttons to choose **ACI START**. Then press the **OK** button to start the **ACI** function

#### When you don't want to use the **ACI** function:

Press the **▼/▲** buttons to choose **ACI SKIP** and then press the **OK** button.

#### If the **AUTO PROGRAM** menu changes to another menu:

Depending on your cable TV station, there may be a broadcast selection menu set up by the cable TV station.

Follow the menu indications and use the **◀/▶** and **▼/▲** buttons to operate the menu. After you have made the setting, press the **OK** button.

#### If “**ACI ERROR**” is displayed in the **AUTO PROGRAM** menu:

“**ACI ERROR**” denotes that the ACI function is not working properly. Press the **OK** button to start the ACI function again.

If “**ACI ERROR**” still appears even after you have tried to start the ACI function several times, press the **▶** button to start the **AUTO PROGRAM** function. It does not cause any problem because all the TV channels are registered to the Programme numbers (PR) by the **AUTO PROGRAM** function.



---

**2 When the settings are completed, the EDIT menu is displayed. Return to the instructions that you were reading before, and continue the operation**

**When the “Initial settings” has been made:**

Return to step 6 of “Initial settings” on page 5.

**When the “AUTO PROGRAM” has been made:**

Return to step 6 of “Initial settings” on page 5.

- If you have any questions about the items in the Broadcast Selection menu or how to operate the menu, please contact your cable TV station.
- When the cable TV broadcast reception is poor, the ACI function will not work properly.
- If there is an error in the ACI data itself, the TV channel cannot be registered properly. If this happens, turn the ACI function off (ACI SKIP) and use the AUTO PROGRAM function. Alternatively, use the EDIT/MANUAL function to correct the Programme number (PR) setting.


---

**■ Downloading the data to VCR**

You can transmit to the latest Programme numbers (PR) data to the VCR with the T-V LINK function.

**Caution**

- Only when the T-V LINK compatible VCR is connected to the EXT-2 terminal, this operation is enabled.
- Only when the T-V LINK menu is being displayed, this operation is enabled.

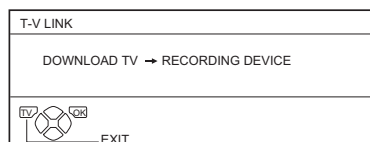

D0005-EN

---

**1 Turn on the VCR**

**2 Press the OK button**

The data transmission begins.



The T-V LINK menu disappears once the data transmission ends.

**When the T-V LINK menu is changed over to another menu:**

The menu operation at the TV side is completed and it is shifted to the menu operation at the VCR side. Refer to the VCR Instruction Manual and operate the VCR.

---

If “FEATURE NOT AVAILABLE” appears at the T-V LINK menu, ensure the following three items are correct; then press the **OK** button to retry data transmission.

- Has the T-V LINK compatible VCR been connected to the EXT-2 terminal?
- Has the VCR power been turned on?
- Does the SCART cable that is connected to the EXT-2 terminal to T-V LINK compatible VCR have all proper connections?

---

## T-V LINK FUNCTIONS

---

When a T-V LINK compatible VCR is connected to the EXT-2 Terminal on the TV, it is easier to set up the VCR and to view videos. T-V LINK uses the following features:

### To use T-V LINK functions:

A T-V LINK compatible VCR is necessary. The VCR must be connected to the EXT-2 terminal on the TV by a fully wired SCART cable.

---

A “T-V LINK compatible VCR” means a JVC VCR with the T-V LINK logo or a VCR with one of the following logos. However, these VCRs may support some or all of the features described below. For details, refer to your VCR instruction manual.

“Q-LINK” (a trademark of Panasonic Corporation)

“Data Logic” (a trademark of Metz Corporation)

“Easy Link” (a trademark of Phillips Corporation)

“Megalogic” (a trademark of Grundig Corporation)

“SMARTLINK” (a trademark of Sony Corporation)

---

### ■ Pre-set Download

Download the registered data on the TV channels from the TV to the VCR.

The Preset Download function automatically begins when the initial setting is complete or whenever the AUTO PROGRAM or EDIT/MANUAL operations are performed.

- This function can be operated via VCR operation.

### When “FEATURE NOT AVAILABLE” is displayed:

If “FEATURE NOT AVAILABLE” is displayed, the download was not performed correctly. Before trying to download again, ensure the following:

- The VCR power is turned on.
- The VCR is T-V LINK compatible.
- The VCR is connected to the EXT-2 terminal.
- The SCART cable is fully wired.

### ■ Direct Rec

“What You See Is What You Record”

You can record to VCR the images that you are currently viewing on TV by a simple operation. For details, read the manual for your VCR. Operate via the VCR. “VCR IS RECORDING” is displayed.

**In the following conditions, the VCR will stop recording if the TV is turned off, if the TV channel or input is switched, or if the menu is displayed on the TV:**




- When recording images from an external device connected to the TV.
  - When recording a TV channel after it has been unscrambled on a decoder.
  - When recording a TV channel by using the TV’s output because that TV channel cannot be properly received on the VCR’s tuner.
  - When the VCR is not ready (for example, when there is no tape inserted), “NO RECORDING” is displayed.
- 
- Operation via the TV is not possible.
  - Generally, the VCR cannot record a TV channel that cannot be received properly by the VCR’s tuner, even though you can view that TV channel on the TV. However, some VCRs can record a TV channel by using the TV’s output if that channel can be viewed on the TV, even though the TV channel cannot be received properly by the VCR’s tuner. For details, refer to your VCR instruction manual.
-

## ■ TV Auto Power On/VCR Image View

When the VCR starts playing, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen. When the VCR menu is operated, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen.

- This function does not operate if your TV's main power is turned off. Set your TV's main power to on (standby mode).

# TV buttons and functions

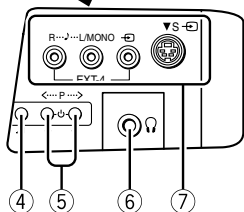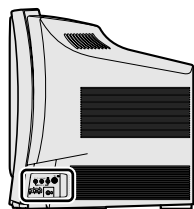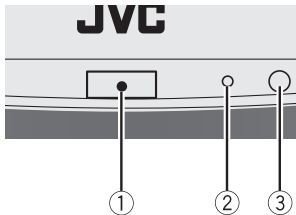

Refer to the pages in parentheses for details.

- ① Main power button (5, 11)
- ② Power lamp (5, 11)
- ③ Remote control sensor
- ④  $\nabla$  (Volume) button (11)
- ⑤ P  $\vee/\wedge$  buttons/  $-/+$  buttons (11)
- ⑥ Headphone jack (mini jack) (37)
- ⑦ EXT-4 terminal (34, 37)

## Turn the Main power on

**Press the Main power button on the TV.**

The Power lamp lights red and your TV is in the standby mode.

**To turn the Main power off:**

Press the Main power button again.  
The Power lamp goes off.

### Caution

- The main power button on the TV does not fully isolate the TV from the AC supply. If you are not going to use this TV for a long period of time, be sure to disconnect the AC plug from the AC socket.

## Turn the TV on from standby mode

**Press the P  $\vee/\wedge$  buttons to turn the TV on from standby mode**

When the TV is turned on, the power lamp dims slightly.

## Choose a TV channel

**Press the P  $\vee/\wedge$  buttons to choose a programme number (PR) or an EXT terminal**


## Adjust the volume

**1 Press the  $\nabla$  (Volume) button**

The volume level indicator appears.

**2 Press the  $-/+$  buttons while the volume level indicator is displayed**

# Remote control buttons and functions

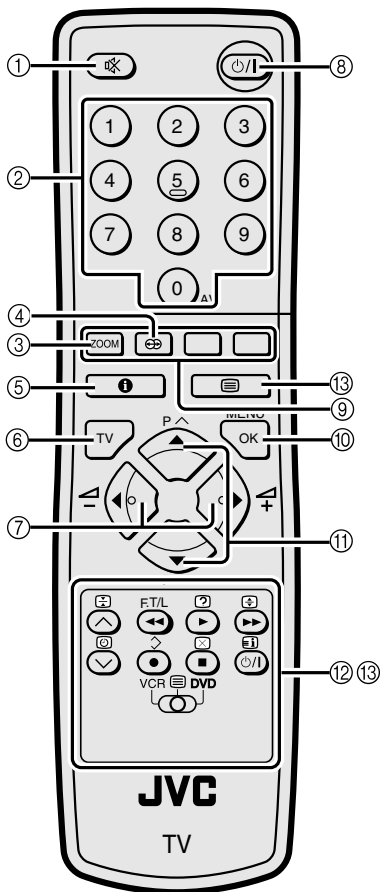

- ① Muting button
- ② Number buttons
- ③ **ZOOM** button
- ④ **SS** (hyper sound) button
- ⑤ Information button
- ⑥ **TV** button
- ⑦ **◀/▶** buttons
- ⑧ **⏻/⏿** (standby) button
- ⑨ Colour buttons
- ⑩ **OK** button
- ⑪ **▼/▲** buttons
- ⑫ VCR/DVD/Teletext control button
- ⑬ VCR DVD switch (text) button

---

## Turn the TV on or off from standby mode

---

**Press the **⏻/⏿** (standby) button to turn the TV on or off.**

When the TV is turned on, the power lamp dims slightly.

- The power can be turned on by pressing the **TV** button, **▼/▲** buttons or Number buttons.

---

## Choose a TV channel

---

- **Use the number buttons:**  
**Enter the programme number (PR) of the channel using the number buttons.**

Example:


- PR 6 → press **6**
- PR 12 → press **1** and **2**

- Use the ▼/▲ buttons:  
Press the ▼/▲ buttons to choose the programme number (PR) you want.



## ■ Use the PR LIST:

### 1 Press the ⓘ (Information) button to display the PR LIST

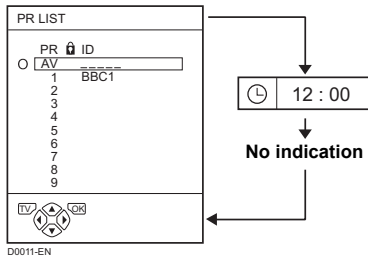Pressing the ⓘ (Information) button changes the display as follows:




### 2 Press the ◀/▶ and ▼/▲ buttons to choose a Programme number (PR). Then press the OK button

- For Programme numbers (PR) with the CHILD LOCK function set, the  (CHILD LOCK) mark is displayed next to the Programme number (PR) in the PR LIST.
- Even if you try to choose a Programme number (PR) with the CHILD LOCK function set, the  (CHILD LOCK) mark will appear, and you cannot watch the TV channel. To watch the TV channel, see “CHILD LOCK” on page 25.
- If the picture is tilted, correct it. See “PICTURE TILT” on page 32.

## Watch images from external devices

- Use the 0 (AV) button:  
Press the 0 (AV) button to choose an EXT terminal.

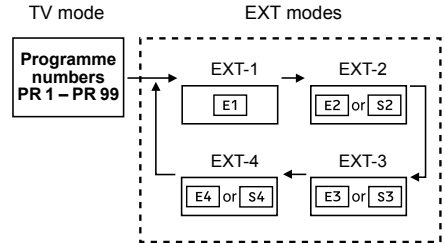

- Use the ▼/▲ buttons:  
Press the ▼/▲ buttons to choose an EXT terminal.

## ■ Use the PR LIST:

### 1 Press the ⓘ (Information) button to display the PR LIST

### 2 Press the ◀/▶ and ▼/▲ buttons to choose an EXT terminal. Then press the OK button

- The EXT terminals are registered after the Programme number PR 99.
- You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details, see “S-IN (S-VIDEO input)” on page 34.
- If you do not have a clear picture or no colour appears, change the colour system manually. See “COLOUR SYSTEM” on page 22.
- If you choose an EXT terminal with no input signal, the EXT terminal number becomes fixed on the screen.
- This TV set has a function which can automatically change over the input according to a special signal output from an external device. (The EXT-4 terminal does not support it.)


**To return to a TV channel:**

Press the **TV** button, the **▼/▲** buttons or the Number buttons.

**To use the Programme number PR 0 (AV):**

When the TV and VCR are connected only by the Aerial cable, choosing the Programme number PR 0 (AV) allows you to view images from the VCR. Set the VCR RF channel to the Programme number PR 0 (AV) manually. For details, see “EDIT/MANUAL” on page 28.

Pressing the **0 (AV)** button changes the choice as follows:

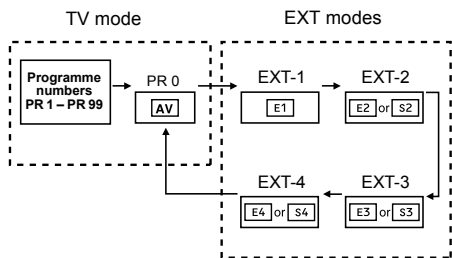


- The VCR RF channel is sent as the RF signal from the VCR.
- Also refer to your VCR instruction manual.

**Displaying the current time**

You can display the Current Time on the screen.

**Press the **i** (Information) button to display the current time**

Pressing the **i** (Information) button changes the display as follows:

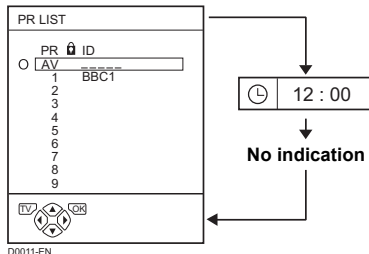

- This TV uses teletext data to set the current time. If the TV has not received a TV channel that has teletext programmes since it was turned on, the time display is blank. To view the current time, choose a TV channel that has teletext programmes.
- When watching videos, an incorrect current time is sometimes displayed.

**Adjust the volume**

**Press the **◀/▶** buttons to adjust the volume.**

The Volume indicator appears and the volume changes as you press the **-/+** buttons.

**Muting the sound**  
**Press the **🔇** (muting) button to turn off the sound.**

Pressing the **🔇** (muting) button again restores the previous volume level.

## ZOOM function

You can change the screen size according to the picture aspect ratio. Choose the optimum one from the following ZOOM modes.

### AUTO:

For any picture format except Normal Picture (4:3 Aspect Ratio), the picture will be automatically displayed in the optimum screen size.

For Normal Picture (4:3 Aspect Ratio), the picture displayed in accordance with the ZOOM mode set on the 4:3 AUTO ASPECT menu. For details, see "4:3 AUTO ASPECT" on page 23.

- AUTO may not function properly with poor signal quality. In this case, choose an optimum ZOOM mode manually.
- This TV supports WSS (wide-screen signals). When broadcasts with WSS are received with the ZOOM mode set at AUTO, the most suitable ZOOM mode is automatically chosen according to the WSS received.

### REGULAR:

Use to view a normal picture (4:3 aspect ratio) as its original size is.



### PANORAMIC:

This mode stretches the left and right sides of a normal picture (4:3 Aspect Ratio) to fill the screen, without making the picture appear unnatural.



- The top and bottom of the picture are slightly cut off.

 
### 14:9 ZOOM:

This mode zooms up the Wide Picture (14:9 Aspect Ratio) to the upper and lower limits of the screen.




### 16:9 ZOOM:

This mode zooms up the Wide Picture (16:9 Aspect Ratio) to the full screen.



### 16:9 ZOOM SUBTITLE:

 This mode zooms up the Wide Picture (16:9 Aspect Ratio) with subtitles to the full screen.



### FULL:


This mode uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



Use for pictures with a 16:9 aspect ratio that have been squeezed into a normal picture (4:3 aspect ratio), you can restore their original dimensions.

## ■ Choose the ZOOM mode

### 1 Press the ZOOM button to display the ZOOM menu

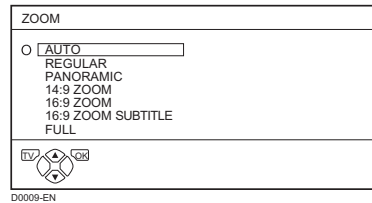

### 2 Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button

The picture expands and the chosen ZOOM mode is displayed in about 5 seconds.

- The ZOOM mode may be automatically changed due to the control signal from an external device. When you want to return to the previous ZOOM mode, choose the ZOOM mode again.



### ■ Adjusting the visible area of the picture

If subtitles or the top (or bottom) of the picture are cut off, adjust the visible area of the picture manually.

#### 1 Press the **ZOOM** button

The ZOOM menu appears.

#### 2 Press the **OK** button to display the **ZOOM mode** indication

Indicator is displayed.




D0010-EN

#### 3 While it is displayed, press the **▼/▲** buttons to adjust the visible area vertically

- You cannot adjust the visible area in REGULAR or FULL mode.

The visible area adjustment is saved even after the TV channel is changed. However, it is cancelled if the following operations are performed.

- The power is turned off/on
- The ZOOM mode is changed
- The  (Text) button is pressed
- The TV is switched between TV mode and EXT mode

---

## HYPER SOUND function

---

You can enjoy sounds with a wider ambience.

#### Press the (HYPER SOUND) button to turn the HYPER SOUND function on or off

- The HYPER SOUND function does not work properly with mono sound.
- The HYPER SOUND function can be also turned on or off by using the SOUND menu. For details, see “HYPER SOUND” on page 24.

---

## Return to TV channel instantly

---

You can return to a TV channel instantly.

#### Press the **TV** button

The TV returns to the TV mode and a TV channel appears.

---

## Operating a JVC brand VCR or DVD player

---

You can operate a JVC brand VCR or DVD player. Pressing the button having the same appearance as the original remote control button of a device makes the function work in the same way as the original remote control.

#### 1 Set the VCR DVD Switch to the VCR or DVD position

##### VCR:

When you are operating the VCR, set the switch to the VCR position.

##### DVD:


When you are operating the DVD player, set the switch to the DVD position.

---

#### 2 Press the **VCR/DVD Control Button** to control your VCR or DVD player

- If your device is not made by JVC, these buttons cannot be used.
- Even if your device is made by JVC, some of these buttons or any one of the buttons may not work, depending on the device.
- You can use the **▼/▲** buttons to choose a TV channel. The VCR will receive or choose the chapter the DVD player plays back.
- Some DVD player models use the **▼/▲** buttons for both operating of Fast forward/backward functions and choosing the chapter. In this case, the **◀◀/▶▶** buttons do not work.

# Teletext function

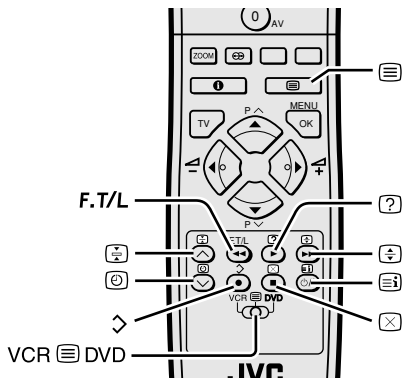


## Basic operation

You can view three types of teletext broadcasts on the TV:


### 1 Choose a TV channel with a teletext broadcast
 
### 2 Set the VCR DVD switch to the (Text) position



### 3 Press (Text) button to display the teletext

Pressing (Text) button changes the mode as follows:

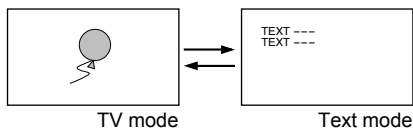

### 4 Choose a teletext page by pressing the ▼/▲ buttons, Number buttons or Colour buttons

#### To return to the TV mode:

Press the **TV** button or (Text) button.

- If you have trouble receiving teletext broadcasts, consult your local dealer or the teletext station.
- No menu operations are possible when viewing a teletext programme.
- Language display depends on the country which was set on the COUNTRY menu. If characters on a Teletext programme do not appear properly, change the COUNTRY Setting to other country's. To change the COUNTRY setting, perform steps 1 and 2 of the "AUTO PROGRAM" procedure on page 28 and then press the **OK** button.

The last teletext page displayed is memorised. The last teletext page is cleared under following conditions.

- Turning the power off
- Changing the channel
- Switching the TV input

## Using the List Mode

 
You can store the numbers of your favourite teletext pages in memory and call them up quickly using the colour buttons.

### ■ To store the page numbers:

#### 1 Press F.T/L button to engage the List mode

The stored page numbers are displayed at the bottom of the screen.

#### 2 Press a Colour button to choose a position. Then press the Number buttons to enter the page number



### 3 Press and hold down $\diamond$ (Store) button

The four page numbers blink white to indicate that they are stored in memory.

### ■ To call up a stored page:

#### 1 Press the **F.T/L** button to engage the List mode

#### 2 Press a colour button to which a page has been assigned



 
#### To exit the List mode:

Press the **F.T/L** button again.

## Hold

You can hold a teletext page on the screen for as long as you want, even while several other teletext pages are being received.

### Press the $\boxtimes$ (Hold) button



#### To cancel the Hold function:

Press  $\boxtimes$  (Hold) button again.

## Sub-page

Some teletext pages include sub-pages that are automatically displayed. You can hold any sub-page, or view it at any time.

#### 1 Press the $\odot$ (Sub-page) button to operate the Sub-page function

#### 2 Press the Number buttons to enter a sub-page number

Example:

- 3rd sub-page  $\rightarrow$  press **0, 0, 0** and **3**.

 
#### To cancel the Sub-page function:

Press the  $\odot$  (Sub-page) button again.

## Reveal

Some teletext pages include hidden text (such as answers to a quiz). You can display the hidden text.


### Each time you press the $\text{?}$ (Reveal) button, text is hidden or revealed



## Size

You can double the height of the teletext display.

### Press the $\boxplus$ (Size) button.

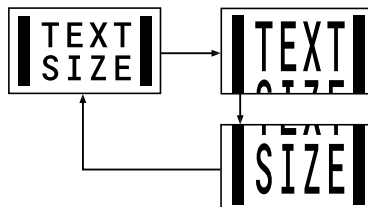

## Index

You can return to the index page instantly.

### Press $\text{[Index]}$ (Index) button

Returns to page 100 or a previously specified page.

---

## Cancel

---


You can search for a teletext page while watching TV.

---

**1 Press the Number button to enter a page number, or press a Colour button**


The TV searches for a teletext page.


---

**2 Press  (Cancel) button**

The TV programme appears. When the TV finds the teletext page, its page number appears in the upper left of the screen.


---

**3 Press  (Cancel) button to return to a teletext page when the page number is on the screen**

- The TV mode cannot be resumed even by pressing the  (Cancel) button. A TV programme is temporarily displayed instead of the teletext programme.

# Using the TV's menu

This TV has a number of functions you can operate using menus. To fully utilize all your TV's functions, you need to understand the basic menu operating techniques fully.

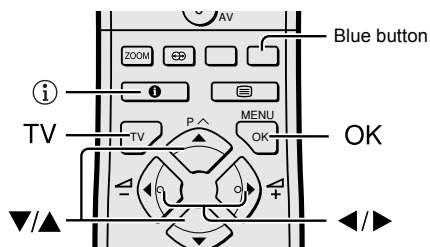

## 4 Press the ◀/▶ buttons to choose the setting of that function


- If you want to operate a function which appears only with its name, follow the descriptions of that function on the following pages.
- The display appearing at the bottom of a menu shows you a button on the remote control that you can use when you operate a chosen function.



TV button OK button

## Basic operation

### 1 Press the OK button to display the MENU (main menu)

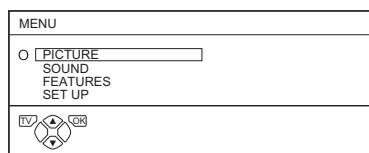

### 2 Press the ▼/▲ buttons to choose a menu title, and press the OK button

The menu appears.

**To return to the previous menu:**

Press the **i** (information) button.

**To exit a menu instantly:**

Press the **TV** button.


### 3 Press the ▼/▲ buttons to choose a function

- For details of the functions in the menus, see the following pages.

### 5 Press the OK button to complete the setting

The menu disappears.

# PICTURE menu

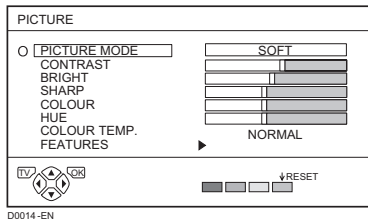

- While the PICTURE menu is displayed, pressing the blue button will set the CONTRAST, BRIGHT, SHARP, COLOUR, HUE settings to their default settings.

## PICTURE MODE

You can choose one of three PICTURE MODEs to adjust the picture settings automatically.

### **BRIGHT:**

Heightens contrast and sharpness.

### **STANDARD:**

Standardizes picture adjustment.

### **SOFT:**

Softens contrast and sharpness.

## CONTRAST

You can adjust the picture contrast.

- ◀ : lower
- ▶ : higher

## BRIGHT

You can adjust the picture brightness.

- ◀ : darker
- ▶ : brighter

## SHARP

You can adjust the picture sharpness.

- ◀ : softer
- ▶ : sharper

## COLOUR

You can adjust the picture colour.

- ◀ : lighter
- ▶ : deeper

## HUE

You can adjust the picture tint.

- ◀ : reddish
- ▶ : greenish
- You can change the HUE setting (picture hue) when the colour system is NTSC 3.58, NTSC 4.43. (See “Specifications” on page 44)

## COLOUR TEMP.

You can select one of three COLOUR TEMP. modes (three tones of white) to adjust the white balance of the picture. Since white is the colour which is used as a reference for all the other colours, changing the COLOUR TEMP. mode affects the appearance of all the other colours on the screen.

### **COOL:**

A bluish white. Using this mode when watching bright pictures allows you to enjoy a more vivid and bright picture.

### **NORMAL:**


The normal white colour.

### **WARM:**

A reddish white. Using this mode when watching films allows you to enjoy colours that are characteristic of films.

## FEATURES

Choose **FEATURES** and press the **OK** or **▶** button to display the sub-menu.

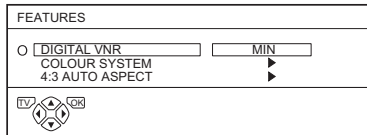

D1016-EN

### ■ DIGITAL VNR

The **DIGITAL VNR** function cuts down the amount of noise in the original picture. You can choose from the three **DIGITAL VNR** function settings of **AUTO**, **MIN** and **MAX**.

The TV and external input may be given different **DIGITAL VNR** settings.

#### **AUTO:**

The TV will automatically adjust the level of the **DIGITAL VNR** effect to match the amount of noise in the picture, giving you the best possible picture.

- If you set the **DIGITAL VNR** effect too high it can make the picture less sharp. It is recommended to use the **AUTO** setting if you can.

#### **MIN:**

The level of the **DIGITAL VNR** effect is set to the minimum. If you set the **DIGITAL VNR** function to **AUTO** but feel that the sharpness of the original picture has not been reproduced fully, change the setting from **AUTO** to **MIN**.

- The **MIN** setting is not suitable for low-quality pictures which contain a lot of noise.

#### **MAX:**

The level of the **DIGITAL VNR** effect is set to the maximum. If you set the **DIGITAL VNR** function to **AUTO** but still notice some noise, change the setting from **AUTO** to **MAX**.


- The **MAX** setting is not suitable for high-quality pictures which contain very little noise.

#### **OFF:**

The **DIGITAL VNR** function is turned off.

### ■ COLOUR SYSTEM

The colour system is chosen automatically. However, if the picture is not clear or no colour appears, choose the colour system manually.

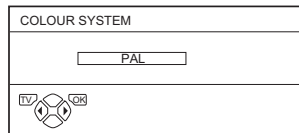

D0016-EN

#### 1 Choose **COLOUR SYSTEM** then press the **OK** button

#### 2 Press the **◀/▶** buttons to chose the appropriate colour system. Then press the **OK** button

#### **PAL:**

PAL system

#### **SECAM:**

SECAM system

#### **NTSC 3.58:**

NTSC 3.58 MHz system

#### **NTSC 4.43:**

NTSC 4.43 MHz system

#### **AUTO:**


This function detects a colour system from the input signal. Only when you are viewing a picture from Programme number **PR 0** (**AV**), or **EXT** terminal, you can choose using the **AUTO** function.

- The **AUTO** function may not function properly if you have poor signal quality. If the picture is abnormal in the **AUTO** function, choose another colour system manually.
- When in the Programme numbers **PR 0** (**AV**) to **PR 99**, you cannot choose **NTSC 3.58** or **NTSC 4.43**.

## ■ 4:3 AUTO ASPECT

You can choose one of three ZOOM modes, REGULAR, PANORAMIC or 14:9 ZOOM, as the ZOOM mode for the normal picture (4:3 aspect ratio).

### 1 Choose 4:3 AUTO ASPECT then press the OK button

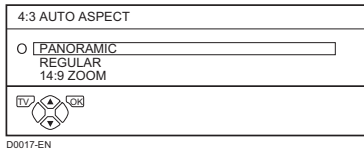


### 2 Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button



# SOUND menu

---

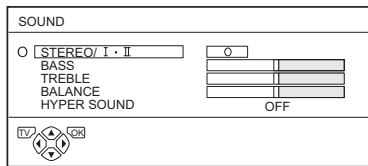

D0019-EN

---

## STEREO / I · II

---

When you are viewing a bilingual broadcast programme, you can choose the sound from Bilingual I (Sub I) or Bilingual II (Sub II). When the stereo broadcasting is received poorly, you can change from stereo to mono sound so that you can hear the broadcast more clearly and easily.

∞ : Stereo sound

○ : mono sound

I : Bilingual I (sub I)

II : Bilingual II (sub II)

- The sound mode you can choose differs depending on the TV programme.
  - This function does not work in the EXT modes. And this function does not appear in the SOUND menu.
- 

---

## BASS

---

You can adjust the low tone of the sound.

◀ : weaker

▶ : strong

---

---

## TREBLE

---

You can adjust the high tone of the sound.

◀ : weaker

▶ : strong

---

---

## BALANCE

---

You can adjust the volume balance between the left and right speaker.

◀ : turn the left speaker's volume level up.

▶ : turn the right speaker's volume level up.

---

---

## HYPER SOUND

---

Mono sound is converted to simulated stereo for a more enjoyable audio experience.

**ON:**

This function is turned on.


**OFF:**

This function is turned off.

---

- The HYPER SOUND function does not work properly with mono sound.
  - You can turn on or off the HYPER SOUND function with a single press. For details, see "HYPER SOUND function" on page 16.
-

# FEATURES menu

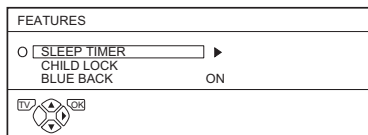


D0023-EN

## SLEEP TIMER

You can set the TV to automatically turn off after a specified period of time.

### 1 Choose SLEEP TIMER, then press the OK button

A Sub-menu of the SLEEP TIMER function appears.

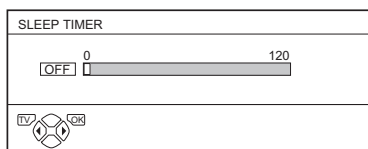

D0024-EN

### 2 Press the ◀/▶ buttons to set the period of time. Then press the OK button

You can set the period of time a maximum of 120 minutes (2 hours) in 10 minute increments.

- One minute before the SLEEP TIMER function turns off the TV, "GOOD NIGHT!" appears.
- The SLEEP TIMER function cannot be used to turn off the TV's main power.
- When the SLEEP TIMER function is on, you can display the Sub-menu of the SLEEP TIMER function again to confirm and/or change the remaining period of time of the SLEEP TIMER function. Press the OK button to exit the menu after confirming and / or changing the remaining time.

### To cancel the SLEEP TIMER function:

Press the ◀ button to set a period of time to "OFF".


## CHILD LOCK

When there is a TV channel you wish your children not to watch, you can use the CHILD LOCK function to lock out the TV channel. Even when a child chooses a Programme number (PR) in which a locked TV channel has been registered, the screen will change to blue and displays a lock icon (CHILD LOCK) so the TV channel cannot be viewed. Unless you enter a pre-set ID number by a special operation, the lock cannot be released and the child cannot view the TV channel programmes.

### ■ To set the CHILD LOCK function

#### 1 Choose CHILD LOCK, then press the 0 (AV) button

"SET ID NO." (ID number setting screen) appears.

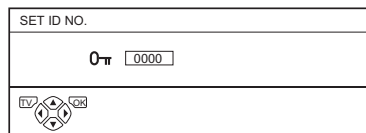

D0025-EN


#### 2 Set the ID number to your liking

##### 1 Press the ▼/▲ buttons to choose a number.

##### 2 Press the ◀/▶ buttons to move the cursor.

### 3 Press the **OK** button

The Sub-menu of CHILD LOCK appears.

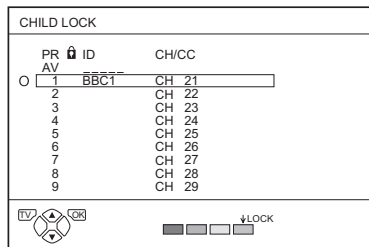

### 4 Press the **▼/▲** buttons to choose a TV channel

Every time you press the **▼/▲** buttons, the Programme number (PR) changes, and the picture of the TV channel registered in the Programme number (PR) is displayed on the screen.

### 5 Press the blue button and set the CHILD LOCK function.

Then press the **OK** button

**ℹ** (CHILD LOCK) appears and the TV channel is locked.

**To reset the CHILD LOCK function:**

Press the blue button again.

**ℹ** (CHILD LOCK) disappears.

To disable easy resetting of the CHILD LOCK function, the menu disappears by choosing the CHILD LOCK function and pressing the **OK** button as in the ordinary menu operation.

 
## ■ To view a locked TV channel

### 1 Choose a Programme number (PR) in which a TV channel locked with the Number buttons or PR LIST

The screen changes to blue and the **ℹ** (CHILD LOCK) appears. You cannot view the TV channel.



### 2 Press the **ℹ** (Information) button to display "ID NO." (ID NO. input screen).



### 3 Press the Number buttons to enter the ID number

The lock is temporarily released so you can view the TV channel.

**If you have forgotten the ID number:**

Perform step 1 of "To set the CHILD LOCK function". After confirming the ID number, press the **TV** button to exit the menu.

- Even if you reset the lock temporarily, it does not mean that the CHILD LOCK function set for the TV channel is cancelled. The next time anyone attempts to view the TV channel, it will be locked again.
- When you would like to cancel the CHILD LOCK function, you must perform the operation "To set the CHILD LOCK function" again.
- To disable easy choosing of a Programme number (PR) in which a locked TV channel has been registered, the Programme number (PR) has been set that it cannot be chosen by the **▼/▲** buttons or the operation buttons at the TV.
- To disable easy resetting of the lock, "ID NO." (ID NO. input screen) is set so that it cannot appear unless you press the **ℹ** (Information) button.

---

## BLUE BACK

---

You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an external device.


**ON:**

This function is turned on.

**OFF:**

This function is turned off.

# SET UP menu

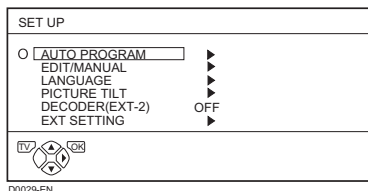


## AUTO PROGRAM

You can automatically register the TV channels which can be received well at your residence in the TV's Programme numbers (PR) by performing the following.

### 1 Choose AUTO PROGRAM. Then press the OK button

The COUNTRY menu appears as a sub-menu of the AUTO PROGRAM function. There are two COUNTRY menus. Pressing the yellow button changes the COUNTRY menu as follows:

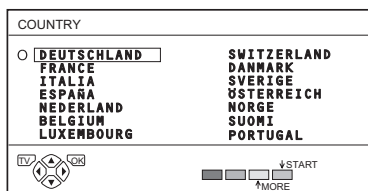

### 2 Press the ◀/▶ and ▼/▲ buttons to choose the country where you are now located

### 3 Perform steps 5, 6, and 7 of the "Initial settings" (page 6)


## EDIT/MANUAL

The EDIT/MANUAL functions are divided into two types: editing of the current Programme numbers (PR) (EDIT functions) and manual registration of a TV channel you want to view to the Programme number (PR) (MANUAL function). The details about these functions are as follows:

### Caution

- Using the MOVE, DELETE or INSERT function rewrites the current Programme numbers (PR) list. Resultingly, the Programme number (PR) of some of the TV channels will change.
- Using the MANUAL function for a TV channel for which the CHILD LOCK function has been set cancels the CHILD LOCK function for the TV channel.
- Using the MANUAL function for a TV channel for which the DECODER (EXT-2) function has been set to ON returns the setting of the DECODER (EXT-2) function for the TV channel to OFF.
- When a TV channel has already been registered in PR 99, using the INSERT function deletes the TV channel.

### 1 Choose EDIT/MANUAL, then press the OK button

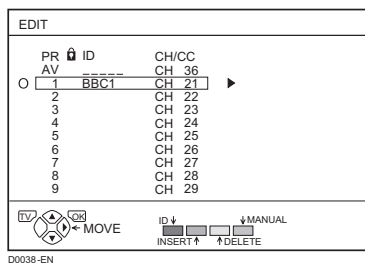

### 2 Follow the operation description of a function you want to use and operate the function

#### MOVE:

This function changes a Programme number (PR) of a TV channel.

**ID:**

This function registers a Channel name (ID) to a TV channel.

**INSERT:**

This function adds a new TV channel in the current Programme numbers (PR) list by using the CH/CC number.

- You cannot use the INSERT function if you do not know a Channel number of a TV channel. Use the MANUAL function to register a TV channel in the Programme number (PR).

**DELETE:**

This function deletes an unnecessary TV channel.

**MANUAL:**

This function manually registers a new TV channel in a Programme number (PR).

- An EXT terminal number does not appear in the Programme numbers (PR) list.
- The CH/CC number is a number unique to the TV and corresponding to the Channel number of a TV channel. For the relationship of a Channel number and a CH/CC number, see “CH/CC numbers” on page 39.

**■ MOVE****1 Press the ▼/▲ buttons to choose a TV channel**

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the ► button to start the MOVE function**

EDIT			
PR	ID	CH/CC	
AV		CH 36	
1			CH 21
2	BBC1	CH 22	
3		CH 23	
4		CH 24	
5		CH 25	
6		CH 26	
7		CH 27	
8		CH 28	
9		CH 29	

TV VCR STORE

D0030-EN

**3 Press the OK button to complete the settings**

The T-V LINK menu appears.

T-V LINK	
DOWNLOAD TV → RECORDING DEVICE	
TV	VCR
EXIT	

D0005-EN

**4 If you do not have a T-V LINK compatible VCR connected:**

Press the TV button to exit the T-V LINK menu.

The T-V LINK menu disappears and all the settings are completed.

**If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:**

Follow the operating procedure “Downloading the data to VCR” on page 8 to transmit the Programme number (PR) data to the VCR.

- For Programme number PR 0, “AV” appears in the Programme numbers (PR) list.

**3 Press the ▼/▲ buttons to choose a new Programme number (PR)****To cancel the MOVE function:**

Press the (i) (Information) button.


**4 Press the ◀ button to change the Programme number (PR) of a TV channel to a new Programme number (PR)**

■ ID

**1 Press the ▼/▲ buttons to choose a TV channel**


Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the red button to start the ID function**

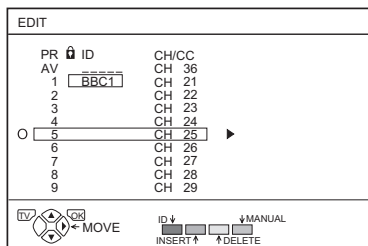


D0031-EN

**3 Press the ▼/▲ buttons to choose the first character of a Channel name (ID) you want to attach to the TV channel**

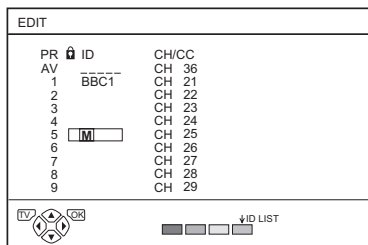

D0032-EN

**4 Press the blue button to display the ID LIST (channel name list)**

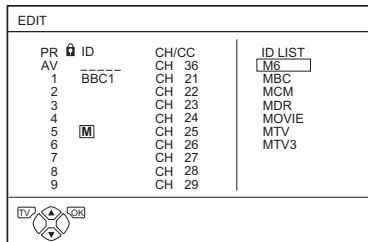

D0033-EN

**5 Press the ▼/▲ buttons to choose the Channel name (ID)**

**To cancel the ID function:**

Press the (i) (Information) button.

**6 Press the OK button to register a Channel name (ID) to a TV channel**

- You can register your unique Channel name (ID) to the TV channel. When step 3 is completed, do not go to step 4, but press the ◀/▶ buttons to move the cursor and the ▼/▲ buttons to choose a character for completing the Channel name (ID). Then press the OK button to register the Channel name (ID) to the TV channel.


■ INSERT

**Preparation:**

- A CH/CC number unique to this TV and corresponding to the Channel number of a TV channel is required. Find the corresponding CH/CC number from a table “CH/CC numbers” on page 39 based on the Channel number of the TV channel.
- When the COUNTRY setting is not FRANCE, use a two-digit CH/CC number. When the COUNTRY setting is FRANCE, use a three-digit CH/CC number.
- Only when you add a TV channel (SECAM-L system) from a French station, be sure to set COUNTRY to FRANCE. If the COUNTRY setting is not FRANCE, follow the description “AUTO PROGRAM” on page 28 to change the COUNTRY setting to FRANCE, then start the INSERT function.

**1 Press the ▼/▲ buttons to choose a Programme number (PR) for which you will register a new TV channel**

## 2 Press the green button and start the INSERT function.

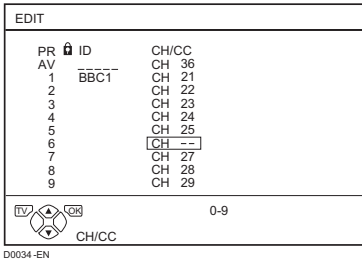

D0034-EN

## 3 Press the ▼/▲ buttons to choose “CC” or “CH” according to the CH/CC number of the TV channel

When the COUNTRY setting is FRANCE:

Choose “CH1”, “CH2”, “CC1” or “CC2”.

To cancel the INSERT function:

Press the ⓘ (Information) button.

## 4 Press the Number buttons to enter the remaining CH/CC number

The TV shifts to registration mode.

When the registration is completed, the picture of the TV channel appears on the screen.

- The CH/CC number is a number indicating the broadcast frequency to the TV. If the TV cannot detect the TV channel corresponding to the broadcast frequency indicated by the CH/CC number, a picture in the no-signal state appears.

## ■ DELETE

### 1 Press the ▼/▲ buttons to choose a TV channel

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

### 2 Press the yellow button to delete the TV channel

The TV channel is deleted from the Programme numbers (PR) list.

## ■ MANUAL


### Preparation:

- As long as you register the TV channel (SECAM-L system) from a French station, be sure to set the COUNTRY setting to FRANCE. If the COUNTRY setting is not FRANCE, follow the description “AUTO PROGRAM” on page 28 to change the COUNTRY setting to FRANCE, then start the MANUAL function.

### 1 Press the ▼/▲ buttons to choose a Programme number (PR) to which you want to register a new TV channel

### 2 Press the blue button to activate the MANUAL function

At the right side following the CH/CC number, the SYSTEM (broadcasting system) of the TV channel appears.

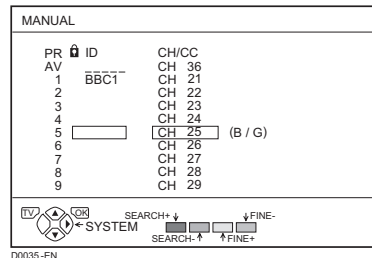

D0035-EN

To cancel the MANUAL function:

Press the ⓘ (Information) button.

### 3 Press the ► button to choose the SYSTEM (broadcasting system) for a TV channel you want to register

TV channel (SECAM-L system) from a French station:

Set the SYSTEM to “L”. If it is set to one other than “L”, you cannot receive the TV channel of the SECAM-L system.



**Other TV channels:**

If you do not know the correct broadcasting system, set the SYSTEM to “B/G”. If “B/G” is not correct, it results in the fact that you will not hear the sound normally when the TV detects a TV channel. In this case, retry to set the SYSTEM again correctly so that no problem arises.

**4 Press the green or red button to search for a TV channel**

Scanning stops when the TV finds a TV channel. Then the TV channel is displayed.

**5 Press the green or red button repeatedly until the TV channel you want appears**

**If the TV channel reception is poor:**  
Press the blue or yellow button to fine-tune the TV channel.

**If you cannot hear the normal sound even when the picture of the TV channel appears normally:**

The SYSTEM setting is wrong. Press the ► button and choose a SYSTEM that has normal sound.

**6 Press the OK button and register the TV channel to a Programme number (PR)**


The normal EDIT menu is resumed.

**LANGUAGE**

You can choose the language you want to use for the on-screen display from the language list in a menu.

**1 Choose LANGUAGE, then press the OK button**

A sub-menu of the LANGUAGE function appears.

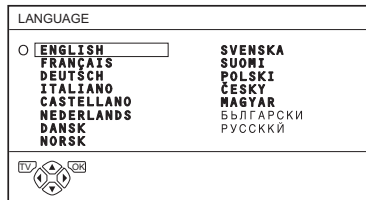


**2 Press the ◀/▶ and ▼/▲ buttons to choose a language. Then press the OK button**

**PICTURE TILT**

There are cases where the Earth’s magnetic force may make the picture tilt. If this happens, you can correct the picture tilt.

**1 Press the ▼/▲ buttons to choose PICTURE TILT. Then press the OK button**

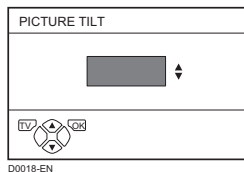

**2 Press the ▼/▲ buttons until the picture becomes level. Then press the OK button**

## DECODER (EXT-2)

When connecting a Decoder with a T-V LINK compatible VCR connected to the EXT-2 terminal, use the DECODER (EXT-2) function to unscramble the scrambled TV channels.


### 1 Turn on the Decoder power

### 2 Display the TV channel capable of being unscrambled with the Decoder on the TV

Even if the Decoder is functioning, a scrambled picture appears at this time.

### 3 Press the OK button to display the SET UP menu

The SET UP menu appears.

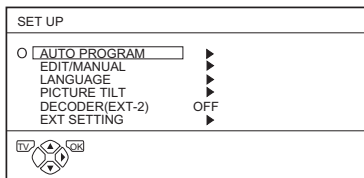

D0029-EN

### 4 Press the ▼/▲ buttons to choose DECODER (EXT-2). Then press the ◀/▶ buttons to choose ON


An unscrambled picture appears.

### To cancel the DECODER (EXT-2) function:

Press the ◀/▶ buttons to choose OFF.

### 5 Press the OK button to complete the setting

The T-V LINK menu appears.

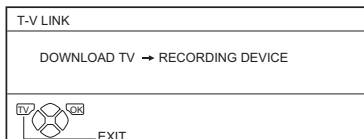

D0005-EN

### 6 Follow the operating procedure "Downloading the data to VCR" on page 8 to transmit the Programme number (PR) data to the VCR

### 7 If you have another TV channel capable of being unscrambled with a Decoder, repeat steps 2 through 7


If for some reason the DECODER (EXT-2) function has been set to "ON" but the TV channel cannot be unscrambled, check the following:

- Has the Decoder been connected to the VCR properly according to the VCR and Decoder Instruction Manuals?
- Has the Decoder power been turned on?
- Can the TV channel be unscrambled with a Decoder?
- Is it necessary to change the VCR settings in order to connect the Decoder? Confirm that the VCR is set properly by rechecking the VCR Instruction Manual.

## EXT SETTING

### 1 Choose EXT SETTING, then press the OK or ► button

The EXT SETTING menu appears.

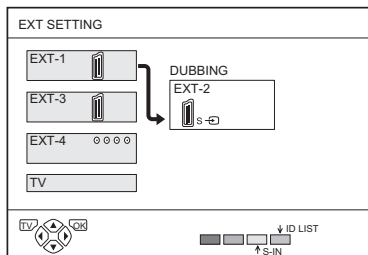

D0020-EN

### 2 Follow the instructions for the function you want to use and operate the function

#### S-IN:

You can enjoy the high-quality picture of the 2 S-VIDEO signal (Y/C signal).

#### ID LIST:

You can have a name for each of the devices connected for each EXT terminal.

#### DUBBING:

You can choose a signal source to be output from an EXT-2 terminal.

### ■ S-IN (S-VIDEO input)

When connecting a device (such as S-VHS VCR) which enables an S-VIDEO signal (Y/C signal) to be output, you can enjoy high-quality picture of the S-VIDEO signal (Y/C signal).

#### Preparation:

- At first, read the Device Instruction Manual and “Additional preparation” on page 37 to connect the device to the TV properly. Second, follow the Device Instruction Manual to set the device so that an S-VIDEO signal (Y/C signal) can be output to the TV.
- Do not set S-IN (S-VIDEO input) to the EXT terminal connected to a device which cannot output an S-VIDEO (Y/C signal). If it is set wrongly, a picture cannot appear.

### 1 Choose an EXT terminal

### 2 Press the yellow button and set the S-IN (S-VIDEO input).

#### Then press the OK button

An S-IN (S-VIDEO input) mark is displayed. You can view an S-VIDEO signal (Y/C signal) instead of the regular video signal (composite signal).

#### To cancel the S-IN (S-VIDEO input) setting:

Press the yellow button and turn off S-IN (S-VIDEO input) mark. The regular video signal (composite signal) pictures are resumed.


- The EXT-1 terminal does not support S-VIDEO signal (Y/C signal) and you cannot set S-IN (S-VIDEO input) in the EXT-1 terminal.
- Setting S-IN (S-VIDEO input) changes the head character from “E” to “S”. For example, “E2” is changed to “S2”.
- Even a device which enables the S-VIDEO signal (Y/C signal) to be output may output a regular video signal (composite signal) depending on the device setting. If a picture cannot appear because S-IN (S-VIDEO input) setting has been made, read the device Instruction Manual carefully again to check for the device settings.

## ■ ID LIST

You can have a name corresponding to the devices connected for each EXT terminal. Giving a name to an EXT terminal makes the EXT terminal number appear on the screen, together with the name.

### 1 Choose an EXT terminal

### 2 Press the blue button to display the name list (ID LIST)

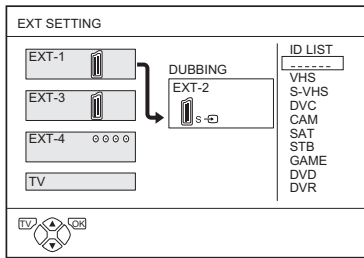

### 3 Press the ▼/▲ buttons to choose a name. Then press the OK button

The ID LIST disappears and the name is assigned to the EXT terminal.

- You cannot assign an EXT terminal name not found in the name list (ID LIST).

#### To erase a name assigned to the EXT terminal:

Choose a blank space.


### 4 Press the OK button to complete the setting

## ■ DUBBING

You can choose a signal source to be output from an EXT-2 terminal.

You can choose any one of the output signal of the device connected to the EXT terminal and the picture and sound from a TV channel you are currently viewing to output it to the EXT-2 terminal.

### 1 Press the ◀/▶ buttons to choose the arrow from the menu

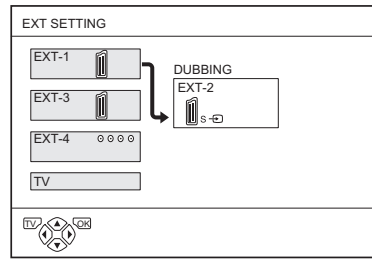

### 2 Press the ▼/▲ buttons to choose an EXT terminal or TV.

#### Then press the OK button

The arrow in the menu represents a signal flow. The left side of the arrow denotes a signal source output from the EXT-2 terminal.

#### EXT-1/EXT-3/EXT-4:

The output signal of the device connected to an EXT terminal passes through the TV and is output from the EXT-2 terminal.

**TV:**

The picture and sound of the TV channel you are currently viewing are output from the EXT-2 terminal.

---

- During dubbing, you cannot turn off the TV. Turning off the TV also turns off the output from the EXT-2 terminal.
  - When you choose an EXT terminal as an output, you can view a TV programme or a picture from the other EXT terminal while dubbing the picture from a device connected to the EXT terminal onto a VCR connected to the EXT-2 terminal.
  - The RGB signals from the TV games cannot be output. Teletext programmes cannot be output.
-

# Additional preparation

## Connecting the external devices


Connect the devices to the TV, paying attention to the following connection diagram.

### Before connecting anything:


- Read the manuals provided with the devices. Depending on the devices, the connection method may differ from the figure. In addition, the device settings may be changed depending on the connection method to secure proper operation.
- Turn off all the devices including the TV.
- The “Specifications” on page 44 contains the details of the EXT terminals. If you are connecting a device not listed in the following connection diagram, see the table to choose the best EXT terminal.
- Note that connecting cables are not supplied.
- If the VCR’s audio output is in mono, connect the VCR’s AUDIO OUT (audio output) terminal and the TV’s EXT-4 AUDIO L/MONO terminal with an audio cable.

- ① VCR (composite signal)
- ② VCR (composite signal/S-VIDEO signal)
- ③ T-V LINK compatible VCR (composite signal/S-VIDEO signal)
- ④ Decoder
- ⑤ DVD player (composite signal/S-VIDEO signal)
- ⑥ DVD player (composite signal/RGB signal)
- ⑦ TV game (composite signal/RGB signal)
- ⑧ TV game (composite signal/S-VIDEO signal)
- ⑨ Headphones
- ⑩ Camcorder (composite signal/S-VIDEO signal)
- ⑪ SCART cable
- ⑫ Audio cable
- ⑬ Video cable
- ⑭ S-VIDEO cable

Side of the TV

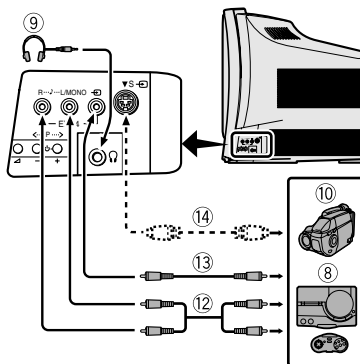

Back of the TV

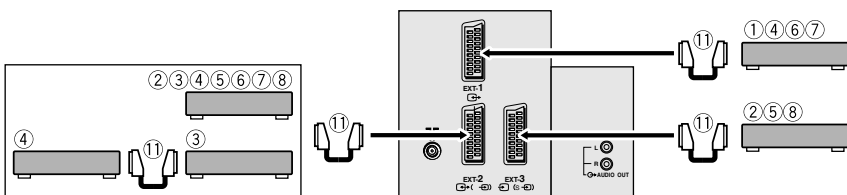

■ **Devices which can output the S-VIDEO signal (Y/C signal) such as a S-VHS VCR**

Connect the device to an EXT terminal other than the EXT-1 terminal.

You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details of how to operate the device, see "S-IN (S-VIDEO input)" on page 34.

■ **T-V LINK compatible VCR**

Be sure to connect the T-V LINK compatible VCR to the EXT-2 terminal. If not, the T-V LINK function will not work properly.

- When connecting a T-V LINK compatible VCR to the EXT-2 terminal, be sure to connect the Decoder to the VCR. If not, the T-V LINK function may not work properly. After you have registered TV channels to the Programme numbers (PR), set the DECODER (EXT-2) function for the Programme number (PR) to ON in order to unscramble a scrambled TV channel. For details of operation, see "DECODER (EXT-2)" on page 33.

■ **Connecting headphones**

Connect the headphones with a stereo mini-jack (of 3.5 mm in diameter) to the headphone jack at the TV rear panel.

- When you connect the headphones, the TV speakers issue no sound.

■ **Video/sound signal output from the EXT-2 terminal**

You can arbitrarily change over the output of the video/sound signal from the EXT-2 terminal. It is useful when you want to dub the video/sound from another device on the VCR connected to the EXT-2 terminal. For details on how to do this operation, see "DUBBING" on page 35.

■ **TV output from the EXT-1 terminal**

The output of video/sound signal of a TV channel you are currently viewing is always output from the EXT-1 terminal.

- Changing over a Programme number (PR) also changes over the TV output from the EXT-1 terminal.
- The video/sound signal from an EXT terminal cannot be output.
- Teletext programmes cannot be output.

■ **Connecting Speakers/Amplifier**


While referring to the Audio equipment connection diagram, connect the audio equipment you desire to the TV.

You can use external front speakers to listen to the TV sound instead of the TV speakers.

**Before connecting anything:**

- Read the manuals provided with the amplifier and speakers.
- Turn the TV and Amplifier off.
- To prevent magnetism from the speakers adversely effecting the TV screen, use magnetic-shielded speakers for the front speakers.
- Note that connecting cables are not supplied.

Back of the TV

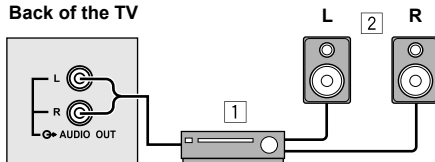

- 1 Amplifier
- 2 Front speakers (Magnetic-shielded type)

- The output from the AUDIO OUT terminal is not interrupted by headphone connection to the TV. You cannot cut the sound from the front speaker even if you connect a headphone to the TV.
- Adjust the volume of the external speakers with the amplifier.

# CH/CC numbers

When you want to use the INSERT function on page 30, find the CH/CC number corresponding to the Channel number of the TV channel from this table.

CH	Channel	CH	Channel	CC	Channel	CC	Channel
CH 02 / CH 202	E2, R1	CH 40 / CH 240	E40, R40	CC 01 / CC 201	S1	CC 31 / CC 231	S31
CH 03 / CH 203	E3, ITALY A	CH 41 / CH 241	E41, R41	CC 02 / CC 202	S2	CC 32 / CC 232	S32
CH 04 / CH 204	E4, ITALY B, R2	CH 42 / CH 242	E42, R42	CC 03 / CC 203	S3	CC 33 / CC 233	S33
CH 05 / CH 205	E5, ITALY D, R6	CH 43 / CH 243	E43, R43	CC 04 / CC 204	S4	CC 34 / CC 234	S34
CH 06 / CH 206	E6, ITALY E, R7	CH 44 / CH 244	E44, R44	CC 05 / CC 205	S5	CC 35 / CC 235	S35
CH 07 / CH 207	E7, ITALY F, R8	CH 45 / CH 245	E45, R45	CC 06 / CC 206	S6	CC 36 / CC 236	S36
CH 08 / CH 208	E8, R9	CH 46 / CH 246	E46, R46	CC 07 / CC 207	S7	CC 37 / CC 237	S37
CH 09 / CH 209	E9, ITALY G	CH 47 / CH 247	E47, R47	CC 08 / CC 208	S8	CC 38 / CC 238	S38
CH 10 / CH 210	E10, ITALY H, R10	CH 48 / CH 248	E48, R48	CC 09 / CC 209	S9	CC 39 / CC 239	S39
CH 11 / CH 211	E11, ITALY H+1, R11	CH 49 / CH 249	E49, R49	CC 10 / CC 210	S10	CC 40 / CC 240	S40
CH 12 / CH 212	E12, ITALY H+2, R12	CH 50 / CH 250	E50, R50	CC 11 / CC 211	S11	CC 41 / CC 241	S41
CH 21 / CH 221	E21, R21	CH 51 / CH 251	E51, R51	CC 12 / CC 212	S12	CC 75 / CC 275	X
CH 22 / CH 222	E22, R22	CH 52 / CH 252	E52, R52	CC 13 / CC 213	S13	CC 76 / CC 276	Y, R3
CH 23 / CH 223	E23, R23	CH 53 / CH 253	E53, R53	CC 14 / CC 214	S14	CC 77 / CC 277	Z, ITALY C, R4
CH 24 / CH 224	E24, R24	CH 54 / CH 254	E54, R54	CC 15 / CC 215	S15	CC 78 / CC 278	Z+1, R5
CH 25 / CH 225	E25, R25	CH 55 / CH 255	E55, R55	CC 16 / CC 216	S16	CC 79 / CC 279	Z+2
CH 26 / CH 226	E26, R26	CH 56 / CH 256	E56, R56	CC 17 / CC 217	S17		
CH 27 / CH 227	E27, R27	CH 57 / CH 257	E57, R57	CC 18 / CC 218	S18		
CH 28 / CH 228	E28, R28	CH 58 / CH 258	E58, R58	CC 19 / CC 219	S19		
CH 29 / CH 229	E29, R29	CH 59 / CH 259	E59, R59	CC 20 / CC 220	S20		
CH 30 / CH 230	E30, R30	CH 60 / CH 260	E60, R60	CC 21 / CC 221	S21		
CH 31 / CH 231	E31, R31	CH 61 / CH 261	E61, R61	CC 22 / CC 222	S22		
CH 32 / CH 232	E32, R32	CH 62 / CH 262	E62, R62	CC 23 / CC 223	S23		
CH 33 / CH 233	E33, R33	CH 63 / CH 263	E63, R63	CC 24 / CC 224	S24		
CH 34 / CH 234	E34, R34	CH 64 / CH 264	E64, R64	CC 25 / CC 225	S25		
CH 35 / CH 235	E35, R35	CH 65 / CH 265	E65, R65	CC 26 / CC 226	S26		
CH 36 / CH 236	E36, R36	CH 66 / CH 266	E66, R66	CC 27 / CC 227	S27		
CH 37 / CH 237	E37, R37	CH 67 / CH 267	E67, R67	CC 28 / CC 228	S28		
CH 38 / CH 238	E38, R38	CH 68 / CH 268	E68, R68	CC 29 / CC 229	S29		
CH 39 / CH 239	E39, R39	CH 69 / CH 269	E69, R69	CC 30 / CC 230	S30		

CH	Channel	CH	Channel	CC	Frequency (MHz)	CC	Frequency (MHz)
CH 102	F2	CH 141	F41	CC 110	116 - 124	CC 152	391 - 399
CH 103	F3	CH 142	F42	CC 111	124 - 132	CC 153	399 - 407
CH 104	F4	CH 143	F43	CC 112	132 - 140	CC 154	407 - 415
CH 105	F5	CH 144	F44	CC 113	140 - 148	CC 155	415 - 423
CH 106	F6	CH 145	F45	CC 114	148 - 156	CC 156	423 - 431
CH 107	F7	CH 146	F46	CC 115	156 - 164	CC 157	431 - 439
CH 108	F8	CH 147	F47	CC 116	164 - 172	CC 158	439 - 447
CH 109	F9	CH 148	F48	CC 117	220 - 228	CC 159	447 - 455
CH 110	F10	CH 149	F49	CC 124	228 - 236	CC 160	455 - 463
CH 121	F21	CH 150	F50	CC 125	236 - 244	CC 161	463 - 469
CH 122	F22	CH 151	F51	CC 126	244 - 252		
CH 123	F23	CH 152	F52	CC 127	252 - 260		
CH 124	F24	CH 153	F53	CC 128	260 - 268		
CH 125	F25	CH 154	F54	CC 129	268 - 276		
CH 126	F26	CH 155	F55	CC 130	276 - 284		
CH 127	F27	CH 156	F56	CC 131	284 - 292		
CH 128	F28	CH 157	F57	CC 132	292 - 300		
CH 129	F29	CH 158	F58	CC 133	300 - 306		
CH 130	F30	CH 159	F59	CC 141	306 - 311		
CH 131	F31	CH 160	F60	CC 142	311 - 319		
CH 132	F32	CH 161	F61	CC 143	319 - 327		
CH 133	F33	CH 162	F62	CC 144	327 - 335		
CH 134	F34	CH 163	F63	CC 145	335 - 343		
CH 135	F35	CH 164	F64	CC 146	343 - 351		
CH 136	F36	CH 165	F65	CC 147	351 - 359		
CH 137	F37	CH 166	F66	CC 148	359 - 367		
CH 138	F38	CH 167	F67	CC 149	367 - 375		
CH 139	F39	CH 168	F68	CC 150	375 - 383		
CH 140	F40	CH 169	F69	CC 151	383 - 391		



- When two CH/CC numbers correspond to one Channel number, choose either one according to the current COUNTRY setting. When the COUNTRY setting is other than FRANCE, choose a two-digit CH/CC number. When the COUNTRY setting is FRANCE, choose a three-digit CH/CC number.
  - Find the CH/CC number (CC110 to CC161) corresponding to the TV channel (SECAM-L system) from a French cable TV station, based on the broadcast frequency of the TV channel. When you do not know the broadcast frequency, please contact the cable TV station.
  - The CH/CC numbers of CH102-CH169 and CC110-CC161 correspond to the TV channels being broadcast by a SECAM-L system. The other CH/CC numbers correspond to the TV channels being broadcast by a method other than a SECAM-L system.
-

# Troubleshooting

If a problem arises while you are using the TV, please read this “Troubleshooting” well before you request having the TV repaired. You may be able to fix it easily by yourself. For example, if the AC plug is disconnected from the AC outlet, or the TV aerial has problems, you may think there is a problem with the TV itself.

## Important:

- This Troubleshooting guide only covers problems whose cause are not easy to determine. If a question arise when you are operating a function, read the page(s) corresponding to the operation of the function well, not this Troubleshooting guide.
- After you have followed the Troubleshooting description or the operating description of the functions concerned without any success, remove the AC plug from the AC outlet and request a repair of your TV. Do not attempt to repair the TV by yourself or remove the rear cover of the TV.

## ■ If you cannot turn on the TV

- Is the AC plug connected to the AC outlet?
- Is the Power lamp lit? If not, press the Main power button.

## ■ No picture/No sound

- Have you chosen a TV channel whose reception is extremely bad? In this case, the BLUE BACK function will be activated, the entire screen becomes blue, and the sound is muted. In spite of this, if you want to view the TV channel, follow the description “BLUE BACK” on page 27 to try to change the BLUE BACK function setting to OFF.
- Have you connected the headphones to the TV? Connecting the headphones to the TV causes sounds not to be issued from the TV speakers.
- If the SYSTEM setting for a TV channel is incorrect, it may prevent the sound from being issued. Follow the description “EDIT/MANUAL” on page 28 to use the MANUAL function to try to change the SYSTEM setting.

## ■ Poor picture

- If noise totally obscures the picture (snow), the aerial or aerial cable may have trouble. Check the following to try to solve the trouble:
  - Has the TV and aerial been connected properly?
  - Has the aerial cable been damaged?
  - Is the aerial pointed to the right direction?
  - Is the aerial itself faulty?
- If the TV or aerial receives interference from the other devices, stripes or noise may appear in the picture. Move such devices as an amplifier, personal computer, or a hair drier that can cause interference away from your TV, or try changing its location. If the aerial suffers interference from a radio tower or high-voltage wire, please contact your local dealer.
- If the TV receives interference from signal reflecting from mountains or building, double-pictures (ghosting) will occur. Try to change the aerial’s direction or replace the antenna with the one with better directionality.
- Are your COLOUR SYSTEM settings for the TV channels correct? Follow the description “COLOUR SYSTEM” on page 22 to try to solve the trouble.

- Have the COLOUR and BRIGHT settings been adjusted properly? Follow the description “BRIGHT” and “COLOUR” on page 21 to try to adjust them properly.
- Videotaping teletext is not recommended because it may not record correctly.
- When a white and bright still image (such as a white dress) is displayed on the screen, the white part may look as if it were coloured. It is a phenomenon unavoidable due to the nature of the picture tube itself, and not due to a TV failure. When the picture disappears from the screen, the unnatural colours will also disappear.
- When viewing images from commercially available video software products, or videos from videotapes which have been recorded improperly, the top of the image may be distorted. This is due to the condition of the video signal, and not because of malfunction.

### ■ Poor sound

- Have you adjusted BASS or TREBLE properly? If not, follow the description “BASS” or “TREBLE” on page 24.

When the TV channel reception is poor, it can be hard to hear the stereo or bilingual sound. In this case, follow the description “STEREO / I • II” on page 24 to hear the sound more easily by changing it to a mono sound.

### ■ Operation disabled

- Have the batteries of the remote control become exhausted? Follow the description “Putting the batteries into the Remote control” on page 5 and replace them with new batteries to try to solve the problem.
- Have you attempted to use the remote control at the sides or rear of the TV or at a location more than seven meters apart from the TV location? Operate the remote control in the front of your TV or a location less than seven meters from your TV to try to solve the problem.
- When you are viewing a teletext programme, you cannot operate the menus. Press the **TV** button to return the teletext programme to the ordinary TV programme to try operating the menus.
- If the TV operation becomes disabled suddenly, press the Main power button on the TV and turn off the main power. Try to press the Main power button again to turn on the main power. If the TV returns to a normal state, it is not a failure.

### ■ Other concerns

- When the SLEEP TIMER function operates, the TV is automatically turned off. If the TV is turned off suddenly, try to press the  $\odot/|$  (Standby) button to turn on the TV once again. At this time, if the TV resumes a normal state, there is no problem.
- When a WSS signal is included in the broadcast signal or the signal from an external device, or when the TV is receiving a control signal from an external device, the ZOOM mode will change automatically. When you want to return to the previous ZOOM mode, press the **ZOOM** button to choose the ZOOM mode again.

- If you bring a magnetised device such as a speaker near to your TV, a picture may be warped or unnatural colours appear at the corners of the screen. In this case, keep the device apart from your TV. If the speakers causes such phenomena, use the magnetic-shielded speakers instead.
- A picture may be tilted due to the influence of the earth's magnetism. In this case, use the "PICTURE TILT" on page 32 to complete the tilt.
- It takes a short period of time from the time an operation such as changing channels is performed until an image is displayed. This is not a malfunction. This is the time required for the image to stabilize before it can be displayed.
- The TV may emit a crackling sound due to a sudden change in temperature. It does not matter if a picture or sound does not show any abnormality. If you hear crackling sounds frequently while you are viewing the TV, other causes may be assumed. For precautionary purposes, request your service technician to inspect it.
- Touching the screen may cause you feel a slight electric shock due to its static electricity. It is an unavoidable phenomenon due to the construction of the picture tube. It is not a problem with the TV. You can rest assured that this static discharge does not have harmful influence over the human body.
- When a menu is displayed on the screen, the ZOOM mode may be automatically changed to the FULL mode. This is not a malfunction. When the menu disappears, the ZOOM mode will return to the previously set ZOOM mode.

# Specifications

Model	AV-32H5SU/AV-32H5BU	AV-28H5SU/AV-28H5BU AV-28H5SL/AV-28H5BL
Broadcasting systems	CCIR B/G, I, D/K, L	
Colour systems	PAL, SECAM • The EXT terminals also support the NTSC 3.58/4.43 MHz system.	
Channels and frequencies	<ul style="list-style-type: none"> <li>• E2-E12, E21-E69, S1-S41, X, Y, Z, Z+1, Z+2, ITALY A-H, ITALY H+1, ITALY H+2, F2-F10, F21-F69, R1-R12, R21-R69</li> <li>• French cable TV channel of broadcast frequencies 116 - 172 MHz and 220 - 469 MHz</li> </ul>	
Sound-multiplex systems	A2 (B/G, D/K), NICAM (B/G, I, D/K, L) system	
Teletext systems	FLOF (Fastext), TOP, WST (World Standard System)	
Power requirements	220 - 240 V AC, 50 Hz	
Power consumption	130 W, Standby: 0.6 W	120 W, Standby: 0.6 W
Picture tube size	Viewable area 76 cm (measured diagonally)	Viewable area 66 cm (measured diagonally)
Audio output	Rated Power output: 10 W + 10 W	
Speakers	(13 cm × 6.5 cm) oval × 2	
EXT-1 terminal	Euroconnector (21-pin, SCART) • Video input, Audio L/R inputs and RGB inputs are available. • TV broadcast outputs (Video and Audio L/R) are available.	
EXT-2 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input, Audio L/R inputs and RGB inputs are available. • Video and Audio L/R outputs are available. • T-V LINK functions are available.	
EXT-3 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.	
EXT-4 terminal	RCA connectors × 3 S-VIDEO connector × 1 • Video input, S-VIDEO (Y/C) input, Audio L/MONO and R inputs are available.	
AUDIO OUT terminal	RCA connectors × 2 • Audio L/R outputs are available.	
Headphone jack	Stereo mini-jack (3.5 mm in diameter)	
Dimensions (W × H × D)	864 mm × 587 mm × 550 mm	762 mm × 528 mm × 492 mm
Weight	53.0 kg	38.0 kg
Accessories	Remote control unit × 1 (RM-C1502, Grey or Black) AA/R6 dry cell battery × 2	

## Design and specifications subject to change without notice.

Pictures displayed on the screen using this TV's ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this constitutes an infringement of copyright.

# JVC

# JVC



ENGLISH   
DEUTSCH   
FRANÇAIS   
NEDERLANDS   
CASTELLANO   
ITALIANO   
PORTUGUÊS 

## AV-32H50SU AV-28H50SU AV-32H57SU

**T-V LINK**

**COLOUR TELEVISION**

**INSTRUCTIONS**

**FARBFERNSEHGERÄT**

**BEDIENUNGSANLEITUNG**

**TELEVISEUR COULEUR**

**MANUEL D'INSTRUCTIONS**

**KLEURENTELEVISIE**

**GEBRUIKSAANWIJZING**

**TELEVISOR A COLOR**

**MANUAL DE INSTRUCCIONES**

**TELEVISORE A COLORI**

**ISTRUZIONI**

**TELEVISOR A CORES**

**INSTRUÇÕES**



Thank you for buying this JVC colour television.

To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**CAUTION:**


- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.
- Avoid damaging the AC plug and power cord.
- When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.

**Distance recommendations**

Avoid improper installation and never position the unit where good ventilation is impossible.

When installing this TV, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture.

Keep to the minimum distance guidelines shown for safe operation.

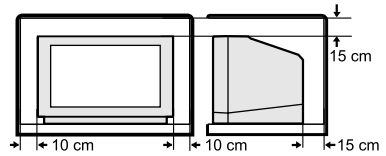

**Failure to take the following precautions may result in damage to the TV or remote control.**

**DO NOT block the TV's ventilation openings or holes.**

(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)

**DO NOT place anything on top of the TV.**

(such as cosmetics or medicines, flower vases, potted plants, cups, etc.)

**DO NOT allow objects or liquid into the cabinet openings.**

(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

**DO NOT place any naked flame sources, such as lighted candles, on the TV.**

The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it hard. Never use any cleaner or detergent on it.

In the event of a fault, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.



# CONTENTS

---

<b>Setting up your TV .....</b>	<b>3</b>	<b>PICTURE menu .....</b>	<b>20</b>
Connecting the aerial and VCR .....	3	PICTURE MODE.....	20
Connecting the power cord to the AC outlet.....	4	CONTRAST .....	20
Putting the batteries into the Remote control.....	4	BRIGHT.....	20
Initial settings .....	4	SHARP.....	20
T-V LINK FUNCTIONS .....	8	COLOUR.....	20
<b>TV buttons and functions .....</b>	<b>9</b>	HUE.....	20
Turn the Main power on .....	10	COLOUR TEMP.....	20
Turn the TV on from standby mode .....	10	FEATURES .....	21
Choose a TV channel .....	10	<b>SOUND menu .....</b>	<b>23</b>
Adjust the volume .....	10	STEREO / I • II .....	23
<b>Remote control buttons and functions.....</b>	<b>11</b>	BASS.....	23
Turn the TV on or off from standby mode ..	11	TREBLE .....	23
Choose a TV channel .....	11	BALANCE .....	23
Watch images from external devices .....	12	HYPER SOUND.....	23
Adjust the volume .....	13	<b>FEATURES menu.....</b>	<b>24</b>
Displaying the current time .....	13	SLEEP TIMER .....	24
ZOOM function.....	14	CHILD LOCK.....	24
HYPER SOUND function .....	15	BLUE BACK.....	26
Return to TV channel instantly.....	15	<b>SET UP menu .....</b>	<b>27</b>
Operating a JVC brand VCR or DVD player.....	15	AUTO PROGRAM.....	27
<b>Teletext function .....</b>	<b>16</b>	EDIT/MANUAL .....	27
Basic operation .....	16	LANGUAGE .....	31
Using the List Mode .....	16	PICTURE TILT .....	31
Hold.....	17	DECODER (EXT-2).....	32
Sub-page .....	17	EXT SETTING.....	33
Reveal.....	17	<b>Additional preparation .....</b>	<b>36</b>
Size .....	17	Connecting the external devices .....	36
Index .....	17	<b>CH/CC numbers .....</b>	<b>38</b>
Cancel.....	18	<b>Troubleshooting .....</b>	<b>40</b>
<b>Using the TV's menu.....</b>	<b>19</b>	<b>Specifications .....</b>	<b>43</b>
Basic operation .....	19		

# Setting up your TV

## Caution

- Turn off all the equipment including the TV before connecting anything.

## Connecting the aerial and VCR


- The connecting cables are not provided.
- For further details, refer to the manuals provided with the devices to be connected.

- If connecting a VCR, follow ① → ② → ③.


- If not connecting a VCR, follow ①.

To operate T-V LINK functions, a T-V LINK compatible VCR must be connected to the EXT-2 terminal on the TV. For details about T-V LINK functions, see “T-V LINK FUNCTIONS” on page 8.

- A video can be viewed from the VCR without performing ③. For details, refer to your VCR instruction manual.
- To connect additional external devices, please see “Additional preparation” on page 36.
- To connect speakers and amplifier, please see “Connecting Speakers/Amplifier” on page 37.
- When a decoder is connected to a T-V LINK compatible VCR, set the DECODER (EXT-2) function to ON. For details, see “DECODER (EXT-2)” on page 32. Otherwise, you will not be able to view scrambled channels.

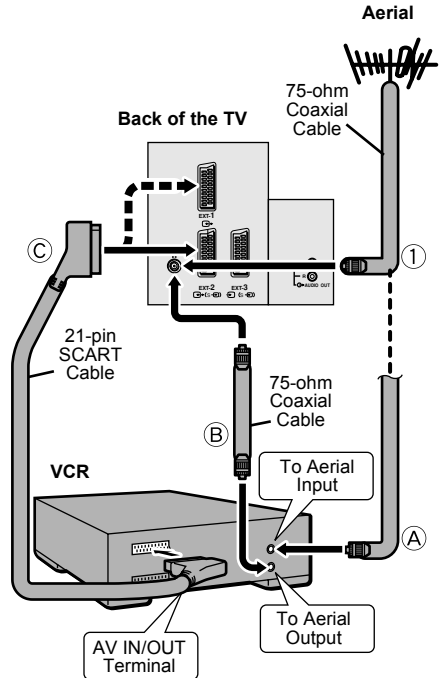

## ■ Rear Panel

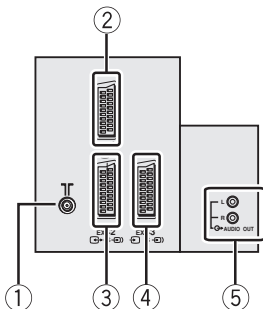


- ① Aerial socket (3)
- ② EXT-1 terminal (3, 33, 36)
- ③ EXT-2 terminal (3, 8, 33, 36)
- ④ EXT-3 terminal (33, 36)
- ⑤ AUDIO OUT terminal (37)

## Connecting the power cord to the AC outlet


### Caution

- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.

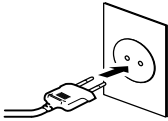

## Putting the batteries into the Remote control


Use two AA/R6 dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

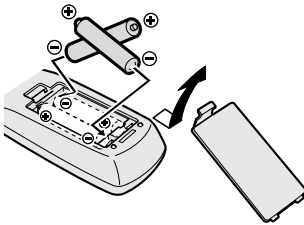

- Follow the warnings printed on the batteries.
- Battery life is about six months to one year, depending on your frequency of use.
- The batteries we supply are only for setting up and testing your TV, please replace them as soon as necessary.
- If the remote control does not work properly, replace the batteries.


## Initial settings

When the TV is first turned on, it enters the initial setting mode, and the JVC logo is displayed. Follow the instructions on the on-screen display to make the initial settings.

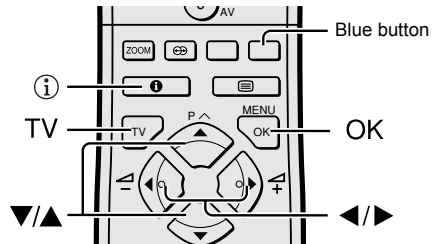

### 1 Press the Main power button on the TV

The Power lamp lights, and the JVC logo is displayed.

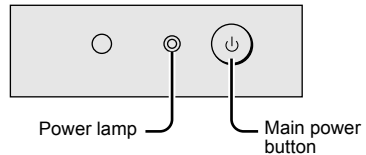

- The JVC logo does not appear when your TV has been turned on once. In this case, use the “LANGUAGE” and “AUTO PROGRAM” functions to make the initial settings. For details, see “SET UP menu” on page 27.

**2 Press the OK button**

The LANGUAGE menu appears.




D0002(E)-EN

**3 Press the ◀/▶ and ▼/▲ buttons to choose ENGLISH. Then press the OK button**

English is set for the on-screen display description. The COUNTRY menu appears as a sub-menu of the AUTO PROGRAM function.

There are two COUNTRY menus. Pressing the yellow button changes the COUNTRY menu as follows:

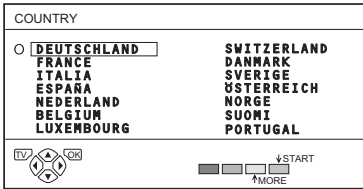


D0003-EN

**4 Press the ◀/▶ and ▼/▲ buttons to choose the country where you are now located**

**5 Press the blue button to start the AUTO PROGRAM function**

The AUTO PROGRAM menu appears and received TV channels are automatically registered in the Programme numbers (PR).

- To cancel the AUTO PROGRAM function:  
Press the **TV** button.

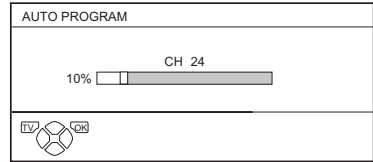


D0004-EN




**After the TV channels have been registered in the Programme numbers (PR), the EDIT menu appears**

- You can proceed to edit the Programme numbers (PR) using the EDIT/MANUAL function. For details, see “EDIT/MANUAL” on page 27.
- If you do not need to use the EDIT/MANUAL function, go to the next step.

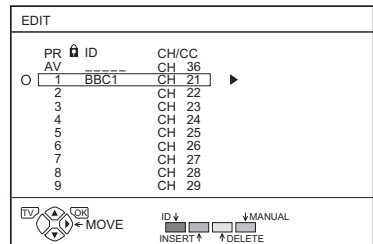

D0038-EN

**6 Press the OK button to display the T-V LINK menu**

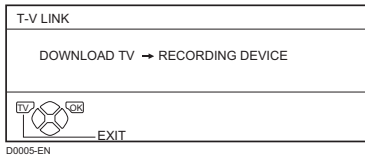

**7 If you do not have a T-V LINK compatible VCR connected:**

Press the **TV** button to exit the T-V LINK menu.

The T-V LINK menu disappears.

**If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:**

Follow the operating procedure “Downloading the data to VCR” on page 7 to transmit the Programme number (PR) data.

**Now, the initial settings are complete, and you can watch the TV**

- When your TV can detect the TV channel name from the TV channel broadcast signal, it automatically registers the TV channel name (ID) to the Programme number (PR) in which the TV channel has been registered.
- If a TV channel you want to view is not set to a Programme number (PR), manually set it using the **MANUAL** function. For details, see “EDIT/MANUAL” on page 27.
- The TV channel is not registered in Programme number PR 0 (AV). When you want to register a TV channel to PR 0 (AV), manually set it using the **MANUAL** function. For details, see “EDIT/MANUAL” on page 27.

**■ ACI function**

This TV has an ACI function which decodes the ACI (automatic Channel Installation) data.

Using the ACI function allows all TV channels transmitted from the cable TV station to be properly registered quickly according to the data from the cable TV station.

**Caution**

- If your cable TV station broadcasts ACI data and if “ACI START/ACI SKIP” appears in the **AUTO PROGRAM** menu, the ACI function is enabled. In all other cases, it is disabled.

**1 Press the ▼/▲ buttons to choose ACI START. Then press the OK button to start the ACI function**

**When you don't want to use the ACI function:**

Press the ▼/▲ buttons to choose ACI SKIP and then press the **OK** button.

**If the AUTO PROGRAM menu changes to another menu:**

Depending on your cable TV station, there may be a broadcast selection menu set up by the cable TV station.

Follow the menu indications and use the ◀/▶ and ▼/▲ buttons to operate the menu. After you have made the setting, press the **OK** button.

**If “ACI ERROR” is displayed in the AUTO PROGRAM menu:**

“ACI ERROR” denotes that the ACI function is not working properly. Press the **OK** button to start the ACI function again.

If “ACI ERROR” still appears even after you have tried to start the ACI function several times, press the ▶ button to start the **AUTO PROGRAM** function. It does not cause any problem because all the TV channels are registered to the Programme numbers (PR) by the **AUTO PROGRAM** function.

## 2 When the settings are completed, the EDIT menu is displayed. Return to the instructions that you were reading before, and continue the operation

### When the “Initial settings” has been made:

Return to step 6 of “Initial settings” on page 4.

### When the “AUTO PROGRAM” has been made:

Return to step 6 of “Initial settings” on page 4.


- If you have any questions about the items in the Broadcast Selection menu or how to operate the menu, please contact your cable TV station.
- When the cable TV broadcast reception is poor, the ACI function will not work properly.
- If there is an error in the ACI data itself, the TV channel cannot be registered properly. If this happens, turn the ACI function off (ACI SKIP) and use the AUTO PROGRAM function. Alternatively, use the EDIT/MANUAL function to correct the Programme number (PR) setting.

## ■ Downloading the data to VCR

You can transmit to the latest Programme numbers (PR) data to the VCR with the T-V LINK function.

### Caution

- Only when the T-V LINK compatible VCR is connected to the EXT-2 terminal, this operation is enabled.
- Only when the T-V LINK menu is being displayed, this operation is enabled.

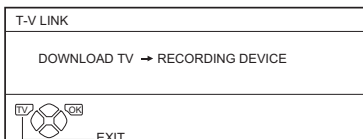

D0006-EN

## 1 Turn on the VCR

### 2 Press the OK button

The data transmission begins.



D0037-EN

The T-V LINK menu disappears once the data transmission ends.

### When the T-V LINK menu is changed over to another menu:

The menu operation at the TV side is completed and it is shifted to the menu operation at the VCR side. Refer to the VCR Instruction Manual and operate the VCR.

If “FEATURE NOT AVAILABLE” appears at the T-V LINK menu, ensure the following three items are correct; then press the **OK** button to retry data transmission.

- Has the T-V LINK compatible VCR been connected to the EXT-2 terminal?
- Has the VCR power been turned on?
- Does the SCART cable that is connected to the EXT-2 terminal to T-V LINK compatible VCR have all proper connections?

---

## T-V LINK FUNCTIONS

---

When a T-V LINK compatible VCR is connected to the EXT-2 Terminal on the TV, it is easier to set up the VCR and to view videos. T-V LINK uses the following features:

### To use T-V LINK functions:

A T-V LINK compatible VCR is necessary. The VCR must be connected to the EXT-2 terminal on the TV by a fully wired SCART cable.

---

A "T-V LINK compatible VCR" means a JVC VCR with the T-V LINK logo or a VCR with one of the following logos. However, these VCRs may support some or all of the features described below. For details, refer to your VCR instruction manual.

"Q-LINK" (a trademark of Panasonic Corporation)

"Data Logic" (a trademark of Metz Corporation)

"Easy Link" (a trademark of Phillips Corporation)

"Megalogic" (a trademark of Grundig Corporation)

"SMARTLINK" (a trademark of Sony Corporation)

---

### ■ Pre-set Download

Download the registered data on the TV channels from the TV to the VCR.

The Preset Download function automatically begins when the initial setting is complete or whenever the AUTO PROGRAM or EDIT/MANUAL operations are performed.

- This function can be operated via VCR operation.

### When "FEATURE NOT AVAILABLE" is displayed:

If "FEATURE NOT AVAILABLE" is displayed, the download was not performed correctly. Before trying to download again, ensure the following:

- The VCR power is turned on.
- The VCR is T-V LINK compatible.
- The VCR is connected to the EXT-2 terminal.
- The SCART cable is fully wired.

### ■ Direct Rec

"What You See Is What You Record"

You can record to VCR the images that you are currently viewing on TV by a simple operation. For details, read the manual for your VCR. Operate via the VCR. "VCR IS RECORDING" is displayed.

### In the following conditions, the VCR will stop recording if the TV is turned off, if the TV channel or input is switched, or if the menu is displayed on the TV:

- When recording images from an external device connected to the TV.
  - When recording a TV channel after it has been unscrambled on a decoder.
  - When recording a TV channel by using the TV's output because that TV channel cannot be properly received on the VCR's tuner.
  - When the VCR is not ready (for example, when there is no tape inserted), "NO RECORDING" is displayed.
- 

- Operation via the TV is not possible.
  - Generally, the VCR cannot record a TV channel that cannot be received properly by the VCR's tuner, even though you can view that TV channel on the TV. However, some VCRs can record a TV channel by using the TV's output if that channel can be viewed on the TV, even though the TV channel cannot be received properly by the VCR's tuner. For details, refer to your VCR instruction manual.
- 


### ■ TV Auto Power On/VCR Image View

When the VCR starts playing, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen. When the VCR menu is operated, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen.



- This function does not operate if your TV's main power is turned off. Set your TV's main power to on (standby mode).

# TV buttons and functions


AV-32H50SU/AV-28H50SU

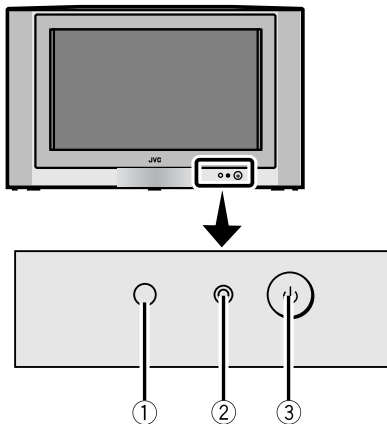

AV-32H57SU

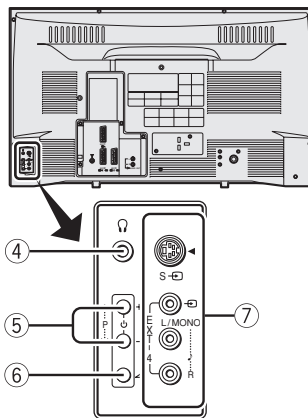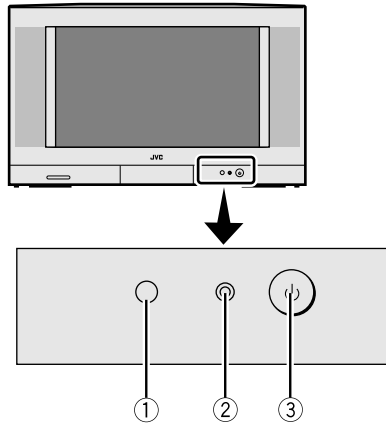

Refer to the pages in parentheses for details.

- ① Remote control sensor
- ② Power lamp (4, 10)
- ③ Main power button (4, 10)
- ④ Headphone jack (mini jack) (36)
- ⑤ P V/∧ buttons/ -/+ buttons (10)
- ⑥  (Volume) button (10)
- ⑦ EXT-4 terminal (33, 36)



---

## Turn the Main power on

---

**Press the Main power button on the TV.**

The Power lamp lights red and your TV is in the standby mode.

**To turn the Main power off:**

Press the Main power button again.

The Power lamp goes off.

### Caution

- The main power button on the TV does not fully isolate the TV from the AC supply. If you are not going to use this TV for a long period of time, be sure to disconnect the AC plug from the AC socket.

---

## Turn the TV on from standby mode

---

**Press the P  $\nabla/\wedge$  buttons to turn the TV on from standby mode**

When the TV is turned on, the power lamp dims slightly.

---

## Choose a TV channel


---

**Press the P  $\nabla/\wedge$  buttons to choose a programme number (PR) or an EXT terminal**

---

## Adjust the volume


---

**1 Press the  (Volume) button**

The volume level indicator appears.

**2 Press the  $-/+$  buttons while the volume level indicator is displayed**

# Remote control buttons and functions

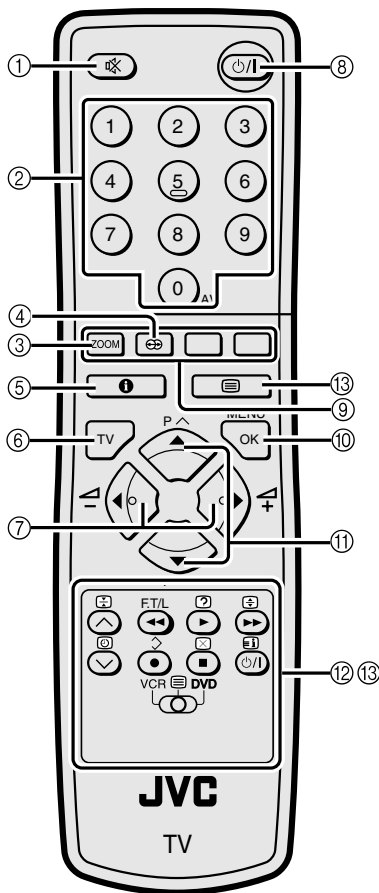

- ① Muting button
- ② Number buttons
- ③ **ZOOM** button
- ④ (hyper sound) button
- ⑤ Information button
- ⑥ **TV** button
- ⑦ buttons
- ⑧ (standby) button
- ⑨ Colour buttons
- ⑩ **OK** button
- ⑪ buttons
- ⑫ VCR/DVD/Teletext control button
- ⑬ VCR DVD switch (text) button

## Turn the TV on or off from standby mode

**Press the (standby) button to turn the TV on or off.**

When the TV is turned on, the power lamp dims slightly.

- The power can be turned on by pressing the **TV** button, buttons or Number buttons.

## Choose a TV channel

- **Use the number buttons:**  
**Enter the programme number (PR) of the channel using the number buttons.**

Example:


- PR 6 → press **6**
- PR 12 → press **1** and **2**

- Use the ▼/▲ buttons:  
Press the ▼/▲ buttons to choose the programme number (PR) you want.

■ Use the PR LIST:

1 Press the ⓘ (Information) button to display the PR LIST

Pressing the ⓘ (Information) button changes the display as follows:

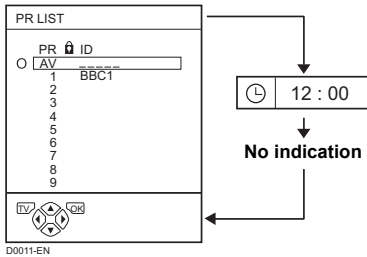


2 Press the ◀/▶ and ▼/▲ buttons to choose a Programme number (PR). Then press the OK button

- For Programme numbers (PR) with the CHILD LOCK function set, the ⓘ (CHILD LOCK) mark is displayed next to the Programme number (PR) in the PR LIST.
- Even if you try to choose a Programme number (PR) with the CHILD LOCK function set, the ⓘ (CHILD LOCK) mark will appear, and you cannot watch the TV channel. To watch the TV channel, see “CHILD LOCK” on page 24.
- If the picture is tilted, correct it. See “PICTURE TILT” on page 31.

## Watch images from external devices

- Use the 0 (AV) button:  
Press the 0 (AV) button to choose an EXT terminal.

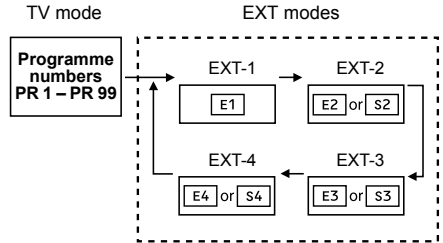

- Use the ▼/▲ buttons:  
Press the ▼/▲ buttons to choose an EXT terminal.

■ Use the PR LIST:

1 Press the ⓘ (Information) button to display the PR LIST

2 Press the ◀/▶ and ▼/▲ buttons to choose an EXT terminal. Then press the OK button

- The EXT terminals are registered after the Programme number PR 99.
- You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details, see “S-IN (S-VIDEO input)” on page 33.
- If you do not have a clear picture or no colour appears, change the colour system manually. See “COLOUR SYSTEM” on page 21.
- If you choose an EXT terminal with no input signal, the EXT terminal number becomes fixed on the screen.
- This TV set has a function which can automatically change over the input according to a special signal output from an external device. (The EXT-4 terminal does not support it.)


**To return to a TV channel:**

Press the **TV** button, the **▼/▲** buttons or the Number buttons.

**To use the Programme number PR 0 (AV):**

When the TV and VCR are connected only by the Aerial cable, choosing the Programme number PR 0 (AV) allows you to view images from the VCR. Set the VCR RF channel to the Programme number PR 0 (AV) manually. For details, see “EDIT/MANUAL” on page 27.

Pressing the **0 (AV)** button changes the choice as follows:

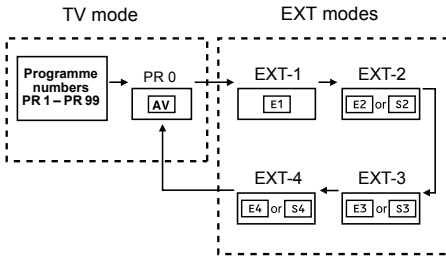

- The VCR RF channel is sent as the RF signal from the VCR.
- Also refer to your VCR instruction manual.

**Adjust the volume****Press the **◀/▶** buttons to adjust the volume.**

The Volume indicator appears and the volume changes as you press the **-/+** buttons.

**■ Muting the sound****Press the **🔇** (muting) button to turn off the sound.**


Pressing the **🔇** (muting) button again restores the previous volume level.

**Displaying the current time**

You can display the Current Time on the screen.

**Press the **ⓘ** (Information) button to display the current time**

Pressing the **ⓘ** (Information) button changes the display as follows:

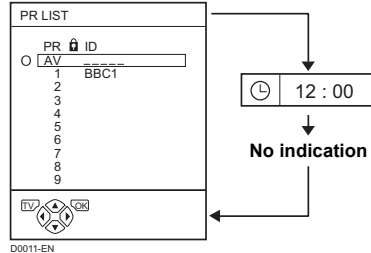

- This TV uses teletext data to set the current time. If the TV has not received a TV channel that has teletext programmes since it was turned on, the time display is blank. To view the current time, choose a TV channel that has teletext programmes.
- When watching videos, an incorrect current time is sometimes displayed.

## ZOOM function

You can change the screen size according to the picture aspect ratio. Choose the optimum one from the following ZOOM modes.

### AUTO:

For any picture format except Normal Picture (4:3 Aspect Ratio), the picture will be automatically displayed in the optimum screen size.

For Normal Picture (4:3 Aspect Ratio), the picture displayed in accordance with the ZOOM mode set on the 4:3 AUTO ASPECT menu. For details, see "4:3 AUTO ASPECT" on page 22.

- AUTO may not function properly with poor signal quality. In this case, choose an optimum ZOOM mode manually.
- This TV supports WSS (wide-screen signals). When broadcasts with WSS are received with the ZOOM mode set at AUTO, the most suitable ZOOM mode is automatically chosen according to the WSS received.

 
### REGULAR:

Use to view a normal picture (4:3 aspect ratio) as its original size is.



### PANORAMIC:

This mode stretches the left and right sides of a normal picture (4:3 Aspect Ratio) to fill the screen, without making the picture appear unnatural.



- The top and bottom of the picture are slightly cut off.


### 14:9 ZOOM:

 This mode zooms up the Wide Picture (14:9 Aspect Ratio) to the upper and lower limits of the screen.




### 16:9 ZOOM:

This mode zooms up the Wide Picture (16:9 Aspect Ratio) to the full screen.




### 16:9 ZOOM SUBTITLE:

 This mode zooms up the Wide Picture (16:9 Aspect Ratio) with subtitles to the full screen.



### FULL:

 
This mode uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



Use for pictures with a 16:9 aspect ratio that have been squeezed into a normal picture (4:3 aspect ratio), you can restore their original dimensions.

## ■ Choose the ZOOM mode

### 1 Press the ZOOM button to display the ZOOM menu

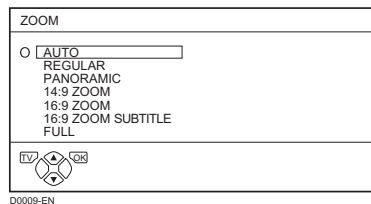

### 2 Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button

The picture expands and the chosen ZOOM mode is displayed in about 5 seconds.

- The ZOOM mode may be automatically changed due to the control signal from an external device. When you want to return to the previous ZOOM mode, choose the ZOOM mode again.

## ■ Adjusting the visible area of the picture

If subtitles or the top (or bottom) of the picture are cut off, adjust the visible area of the picture manually.

### 1 Press the **ZOOM** button

The ZOOM menu appears.

### 2 Press the **OK** button to display the ZOOM mode indication


Indicator is displayed.



### 3 While it is displayed, press the **▼/▲** buttons to adjust the visible area vertically

- You cannot adjust the visible area in REGULAR or FULL mode.

The visible area adjustment is saved even after the TV channel is changed. However, it is cancelled if the following operations are performed.

- The power is turned off/on
- The ZOOM mode is changed
- The  (Text) button is pressed
- The TV is switched between TV mode and EXT mode

## HYPER SOUND function

You can enjoy sounds with a wider ambience.

### Press the (HYPER SOUND) button to turn the HYPER SOUND function on or off

- The HYPER SOUND function does not work properly with mono sound.
- The HYPER SOUND function can be also turned on or off by using the SOUND menu. For details, see “HYPER SOUND” on page 23.

## Return to TV channel instantly

You can return to a TV channel instantly.

### Press the **TV** button

The TV returns to the TV mode and a TV channel appears.

## Operating a JVC brand VCR or DVD player

You can operate a JVC brand VCR or DVD player. Pressing the button having the same appearance as the original remote control button of a device makes the function work in the same way as the original remote control.

### 1 Set the VCR DVD Switch to the VCR or DVD position

#### VCR:

When you are operating the VCR, set the switch to the VCR position.


#### DVD:

When you are operating the DVD player, set the switch to the DVD position.

### 2 Press the **VCR/DVD Control Button** to control your VCR or DVD player

- If your device is not made by JVC, these buttons cannot be used.
- Even if your device is made by JVC, some of these buttons or any one of the buttons may not work, depending on the device.
- You can use the  $\nabla/\blacktriangle$  buttons to choose a TV channel. The VCR will receive or choose the chapter the DVD player plays back.
- Some DVD player models use the  $\nabla/\blacktriangle$  buttons for both operating of Fast forward/backward functions and choosing the chapter. In this case, the  $\blacktriangleleft/\blacktriangleright$  buttons do not work.

# Teletext function

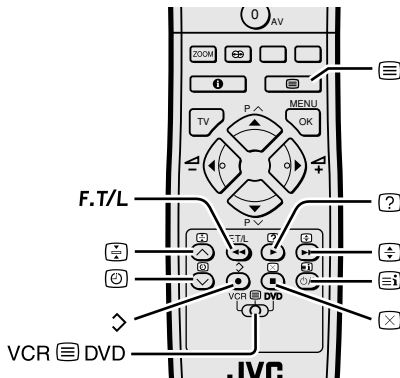


## Basic operation

You can view three types of teletext broadcasts on the TV:


### 1 Choose a TV channel with a teletext broadcast
 
### 2 Set the VCR DVD switch to the (Text) position



### 3 Press (Text) button to display the teletext

Pressing (Text) button changes the mode as follows:

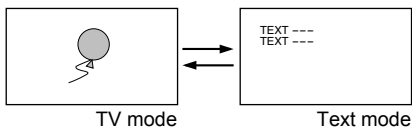

### 4 Choose a teletext page by pressing the ▼/▲ buttons, Number buttons or Colour buttons

#### To return to the TV mode:

Press the **TV** button or (Text) button.

- If you have trouble receiving teletext broadcasts, consult your local dealer or the teletext station.
- No menu operations are possible when viewing a teletext programme.
- Language display depends on the country which was set on the COUNTRY menu. If characters on a Teletext programme do not appear properly, change the COUNTRY Setting to other country's. To change the COUNTRY setting, perform steps 1 and 2 of the "AUTO PROGRAM" procedure on page 27 and then press the **OK** button.

The last teletext page displayed is memorised. The last teletext page is cleared under following conditions.

- Turning the power off
- Changing the channel
- Switching the TV input

## Using the List Mode

 
You can store the numbers of your favourite teletext pages in memory and call them up quickly using the colour buttons.

### ■ To store the page numbers:

#### 1 Press F.T/L button to engage the List mode

The stored page numbers are displayed at the bottom of the screen.

#### 2 Press a Colour button to choose a position. Then press the Number buttons to enter the page number



### 3 Press and hold down ↵ (Store) button

The four page numbers blink white to indicate that they are stored in memory.

## ■ To call up a stored page:

### 1 Press the **F.T/L** button to engage the List mode

### 2 Press a colour button to which a page has been assigned



 
#### To exit the List mode:

Press the **F.T/L** button again.

## Hold

You can hold a teletext page on the screen for as long as you want, even while several other teletext pages are being received.

### Press the **⏸** (Hold) button



#### To cancel the Hold function:

Press **⏸** (Hold) button again.

## Sub-page

Some teletext pages include sub-pages that are automatically displayed.

You can hold any sub-page, or view it at any time.

### 1 Press the **Ⓜ** (Sub-page) button to operate the Sub-page function

### 2 Press the Number buttons to enter a sub-page number

Example:

- 3rd sub-page → press **0, 0, 0** and **3**.

#### To cancel the Sub-page function:

 
Press the **Ⓜ** (Sub-page) button again.

## Reveal

Some teletext pages include hidden text (such as answers to a quiz).

You can display the hidden text.


### Each time you press the **?** (Reveal) button, text is hidden or revealed



## Size

You can double the height of the teletext display.

### Press the **⏏** (Size) button.

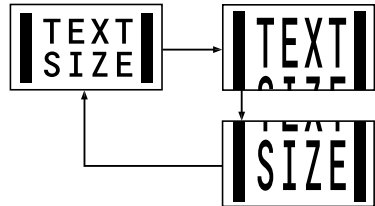

## Index

You can return to the index page instantly.

### Press **Ⓜ** (Index) button

Returns to page 100 or a previously specified page.



---

## Cancel

---


You can search for a teletext page while watching TV.

---

**1 Press the Number button to enter a page number, or press a Colour button**


The TV searches for a teletext page.


---

**2 Press  (Cancel) button**

The TV programme appears. When the TV finds the teletext page, its page number appears in the upper left of the screen.


---

**3 Press  (Cancel) button to return to a teletext page when the page number is on the screen**

- The TV mode cannot be resumed even by pressing the  (Cancel) button. A TV programme is temporarily displayed instead of the teletext programme.


# Using the TV's menu

This TV has a number of functions you can operate using menus. To fully utilize all your TV's functions, you need to understand the basic menu operating techniques fully.

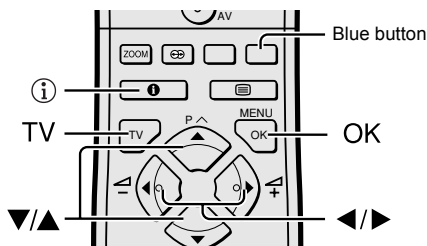

## 4 Press the ◀/▶ buttons to choose the setting of that function

 
- If you want to operate a function which appears only with its name, follow the descriptions of that function on the following pages.
- The display appearing at the bottom of a menu shows you a button on the remote control that you can use when you operate a chosen function.



TV button OK button

## Basic operation

### 1 Press the OK button to display the MENU (main menu)

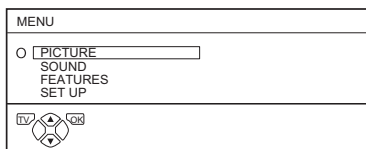

D0060-EN

### 2 Press the ▼/▲ buttons to choose a menu title, and press the OK button

The menu appears.

**To return to the previous menu:**

Press the **i** (information) button.

**To exit a menu instantly:**

Press the **TV** button.


### 3 Press the ▼/▲ buttons to choose a function

- For details of the functions in the menus, see the following pages.

### 5 Press the OK button to complete the setting

The menu disappears.

# PICTURE menu

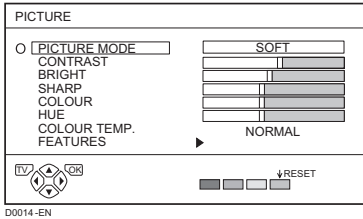

- While the PICTURE menu is displayed, pressing the blue button will set the CONTRAST, BRIGHT, SHARP, COLOUR, HUE settings to their default settings.

## PICTURE MODE

You can choose one of three PICTURE MODEs to adjust the picture settings automatically.

### **BRIGHT:**

Heightens contrast and sharpness.

### **STANDARD:**

Standardizes picture adjustment.

### **SOFT:**

Softens contrast and sharpness.

## CONTRAST

You can adjust the picture contrast.

- ◀ : lower
- ▶ : higher

## BRIGHT

You can adjust the picture brightness.

- ◀ : darker
- ▶ : brighter

## SHARP

You can adjust the picture sharpness.

- ◀ : softer
- ▶ : sharper

## COLOUR

You can adjust the picture colour.

- ◀ : lighter
- ▶ : deeper

## HUE

You can adjust the picture tint.

- ◀ : reddish
- ▶ : greenish
- You can change the HUE setting (picture hue) when the colour system is NTSC 3.58, NTSC 4.43. (See “Specifications” on page 43)

## COLOUR TEMP.

You can select one of three COLOUR TEMP. modes (three tones of white) to adjust the white balance of the picture. Since white is the colour which is used as a reference for all the other colours, changing the COLOUR TEMP. mode affects the appearance of all the other colours on the screen.

### **COOL:**

A bluish white. Using this mode when watching bright pictures allows you to enjoy a more vivid and bright picture.

### **NORMAL:**


The normal white colour.

### **WARM:**

A reddish white. Using this mode when watching films allows you to enjoy colours that are characteristic of films.

## FEATURES

Choose **FEATURES** and press the **OK** or ► button to display the sub-menu.

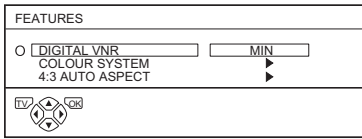

D1015-EN

### ■ DIGITAL VNR

The **DIGITAL VNR** function cuts down the amount of noise in the original picture. You can choose from the three **DIGITAL VNR** function settings of **AUTO**, **MIN** and **MAX**.

The TV and external input may be given different **DIGITAL VNR** settings.

#### **AUTO:**

The TV will automatically adjust the level of the **DIGITAL VNR** effect to match the amount of noise in the picture, giving you the best possible picture.

- If you set the **DIGITAL VNR** effect too high it can make the picture less sharp. It is recommended to use the **AUTO** setting if you can.

#### **MIN:**

The level of the **DIGITAL VNR** effect is set to the minimum. If you set the **DIGITAL VNR** function to **AUTO** but feel that the sharpness of the original picture has not been reproduced fully, change the setting from **AUTO** to **MIN**.

- The **MIN** setting is not suitable for low-quality pictures which contain a lot of noise.

#### **MAX:**

The level of the **DIGITAL VNR** effect is set to the maximum. If you set the **DIGITAL VNR** function to **AUTO** but still notice some noise, change the setting from **AUTO** to **MAX**.


- The **MAX** setting is not suitable for high-quality pictures which contain very little noise.

#### **OFF:**

The **DIGITAL VNR** function is turned off.

### ■ COLOUR SYSTEM

The colour system is chosen automatically. However, if the picture is not clear or no colour appears, choose the colour system manually.

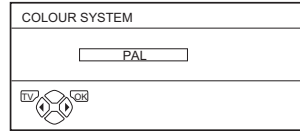

D0016-EN

#### 1 Choose **COLOUR SYSTEM** then press the **OK** button

#### 2 Press the ◀/▶ buttons to choose the appropriate colour system. Then press the **OK** button

#### **PAL:**

PAL system

#### **SECAM:**

SECAM system

#### **NTSC 3.58:**

NTSC 3.58 MHz system

#### **NTSC 4.43:**

NTSC 4.43 MHz system

#### **AUTO:**


This function detects a colour system from the input signal. Only when you are viewing a picture from Programme number PR 0 (AV), or EXT terminal, you can choose using the **AUTO** function.

- The **AUTO** function may not function properly if you have poor signal quality. If the picture is abnormal in the **AUTO** function, choose another colour system manually.
- When in the Programme numbers PR 0 (AV) to PR 99, you cannot choose NTSC 3.58 or NTSC 4.43.

■ **4:3 AUTO ASPECT**


You can choose one of three ZOOM modes, REGULAR, PANORAMIC or 14:9 ZOOM, as the ZOOM mode for the normal picture (4:3 aspect ratio).

- 
- 1 Choose 4:3 AUTO ASPECT then press the OK button**

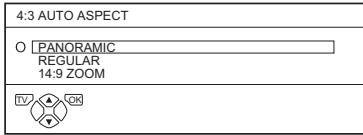

- 
- 2 Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button**

# SOUND menu

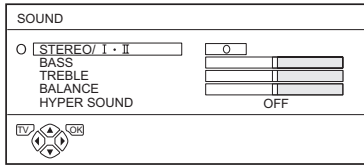

D0019-EN

## STEREO / I • II

When you are viewing a bilingual broadcast programme, you can choose the sound from Bilingual I (Sub I) or Bilingual II (Sub II). When the stereo broadcasting is received poorly, you can change from stereo to mono sound so that you can hear the broadcast more clearly and easily.

⊙ : Stereo sound

○ : mono sound

I : Bilingual I (sub I)

II : Bilingual II (sub II)

- The sound mode you can choose differs depending on the TV programme.
- This function does not work in the EXT modes. And this function does not appear in the SOUND menu.

## BASS

You can adjust the low tone of the sound.

◀ : weaker

▶ : strong

## TREBLE

You can adjust the high tone of the sound.

◀ : weaker

▶ : strong

## BALANCE

You can adjust the volume balance between the left and right speaker.

◀ : turn the left speaker's volume level up.

▶ : turn the right speaker's volume level up.

## HYPER SOUND

Mono sound is converted to simulated stereo for a more enjoyable audio experience.

**ON:**


This function is turned on.

**OFF:**

This function is turned off.

- The HYPER SOUND function does not work properly with mono sound.
- You can turn on or off the HYPER SOUND function with a single press. For details, see "HYPER SOUND function" on page 15.

# FEATURES menu

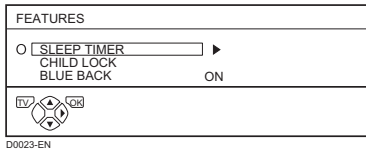


## SLEEP TIMER

You can set the TV to automatically turn off after a specified period of time.

### 1 Choose SLEEP TIMER, then press the OK button

A Sub-menu of the SLEEP TIMER function appears.

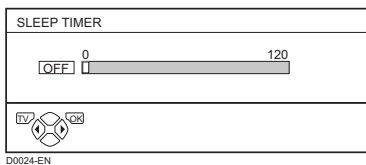

### 2 Press the ◀/▶ buttons to set the period of time. Then press the OK button


You can set the period of time a maximum of 120 minutes (2 hours) in 10 minute increments.

- One minute before the SLEEP TIMER function turns off the TV, “GOOD NIGHT!” appears.
- The SLEEP TIMER function cannot be used to turn off the TV’s main power.
- When the SLEEP TIMER function is on, you can display the Sub-menu of the SLEEP TIMER function again to confirm and/or change the remaining period of time of the SLEEP TIMER function. Press the OK button to exit the menu after confirming and / or changing the remaining time.

### To cancel the SLEEP TIMER function:

Press the ◀ button to set a period of time to “OFF”.


## CHILD LOCK

When there is a TV channel you wish your children not to watch, you can use the CHILD LOCK function to lock out the TV channel. Even when a child chooses a Programme number (PR) in which a locked TV channel has been registered, the screen will change to blue and displays  (CHILD LOCK) so the TV channel cannot be viewed. Unless you enter a pre-set ID number by a special operation, the lock cannot be released and the child cannot view the TV channel programmes.

### ■ To set the CHILD LOCK function

#### 1 Choose CHILD LOCK, then press the 0 (AV) button

“SET ID NO.” (ID number setting screen) appears.

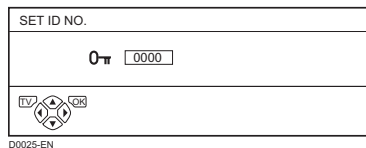


#### 2 Set the ID number to your liking

1 Press the ▼/▲ buttons to choose a number.

2 Press the ◀/▶ buttons to move the cursor.

**3 Press the OK button**

The Sub-menu of CHILD LOCK appears.

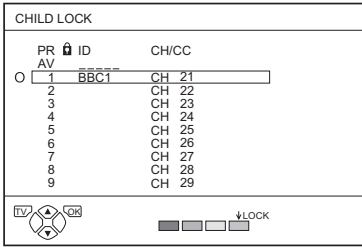

**4 Press the ▼/▲ buttons to choose a TV channel**

Every time you press the ▼/▲ buttons, the Programme number (PR) changes, and the picture of the TV channel registered in the Programme number (PR) is displayed on the screen.

**5 Press the blue button and set the CHILD LOCK function. Then press the OK button**

Ⓘ (CHILD LOCK) appears and the TV channel is locked.

**To reset the CHILD LOCK function:**

Press the blue button again.

 
Ⓘ (CHILD LOCK) disappears.

To disable easy resetting of the CHILD LOCK function, the menu disappears by choosing the CHILD LOCK function and pressing the OK button as in the ordinary menu operation.


**■ To view a locked TV channel**

**1 Choose a Programme number (PR) in which a TV channel locked with the Number buttons or PR LIST**

The screen changes to blue and the Ⓘ (CHILD LOCK) appears. You cannot view the TV channel.



**2 Press the ⓘ (Information) button to display "ID NO." (ID NO. input screen).**

 

**3 Press the Number buttons to enter the ID number**

The lock is temporarily released so you can view the TV channel.

**If you have forgotten the ID number:**

Perform step 1 of "To set the CHILD LOCK function". After confirming the ID number, press the TV button to exit the menu.

- Even if you reset the lock temporarily, it does not mean that the CHILD LOCK function set for the TV channel is cancelled. The next time anyone attempts to view the TV channel, it will be locked again.
- When you would like to cancel the CHILD LOCK function, you must perform the operation "To set the CHILD LOCK function" again.
- To disable easy choosing of a Programme number (PR) in which a locked TV channel has been registered, the Programme number (PR) has been set that it cannot be chosen by the ▼/▲ buttons or the operation buttons at the TV.
- To disable easy resetting of the lock, "ID NO." (ID NO. input screen) is set so that it cannot appear unless you press the ⓘ (Information) button.



---

## **BLUE BACK**

---

You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an external device.


**ON:**

This function is turned on.

**OFF:**

This function is turned off.

# SET UP menu

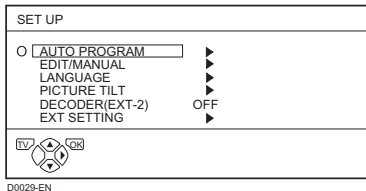


## AUTO PROGRAM

You can automatically register the TV channels which can be received well at your residence in the TV's Programme numbers (PR) by performing the following.

### 1 Choose AUTO PROGRAM. Then press the OK button

The COUNTRY menu appears as a sub-menu of the AUTO PROGRAM function. There are two COUNTRY menus. Pressing the yellow button changes the COUNTRY menu as follows:

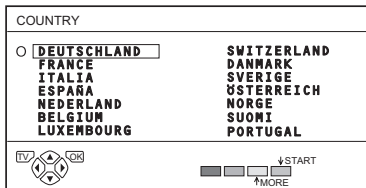

### 2 Press the ◀/▶ and ▼/▲ buttons to choose the country where you are now located

### 3 Perform steps 5, 6, and 7 of the "Initial settings" (page 5)


## EDIT/MANUAL

The EDIT/MANUAL functions are divided into two types: editing of the current Programme numbers (PR) (EDIT functions) and manual registration of a TV channel you want to view to the Programme number (PR) (MANUAL function). The details about these functions are as follows:

### Caution

- Using the MOVE, DELETE or INSERT function rewrites the current Programme numbers (PR) list. Resultingly, the Programme number (PR) of some of the TV channels will change.
- Using the MANUAL function for a TV channel for which the CHILD LOCK function has been set cancels the CHILD LOCK function for the TV channel.
- Using the MANUAL function for a TV channel for which the DECODER (EXT-2) function has been set to ON returns the setting of the DECODER (EXT-2) function for the TV channel to OFF.
- When a TV channel has already been registered in PR 99, using the INSERT function deletes the TV channel.

### 1 Choose EDIT/MANUAL, then press the OK button

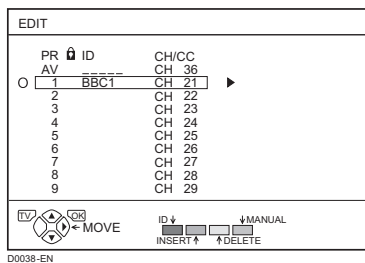

### 2 Follow the operation description of a function you want to use and operate the function

#### MOVE:

This function changes a Programme number (PR) of a TV channel.

**ID:**

This function registers a Channel name (ID) to a TV channel.

**INSERT:**

This function adds a new TV channel in the current Programme numbers (PR) list by using the CH/CC number.

- You cannot use the INSERT function if you do not know a Channel number of a TV channel. Use the MANUAL function to register a TV channel in the Programme number (PR).

**DELETE:**


This function deletes an unnecessary TV channel.

**MANUAL:**

This function manually registers a new TV channel in a Programme number (PR).

**3 Press the OK button to complete the settings**

The T-V LINK menu appears.

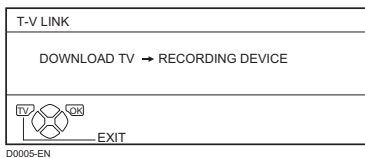

**4 If you do not have a T-V LINK compatible VCR connected:**

Press the TV button to exit the T-V LINK menu.

The T-V LINK menu disappears and all the settings are completed.

**If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:**

Follow the operating procedure “Downloading the data to VCR” on page 7 to transmit the Programme number (PR) data to the VCR.

- For Programme number PR 0, “AV” appears in the Programme numbers (PR) list.


- An EXT terminal number does not appear in the Programme numbers (PR) list.
- The CH/CC number is a number unique to the TV and corresponding to the Channel number of a TV channel. For the relationship of a Channel number and a CH/CC number, see “CH/CC numbers” on page 38.

**■ MOVE**

**1 Press the ▼/▲ buttons to choose a TV channel**

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the ► button to start the MOVE function**

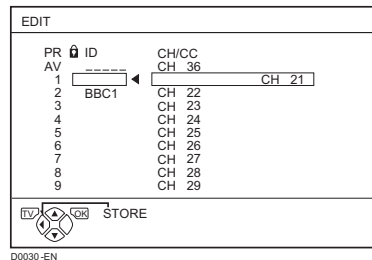

**3 Press the ▼/▲ buttons to choose a new Programme number (PR)**

**To cancel the MOVE function:**  
Press the (i) (Information) button.


**4 Press the ◀ button to change the Programme number (PR) of a TV channel to a new Programme number (PR)**

■ ID

**1 Press the ▼/▲ buttons to choose a TV channel**


Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the red button to start the ID function**

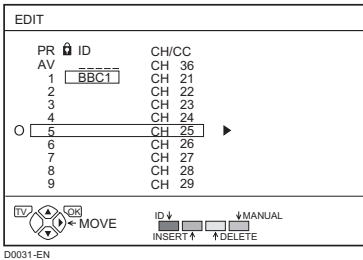


D0031-EN

**3 Press the ▼/▲ buttons to choose the first character of a Channel name (ID) you want to attach to the TV channel**

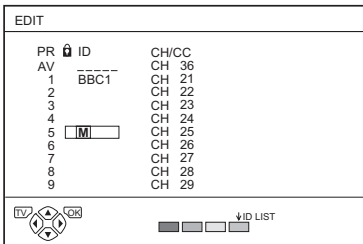

D0032-EN

**4 Press the blue button to display the ID LIST (channel name list)**

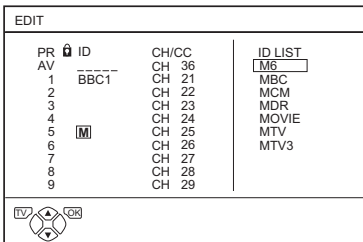

D0033-EN

**5 Press the ▼/▲ buttons to choose the Channel name (ID)**

**To cancel the ID function:**

Press the (i) (Information) button.

**6 Press the OK button to register a Channel name (ID) to a TV channel**

- You can register your unique Channel name (ID) to the TV channel. When step 3 is completed, do not go to step 4, but press the ◀/▶ buttons to move the cursor and the ▼/▲ buttons to choose a character for completing the Channel name (ID). Then press the OK button to register the Channel name (ID) to the TV channel.


■ INSERT

**Preparation:**

- A CH/CC number unique to this TV and corresponding to the Channel number of a TV channel is required. Find the corresponding CH/CC number from a table "CH/CC numbers" on page 38 based on the Channel number of the TV channel.
- When the COUNTRY setting is not FRANCE, use a two-digit CH/CC number. When the COUNTRY setting is FRANCE, use a three-digit CH/CC number.
- Only when you add a TV channel (SECAM-L system) from a French station, be sure to set COUNTRY to FRANCE. If the COUNTRY setting is not FRANCE, follow the description "AUTO PROGRAM" on page 27 to change the COUNTRY setting to FRANCE, then start the INSERT function.

**1 Press the ▼/▲ buttons to choose a Programme number (PR) for which you will register a new TV channel**

**2 Press the green button and start the INSERT function.**

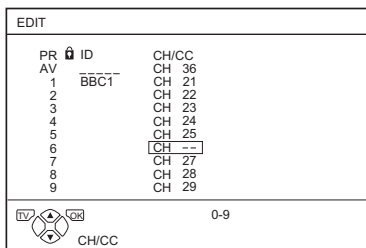

**3 Press the ▼/▲ buttons to choose “CC” or “CH” according to the CH/CC number of the TV channel**

**When the COUNTRY setting is FRANCE:**

Choose “CH1”, “CH2”, “CC1” or “CC2”.

**To cancel the INSERT function:**

Press the **i** (Information) button.

**4 Press the Number buttons to enter the remaining CH/CC number**

The TV shifts to registration mode. When the registration is completed, the picture of the TV channel appears on the screen.

- The CH/CC number is a number indicating the broadcast frequency to the TV. If the TV cannot detect the TV channel corresponding to the broadcast frequency indicated by the CH/CC number, a picture in the no-signal state appears.

**■ DELETE**

**1 Press the ▼/▲ buttons to choose a TV channel**

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the yellow button to delete the TV channel**

The TV channel is deleted from the Programme numbers (PR) list.

**■ MANUAL**


**Preparation:**

- As long as you register the TV channel (SECAM-L system) from a French station, be sure to set the COUNTRY setting to FRANCE. If the COUNTRY setting is not FRANCE, follow the description “AUTO PROGRAM” on page 27 to change the COUNTRY setting to FRANCE, then start the MANUAL function.

**1 Press the ▼/▲ buttons to choose a Programme number (PR) to which you want to register a new TV channel**

**2 Press the blue button to activate the MANUAL function**

At the right side following the CH/CC number, the SYSTEM (broadcasting system) of the TV channel appears.

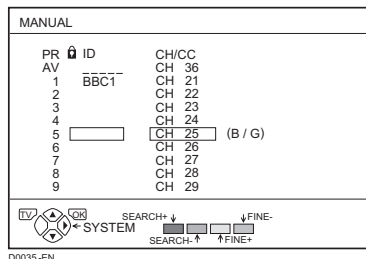

**To cancel the MANUAL function:**

Press the **i** (Information) button.

**3 Press the ► button to choose the SYSTEM (broadcasting system) for a TV channel you want to register**

**TV channel (SECAM-L system) from a French station:**

Set the SYSTEM to “L”. If it is set to one other than “L”, you cannot receive the TV channel of the SECAM-L system.

**Other TV channels:**

If you do not know the correct broadcasting system, set the SYSTEM to "B/G". If "B/G" is not correct, it results in the fact that you will not hear the sound normally when the TV detects a TV channel. In this case, retry to set the SYSTEM again correctly so that no problem arises.

**4 Press the green or red button to search for a TV channel**

Scanning stops when the TV finds a TV channel. Then the TV channel is displayed.

**5 Press the green or red button repeatedly until the TV channel you want appears**

**If the TV channel reception is poor:**  
Press the blue or yellow button to fine-tune the TV channel.

**If you cannot hear the normal sound even when the picture of the TV channel appears normally:**

The SYSTEM setting is wrong. Press the ► button and choose a SYSTEM that has normal sound.

**6 Press the OK button and register the TV channel to a Programme number (PR)**

The normal EDIT menu is resumed.

**LANGUAGE**

You can choose the language you want to use for the on-screen display from the language list in a menu.

**1 Choose LANGUAGE, then press the OK button**


A sub-menu of the LANGUAGE function appears.



D1002-EN

**2 Press the ◀/▶ and ▼/▲ buttons to choose a language. Then press the OK button****PICTURE TILT**

There are cases where the Earth's magnetic force may make the picture tilt. If this happens, you can correct the picture tilt.

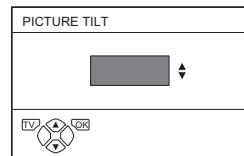**1 Press the ▼/▲ buttons to choose PICTURE TILT. Then press the OK button**

D0018-EN

**2 Press the ▼/▲ buttons until the picture becomes level. Then press the OK button**

## DECODER (EXT-2)

When connecting a Decoder with a T-V LINK compatible VCR connected to the EXT-2 terminal, use the DECODER (EXT-2) function to unscramble the scrambled TV channels.


### 1 Turn on the Decoder power

### 2 Display the TV channel capable of being unscrambled with the Decoder on the TV

Even if the Decoder is functioning, a scrambled picture appears at this time.

### 3 Press the OK button to display the SET UP menu

The SET UP menu appears.

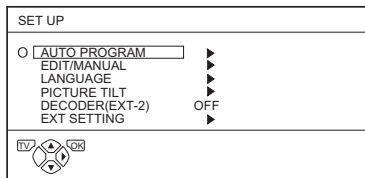

### 4 Press the ▼/▲ buttons to choose DECODER (EXT-2). Then press the ◀/▶ buttons to choose ON


An unscrambled picture appears.

**To cancel the DECODER (EXT-2) function:**

Press the ◀/▶ buttons to choose OFF.

### 5 Press the OK button to complete the setting

The T-V LINK menu appears.

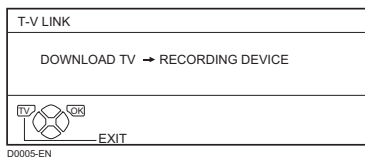

### 6 Follow the operating procedure “Downloading the data to VCR” on page 7 to transmit the Programme number (PR) data to the VCR

### 7 If you have another TV channel capable of being unscrambled with a Decoder, repeat steps 2 through 7


If for some reason the DECODER (EXT-2) function has been set to “ON” but the TV channel cannot be unscrambled, check the following:

- Has the Decoder been connected to the VCR properly according to the VCR and Decoder Instruction Manuals?
- Has the Decoder power been turned on?
- Can the TV channel be unscrambled with a Decoder?
- Is it necessary to change the VCR settings in order to connect the Decoder? Confirm that the VCR is set properly by rechecking the VCR Instruction Manual.

## EXT SETTING

### 1 Choose EXT SETTING, then press the OK or ► button

The EXT SETTING menu appears.

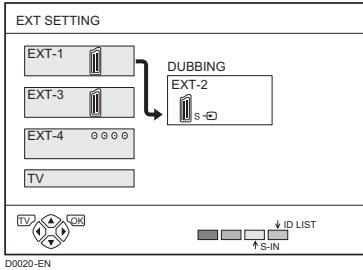

### 2 Follow the instructions for the function you want to use and operate the function

#### S-IN:

You can enjoy the high-quality picture of the 2 S-VIDEO signal (Y/C signal).

#### ID LIST:

You can have a name for each of the devices connected for each EXT terminal.

#### DUBBING:

You can choose a signal source to be output from an EXT-2 terminal.

### ■ S-IN (S-VIDEO input)

When connecting a device (such as S-VHS VCR) which enables an S-VIDEO signal (Y/C signal) to be output, you can enjoy high-quality picture of the S-VIDEO signal (Y/C signal).

#### Preparation:

- At first, read the Device Instruction Manual and “Additional preparation” on page 36 to connect the device to the TV properly. Second, follow the Device Instruction Manual to set the device so that an S-VIDEO signal (Y/C signal) can be output to the TV.
- Do not set S-IN (S-VIDEO input) to the EXT terminal connected to a device which cannot output an S-VIDEO (Y/C signal). If it is set wrongly, a picture cannot appear.

### 1 Choose an EXT terminal

### 2 Press the yellow button and set the S-IN (S-VIDEO input). Then press the OK button

An S-IN (S-VIDEO input) mark is displayed. You can view an S-VIDEO signal (Y/C signal) instead of the regular video signal (composite signal).

#### To cancel the S-IN (S-VIDEO input) setting:

Press the yellow button and turn off S-IN (S-VIDEO input) mark. The regular video signal (composite signal) pictures are resumed.

- The EXT-1 terminal does not support S-VIDEO signal (Y/C signal) and you cannot set S-IN (S-VIDEO input) in the EXT-1 terminal.
- Setting S-IN (S-VIDEO input) changes the head character from “E” to “S”. For example, “E2” is changed to “S2”.
- Even a device which enables the S-VIDEO signal (Y/C signal) to be output may output a regular video signal (composite signal) depending on the device setting. If a picture cannot appear because S-IN (S-VIDEO input) setting has been made, read the device Instruction Manual carefully again to check for the device settings.




■ **ID LIST**

You can have a name corresponding to the devices connected for each EXT terminal. Giving a name to an EXT terminal makes the EXT terminal number appear on the screen, together with the name.

**1 Choose an EXT terminal**

**2 Press the blue button to display the name list (ID LIST)**

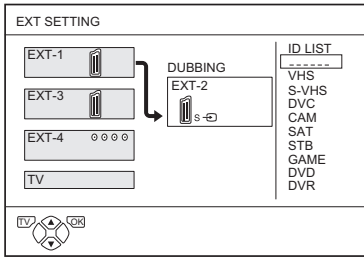

D0021-EN

**3 Press the ▼/▲ buttons to choose a name. Then press the OK button**

The ID LIST disappears and the name is assigned to the EXT terminal.

- You cannot assign an EXT terminal name not found in the name list (ID LIST).

**To erase a name assigned to the EXT terminal:**

Choose a blank space.


**4 Press the OK button to complete the setting**

■ **DUBBING**

You can choose a signal source to be output from an EXT-2 terminal.

You can choose any one of the output signal of the device connected to the EXT terminal and the picture and sound from a TV channel you are currently viewing to output it to the EXT-2 terminal.

**1 Press the ◀/▶ buttons to choose the arrow from the menu**

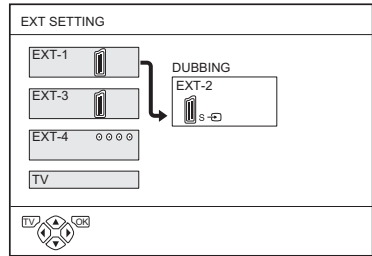

D0022-EN

**2 Press the ▼/▲ buttons to choose an EXT terminal or TV. Then press the OK button**

The arrow in the menu represents a signal flow. The left side of the arrow denotes a signal source output from the EXT-2 terminal.

**EXT-1/EXT-3/EXT-4:**

The output signal of the device connected to an EXT terminal passes through the TV and is output from the EXT-2 terminal.

**TV:**

The picture and sound of the TV channel you are currently viewing are output from the EXT-2 terminal.

---

- During dubbing, you cannot turn off the TV. Turning off the TV also turns off the output from the EXT-2 terminal.
  - When you choose an EXT terminal as an output, you can view a TV programme or a picture from the other EXT terminal while dubbing the picture from a device connected to the EXT terminal onto a VCR connected to the EXT-2 terminal.
  - The RGB signals from the TV games cannot be output. Teletext programmes cannot be output.
-

# Additional preparation


## Connecting the external devices

Connect the devices to the TV, paying attention to the following connection diagram.

### Before connecting anything:

- Read the manuals provided with the devices. Depending on the devices, the connection method may differ from the figure. In addition, the device settings may be changed depending on the connection method to secure proper operation.
- Turn off all the devices including the TV.
- The “Specifications” on page 43 contains the details of the EXT terminals. If you are connecting a device not listed in the following connection diagram, see the table to choose the best EXT terminal.
- Note that connecting cables are not supplied.
- If the VCR’s audio output is in mono, connect the VCR’s AUDIO OUT (audio output) terminal and the TV’s EXT-4 AUDIO L/MONO terminal with an audio cable.

- ① VCR (composite signal)
- ② VCR (composite signal/S-VIDEO signal)
- ③ T-V LINK compatible VCR (composite signal/S-VIDEO signal)
- ④ Decoder
- ⑤ DVD player (composite signal/S-VIDEO signal)
- ⑥ DVD player (composite signal/RGB signal)
- ⑦ TV game (composite signal/RGB signal)
- ⑧ TV game (composite signal/S-VIDEO signal)
- ⑨ Headphones
- ⑩ Camcorder (composite signal/S-VIDEO signal)
- ⑪ SCART cable
- ⑫ Audio cable
- ⑬ Video cable
- ⑭ S-VIDEO cable

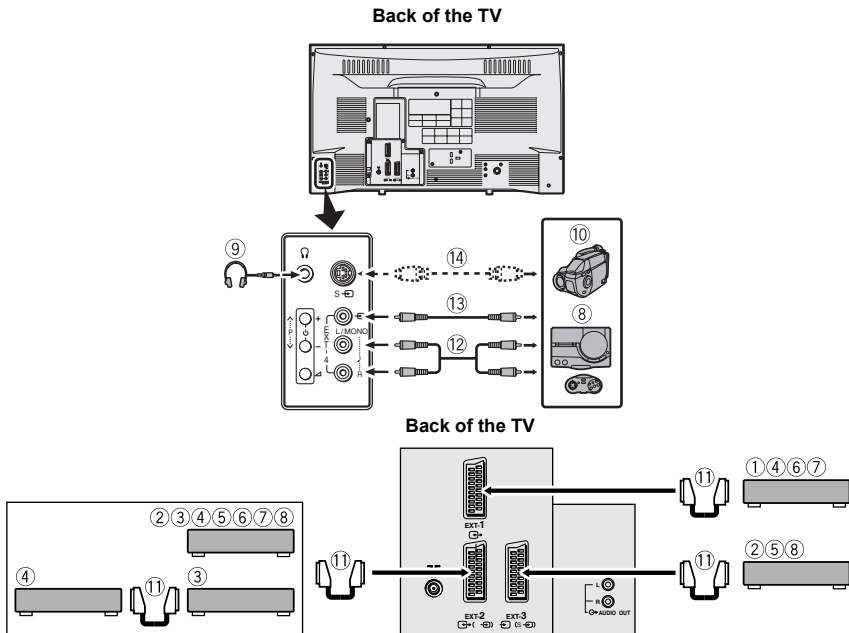

### ■ Devices which can output the S-VIDEO signal (Y/C signal) such as a S-VHS VCR

Connect the device to an EXT terminal other than the EXT-1 terminal.

You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details of how to operate the device, see "S-IN (S-VIDEO input)" on page 33.

### ■ T-V LINK compatible VCR

Be sure to connect the T-V LINK compatible VCR to the EXT-2 terminal. If not, the T-V LINK function will not work properly.

- When connecting a T-V LINK compatible VCR to the EXT-2 terminal, be sure to connect the Decoder to the VCR. If not, the T-V LINK function may not work properly. After you have registered TV channels to the Programme numbers (PR), set the DECODER (EXT-2) function for the Programme number (PR) to ON in order to unscramble a scrambled TV channel. For details of operation, see "DECODER (EXT-2)" on page 32.

### ■ Connecting headphones

Connect the headphones with a stereo mini-jack (of 3.5 mm in diameter) to the headphone jack at the TV rear panel.

- When you connect the headphones, the TV speakers issue no sound.

### ■ Video/sound signal output from the EXT-2 terminal

You can arbitrarily change over the output of the video/sound signal from the EXT-2 terminal. It is useful when you want to dub the video/sound from another device on the VCR connected to the EXT-2 terminal. For details on how to do this operation, see "DUBBING" on page 34.

### ■ TV output from the EXT-1 terminal

The output of video/sound signal of a TV channel you are currently viewing is always output from the EXT-1 terminal.

- Changing over a Programme number (PR) also changes over the TV output from the EXT-1 terminal.
- The video/sound signal from an EXT terminal cannot be output.
- Teletext programmes cannot be output.

### ■ Connecting Speakers/Amplifier


While referring to the Audio equipment connection diagram, connect the audio equipment you desire to the TV.

You can use external front speakers to listen to the TV sound instead of the TV speakers.

#### Before connecting anything:

- Read the manuals provided with the amplifier and speakers.
- Turn the TV and Amplifier off.
- To prevent magnetism from the speakers adversely affecting the TV screen, use magnetic-shielded speakers for the front speakers.
- Note that connecting cables are not supplied.

Back of the TV

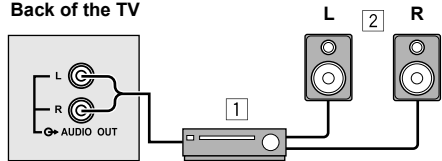

- 1 Amplifier
- 2 Front speakers (Magnetic-shielded type)

- The output from the AUDIO OUT terminal is not interrupted by headphone connection to the TV. You cannot cut the sound from the front speaker even if you connect a headphone to the TV.
- Adjust the volume of the external speakers with the amplifier.

# CH/CC numbers

When you want to use the INSERT function on page 29, find the CH/CC number corresponding to the Channel number of the TV channel from this table.

CH	Channel	CH	Channel	CC	Channel	CC	Channel
CH 02 / CH 202	E2, R1	CH 40 / CH 240	E40, R40	CC 01 / CC 201	S1	CC 31 / CC 231	S31
CH 03 / CH 203	E3, ITALY A	CH 41 / CH 241	E41, R41	CC 02 / CC 202	S2	CC 32 / CC 232	S32
CH 04 / CH 204	E4, ITALY B, R2	CH 42 / CH 242	E42, R42	CC 03 / CC 203	S3	CC 33 / CC 233	S33
CH 05 / CH 205	E5, ITALY D, R6	CH 43 / CH 243	E43, R43	CC 04 / CC 204	S4	CC 34 / CC 234	S34
CH 06 / CH 206	E6, ITALY E, R7	CH 44 / CH 244	E44, R44	CC 05 / CC 205	S5	CC 35 / CC 235	S35
CH 07 / CH 207	E7, ITALY F, R8	CH 45 / CH 245	E45, R45	CC 06 / CC 206	S6	CC 36 / CC 236	S36
CH 08 / CH 208	E8, R9	CH 46 / CH 246	E46, R46	CC 07 / CC 207	S7	CC 37 / CC 237	S37
CH 09 / CH 209	E9, ITALY G	CH 47 / CH 247	E47, R47	CC 08 / CC 208	S8	CC 38 / CC 238	S38
CH 10 / CH 210	E10, ITALY H, R10	CH 48 / CH 248	E48, R48	CC 09 / CC 209	S9	CC 39 / CC 239	S39
CH 11 / CH 211	E11, ITALY H+1, R11	CH 49 / CH 249	E49, R49	CC 10 / CC 210	S10	CC 40 / CC 240	S40
CH 12 / CH 212	E12, ITALY H+2, R12	CH 50 / CH 250	E50, R50	CC 11 / CC 211	S11	CC 41 / CC 241	S41
CH 21 / CH 221	E21, R21	CH 51 / CH 251	E51, R51	CC 12 / CC 212	S12	CC 75 / CC 275	X
CH 22 / CH 222	E22, R22	CH 52 / CH 252	E52, R52	CC 13 / CC 213	S13	CC 76 / CC 276	Y, R3
CH 23 / CH 223	E23, R23	CH 53 / CH 253	E53, R53	CC 14 / CC 214	S14	CC 77 / CC 277	Z, ITALY C, R4
CH 24 / CH 224	E24, R24	CH 54 / CH 254	E54, R54	CC 15 / CC 215	S15	CC 78 / CC 278	Z+1, R5
CH 25 / CH 225	E25, R25	CH 55 / CH 255	E55, R55	CC 16 / CC 216	S16	CC 79 / CC 279	Z+2
CH 26 / CH 226	E26, R26	CH 56 / CH 256	E56, R56	CC 17 / CC 217	S17		
CH 27 / CH 227	E27, R27	CH 57 / CH 257	E57, R57	CC 18 / CC 218	S18		
CH 28 / CH 228	E28, R28	CH 58 / CH 258	E58, R58	CC 19 / CC 219	S19		
CH 29 / CH 229	E29, R29	CH 59 / CH 259	E59, R59	CC 20 / CC 220	S20		
CH 30 / CH 230	E30, R30	CH 60 / CH 260	E60, R60	CC 21 / CC 221	S21		
CH 31 / CH 231	E31, R31	CH 61 / CH 261	E61, R61	CC 22 / CC 222	S22		
CH 32 / CH 232	E32, R32	CH 62 / CH 262	E62, R62	CC 23 / CC 223	S23		
CH 33 / CH 233	E33, R33	CH 63 / CH 263	E63, R63	CC 24 / CC 224	S24		
CH 34 / CH 234	E34, R34	CH 64 / CH 264	E64, R64	CC 25 / CC 225	S25		
CH 35 / CH 235	E35, R35	CH 65 / CH 265	E65, R65	CC 26 / CC 226	S26		
CH 36 / CH 236	E36, R36	CH 66 / CH 266	E66, R66	CC 27 / CC 227	S27		
CH 37 / CH 237	E37, R37	CH 67 / CH 267	E67, R67	CC 28 / CC 228	S28		
CH 38 / CH 238	E38, R38	CH 68 / CH 268	E68, R68	CC 29 / CC 229	S29		
CH 39 / CH 239	E39, R39	CH 69 / CH 269	E69, R69	CC 30 / CC 230	S30		

CH	Channel	CH	Channel	CC	Frequency (MHz)	CC	Frequency (MHz)
CH 102	F2	CH 141	F41	CC 110	116 - 124	CC 152	391 - 399
CH 103	F3	CH 142	F42	CC 111	124 - 132	CC 153	399 - 407
CH 104	F4	CH 143	F43	CC 112	132 - 140	CC 154	407 - 415
CH 105	F5	CH 144	F44	CC 113	140 - 148	CC 155	415 - 423
CH 106	F6	CH 145	F45	CC 114	148 - 156	CC 156	423 - 431
CH 107	F7	CH 146	F46	CC 115	156 - 164	CC 157	431 - 439
CH 108	F8	CH 147	F47	CC 116	164 - 172	CC 158	439 - 447
CH 109	F9	CH 148	F48	CC 123	220 - 228	CC 159	447 - 455
CH 110	F10	CH 149	F49	CC 124	228 - 236	CC 160	455 - 463
CH 121	F21	CH 150	F50	CC 125	236 - 244	CC 161	463 - 469
CH 122	F22	CH 151	F51	CC 126	244 - 252		
CH 123	F23	CH 152	F52	CC 127	252 - 260		
CH 124	F24	CH 153	F53	CC 128	260 - 268		
CH 125	F25	CH 154	F54	CC 129	268 - 276		
CH 126	F26	CH 155	F55	CC 130	276 - 284		
CH 127	F27	CH 156	F56	CC 131	284 - 292		
CH 128	F28	CH 157	F57	CC 132	292 - 300		
CH 129	F29	CH 158	F58	CC 133	300 - 306		
CH 130	F30	CH 159	F59	CC 141	306 - 311		
CH 131	F31	CH 160	F60	CC 142	311 - 319		
CH 132	F32	CH 161	F61	CC 143	319 - 327		
CH 133	F33	CH 162	F62	CC 144	327 - 335		
CH 134	F34	CH 163	F63	CC 145	335 - 343		
CH 135	F35	CH 164	F64	CC 146	343 - 351		
CH 136	F36	CH 165	F65	CC 147	351 - 359		
CH 137	F37	CH 166	F66	CC 148	359 - 367		
CH 138	F38	CH 167	F67	CC 149	367 - 375		
CH 139	F39	CH 168	F68	CC 150	375 - 383		
CH 140	F40	CH 169	F69	CC 151	383 - 391		

- 
- When two CH/CC numbers correspond to one Channel number, choose either one according to the current COUNTRY setting. When the COUNTRY setting is other than FRANCE, choose a two-digit CH/CC number. When the COUNTRY setting is FRANCE, choose a three-digit CH/CC number.
  - Find the CH/CC number (CC110 to CC161) corresponding to the TV channel (SECAM-L system) from a French cable TV station, based on the broadcast frequency of the TV channel. When you do not know the broadcast frequency, please contact the cable TV station.
  - The CH/CC numbers of CH102-CH169 and CC110-CC161 correspond to the TV channels being broadcast by a SECAM-L system. The other CH/CC numbers correspond to the TV channels being broadcast by a method other than a SECAM-L system.
-

# Troubleshooting

---

If a problem arises while you are using the TV, please read this “Troubleshooting” well before you request having the TV repaired. You may be able to fix it easily by yourself. For example, if the AC plug is disconnected from the AC outlet, or the TV aerial has problems, you may think there is a problem with the TV itself.

## **Important:**

- This Troubleshooting guide only covers problems whose cause are not easy to determine. If a question arise when you are operating a function, read the page(s) corresponding to the operation of the function well, not this Troubleshooting guide.
- After you have followed the Troubleshooting description or the operating description of the functions concerned without any success, remove the AC plug from the AC outlet and request a repair of your TV. Do not attempt to repair the TV by yourself or remove the rear cover of the TV.

## **■ If you cannot turn on the TV**

- Is the AC plug connected to the AC outlet?
- Is the Power lamp lit? If not, press the Main power button.

## **■ No picture/No sound**

- Have you chosen a TV channel whose reception is extremely bad? In this case, the BLUE BACK function will be activated, the entire screen becomes blue, and the sound is muted. In spite of this, if you want to view the TV channel, follow the description “BLUE BACK” on page 26 to try to change the BLUE BACK function setting to OFF.
- Have you connected the headphones to the TV? Connecting the headphones to the TV causes sounds not to be issued from the TV speakers.
- If the SYSTEM setting for a TV channel is incorrect, it may prevent the sound from being issued. Follow the description “EDIT/MANUAL” on page 27 to use the MANUAL function to try to change the SYSTEM setting.

## **■ Poor picture**

- If noise totally obscures the picture (snow), the aerial or aerial cable may have trouble. Check the following to try to solve the trouble:
  - Has the TV and aerial been connected properly?
  - Has the aerial cable been damaged?
  - Is the aerial pointed to the right direction?
  - Is the aerial itself faulty?
- If the TV or aerial receives interference from the other devices, stripes or noise may appear in the picture. Move such devices as an amplifier, personal computer, or a hair drier that can cause interference away from your TV, or try changing its location. If the aerial suffers interference from a radio tower or high-voltage wire, please contact your local dealer.
- If the TV receives interference from signal reflecting from mountains or building, double-pictures (ghosting) will occur. Try to change the aerial’s direction or replace the antenna with the one with better directionality.
- Are your COLOUR SYSTEM settings for the TV channels correct? Follow the description “COLOUR SYSTEM” on page 21 to try to solve the trouble.

- Have the COLOUR and BRIGHT settings been adjusted properly? Follow the description “BRIGHT” and “COLOUR” on page 20 to try to adjust them properly.
- Videotaping teletext is not recommended because it may not record correctly.
- When a white and bright still image (such as a white dress) is displayed on the screen, the white part may look as if it were coloured. It is a phenomenon unavoidable due to the nature of the picture tube itself, and not due to a TV failure. When the picture disappears from the screen, the unnatural colours will also disappear.
- When viewing images from commercially available video software products, or videos from videotapes which have been recorded improperly, the top of the image may be distorted. This is due to the condition of the video signal, and not because of malfunction.

■ **Poor sound**

- Have you adjusted BASS or TREBLE properly? If not, follow the description “BASS” or “TREBLE” on page 23.

When the TV channel reception is poor, it can be hard to hear the stereo or bilingual sound. In this case, follow the description “STEREO / I • II” on page 23 to hear the sound more easily by changing it to a mono sound.

■ **Operation disabled**

- Have the batteries of the remote control become exhausted? Follow the description “Putting the batteries into the Remote control” on page 4 and replace them with new batteries to try to solve the problem.
- Have you attempted to use the remote control at the sides or rear of the TV or at a location more than seven meters apart from the TV location? Operate the remote control in the front of your TV or a location less than seven meters from your TV to try to solve the problem.
- When you are viewing a teletext programme, you cannot operate the menus. Press the **TV** button to return the teletext programme to the ordinary TV programme to try operating the menus.
- If the TV operation becomes disabled suddenly, press the Main power button on the TV and turn off the main power. Try to press the Main power button again to turn on the main power. If the TV returns to a normal state, it is not a failure.

■ **Other concerns**

- When the SLEEP TIMER function operates, the TV is automatically turned off. If the TV is turned off suddenly, try to press the **⏻/I** (Standby) button to turn on the TV once again. At this time, if the TV resumes a normal state, there is no problem.
- When a WSS signal is included in the broadcast signal or the signal from an external device, or when the TV is receiving a control signal from an external device, the ZOOM mode will change automatically. When you want to return to the previous ZOOM mode, press the **ZOOM** button to choose the ZOOM mode again.



- If you bring a magnetised device such as a speaker near to your TV, a picture may be warped or unnatural colours appear at the corners of the screen. In this case, keep the device apart from your TV. If the speakers causes such phenomena, use the magnetic-shielded speakers instead.
- A picture may be tilted due to the influence of the earth's magnetism. In this case, use the "PICTURE TILT" on page 31 to complete the tilt.
- It takes a short period of time from the time an operation such as changing channels is performed until an image is displayed. This is not a malfunction. This is the time required for the image to stabilize before it can be displayed.
- The TV may emit a crackling sound due to a sudden change in temperature. It does not matter if a picture or sound does not show any abnormality. If you hear crackling sounds frequently while you are viewing the TV, other causes may be assumed. For precautionary purposes, request your service technician to inspect it.
- Touching the screen may cause you feel a slight electric shock due to its static electricity. It is an unavoidable phenomenon due to the construction of the picture tube. It is not a problem with the TV. You can rest assured that this static discharge does not have harmful influence over the human body.
- When a menu is displayed on the screen, the ZOOM mode may be automatically changed to the FULL mode. This is not a malfunction. When the menu disappears, the ZOOM mode will return to the previously set ZOOM mode.

# Specifications

Item \ Model	AV-32H50SU	AV-28H50SU
Broadcasting systems	CCIR B/G, I, D/K, L	
Colour systems	PAL, SECAM • The EXT terminals also support the NTSC 3.58/4.43 MHz system.	
Channels and frequencies	<ul style="list-style-type: none"> <li>E2-E12, E21-E69, S1-S41, X, Y, Z, Z+1, Z+2, ITALY A-H, ITALY H+1, ITALY H+2, F2-F10, F21-F69, R1-R12, R21-R69</li> <li>French cable TV channel of broadcast frequencies 116 - 172 MHz and 220 - 469 MHz</li> </ul>	
Sound-multiplex systems	A2 (B/G, D/K), NICAM (B/G, I, D/K, L) system	
Teletext systems	FLOF (Fastext), TOP, WST (World Standard System)	
Power requirements	220 - 240 V AC, 50 Hz	
Power consumption	130 W, Standby: 2.5 W	120 W, Standby: 2.5 W
Picture tube size	Viewable area 76 cm (measured diagonally)	Viewable area 66 cm (measured diagonally)
Audio output	Rated Power output: 10 W + 10 W	
Speakers	(13 cm × 6.5 cm) oval × 2	
EXT-1 terminal	Euroconnector (21-pin, SCART) • Video input, Audio L/R inputs and RGB inputs are available. • TV broadcast outputs (Video and Audio L/R) are available.	
EXT-2 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input, Audio L/R inputs and RGB inputs are available. • Video and Audio L/R outputs are available. • T-V LINK functions are available.	
EXT-3 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.	
EXT-4 terminal	RCA connectors × 3 S-VIDEO connector × 1 • Video input, S-VIDEO (Y/C) input, Audio L/MONO and R inputs are available.	
AUDIO OUT terminal	RCA connectors × 2 • Audio L/R outputs are available.	
Headphone jack	Stereo mini-jack (3.5 mm in diameter)	
Dimensions (W × H × D)	946 mm × 561 mm × 547 mm	854 mm × 508 mm × 490 mm
Weight	53.0 kg	39.0 kg
Accessories	Remote control unit × 1 (RM-C1502) AA/R6 dry cell battery × 2	

## Design and specifications subject to change without notice.

Pictures displayed on the screen using this TV's ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this constitutes an infringement of copyright.

## Specifications

Item	Model	AV-32H57SU
Broadcasting systems		CCIR B/G, I, D/K, L
Colour systems		PAL, SECAM • The EXT terminals also support the NTSC 3.58/4.43 MHz system.
Channels and frequencies		<ul style="list-style-type: none"> <li>• E2-E12, E21-E69, S1-S41, X, Y, Z, Z+1, Z+2, ITALY A-H, ITALY H+1, ITALY H+2, F2-F10, F21-F69, R1-R12, R21-R69</li> <li>• French cable TV channel of broadcast frequencies 116 - 172 MHz and 220 - 469 MHz</li> </ul>
Sound-multiplex systems		A2 (B/G, D/K), NICAM (B/G, I, D/K, L) system
Teletext systems		FLOF (Fastext), TOP, WST (World Standard System)
Power requirements		220 - 240 V AC, 50 Hz
Power consumption		130 W, Standby: 2.5 W
Picture tube size		Viewable area 76 cm (measured diagonally)
Audio output		Rated Power output: 10 W + 10 W
Speakers		(13 cm × 6.5 cm) oval × 2
EXT-1 terminal		Euroconnector (21-pin, SCART) • Video input, Audio L/R inputs and RGB inputs are available. • TV broadcast outputs (Video and Audio L/R) are available.
EXT-2 terminal		Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input, Audio L/R inputs and RGB inputs are available. • Video and Audio L/R outputs are available. • T-V LINK functions are available.
EXT-3 terminal		Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.
EXT-4 terminal		RCA connectors × 3 S-VIDEO connector × 1 • Video input, S-VIDEO (Y/C) input, Audio L/MONO and R inputs are available.
AUDIO OUT terminal		RCA connectors × 2 • Audio L/R outputs are available.
Headphone jack		Stereo mini-jack (3.5 mm in diameter)
Dimensions (W × H × D)		948 mm × 562 mm × 550 mm
Weight		52.5 kg
Accessories		Remote control unit × 1 (RM-C1502) AA/R6 dry cell battery × 2

### Design and specifications subject to change without notice.

Pictures displayed on the screen using this TV's ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this constitutes an infringement of copyright.

# JVC




**JVC**

**AV-32H5SK  
AV-28H5SK**

**T-V LINK**

**COLOUR TELEVISION**

**INSTRUCTIONS**



*plain English  
approved*  
by the word centre

## ■ Warning

**DO NOT cut off the mains plug from this equipment.** If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adaptor or consult your dealer.

If nonetheless the mains plug is cut off, remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If a new mains plug has to be fitted, then follow the instruction given below:

### Important

**Do not** make any connection to the larger terminal which is marked with the letter E or by the safety earth symbol  $\perp$  or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue: Neutral  
Brown: Live

As these colours may not correspond with the coloured marking identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.


The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When replacing the fuse, use only a correctly rated approved type and always re-fit the fuse cover.

## ■ If in doubt — consult a competent electrician.

### How to replace the fuse

Open the fuse compartment with a blade screwdriver, and replace the fuse.

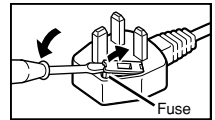

## ■ Guidelines for safe operation


This equipment has been designed and manufactured to comply with international safety standards. However, as with any electrical appliance, care must be taken to ensure optimal results and operational safety.

- Before attempting to use this equipment, read the operating instructions thoroughly.
- Ensure that all electrical connections (including the mains plug, extension leads, etc.) have been made in accordance with the manufacturer's instructions.
- If ever in doubt about the installation, operation or safety of this equipment, consult your dealer.
- Handle all glass panels or covers with care.
- Never operate this equipment if it appears damaged or operates abnormally. Turn the power off, disconnect the main power plug and consult your dealer.
- Never remove any affixed panels or covers. Doing so may result in electrical shock.
- Never leave this equipment operating unattended unless otherwise specifically stated that it is designed to do so or in standby mode. Only use the designated power switch to turn off the power and ensure that all potential users are instructed how to do so. Make special arrangements for infirm or handicapped persons.
- Never watch TV while operating a motor vehicle. It is illegal to watch TV while driving.
- Never listen to headphones at high volume. Doing so may damage your hearing.
- Never obstruct the ventilation of this equipment. Doing so may cause overheating and result in a malfunction or damage.
- Never use makeshift stands or attempt to affix legs with wood screws. When using a manufacturer's approved stand or legs, use only the fixtures provided and follow the installation instructions.
- Never allow this equipment to be exposed to rain or moisture.
- Never allow anyone, especially children, to insert anything into an opening in the case. Doing so may result in a fatal electrical shock.
- Never guess or take chances with electrical equipment of any kind. It is better to be safe than sorry.


## How to move the TV

When moving the TV, make sure that it is held by two people as shown in the illustration. Be careful not to trap your hands when putting the TV down.


1

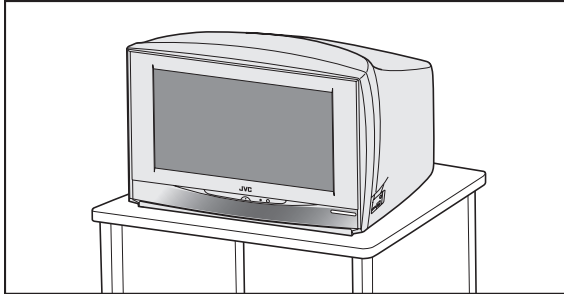

2

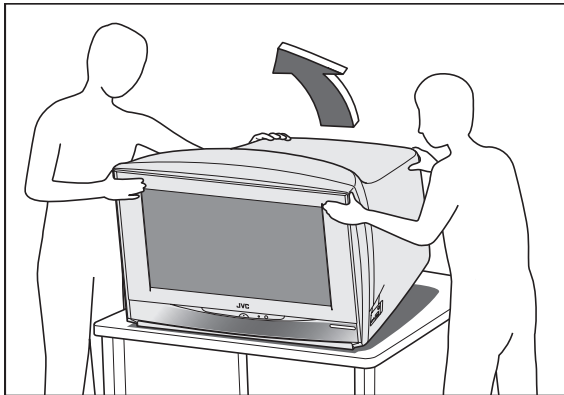

3

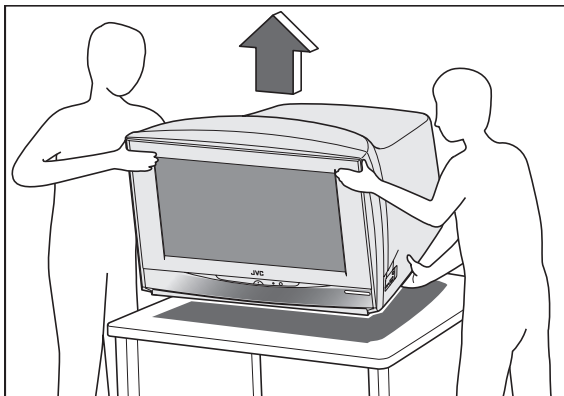

Thank you for buying this JVC colour television.

To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### CAUTION:


- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.
- Avoid damaging the AC plug and power cord.
- When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.

### Distance recommendations

Avoid improper installation and never position the unit where good ventilation is impossible.

When installing this TV, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture.

Keep to the minimum distance guidelines shown for safe operation.

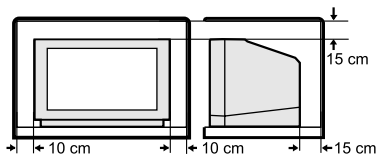

**Failure to take the following precautions may result in damage to the TV or remote control.**

**DO NOT block the TV's ventilation openings or holes.**

(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)

**DO NOT place anything on top of the TV.**

(such as cosmetics or medicines, flower vases, potted plants, cups, etc.)

**DO NOT allow objects or liquid into the cabinet openings.**

(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

**DO NOT place any naked flame sources, such as lighted candles, on the TV.**

The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it hard. Never use any cleaner or detergent on it.

In the event of a fault, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

# CONTENTS

---

<b>Setting up your TV .....</b>	<b>6</b>	<b>PICTURE menu .....</b>	<b>22</b>
Connecting the aerial and VCR .....	6	PICTURE MODE.....	22
Connecting the power cord to the AC outlet.....	7	CONTRAST .....	22
Putting the batteries into the remote control.....	7	BRIGHT.....	22
Initial settings .....	7	SHARP.....	22
T-V LINK FUNCTIONS .....	10	COLOUR.....	22
<b>TV buttons and functions .....</b>	<b>12</b>	HUE.....	22
Turn the main power on .....	12	COLOUR TEMP.....	22
Turn the TV on from standby mode .....	12	FEATURES .....	23
Choose a TV channel .....	12	<b>SOUND menu .....</b>	<b>25</b>
Adjust the volume .....	12	STEREO / I • II .....	25
<b>Remote control buttons and functions.....</b>	<b>13</b>	BASS.....	25
Turn the TV on or off from standby mode ...	13	TREBLE .....	25
Choose a TV channel .....	13	BALANCE .....	25
Watch images from external devices .....	14	HYPER SOUND.....	25
Adjust the volume .....	15	<b>FEATURES menu.....</b>	<b>26</b>
Displaying the current time .....	15	SLEEP TIMER .....	26
ZOOM function.....	16	CHILD LOCK.....	26
HYPER SOUND function .....	17	BLUE BACK.....	28
Return to TV channel instantly.....	17	<b>SET UP menu .....</b>	<b>29</b>
Operating a JVC brand VCR or DVD player.....	17	AUTO PROGRAM.....	29
<b>Teletext function .....</b>	<b>18</b>	EDIT/MANUAL .....	29
Basic operation .....	18	LANGUAGE .....	32
Using the List Mode .....	18	PICTURE TILT .....	33
Hold.....	19	DECODER (EXT-2).....	33
Sub-page .....	19	EXT SETTING.....	34
Reveal.....	19	<b>Additional preparation .....</b>	<b>37</b>
Size .....	19	Connecting the external devices .....	37
Index .....	19	<b>CH numbers .....</b>	<b>39</b>
Cancel.....	20	<b>Troubleshooting .....</b>	<b>40</b>
<b>Using the TV's menu.....</b>	<b>21</b>	<b>Specifications .....</b>	<b>43</b>
Basic operation .....	21		



# Setting up your TV

## Caution

- Turn off all the equipment including the TV before connecting anything.

## Connecting the aerial and VCR


- The connecting cables are not provided.
- For further details, refer to the manuals provided with the devices to be connected.

■ If connecting a VCR, follow ① → ② → ③.


■ If not connecting a VCR, follow ①.

To operate T-V LINK functions, a T-V LINK compatible VCR must be connected to the EXT-2 terminal on the TV. For details about T-V LINK functions, see “T-V LINK FUNCTIONS” on page 10.

- A video can be viewed from the VCR without performing ③. For details, refer to your VCR instruction manual.
- To connect additional external devices, please see “Additional preparation” on page 37.
- To connect speakers and amplifier, please see “Connecting Speakers/Amplifier” on page 38.
- When a decoder is connected to a T-V LINK compatible VCR, set the DECODER (EXT-2) function to ON. For details, see “DECODER (EXT-2)” on page 33. Otherwise, you will not be able to view scrambled channels.

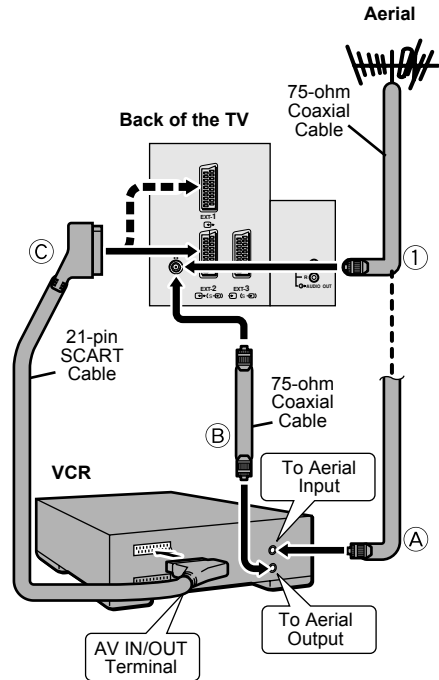

## ■ Rear Panel

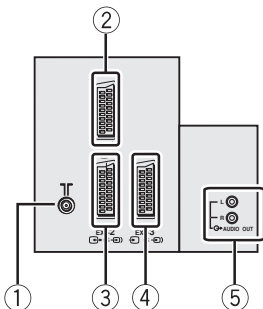


- ① Aerial socket (6)
- ② EXT-1 terminal (6, 34, 37)
- ③ EXT-2 terminal (6, 10, 34, 37)
- ④ EXT-3 terminal (34, 37)
- ⑤ AUDIO OUT terminal (38)

## Connecting the power cord to the AC outlet

 
### Caution

- Operate only from the power source specified (AC 220 – 240 V, 50 Hz) on the unit.



## Putting the batteries into the remote control


Use two AA/R6 dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

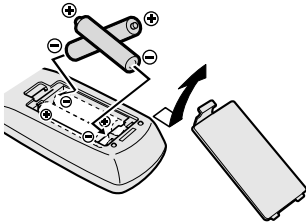

- Follow the warnings printed on the batteries.
- Battery life is about six months to one year, depending on your frequency of use.
- The batteries we supply are only for setting up and testing your TV, please replace them as soon as necessary.
- If the remote control does not work properly, replace the batteries.


## Initial settings

When the TV is first turned on, it enters the initial setting mode, and the JVC logo is displayed. Follow the instructions on the on-screen display to make the initial settings.

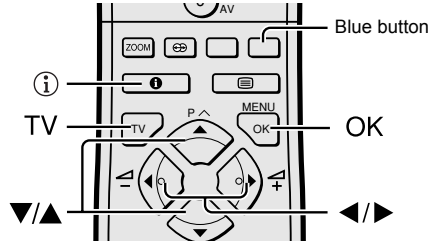

### 1 Press the Main power button on the TV

The Power lamp lights, and the JVC logo is displayed.

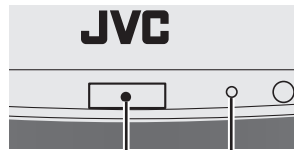

Main power button

Power lamp

- The JVC logo does not appear when your TV has been turned on once. In this case, use the “LANGUAGE” and “AUTO PROGRAM” functions to make the initial settings. For details, see “SET UP menu” on page 29.

### 2 Press the OK button

The LANGUAGE menu appears.




00002(E)-EN

- To receive satellite broadcast you need a satellite tuner.

**3 Press the OK button to start the AUTO PROGRAM function**


The AUTO PROGRAM menu appears and received TV channels are automatically registered in the Programme numbers (PR).

- To cancel the AUTO PROGRAM function:  
Press the TV button.

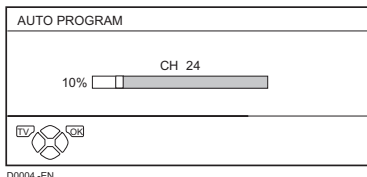


**After the TV channels have been registered in the Programme numbers (PR), the EDIT menu appears**

- You can begin to edit the Programme numbers (PR) using the EDIT/MANUAL function. For details, see “EDIT/MANUAL” on page 29.
- If you do not need to use the EDIT/MANUAL function, go to the next step.

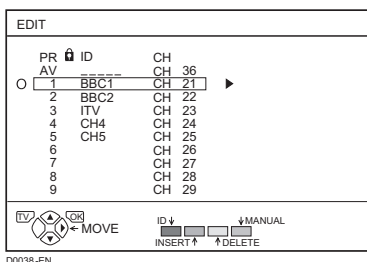

**4 Press the OK button to display the T-V LINK menu**

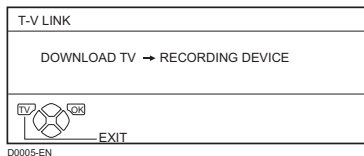

**5 If you do not have a T-V LINK compatible VCR connected:**

Press the TV button to exit the T-V LINK menu.

The T-V LINK menu disappears.

**If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:**

Follow the operating procedure “Downloading the data to VCR” on page 10 to transmit the Programme number (PR) data.

**Now, the initial settings are complete, and you can watch the TV**

- BBC1, BBC2, ITV, Channel 4 and Channel 5 are automatically set to the programme numbers PR1 to PR5. If the TV doesn’t receive one of these TV channels, that programme number (PR) will not be set. Programme number PR6 is not normally set.
- When your TV can detect the TV channel name from the TV channel broadcast signal, it automatically registers the TV channel name (ID) to the Programme number (PR) in which the TV channel has been registered.
- If a TV channel you want to view is not set to a Programme number (PR), manually set it using the MANUAL function. For details, see “EDIT/MANUAL” on page 29.
- The TV channel is not registered in Programme number PR 0 (AV). When you want to register a TV channel to PR 0 (AV), manually set it using the MANUAL function. For details, see “EDIT/MANUAL” on page 29.

- In some areas you may get TV reception from more than one transmitter, for example different ITV regions. In this case each TV channel could be set twice. If this happens, the first set of channels will have the stronger signal. If you want to delete the second set of channels, you will have to do it manually (see page 30).

If you have any problems setting up your new TV, please call the **JVC** Helpline on **0870 330 5000**.

## ■ ACI function

This TV has an ACI function which decodes the ACI (Automatic Channel Installation) data.

Using the ACI function allows all TV channels transmitted from the cable TV station to be properly registered quickly according to the data from the cable TV station.

## Caution

- If your cable TV station broadcasts ACI data and if “ACI START/ACI SKIP” appears in the AUTO PROGRAM menu, the ACI function is enabled. In all other cases, it is disabled.

---

### 1 Press the ▼/▲ buttons to choose ACI START. Then press the OK button to start the ACI function

#### When you don't want to use the ACI function:

Press the ▼/▲ buttons to choose ACI SKIP and then press the **OK** button.

#### If the AUTO PROGRAM menu changes to another menu:

Depending on your cable TV station, there may be a broadcast selection menu set up by the cable TV station.

Follow the menu indications and use the ◀/▶ and ▼/▲ buttons to operate the menu. After you have made the setting, press the **OK** button.

### If “ACI ERROR” is displayed in the AUTO PROGRAM menu:

“ACI ERROR” denotes that the ACI function is not working properly. Press the **OK** button to start the ACI function again.

If “ACI ERROR” still appears even after you have tried to start the ACI function several times, press the ▶ button to start the AUTO PROGRAM function. It does not cause any problem because all the TV channels are registered to the Programme numbers (PR) by the AUTO PROGRAM function.

---

### 2 When the settings are completed, the EDIT menu is displayed. Return to the instructions that you were reading before, and continue the operation

#### When the “Initial settings” have been made:

Return to step 6 of “Initial settings” on page 7.

#### When the “AUTO PROGRAM” has been made:

Return to step 6 of “Initial settings” on page 7.


- 
- If you have any questions about the items in the Broadcast Selection menu or how to operate the menu, please contact your cable TV station.
  - When the cable TV broadcast reception is poor, the ACI function will not work properly.
  - If there is an error in the ACI data itself, the TV channel cannot be registered properly. If this happens, turn the ACI function off (ACI SKIP) and use the AUTO PROGRAM function. Alternatively, use the EDIT/MANUAL function to correct the Programme number (PR) setting.
-

## ■ Downloading the data to VCR

You can transmit the latest Programme numbers (PR) data to the VCR with the T-V LINK function.

### Caution


- This only works when the T-V LINK compatible VCR is connected to the EXT-2 terminal.
- This only works when the T-V LINK menu is displayed.

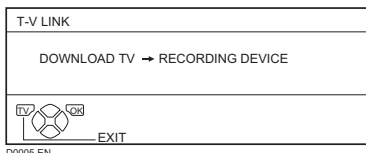

### 1 Turn on the VCR

### 2 Press the OK button

 The data transmission begins.



The T-V LINK menu disappears once the data transmission ends.

### When the T-V LINK menu is changed over to another menu:

The menu operation at the TV side is completed and it is shifted to the menu operation at the VCR side. Refer to the VCR Instruction Manual and operate the VCR.

If “FEATURE NOT AVAILABLE” appears at the T-V LINK menu, ensure the following three items are correct; then press the **OK** button to retry data transmission.

- Has the T-V LINK compatible VCR been connected to the EXT-2 terminal?
- Has the VCR power been turned on?
- Does the SCART cable that connects the EXT-2 terminal to the T-V LINK compatible VCR have all its proper connections?

## T-V LINK FUNCTIONS

When a T-V LINK compatible VCR is connected to the EXT-2 Terminal on the TV, it is easier to set up the VCR and to view videos. T-V LINK uses the following features:

### To use T-V LINK functions:

A T-V LINK compatible VCR is necessary. The VCR must be connected to the EXT-2 terminal on the TV by a fully wired SCART cable.

A “T-V LINK compatible VCR” means a JVC VCR with the T-V LINK logo or a VCR with one of the following logos. However, these VCRs may support some or all of the features described below. For details, refer to your VCR instruction manual.

“Q-LINK” (a trademark of Panasonic Corporation)

“Data Logic” (a trademark of Metz Corporation)

“Easy Link” (a trademark of Phillips Corporation)

“Megalogic” (a trademark of Grundig Corporation)

“SMARTLINK” (a trademark of Sony Corporation)

## ■ Pre-set Download

Download the registered data on the TV channels from the TV to the VCR.

The Preset Download function automatically begins when the initial setting is complete or whenever the AUTO PROGRAM or EDIT/MANUAL operations are performed.

- This function can be operated via VCR operation.

### When “FEATURE NOT AVAILABLE” is displayed:

If “FEATURE NOT AVAILABLE” is displayed, the download was not performed correctly. Before trying to download again, make sure:

- The VCR power is turned on.
- The VCR is T-V LINK compatible.
- The VCR is connected to the EXT-2 terminal.
- The SCART cable is fully wired.

### ■ Direct Rec

“What You See Is What You Record”

You can record to VCR the images that you are currently viewing on TV by a simple operation. For details, read the manual for your VCR. Operate via the VCR. “VCR IS RECORDING” is displayed.

**In the following conditions, the VCR will stop recording if the TV is turned off, if the TV channel or input is switched, or if the menu is displayed on the TV:**

- When recording images from an external device connected to the TV.
- When recording a TV channel after it has been unscrambled on a decoder.
- When recording a TV channel by using the TV’s output because that TV channel cannot be properly received on the VCR’s tuner.
- When the VCR is not ready (for example, when there is no tape inserted), “NO RECORDING” is displayed.





- 
- Operation via the TV is not possible.
  - Generally, the VCR cannot record a TV channel that cannot be received properly by the VCR’s tuner, even though you can view that TV channel on the TV. However, some VCRs can record a TV channel by using the TV’s output if that channel can be viewed on the TV, even though the TV channel cannot be received properly by the VCR’s tuner. For details, refer to your VCR instruction manual.
- 

### ■ TV Auto Power On/VCR Image View

When the VCR starts playing, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen. When the VCR menu is operated, the TV automatically turns on and the images from EXT-2 terminal are displayed on the screen.

- This function does not operate if your TV’s main power is turned off. Set your TV’s main power to on (standby mode).

# TV buttons and functions

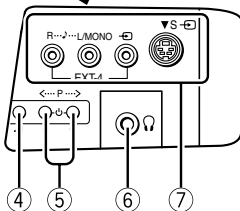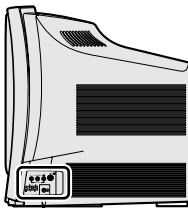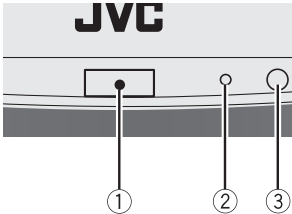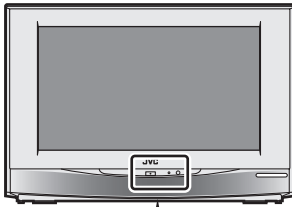

Refer to the pages in parentheses for details.

- ① Main power button (7, 12)
- ② Power lamp (7, 12)
- ③ Remote control sensor
- ④  $\nabla$  (Volume) button (12)
- ⑤ P  $\nabla/\wedge$  buttons/  $-/+$  buttons (12)
- ⑥ Headphone jack (mini jack) (37)
- ⑦ EXT-4 terminal (34, 37)

---

## Turn the main power on

---

**Press the Main power button on the TV.**

The Power lamp lights red and your TV is in the standby mode.

**To turn the Main power off:**

Press the Main power button again.  
The Power lamp goes off.

### Caution

- The main power button on the TV does not fully isolate the TV from the AC supply. If you are not going to use this TV for a long period of time, be sure to disconnect the AC plug from the AC socket.

---

## Turn the TV on from standby mode

---

**Press the P  $\nabla/\wedge$  buttons to turn the TV on from standby mode**

When the TV is turned on, the power lamp dims slightly.

---

## Choose a TV channel

---

**Press the P  $\nabla/\wedge$  buttons to choose a programme number (PR) or an EXT terminal**

---

## Adjust the volume


---

**1 Press the  $\nabla$  (Volume) button**

The volume level indicator appears.

**2 Press the  $-/+$  buttons while the volume level indicator is displayed**

# Remote control buttons and functions

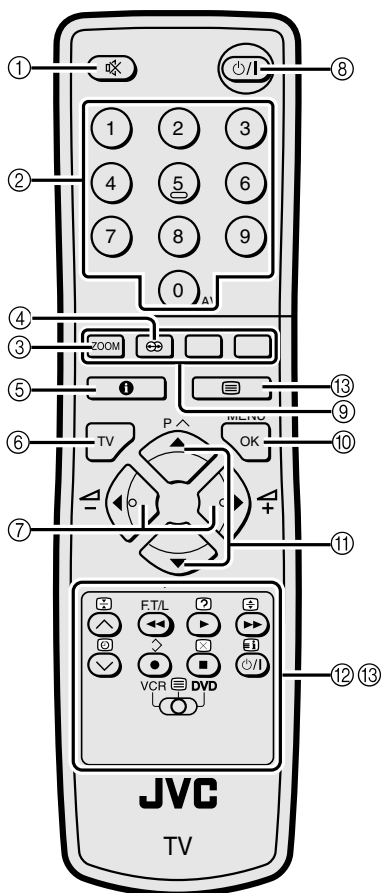

- ① Muting button
- ② Number buttons
- ③ **ZOOM** button
- ④ (hyper sound) button
- ⑤ Information button
- ⑥ **TV** button
- ⑦ ◀▶ buttons
- ⑧ (standby) button
- ⑨ Colour buttons
- ⑩ **OK** button
- ⑪ ▼▲ buttons
- ⑫ VCR/DVD/Teletext control button
- ⑬ VCR DVD switch (text) button

---

## Turn the TV on or off from standby mode

---

**Press the (standby) button to turn the TV on or off.**

When the TV is turned on, the power lamp dims slightly.

- The power can be turned on by pressing the **TV** button, ▼▲ buttons or Number buttons.

---

## Choose a TV channel

---

- **Use the number buttons:**  
**Enter the programme number (PR) of the channel using the number buttons.**

Example:

- PR 6 → press **6**
- PR 12 → press **1** and **2**




- Use the ▼/▲ buttons:  
Press the ▼/▲ buttons to choose the programme number (PR) you want.

■ Use the PR LIST:

1 Press the ⓘ (Information) button to display the PR LIST

Pressing the ⓘ (Information) button changes the display as follows:

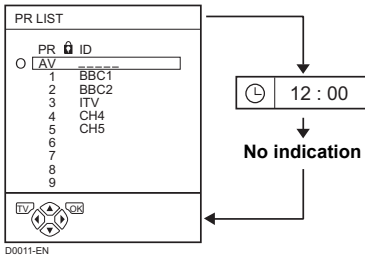


2 Press the ◀/▶ and ▼/▲ buttons to choose a Programme number (PR). Then press the OK button

- For Programme numbers (PR) with the CHILD LOCK function set, the (CHILD LOCK) mark is displayed next to the Programme number (PR) in the PR LIST.
- Even if you try to choose a Programme number (PR) with the CHILD LOCK function set, the (CHILD LOCK) mark will appear, and you cannot watch the TV channel. To watch the TV channel, see “CHILD LOCK” on page 26.
- If the picture is tilted, correct it. See “PICTURE TILT” on page 33.

## Watch images from external devices

- Use the 0 (AV) button:  
Press the 0 (AV) button to choose an EXT terminal.

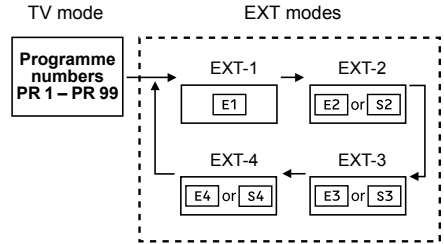

- Use the ▼/▲ buttons:  
Press the ▼/▲ buttons to choose an EXT terminal.

■ Use the PR LIST:

1 Press the ⓘ (Information) button to display the PR LIST

2 Press the ◀/▶ and ▼/▲ buttons to choose an EXT terminal. Then press the OK button

- The EXT terminals are registered after the Programme number PR 99.
- You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details, see “S-IN (S-VIDEO input)” on page 34.
- If you do not have a clear picture or no colour appears, change the colour system manually. See “COLOUR SYSTEM” on page 23.
- If you choose an EXT terminal with no input signal, the EXT terminal number becomes fixed on the screen.
- This TV set has a function which can automatically change over the input according to a special signal output from an external device. (The EXT-4 terminal does not support it.)


**To return to a TV channel:**

Press the **TV** button, the **▼/▲** buttons or the Number buttons.

**To use the Programme number PR 0 (AV):**

When the TV and VCR are connected only by the Aerial cable, choosing the Programme number PR 0 (AV) allows you to view images from the VCR. Set the VCR RF channel to the Programme number PR 0 (AV) manually. For details, see “EDIT/MANUAL” on page 29.

Pressing the **0 (AV)** button changes the choice as follows:

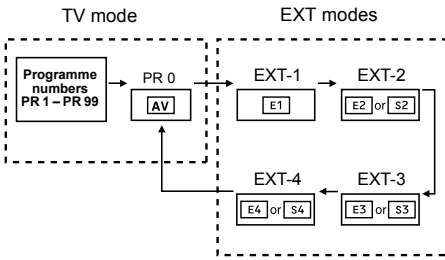

- The VCR RF channel is sent as the RF signal from the VCR.
- Also refer to your VCR instruction manual.

**Adjust the volume**

**Press the ◀/▶ buttons to adjust the volume.**

The Volume indicator appears and the volume changes as you press the **-/+** buttons.

**■ Muting the sound**

**Press the 🚫 (muting) button to turn off the sound.**


Pressing the 🚫 (muting) button again restores the previous volume level.

**Displaying the current time**

You can display the Current Time on the screen.

**Press the ⓘ (Information) button to display the current time**

Pressing the ⓘ (Information) button changes the display as follows:

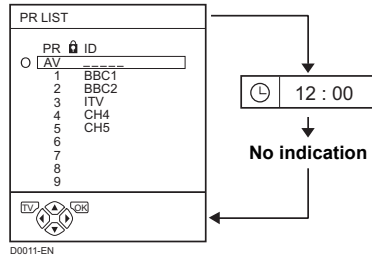

- This TV uses teletext data to set the current time. If the TV has not received a TV channel that has teletext programmes since it was turned on, the time display is blank. To view the current time, choose a TV channel that has teletext programmes.
- When watching videos, an incorrect current time is sometimes displayed.

## ZOOM function

You can change the screen size according to the picture aspect ratio. Choose the optimum one from the following ZOOM modes.

### AUTO:

For any picture format except Normal Picture (4:3 Aspect Ratio), the picture will be automatically displayed in the optimum screen size.

For Normal Picture (4:3 Aspect Ratio), the picture displayed in accordance with the ZOOM mode set on the 4:3 AUTO ASPECT menu. For details, see “4:3 AUTO ASPECT” on page 24.

- AUTO may not function properly with poor signal quality. In this case, choose an optimum ZOOM mode manually.
- This TV supports WSS (wide-screen signals). When broadcasts with WSS are received with the ZOOM mode set at AUTO, the most suitable ZOOM mode is automatically chosen according to the WSS received.

 
### REGULAR:

Use to view a normal picture (4:3 aspect ratio) as its original size is.



### PANORAMIC:

This mode stretches the left and right sides of a normal picture (4:3 Aspect Ratio) to fill the screen, without making the picture appear unnatural.



- The top and bottom of the picture are slightly cut off.


### 14:9 ZOOM:

 This mode zooms up the Wide Picture (14:9 Aspect Ratio) to the upper and lower limits of the screen.




### 16:9 ZOOM:

This mode zooms up the Wide Picture (16:9 Aspect Ratio) to the full screen.




### 16:9 ZOOM SUBTITLE:

 This mode zooms up the Wide Picture (16:9 Aspect Ratio) with subtitles to the full screen.



### FULL:

 
This mode uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.



Use for pictures with a 16:9 aspect ratio that have been squeezed into a normal picture (4:3 aspect ratio), you can restore their original dimensions.

## ■ Choose the ZOOM mode

### 1 Press the ZOOM button to display the ZOOM menu

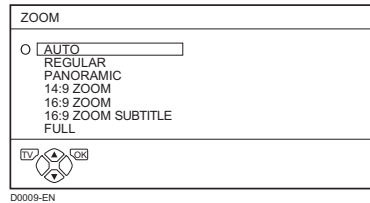

### 2 Press the ▼/▲ buttons to choose a ZOOM mode. Then press the OK button

The picture expands and the chosen ZOOM mode is displayed in about 5 seconds.

- The ZOOM mode may be automatically changed due to the control signal from an external device. When you want to return to the previous ZOOM mode, choose the ZOOM mode again.

## ■ Adjusting the visible area of the picture

If subtitles or the top (or bottom) of the picture are cut off, adjust the visible area of the picture manually.

### 1 Press the **ZOOM** button

The ZOOM menu appears.

### 2 Press the **OK** button to display the ZOOM mode indication

Indicator is displayed.




### 3 While it is displayed, press the **▼/▲** buttons to adjust the visible area vertically

- You cannot adjust the visible area in REGULAR or FULL mode.

The visible area adjustment is saved even after the TV channel is changed.

However, it is cancelled if the following operations are performed.

- The power is turned off/on
- The ZOOM mode is changed
- The  (Text) button is pressed
- The TV is switched between TV mode and EXT mode

## HYPER SOUND function

You can enjoy sounds with a wider ambience.

### Press the (HYPER SOUND) button to turn the HYPER SOUND function on or off

- The HYPER SOUND function does not work properly with mono sound.
- The HYPER SOUND function can be also turned on or off by using the SOUND menu. For details, see "HYPER SOUND" on page 25.

## Return to TV channel instantly

You can return to a TV channel instantly.

### Press the **TV** button

The TV returns to the TV mode and a TV channel appears.

## Operating a JVC brand VCR or DVD player

You can operate a JVC brand VCR or DVD player. Pressing the button having the same appearance as the original remote control button of a device makes the function work in the same way as the original remote control.

### 1 Set the VCR DVD Switch to the VCR or DVD position

#### VCR:

When you are operating the VCR, set the switch to the VCR position.


#### DVD:

When you are operating the DVD player, set the switch to the DVD position.

### 2 Press the VCR/DVD Control Button to control your VCR or DVD player

- If your device is not made by JVC, these buttons cannot be used.
- Even if your device is made by JVC, some of these buttons or any one of the buttons may not work, depending on the device.
- You can use the  $\nabla/\wedge$  buttons to choose a TV channel. The VCR will receive or choose the chapter the DVD player plays back.
- Some DVD player models use the  $\nabla/\wedge$  buttons for both operating of Fast forward/backward functions and choosing the chapter. In this case, the  $\blacktriangleleft/\blacktriangleright$  buttons do not work.

# Teletext function

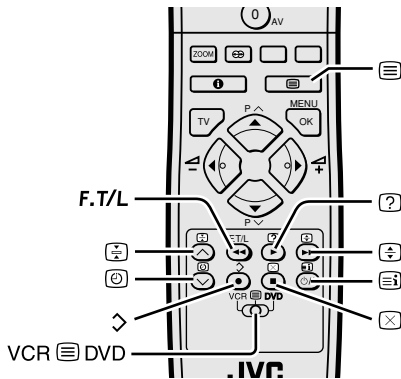


## Basic operation

- 1 Choose a TV channel with a teletext broadcast
- 2 Set the VCR DVD switch to the (Text) position



- 3 Press (Text) button to display the teletext  
Pressing (Text) button changes the mode as follows:

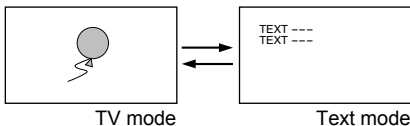

- 4 Choose a teletext page by pressing the / buttons, Number buttons or Colour buttons

### To return to the TV mode:

Press the **TV** button or (Text) button.

- If you have trouble receiving teletext broadcasts, consult your local dealer or the teletext station.
- No menu operations are possible when viewing a teletext programme.
- Language display depends on the country which was set on the COUNTRY menu. If characters on a Teletext programme do not appear properly, change the COUNTRY Setting to other country's. To change the COUNTRY setting, perform steps 1 and 2 of the "AUTO PROGRAM" procedure on page 29 and then press the **OK** button.

The last teletext page displayed is memorised. The last teletext page is cleared under following conditions.

- Turning the power off
- Changing the channel
- Switching the TV input

## Using the List Mode

 
You can store the numbers of your favourite teletext pages in memory and call them up quickly using the colour buttons.

### ■ To store the page numbers:

- 1 Press **F.T/L** button to engage the List mode

The stored page numbers are displayed at the bottom of the screen.

- 2 Press a Colour button to choose a position. Then press the Number buttons to enter the page number



### 3 Press and hold down ↵ (Store) button

The four page numbers blink white to indicate that they are stored in memory.

## ■ To call up a stored page:

### 1 Press the **F.T/L** button to engage the List mode

### 2 Press a colour button to which a page has been assigned



 
### To exit the List mode:

Press the **F.T/L** button again.


## Hold

You can hold a teletext page on the screen for as long as you want, even while several other teletext pages are being received.

### Press the (Hold) button



### To cancel the Hold function:

Press  (Hold) button again.

## Sub-page

Some teletext pages include sub-pages that are automatically displayed.

You can hold any sub-page, or view it at any time.


### 1 Press the (Sub-page) button to operate the Sub-page function

### 2 Press the Number buttons to enter a sub-page number

Example:

- 3rd sub-page → press **0, 0, 0** and **3**.

### To cancel the Sub-page function:

 
Press the  (Sub-page) button again.

## Reveal

Some teletext pages include hidden text (such as answers to a quiz).

You can display the hidden text.


### Each time you press the (Reveal) button, text is hidden or revealed



## Size

You can double the height of the teletext display.

### Press the (Size) button.

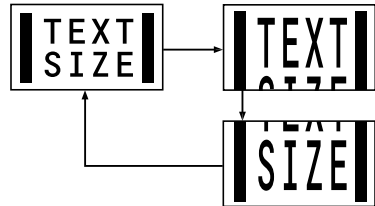

## Index

You can return to the index page instantly.

### Press (Index) button

Returns to page 100 or a previously specified page.

---

## Cancel

---


You can search for a teletext page while watching TV.

---

**1 Press the Number button to enter a page number, or press a Colour button**


The TV searches for a teletext page.


---

**2 Press  (Cancel) button**

The TV programme appears. When the TV finds the teletext page, its page number appears in the upper left of the screen.

---

**3 Press  (Cancel) button to return to a teletext page when the page number is on the screen**


- The TV mode cannot be resumed even by pressing the  (Cancel) button. A TV programme is temporarily displayed instead of the teletext programme.





# PICTURE menu

---

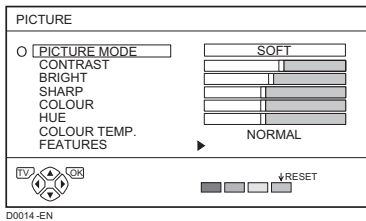

- While the PICTURE menu is displayed, pressing the blue button will set the CONTRAST, BRIGHT, SHARP, COLOUR, HUE settings to their default settings.
- 

## PICTURE MODE

---

You can choose one of three PICTURE MODES to adjust the picture settings automatically.

### **BRIGHT:**

Heightens contrast and sharpness.

### **STANDARD:**

Standardizes picture adjustment.

### **SOFT:**

Softens contrast and sharpness.

---

## CONTRAST

---

You can adjust the picture contrast.

- ◀ : lower
  - ▶ : higher
- 

## BRIGHT

---

You can adjust the picture brightness.

- ◀ : darker
  - ▶ : brighter
- 

## SHARP

---

You can adjust the picture sharpness.

- ◀ : softer
  - ▶ : sharper
- 

## COLOUR

---

You can adjust the picture colour.

- ◀ : lighter
  - ▶ : deeper
- 

## HUE

---

You can adjust the picture tint.

- ◀ : reddish
  - ▶ : greenish
  - You can change the HUE setting (picture hue) when the colour system is NTSC 3.58, NTSC 4.43. (See “Specifications” on page 43)
- 

## COLOUR TEMP.

---

You can select one of three COLOUR TEMP. modes (three tones of white) to adjust the white balance of the picture. Since white is the colour which is used as a reference for all the other colours, changing the COLOUR TEMP. mode affects the appearance of all the other colours on the screen.

### **COOL:**

A bluish white. Using this mode when watching bright pictures allows you to enjoy a more vivid and bright picture.

### **NORMAL:**

The normal white colour.


### **WARM:**

A reddish white. Using this mode when watching films allows you to enjoy colours that are characteristic of films.

---

## FEATURES

Choose FEATURES and press the **OK** or ► button to display the sub-menu.

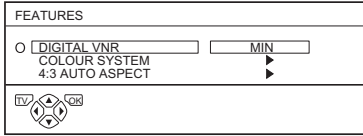

D1015-EN

### ■ DIGITAL VNR

The DIGITAL VNR function cuts down the amount of noise (snow) in the original picture. You can choose from the three DIGITAL VNR function settings of AUTO, MIN and MAX.

The TV and external input may be given different DIGITAL VNR settings.

#### **AUTO:**

The TV will automatically adjust the level of the DIGITAL VNR effect to match the amount of noise in the picture, giving you the best possible picture.

- If you set the DIGITAL VNR effect too high it can make the picture less sharp. It is recommended to use the AUTO setting if you can.

#### **MIN:**

The level of the DIGITAL VNR effect is set to the minimum. If you set the DIGITAL VNR function to AUTO but feel that the sharpness of the original picture has not been reproduced fully, change the setting from AUTO to MIN.

- The MIN setting is not suitable for low-quality pictures which contain a lot of noise.

#### **MAX:**

The level of the DIGITAL VNR effect is set to the maximum. If you set the DIGITAL VNR function to AUTO but still notice some noise, change the setting from AUTO to MAX.


- The MAX setting is not suitable for high-quality pictures which contain very little noise.

#### **OFF:**

The DIGITAL VNR function is turned off.

### ■ COLOUR SYSTEM

The colour system is chosen automatically. However, if the picture is not clear or no colour appears, choose the colour system manually.

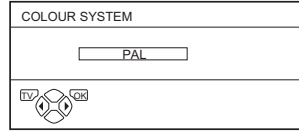

D0016-EN

#### 1 Choose COLOUR SYSTEM then press the **OK** button

#### 2 Press the ◀/▶ buttons to chose the appropriate colour system. Then press the **OK** button

#### **PAL:**

PAL system

#### **NTSC 3.58:**

NTSC 3.58 MHz system

#### **NTSC 4.43:**

NTSC 4.43 MHz system

#### **AUTO:**


This function detects a colour system from the input signal. You can only do this when you are viewing a picture from Programme number PR 0 (AV), or an EXT terminal.

- The AUTO function may not function properly if you have poor signal quality. If the picture is abnormal in the AUTO function, choose another colour system manually.
- When in the Programme numbers PR 0 (AV) to PR 99, you cannot choose NTSC 3.58 or NTSC 4.43.

### ■ 4:3 AUTO ASPECT

You can choose one of three ZOOM modes, REGULAR, PANORAMIC or 14:9 ZOOM, as the ZOOM mode for the normal picture (4:3 aspect ratio).

- 1 Choose 4:3 AUTO ASPECT then press the **OK** button

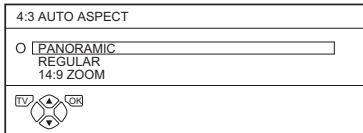


D0017-EN

- 2 Press the **▼/▲** buttons to choose a ZOOM mode. Then press the **OK** button

# SOUND menu

---

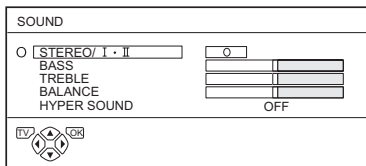

D0019-EN

---

## STEREO / I • II

---

When you are viewing a bilingual broadcast programme, you can choose the sound from Bilingual I (Sub I) or Bilingual II (Sub II). When the stereo broadcasting is received poorly, you can change from stereo to mono sound so that you can hear the broadcast more clearly and easily.

⊙: Stereo sound

○: mono sound

I : Bilingual I (sub I)

II : Bilingual II (sub II)

- The sound mode you can choose differs depending on the TV programme.
  - This function does not work in the EXT modes. And this function does not appear in the SOUND menu.
- 

---

## BASS

---

You can adjust the low tone of the sound.

◀: weaker

▶: strong

---

---

## TREBLE

---

You can adjust the high tone of the sound.

◀: weaker

▶: strong

---

---

## BALANCE

---

You can adjust the volume balance between the left and right speaker.

◀: turn the left speaker's volume level up.

▶: turn the right speaker's volume level up.

---

---

## HYPER SOUND

---

Mono sound is converted to simulated stereo for a more enjoyable audio experience.

**ON:**

This function is turned on.


**OFF:**

This function is turned off.

---

- The HYPER SOUND function does not work properly with mono sound.
  - You can turn the HYPER SOUND function on or off with a single press. For details, see "HYPER SOUND function" on page 17.
-

# FEATURES menu

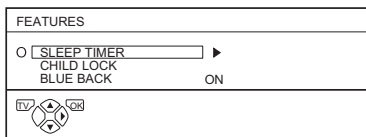


D0023-EN

## SLEEP TIMER

You can set the TV to automatically turn off after a specified period of time.

### 1 Choose SLEEP TIMER, then press the OK button

A Sub-menu of the SLEEP TIMER function appears.

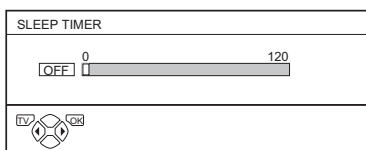

D0024-EN

### 2 Press the ◀/▶ buttons to set the period of time. Then press the OK button

 
You can set the period of time a maximum of 120 minutes (2 hours) in 10 minute increments.

- One minute before the SLEEP TIMER function turns off the TV, "GOOD NIGHT!" appears.
- The SLEEP TIMER function cannot be used to turn off the TV's main power.
- When the SLEEP TIMER function is on, you can display the Sub-menu of the SLEEP TIMER function again to confirm and/or change the remaining period of time of the SLEEP TIMER function. Press the OK button to exit the menu after confirming or changing the remaining time.

### To cancel the SLEEP TIMER function:

Press the ◀ button to set a period of time to "OFF".


## CHILD LOCK

When there is a TV channel you wish your children not to watch, you can use the CHILD LOCK function to lock out the TV channel. Even when a child chooses a Programme number (PR) in which a locked TV channel has been registered, the screen will change to blue and displays  (CHILD LOCK) so the TV channel cannot be viewed. Unless you enter a pre-set ID number by a special operation, the lock cannot be released and the child cannot view the TV channel programmes.

### ■ To set the CHILD LOCK function

#### 1 Choose CHILD LOCK, then press the 0 (AV) button

"SET ID NO." (ID number setting screen) appears.

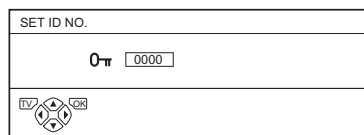

D0025-EN


#### 2 Set the ID number to your liking

##### 1 Press the ▼/▲ buttons to choose a number.

##### 2 Press the ◀/▶ buttons to move the cursor.

### 3 Press the OK button

The Sub-menu of CHILD LOCK appears.

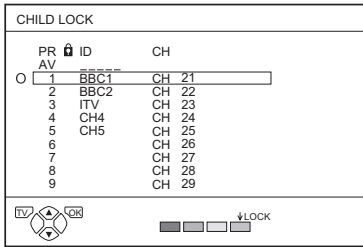

D0026-EN

### 4 Press the ▼/▲ buttons to choose a TV channel

Every time you press the ▼/▲ buttons, the Programme number (PR) changes, and the picture of the TV channel registered in the Programme number (PR) is displayed on the screen.

### 5 Press the blue button and set the CHILD LOCK function. Then press the OK button

Ⓜ (CHILD LOCK) appears and the TV channel is locked.

**To reset the CHILD LOCK function:**  
Press the blue button again.

Ⓜ (CHILD LOCK) disappears.

To disable easy resetting of the CHILD LOCK function, the menu disappears by choosing the CHILD LOCK function and pressing the OK button as in the ordinary menu operation.

## ■ To view a locked TV channel

 
### 1 Choose a Programme number (PR) in which a TV channel locked with the Number buttons or PR LIST

The screen changes to blue and the Ⓜ (CHILD LOCK) appears. You cannot view the TV channel.



D0027-EN

### 2 Press the ⓘ (Information) button to display "ID NO." (ID NO. input screen).



D0028-EN

### 3 Press the Number buttons to enter the ID number

The lock is temporarily released so you can view the TV channel.

### If you have forgotten the ID number:

Perform step 1 of "To set the CHILD LOCK function". After confirming the ID number, press the TV button to exit the menu.

- Even if you reset the lock temporarily, it does not mean that the CHILD LOCK function set for the TV channel is cancelled. The next time anyone attempts to view the TV channel, it will be locked again.
- When you would like to cancel the CHILD LOCK function, you must perform the operation "To set the CHILD LOCK function" again.
- To disable easy choosing of a Programme number (PR) in which a locked TV channel has been registered, the Programme number (PR) has been set that it cannot be chosen by the ▼/▲ buttons or the operation buttons at the TV.
- To disable easy resetting of the lock, "ID NO." (ID NO. input screen) is set so that it cannot appear unless you press the ⓘ (Information) button.

---

## **BLUE BACK**

---

You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an external device.


**ON:**

This function is turned on.

**OFF:**

This function is turned off.

# SET UP menu

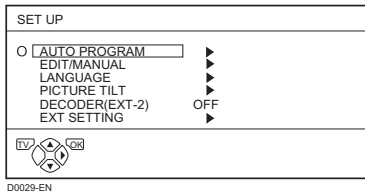

## AUTO PROGRAM

You can automatically register the TV channels which can be received well at your home in the TV's Programme numbers (PR) by performing the following. To receive satellite broadcast you need a satellite tuner.

### 1 Choose AUTO PROGRAM. Then press the OK button

The AUTO PROGRAM menu appears and received TV channels are automatically stored in the programme number (PR).

### 2 Perform steps 4 of the "Initial settings" (page 8)


## EDIT/MANUAL

The EDIT/MANUAL functions are divided into two types: editing of the current Programme numbers (PR) (EDIT functions) and manual registration of a TV channel you want to view to the Programme number (PR) (MANUAL function). The details about these functions are as follows:

### Caution

- Using the MOVE, DELETE or INSERT function rewrites the current Programme numbers (PR) list. As a result, the Programme number (PR) of some of the TV channels will change.
- Using the MANUAL function for a TV channel for which the CHILD LOCK function has been set cancels the CHILD LOCK function for the TV channel.
- Using the MANUAL function for a TV channel for which the DECODER (EXT-2) function has been set to ON returns the setting of the DECODER (EXT-2) function for the TV channel to OFF.
- When a TV channel has already been registered in PR 99, using the INSERT function deletes the TV channel.

### 1 Choose EDIT/MANUAL, then press the OK button

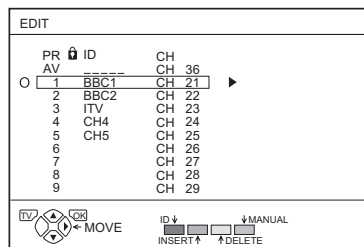

### 2 Choose a function you want to use and follow the instructions below

#### MOVE:

This function changes a Programme number (PR) of a TV channel.

#### ID:

This function registers a Channel name (ID) to a TV channel.

#### INSERT:

This function adds a new TV channel in the current Programme numbers (PR) list by using the CH number.

- You cannot use the INSERT function if you do not know a Channel number of a TV channel. Use the MANUAL function to register a TV channel in the Programme number (PR).



**DELETE:**


This function deletes an unnecessary TV channel.

**MANUAL:**

This function manually registers a new TV channel in a Programme number (PR).

**3 Press the OK button to complete the settings**

The T-V LINK menu appears.

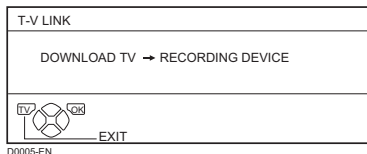

**4 If you do not have a T-V LINK compatible VCR connected:**

Press the TV button to exit the T-V LINK menu.

The T-V LINK menu disappears and all the settings are completed.

**If you have a T-V LINK compatible VCR connected to the EXT-2 terminal:**

Follow the operating procedure “Downloading the data to VCR” on page 10 to transmit the Programme number (PR) data to the VCR.


- For Programme number PR 0, “AV” appears in the Programme numbers (PR) list.
- An EXT terminal number does not appear in the Programme numbers (PR) list.
- The CH number is a number unique to the TV and corresponding to the Channel number of a TV channel. For the relationship of a Channel number and a CH number, see “CH numbers” on page 39.

**MOVE**

**1 Press the ▼/▲ buttons to choose a TV channel**

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the ► button to start the MOVE function**

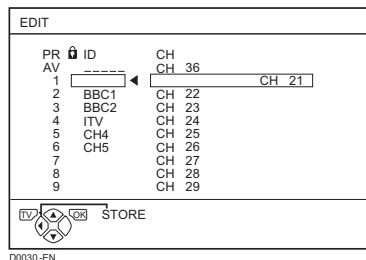

**3 Press the ▼/▲ buttons to choose a new Programme number (PR)**

**To cancel the MOVE function:**  
Press the ⓘ (Information) button.


**4 Press the ◀ button to change the Programme number (PR) of a TV channel to a new Programme number (PR)**

■ ID

**1 Press the ▼/▲ buttons to choose a TV channel**


Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.

**2 Press the red button to start the ID function**

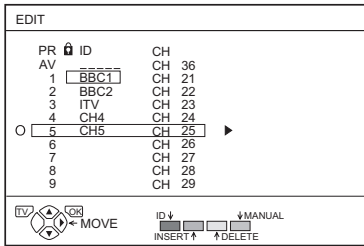


D0031-EN

**3 Press the ▼/▲ buttons to choose the first character of a Channel name (ID) you want to attach to the TV channel**

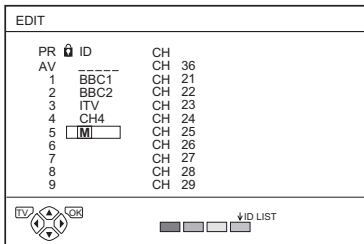

D0032-EN

**4 Press the blue button to display the ID LIST (channel name list)**

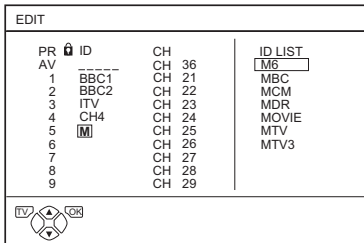

D0033-EN

**5 Press the ▼/▲ buttons to choose the Channel name (ID)**

**To cancel the ID function:**

Press the ⓘ (Information) button.

**6 Press the OK button to register a Channel name (ID) to a TV channel**

- You can register your unique Channel name (ID) to the TV channel. When step 3 is completed, do not go to step 4, but press the ◀/▶ buttons to move the cursor and the ▼/▲ buttons to choose a character for completing the Channel name (ID). Then press the OK button to register the Channel name (ID) to the TV channel.


■ INSERT

**Preparation:**

- A CH number unique to this TV and corresponding to the Channel number of a TV channel is required. Find the corresponding CH number from a table “CH numbers” on page 39 based on the Channel number of the TV channel.

**1 Press the ▼/▲ buttons to choose a Programme number (PR) for which you will register a new TV channel**

**2 Press the green button and start the INSERT function.**

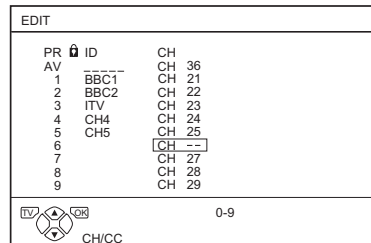

D0034-EN

**To cancel the INSERT function:**

Press the ⓘ (Information) button.

**3 Press the Number buttons to enter the remaining CH number**

The TV shifts to registration mode. When the registration is completed, the picture of the TV channel appears on the screen.

- The CH number tells the TV the broadcast frequency of channel. If the TV cannot detect a TV channel on that frequency, you will not be able to receive a picture for that channel.

**■ DELETE**

**1 Press the ▼/▲ buttons to choose a TV channel**

Every time you press the ▼/▲ buttons, the Programme number (PR) is changed over, and the picture of the TV channel registered in the Programme number (PR) appears on the screen.


**2 Press the yellow button to delete the TV channel**

The TV channel is deleted from the Programme numbers (PR) list.

**■ MANUAL**

**1 Press the ▼/▲ buttons to choose a Programme number (PR) to which you want to register a new TV channel**

**2 Press the blue button to activate the MANUAL function**

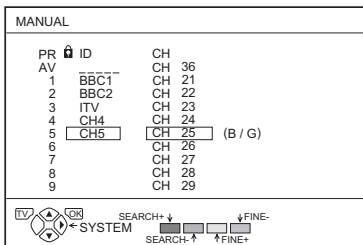

**To cancel the MANUAL function:**  
Press the **i** (Information) button.

**3 Press the green or red button to search for a TV channel**

Scanning stops when the TV finds a TV channel. Then the TV channel is displayed.

**4 Press the green or red button repeatedly until the TV channel you want appears**

**If the TV channel reception is poor:**  
Press the blue or yellow button to fine-tune the TV channel.

**5 Press the OK button and register the TV channel to a Programme number (PR)**

The normal EDIT menu is resumed.

**LANGUAGE**

You can choose the language you want to use for the on-screen display from the language list in a menu.

**1 Choose LANGUAGE, then press the OK button**

A sub-menu of the LANGUAGE function appears.




**2 Press the ◀/▶ and ▼/▲ buttons to choose a language. Then press the OK button**

## PICTURE TILT

There are cases where the Earth's magnetic force may make the picture tilt. If this happens, you can correct the picture tilt.

- 1 Press the **▼/▲** buttons to choose **PICTURE TILT**. Then press the **OK** button

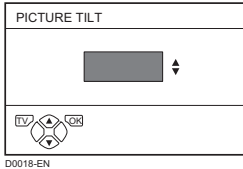


- 2 Press the **▼/▲** buttons until the picture becomes level. Then press the **OK** button

## DECODER (EXT-2)

When connecting a Decoder with a T-V LINK compatible VCR connected to the EXT-2 terminal, use the DECODER (EXT-2) function to unscramble the scrambled TV channels.

- 1 Turn on the Decoder power
- 2 Display the TV channel capable of being unscrambled with the Decoder on the TV  
Even if the Decoder is functioning, a scrambled picture appears at this time.
- 3 Press the **OK** button to display the **SET UP** menu

The SET UP menu appears.

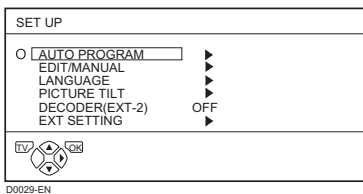

- 4 Press the **▼/▲** buttons to choose **DECODER (EXT-2)**. Then press the **◀/▶** buttons to choose **ON**


An unscrambled picture appears.

**To cancel the DECODER (EXT-2) function:**

Press the **◀/▶** buttons to choose OFF.

- 5 Press the **OK** button to complete the setting

The T-V LINK menu appears.

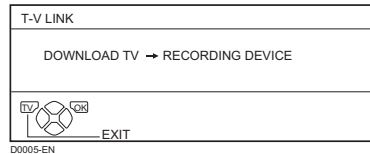

- 6 Follow the operating procedure "Downloading the data to VCR" on page 10 to transmit the Program number (PR) data to the VCR

- 7 If you have another TV channel capable of being unscrambled with a Decoder, repeat steps 2 through 7


If for some reason the DECODER (EXT-2) function has been set to "ON" but the TV channel cannot be unscrambled, check the following:

- Has the Decoder been connected to the VCR properly according to the VCR and Decoder Instruction Manuals?
- Has the Decoder power been turned on?
- Can the TV channel be unscrambled with a Decoder?
- Is it necessary to change the VCR settings in order to connect the Decoder? Confirm that the VCR is set properly by rechecking the VCR Instruction Manual.

## EXT SETTING

### 1 Choose EXT SETTING, then press the OK or ► button

The EXT SETTING menu appears.

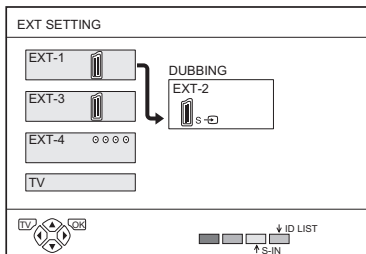

### 2 Follow the instructions for the function you want to use and operate the function

#### S-IN:

You can enjoy the high-quality picture of the 2 S-VIDEO signal (Y/C signal).

#### ID LIST:

You can have a name for each of the devices connected for each EXT terminal.

#### DUBBING:

You can choose a signal source to be output from an EXT-2 terminal.

### ■ S-IN (S-VIDEO input)

When connecting a device (such as S-VHS VCR) which enables an S-VIDEO signal (Y/C signal) to be output, you can enjoy high-quality picture of the S-VIDEO signal (Y/C signal).

#### Preparation:

- First, read the device instruction manual and “Additional preparation” on page 37 to connect the device to the TV properly. Second, follow the device instruction manual to set the device so that an S-VIDEO signal (Y/C signal) can be output to the TV.
- Do not set S-IN (S-VIDEO input) to the EXT terminal connected to a device which cannot output an S-VIDEO (Y/C signal). If it is set wrongly, a picture cannot appear.

### 1 Choose an EXT terminal

### 2 Press the yellow button and set the S-IN (S-VIDEO input). Then press the OK button

An S-IN (S-VIDEO input) mark is displayed. You can view an S-VIDEO signal (Y/C signal) instead of the regular video signal (composite signal).

#### To cancel the S-IN (S-VIDEO input) setting:

Press the yellow button and turn off S-IN (S-VIDEO input) mark. The regular video signal (composite signal) pictures are resumed.


- The EXT-1 terminal does not support S-VIDEO signal (Y/C signal) and you cannot set S-IN (S-VIDEO input) in the EXT-1 terminal.
- Setting S-IN (S-VIDEO input) changes the head character from “E” to “S”. For example, “E2” is changed to “S2”.
- Even a device which enables the S-VIDEO signal (Y/C signal) to be output may output a regular video signal (composite signal) depending on the device setting. If a picture cannot appear because S-IN (S-VIDEO input) setting has been made, read the device instruction manual carefully again to check for the device settings.

## ■ ID LIST

You can have a name corresponding to the devices connected for each EXT terminal. Giving a name to an EXT terminal makes the EXT terminal number appear on the screen, together with the name.

### 1 Choose an EXT terminal

### 2 Press the blue button to display the name list (ID LIST)

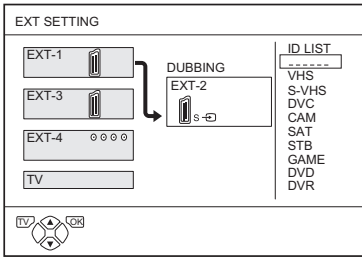

### 3 Press the ▼/▲ buttons to choose a name. Then press the OK button

The ID LIST disappears and the name is assigned to the EXT terminal.

- You cannot assign an EXT terminal name not found in the name list (ID LIST).

### To erase a name assigned to the EXT terminal:

Choose a blank space.


### 4 Press the OK button to complete the setting

## ■ DUBBING

You can choose a signal source to be output from an EXT-2 terminal.

You can choose any one of the output signal of the device connected to the EXT terminal and the picture and sound from a TV channel you are currently viewing to output it to the EXT-2 terminal.

### 1 Press the ◀/▶ buttons to choose the arrow from the menu

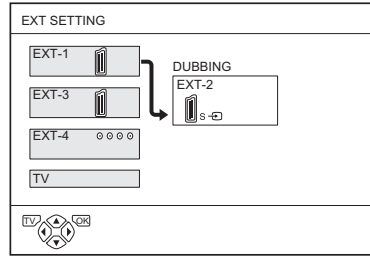

### 2 Press the ▼/▲ buttons to choose an EXT terminal or TV.

#### Then press the OK button

The arrow in the menu represents a signal flow. The left side of the arrow denotes a signal source output from the EXT-2 terminal.

#### EXT-1/EXT-3/EXT-4:

The output signal of the device connected to an EXT terminal passes through the TV and is output from the EXT-2 terminal.

**TV:**

The picture and sound of the TV channel you are currently viewing are output from the EXT-2 terminal.

---

- During dubbing, you cannot turn off the TV. Turning off the TV also turns off the output from the EXT-2 terminal.
  - When you choose an EXT terminal as an output, you can view a TV programme or a picture from the other EXT terminal while dubbing the picture from a device connected to the EXT terminal onto a VCR connected to the EXT-2 terminal.
  - The RGB signals from TV games cannot be output. Teletext programmes cannot be output.
-





■ **Devices which can output the S-VIDEO signal (Y/C signal) such as a S-VHS VCR**

Connect the device to an EXT terminal other than the EXT-1 terminal.

You can choose a video input signal from the S-VIDEO signal (Y/C signal) and regular video signal (composite signal). For details of how to operate the device, see "S-IN (S-VIDEO input)" on page 34.

■ **T-V LINK compatible VCR**

Be sure to connect the T-V LINK compatible VCR to the EXT-2 terminal. If not, the T-V LINK function will not work properly.

- When connecting a T-V LINK compatible VCR to the EXT-2 terminal, be sure to connect the Decoder to the VCR. If not, the T-V LINK function may not work properly. After you have registered TV channels to the Programme numbers (PR), set the DECODER (EXT-2) function for the Programme number (PR) to ON in order to unscramble a scrambled TV channel. For details of operation, see "DECODER (EXT-2)" on page 33.
- 

■ **Connecting headphones**

Connect the headphones with a stereo mini-jack (of 3.5 mm in diameter) to the headphone jack at the TV rear panel.

- When you connect the headphones, no sound comes from the TV speakers.
- 

■ **Video/sound signal output from the EXT-2 terminal**

You can arbitrarily change over the output of the video/sound signal from the EXT-2 terminal. It is useful when you want to dub the video/sound from another device on the VCR connected to the EXT-2 terminal. For details on how to do this operation, see "DUBBING" on page 35.

■ **TV output from the EXT-1 terminal**

The output of video/sound signal of a TV channel you are currently viewing is always output from the EXT-1 terminal.

- Changing over a Programme number (PR) also changes over the TV output from the EXT-1 terminal.
  - The video/sound signal from an EXT terminal cannot be output.
  - Teletext programmes cannot be output.
- 

■ **Connecting Speakers/Amplifier**


While referring to the Audio equipment connection diagram, connect the audio equipment you desire to the TV.

You can use external front speakers to listen to the TV sound instead of the TV speakers.

**Before connecting anything:**

- Read the manuals provided with the amplifier and speakers.
- Turn the TV and Amplifier off.
- To prevent magnetism from the speakers adversely effecting the TV screen, use magnetic-shielded speakers for the front speakers.
- Note that connecting cables are not supplied.

Back of the TV

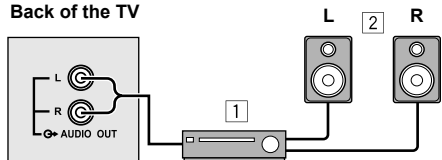

- 1 Amplifier
  - 2 Front speakers (Magnetic-shielded type)
- 

- The output from the AUDIO OUT terminal is not interrupted by headphone connection to the TV. You cannot cut the sound from the front speaker even if you connect a headphone to the TV.
  - Adjust the volume of the external speakers with the amplifier.
-

# CH numbers

---

When you want to use the INSERT function on page 31, find the CH number corresponding to the Channel number of the TV channel from this table.

CH	Channel	CH	Channel
CH 21	E21	CH 46	E46
CH 22	E22	CH 47	E47
CH 23	E23	CH 48	E48
CH 24	E24	CH 49	E49
CH 25	E25	CH 50	E50
CH 26	E26	CH 51	E51
CH 27	E27	CH 52	E52
CH 28	E28	CH 53	E53
CH 29	E29	CH 54	E54
CH 30	E30	CH 55	E55
CH 31	E31	CH 56	E56
CH 32	E32	CH 57	E57
CH 33	E33	CH 58	E58
CH 34	E34	CH 59	E59
CH 35	E35	CH 60	E60
CH 36	E36	CH 61	E61
CH 37	E37	CH 62	E62
CH 38	E38	CH 63	E63
CH 39	E39	CH 64	E64
CH 40	E40	CH 65	E65
CH 41	E41	CH 66	E66
CH 42	E42	CH 67	E67
CH 43	E43	CH 68	E68
CH 44	E44	CH 69	E69
CH 45	E45		

# Troubleshooting

---

If a problem arises while you are using the TV, please read this “Troubleshooting” guide carefully before you ask to have the TV repaired. You may be able to fix it easily by yourself. For example, if the AC plug is disconnected from the AC outlet, or the TV aerial has problems, you may think there is a problem with the TV itself.

## Important:

- This Troubleshooting guide only covers problems whose cause are not easy to determine. If you need help when you are operating a function, read the page(s) for that function carefully, not this Troubleshooting guide.
- If you have followed the Troubleshooting guide or the advice for the functions concerned without any success, remove the AC plug from the AC outlet and ask for your TV to be repaired. Do not attempt to repair the TV by yourself or remove the rear cover of the TV.

## ■ If you cannot turn on the TV

- Is the AC plug connected to the AC outlet?
- Is the Power lamp lit? If not, press the Main power button.

## ■ No picture/No sound

- Have you chosen a TV channel whose reception is extremely bad? In this case, the BLUE BACK function will be activated, the entire screen becomes blue, and the sound is muted. In spite of this, if you want to view the TV channel, follow the description “BLUE BACK” on page 28 to try to change the BLUE BACK function setting to OFF.
- Have you connected headphones to the TV? If you connect headphones to the TV no sound will come from the TV speakers.
- If the SYSTEM setting for a TV channel is incorrect, it may prevent the sound from being issued. Follow the description “EDIT/MANUAL” on page 29 to use the MANUAL function to try to change the SYSTEM setting.

## ■ Poor picture

- If noise totally obscures the picture (snow), the aerial or aerial cable may have trouble. Check the following to try to solve the trouble:
  - Has the TV and aerial been connected properly?
  - Has the aerial cable been damaged?
  - Is the aerial pointing in the right direction?
  - Is the aerial itself faulty?
- If the TV or aerial receives interference from the other devices, stripes or noise may appear in the picture. Move such devices as an amplifier, personal computer, or a hair drier that can cause interference away from your TV, or try changing its location. If the aerial suffers interference from a radio tower or high-voltage wire, please contact your local dealer.
- If the TV receives interference from a signal reflecting from mountains or buildings, double-pictures (ghosting) will occur. Try to change the aerial’s direction or replace the antenna with the one with better directionality.
- Are your COLOUR SYSTEM settings for the TV channels correct? Follow the description “COLOUR SYSTEM” on page 23 to try to solve the trouble.

- Have the COLOUR and BRIGHT settings been adjusted properly? Follow the description “BRIGHT” and “COLOUR” on page 22 to try to adjust them properly.
- Videotaping teletext is not recommended because it may not record correctly.
- When a white and bright still image (such as a white dress) is displayed on the screen, the white part may look as if it were coloured. This is unavoidable due to the nature of the picture tube itself, and is not a fault. When the picture disappears from the screen, the unnatural colours will also disappear.
- When viewing images from commercially available video software products, or videos from videotapes which have been recorded improperly, the top of the image may be distorted. This is due to the condition of the video signal, and is not a TV fault.

### ■ Poor sound

- Have you adjusted BASS or TREBLE properly? If not, follow the description “BASS” or “TREBLE” on page 25.

When the TV channel reception is poor, it can be hard to hear the stereo or bilingual sound. In this case, follow the description “STEREO / I • II” on page 25 to hear the sound more easily by changing it to a mono sound.

### ■ Operation disabled

- Have the batteries of the remote control become exhausted? Follow the description “Putting the batteries into the remote control” on page 7 and replace them with new batteries to try to solve the problem.
- Have you tried to use the remote control from the sides or rear of the TV or from more than seven metres away? Use the remote control in front of your TV and less than seven metres away to try to solve the problem.
- When you are viewing a teletext programme, you cannot operate the menus. Press the **TV** button to return to the ordinary TV programme and then try operating the menus.
- If the TV operation becomes disabled suddenly, press the Main power button on the TV and turn off the main power. Try to press the Main power button again to turn on the main power. If the TV returns to a normal state, it is not a failure.

### ■ Other concerns

- When the SLEEP TIMER function operates, the TV is automatically turned off. If the TV is turned off suddenly, try to press the  $\odot$ /I (Standby) button to turn on the TV once again. At this time, if the TV resumes a normal state, there is no problem.
- When a WSS (wide screen) signal is included in the broadcast signal or the signal from an external device, or when the TV is receiving a control signal from an external device, the ZOOM mode will change automatically. When you want to return to the previous ZOOM mode, press the **ZOOM** button to choose the ZOOM mode again.

- If you bring a magnetised device such as a speaker near to your TV, a picture may be warped or unnatural colours appear at the corners of the screen. In this case, keep the device apart from your TV. If the speakers cause this to happen, use magnetic-shielded speakers instead.
- A picture may be tilted due to the influence of the earth's magnetism. In this case, use the "PICTURE TILT" on page 33 to correct the tilt.
- It takes a short period of time from the time an operation such as changing channels is performed until an image is displayed. This is not a malfunction. This is the time required for the image to stabilize before it can be displayed.
- The TV may emit a crackling sound due to a sudden change in temperature. It does not matter if a picture or sound does not show any abnormality. If you hear crackling sounds frequently while you are viewing the TV, there may be other causes. As a precaution, ask your service technician to inspect it.
- Touching the screen may cause you feel a slight electric shock due to its static electricity. It is unavoidable due to the construction of the picture tube. It is not a problem with the TV. You can rest assured that this static discharge does not have a harmful effect.
- When a menu is displayed on the screen, the ZOOM mode may be automatically changed to the FULL mode. This is not a malfunction. When the menu disappears, the ZOOM mode will return to the previously set ZOOM mode.

# Specifications

Model	AV-32H5SK	AV-28H5SK
Broadcasting systems	CCIR, I	
Colour systems	PAL • The EXT terminals also support the NTSC 3.58/4.43 MHz system.	
Channels and frequencies	E21-E69	
Sound-multiplex systems	NICAM ( I) system	
Teletext systems	FLOF (Fastext), TOP, WST (World Standard System)	
Power requirements	220 - 240 V AC, 50 Hz	
Power consumption	130 W, Standby: 0.6 W	120 W, Standby: 0.6 W
Picture tube size	Viewable area 76 cm (measured diagonally)	Viewable area 66 cm (measured diagonally)
Audio output	Rated Power output: 10 W + 10 W	
Speakers	(13 cm × 6.5 cm) oval × 2	
EXT-1 terminal	Euroconnector (21-pin, SCART) • Video input, Audio L/R inputs and RGB inputs are available. • TV broadcast outputs (Video and Audio L/R) are available.	
EXT-2 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input, Audio L/R inputs and RGB inputs are available. • Video and Audio L/R outputs are available. • T-V LINK functions are available.	
EXT-3 terminal	Euroconnector (21-pin, SCART) • Video input, S-VIDEO (Y/C) input and Audio L/R inputs are available.	
EXT-4 terminal	RCA connectors × 3 S-VIDEO connector × 1 • Video input, S-VIDEO (Y/C) input, Audio L/MONO and R inputs are available.	
AUDIO OUT terminal	RCA connectors × 2 • Audio L/R outputs are available.	
Headphone jack	Stereo mini-jack (3.5 mm in diameter)	
Dimensions (W × H × D)	864 mm × 587 mm × 550 mm	762 mm × 528 mm × 492 mm
Weight	53.0 kg	38.0 kg
Accessories	Remote control unit × 1 (RM-C1502) AA/R6 dry cell battery × 2	

## Design and specifications subject to change without notice.

Pictures displayed on the screen using this TV's ZOOM functions should not be shown for any commercial or demonstration purpose in public places (cafes, hotels, etc.) without the consent of the owners of copyright of the original picture sources, as this constitutes an infringement of copyright.



# JVC

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>