GNT0063-001AIUS1

0305MOC-MW-SC

DIGITAL OUT DIGITAL SUPERVIDE

EN EN ©2005 Victor Company of Japan, Limited

Region code of DVD VIDEO This player can play back DVD VIDEO discs whose region code numbers include "1. Examples of playable DVD VIDEO discs:



Note of Color system format

This player accommodates the NTSC system, and

also can play back discs recorded with PAL system. (PAL video signals are converted to an NTSC signal and output.)

Supplied accessories

- If anything is missing, consult your dealer • Audio/video cable (Yellow/White/Red) (x 1)
- Remote control (x 1) • R6(SUM-3)/AA(15F) battery (x 2)
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.
- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

For customer use

Basic Operations

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet Retain this information for future reference Model No Serial No

Turning on and off the player

Warnings, Cautions and Others



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FLECTRIC SHOCK DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

For U.S.A

This equipment has been tested and found to comply vith the limits for a Class B digital device, pursuant to part 15 of the FCC Rules

protection against harmful interference in a residential nstallation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to following measures:

Reorient or relocate the receiving antenna. ncrease the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is

Consult the dealer or an experienced radio/TV technician for help.

Insert a disc

Press to open the disc tray.

• To insert an 8-cm disc, place it in the inner

2 Place a disc in the disc tray.

3 Press ≜ to close the disc trav.

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR BADIO NOISE EMISSIONS FORM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS

To reduce the risk of electrical shocks, fire, etc.: 1. Do not remove screws, covers or cabinet.

2. Do not expose this appliance to rain or moisture.

Caution — U/I STANDBY/ON button!

Disconnect the mains plug to shut the power off completely. The U/I STANDBY/ON button in any position does not disconnect the mains line. The power can be remote controlled.

CAUTION HIS PRODUCT USES A LASER SYSTEM

LISE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF

CLASS 1 LASER PRODUCT REPRODUCTION OF LABELS

- VISIBLE OR INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. ATTENTION - RAYONNEMENT LASER VISIBLE OU INVISIBLE EN CAS D'OUVERTURE.

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- lighted candles, on the apparatus.
- must be considered and local rules or laws governing the disposal of these batteries must be followed strictly. Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

- When unplugging the player from the wall outlet,
- Do not handle the power cord with wet hands!
- Disconnect the power cord before cleaning the player or moving the player.
- anything heavy on it, which may cause fire, electric shock, or other accidents
- If the cord is damaged, consult a dealer and have the power cord replaced with a new one.
- Avoid moisture, water, dust, and high temperatures
- If water gets inside the player, turn off the power and remove the plug from the wall outlet, then consult your dealer. Using the player in this state may cause a fire or electrical shock.

Turning on and off the player

Start/resume normal Playback

When RESUME is ON or DISC

RESUME, this player memorizes

the position on the disc where

To resume playback, press ►.

To stop playback completely,

• Each time you press ■ on the

advances to the next frame.

remote control, the still picture

Each time you press the button.

the playback speed changes.

If you press and hold the button

during playback, playback is

advanced/reversed at 5 times

you interrupted playback.

press ■ again

►►/◄ Fast forward/backward

►►I/I<- Skip chapter/track

VARI-PLAY (For DVD Video)

(While paused)

normal speed

(For SVCD/VCD)

normal speed.

(Only for DVD Video)

Changing the display brightness

Press **DIMMER** to change the brightness of

the display window.

(variable The disc is played back at about

playback) 1.2 or 1.5 times (FAST)/0.8 or 0.6

times (SLOW) normal speed.

The sound is not muted, and the

subtitle does not go off (except for

The disc is played back at about 2

ne playback position moves back

0 seconds before the current position (only within the same title).

times (FAST)/0.5 times (SLOW)

Slow-motion playback

Buttons To do

II*

• Do not expose the player to direct sunlight or place it near a heating device.

Notes on installation

- Select a place which is level, dry and neither too hot
- nor too cold between 5°C and 35°C (41°F and 95°F).
- Leave sufficient distance between the player and the TV. Do not install the player in a place subject to vibrations.
- To prevent malfunction of the player
- There are no user-serviceable parts inside. If
- anything goes wrong, unplug the power cord and consult your dealer Do not insert any metallic objects, such as wires
- hairpins, coins, etc. into the player. Do not block the vents. Blocking the vents may damage the player
- To clean the cabinet • Use a soft cloth. Follow the relevant instructions on
- the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or

Playable discs

discoloring.

DVD VIDEO, Audio CD, Video CD, SVCD



- · CD-R/RW written in the SVCD, Video CD or Audio CD format • CD-R/RW written in JPEG in accordance with the
- "ISO 9660" format Supported Digital audio formats:
- Linear PCM, Dolby Digital, DTS (Digital Theater Systems)* If a disc gets dirty, scratched or warped, or due to the
- disc characteristics or recording conditions, the player may not be able to play back such discs. The player can play back audio signals recorded in
- MIX-MODE CD, CD-G, CD-EXTRA and CD TEXT. With some discs, operations may not be possible To play back DTS-encoded DVD VIDEO or DTS
- encoded Audio CD discs correctly, connect the player to an amplifier with a built-in DTS decoder. Otherwise, playback sound will be distorted.

Unplayable discs If you try to play back discs listed below, noise may be

- generated and causes damage to speakers.
- DVD-RW written in the VR format DVD-ROM, DVD-RAM, DVD AUDIO, CD-ROM,
- PHOTO CD SACD Unfinalized discs
- Discs of irregular shape or discs with tape, seals or paste on either the label side or playback side. Playing back these discs may damage the player


The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.


Before making connections:

Do not connect the AC power cord until all other connections have been made

· Connect VIDEO OUT of the player directly to the video input of your TV. Connecting VIDEO OUT of the player to a TV via a VCR/an integrated TV/Video system may cause a monitor problem.

Basic Connection

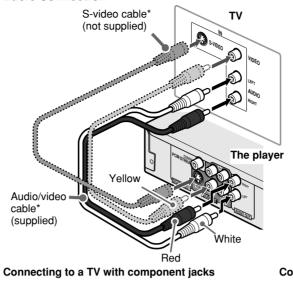

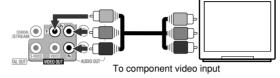

Interlace, press and hold VFP-I/P on the remote control for a few seconds. NOTES

- correctly.
- When using component (Y, PB, PR) jacks, do not connect S-VIDEO jack with the player


About the scanning mode malcator										
[PICTURE SOURCE] of	Source type of DVD VIDEO									
the PICTURE menu										
AUTO	[DDP]	[P]								
FILM	[DDP]	[DDP]								
VIDEO(NORMAL)/ (ACTIVE)	[P]	[P]								
NOTE	5 6	···								

Some progressive TV and High-Definition TV sets are not fully compatible with the player. To check the compatibility of your TV, contact your local JVC


NOTES

- If your TV has a monaural audio input instead of stereo, use an optional audio cable which converts stereo audio output to monaural.
- If your TV is a HDTV or HD-ready TV, you can connect with component (Y, PB, PR) jacks. By connecting with component (Y, PB, PR) jacks, you can select the progressive scanning mode which provides the best picture quality.
- The S-VIDEO jack and component (Y, PB, PR) jacks cannot be used at the same time. When using the S-VIDEO jack, do not connect the component (Y, PB, PR) jacks with the player.

Connecting to a stereo audio amplifier (receiver)

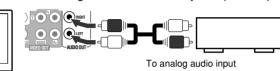

Connecting to a digital audio device To enjoy high-quality surround sound, connect the DIGITAL OUT (COAXIAL) jack to a Dolby Digital or DTS decoder or an amplifier with a built-in decoder

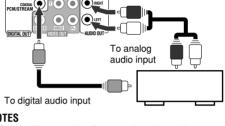

3

• Depending on the disc, no signal may be outputted from the DIGITAL OUT. Make an analog connection Set [DIGITAL AUDIO OUTPUT] in the [AUDIO]

preference display correctly according to the connected digital audio equipment. (See "DIGITAL AUDIO OUTPUT" in "Initial settings.")

Turning on the power

Open the compartment cover, and place the two

inside the compartment. Then replace the cover.

supplied R6(SUM-3)/AA(15F) batteries in the remote

control according to the polarity markings ("+" and "-")

Inserting the AC power plug

After all other connections have been made, insert the AC power plug to the wall outlet firmly.

Installing the batteries in the remote control

YES - PRESS ENTER NO - PRESS CANCEL

When you turn on the player for the first time after


purchase, the following message appears on the TV

EXECUTE DVD PLAYER SETUP? - BASIC PICTURE/AUDIO


Before enjoying this player, make the initial settings as

follows: 1 Press ENTER.

Initial setup

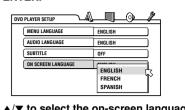


2 Press ▲/▼ to select the on-screen language for the preference displays, etc., then press ENTER.

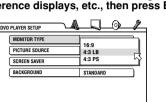

For a normal (conventional) TV, select "4:3 LB" or

"4:3 PS." (See "MONITOR TYPE" in "Initial settings.")

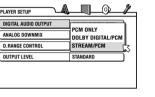

4 Press ▲/▼ to select a desired digital output signal type, then press ENTER. Set this item correctly according to the logo on your

receiver or decoder (If you do not connect the player to such a device, press ENTER to finish the setting.)

- Receiver/decoder bearing Dolby Digital logo and no DTS, select "DOLBY DIGITAL/PCM."
- Receiver/decoder bearing both Dolby Digital and DTS logos, select "STREAM/PCM."
- Receiver/decoder bearing neither Dolby Digital nor
- To bring up the DVD PLAYER SETUP display later

Press SET UP for a few seconds until the DVD PLAYER SETUP display appears.

To bring up the menu bar When a disc is inserted, press ON SCREEN twice. A menu bar for the type of disc inserted will appear

Basic operation procedure

After pressing ENTER:

(2) When a number-entry box appears, use the numeric buttons to enter the number you want, then press ENTER.

repeatedly to select the setting you want.

TIME selects the time mode shown in the display

• TOTAL: Elapsed time of current title (DVD) or a disc

(CD/VCD/SVCD) • T.REM: Remaining time of current title (DVD) or a disc (CD/VCD/SVCD)

Remaining time of current chapter (DVD) or track (CD/VCD/SVCD)

selects repeat mode. During playback DVD:

CD. In any condition

• TITI F· Current title repeat (DVD) Current track repeat (CD/VCD/SVCD) TRACK:

A-B:

All track repeat (CD/VCD/SVCD) A-B repeat (During playback). After selecting A-B, press ENTER at the beginning point of repeat, then press ENTER again at the end point.

Changing the picture tone (VFP) The VFP (Video Fine Processor) function allows you to adjust the picture character according to the

type of programming, picture tone or personal preferences 1 Press VFP-I/P.

2 Press
/▶ to select the desired preset.

Selected USER 1 Preset I GAMMA I MID Y DELAY

Parameter NORMAL For watching TV in a general room CINEMA For watching a movie software in a room with

suppressed light USER1 You can adjust USER2 parameters that affect the store the settings as a user

preset. See below.

To adjust the picture tone 1 Select "USER1" or "USER2."

2 Press ▲/▼ to select a parameter, then press ENTER.

Adjust this if the neutral color is bright or dark The brightness of dark and bright portion is maintained (LOW/MID/HIGH).

BRIGHTNESS Adjust this if the picture is bright or dark on the whole (-16 (darkest) to +16 (brightest)). CONTRAST Adjust this if the far and near position is unnatural SATURATION Adjust this if the picture is whitish or blackish (-16 (blackest) to +16 (whitest)). TINT Adjust this if the appearance of flesh tone is unnatural (-16 to +16). **SHARPNESS** Adjust this if the picture is indistinct (LOW/HIGH).

4 Repeat step 2 and 3 to adjust other parameters.

Ex.: Menu bar for DVD VIDEO

You can use various functions from the menu bar.

under the status bar.

DVD-VIDEO 8.5Mbps TITLE 33 CHAP 33 TOTAL 1:25:58 ▶

To dismiss the menu bar and the status bar, press ON

1 Press **◄/▶** to select the icon you want to work with.

2 Press ENTER.

(1) When a pull-down menu appears, press ▲/▼ to select the setting you want, then press ENTER.

(3) When changing TIME setting, press ENTER

player status. Refer to the explanation below to check when you can use a certain function.

Menu bar functions

window and the status bar.

(Except for DVD: while stopped, disc total

• TIME: Elapsed time of current chapter (DVD) or track (CD/VCD/SVCD)

(while stopped, current track total time)

VCD/SVCD: In any condition except PBC playback CHAPTER: Current chapter repeat (DVD)

ALL:

Menu bar functions

DVD:

VCD/SVCD: In any condition except PBC or program or random playback

selects the audio language (DVD), sound track (DVD), or audio channel (VCD/SVCD) during

PROG. specifies the playback order of tracks while stopped (unavailable for DVD). You can program up to 99 tracks.

1. After selecting PROG. icon, press the numeric

tracks move up.

 During program playback, you cannot edit the program contents.

(unavailable for DVD).

The player starts random playback.

With the label side up

About On-screen guide icons Playback.

information is on the main display.

: Pause. Each indicator lights up when corresponding function/mode is activated, or corresponding

Fast forward/backward playback with the current speed

: At the beginning of a scene containing multiaudio sounds.

You can change the setting so that the on-screen

guide icons do not appear on the TV screen. (See

"ON SCREEN GUIDE" in "Initial settings.")

Slow-motion playback with the current

(the operating range is approx. 5 m.)

: At the beginning of a scene containing multiangle views.

Point toward the remote sensor directly as possible

* ►II on the player starts/pauses playback.: At the beginning of a scene containing multi-

When discarding batteries, environmental problems

Precautions

Notes on the power cord When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet. A small amount of power (1.0 W) is always consumed while

always pull the plug, not the power cord.

Do not alter, twist or pull the power cord, or put

Each time you press DISPLAY, 1 Press the button 2 Press the button repeatedly or

Buttons To do AUDIO For DVD Video: For SVCD/VCD: select the audio channel

Each time you press **SOUND**

shown on the TV screen.

magnification changes. move the zoomed position.

select the normal size by pressing **ZOOM** repeatedly.

To return to the normal playback,

Changing the language, sound and scene angle

Advanced Operations

▲/▼ to select the desired item. 3 Press ENTER to finish the setting. select audio languages

SUBTITLE select the subtitle select the view-angle. ANGLE

Changing the Sound Field **EFFECT**, the Sound Effect mode changes

Zooming the picture

JV U

7 8 9

5 Press VFP-I/P to finish the setting.

• The selected item on the menu bar is shown in green. • The available functions differ depending on the

the track to be corrected, then press CANCEL. The track is erased and the subsequent programmed

• To exit the program mode, press ON SCREEN after clearing the program.

Download from Www.Somanuals.com. All Manuals Search And Download.

5

subtitles.

NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNE



WARNING: TO REDUCE THE RISK OF FIRE OR

These limits are designed to provide reasonable

correct the interference by one or more of the

connected

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT For Canada

REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING LABEL INSIDE OF THE UNIT

• Do not place any naked flame sources, such as

- the power cord is connected to the wall outlet
- Do not place the player in moist or dusty places.

OPEN/ CLOSE

- SLOW +

■ ENTER **▶**

1 2 3

4 5 6

7 8 9

 \odot \odot

GROUP EFFECT VFP DIMMER

ANGLE SUBTITLE AUDIO ZOOM

JVC

the display window contents ocating the beginning of a scene

You can select a title/chapter/ track directly and start playback For DVD Video: (While stopped) select title. (While playing back) select

For SVCD/VCD/CD:

o select 5: press 5.

Select track

select 40: press 4, then 0. • If you press TITLE/GROUP before entering the number, you can select the title instead of the

o select 23: press 2, then 3.

chapter. Using the disc menu You can operate a disc—SVCD/ VCD with Plavback Control*

* A method of controlling disc play

for SVCD/VCD by using the disc

1 Press TOP MENU or MENU to show the disc menu. 2 Press ▲/▼/◄/► to select a desired item, then press ENTER or ► (SELECT).

With some discs, you can also select items by entering the

■ For SVCD/VCD 1 While stopped, press TOP MENU or ► (SELECT) to show the menu. 2 Press the numeric buttons to select a desired item.

number using the numeric buttons.

To select 5: press 5.

press ▶►I or I◄◄.

To select 23: press 2, then 3.

To select 40: press 4, then 0.

To return to the previous menu, press RETURN. To play back without PBC While stopped, press the numeric buttons instead of ▶ (SELECT) to start playback.

To move to the next or previous page of the current menu,

To reactivate PBC • Press TOP MENU or MENU. Press ■ to stop playback, then ► (SELECT).

Do not put heavy objects on the player

Connections

To switch the scanning mode between Progressive and

• Connect "Y" to "Y," "PB" to "PB(CB)," "PR" to "PR(CR)"

,											
bout the scanning mode indicator											
PICTURE SOURCE] of	Source type	of DVD VIDEO									
the PICTURE menu	Film source	Video source									
AUTO	[DDP]	[P]									
FILM	[DDP]	[DDP]									
VIDEO(NORMAL)/ (ACTIVE)	[P]	[P]									

STANDBY/ON OPEN/ CLOSE - SLOW + DISPLAY ON SCRE TOP THUN

ENTER D SET SET PREVIOUS SELECT NEXT 0 2 3 4 5 6

(S) (O) (N) GROUP SOUND SOUND SFFECT VFP MMER ANGLE SUBTITLE AUDIO ZOOM As the value becomes bigger, the Sound Effect works stronger.

Each time you press **ZOOM**, the You can use ▲/▼/◄/► button to

Adjust this if the picture looks separately/ overlapped (-2 to +2).

3 Press ▲/▼ to adjust the parameter, then press ENTER.

apart, mix them with other refuse, or throw them into an incinerator. • Never touch liquid that has leaked out of a battery. • Do not mix new and old batteries, or batteries of different types, when placing them. Turning on and off the player Press **J**ISTANDBY/ON

properly.

replace the batteries.

Precautions of the safe use of batteries

Observe the following precautions for the safe use of

shortened, they may burst or their contents may leak.

not going to be used for a long period of time.

Remove dead batteries and dispose of them

Remove the batteries from the remote control if it is

• Never leave dead batteries lying around, take them

batteries. If they are used improperly their lives will be

The batteries will last about six months with normal use. If the functions of the remote control become erratic,

3 Press ▲/▼ to select the monitor type, then press ENTER.

• For a wide-screen TV, select "16:9."

VD PLAYER SETUP DIGITAL AUDIO OUTPUT

ANALOG DOWNMIX

DOLBY DIGITAL/PC

DTS logo, or digital recorder, select "PCM ONLY."

• OFF:

CD:

quit repeat mode ② ⇒ specifies beginning point of a title (DVD) or a disc (CD/VCD/SVCD) by the time.

CHAP. → specifies a chapter to play back from

random playback

selects the subtitle language (DVD) or subtitle (SVCD) during playback. selects a desired scene angle in a multi-

buttons to specify tracks in the desired order

RND. | activates random playback while stopped

Repeat mode deactivated. Select this to

In any condition In any condition except program or

angle part (DVD only).

Pressing ■ clears all the programmed tracks. 2. Press ►(SELECT) to start program playback.

After selecting RND. icon, press ENTER.


You can play back JPEG files (still pictures) on a CD/CD-R/RW

Precautions

- Use "ISO 9660" as the disc format.
- The player does not support "packet writing (UDF files)" discs • The player supports discs recorded with up to five
- multiple sessions. • The player may be unable to play back a disc due to
- the characteristics or recording conditions. • The player recognizes up to the fifth layer of groups
- 999 files per group (including unplayable files), and up to 250 groups per disc.
- Add the appropriate extension (".jpg") to the file
- The player cannot play back a picture of more than 5120 x 3413 pixels (baseline JPEG) or 2048 x 1536 pixels (progressive JPEG).

Selecting a specific file or group You can select files or folders (groups) using the

Control display on the TV screen. Control display

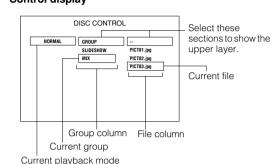

Press ▲/▼/◄/► to move the cursor bar to a desired file, then press ►(SELECT). • When you press ENTER, only the selected file is

Various playback mode

• To play back a disc continuously, select NORMAL.

Repeat playback

- 1. While stopped, press ▲/▼/◄/► to move the cursor bar to playback mode. 2. Press ENTER repeatedly to select the desired repeat
- REPEAT 1: Repeats the current file.
- REPEAT GROUP: Repeats all files in the current
- REPEAT ALL: Repeats all files on the disc. 3. Press ► to move the cursor bar to the file column. then press ►(SELECT).

Random playback

- 1. While stopped, press △/▼/◄/► to move the cursor bar to playback mode.
- 2. Press ENTER repeatedly to select RANDOM.
- 3. Press ► to move the cursor bar to the file column, then press ►(SELECT).

- Program playback 1. While stopped, press ▲/▼/◄/▶ to move the cursor
- bar to playback mode. 2. Press ENTER repeatedly to select PROGRAM.
- 3. Press ▲/▼/◄/► to select the desired file, then press
- ENTER. 4. Repeat step 3 until all the desired files are selected. To erase the last programmed file, press ■ to

column, then press CANCEL.

move the cursor bar to the programmed files

5. Press ►(SELECT).

Various JPEG files playback

To zoom in a picture Press ZOOM

Each time you press ZOOM, you can magnify a JPEG file (x1.5/x2).

This function is not available for some JPEG files depending on their resolution size and JPEG format.

To rotate/reflect a still picture

- Pressing
 I/> rotates the picture by 90°.
- Pressing ▲ reflects the picture vertically. Pressing ▼ reflects the picture horizontally

To select a JPEG file from the thumbnail list

- 1. Press and hold THUMBNAIL/LIST while a JPEG file is selected on the Control display. 2. Press ▲/▼/◄/► to select the desired picture, then
- press ENTER. • You can change the page of thumbnail list by pressing I◄◄/▶►I

Slide show playback of JPEG files

Press ►(SELECT) while a JPEG file is selected on the Control display.


- To select slide show effect
- Press and hold ANGLE-SLIDE EFFECT until [SLIDE EFFECT MODE:] and the current mode appears on the TV screen.
- By pressing and holding the button repeatedly, you can select the effect from 11 effects, random effect selection (RAND), and no effect (NONE). The effect is not applied to progressive JPEG files.

Initial settings

You can change the settings of this player according to your preferences and playing environment.

How to set the Initial settings

1 Press SET UP.

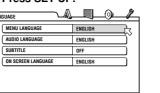

2 Press **◄/▶** to select the menu. 3 Press ▲/▼ to move to select the item.

Press ENTER.

Press ▲/▼ to select the options, then press ENTER.

To dismiss a preference display Press SET UP

NOTES

- Some items in the menus cannot be changed during playback.
- If the upper and lower parts of the menu are cut off, adjust the picture size control of the TV.
- For settings of the LANGUAGE menu or the PARENTAL LOCK menu, see also the code lists on
- Depending on the disc, the settings may not apply

LANGUAGE menu

Item	Contents
MENU LANGUAGE	You can select the default menu language of DVD VIDEO.
AUDIO LANGUAGE	You can select the default audio language of DVD VIDEO.
SUBTITLE	You can select the default subtitle language of DVD VIDEO.
ON SCREEN LANGUAGE	You can select "ENGLISH," "FRENCH," or "SPANISH" as the on-screen language.



Item	Contents
MONITOR TYPE 16:9 4:3 LB	You can select the monitor type to match your TV when you play back DVD VIDEO discs recorded for wide-screen televisions.
4:3 PS	 [16:9] (Wide television screen): For a wide-screen (16:9) TV. [4:3 LB] (Letter Box conversion): For a normal (4:3) TV. Displays a wide-screen picture to fit the width of the TV screen keeping the aspect ratio. [4:3 PS] (Pan Scan conversion): For a normal (4:3) TV. The picture is zoomed up to filling the screen vertically and the left and right sides of the picture are cut off.
PICTURE SOURCE	You can obtain optimal picture quality by selecting the source type of the disc contents. [AUTO]: Normally, select this option. The player recognizes the picture type (film or video source) of the current disc according to the disc information. [FILM]: For a film source disc. [VIDEO(NORMAL)]: For a video source disc with relatively a few movements. [VIDEO(ACTIVE)]: For a video source disc with relatively a lot of movements.
SCREEN SAVER	You can set the screen saver function to ON or OFF.
BACKGROUND	You can use your favorite image as the opening display. [STANDARD]: Display the JVC original image. [USER]: Display your favorite image as the opening display when a JPEG image is registered. [SAVE AS BACKGROUND]: To register a new image, select this while a JPEG image is displayed on the TV.

11

AUDIO menu

Item	Contents
DIGITAL AUDIO OUTPUT	Set this item correctly according to the logo on your receiver or decoder. [PCM ONLY]: Receiver/decoder bearing neither Dolby Digital nor DTS logo, or digital recorder. [DOLBY DIGITAL/PCM]: Receiver/decoder bearing Dolby Digital logo and no DTS. [STREAM/PCM]: Receiver/decoder bearing both Dolby Digital and DTS logos.
ANALOG DOWNMIX	Set this item properly according to your analog audio connection to play the sound of the surround multichannel audio on a DVD VIDEO. [DOLBY SURROUND]: Select this when connecting to a surround decoder. [STEREO]: Select this when connecting to a stereo amplifier or TV, or in case you want to record from a DVD VIDEO to a MiniDisc, cassette, etc.
D.RANGE CONTROL	Set this item to listen to DVD VIDEO recorded in Dolby Digital format at low or middle volume. [WIDE RANGE]: You can enjoy powerful playback sound. [NORMAL]: Normally, select this. [TV MODE]: Select this if the sound level of DVD VIDEO is lower than the one of TV program to make the sound at a lower volume clear.
OUTPUT LEVEL	Set this item to attenuate the level of the signal output from the analog AUDIO OUT terminals. If the sound from the speaker is distorted, select [LOW].

OTHERS menu

Item	Contents
RESUME	You can select the resume playback mode. [ON]: The player resumes playback from the position where playback has been stopped if the disc is still in the disc tray. [OFF]: This function is deactivated. [DISC RESUME]: The player resumes playback of the last 10 discs played. The player retains a memory of the stopped position of each disc even if the disc is removed from the disc tray.
N SCREEN GUIDE	Activate or deactivate the on-screen guide.
AUTO STANDBY	Set the time until the player turns off (into standby) automatically if playback is stopped for more than 30 minutes or 60 minutes.
PARENTAL LOCK ARENTAL LOCK COUNTRY CODE SET LEVEL WONE FRASWORD EXT	Select this item, then press ENTER to show the PARENTAL LOCK menu for limiting playback by children. Scenes which are limited by this function are not played or replaced with other scenes. [COUNTRY CODE]: Select the code of your country/area. [SET LEVEL]: Select the level of restriction. ("1" is the strictest.) [PASSWORD]: Enter your 4-digit password by pressing the numeric buttons (0 to 9) [EXIT]: Select this and press ENTER to go back to the OTHERS menu. Notes: • Some DVD VIDEO cannot be played by this function. If you try to play such a disc, the PARENTAL LOCK menu appears on the TV and asks whether you want to release the lock or not. To release the lock and play, select "TEMPORARY RELEASE," press ENTER, then enter your password. Otherwise, eject the disc. • To change the setting of the limitation, you need to enter your password. • If you forget your password, enter "8888."

Power does not come on.

Troubleshooting

→ Power plug is not inserted securely. Plug in securely.

Operation

"REGION CODE ERROR!" is shown on the TV → Region code of the inserted disc does not match the player. Check the region code of the disc printed on the disc jacket.

Operation is not possible.

- → Microcomputer malfunction due to lightning or static electricity. Turn off the power and unplug the power cord, then connect the power cord again.
- → Moisture condensation caused by a sudden change of temperature or humidity. Turn off the power, then turn it on a few hours later.
- → The disc does not allow the operation, or an unplayable disc is inserted. Check and replace the

[LOCK] is displayed on the display window and the disc tray does not open.

→ When you press while pressing down ■ on the player in standby mode, the tray lock function is activated. The disc tray cannot be opened or closed in this status. To release this status, press A while pressing down ■ on the player in standby mode.

Picture

Picture is noisy. → The player is connected to a VCR directly and the copyguard function is activated. Connect the plaver so that the picture signal flows directly to the TV. With some discs, the picture may be blurred when [PICTURE SOURCE] is set to [FILM] or [AUTO]. Set [PICTURE SOURCE] to [VIDEO (NORMAL)] or [VIDEO (ACTIVE)].

Picture is distorted when using

component (Y, PB, PR) or S-VIDEO jack(s). → Both the component connection and S-video connection are made. Disconnect the unused one

No picture is displayed on the TV screen or the

screen is blurred or divided into two parts. → The player is in the progressive scanning mode though it is connected to a TV via the VIDEO or S-VIDEO jack. Observe the display window. If [P] is turned on, the player is in the progressive scanning

Make the Progressive scanning mode inactive by using the VFP - I/P button.

Audio

DVD VIDEO disc playback sound level is lower than TV broadcast sound level.

→ Set the [OUTPUT LEVEL] preference to [LOW].

13

file)." It cannot be played.

Files are not played in the recorded order.

C	Country/Area	CO	de list for Pa	iren	ital L
AD	Andorra	CY	Cyprus	IL	Israel
AE	United Arab Emirates	CZ	Czech Republic	IN	India
 AF	Afghanistan	DE	Germany	IO	British I
					Torritor

Analog audio output is distorted.

→ JPEG disc is recorded with the "packet writing (UDF Check the files you want to play back.

→ Set the [D.RANGE CONTROL] preference to [TV

JPEG

No picture comes out.

→ This player plays the files in the alphabetic order. So, the playback order can vary.

	Country/Area	CO	de list for l	Par	en	tal Loc
AD	Andorra	CY	Cyprus		L	Israel
AE	United Arab Emirates	CZ	Czech Republic		N	India
AF	Afghanistan	DE	Germany		0	British Indian
AG	Antigua and Barbuda	DJ	Djibouti	─ L		Territory
ΔΙ	Anguilla	חא	Denmark		Q	Iraq

AF	Afghanistan	DE	Germany	IO	British Indian Ocean	MX	Mexico	ST	Sao Tome and
AG	Antigua and Barbuda	DJ	Djibouti		Territory	MY	Malaysia		Principe
Al	Anguilla	DK	Denmark	IQ	Iraq	MZ	Mozambique	SV	El Salvador
AL	Albania	DM	Dominica	IR	Iran (Islamic Republic of)	NA	Namibia	SY	Syrian Arab Republic
AM	Armenia	DO	Dominican Republic	IS	Iceland	NC	New Caledonia	SZ	Swaziland
AN	Netherlands Antilles	DZ	Algeria	IT	Italy	NE	Niger	TC	Turks and Caicos
AO	Angola	EC	Ecuador	JM	Jamaica	NF	Norfolk Island	TD	Islands
AQ	Antarctica	EE	Estonia	JO	Jordan	NG	Nigeria	TD TF	Chad
AR	Argentina	EG	Egypt	JP	Japan	NI	Nicaragua	IF	French Southern Territories
AS	American Samoa	EH	Western Sahara	KE	Kenya	NL	Netherlands	TG	Togo
AT	Austria	ER	Eritrea	KG	Kyrgyzstan	NO	Norway	TH	Thailand
AU	Australia	ES	Spain	KH	Cambodia	NP	Nepal	TJ	Tajikistan
AW	Aruba	ET	Ethiopia	KI	Kiribati	NR	Nauru	TK	Tokelau
AZ	Azerbaijan	FI	Finland	KM	Comoros	NU	Niue	TM	Turkmenistan
BA	Bosnia and Herzegovina	FJ	Fiji	KN	Saint Kitts and Nevis	NZ	New Zealand	TN	Tunisia
BB	Barbados	FK	Falkland Islands	KP	Korea, Democratic	ОМ	Oman	TO	
BD	Bangladesh	FM	Micronesia (Federated		People's Republic of	PA	Panama	TP	Tonga East Timor
BE	Belgium		States of)	KR	Korea, Republic of	PE	Peru		
BF	Burkina Faso	FO	Faroe Islands	KW	Kuwait	PF	French Polynesia	TR	Turkey
BG	Bulgaria	FR	France	KY	Cayman Islands	PG	Papua New Guinea	TT TV	Trinidad and Tobago
BH	Bahrain	FX	France, Metropolitan	KZ	Kazakhstan	PH	Philippines		Tuvalu
BI	Burundi	GA	Gabon	LA	Lao People's	PK	Pakistan	TW	Taiwan
BJ	Benin	GB	United Kingdom	-	Democratic Republic	PL	Poland	TZ	Tanzania, United Republic of
BM	Bermuda	GD	Grenada	LB	Lebanon	PM	Saint Pierre and	UA	Ukraine
BN	Brunei Darussalam	GE	Georgia	LC	Saint Lucia		Miquelon	UG	Uganda
ВО	Bolivia	GF	French Guiana	LI	Liechtenstein	PN	Pitcairn	UM	United States Minor
BR	Brazil	GH	Ghana	LK	Sri Lanka	PR	Puerto Rico	Olvi	Outlying Islands
BS	Bahamas	GI	Gibraltar	LR	Liberia	PT	Portugal	US	United States
BT	Bhutan	GL	Greenland	LS	Lesotho	PW	Palau	UY	Uruguay
BV	Bouvet Island	GM	Gambia	LT	Lithuania	PY	Paraguay	UZ	Uzbekistan
BW	Botswana	GN	Guinea	LU	Luxembourg	QA	Qatar	VA	Vatican City State
BY	Belarus	GP	Guadeloupe	LV	Latvia	RE	Réunion	1	(Holy See)
BZ	Belize	GQ	Equatorial Guinea	LY	Libyan Arab Jamahiriya	RO	Romania	VC	Saint Vincent and the
CA	Canada	GR	Greece	MA	Morocco	RU	Russian Federation		Grenadines
CC	Cocos (Keeling) Islands	GS	South Georgia and the	MC	Monaco	RW	Rwanda	VE	Venezuela
CF	Central African Republic		South Sandwich	MD	Moldova, Republic of	SA	Saudi Arabia	VG	Virgin Islands (British)
CG	Congo	GT	Guatemala	MG	Madagascar	SB	Solomon Islands	VI	Virgin Islands (U.S.)
CH	Switzerland	GU	Guam	МН	Marshall Islands	SC	Seychelles	VN	Vietnam
CI	Côte d'Ivoire	GW	Guinea-Bissau	ML	Mali	SD	Sudan	VU	Vanuatu
CK	Cook Islands	GY	Guyana	MM	Myanmar	SE	Sweden	WF	Wallis and Futuna
CL	Chile	HK	Hong Kong	MN	Mongolia	SG	Singapore		Islands
CM	Cameroon	HM	Heard Island and	МО	Macau	SH	Saint Helena	WS	Samoa
CN	China		McDonald Islands	MP	Northern Mariana	SI	Slovenia	YE	Yemen
CO	Colombia	HN	Honduras	140	Islands	SJ	Svalbard and Jan Mayen	YT	Mayotte
CR	Costa Rica	HR	Croatia	MQ	Martinique	SK	Slovakia	YU	Yugoslavia
CU	Cuba	HT	Haiti	MR	Mauritania	SL	Sierra Leone	ZA	South Africa
CV	Cape Verde	HU	Hungary	MS	Montserrat	SM	San Marino	ZM	Zambia
CX	Christmas Island	ID	Indonesia	MT	Malta	SN	Senegal	ZR	Zaire
OX	Omotinas isiana	IE	Ireland	MU	Mauritius		3	ZW	Zimbabwe

10

MV Maldives

	I I I I I I I I I I I I I I I I I I I														
ı	angua	ge	codes	list	for the	e L/	ANGUA	GE	menu						
AA AB AF AM AR AS AY AZ BA BE BG BH BI BN	Afar Abkhazian Afrikaans Ameharic Arabic Assamese Aymara Azerbaijani Bashkir Byelorussian Bulgarian Bihari Bislama Bengali,Ban-gla	CA CO CS CY DA DZ EL EO ET EU FA FI FJ FO	Catalan Corsican Czech Welsh Danish Bhutani Greek Esperanto Estonian Basque Persian Finnish Fiji Faroese Frisian	GL GN GU HA HI HR HU IA IE IK IN IS	Galician Guarani Gujarati Hausa Hindi Croatian Hungarian Armenian Interlingua Interlingue Inupiak Indonesian Icelandic Hebrew Yiddish	KK KL KM KN KO KS KU KY LA LN LO LT LV	Kazakh Greenlandic Cambodian Kannada Korean (KOR) Kashmiri Kurdish Kirghiz Latin Lingala Laothian Lithuanian Latvian, Lettish Malagasy	ML MN MO MR MS MT MY NA NE NL NO OC OM OR	Malayalam Mongolian Moldavian Marathi Malay (MAY) Maltese Burmese Nauru Nepali Dutch Norwegian Occitan (Afan) Oromo Oriya Panjabi	PS PT QU RM RO RO RU SA SD SG SH	Pashto, Pushto Portuguese Quechua Rhaeto- Romance Kirundi Rumanian Russian Kinyarwanda Sanskrit Sindhi Sangho Serbo- Croatian Singhalese	SN SO SQ SR SS ST SU	Slovenian Samoan Shona Shona Somali Albanian Serbian Siswati Sesotho Sundanese Swedish Swahili Tamil Telugu Tajik Thai	TL TN TO TR TS TT TW UK UR UZ VI VO WO XH YO	Tagalog Setswana Tongan Turkish Tsonga Tatar Twi Ukrainian Urdu Uzbek Vietnamese Volapuk Wolof Xhosa Yoruba
BO BR	Tibetan Breton	GA GD	Irish Scots Gaelic	JW KA	Javanese Georgian	MI MK	Maori Macedonian	PL	Polish	SK	Slovak	TI TK	Tigrinya Turkmen	ZU	Zulu

14

******************** LIMITED WARRANTY USA ONLY ONLY FOR PRODUCT PURCHASED IN U.S.A. CONSUMER VIDEO 1-90 JVC COMPANY OF AMERICA (JVC) warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL RETAIL PURCHASER to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original purchase for the period shown below. ("The Warranty Period") THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND WHAT WE WILL DO: f If this product is found to be defective within the warranty period, JVC will repair or replace defective parts with new or rebuilt equivalents at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products may be brought to a JVC authorized service center on a carry-in basis. Color televisions with a screen size of 27" or greater qualify for in-home service. In such cases, a technician will come to your home and either repair the TV there or remove and return it if it cannot be repaired in your home. WHAT YOU MUST DO FOR WARRANTY SERVICE Please do not return your product to the retailer Instead, return your product to the JVC authorized service center nearest you. If shipping the product to the service center, please be sure to package it carefully, preferably in the original packaging, and include a brief description of the problem(s). Please call 1-800-252-5722 to locate the nearest JVC authorized service center. Service locations can also be obtained from our website http://www.jvc.com. If your product qualifies for in-home service, the service representative will require clear access to the product. If you have any questions concerning your JVC Product, please contact our Customer Relations Department at 800-252-5722 WHAT IS NOT COVERED: This limited warranty provided by JVC does not cover: 1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed; 2. Initial installation, installation and removal from cabinets or mounting systems. 3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning; S. Signal reception problems and failures due to line power surge; S. User Removal Memory Devices/Video Pick-up Tubes/CCD Image Sensors are covered for 90days from the date of purchase; R Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase). Deteries except first nectial purposes, including, but not limited to rental. Products used for commercial purposes, including, but not limited to rental. Loss of data resultant from malfunction of hard drive or other data storage device There are no express warranties except as listed above. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. IVC COMPANY OF AMERICA 1700 Valley Road http://www.jvc.com

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

Download from Www.Somanuals.com. All Manuals Search And Download.

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Model No. Serial No.

Name of dealer Purchase date

15

TO OUR VALUED CUSTOMER ——

12

THANK YOU FOR PURCHASING THIS JVC PRODUCT. WE WANT TO HELP YOU ACHIEVE A PERFECT EXPERIENCE.

NEED HELP ON HOW TO HOOK UP? **NEED ASSISTANCE ON HOW TO OPERATE? NEED TO LOCATE A JVC SERVICE CENTER?**

JVC IS HERE TO HELP! **TOLL FREE: 1(800)252-5722** http://www.jvc.com

Remember to retain your Bill of Sale for Warranty Service.

Specifications Specifications and appearance are subject to change without prior notice.

General Readable discs:

DVD VIDEO, DVD-R (Video format), DVD-RW (Video format), SVCD, Video CD, Audio CD (CD-DA), CD-R/RW (CD-DA, SVCD, Video CD, JPEG) Video format: NTSC, 480i/480p selectable

Other

Power requirements: AC 120 V ∼, 60 Hz Power consumption 11.0 W (POWER ON), 1.0 W (STANDBY mode)

Mass: 1.5 kg (3.3 lbs) Dimensions (W x H x D):

435 mm x 44 mm x 201.5 mm (17-3/16 inch x 1-3/4 inch x 7-15/16 inch)

Component (pin jacks)
Y Output: 1.0 Vp-p (75 Ω) *PB/PR Output:* 0.7 Vp-p (75 Ω) VIDEO (pin jack): 1.0 Vp-p (75 Ω) S-VIDEO (S jack)

Video outputs

Y Output: 1.0 Vp-p (75 Ω) C Output: 286 mVp-p (75 Ω) Horizontal resolution: 500 lines or more

LIKE TO PURCHASE ACCESSORIES?

 Do not attempt to service the product yourself To prevent electrical shock, do not open the cabinet There are no user serviceable parts inside. Please refer to qualified service personnel for repairs

Audio outputs

Frequency response

ANALOG OUT (pin jack): 2.0 Vrms (10 k Ω) **DIGITAL OUT (COAXIAL):** 0.5 Vp-p (75 Ω termination) **Audio characteristics**

CD (sampling frequency 44.1 kHz): 2 Hz to 20 kHz DVD (sampling frequency 48 kHz): 2 Hz to 22 kHz(4 Hz to 20 kHz for DTS and Dolby

Digital bitstream signals) DVD (sampling frequency 96 kHz): 2 Hz to 44 kHz

Wow and flutter: Unmeasurable (less than ± 0.002%) Total harmonic distortion: less than 0.009%

16

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com