 


# JVC



## DVD AUDIO/VIDEO PLAYER XV-NA70BK/XV-NA77SL



Before operation	2
Preparations	4
Basic operations	10
Advanced operations	16
VR format disc playback	27
MP3/WMA disc playback	31
JPEG disc playback	33
Changing the initial settings	36
Additional information	44

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located on the rear, bottom or side of the cabinet. Retain this information for future reference.


Model No. \_\_\_\_\_

Serial No \_\_\_\_\_

GNT0036-001A  
[J/UJ]

# Warnings, Cautions and Others
 
## Mises en garde, précautions et indications diverses



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### For Canada/pour le Canada

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

**ATTENTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND

### For Canada / Pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FORM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMERIQUE DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUE", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

### CAUTION

To reduce the risk of electrical shocks, fire, etc.:


1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:


1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

### Caution — STANDBY/ON button!

Disconnect the mains plug to shut the power off completely (the STANDBY/ON lamp goes off). The STANDBY/ON  button in any position does not disconnect the mains line.

- When the player is on standby, the STANDBY/ON lamp lights red.
  - When the player is turned on, the STANDBY/ON lamp lights green.
- The power can be remote controlled.

### Attention — Touche STANDBY/ON !

Déconnectez la prise d'alimentation secteur pour mettre l'appareil complètement hors tension (le témoin STANDBY/ON s'éteint). La touche STANDBY/ON , sur n'importe quelle position, ne peut pas déconnecter l'appareil du secteur.

- Quand l'appareil est en mode de veille, le témoin STANDBY/ON est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY/ON est allumé en vert.

L'alimentation peut être télécommandée.

### IMPORTANT FOR LASER PRODUCTS

#### IMPORTANT POUR LES PRODUITS LASER

1. CLASS 1 LASER PRODUCT
  2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
  3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.
1. PRODUIT LASER CLASSE 1
  2. **ATTENTION:** Radiation laser visible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
  3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

### CAUTION:

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### ATTENTION

- Ne bloquez pas les orifices ou les trous de ventilation.  
(Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.
- N'exposez pas cet appareil à la pluie, à l'humidité, à un égouttement ou à des éclaboussures et ne placez pas des objets remplis de liquide, tels qu'un vase, sur l'appareil.

---

## Supplied accessories

Check that you have all the following accessories supplied to you. If anything is missing, consult your dealer immediately.

- Audio/video cable (Yellow/White/Red) (× 1)
- Audio cable (White/Red) (× 2)
- Remote control unit (× 1)
- R6P(SUM-3)/AA(15F) battery (× 2)
- AC power plug adaptor (× 1) (for PX model ONLY)

---

## About this manual

- The display window information and OSD (On Screen Display) menu items are put in brackets [ ] in the operation procedures.
- Usable disc(s) for each operation/function is (are) referred to by the icons;



---

## Precautions

### Notes on the power cord

- When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet. A small amount of power (2.0 W) is always consumed while the power cord is connected to the wall outlet.
- When unplugging the unit from the wall outlet, always pull the plug, not the power cord.
- Do not handle the power cord with wet hands!

### Avoid moisture, water and dust

- Do not place the unit in moist or dusty places.
- If water gets inside the unit, turn off the power and remove the plug from the wall outlet, then consult your dealer. Using the unit in this state may cause a fire or electrical shock.

### Avoid high temperatures

- Do not expose the unit to direct sunlight or place it near a heating device.

### Notes on installation

- Select a place which is level, dry and neither too hot nor too cold between 5°C and 35°C (41°F and 95°F).
- Leave sufficient distance between the unit and the TV.
- Do not install the unit in a place subject to vibrations.
- Do not put heavy objects on the unit.

### To prevent malfunction of the unit

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic objects, such as wires, hairpins, coins, etc. into the unit.
- Do not block the vents. Blocking the vents may damage the unit.

### To clean the cabinet

- Use a soft cloth. Follow the relevant instructions on the use of chemically-coated cloths.
- Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

---

## Table of contents

<b>Supplied accessories</b> .....	1
<b>About this manual</b> .....	1
<b>Precautions</b> .....	1
<hr/>	
<b>Before operation</b> .....	2
About discs .....	2
<hr/>	
<b>Preparations</b> .....	4
Connections.....	4
Using the remote control unit.....	8
<hr/>	
<b>Basic operations</b> .....	10
Turning on/off the unit.....	10
Initial setup .....	10
Basic playback.....	11
Resuming playback .....	13
Various speed playback .....	14
Locating the beginning of a scene or song.....	15
<hr/>	
<b>Advanced operations</b> .....	16
Playing from a specific position .....	16
Selecting a still picture on a DVD AUDIO disc (PAGE) .....	17
Playing back a bonus group of a DVD AUDIO disc.....	18
Changing the playback order.....	18
Repeat playback.....	20
Changing the language, sound and scene angle .....	21
Special picture/sound effect .....	22
Checking the sampling frequency and quantization bit length .....	23
Menu bar functions .....	24
<hr/>	
<b>VR format disc playback</b> .....	27
About VR format discs .....	27
Basic operations .....	27
Repeat playback .....	29
Changing the sound .....	30
Turning on/off the subtitle .....	30
<hr/>	
<b>MP3/WMA disc playback</b> .....	31
Operations .....	31
<hr/>	
<b>JPEG disc playback</b> .....	33
About JPEG discs.....	33
Basic operations .....	33
Viewing pictures continuously (slide show mode) .....	34
<hr/>	
<b>Changing the initial settings</b> .....	36
Selecting preferences .....	36
Making fine tuning for your speakers.....	40
Limiting playback by children.....	42
<hr/>	
<b>Additional information</b> .....	44
Names of parts and controls.....	44
AV COMPU LINK remote control system .....	46
Troubleshooting.....	47
Specifications .....	48
Appendix A: Country/Area code list for Parental Lock.....	49
Appendix B: Table of languages and their abbreviations .....	50
Appendix C: Digital output signal chart.....	50
Appendix D: Glossary .....	51

# Before operation

## About discs

### Playable disc types

Discs with the following marks can be played back on the unit.

DVD AUDIO 	DVD VIDEO 	SVCD 
Video CD 	Audio CD 	

The DVD Logo is a trademark.

The unit can also play back the following discs:

- 9.4GB/4.7GB DVD-RAM with no cartridge, recorded with the video recording standard version 1.1
- 9.4GB/4.7GB DVD-RAM with cartridge but can be removed from the cartridge, recorded with the video recording standard version 1.1
- DVD-R/RW discs written in the DVD VIDEO format and finalized
- DVD-RW (version 1.1) discs written in the VR (Video Recording) format and finalized
- CD-R and CD-RW discs written in the SVCD, Video CD or Audio CD format and finalized
- CD-R and CD-RW discs written in MP3 or WMA in accordance with the "ISO 9660" format (See page 31 for details.)
- CD-R and CD-RW discs written in JPEG in accordance with the "ISO 9660" format (See page 33 for details.)

#### NOTES

- If a disc gets dirty, scratched or warped, or due to the disc characteristics or recording conditions, it may take considerable time for the unit to read the content, or the unit may not be able to play back such discs.
- With some DVD-RAM and DVD-RW (recorded in VR format) discs, portions such as a part between two programs may not be played back smoothly.
- DVD-RAM discs created using a personal computer and which do not comply with the video recording standard cannot be played back.
- DVD-RAM and DVD-RW discs that comply with the CPRM and on which material allowed to be copied only once is recorded cannot be played back.  
(CPRM: a picture source encryption technology developed to protect copyright)
- When playing back a DVD-RAM disc of type 2 or type 4, first remove the disc from the cartridge and place it in the disc tray (see page 11). Take care not to scratch the disc or make the disc dirty. After playing back the disc, be sure to retain it in the cartridge. (See also the instructions supplied with the disc.)

The unit can play back audio signals recorded in MIX-MODE CD, CD-G, CD-EXTRA and CD TEXT.

### Region code of DVD VIDEO

This unit can play back DVD VIDEO discs whose region code numbers include "1."

Examples of playable DVD VIDEO discs:



#### NOTE

The unit's region code is printed on the rear of the unit.

### Color system format

This unit accommodates the NTSC system, and also can play back discs recorded with PAL system whose Region Code numbers include "1."

Note that the PAL video signal on a disc is converted to an NTSC signal and output.

### Unplayable discs

The unit does not play back discs listed below. If you try to play back these discs, noise may generate causing damage to speakers.

- 2.6GB/5.2GB DVD-RAM, cartridge type 1 DVD-RAM, version 1.0 DVD-RW (recordable only in the VR format), DVD-ROM, CD-ROM, PHOTO CD, SACD

In addition, the unit does not play:

- Unfinalized discs.
- Discs of irregular shape or discs with tape, seals or paste on either the label side or playback side. Playing back these discs may damage the unit.

### Digital audio formats

The unit supports the following digital audio formats (see page 51 "Glossary" for descriptions of each audio format):

Linear PCM, Dolby Digital, DTS (Digital Theater Systems), MLP (Meridian Lossless Packing)

#### NOTE

Depending on the unit's [DIGITAL AUDIO OUTPUT] setting, digital audio signals may not be output as they are recorded on the disc. See "DIGITAL AUDIO OUTPUT" on page 38 for details.

### Notes on discs

- With some DVD VIDEO discs, the unit starts playback automatically after inserting the disc.
- The image may be sometimes poor or noisy due to defects in the disc itself.
- With some discs, operations described in this manual may not be possible.
- When a DVD AUDIO disc is played back, the DVD AUDIO indicator on the front panel turns on.

---

## Care and handling of discs

If a disc gets dirty, dusty, scratched or warped, playback sound and picture may be deteriorated. Take proper precautions when handling discs.

### Handling


- Do not touch the surface of the disc.
- Do not damage, stick paper to, or use any adhesive on either the label side or playback side.

### Storing discs

- Keep discs in their cases. If discs are piled on top of one another without their protective cases, they can be damaged.
- Do not put discs in a location where they may be exposed to direct sunlight, or where the humidity or temperature is high. Avoid leaving discs in a car!

### Cleaning discs

- Wipe with a soft dry cloth, moving from the center outwards. If a disc is difficult to clean, wipe with a cloth moistened with water.

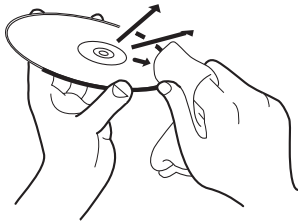

- Never use record cleaners, petrol, alcohol or any anti-static agents.

---

### Notes on copyright

Check the copyright laws in your country before recording from DVD AUDIO, DVD VIDEO, DVD-RAM, SVCD, Video CD, Audio CD, MP3, WMA and JPEG discs.

Recording of copyrighted material may infringe copyright laws.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

# Preparations

## Connections

Before using the unit, connect the unit to a TV and/or amplifier.

### Before making connections

- Do not connect the AC power cord until all other connections have been made.
- Connect VIDEO OUT of the unit directly to the video input of your TV. Connecting VIDEO OUT of the unit to a TV via a VCR may cause a monitor problem when playing back a copy-protected disc. You may also have a monitor problem when connecting the unit to an integrated TV/video system.

### NOTE


If your TV has an AV COMPU LINK terminal, you can use the AV COMPU LINK function. See "AV COMPU LINK remote control system" on page 46 for details.

- In the following description, "TV" may be substituted with "monitor" or "projector."
- Terminal names used for other components may be different from those used in the following description.

## Connecting to a TV


The following sections (A) to (C) describe TV connections where only a TV is connected to the unit so that you will hear audio from the TV.

### (A) Connecting to a conventional TV

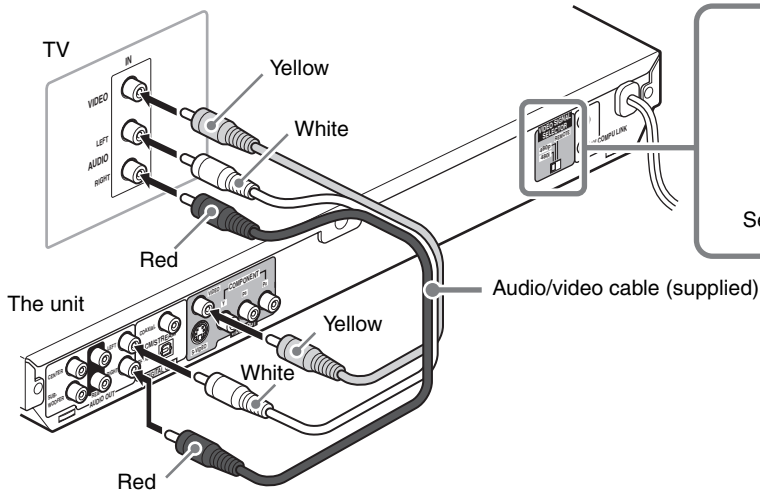


### NOTES

- Be sure to connect the red and white plugs of the audio/video cable to the FRONT RIGHT/LEFT jacks on the rear of the unit, as shown in the illustration.
- If your TV has a monaural audio input instead of stereo, you need to use an optional audio cable which converts stereo audio output to monaural.
- Set [ANALOG OUT] in the [AUDIO] preference display to [2-CH STEREO] (see page 38).

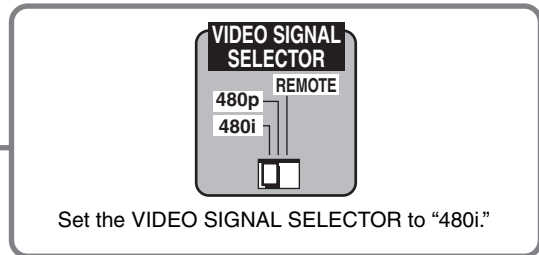


### (B) Connecting to a TV with an S-video jack

If your TV has an S-VIDEO input, you can get better picture quality by connecting it with the S-VIDEO output of the unit using an S-video cable instead of connecting the video input of the TV to the VIDEO jack of the unit.

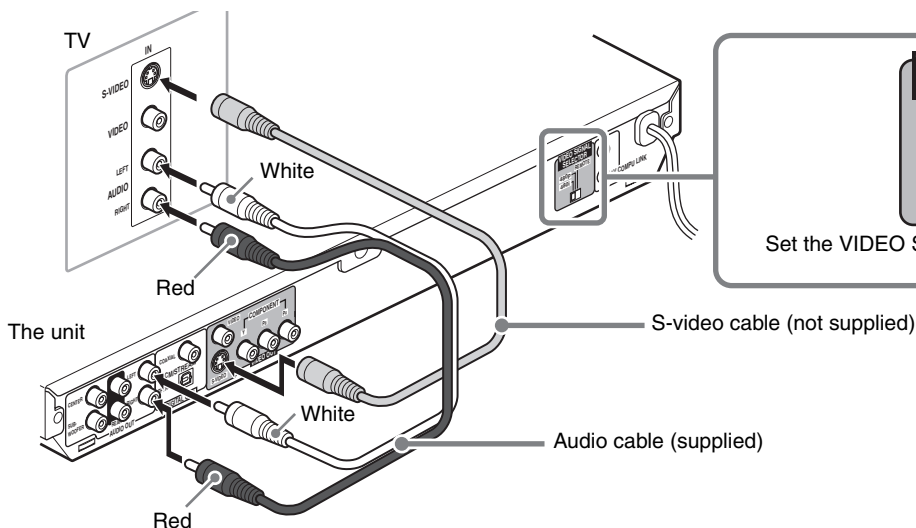

### NOTES

- Be sure to connect the red and white plugs of the audio cable to the FRONT RIGHT/LEFT jacks on the rear of the unit, as shown in the illustration.
- Set [ANALOG OUT] in the [AUDIO] preference display to [2-CH STEREO] (see page 38).

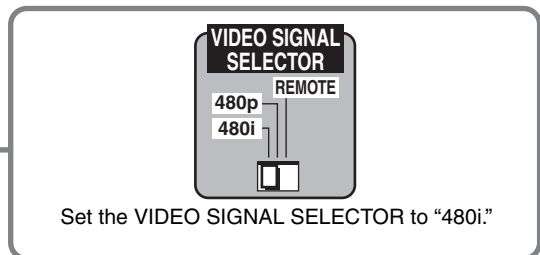



© Connecting to a TV with component jacks

You can enjoy picture of high-fidelity color reproduction by connecting the COMPONENT VIDEO OUT jacks on the unit to your TV.

NOTES

- Be sure to connect the red and white plugs of the audio cable to the FRONT RIGHT/LEFT jacks on the rear of the unit, as shown in the illustration.
- Connect "Y" to "Y," "PB" to "PB" (CB), "PR" to "PR" (CR) correctly.
- Set [ANALOG OUT] in the [AUDIO] preference display to [2-CH STEREO] (see page 38).
- If your TV has component video input jacks of BNC type, use an adapter which converts a pin jack to a BNC jack (not supplied).


Progressive scan video playback available

In the Progressive scanning mode, you can enjoy high quality picture with less flickers when the COMPONENT VIDEO OUT jacks are connected to a TV or monitor that supports the progressive video input.

About the scanning mode

Depending on the material source format, DVD VIDEO discs can be classified into two types; film source and video source (note that some DVD VIDEO discs contain both film source and video source). Film sources are recorded as 24-frame-per-second information, while (NTSC) video sources are recorded as 30-frame-per-second (60-field-per-second interlaced) information.

When the unit plays back a film source material, uninterlaced progressive output signals are created using the original information. When a video source material is played back, the unit interleaves lines between the interlaced lines on each to create the interpolated picture and outputs as the progressive signal.

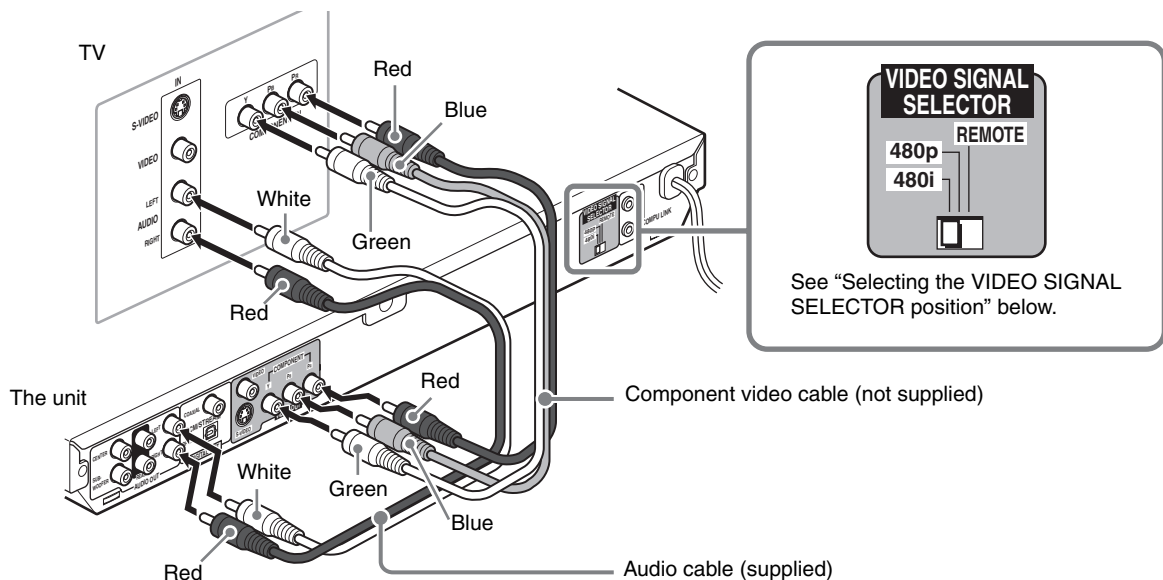

Selecting the VIDEO SIGNAL SELECTOR position

- If your TV equipped with component jacks does not support the progressive scanning mode  
Set the VIDEO SIGNAL SELECTOR to "480i."
- If your TV equipped with component jacks supports the progressive scanning mode  
Set the VIDEO SIGNAL SELECTOR to "480p."
- If you want to select the scanning mode between the interlace and progressive modes (depending on the source condition, or when connecting more than one TV, etc.)  
Set the VIDEO SIGNAL SELECTOR to "REMOTE."  
Thus you can select the mode from the remote control unit.

NOTE

You must change the VIDEO SIGNAL SELECTOR position while the unit power is off. Otherwise, the changed setting is not effective.

Activating the Progressive scanning mode using the remote control unit

When the unit is turned on and the VIDEO SIGNAL SELECTOR is set to "REMOTE," press and hold down VFP - PROGRESSIVE SCAN for a few seconds.

The scanning mode switches between the Progressive scanning and Interlaced scanning modes.

When the scanning mode is set to the Progressive mode, the PROGRESSIVE indicator on the front panel turns on. Depending on the [PICTURE SOURCE] setting on the [PICTURE] preference display and whether the current DVD VIDEO disc is film-source or video-source, the color of the indicator differs, as shown in the table below. (See page 37.)

Setting of [PICTURE SOURCE]	Source type of DVD VIDEO	
	Film source	Video source
AUTO	Green	Red
FILM	Green	Green
VIDEO (NORMAL)/ (ACTIVE)	Red	Red

\* While stopped in the Progressive scanning mode, the PROGRESSIVE indicator is lit in red regardless of the [PICTURE SOURCE] selection.

NOTES

- The Progressive scanning mode works only when you connect the unit's COMPONENT VIDEO OUT jacks to your TV.
- There are some progressive TV and High-Definition TV sets that are not fully compatible with the unit, resulting in the unnatural picture when playing back a DVD VIDEO disc in the Progressive scanning mode. In such a case, use the Interlaced scanning mode. To check the compatibility of your TV set, contact your local JVC customer service center.
- All JVC progressive TV and High-Definition TV sets are fully compatible with the unit (Example: AV-61S902).


## Connecting to optional audio equipment

### Connecting to a stereo audio amplifier/receiver

Connect the unit's AUDIO OUT (LEFT/RIGHT) jacks to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier or receiver.

**NOTES**

- Be sure to connect the red and white plugs of the audio cable to the FRONT RIGHT/LEFT jacks on the rear of the unit, as shown in the illustration.
- Set [ANALOG OUT] in the [AUDIO] preference display to [2-CH STEREO] (see page 38).

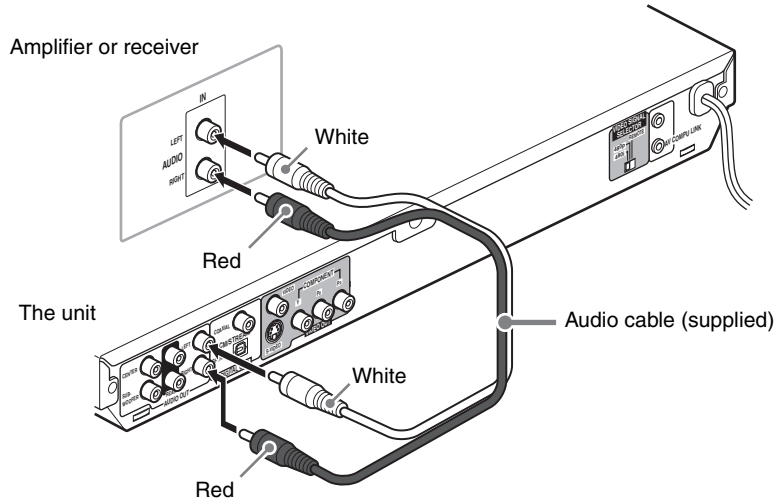


Preparations

### Connecting to an amplifier/receiver equipped with 5.1-channel inputs

The unit supports the linear PCM multichannel format of DVD AUDIO and can feed multichannel audio output signals from the six analog AUDIO OUT jacks. It is also equipped with the DTS and Dolby Digital decoders. So you can enjoy any type of the high quality surround sounds by connecting the unit to an amplifier/receiver equipped with the 5.1-channel inputs.

**NOTES**

- When using the 5.1-channel outputs of the unit, set the [ANALOG OUT] in the [AUDIO] preference display to [MULTI CHANNEL] (see page 38).
- If you select [EXPERT] in the [SPK.SETTING] preference display, you can control the audio output balance of the speakers (see page 38).
- You can use the yellow plugs of the audio/video cable for video connection.

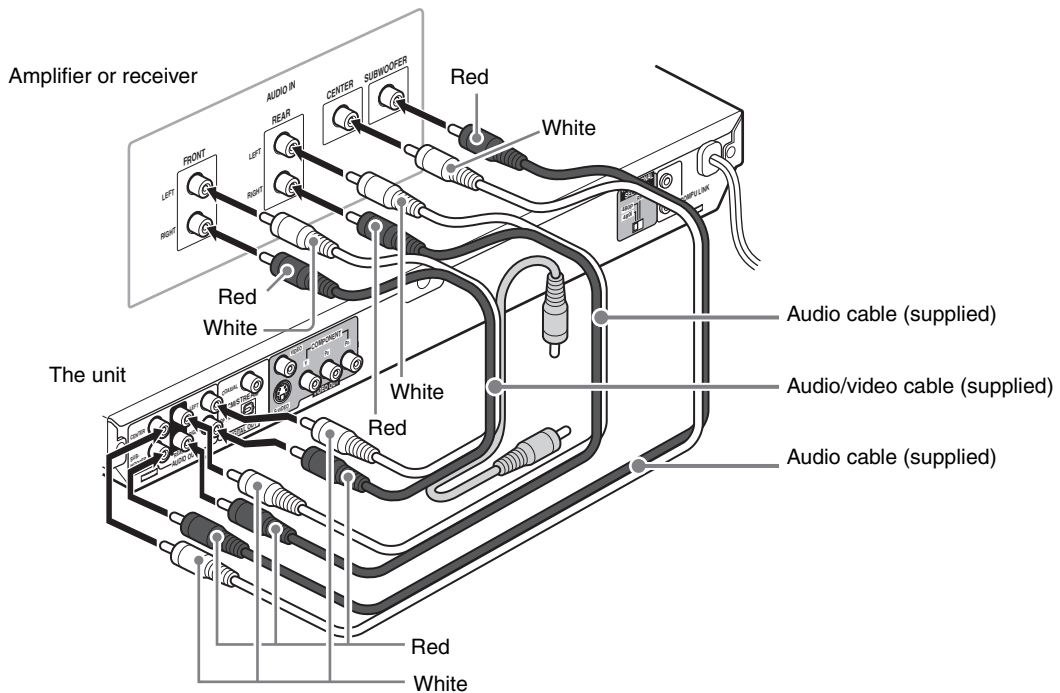




### Connecting to a digital audio device

You can enjoy sound of enhanced quality by connecting the unit's DIGITAL OUT (either OPTICAL or COAXIAL) jack to a digital input of an amplifier, etc., using an optical or coaxial digital cable. The digital audio signal on a disc will be transferred directly from the unit. If the connected digital audio equipment is a Dolby Digital or DTS decoder or an amplifier with a built-in decoder, you can enjoy high-quality surround sound.

#### NOTES

- Connect the unit and the digital audio device by using either an optical digital cable or a coaxial digital cable.
- It is not recommended to use the digital jacks for dubbing. When recording the sounds (DVD AUDIO, DVD VIDEO, SVCD, Video CD or Audio CD) played back on the unit, record them through the analog jacks (in this case, set [ANALOG OUT] in the [AUDIO] preference display to [2-CH STEREO]) (see page 38).
- Depending on the disc, no signal may be output from the DIGITAL OUT. Make an analog connection in this case.
- **Set [DIGITAL AUDIO OUTPUT] in the [AUDIO] preference display correctly according to the connected digital audio equipment. If setting made for [DIGITAL AUDIO OUTPUT] is incorrect, loud noise may be generated causing damage to the speakers (see page 38).**

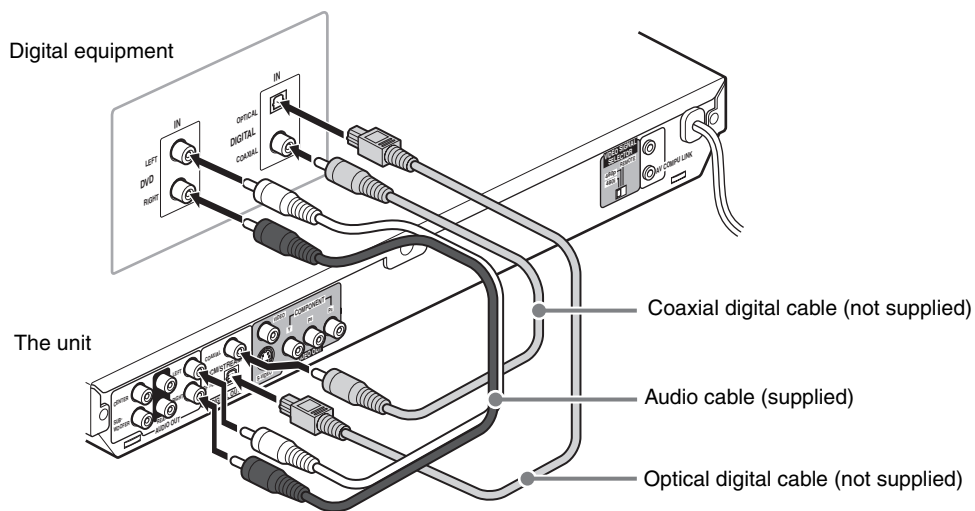

## Preparations

### Connecting the power cord

When all the audio/video connections have been made, connect the AC power plug to the wall outlet. Make sure that the plugs are inserted firmly.

The STANDBY indicator lights in red.

#### NOTE

(only for PX model)

Use the supplied AC power plug adaptor when inserting the larger plug to the wall outlet.



#### Warning

- Disconnect the power cord:
  - if you are not going to use the unit for a long time.
  - before cleaning the unit.
  - before moving the unit.
- Do not:
  - connect or disconnect the power cord with wet hands.
  - pull the power cord when disconnecting it, as this may damage the cord and cause fire, electric shock, or other accidents.




#### Caution

- Do not alter, twist or pull the power cord, or put anything heavy on it, which may cause fire, electric shock, or other accidents.
- If the cord is damaged, consult a dealer and have the power cord replaced with a new one.

### Using the remote control unit

#### To install batteries

Open the compartment cover, and place the two supplied R6P (SUM-3)/AA(15F) batteries in the remote control unit according to the polarity markings (“+” and “-”) inside the compartment. Then replace the cover.

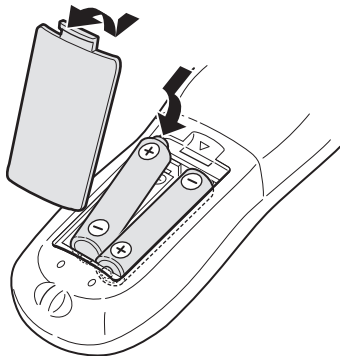

The batteries will last about six months with normal use. If the functions of the remote control unit become erratic, replace the batteries.

#### Precautions of the safe use of batteries

Observe the following precautions for the safe use of batteries. If they are used improperly their lives will be shortened, they may burst or their contents may leak.

- Remove the batteries from the remote control unit if it is not going to be used for a long period of time.
- Remove dead batteries and dispose of them properly.
- Never leave dead batteries lying around, take them apart, mix them with other refuse, or throw them into an incinerator.
- Never touch liquid that has leaked out of a battery.


- Do not mix new and old batteries, or batteries of different types, when replacing them.

### Remote sensor

Point the top of the remote control unit toward the remote sensor as directly as possible. If you operate it from a diagonal position, the operating range (approx. 5 m) may be shorter.

Remote sensor



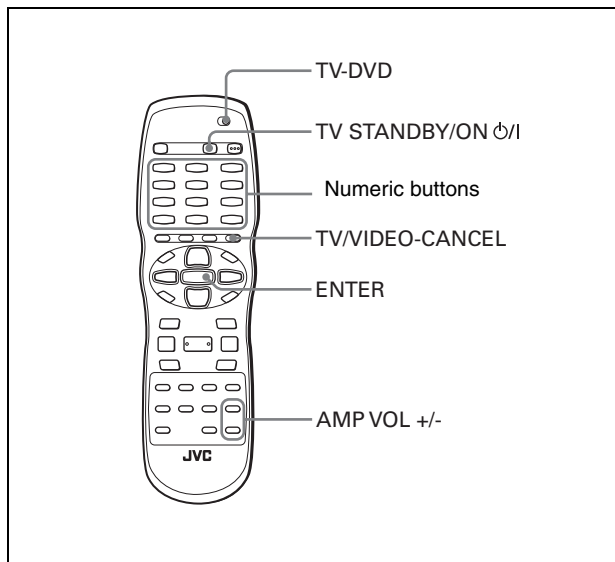

## To use the remote control unit for TV operation

### Setting the remote control signal for operating your TV

**1** Set the TV - DVD switch to "TV."

**2** While holding down TV/VIDEO - CANCEL, enter the manufacturer code of your TV listed below by using the numeric buttons (0 to 9), and then press ENTER.

**Example:**

To enter the manufacturer code "01": Press "0," "1," then ENTER.

**Manufacturer code list**

Manufacturer	No.	Manufacturer	No.
AIWA	36	MIVAR	29
BEIJING	22	NEC	20
CCE	02	NOBLEX	22
CHANGHONG	34	NOKIA	31
DAEWOO	17, 37	PANASONIC	04, 11
FERGUSON	27	PEONY	34, 38, 39
FINLUX	30	PHILCO	10, 17, 21
FUNAI	32	PHILIPS	02
GRADIENTE	15, 20	RCA	05
GRUNDIG	19	SAMSUNG	12, 33, 34, 35
HITACHI	10		
ITT	28	SANYO	13, 16
JINXING	38	SEARS	13
JVC	01, 23, 24, 25	SHARP	06
		SONY	07
KONKA	40	TCL	41
LG (GOLDSTAR)	18	THOMSON	26
MAGNAVOX	02	TOSHIBA	08, 14
MITSUBISHI	03	ZENITH	09

**3** Release TV/VIDEO - CANCEL.

**4** Try to operate the TV by pressing TV STANDBY/ON ⏻/⏪.

 
If your TV turns on or off, you have successfully set the control signal.

**NOTES**

- The initial manufacturer code of the unit upon purchase is "JVC" (01).
- If there is more than one code listed for the manufacturer of your TV, try them one by one until you succeed.

### Operating the TV

Set the TV - DVD switch on the remote control unit to "TV."




The following buttons can be used for operating the TV.


	Turns the TV on or off.
	Switches the TV input mode between TV and VIDEO.
	Selects the TV channels directly. *For some TVs, pressing "+10" functions as the "100+," while "10" functions as the ENTER button if your TV requires pressing the ENTER button after selecting a channel number.
	Mutes the TV sound.
	Changes the TV channels.
	Adjusts the TV sound volume.

### To control the volume of a JVC's amplifier or receiver

 Pressing the AMP VOL + button raises the audio volume of a JVC's amplifier or receiver, while pressing the - button lowers the volume.



# Basic operations

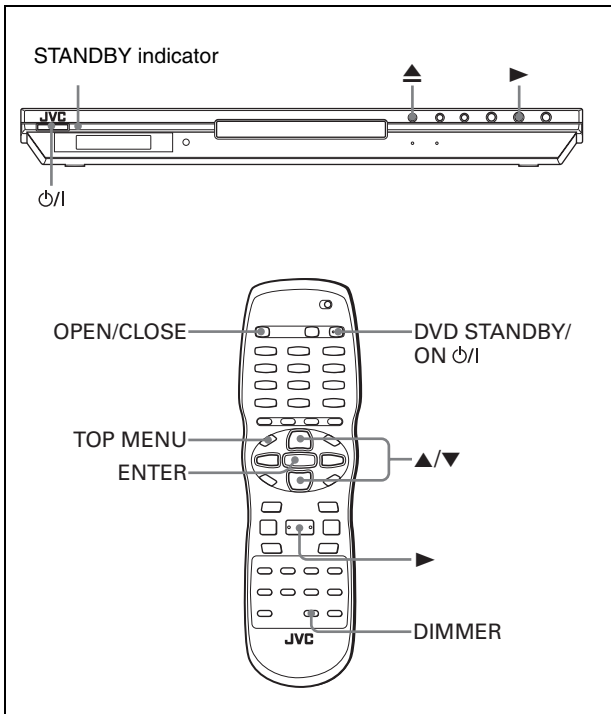

## NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  and numeric buttons for controlling the unit.

## About invalid operation icon

When you press a button, and if the unit does not accept its operation,  $\odot$  appears on your TV screen. Operations are occasionally unacceptable even if  $\odot$  is not displayed. Note that some operations may not be accepted. For example, some discs may not allow rapid advance/reverse or slow-motion playback.

## Turning on/off the unit

**Press DVD STANDBY/ON  $\odot$  on the remote control unit or press  $\odot$  on the front panel.**

The STANDBY/ON indicator on the front panel, which lights in red during standby, lights in green.

The opening display appears on the TV screen, and the following messages may appear at the bottom of the opening display.



Message area

- NOW READING (The unit is reading the disc information.)
- REGION CODE ERROR! (The region code of the DVD VIDEO disc does not match the unit. The disc cannot be played back.)
- OPEN
- CLOSE
- NO DISC

## NOTE

Even if you turn off the unit, the unit is not disconnected from the AC power source as long as it is connected to the wall outlet. This state is called standby mode. In this state, the unit consumes a very small amount of power.

## Initial setup

When you turn on the unit for the first time after purchase, the following message appears on the TV screen.


EXECUTE DVD PLAYER SETUP? - BASIC PICTURE/AUDIO SETTING  
YES - PRESS ENTER NO - CANCEL

You can set the display language, TV monitor type, analog audio output and digital output before using the unit, by following the procedure below.

- Refer to pages 37 and 38 for detailed explanation of each item to be set in the following procedure.

### 1 Press ENTER.

The first page of the DVD PLAYER SET UP display appears. The pull-down menu of the [ON SCREEN LANGUAGE] is already open.

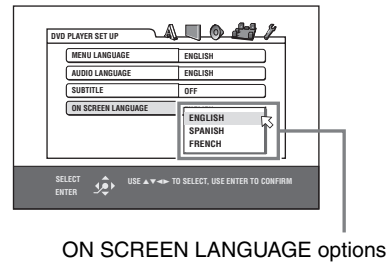


ON SCREEN LANGUAGE options

### 2 Press $\blacktriangle/\blacktriangledown$ to select the desired language.

You can select the on-screen language for the preference displays, etc. from among ENGLISH, SPANISH and FRENCH.

### 3 Press ENTER.

The second page is shown, in which the pull-down menu of the [MONITOR TYPE] is already open.

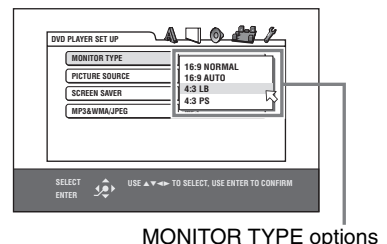


MONITOR TYPE options

### 4 Press $\blacktriangle/\blacktriangledown$ to select the desired monitor type.

For a normal (conventional) TV, select [4:3 LB] or [4:3 PS]. For a wide-screen TV, select [16:9 NORMAL] or [16:9 AUTO]. (See page 37.)

### 5 Press ENTER.

The third page is shown, in which the pull-down menu of the [ANALOG OUT] is already open.

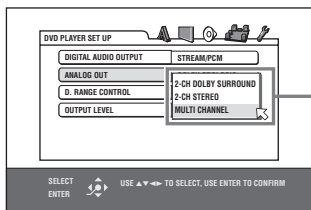

ANALOG OUT options


### 6 Press ▲/▼ to select a desired analog output signal type.

Set this item correctly when you play back a DVD VIDEO disc recorded with surround multichannel audio.

- When connecting to a surround decoder, select [2-CH DOLBY SURROUND].
- When connecting to a stereo amplifier/receiver or TV, select [2-CH STEREO].
- When connecting the unit's 5.1-channel output, select [MULTI CHANNEL]. Note that you can perform fine tuning for your speakers when [MULTI CHANNEL] is selected (see pages 38 and 40).

### 7 Press ENTER.

The final page is shown, in which the pull-down menu of the [DIGITAL AUDIO OUTPUT] is already open.

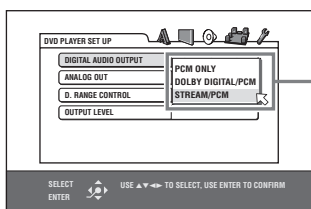

DIGITAL AUDIO OUTPUT options

### 8 Press ▲/▼ to select a desired digital output signal type.

Set this item correctly when you connect the unit to an external surround decoder or D/A converter. (If you do not connect the unit to such a device, you do not have to set this item.)

- When connecting to other digital device, select [PCM ONLY].
- When connecting to a Dolby Digital decoder, select [DOLBY DIGITAL/PCM].
- When connecting to a Dolby Digital decoder or a DTS decoder, select [STREAM/PCM].

### 9 Press ENTER.

The TV screen returns to the opening display.

#### To bring up the DVD PLAYER SET UP display later

Press CHOICE for a few seconds until the DVD PLAYER SET UP display appears.

#### To change the brightness of the display window

Press DIMMER on the remote control unit. You can select the display window and the disc tray brightness from three levels, or off. If the brightness is set to off, nothing will be shown on the display.

#### About screen saver function

A television monitor may have an image burned into it if a static image is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.

When the screen saver function is activated, the TV screen gets darker.


Pressing any buttons will release the screen saver function (see page 37).

## Basic playback



1 Press ▲ (or OPEN/CLOSE on the remote control unit) to open the disc tray.

2 Place a disc in the disc tray.

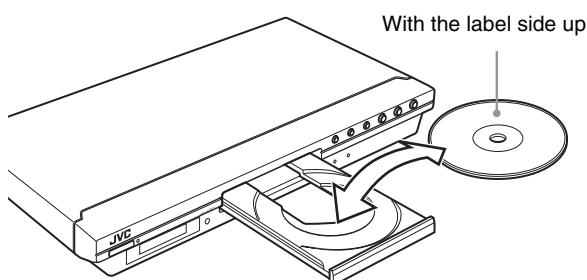

- To insert an 8-cm disc, place it in the inner recess.

3 Press ►.

The unit starts playback from the beginning.

#### If a menu is shown on the TV screen

When inserting a DVD AUDIO, DVD VIDEO, SVCD or Video CD disc, a menu may be shown on the TV screen. From the menu, you can select a desired item to be played back.

#### For DVD AUDIO/DVD VIDEO

- 1 Press ▲/▼/◀/▶ to select a desired item.
- 2 Press ENTER.

The unit starts playback of the selected item.


#### For SVCD/Video CD

Press the numeric buttons to select a desired item.

The unit starts playback of the selected item.

#### NOTES

- Do not insert an unplayable disc. (See page 2.)
- When inserting a disc on the disc tray, be sure to position the disc inside the recess. Otherwise, the disc may be damaged when the disc tray is closed, or you may not be able to remove the disc from the unit.
- When a DVD AUDIO disc is played back, the DVD AUDIO indicator on the front panel turns on.
- For a double-sided DVD VIDEO disc, place the disc with the playback side facing down.

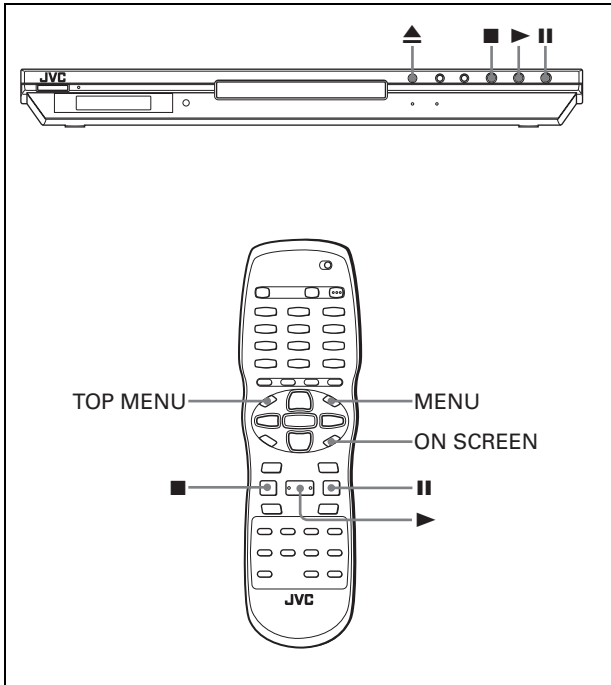

## To stop playback completely

Press ■.

### Hint

If you press ▲ during playback, the unit stops playback and opens the disc tray.

## To stop playback temporarily

Press II.

To resume playback, press ►. (See the following item.)

## About On-screen guide icons

You may see the following icons displayed over the picture. They have the following meanings.

- : Appears at the beginning of playback mode.
- : Appears at the beginning of pause mode.
- : Appears at the beginning of fast forward/backward playback with the current speed (see page 14).
- : Appears at the beginning of slow-motion playback with the current speed (see page 14).
- : Appears at the beginning of a scene recorded from multiple angles (see page 21).
- : Appears at the beginning of a scene recorded with multiple audio languages (see page 21).
- : Appears at the beginning of a scene recorded with multiple subtitle languages (see page 21).

You can change the setting so that the on-screen guide icons do not appear on the TV screen (see page 39).

## About PBC (Playback Control)

Some SVCD/Video CD discs support the PBC function. The PBC function allows you to enjoy menu-driven operation and high-resolution still images which have a resolution four times greater than moving pictures.


- To play a PBC-compatible SVCD/Video CD disc without activating the PBC function, press the numeric buttons instead of ► to start playback.
- To activate the PBC function again,
  - 1) press TOP MENU or MENU,
  - or
  - 2) press ■ to stop playback, then press ►.

## To check the playback status

You can see the current selection number (the group/track number for DVD AUDIO, the title/chapter number for DVD VIDEO or track number for SVCD/Video CD/Audio CD), time information (the track or chapter time while stopped, or elapsed track or chapter time during playback) and the transport status (stop, playback, pause, etc.) on the TV screen.

### Press ON SCREEN.

Example: for DVD VIDEO

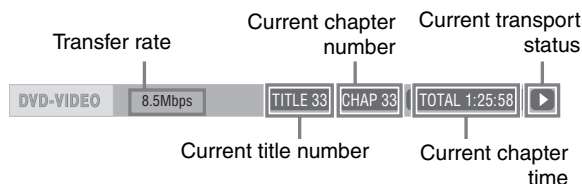

Note that pressing ON SCREEN again brings up the menu bar under the status bar, from which you can access various functions. See page 24 for details about the menu bar.

### To turn off the status bar

Press ON SCREEN repeatedly until the status bar goes off.



## Resuming playback



The unit can memorize the position on a disc where you interrupt playback, and resume playback from that position later.

There are three resume modes; ON, OFF and DISC RESUME.

The mode is initially set to ON when you purchased the unit.

- You can select the mode using the preference display (see page 39).

### When the resume mode is “ON”

When you press ■, the unit stops playback and memorizes the interrupted position. The TV screen shows [RESUME STOP] and the display window shows [---- RESUME] (for DVD AUDIO/DVD VIDEO discs) or [-- RESUME] (for SVCD/Video CD/VR format discs).

The memory of the interrupted position is not cleared if you turn off the unit.

When you turn off the unit after setting the resume function, simply press ►. The unit is turned on, and playback starts from the interrupted position. If you turn on the unit by pressing ⏻ then press ►, playback starts from the beginning of the disc. Note that the memory is cleared if you open the disc tray.

### When the resume mode is “DISC RESUME”

When you press ■, the unit stops playback and memorizes the interrupted position. The TV screen shows [RESUME STOP] and the display window shows [---- RESUME] (for DVD AUDIO/DVD VIDEO discs) or [-- RESUME] (for SVCD/Video CD discs).

The memory of the interrupted position is not cleared if you open the disc tray or turn off the unit.

#### Hint

The unit memorizes interrupted positions for the last 30 discs played. Storing a new interrupted position will erase the interrupted position stored for the first disc.

### To clear the memory

Press ■ while the disc is stopped.

## To resume playback

### When the resume mode is “ON”

**While the disc you interrupted playback is still on the disc tray, press ►.**

The unit resumes playback from the position where playback was interrupted. The TV screen and the display window show [RESUME PLAY].

#### To play back from the beginning

Press ■ before pressing ► to start playback.

### When the resume mode is “DISC RESUME”

**1 Press ▲ to insert a disc for which the unit has stored an interrupted position.**

The TV screen shows [RESUME STOP].

**2 Press ►.**


The TV screen and the display window show [RESUME PLAY] and the unit resumes playback from the position where playback was interrupted.

#### To play back from the beginning

After inserting the disc, press ■ before pressing ► to start playback.

#### NOTES

- If you change the [RESUME] setting from [DISC RESUME] to [OFF] or [ON], you cannot resume playback of a disc whose “resuming” position is stored. However, when you again set [RESUME] to [DISC RESUME], you will then be able to resume playback of the disc.
- If you interrupt the playback of a disc for which an interrupted position has already been stored, the memory will be updated with the new interrupted position.
- For a double-sided DVD AUDIO/DVD VIDEO disc, the unit regards each side as a different disc. Therefore, to resume playback of such a disc, the disc must be inserted with the same side down.
- When the unit memorizes an interrupted point for a disc, it also memorizes Audio, Subtitle and Angle settings.
- The unit may not resume playback exactly from the interrupted point. In the case of an SVCD/Video CD disc with PBC function, the unit may resume playback from a point slightly earlier or later than the point where playback was interrupted.

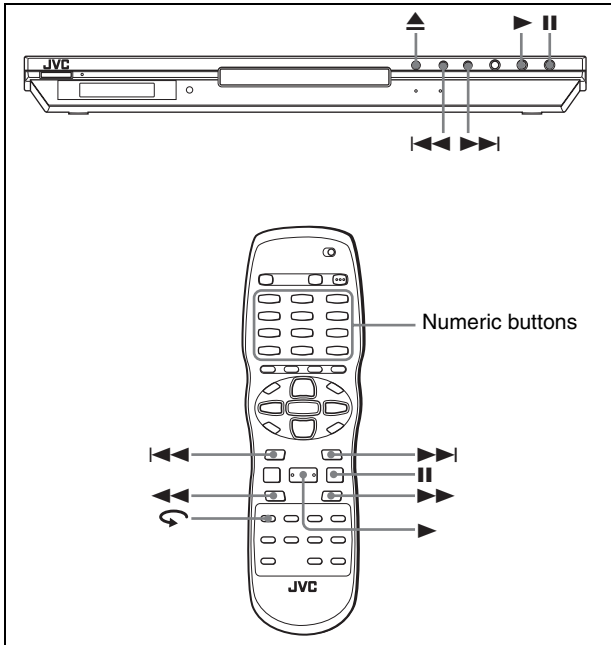

### Various speed playback

#### To advance or reverse playback rapidly while monitoring



During playback, press ►► or ◀◀ on the remote control unit.

You can select from 1.5 times, 5 times, 20 times and 60 times normal speed. Pressing ► returns the unit to normal playback.

During playback, hold down ►► or ◀◀.

Playback is advanced or reversed at 5 times normal speed.

#### NOTE

During rapid playback, the sound will be muted except when playing a DVD AUDIO or Audio CD, and when playing a DVD VIDEO or Video CD at 1.5 times normal speed. For DVD AUDIO and Audio CD discs, the sound will be heard intermittently.

### x1.5 Quick Playback with sound



When you select 1.5 times normal speed playback, the disc is played back with sound.

- For DVD VIDEO discs, the subtitle does not go off.
- If the sound of a DVD VIDEO disc is recorded in Dolby Digital or DTS format, stereo linear PCM signals are output. With some DVD VIDEO discs, the sound quality and volume may alter, or the sound may be out of tune.
- To switch from rapid reverse playback to x1.5 Quick Playback, first press ►, then press ►► once.

#### To advance a still picture frame by frame



While paused, press II.

Each time you press II, the still picture advances to the next frame.

Pressing ► returns to normal playback.

#### To play back in slow motion



You can select from 1/32 times, 1/16 times, 1/4 times and 1/2 times normal speed.

During playback, press II, then press ►► (to play forward slow motion), or ◀◀ (to play reverse slow motion, for DVD VIDEO disc only).

Pressing ► returns to normal playback.

#### NOTES

- During slow motion playback, the sound will be muted.
- Reverse slow motion playback is not possible for an SVCD and Video CD.

#### To replay the previous scenes (One touch replay function)



During DVD VIDEO playback, press ↶.

The playback position moves back 10 seconds before the current position.

#### NOTES

- This function works only within the same title, though it works between chapters.
- This function may not work with some DVD VIDEO discs.

## Locating the beginning of a scene or song



For DVD AUDIO: During playback or while in stop mode, you can skip a group or track.

For DVD VIDEO: During playback, you can skip a chapter or title, depending on the disc configuration.

For SVCD/Video CD: During playback without PBC function, you can skip a track.

For Audio CD: During playback or while in stop mode, you can skip a track.

**To skip forward, press ►►.**

**To skip backward, press ◀◀.**

### Using the numeric buttons

For DVD AUDIO/DVD VIDEO/Audio CD: During playback or while in stop mode

For SVCD/Video CD: During playback without PBC function or while in stop mode

**Press the numeric buttons to specify the number.**

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

The unit starts playback from the beginning of the selection.

#### NOTES


- Depending on the disc type and the unit status, what is specified differs:

unit status	Disc type	What is specified
While stopped	DVD AUDIO	group or track *
	DVD VIDEO	title
	SVCD/Video CD/Audio CD	track
During playback	DVD AUDIO	track
	DVD VIDEO	chapter
	SVCD/Video CD/Audio CD	track

\* Pressing the numeric buttons simply selects a track. To select a group (when a disc contains more than one group), press TITLE/GROUP before pressing the numeric buttons.

- During DVD VIDEO playback, if a menu is shown on the TV screen, the numeric buttons may be used for selecting an item in the menu.

# Advanced operations

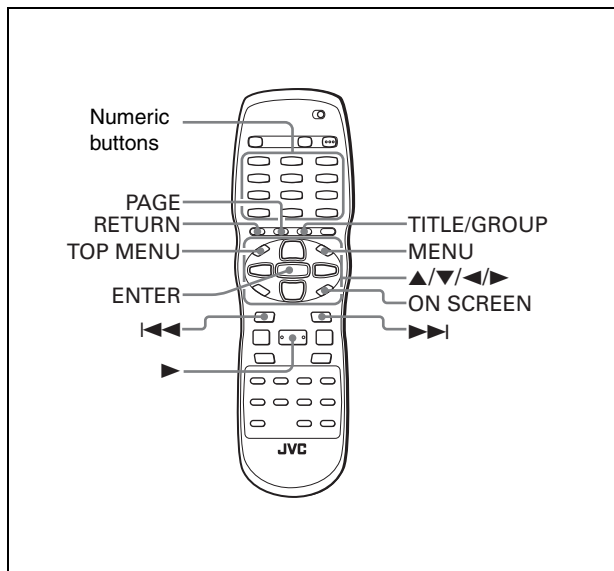

## NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ , numeric and TV/VIDEO - CANCEL buttons for controlling the unit.

## Playing from a specific position

### Locating a desired scene from the DVD menu



DVD AUDIO/DVD VIDEO discs generally have their own menus which show the disc contents. These menus contain various items such as titles of movies, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene using the DVD menu.

#### 1 While a DVD AUDIO/DVD VIDEO disc is inserted, press TOP MENU or MENU.

The menu appears on the TV screen.

#### 2 Press $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ to select a desired item, then press ENTER.

The unit starts playback of the selected item.

### Hints

- Some DVD AUDIO/DVD VIDEO discs may also have a different menu which appears when MENU is pressed.
- See the instructions of each DVD AUDIO/DVD VIDEO disc for its particular menu.
- With some discs, you can select items by entering the corresponding number using the numeric buttons, which may cause the unit to automatically start playback.

## NOTE

The MENU button does not work while stopped.

### Locating a desired scene from the menu of a SVCD/Video CD with PBC



Some SVCD/Video CD discs support the PBC function. PBC is an abbreviation of "Playback Control." Some SVCD/Video CD discs recorded with PBC have their own menus, such as a list of the songs of the disc. You can locate a specific scene by using the PBC menu.

#### 1 In stop mode, press $\blacktriangleright$ or TOP MENU.

A disc menu appears on the TV screen.

#### 2 Press the numeric buttons to select the desired item.

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

The unit starts playback of the selected item.

To return to the menu, press RETURN.

### Hint

If something like [NEXT] or [PREVIOUS] appears on the TV screen, pressing  $\blacktriangleright\blacktriangleleft$  advances to the next page, and pressing  $\blacktriangleleft\blacktriangleright$  returns to the previous page.

### Specifying a desired title/group



#### 1 During playback, press TITLE/GROUP.

[--] is shown in the title display area of the display window.

#### 2 Press the numeric buttons to specify a title or group to be played.

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

The unit starts playback from the specified title or group.

## NOTE

This function may not work with some DVD AUDIO/DVD VIDEO discs.

## Locating a desired position in the current title, group or track (Time search)



You can play a disc from the desired position by specifying the time from the beginning of the current group (for DVD AUDIO), the current title (for DVD VIDEO) or the disc (for SVCD/Video CD/ Audio CD).

For DVD AUDIO/DVD VIDEO/Audio CD: During playback or while in stop mode

For SVCD/Video CD: In any condition except SVCD/Video CD playback with PBC

 
### 1 Press ON SCREEN twice.

The menu bar appears on the TV screen.


### 2 Press ◀▶ to move ⏏ to ⏪⏩, then press ENTER.

The pull-down menu for entering time appears.

#### Screen example for DVD VIDEO



#### Screen example for Audio CD

 

### 3 Press the numeric buttons (0 to 9) to enter the desired time.

The specified time is displayed in the pull-down menu.

#### Example (for DVD AUDIO/DVD VIDEO)

To play back from 2(H):34(M):00(S)  
Press 2, 3, then 4.

TIME 2:34:\_\_

#### Example (for SVCD/Video CD/Audio CD)

To play back from 23(M):40(S)  
Press 2, 3, then 4.

TIME 23:4\_

You do not have to press "0" to enter the trailing zeros (for the last two digits in the example above).

#### To correct a mistake

Press ◀ repeatedly to move back to the digit where you entered a wrong number, and reenter the correct one.

### 4 Press ENTER.

The unit starts playback from the specified time.

## To dismiss the menu bar

Press ON SCREEN.

### Hint

"10" and "+10" buttons are not used with this function.

### NOTES

- Some DVD VIDEO discs do not contain time information, and the time search function cannot be used.
- When a DVD AUDIO disc is stopped, you can specify the elapsed time from the beginning of group 1.
- The time search function cannot be used during program playback.

## Selecting a still picture on a DVD AUDIO disc (PAGE)



 
Most DVD AUDIO discs include still pictures, which appear in turn during playback. There are other page(s) of the current still picture and you can change the picture (turn the page) manually.

### Hint

At the beginning of a part where there are selectable pictures, [PAGE] appears on the TV screen (except when the [ON SCREEN GUIDE] preference is set to [OFF]).

### 1 During playback except when the status bar is shown, press PAGE.


The page selection window appears on the TV screen.



### 2 Press PAGE or ▲/▼ to select the desired page.

### 3 Press ENTER.

The selected page (picture) is shown.  
The page selection window is dismissed.

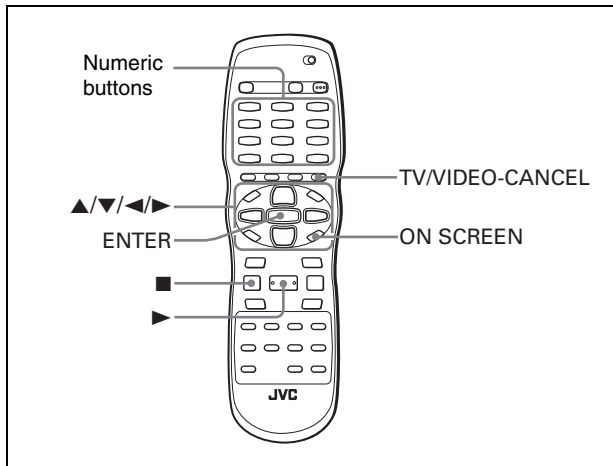

## Playing back a bonus group of a DVD AUDIO disc



Some DVD AUDIO discs contain a special group called "bonus group" whose contents are not opened to the public. The bonus group is assigned to the last group of a disc. To play back a bonus group, you have to enter a specific "key number" for the bonus group. A way of getting the key number depends on discs.

**1 In stop mode, press the numeric buttons to select the bonus group numer (the last group).**

The display window and on-screen display prompt you to enter the key number.

On the TV screen



**2 Press the numeric buttons to enter the key number.**

If you entered the correct key number, the unit starts playback of the bonus group.

If you entered a wrong key number, you are prompted to enter the correct key number.

### To dismiss the key number entry display

Press ■, open the disc tray, or turn the power off.

#### NOTES

- Once you enter the correct key number, the unit memorizes it until you turn off the power or open the disc tray.
- If you specify a track in the bonus group for the program playback, you will also be prompted to enter the key number during program play.
- In the random playback, tracks in the bonus group are not played back.

## Changing the playback order

### To play back in a specific order (Program play)



By programming tracks, you can play up to 99 tracks in any order. You may program the same track more than once.

**1 In stop mode, press ON SCREEN twice.**

The menu bar appears on the TV screen.

**2 Press ◀/▶ to move [ ] to PROG.**

Screen example for DVD AUDIO



**3 Press ENTER.**

The program table appears.

The [PRGM] indicator lights up in the display window.

**4-a (for DVD AUDIO)**

**Press the numeric buttons to specify selections in the desired order by group and track numbers.**

For each program step, specify a group first, then specify a track.

To specify track 14 in group 2: press 2, +10, then 4.

**4-b (for SVCD/Video CD/Audio CD)**


**Press the numeric buttons to specify tracks in the desired order.**

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

(Program table example for DVD AUDIO)

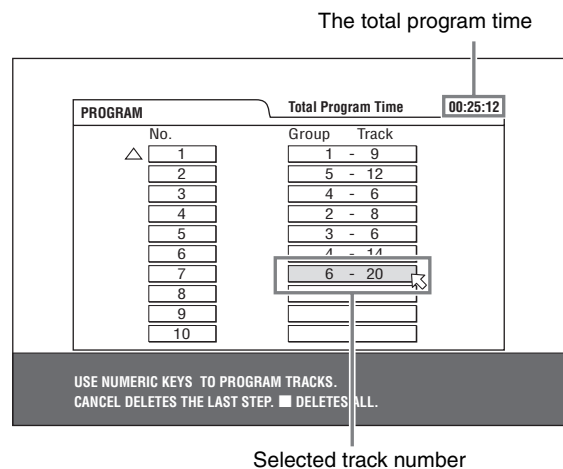

#### To correct the program

Press ▲/▼ to move [ ] to the track to be corrected, then press TV/VIDEO - CANCEL. The track is erased and the subsequent programmed tracks move up. Pressing ■ clears all the programmed tracks.



## 5 Press ► to start program playback.

With an Audio CD disc, the program table remains on the TV screen during program playback. (Pressing ON SCREEN brings up the status bar.)

When all of the programmed tracks have finished playback, the unit stops and the program table appears again. Note that the program remains.

- During program playback, you cannot edit the program contents.

### To check the program contents

During playback, press ■. Playback stops and the program table is shown.

When the unit is playing back an Audio CD and the program table is not shown, you can bring up the table by carrying out steps 1 to 3.

During DVD AUDIO/SVCD/Video CD playback, you can check the program contents via the menu bar.

### To stop program playback

Press ■.

### To clear the program

While stopped and the program table is shown, press ■.

### To exit the program mode

After clearing the program, press ON SCREEN.

#### NOTES

- When the disc tray is opened or the unit is turned off, the program is cleared.
- If you are going to program a track in the bonus group of a DVD AUDIO, the unit will prompt you to enter the key number for the bonus group.

## To play back in random order (Random play)

 


### 1 In stop mode, press ON SCREEN twice.

The menu bar appears on the TV screen.

### 2 Press ◀▶ to move [RND].

Screen example for Audio CD



### 3 Press ENTER.

The unit starts random playback.

With a DVD AUDIO/SVCD/Video CD disc, the menu bar is automatically dismissed.

During random playback, the [RND] indicator lights up in the display window.


After playing all tracks of the disc, the unit stops the disc and exits the random playback mode.

### To stop and quit random playback

Press ■. The unit stops playback and exits the random playback mode.

#### NOTE

In the random playback mode with a DVD AUDIO disc, tracks in the bonus group are not played back.

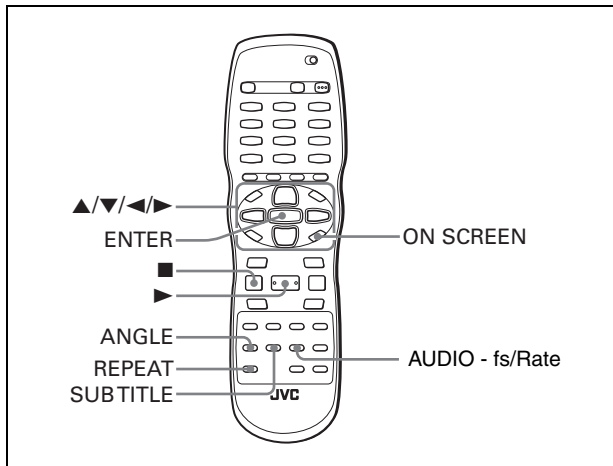

## Repeat playback

### To repeat the current selection or all tracks



For DVD AUDIO/DVD VIDEO: During playback  
For SVCD/Video CD/Audio CD: In any condition except SVCD/  
Video CD playback with PBC

#### Press REPEAT.

If you press REPEAT in stop mode, press ▶ to start playback.

Each time you press REPEAT, the repeat mode cycles among All repeat, Repeat 1 and off.

The indication on the display window shows the selected repeat mode.

: Repeats the current group for DVD AUDIO, the current title for DVD VIDEO or all tracks for SVCD/Video CD/Audio CD.

1: Repeats the current chapter for DVD VIDEO or the current track for DVD AUDIO/SVCD/Video CD/Audio CD.

**No indication:** The repeat mode is off.

A window which indicates the current repeat mode will be displayed on the TV screen. The mode indication on the window is same as the one on the menu bar.  
(Repeat mode example on the TV screen)



### To stop repeat playback

Press ■.

When a DVD AUDIO/DVD VIDEO disc is set, the unit stops playback and quits the repeat mode.

When an SVCD, Video CD or Audio CD disc is set, the unit stops playback but does not quit the repeat mode.

### To quit repeat playback

Press REPEAT until the repeat mode indicator goes off in the display window.

#### Hint

When the program playback mode is active with a DVD AUDIO, SVCD, Video CD or Audio CD, the repeat mode changes in the same manner.

Note, however, that in the "" mode the unit repeats all the programmed tracks instead of all tracks on the disc.

#### NOTE

The repeat playback may not work with some discs, even if you select one of the repeat modes.

### To repeat a desired part (A-B repeat playback)



#### First make sure:

- The unit is in playback mode except SVCD/Video CD playback with PBC.


#### 1 Press ON SCREEN twice.

The menu bar appears on the TV screen.

#### 2 Press ◀/▶ to move to , then press ENTER.

The pull-down menu for repeat mode selection appears.

#### Screen example for DVD VIDEO

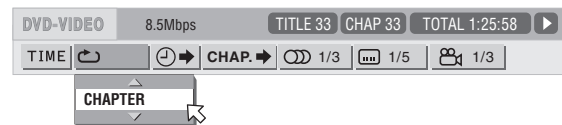

#### 3 Press ▲/▼ to select [A-B].

#### 4 Press ENTER at the beginning of the part you want to repeat (point A).

The pull down menu disappears.

The repeat icon shows A- .

#### 5 Press ENTER at the end of the part you want to repeat (point B).

The repeat icon shows A-B .

The unit locates "A" and starts repeat playback between "A" and "B."

The [] indicator lights in the display window.

### To quit A-B repeat playback

Press ◀/▶ to move to A-B , and press ENTER. The A-B repeat mode turns off, then normal playback continues.

#### NOTE

The A and B points must be set in the same title/group/track.


## Changing the language, sound and scene angle

### To select the subtitle language (SUBTITLE)



 
Some DVD VIDEO and SVCD discs contain more than one subtitle language. You can choose a desired one from them.

#### Hint

At the beginning of the part where the subtitles are recorded,  appears on the TV screen (except when the [ON SCREEN GUIDE] preference is set to [OFF]).

#### 1 During playback, press SUBTITLE.

The subtitle selection window appears on the TV screen.



#### 2 Press ▲/▼ or SUBTITLE to select the subtitle.

Each time you press ▲/▼ or SUBTITLE, the subtitle language changes.

#### 3 Press ENTER.

Subtitles are displayed in the selected language. The subtitle selection window is dismissed.

#### NOTES

 
- An SVCD disc can have up to four subtitles. Pressing ▲/▼ cycles through those channels regardless of whether the subtitles are recorded or not.
- The subtitle selection window will automatically disappear if you do not change the subtitle for several seconds.
- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Appendix B: Table of languages and their abbreviations" on page 50.

### To change the audio language or sound (AUDIO)




The audio selection setting allows you to change the audio language of a movie, or to listen to karaoke with or without the vocal.

#### Hint

At the beginning of the part where multiple audio tracks are recorded,  appears on the TV screen (except when the [ON SCREEN GUIDE] preference is set to [OFF]).

#### 1 During playback, press AUDIO - fs/Rate.

 The audio selection window appears on the TV screen.




#### 2 Press ▲/▼ or AUDIO - fs/Rate to select the desired audio.

Each time you press ▲/▼ or AUDIO - fs/Rate, the audio changes.


For DVD AUDIO/DVD VIDEO (example)



 For SVCD



For Video CD

 

#### 3 Press ENTER.

You can hear the selected audio. The audio selection window is dismissed.

#### NOTES


- The audio selection window will automatically disappear if you do not change the audio for several seconds.
- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Appendix B: Table of languages and their abbreviations" on page 50.
- Simply press the AUDIO - fs/Rate button, and do not hold it down for a few seconds; otherwise the sampling frequency and quantization bit length will be displayed.

### To select a scene angle of DVD VIDEO (ANGLE)



 
You can enjoy a variety of scene angles if the DVD VIDEO disc contains "multi-angle" parts, where multiple cameras were used to shoot the same scene from different angles.

#### Hint

At the beginning of a "multi-angle" part,  appears on the TV screen (except when the [ON SCREEN GUIDE] preference is set to [OFF]).

#### 1 During playback, press ANGLE.

The angle selection window appears on the TV screen.



#### 2 Press ▲/▼ or ANGLE to select the desired angle.

Each time you press ▲/▼ or ANGLE, the angle changes.


#### 3 Press ENTER.

You can see the picture from the selected angle. The angle selection window is dismissed.

#### NOTE

The angle selection window will automatically disappear if you do not change the angle for several seconds.

## Advanced operations

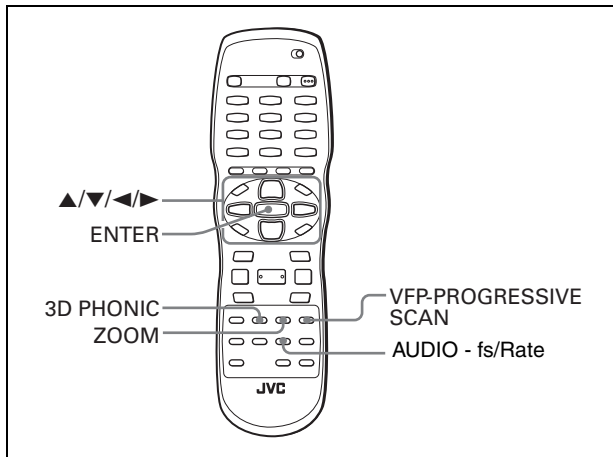

## Special picture/sound effect

### To zoom in pictures



#### 1 During playback or while paused, press ZOOM.

Pressing ZOOM causes the unit to zoom in on the image. At the top left of the screen, the information for the current magnification appears for about 5 seconds. Each time you press ZOOM, the magnification is doubled (1.8, 4, 8, 16, 32 and 64 times).

ZOOM x 4



When a picture of a DVD VIDEO disc is viewed on a normal TV screen (4:3, Letter Box), black bars may appear at the top and bottom of the screen. In this case, if you select the "ZOOM x1.8" mode, the black bars become almost invisible. When a 1:2.35 or 1:1.85 DVD VIDEO source is played back, however, the black bars are visible on the screen.

#### 2 Press ▲/▼/◀/▶ to move the zoomed position.

#### To return to the normal playback

Press ENTER.

#### NOTE

While zoomed, the picture may look coarse.

### To adjust the picture character (VFP)



 
The VFP (Video Fine Processor) function allows you to adjust the picture character according to the type of programming, picture tone or personal preferences.

#### 1 During playback, press VFP - PROGRESSIVE SCAN.


The VFP mode selection window appears on the TV screen.

#### 2 Press ◀/▶ to select the desired preset.

Each time you press the button, the VFP mode changes as follows. Set the video type most suitable to the current program or the room conditions.



Selected preset

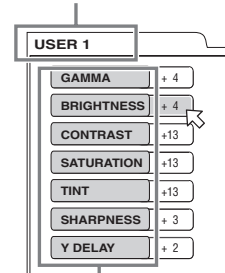

Parameter

[NORMAL]: for watching TV in a general room.

[CINEMA]: for watching a movie software in a room with suppressed light.

[USER 1] [USER 2]: you can adjust parameters that affect the picture character and store the settings as a user preset. See the next step.

#### 3 To define a user setting, press ▲/▼ to select a parameter to be edited from the following.

- **GAMMA**  
Adjust this if the neutral color is bright or dark. The brightness of dark and bright portion is maintained. Available range: -4 (darkest) to +4 (brightest).
- **BRIGHTNESS**  
Adjust this if the picture is bright or dark on the whole. Available range: -16 (darkest) to +16 (brightest).
- **CONTRAST**  
Adjust this if the far and near position is unnatural. Available range: -16 to +16.
- **SATURATION**  
Adjust this if the picture is whitish or blackish. Available range: -16 (blackest) to +16 (whitest).
- **TINT**  
Adjust this if the appearance of flesh tone is unnatural. Available range: -16 to +16.
- **SHARPNESS**  
Adjust this if the picture is indistinct. Available range: 0 to +3.
- **Y DELAY**  
Adjust this if the picture looks separately/overlapped. Available range: -2 to +2.

#### 4 Press ENTER.

A window for setting parameters appears.



Selected parameter

#### 5 Press ▲/▼ to adjust the level of the parameter.

The higher value enhances the effect.

#### 6 Press ENTER.

Repeat steps 3 to 6 if you want to set other parameters.

### To dismiss the VFP mode selection window

Press VFP - PROGRESSIVE SCAN.

#### NOTES

- The window for VFP mode selection and parameter setting disappear if no operation is made for about 10 seconds.
- Simply press the VFP - PROGRESSIVE SCAN button, and do not hold it down for a few seconds; otherwise the Progressive scanning mode will be changed, if the VIDEO SIGNAL SELECTOR on the rear of the unit is set to "REMOTE."

### To simulate surround sound (3D PHONIC)



 
Using the 3D PHONIC function, you can get a simulated surround effect from your stereo system.

#### 1 During playback, press 3D PHONIC.

The 3D PHONIC window appears on the TV screen.

#### 2 Press ◀▶ to select the desired mode.

Each time you press the button, the 3D PHONIC mode changes as follows:



Selected effect mode

- **ACTION**  
Suitable for action movies and sports programs in which the sound source moves.
- **DRAMA**  
Natural and warm sound. You can enjoy movies in a relaxed mood.
- **THEATER**  
You can enjoy sound effects like in a theater.

#### 3 Press ▲▼ to adjust the effect level.

You can set the effect level from [1] to [5].  
The higher value enhances the effect.

### To dismiss the 3D PHONIC window

Press 3D PHONIC.

#### NOTES

- The 3D PHONIC window disappears if no operation is made for about 10 seconds.
- The 3D PHONIC function works correctly only when playing back a DVD VIDEO disc recorded with Dolby Digital.
- When playing back a DVD VIDEO disc recorded with Dolby Digital that does not contain the rear signal, you can change the 3D PHONIC setting, but you will not be able to achieve a correct 3D effect.
- The 3D PHONIC function does not affect the Dolby Digital bitstream signal from the DIGITAL OUT jack.
- When the 3D PHONIC function is active, the [ANALOG OUT] setting in the [AUDIO] setting display is not available.
- When one of the 3D PHONIC modes is activated, the [3D] indicator lights up in the display window.

### Checking the sampling frequency and quantization bit length




You can check the sampling frequency and quantization bit length of digital audio during playback.

#### During playback, press and hold down AUDIO - fs/Rate for a few seconds.

The sampling frequency and quantization bit length of the current digital audio are shown in the display window temporarily. When the audio is recorded using a surround audio format, the sampling frequency and quantization bit length are shown for the front speakers.

(Example)

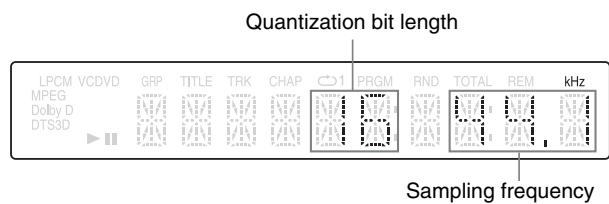


The sampling frequencies indicated are as follows: 44.1, 48, 88.2, 96, 176.4, and 192 (kHz). Note that any figure below the first decimal place is omitted in the display window.

#### NOTES

- With some discs, [NO INFO.] may appear instead of the sampling frequency and quantization bit length.
- The sampling frequency and quantization bit length cannot be displayed with VR format discs.

## Advanced operations

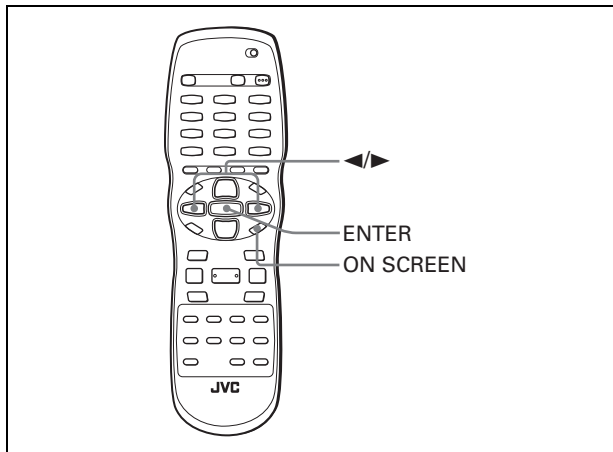

## Menu bar functions

### To bring up the menu bar

#### 1 When a disc is inserted, press ON SCREEN.

A status bar for the type of disc inserted will appear on the TV screen.

See page 12 for details about the status bar.

#### 2 Press ON SCREEN again.

A menu bar for the type of disc inserted will appear under the status bar.

(for DVD AUDIO)

 


(for DVD VIDEO)


(for DVD-R/RW written in the DVD VIDEO format)




(for SVCD)



(for Video CD)

 

(for Audio CD)

 

(for DVD-RAM/DVD-RW written in the VR format)



The indication on the rightmost end of the status bar shows the unit's transport status as follows:

- Playback mode.
- Stop mode.
- Pause mode.
- Fast forward/backward playback mode.
- Slow motion playback mode.

### To dismiss the menu bar and status bar

Press ON SCREEN.

## Basic operation procedure

### 1 Press to select the icon you want to work with.

The selected icon is pointed by .

### 2 Press ENTER.

With many icons, an appropriate pull-down window appears, however, there are some exceptions.

#### NOTES

- A mark or text on the menu icon for the function or mode currently selected is shown in green.
- Some functions are not available during playback. (You cannot move to the associated icon when it is not available.)



## Menu bar functions for DVD AUDIO

### Time mode selection

During playback, selects the time mode shown in the display window and in the status bar.

Press ENTER to select the time mode from the following.

- TIME: Current track elapsed time
- REM: Current track remaining time
- TOTAL: Current group elapsed time
- T.REM: Current group remaining time

### Repeat mode (See also page 20)

Selects the repeat mode during playback.

1. Open the pull-down window.
2. Press ▲/▼ to select the repeat mode from the following.
  - TRACK: Current track repeat
  - GROUP: Current group repeat
  - A-B: A-B repeat
  - OFF: Repeat mode deactivated
3. Press ENTER to make the selected repeat function active.

### Time search (See also page 17)

Specifies a time from the beginning of the current group as the point from which to begin playback.

### Track search

During playback, specifies a desired track to be played back from.

1. Open the pull-down window.
2. Press numeric buttons (0 to 9) to enter a desired track number. (For example, to specify "10," press 1, then 0.)
3. Press ENTER to begin playback from the specified track.

### Program playback (See also pages 18 and 19)

While stopped, specifies the playback order of tracks.

### Random playback (See also page 19)

While stopped, activates random playback.

### Audio selection (See also page 21)

During playback, selects the audio language or sound track.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired audio language or sound track.
3. Press ENTER to begin playback with the selected audio.

### Page selection (See also page 17)

During playback, selects the page.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired page number.
3. Press ENTER to play back with the selected page.

## Menu bar functions for DVD VIDEO

### Time mode selection

During playback, selects the time mode shown in the display window and in the status bar.

Press ENTER to select the time mode from the following.

- TOTAL: Current title elapsed time
- T.REM: Current title remaining time
- TIME: Current chapter elapsed time
- REM: Current chapter remaining time

### Repeat mode (See also page 20)

Selects the repeat mode during playback.

1. Open the pull-down window.
2. Press ▲/▼ to select the repeat mode from the following.
  - CHAPTER: Current chapter repeat
  - TITLE: Current title repeat
  - A-B: A-B repeat
  - OFF: Repeat mode deactivated
3. Press ENTER to make the selected repeat function active.

### Time search (See also page 17)

Specifies a time from the beginning of the current title as the point from which to begin playback.

### Chapter search

During playback, specifies a desired chapter to be played back from.

1. Open the pull-down window.
2. Press numeric buttons (0 to 9) to enter a desired chapter number. (For example, to specify "10," press 1, then 0.)
3. Press ENTER to begin playback from the specified chapter.

### Audio selection (See also page 21)

During playback, selects the audio language or sound track.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired audio language or sound track.
3. Press ENTER to begin playback with the selected audio.

### Subtitle selection (See also page 21)

During playback, selects the subtitle language.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired subtitle language.
3. Press ENTER to begin playback with the selected subtitle.

### Angle selection (See also page 21)

During playback, selects a desired scene angle in a multi-angle part.

1. Open the pull-down window.
2. Press ▲/▼ to select a scene angle.
3. Press ENTER to begin playback with the selected scene angle.

### Menu bar functions for SVCD/Video CD/ Audio CD

#### Time mode selection

Selects the time mode shown in the display window and in the status bar.

Press ENTER to select the time mode from the following.

- TIME: Current track elapsed time
- REM: Current track remaining time (while in stop mode, current track total time)
- TOTAL: Disc elapsed time
- T.REM: Disc remaining time (while in stop mode, disc total time)

#### Repeat mode (See also page 20)

Selects the repeat mode.

1. Open the pull-down window.
2. Press ▲/▼ to select the repeat mode from the following.
  - TRACK: Current track repeat
  - ALL: All track repeat
  - A-B: A-B repeat
  - OFF: Repeat mode deactivated
3. Press ENTER to make the selected repeat function active.

#### Time search (See also page 17)

Specifies a time from the beginning of the disc as the point from which to begin playback.

#### Program playback (See also pages 18 and 19)

While stopped, specifies the playback order of tracks.

#### Random playback (See also page 19)

While stopped, activates random playback.

#### Audio selection (See also page 21)

During SVCD/Video CD playback, selects the audio channel(s).

1. Open the pull-down window.
2. Press ▲/▼ to select a desired audio channel(s).
3. Press ENTER to play back with the selected audio channel(s).

#### Subtitle selection (See also page 21)

During SVCD playback, selects the subtitle.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired subtitle.
3. Press ENTER to begin playback with the selected subtitle.

### Menu bar functions for DVD-RAM/DVD-RW written in the VR format

#### Time mode selection

Selects the time mode shown in the display window and in the status bar.

Press ENTER to select the time mode from the following.

- TIME: Current title/play list elapsed time
- REM: Current title/play list remaining time

#### Repeat mode (See also page 29)

Selects the repeat mode.

1. Open the pull-down window.
2. Press ▲/▼ to select the repeat mode from the following.

##### For original playback

- PG: Current title repeat
- ALL: All titles repeat
- OFF: Repeat mode deactivated

##### For playback by play list

- PL: Current play list repeat
- OFF: Repeat mode deactivated

#### Original program title search

#### Play list search

During playback, specifies a desired title (for original playback) or play list (for playback by play list) to be played back from.

1. Open the pull-down window.
2. Press numeric buttons (0 to 9) to enter a desired title or play list number.  
(For example, to specify "10," press 1, then 0.)
3. Press ENTER to begin playback from the specified title/play list.

#### Audio selection (See also page 30)

During playback, selects the audio channel.


1. Open the pull-down window.
2. Press ▲/▼ to select a desired audio track.
3. Press ENTER to begin playback with the selected audio.

#### Subtitle on/off (See also page 30)

During playback, turns on or off the subtitle display.

1. Open the pull-down window.
2. Press ▲/▼ to select "ON" or "OFF"
3. Press ENTER.

# VR format disc playback

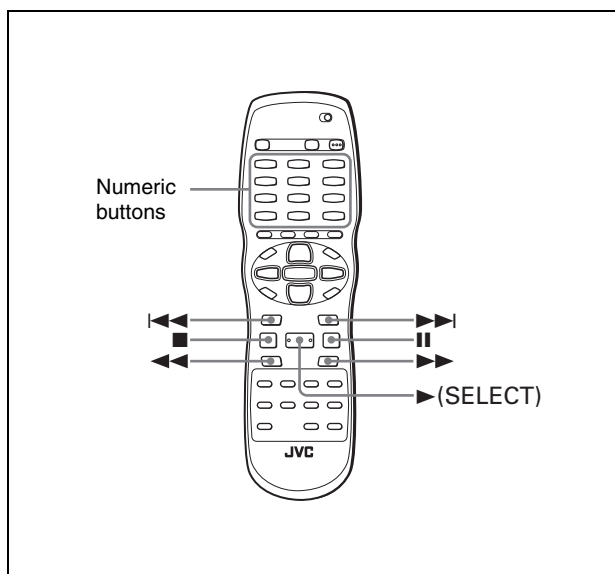

## NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  and numeric buttons for controlling the unit.

## About VR format discs

The unit can play back DVD-RAM and DVD-RW discs written in the VR format. We refer to such discs as a "VR format disc" in this manual.

### What you cannot do with VR format discs

Note that the following operations cannot be made with VR format discs:

- Resuming playback with the resume mode set to "DISC RESUME"
- Advancing a still picture frame by frame
- Reverse slow motion playback
- Replaying the previous scenes (one touch replay function)
- Locating a desired position by specifying the time (time search)

## NOTE

There are two types of commercially available DVD-RAM discs; one with a cartridge and the other without a cartridge.

The unit can play back DVD-RAM discs without a cartridge, and discs with a cartridge that can be removed from their cartridge (Type 2 and Type 4).

## Basic operations

### Original playback

In original playback, contents on a VR format disc are played back in the order the contents are recorded.

When inserting a VR format disc, after the disc contents are read, the original playback starts.

When the last title has been played back, the unit stops playback automatically.

### To stop in the middle of playback

#### Press ■.

Playback is interrupted.

If the resume mode is set to "ON," the unit memorizes the interrupted position.

## NOTE

The "DISC RESUME" mode is not available for VR format discs. Even if you set [RESUME] to [DISC RESUME], the resume mode will be the same as when [RESUME] is set to [ON].

### To resume playback

#### Press $\blacktriangleright$ (SELECT).

If [RESUME] is set to [ON] and an interrupted position is memorized, playback re-starts from the interrupted position.

If no interrupted position is memorized, or [RESUME] is set to [OFF], playback re-starts from the beginning of the title 1.

### To select the next or previous title in stop mode

Press  $\blacktriangleright\blacktriangleright$  or  $\blacktriangleleft\blacktriangleleft$ .

The next or previous title will be selected. In this case, press  $\blacktriangleright$  (SELECT) to start playback of the selected title.

### To select the next or previous chapter/title during playback

Press  $\blacktriangleright\blacktriangleright$  to skip to the next chapter (if a title is divided into chapters) or to the next title.

Press  $\blacktriangleleft\blacktriangleleft$  to return to the beginning of the current chapter/title.

Press  $\blacktriangleleft\blacktriangleleft$  repeatedly to skip back to the previous chapter/title.

### Various speed playback

#### To advance or reverse playback rapidly

During playback, press  $\blacktriangleright\blacktriangleright$  or  $\blacktriangleleft\blacktriangleleft$ .

You can select from 1.5 times, 5 times, 20 times and 60 times normal speed.

- When you select 1.5 times normal speed playback, the disc is played back with sound.

#### To advance or reverse playback at 5 times normal speed

Hold down  $\blacktriangleright\blacktriangleright$  or  $\blacktriangleleft\blacktriangleleft$ .

#### To play back in forward slow motion

First press  $\blacktriangleright\blacktriangleright$  to enter the pause mode, and then press  $\blacktriangleright\blacktriangleright$ .


The forward slow motion playback will be activated. You can select from 1/32 times, 1/16 times, 1/4 times and 1/2 times normal speed.

## NOTE

The actual playback speed may be different from the speed shown on the TV screen, depending on the recording condition.

### To start playback of the desired title

Press one of the numeric buttons to specify number of the desired title.

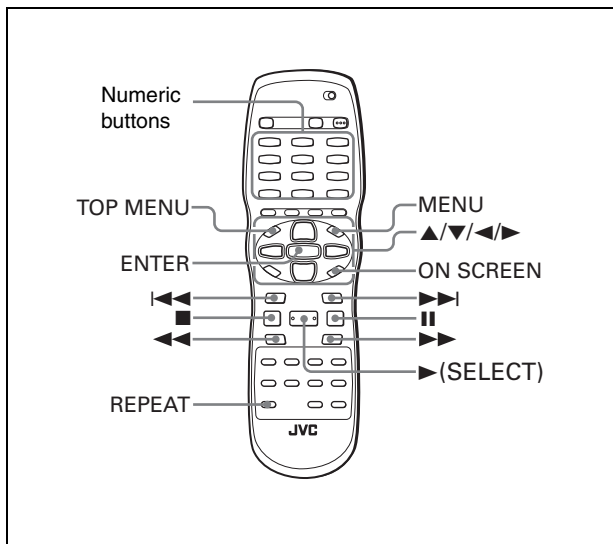

### To call up the ORIGINAL PROGRAM display

#### During playback, press TOP MENU.

The ORIGINAL PROGRAM display appears on the TV screen.

ORIGINAL PROGRAM			
	REC. DATE	CH	REC. TIME
01	2003/01/23	50	02:51 AM
02	2003/01/23	51	03:20 AM
03	2003/01/23	52	03:50 AM
04	2003/01/23	53	04:15 AM
05	2003/01/23	54	05:00 AM
06	2003/01/23	55	05:38 AM
07	2003/01/23	60	06:50 AM
08	2003/01/23	61	07:28 AM
09	2003/01/23	62	09:05 AM
10	2003/01/23	63	10:50 AM
11	2003/01/23	64	11:08 AM
12	2003/01/23	65	11:51 AM

While the ORIGINAL PROGRAM display is shown, you can perform the following operations.

- Start playback of a desired title by designating it using ▲/▼ on the ORIGINAL PROGRAM display.
- Go to the next title or return to the previous title by pressing ◀▶.
- Turn off the ORIGINAL PROGRAM display by pressing TOP MENU (playback continues).
- Stop playback by pressing ■ (the ORIGINAL PROGRAM display disappears).

#### NOTE

If you press MENU during original playback, the PLAY LIST display appears on the TV screen, and the unit enters playback by play list (see the following description).

## Playback by play list

In playback by play list, contents on a VR format disc are played back according to the way they were edited while recording.

When inserting a VR format disc, after the disc contents are read, the original playback starts.

#### Press MENU.

The PLAY LIST display appears on the TV screen, and playback by play list starts.

PLAY LIST			
	CREATED	CHAP.	LENGTH
01	2003/01/23	001	0:10:51
02	2003/01/23	003	0:23:00
03	2003/01/23	004	0:18:30
04	2003/01/23	006	0:08:05
05	2003/01/23	008	0:00:10
06	2003/01/23	010	0:18:27
07	2003/01/23	012	0:34:08
08	2003/01/23	008	0:09:58
09	2003/01/23	008	0:16:15
10	2003/01/23	008	0:24:01
11	2003/01/23	008	0:05:43
12	2003/01/23	008	0:27:31

As the PLAY LIST display appears, playback of play list 1 starts. When the last play list has been played back, the unit stops playback automatically.

While the PLAY LIST display is shown, you can perform the following operations.

- Start playback of a desired play list by designating it using ▲/▼ on the PLAY LIST display.
- Go to the next play list or return to the previous play list by pressing ◀▶.
- Turn off the PLAY LIST display by pressing MENU (playback continues).
- Stop playback by pressing ■ (the PLAY LIST display disappears).

#### NOTE

If you press TOP MENU during playback by play list, the ORIGINAL PROGRAM display appears on the TV screen, and the unit enters original playback status (playback starts from title 1).

### To stop in the middle of playback

#### Press ■.

Playback is interrupted.

If the resume mode is set to "ON," the unit memorizes the interrupted position.

#### NOTE

The "DISC RESUME" mode is not available for VR format discs. Even if you set [RESUME] to [DISC RESUME], the resume mode will be the same as when [RESUME] is set to [ON].

### To resume playback

#### Press ▶ (SELECT).

If [RESUME] is set to [ON] and an interrupted position is memorized, playback re-starts from the interrupted position. If no interrupted position is memorized, or [RESUME] is set to [OFF], the unit returns to the original playback status, and playback re-starts from the title 1.

## To select the next or previous chapter/play list during playback

Press ►► to skip to the next chapter (if a play list is divided into chapters) or to the next play list.

Press ◀◀ to return to the beginning of the current chapter/play list.

Press ◀◀ repeatedly to skip back to the previous chapter/play list.

## Various speed playback

### To advance or reverse playback rapidly

During playback, press ►► or ◀◀.

You can select from 1.5 times, 5 times, 20 times and 60 times normal speed.

- When you select 1.5 times normal speed playback, the disc is played back with sound.

### To advance or reverse playback at 5 times normal speed

Hold down ►► or ◀◀.

### To play back in forward slow motion

First press || to enter the pause mode, and then press ►►.

The forward slow motion playback will be activated. You can select from 1/32 times, 1/16 times, 1/4 times and 1/2 times normal speed.

#### NOTE

The actual playback speed may be different from the speed shown on the TV screen, depending on the recording condition.

## To start playback of the desired play list

Press one of the numeric buttons to specify number of the desired play list.

## Repeat playback

### To repeat title or play list

#### During playback, press REPEAT.

Each time you press REPEAT, one of the following repeat mode is selected.

#### For original playback

PG: Repeats the current title.

ALL: Repeats all titles on the disc.

OFF: Deactivates the repeat mode.

#### For playback by play list

PL: Repeats the current play list.

OFF: Deactivates the repeat mode.

A window which indicates the current repeat mode will be displayed on the TV screen. The mode indication on the window is same as the one on the menu bar.  
(Repeat mode example on the TV screen)



On the display window, the following indication appears:

↻ 1: When "PG" or "PL" repeat mode is selected.

↻: When "ALL" repeat mode is selected.

#### To stop repeat playback


Press REPEAT to select "OFF."

Alternatively, press ■ to stop playback.

The repeat mode will be deactivated.

#### NOTE

You can change the repeat mode using the menu bar. First bring up the menu bar (see page 24), then follow the steps described on page 26.

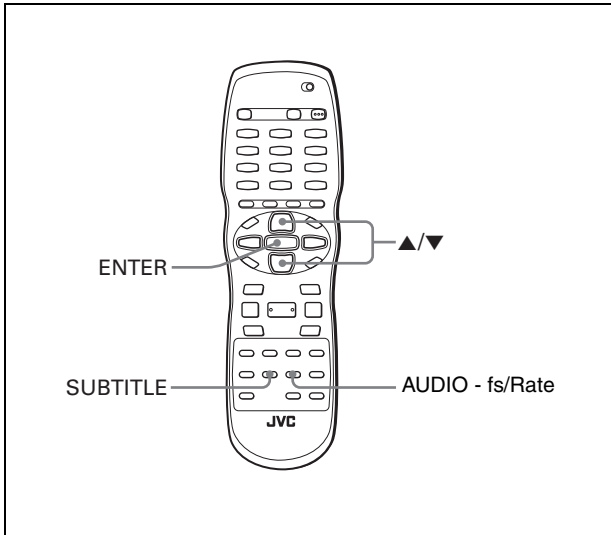


### Turning on/off the subtitle

You can turn on or off the subtitle recorded on a VR format disc.

**1 During playback, press SUBTITLE.**

 The subtitle selection window appears on the TV screen.



**2 Press ▲/▼ or SUBTITLE to select [ON] or [OFF].**

**3 Press ENTER.**

The subtitle is turned on or off, according to the selection you made at step 2.

The subtitle selection window is dismissed.

### Changing the sound

The audio selection setting allows you to change the audio track(s) to be played back from among stereo, L (left channel) and R (right channel).

**1 During playback, press AUDIO - fs/Rate.**

The audio selection window appears on the TV screen.



**2 Press ▲/▼ or AUDIO - fs/Rate to select the desired audio.**




**3 Press ENTER.**

You can hear the selected audio.

The audio selection window is dismissed.



# MP3/WMA disc playback

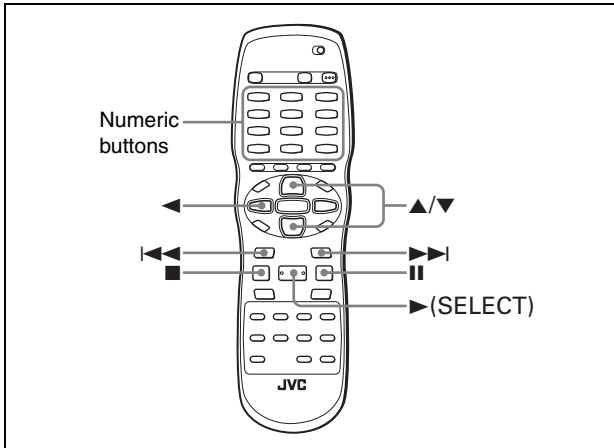

## NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.

## Operations

The unit can play back MP3 files and WMA files on a home recorded CD-R/RW disc or commercially available CD. We refer to a disc that contains MP3 and/or WMA files as an "MP3/WMA disc" in this manual.


Note that if a disc contains both of MP3/WMA files and JPEG files, you can only play back files of the type selected by the [MP3&WMA/JPEG] setting in the [PICTURE] preference display (see page 38).

## About MP3/WMA discs

On an MP3/WMA disc, each song is recorded as a file (track). Files are sometimes grouped into folders by artists, album, etc.

- Each file is regarded as a track.
- A folder which has one or more files is regarded as a group.
- A folder which does not directly contain any tracks is ignored.
- Files which do not belong to any folder are grouped into "group 1."
- The unit recognizes up to 150 tracks per group, and up to 99 groups per disc. If there are files other than MP3/WMA files, they also count in the 150-file total.

Max. 99 groups per disc

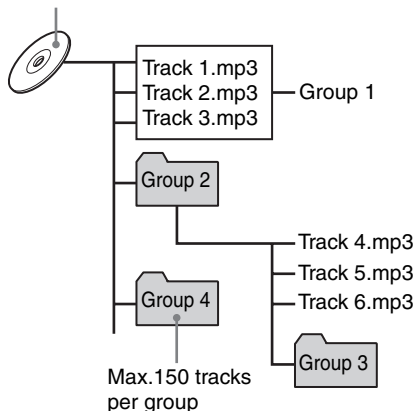

## Notes for making your own MP3/WMA disc using a CD-R/CD-RW disc

- Select "ISO 9660" as the disc format.
- As for MP3 files, we recommend you to record your material at a 44.1 kHz sampling rate, using the 128 kbps data transfer rate.

- As for WMA files, make sure that the copyright feature is set to off.
- As for WMA files, we recommend you to record your material at a bit rate of 64 kbps or higher.

## Basic operations

Use the following buttons to control MP3/WMA disc playback.

- ENTER: Starts playback while stopped.  
▶ (SELECT): Starts playback while stopped or paused.  
■: Stops playback.  
II: Pauses playback.  
◀◀/▶▶: Skips back or forward a track during playback.  
◀ (SELECT): Selects the previous or next track while stopped.

If you press ▶ (SELECT) during playback, or press ■ to stop playback followed by ▶ (SELECT), the unit starts playback from the beginning of the current track.

## NOTES

- The unit does not support "packet writing (UDF format)" discs.
- The unit does not support the ID3 tag and WMA tag.
- The unit supports discs recorded with multiple sessions.
- Some discs may not play due to disc characteristics or recording conditions.
- Programmed and random playback functions do not work with MP3/WMA discs.
- As for MP3, the unit only can play back tracks with the following file extensions; ".MP3," ".Mp3," ".mp3" and ".mP3."
- As for WMA, the unit only can play back tracks with the following file extensions; ".WMA," ".wma," and any other combination of upper case and lower case letters (such as ".Wma").
- Time required for reading the disc contents may vary for different discs, depending on the numbers of groups (folders) and tracks (files) recorded, etc.
- You cannot advance or reverse playback by pressing ▶▶ or ◀◀, or by holding down ▶▶ or ◀◀ during MP3/WMA disc playback.
- The unit supports WMA files recorded with a bit rate of 48 kbps or higher. The unit cannot play back WMA files recorded with a bit rate under 48 kbps.

MP3/WMA disc playback

## Selecting the desired group and track

When inserting an MP3/WMA disc, after the disc contents are read, the MP3/WMA CONTROL display automatically appears on the TV screen.

You can specify the desired group/track from the display using the following procedure.

### 1 Make sure that the black (cursor) bar is in the left (group) column.

If it is in the right column, press ◀ to move it to the left column.

### 2 Press ▲/▼ to move the bar to a desired group.

On the right column, tracks in the selected group are shown.

### 3 Press ◀◀/▶▶ to select a desired track, then press ENTER or ▶ (SELECT).

or

### Press the numeric buttons to directly specify a desired track number.


To select 5: press 5.

To select 23: press +10, +10, then 3.


To select 40: press +10, +10, +10, then 10.

The unit starts playback from the selected track.

(to be continued)

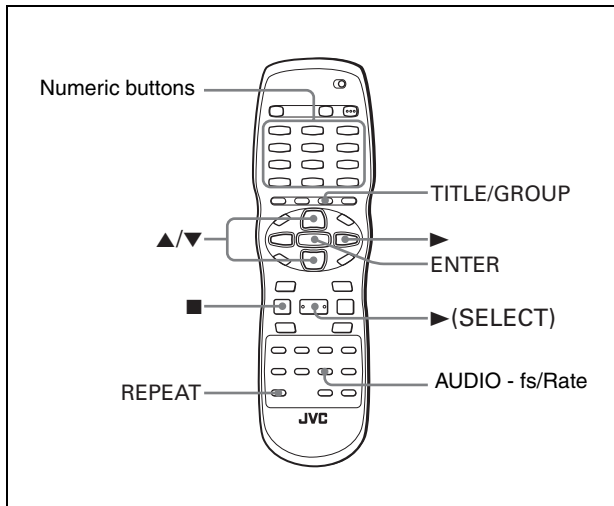

(continued)

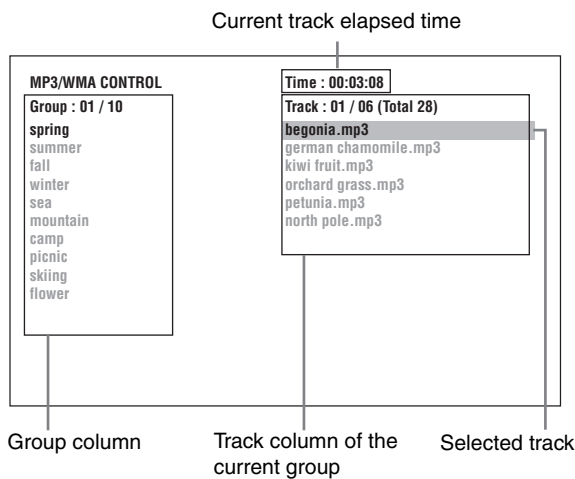

**Hint**

You can also select a desired track by pressing ► to move the black bar to the right (track) column then using ▲/▼.

**NOTES**

- If an MP3/WMA file name includes any 2-byte character, the unit cannot show the file name correctly.
- Only MP3/WMA files are shown on the MP3/WMA CONTROL display.
- The order of groups/tracks shown in the MP3/WMA CONTROL display may differ from the order shown on your personal computer when you set the disc on your computer.

**Direct selection**

You can select a desired group directly by specifying the group number.

**1 During playback or while stopped, press TITLE/GROUP.**

[--] is shown in the group display area of the display window.

**2 Press the numeric buttons to specify a desired group number.**

- To select 5: press 5.
- To select 23: press +10, +10, then 3.
- To select 40: press +10, +10, +10, then 10.

Specify the group number within several seconds after pressing TITLE/GROUP (i.e. while the display window shows [--]).  
The unit starts playback from track 1 of the selected group.

**3 Press the numeric buttons to specify a desired track number.**

- To select 5: press 5.
  - To select 23: press +10, +10, then 3.
  - To select 40: press +10, +10, +10, then 10.
- The unit starts playback from the specified track.

**Repeat playback**


**During playback or while stopped, press REPEAT.**

Each time you press REPEAT, the repeat mode changes as follows.

If you press REPEAT while stopped, you need to press ENTER or ► (SELECT) to start repeat playback.

MP3/WMA CONTROL display	Display window	Function
REPEAT TRACK	↻ 1	Repeats the current track.
REPEAT GROUP	↻	Repeats all tracks in the current group.
REPEAT ALL	↻	Repeats all tracks on the disc.
No indication	The repeat mode is off.	

(TV screen)

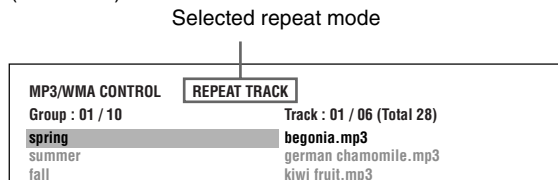

**To stop repeat playback**

Press ■. Note that the repeat mode remains active.

**To quit repeat playback**

During playback, press REPEAT until no repeat icon is shown on the display window.

While stopped, press REPEAT until repeat mode indication on the MP3/WMA CONTROL display goes off.

**NOTE**

You can change the repeat mode using ON SCREEN on the remote control unit.


Press ON SCREEN, and the repeat mode selection window appears on the TV screen. Press then ▲/▼ to select the desired repeat mode, and finally press ENTER to make the selected repeat mode active.

**Checking the sampling frequency and quantization bit length**

You can check the sampling frequency and quantization bit length of digital audio during playback using the AUDIO - fs/Rate button.

For details, see page 23.

# JPEG disc playback

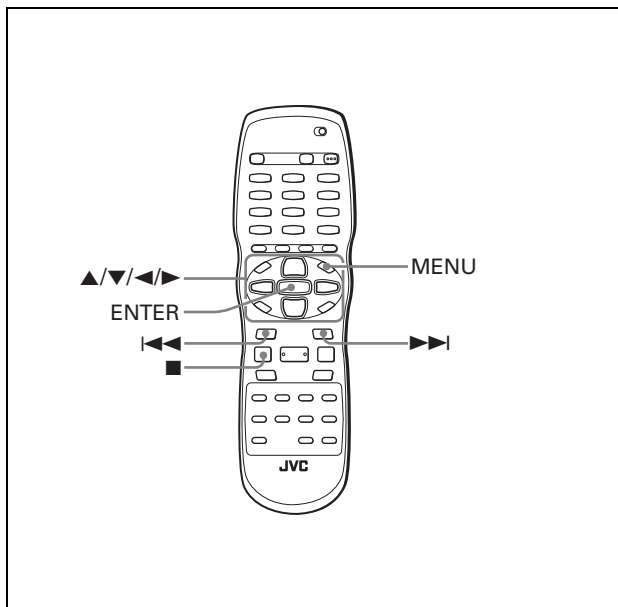

**NOTE**



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.


The unit can play back JPEG files on a home recorded CD-R/RW disc. We refer to a disc that contains JPEG files as a "JPEG disc" in this manual.

Note that if a disc contains both of MP3/WMA files and JPEG files, you can only play back files of the type selected by the [MP3&WMA/JPEG] setting in the [PICTURE] preference display (see page 38).

## About JPEG discs

On a JPEG disc, each picture is recorded as a file. Files are sometimes grouped into folders by category, etc.

- A folder which has one or more files is regarded as a group.
- A folder which does not directly contain any files is ignored.
- Files which do not belong to any folder are grouped into "group 1."
- The unit recognizes up to 150 files per group, and up to 99 groups per disc. If there are files other than JPEG files, they also count against the 150-file total.

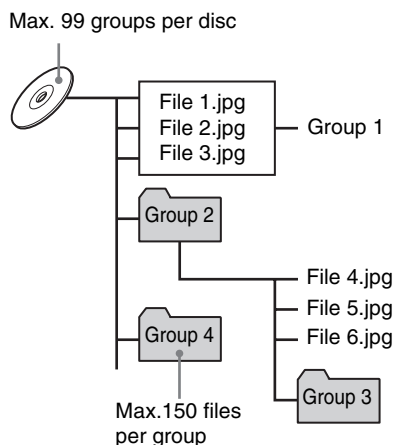


## Notes for making your own JPEG disc using a CD-R/CD-RW disc

- Select "ISO 9660" as the disc format.
- We recommend you to record your material at a 640 x 480 pixel resolution.
- This unit supports the baseline JPEG format.

## Basic operations

### To see a desired picture

When inserting a JPEG disc, after the disc contents are read, the JPEG CONTROL display automatically appears on the TV screen.

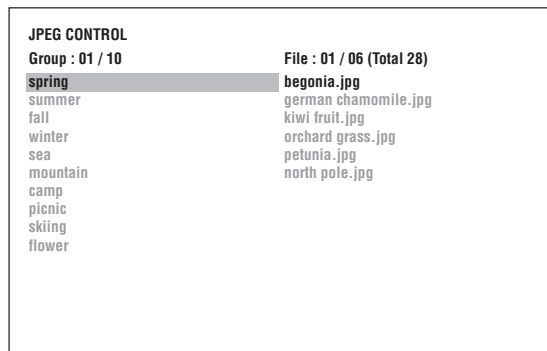

You can select a desired file for playback via this display.

### 1 Make sure that the black (cursor) bar is in the left (group) column.

If it is in the right column, press ◀ to move it to the left column.

### 2 Press ▲/▼ to move the bar to a desired group.

On the right column, files in the selected group are shown.

### 3 Press ◀◀/▶▶ to select a desired file, then press ENTER.

The selected file (still picture) is shown on the TV.

#### Hint

You can also select a desired file by pressing ▶ to move the black bar to the right (file) column then using ▲/▼.

**NOTE**

If the selected file is unplayable, a black screen appears.

### To display another picture


Press ◀◀/▶▶ or ▲/▼ to select the desired picture.

### To dismiss the picture

Press ■ or MENU.

The TV screen returns to the JPEG CONTROL display.

JPEG disc playback

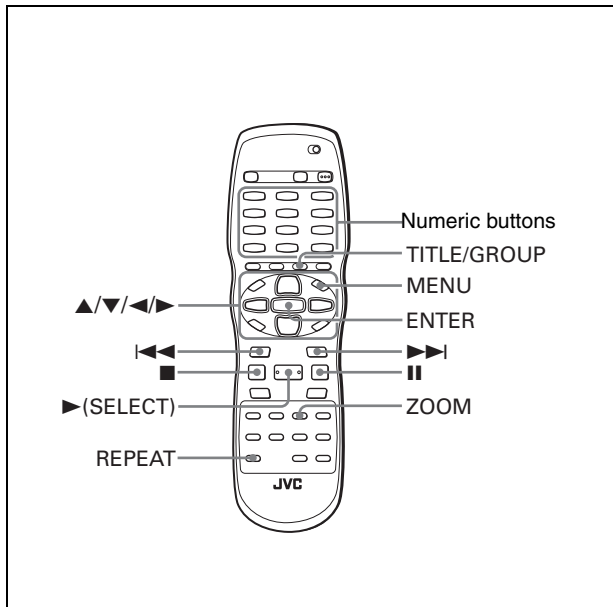

### NOTES

- The unit supports the baseline JPEG format.
- The unit does not support "packet writing (UDF format)" discs.
- The unit supports discs recorded with multiple sessions.
- The unit may not be able to read some discs, or may take a long time to display a picture on the disc, due to disc characteristics, recording conditions, or numbers of groups (folders), etc.
- Programmed and random playback functions do not work with JPEG discs.
- The screen saver function will be activated if the same picture is displayed for more than 5 minutes except during slide show playback.
- The unit only can play back files with the following file extensions: ".jpg," ".jpeg," ".JPG," ".JPEG" and any other combination of upper case and lower case letters (such as ".Jpg").
- If a JPEG file name includes any 2-byte character, the unit may not show the file name correctly.
- If a picture has been saved at greater than 640 x 480 pixel resolution, it may take some time to display the picture.
- The unit does not support pictures of more than 2400 pixels in horizontal resolution. Make sure that the horizontal resolution of the picture is 2400 pixels or less.

### To zoom in the picture

- 1 While in pause mode, press ZOOM.**  
Pressing ZOOM causes the unit to zoom in on the image. Each time you press ZOOM, the magnification is doubled (1.8, 4, 8, 16, 32 and 64 times).
- 2 Press ▲/▼/◀/▶ to move the zoomed position.**

## Viewing pictures continuously (slide show mode)

You can see files (still pictures) one after another automatically.

### To start the slide show

Press ► (SELECT).

The slide show starts from the beginning of the disc. Each file (still picture) is displayed for approximately 3 seconds.

### To stop slide show playback in the middle

Press ■ or MENU.

The TV screen returns to the JPEG CONTROL display. Pressing ► (SELECT) resumes slide show playback from the last picture displayed.

### To keep showing the current picture

Press || or ENTER.

Pressing ► (SELECT) resumes the slide show playback.

## To select the start point of the slide show

### From the JPEG CONTROL display

- 1 Make sure that the black (cursor) bar is in the left (group) column.**  
If it is in the right column, press ◀ to move it to the left column.
- 2 Press ▲/▼ to move the bar to a desired group.**
- 3 Press ◀◀/▶▶ to select a desired file.**
- 4 Press ► (SELECT).**  
The slide show starts from the specified file.

### Direct selection

- 1 During playback or while stopped, press TITLE/GROUP.**
- 2 Press the numeric buttons to specify a desired group number.**  
To select 5: press 5.  
To select 23: press +10, +10, then 3.  
To select 40: press +10, +10, +10, then 10.
- 3 Press the numeric buttons to specify a desired file number.**  
The unit starts slide show playback from the specified file. If you do not specify a file, the unit starts slide show playback from the first file in the group.


---

## Repeat function

In the slide show mode, you can repeat playback of JPEG files in a group or on the disc.

### 1 While the JPEG CONTROL display is shown, press REPEAT.

Pressing REPEAT switches the repeat mode.

When the repeat mode is turned on, the [  ] indicator lights in the display window.

The selected repeat mode is shown on the JPEG CONTROL display.

REPEAT ALL: All files on the disc are repeated.

REPEAT GROUP: All files in the current group are repeated.

No indication: The repeat mode is off.

### 2 Press ► (SELECT) to start repeat playback.

#### To stop repeat playback

Press ■.

The repeat mode remains active.

#### To quit repeat playback


Press ■ or MENU while the JPEG CONTROL display is shown, and press REPEAT until the repeat mode indication goes off.

#### NOTE

You can change the repeat mode using ON SCREEN on the remote control unit.

Press ON SCREEN, and the repeat mode selection window appears on the TV screen. Press then ▲/▼ to select the desired repeat mode, and finally press ENTER to make the selected repeat mode active.

# Changing the initial settings

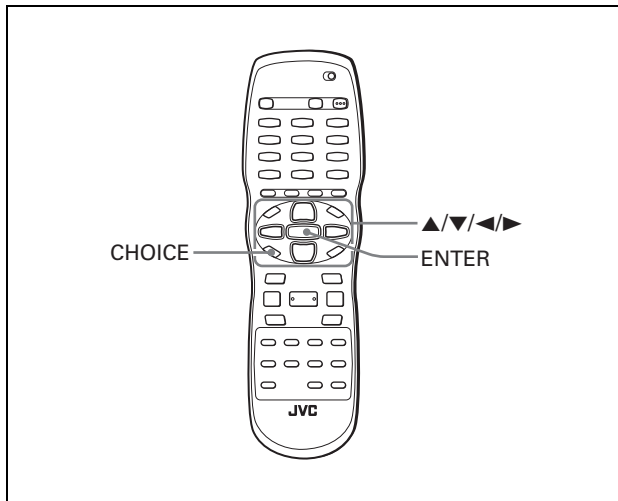

## NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.


## Selecting preferences

This section refers to the settings which are already made when you purchase the unit. Read this section when you want to connect this unit to a wide-vision TV set, or when you want to otherwise change the settings according to your preferences and viewing environment.


## About the Preference display

The Preference display consists of the LANGUAGE, PICTURE, AUDIO, SPK.SETTING and OTHERS setting displays, each having setting items.


### LANGUAGE

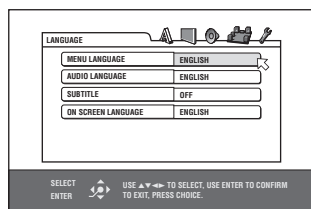


### PICTURE

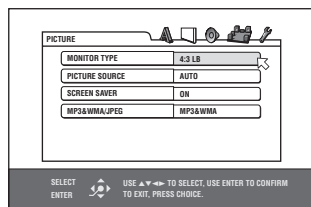


### AUDIO

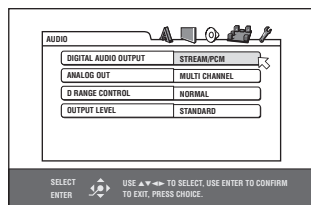

### SPK.SETTING

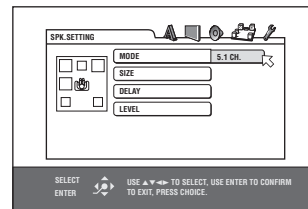

### OTHERS

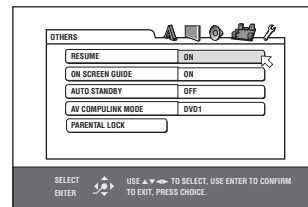

## How to set preferences

### 1 Press CHOICE.

One of the preference on-screen displays appears on the TV screen.

You can see five icons at the top right of the on-screen display for the settings.

- ▲:LANGUAGE menu
- :PICTURE menu
- ⊙:AUDIO menu
- 🔊:Setting menu for speakers
- 🔧:OTHERS menu

### 2 Press ◀/▶ to select the appropriate icon.


The appropriate display appears on the TV screen.

### 3 Press ▲/▼ to move ⏏ to select the item you want to edit.

The color of the selected item changes.

### 4 Press ENTER.

A pull-down menu appears over the selected item.

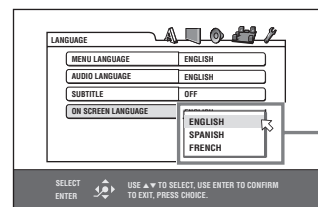

Selected item

### 5 Press ▲/▼ to select from the options then press ENTER.

The selected option is set.

- For details about each setting, see the following.

## To dismiss a preference display

Press CHOICE.

## NOTES

- While an MP3/WMA or JPEG disc is inserted, you cannot bring up any preference display.
- When a preference display is shown on a wide TV screen, the upper and lower parts of the preference display sometimes may be cut off. If this happens, adjust the picture size control of the TV.
- The [SPK.SETTING] display can be displayed only when [ANALOG OUT] in the [AUDIO] preference display is set to [MULTI CHANNEL].

## LANGUAGE menu

### MENU LANGUAGE

You can select the default menu language to be displayed if it is contained on a DVD AUDIO/DVD VIDEO disc.

#### Setting options

**ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, language code from AA to ZU**

- If the disc does not have a menu in the selected language, the disc's default language will be used.
- For details about language codes, see "Appendix B: Table of languages and their abbreviations" on page 50.
- You cannot change the setting during playback.

### AUDIO LANGUAGE

You can select the default audio language to be played if it is contained on a DVD AUDIO/DVD VIDEO disc.

#### Setting options

**ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, language code from AA to ZU**

- If the disc does not have the selected language, the disc's default language will be used.
- For details about language codes, see "Appendix B: Table of languages and their abbreviations" on page 50.
- You cannot change the setting during playback.

### SUBTITLE

You can select the default subtitle language to be displayed if it is contained on a DVD AUDIO/DVD VIDEO disc.

#### Setting options

**OFF, ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, language code from AA to ZU**

- If the disc does not have a subtitle in the selected language, the disc's default language will be used.
- For details about language codes, see "Appendix B: Table of languages and their abbreviations" on page 50.
- You cannot change the setting during playback.

### ON SCREEN LANGUAGE

You can select the on-screen display language of the unit.

#### Setting options

**ENGLISH, SPANISH, FRENCH**

- Some on-screen messages are shown in English regardless of the setting.
- You cannot change the on-screen language shown on the MP3/WMA display.

## PICTURE menu

### MONITOR TYPE


You can select the monitor type to match your TV when you play back DVD VIDEO discs recorded for wide-screen televisions.

#### Setting options

**16:9 NORMAL, 16:9 AUTO, 4:3 LB, 4:3 PS**

**[16:9 NORMAL] (Wide television screen):** select when you connect the unit to a wide-screen (16:9) TV whose aspect ratio is fixed to 16:9 (the unit automatically adjusts the screen width of the output signal correctly when playing back a 4:3 source). If you play a 4:3 DVD VIDEO source using the [16:9 NORMAL] mode, the picture character changes slightly due to the process for converting the picture width.

**[16:9 AUTO] (Wide television screen):** select when you connect the unit to a wide-screen (16:9) TV.

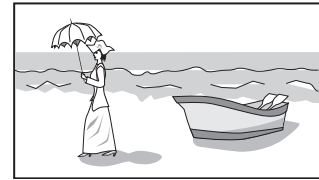

**[4:3 LB] (Letter Box conversion):** select when you connect the unit to a normal (4:3) TV.


When playing back a DVD VIDEO disc recorded in wide picture format, the picture is shown with black bars at the top and bottom.



**[4:3 PS] (Pan Scan conversion):** select when you connect the unit to a normal (4:3) TV.

When playing back a DVD VIDEO disc recorded in wide picture format, the picture is zoomed to fill the screen vertically, and the left and right sides of the image are chopped off.

Note, however, that the picture will be shown in the 4:3 LB mode even if you select the 4:3 PS mode depending on the disc.

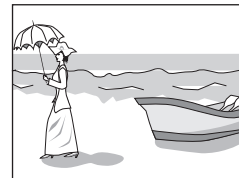

### PICTURE SOURCE

This mode selects whether the content on the disc is processed by field (video source) or by frame (film source). You can obtain optimal picture quality according to the source type to be played back by selecting an appropriate option. This setting is available for both the interlaced mode and progressive scanning mode.

#### Setting options

**VIDEO(NORMAL), VIDEO(ACTIVE), FILM, AUTO**

**[VIDEO(NORMAL)]:** select when playing back a video source disc with relatively a few movements.

**[VIDEO(ACTIVE)]:** select when playing back a video source disc with relatively a lot of movements.

**[FILM]:** select when playing back a film source disc.

**[AUTO]:** select when playing back a disc containing both video and film source materials.

The unit recognizes the picture type (film or video source) of the current disc according to the disc information. Normally, select this option.

### SCREEN SAVER

You can set the screen saver function to ON or OFF. (See page 11.)

#### Setting options

**ON, OFF**



### MP3&WMA/JPEG

The unit can play MP3/WMA and JPEG files recorded on a CD-R/CD-RW disc. However, if a disc contains both MP3/WMA and JPEG files, you can only play files of the type selected in this menu item.

#### Setting options

##### MP3&WMA, JPEG

[MP3&WMA]: when selected, only MP3/WMA files can be played back.

[JPEG]: when selected, only JPEG files can be played back.

## AUDIO menu

### DIGITAL AUDIO OUTPUT

To connect the unit's digital output to an external device equipped with a digital input, this item must be set correctly.

See "Appendix C: Digital output signal chart" on page 50 for details about the relation between the setting and output signals.

#### Setting options

##### PCM ONLY, DOLBY DIGITAL/PCM, STREAM/PCM

[PCM ONLY]: select when you connect the DIGITAL OUT jack of the unit to the linear PCM digital input of other audio equipment.

[DOLBY DIGITAL/PCM]: select when you connect the digital input of a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

When this option is selected, playing back a DTS-encoded disc or disc recorded by the MPEG Multichannel format outputs a linear PCM digital signal.

[STREAM/PCM]: select when you connect the digital input of an amplifier with a built-in DTS, MPEG Multichannel or Dolby Digital decoder, or the stand-alone unit of such a decoder.

#### NOTE

When [STREAM/PCM] is selected, note the following points:

- With some DVD VIDEO discs that are not fully copy-protected, a 20 or 24 bit digital signal may be output.
- A signal recorded with the 96 kHz or higher sampling frequency is output from the DIGITAL OUT jack with the 48 kHz sampling frequency.
- When playing a DVD VIDEO or Audio CD disc with DTS, use a DTS decoder to get correct signals from your speakers.

### ANALOG OUT

To play back a DVD VIDEO disc recorded with surround multichannel audio correctly, you must set this item properly according to your audio system.

(This function does not work when the 3D PHONIC function is activated.)

#### Setting options

##### 2-CH DOLBY SURROUND, 2-CH STEREO, MULTI CHANNEL

[2-CH DOLBY SURROUND]: select when you enjoy multichannel surround audio by connecting the unit's AUDIO OUT jacks to a surround decoder.

[2-CH STEREO]: select when you enjoy conventional 2-channel stereo audio by connecting the unit's AUDIO OUT jacks to a stereo amplifier/receiver or TV, or when you duplicate audio of a DVD VIDEO disc recorded with surround audio to your MD, cassette, etc.

[MULTI CHANNEL]: select when you enjoy multichannel surround audio by connecting the unit's 5.1-channel audio outputs to an amplifier equipped with 5.1-channel inputs.

#### NOTE

With some DVD AUDIO discs, the track is prohibited from down-mixing to 2-channel stereo audio. With such discs, even if you select [2-CH DOLBY SURROUND] or [2-CH STEREO], down-mixing function does not work. In this case, [MULTI CH] appears on the display window for about 2 to 3 seconds.

### D. RANGE CONTROL

This setting provides optimal audio quality from the analog AUDIO OUT terminals for listening to DVD VIDEO discs recorded in Dolby Digital format, at low or middle volume.

#### Setting options

##### WIDE RANGE, NORMAL, TV MODE

[WIDE RANGE]: when selected, audio is played back with the widest dynamic range so that you can enjoy powerful playback sound.

[NORMAL]: normally, select this option.

[TV MODE]: select if DVD VIDEO disc sound level is lower than TV program sound level. Thus you can hear sound at a lower volume clearly.

### OUTPUT LEVEL

This setting allows you to attenuate the level of the signal output from the unit's analog AUDIO OUT jacks.

#### Setting options

##### STANDARD, LOW

• If the sound output from the speaker is distorted, select [LOW].

## SPK.SETTING menu

This menu can be selected only when [ANALOG OUT] in the [AUDIO] preference display is set to [MULTI CHANNEL].

### MODE

You can select the speaker configuration type according to your speaker systems.

#### Setting options

##### 5.1 CH., EXPERT

[5.1 CH.]: select when you connect the unit to a 5.1-channel amplifier and use the front, surround, center and sub-woofer speakers.

[EXPERT]: select when you want to make fine tuning to match your speakers. The SIZE, DELAY, and LEVEL setting items are available.

### SIZE

You can set the speaker sizes according to your speakers. See page 40 for how to set the speaker sizes.

### DELAY

You can set the speaker delay time according to your speakers. See page 41 for how to set the speaker delay time.

### LEVEL

You can set the speaker output level according to your speakers. See page 41 for how to set the speaker output level.

#### NOTE

If you connect the unit's digital output to an external Dolby Digital or DTS decoder, and set [DIGITAL AUDIO OUTPUT] in the [AUDIO] preference display to [STREAM/PCM], the above settings are not effective.

Make the speaker settings of the external decoder properly.

### OTHERS menu

#### RESUME

You can select the resume playback mode.  
See page 13 for details about the resume playback function.

##### **Setting options**

##### **ON, OFF, DISC RESUME**




**[ON]:** when selected, the unit can resume playback of the disc from the position where playback was last interrupted, if the disc is still in the disc tray.

**[OFF]:** when selected, the resume function is deactivated.

**[DISC RESUME]:** when selected, the unit can resume playback of the last 30 discs played. The unit retains a memory of the interrupted positions of the last 30 discs played, even though they have been removed from the disc tray.

#### ON SCREEN GUIDE

The unit can display "on-screen guide" icons or characters on the picture, which show what is happening to the disc or the unit.

Example of "on-screen guide" icons: , , 

##### **Setting options**

##### **ON, OFF**

**[ON]:** when selected, the on-screen guide is activated.

#### AUTO STANDBY

When the unit is stopped for more than 30 minutes or 60 minutes, the unit enters standby mode automatically.

##### **Setting options**

60, 30, OFF

#### AV COMPULINK MODE

You must set this item correctly to use the AV COMPU LINK system.


##### **Setting options**

DVD1, DVD2, DVD3


- See page 46 for details about the AV COMPU LINK function.

#### PARENTAL LOCK

When this option is selected, pressing ENTER on the remote control unit brings up the PARENTAL LOCK display shown below. This allows you to restrict children from playing DVD VIDEO discs.

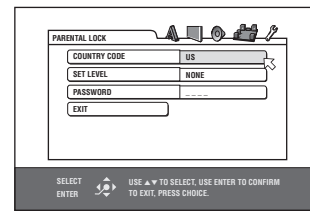

- See page 42 for details about the parental lock setting.

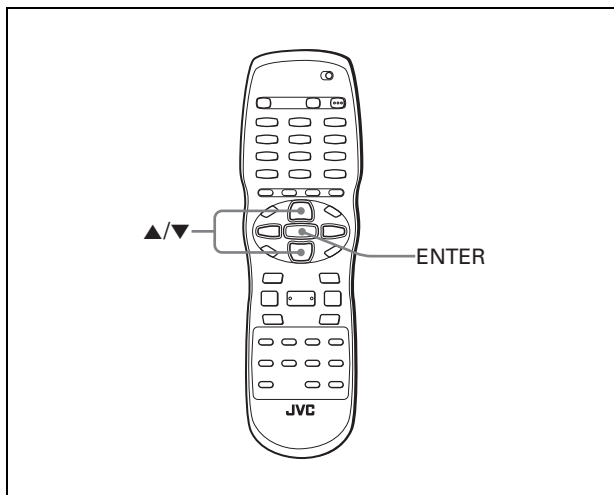

**6** Press ▲/▼ to select [BASS REDIRECT] and press ENTER.

**7** Press ▲/▼ to select [SUB WOOFER] or [FRONT L/R] and press ENTER.

SUB WOOFER: The low-frequency signal fed from the subwoofer output is boosted up.

FRONT L/R: The low-frequency signals fed from the front speaker outputs are boosted up. No audio is output from the subwoofer.

To return to the [SPK.SETTING] page

Press ▲/▼ to move to [RETURN] and press ENTER.

### NOTES

- The [BASS REDIRECT] setting is effective only when at least any one of the speaker sizes is set to [SMALL].
- No audio is output from the SUBWOOFER jack when [FRONT L/R] is selected.
- If the front speaker size is set to [SMALL], the [BASS REDIRECT] setting is fixed to [SUBWOOFER].
- During playback of a DVD AUDIO, audio signal may not be output correctly depending on the conditions of the unit or the disc itself.

## Making fine tuning for your speakers

You can make fine tuning to match your speaker system.

### Preparation


Set [ANALOG OUT] in the [AUDIO] preference display to [MULTI CHANNEL] and [MODE] in the [SPK.SETTING] preference display to [EXPERT].

## Setting the speaker sizes and the BASS REDIRECT function

**1** Bring up the SPK.SETTING menu.

**2** Press ▲/▼ to move to [SIZE] and press ENTER.

The [SIZE] display page appears on the TV screen.

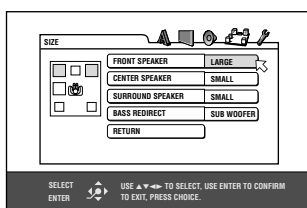

**3** Press ▲/▼ to select the speaker to be set and press ENTER.

FRONT SPEAKER: front speakers  
 CENTER SPEAKER: center speakers  
 SURROUND SPEAKER: surround speakers

**4** Press ▲/▼ to select the size and press ENTER.

LARGE: large speaker(s) which can fully reproduce the low-frequency range.  
 SMALL: small speaker(s) which cannot fully reproduce the low-frequency range.  
 NONE: no speaker(s) connected.

**5** Repeat steps 3 and 4 if you want to set other speakers.

When you use the small speakers which do not fully reproduce the low-frequency range, you can boost up the low-frequency signal of the subwoofer or front speakers by setting the BASS REDIRECT function.


To set the BASS REDIRECT function, go to step 6.

## Setting the delay time

When playing in multi-channel mode and the speakers cannot all be located an equal distance from the listener, this setting can compensate for the difference between the distance from the front speakers (left, right) to the listener, and the distance from the center speaker and the surround speakers to the listener. Check the difference in the distance between the listener and the front speakers (left, right), and the distance between the listener and the other speakers, and then set that value as described in the procedure below.

- 1 Bring up the **SPK.SETTING** menu.
- 2 Press **▲/▼** to move  to **[DELAY]** and press **ENTER**.

The **[DELAY]** display page appears on the TV screen.

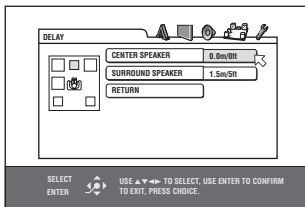

- 3 Press **▲/▼** to select the speaker to be set and press **ENTER**.

CENTER SPEAKER: center speaker  
SURROUND SPEAKER: surround speakers

- 4 Press **▲/▼** to select the appropriate distance and press **ENTER**.

When you select **[CENTER SPEAKER]**, you can select the appropriate distance from **[0.0m]** to **[1.5m]** in 30 cm (1 ft) units.

When you select **[SURROUND SPEAKER]**, you can select the appropriate distance from **[0.0m]** to **[4.5m]** in 30 cm (1 ft) units.


- 5 Repeat steps 3 and 4 if you want to set other speakers.

To return to the **[SPK.SETTING]** page

Press **▲/▼** to move  to **[RETURN]** and press **ENTER**.

### Hint

If there is no difference between the distance from the front speakers to the listener, and the distance from the center speaker and/or the surround speakers to the listener, select **[0.0m]**. If there is a difference between them, refer to the following diagram to set the delay time correctly.

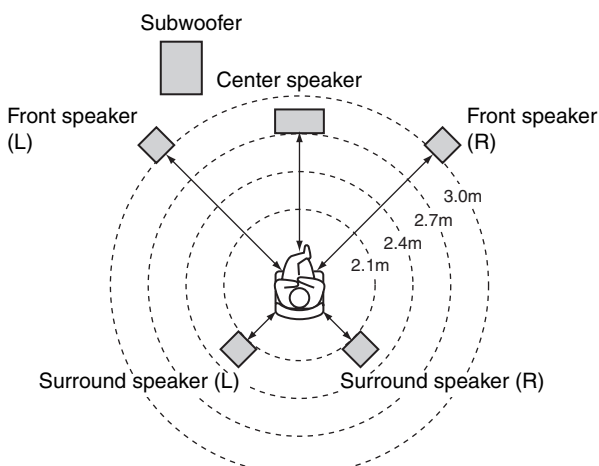

In the above example, set **[CENTER SPEAKER]** to **[0.3m]**, and **[SURROUND SPEAKER]** to **[0.9m]**.

As the distance from the center speaker and/or the surround speakers to the listener is shorter than the distance from the front speakers to the listener, select the longer distance value.

### NOTE


This setting can only compensate for differences in speaker distance when the front speakers (left, right) are farther from the listener than the other speakers.

## Setting the speaker level

You can adjust the output level of each speaker.

- 1 Bring up the **SPK.SETTING** menu.
- 2 Press **▲/▼** to move  to **[LEVEL]** and press **ENTER**.

The **[LEVEL]** display page appears on the TV screen.

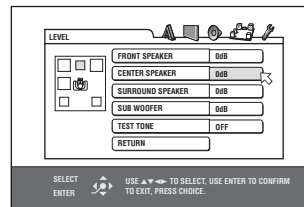

- 3 Press **▲/▼** to select the speaker to be set and press **ENTER**.

FRONT SPEAKER: front speakers (This item cannot be selected. The level is fixed to 0 dB.)

CENTER SPEAKER: center speaker  
SURROUND SPEAKER: surround speakers  
SUB WOOFER: subwoofer

- 4 Press **▲/▼** to set the level and press **ENTER**.

The selectable level ranges from **-6** to **6** dB in 1 dB unit.

- 5 Repeat steps 3 and 4 if you want to set other speakers.

To return to the **[SPK.SETTING]** page

Press **▲/▼** to move  to **[RETURN]** and press **ENTER**.

### NOTE

For the speaker(s) whose size is set to **[NONE]**, the speaker level cannot be set.

## To generate test tone signals

You can check the level setting by monitoring the test tone.


- 1 Press **▲/▼** to select **[TEST TONE]** and press **ENTER**.

- 2 Press **▲/▼** to select **[ON]** and press **ENTER**.

The test tone will be generated when you select the speaker(s) in the **[LEVEL]** page.

### NOTE

The test tone sound is not output from the subwoofer.

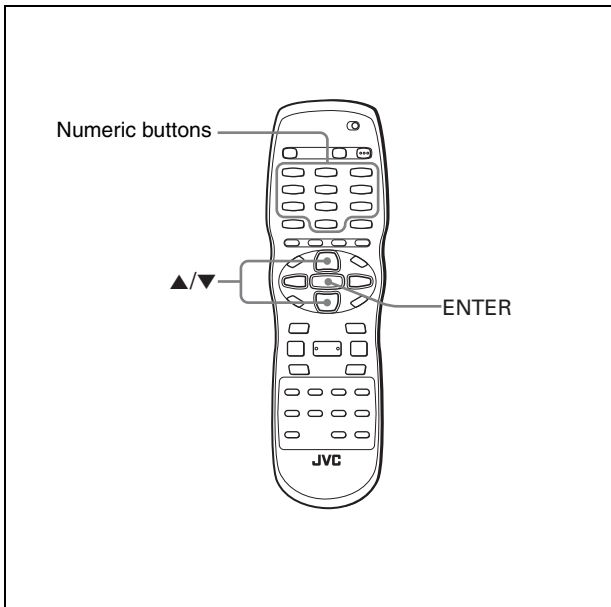

### Limiting playback by children


This function restricts playback of DVD VIDEO discs which contain violent (and other) scenes according to the level set by the user. For example, if a movie which includes violent scenes supports the parental lock feature, such scenes which you do not want to let children view can be cut or replaced with other scenes.

### To set Parental Lock for the first time



- 1 Bring up the OTHERS menu.
- 2 Press  $\blacktriangle/\blacktriangledown$  to move  $\leftarrow$  to select [PARENTAL LOCK] then press ENTER.

The Parental Lock on-screen display appears on the TV screen.

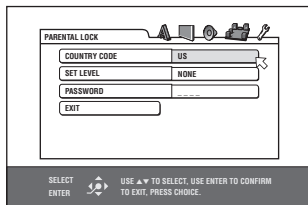


- 3 While  $\leftarrow$  is pointing to [COUNTRY CODE], press ENTER to bring up the pull-down menu.

- 4 Press  $\blacktriangle/\blacktriangledown$  to select the country code.

Select the code of the country whose standards were used to rate the DVD VIDEO disc content.

See "Appendix A: Country/Area code list for Parental Lock" on page 49.

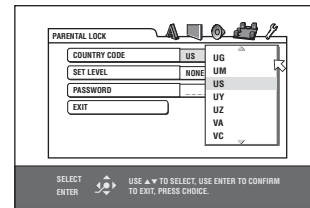


- 5 Press ENTER.

$\leftarrow$  moves to [SET LEVEL].

- 6 Press ENTER to bring up the pull-down menu.

In the pull-down menu, [NONE] and levels [8] to [1] are available.


[NONE] does not restrict playback. Level [1] is the strictest level. Discs rated higher than the selected level are restricted.

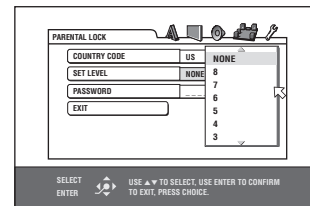

- 7 Press  $\blacktriangle/\blacktriangledown$  to select a desired parental lock level, then press ENTER.

$\leftarrow$  moves to [PASSWORD].

- 8 Press the numeric buttons (0 to 9) to enter a 4-digit password.

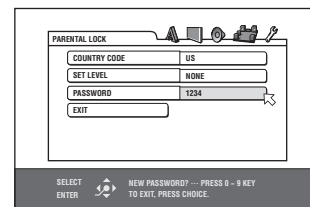

- 9 Press ENTER.

The parental lock feature is set.

$\leftarrow$  moves to [EXIT]. Pressing ENTER again returns to the [OTHERS] menu of the preference display.

#### Hint

If you want to change the password at step 8, do it before pressing ENTER.

## To change the settings



You can change the parental lock settings later.

- 1 Bring up the OTHERS menu.
- 2 Press ▲/▼ to move to select [PARENTAL LOCK] and press ENTER.

The parental lock on-screen display appears on the TV screen.

- 3 While is pointing to [PASSWORD], press the numeric buttons to enter your current 4-digit password then press ENTER.

moves to [COUNTRY CODE] if you enter the correct password.

If you enter a wrong password, "WRONG! RETRY..." appears on the TV screen, and you cannot go to the next step. If you forget your password, enter "8888." The current password is deleted and you can set a new password.

- 4 To change the [COUNTRY CODE] or [SET LEVEL], press ENTER to bring up the associated pull-down menu when is pointing to the desired item.

- 5 Press ▲/▼ to select the desired option then press ENTER.

If you change the country code, you must reselect the parental lock level.

- 6 While is pointing to [PASSWORD], press the numeric buttons to enter a 4-digit password.

The password entered in this step becomes the new password. If you want to keep the same password as before, enter the same password.

- 7 Press ENTER.

moves to [EXIT]. Pressing ENTER again returns to the [OTHERS] menu of the preference display.

### NOTE

If you enter the wrong password more than 3 times in step 3 above, moves to [EXIT] automatically and ▲/▼ do not work.


## To temporarily release the Parental Lock



If the parental level is set to a strict value, some discs may not play at all.

When you insert such a disc and try to play it, the following parental lock on-screen display appears on the TV screen, asking you whether you want the parental lock to be temporarily released or not.

- 1 Press ▲/▼ to move to [TEMPORARY RELEASE], then press ENTER.

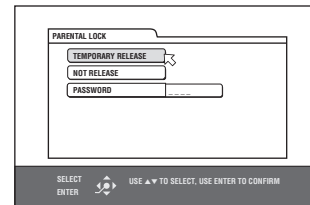

- 2 Press the numeric buttons (0 to 9) to enter your 4-digit password.

The Parental Lock is released, and the unit starts playback. If you enter a wrong password, "WRONG! RETRY..." appears on the TV screen. Enter the correct password.


### NOTE

When you enter the wrong password 3 times at step 2 above, moves to [NOT RELEASE] automatically and ▲/▼ do not work.

# Additional information


## Names of parts and controls

### Front panel

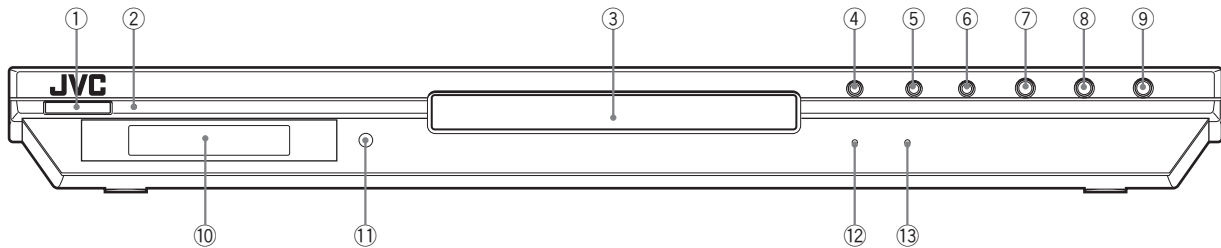

- ① ⏻/⏪ button (10)
- ② STANDBY/ON indicator (10)
- ③ Disc tray (11)
- ④ ▲ button (11)
- ⑤ ⏮ button (14, 15)
- ⑥ ⏭ button (14, 15)
- ⑦ ■ button (12, 13)
- ⑧ ▶ button (11, 13)
- ⑨ ⏸ button (12, 14)
- ⑩ Display window (see the illustration below)
- ⑪ Remote sensor (8)
- ⑫ PROGRESSIVE indicator (5)
- ⑬ DVD AUDIO indicator (2)


### Display window

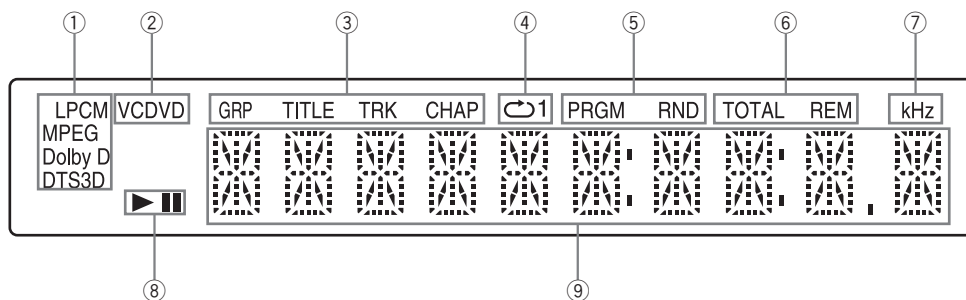

- ① Audio format indicators
- ② Disc indicator
- ③ Group/title/track/chapter indicators
- ④ Repeat mode indicator
- ⑤ Program/random indicators
- ⑥ Total time/remaining time indicators
- ⑦ kHz (unit of sampling frequency) indicator
- ⑧ ▶(play) / ⏸(pause) indicators
- ⑨ Multi-information window



Remote control unit

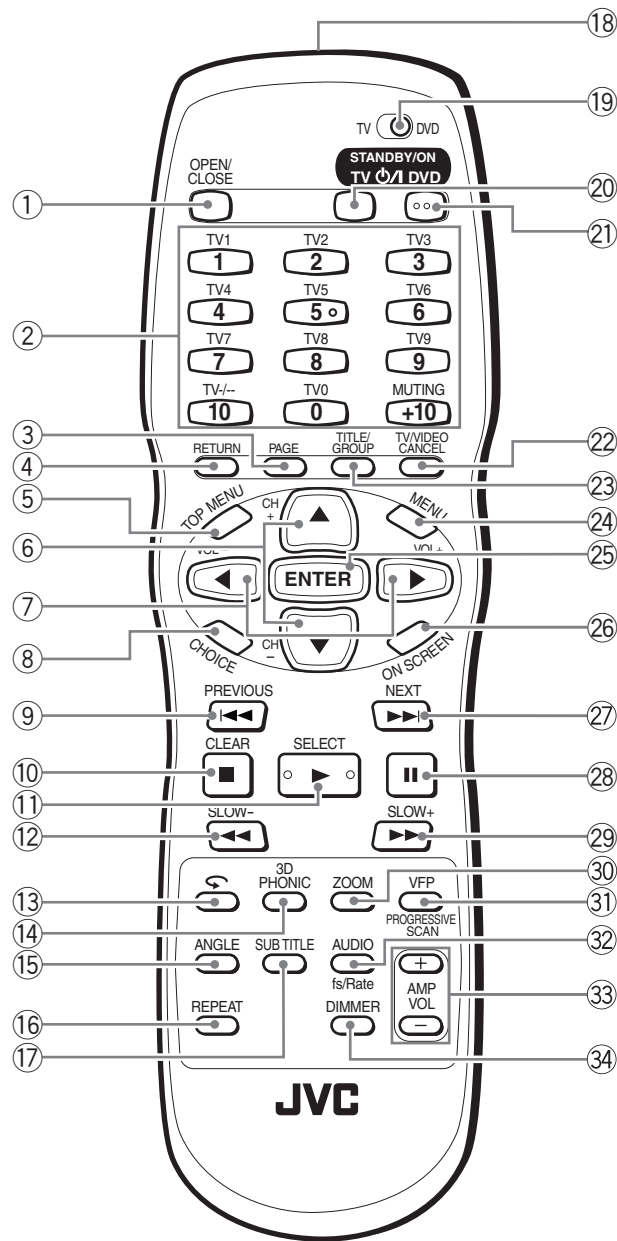

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>① OPEN/CLOSE button (11)</li> <li>② Numeric buttons</li> <li>③ PAGE button (17)</li> <li>④ RETURN button (16)</li> <li>⑤ TOP MENU button (16, 28)</li> <li>⑥ Cursor selection (▲ Up, ▼ Down) - CH (+/-) buttons</li> <li>⑦ Cursor selection (◀ Left, ▶ Right) - VOL (+/-) buttons</li> <li>⑧ CHOICE button (11, 36)</li> <li>⑨ ◀◀/PREVIOUS button (14, 15, 27, 28, 29, 31, 33, 34)</li> <li>⑩ ■/CLEAR button (12, 19, 20, 28, 31, 33)</li> <li>⑪ ▶/SELECT button (11, 13, 27, 28, 31, 34)</li> <li>⑫ ◀◀/SLOW- button (14, 27, 29)</li> <li>⑬ ↻ button (14)</li> <li>⑭ 3D PHONIC button (23)</li> <li>⑮ ANGLE button (21)</li> <li>⑯ REPEAT button (20, 29, 32, 35)</li> <li>⑰ SUBTITLE button (21, 30)</li> </ul> | <ul style="list-style-type: none"> <li>⑱ Infrared signal window (8)</li> <li>⑲ TV - DVD switch (9, 10, 16, 27, 31, 33, 36)</li> <li>⑳ TV STANDBY/ON ⏻/I button (9)</li> <li>㉑ DVD STANDBY/ON ⏻/I button (10)</li> <li>㉒ TV/VIDEO - CANCEL button (9, 18)</li> <li>㉓ TITLE/GROUP button (16, 32, 34)</li> <li>㉔ MENU button (16, 28, 33, 34)</li> <li>㉕ ENTER button</li> <li>㉖ ON SCREEN button (12, 17, 18, 19, 20, 24)</li> <li>㉗ ▶▶/NEXT button (14, 15, 27, 28, 29, 31, 33, 34)</li> <li>㉘    button (12, 31)</li> <li>㉙ ▶▶/SLOW+ button (14, 27, 29)</li> <li>㉚ ZOOM button (22, 34)</li> <li>㉛ VFP - PROGRESSIVE SCAN button (5, 22, 32)</li> <li>㉜ AUDIO - fs/Rate button (21, 23, 30, 32)</li> <li>㉝ AMP VOL +/- buttons (9)</li> <li>㉞ DIMMER button (11)</li> </ul> |
|--|---|

Additional information

## AV COMPU LINK remote control system


The JVC AV COMPU LINK system allows you to enjoy video or audio with the simplest operation. If your video/audio unit (such as a DVD unit, CD unit and VCR) and television or/and amplifier/receiver support the JVC AV COMPU LINK system and are tied with the JVC AV COMPU LINK cable(s), simply starting the unit will automatically make all necessary settings on the television and/or amplifier/receiver to allow you to enjoy the playback.

### AV COMPU LINK


#### Connection and setup

Using an AV COMPU LINK cable, connect the AV COMPU LINK terminals of each component to one another.


- The unit's AV COMPU LINK setting is controlled using the OTHERS menu in the preference display. See page 39.
- For information on the connection between a TV and a receiver, refer to the receiver's instructions.

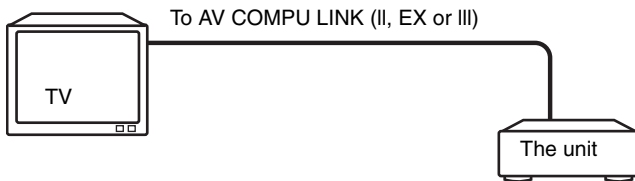

- If you connect the unit to a television via AV COMPU LINK, set the unit's AV COMPU LINK setting as follows.
  - When connecting to the VIDEO-1 input terminal of the television: DVD2
  - When connecting to the VIDEO-2 input terminal of the television: DVD3

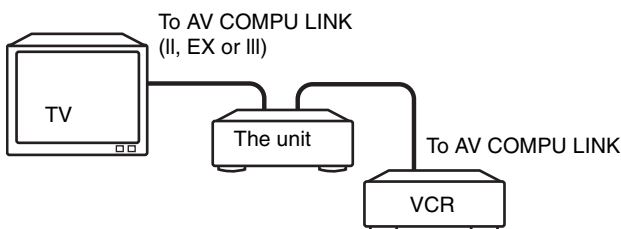

- If you connect the unit to a television and VCR via AV COMPU LINK, set the VCR's Remote Control Code and the unit's AV COMPU LINK setting as follows.
  - When connecting to the VIDEO-1 input terminal of the television:
    - The unit's AV COMPU LINK setting: DVD2
    - VCR's Remote Control Code: B
  - When connecting to the VIDEO-2 input terminal of the television:
    - The unit's AV COMPU LINK setting: DVD3
    - VCR's Remote Control Code: A

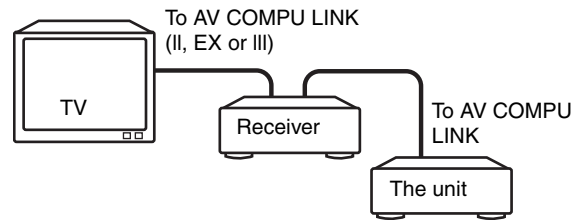

- If you connect the unit to a television and receiver via AV COMPU LINK, set the unit's AV COMPU LINK setting to DVD1.

#### IMPORTANT!

When you make video connection between the unit and another device (such as a receiver and TV) via the composite, S-video or component jacks, as well as AV COMPU LINK connection, see also the instruction manual of the other device.

#### Notes for connection

- If you connect the unit to a receiver via AV COMPU LINK in a system including a Dolby Digital decoder, some functions may not be performed automatically.
- Connect the AUDIO OUT jacks of the unit to the audio input jacks of a receiver indicating "DVD." Otherwise, the system will not work correctly.
- There may be no description about connections to the unit in the instruction manual of a television or VCR. However, a television or VCR with AV COMPU LINK terminals indicating "II," "EX" or "III" can be connected to the unit.

#### Operation

The JVC AV COMPU LINK system allows you to enjoy video and/or audio by simply pressing Play on the source component (the component which plays back the video or audio, such as a DVD unit or VCR). You do not even have to switch on power on the TV or receiver.

- 1 Turn on the main power of the television.**
- 2 Insert a disc (or tape) into the source component.**
- 3 Press ► of the source component.**

The following actions are performed automatically:

- Turning on the television power.
- Setting the source of the television to the external input (VIDEO-1 or VIDEO-2).
- Turning on receiver power.
- Setting the source of the receiver to the component which has started playback.

## Troubleshooting

### Power

#### Power does not come on.

- ➔ Power plug is not inserted securely. Plug in securely.

### Operation

#### “REGION CODE ERROR!” is shown on the TV screen.

- ➔ Region code of the inserted disc does not match the unit.  
Check the region code of the disc printed on the disc jacket.

#### Operation is not possible.

- ➔ Microcomputer malfunction due to lightning or static electricity.  
Turn off the power and unplug the power cord, then connect the power cord again.
- ➔ Moisture condensation caused by a sudden change of temperature or humidity. Turn off the power, then turn it on a few hours later.
- ➔ The disc does not allow the operation, or an unplayable disc is inserted. Check and replace the disc (see page 2).

#### [LOCK] is displayed on the display window and the disc tray does not open.

- ➔ When you press ▲ while pressing down ■ on the unit in standby mode, the tray lock function is activated. The disc tray cannot be opened or closed in this status. To release this status, press ▲ while pressing down ■ on the unit in standby mode.

#### TV cannot be operated with the remote control unit.

- ➔ Set the manufacturer code correctly according to your TV (see page 9).
- ➔ Set the TV - DVD switch on the remote control unit to “TV.”

#### Setting cannot be changed in the [LANGUAGE] preference display.

- ➔ Stop playback and change the setting in the [LANGUAGE] preference display.

#### The audio language and subtitle cannot be changed.

- ➔ Only one language is recorded on the disc currently being played back.
- ➔ The disc being played back does not accept the AUDIO - fs/ Rate button and SUBTITLE button operation. Change the subtitle using [SUBTITLE] in the [LANGUAGE] preference display (see page 37).

#### No subtitle is displayed.

- ➔ No subtitle is recorded on the disc currently being played back.
- ➔ [OFF] is selected in [SUBTITLE] in the [LANGUAGE] preference display. Select the desired language in [SUBTITLE] (see page 37).
- ➔ Subtitle may not be displayed correctly during A-B repeat playback.

## Picture

#### Picture is noisy.

- ➔ The unit is connected to a VCR directly and the copyguard function is activated. Connect the unit so that the picture signal flows directly to the TV.
- ➔ With some discs, the picture may be blurred when [PICTURE SOURCE] is set to [FILM] or [AUTO]. Set [PICTURE SOURCE] to [VIDEO (NORMAL)] or [VIDEO (ACTIVE)].

#### Picture is distorted when using COMPONENT VIDEO OUT or S-VIDEO output jack(s).

- ➔ Both the component connection and S-video connection are made. Disconnect the unused one.

#### No picture is displayed on the TV screen or the screen is blurred or divided into two parts.

- ➔ The unit is in the progressive scanning mode though it is connected to a TV via the VIDEO or S-VIDEO jack. Set the VIDEO SIGNAL SELECTOR on the rear panel to “480i,” or set it to “REMOTE” and make the Progressive scanning mode inactive by using the VFP - PROGRESSIVE SCAN button (see page 5).

## Audio

#### DVD VIDEO disc playback sound level is lower than TV broadcast sound level.

- ➔ Set the [D.RANGE CONTROL] preference to [TV MODE] (see page 38).

#### Analog audio output is distorted.

- ➔ Set the [OUTPUT LEVEL] preference to [LOW] (see page 38).

#### [MULTI CH] is shown in the display window when playing back a DVD AUDIO disc.

- ➔ The track is prohibited from down-mixing to 2-channel stereo audio. Listen in multichannel surround audio (see page 38).

## MP3/WMA

#### No sound comes out.

- ➔ MP3/WMA disc is recorded with the “packet writing (UDF format).” It cannot be played.

#### Files (tracks) are not played in the recorded order.

- ➔ This unit plays the files in the alphabetic order. So, the playback order can vary.

#### WMA files cannot be played back.

- ➔ The file is copy protected.
- ➔ The file is recorded with a bit rate under 48 kbps. The unit does not support such WMA files.

## JPEG

#### No picture is played back, or the screen turns black.

- ➔ Format of the files is not the baseline JPEG. The unit supports only the baseline JPEG format.

#### The preference display cannot be turned on.

- ➔ You cannot turn on the preference display when a JPEG disc is inserted.

### Specifications

Specifications and appearance are subject to change without prior notice.

#### General

Readable discs DVD AUDIO, DVD VIDEO, DVD-R (Video format), DVD-RW (Video format/VR format), DVD-RAM (VR format), SVCD, Video CD, Audio CD (CD-DA), MP3/WMA format, JPEG, CD-R/RW (CD-DA, SVCD, Video CD, MP3/WMA format, JPEG)

Video format REMOTE, 480i (Interlaced scan)/480p (Progressive scan) selectable

#### Other

Power requirements AC 120 V  $\sim$ , 60 Hz

Power consumption 16 W (POWER ON), 2.0 W (STANDBY mode)

Mass 2.1 kg (4.7 lbs)

Dimensions (W  $\times$  H  $\times$  D) 435 mm  $\times$  45 mm  $\times$  270.5 mm  
(17<sup>-3/16</sup> inch  $\times$  2<sup>-13/16</sup> inch  $\times$  10<sup>-11/16</sup> inch)

#### Video outputs

COMPONENT (pin jacks)  
Y Output: 1.0 Vp-p (75  $\Omega$ )  
P<sub>B</sub>/P<sub>R</sub> Output: 0.7 Vp-p (75  $\Omega$ )

VIDEO OUT (pin jack)  
1.0 Vp-p (75  $\Omega$ )

S-VIDEO OUT (S jack)  
Y Output: 1.0 Vp-p (75  $\Omega$ )  
C Output: 286 mVp-p (75  $\Omega$ )

Horizontal resolution  
500 lines or more

#### Audio outputs

ANALOG OUT (pin jack)  
2.0 Vrms (10 k $\Omega$ )

DIGITAL OUT (COAXIAL)  
0.5 Vp-p (75  $\Omega$  termination)

DIGITAL OUT (OPTICAL)  
-21 dBm to -15 dBm (peak)

#### Audio characteristics

Frequency response

- CD (sampling frequency 44.1 kHz):  
2 Hz to 20 kHz
- DVD (sampling frequency 48 kHz):  
2 Hz to 22 kHz  
(4 Hz to 20 kHz for DTS and Dolby Digital bitstream signals)
- DVD (sampling frequency 96 kHz):  
2 Hz to 44 kHz
- DVD (sampling frequency 192 kHz/176.4 kHz):  
2 Hz to 88 kHz

Dynamic range  
16 bit: More than 98 dB  
20/24 bit: More than 100 dB

Wow and flutter  
Unmeasurable (less than  $\pm$  0.002%)

Total harmonic distortion  
less than 0.006%

#### \* Notes for PX model (Check the specification indication on the rear panel.)

Power requirements	AC 110 V to 240 V $\sim$ , 50 Hz/60 Hz
Power consumption	16 W (POWER ON), 2.0 W (STANDBY mode)

- Manufactured under license from Dolby Laboratories. "Dolby," "MLP Lossless" and the double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

## Appendix A: Country/Area code list for Parental Lock

(for page 42)

AD	Andorra
AE	United Arab Emirates
AF	Afghanistan
AG	Antigua and Barbuda
AI	Anguilla
AL	Albania
AM	Armenia
AN	Netherlands Antilles
AO	Angola
AQ	Antarctica
AR	Argentina
AS	American Samoa
AT	Austria
AU	Australia
AW	Aruba
AZ	Azerbaijan
BA	Bosnia and Herzegovina
BB	Barbados
BD	Bangladesh
BE	Belgium
BF	Burkina Faso
BG	Bulgaria
BH	Bahrain
BI	Burundi
BJ	Benin
BM	Bermuda
BN	Brunei Darussalam
BO	Bolivia
BR	Brazil
BS	Bahamas
BT	Bhutan
BV	Bouvet Island
BW	Botswana
BY	Belarus
BZ	Belize
CA	Canada
CC	Cocos (Keeling) Islands
CF	Central African Republic
CG	Congo
CH	Switzerland
CI	Côte d'Ivoire
CK	Cook Islands
CL	Chile
CM	Cameroon
CN	China
CO	Colombia
CR	Costa Rica
CU	Cuba
CV	Cape Verde
CX	Christmas Island
CY	Cyprus
CZ	Czech Republic
DE	Germany
DJ	Djibouti
DK	Denmark
DM	Dominica
DO	Dominican Republic
DZ	Algeria
EC	Ecuador
EE	Estonia
EG	Egypt
EH	Western Sahara
ER	Eritrea

ES	Spain
ET	Ethiopia
FI	Finland
FJ	Fiji
FK	Falkland Islands
FM	Micronesia (Federated States of)
FO	Faroe Islands
FR	France
FX	France, Metropolitan
GA	Gabon
GB	United Kingdom
GD	Grenada
GE	Georgia
GF	French Guiana
GH	Ghana
GI	Gibraltar
GL	Greenland
GM	Gambia
GN	Guinea
GP	Guadeloupe
GQ	Equatorial Guinea
GR	Greece
GS	South Georgia and the South Sandwich
GT	Guatemala
GU	Guam
GW	Guinea-Bissau
GY	Guyana
HK	Hong Kong
HM	Heard Island and McDonald Islands
HN	Honduras
HR	Croatia
HT	Haiti
HU	Hungary
ID	Indonesia
IE	Ireland
IL	Israel
IN	India
IO	British Indian Ocean Territory
IQ	Iraq
IR	Iran (Islamic Republic of)
IS	Iceland
IT	Italy
JM	Jamaica
JO	Jordan
JP	Japan
KE	Kenya
KG	Kyrgyzstan
KH	Cambodia
KI	Kiribati
KM	Comoros
KN	Saint Kitts and Nevis
KP	Korea, Democratic People's Republic of
KR	Korea, Republic of
KW	Kuwait
KY	Cayman Islands
KZ	Kazakhstan
LA	Lao People's Democratic Republic
LB	Lebanon
LC	Saint Lucia

LI	Liechtenstein
LK	Sri Lanka
LR	Liberia
LS	Lesotho
LT	Lithuania
LU	Luxembourg
LV	Latvia
LY	Libyan Arab Jamahiriya
MA	Morocco
MC	Monaco
MD	Moldova, Republic of
MG	Madagascar
MH	Marshall Islands
ML	Mali
MM	Myanmar
MN	Mongolia
MO	Macau
MP	Northern Mariana Islands
MQ	Martinique
MR	Mauritania
MS	Montserrat
MT	Malta
MU	Mauritius
MV	Maldives
MW	Malawi
MX	Mexico
MY	Malaysia
MZ	Mozambique
NA	Namibia
NC	New Caledonia
NE	Niger
NF	Norfolk Island
NG	Nigeria
NI	Nicaragua
NL	Netherlands
NO	Norway
NP	Nepal
NR	Nauru
NU	Niue
NZ	New Zealand
OM	Oman
PA	Panama
PE	Peru
PF	French Polynesia
PG	Papua New Guinea
PH	Philippines
PK	Pakistan
PL	Poland
PM	Saint Pierre and Miquelon
PN	Pitcairn
PR	Puerto Rico
PT	Portugal
PW	Palau
PY	Paraguay
QA	Qatar
RE	Réunion
RO	Romania
RU	Russian Federation
RW	Rwanda
SA	Saudi Arabia
SB	Solomon Islands
SC	Seychelles
SD	Sudan

SE	Sweden
SG	Singapore
SH	Saint Helena
SI	Slovenia
SJ	Svalbard and Jan Mayen
SK	Slovakia
SL	Sierra Leone
SM	San Marino
SN	Senegal
SO	Somalia
SR	Suriname
ST	Sao Tome and Principe
SV	El Salvador
SY	Syrian Arab Republic
SZ	Swaziland
TC	Turks and Caicos Islands
TD	Chad
TF	French Southern Territories
TG	Togo
TH	Thailand
TJ	Tajikistan
TK	Tokelau
TM	Turkmenistan
TN	Tunisia
TO	Tonga
TP	East Timor
TR	Turkey
TT	Trinidad and Tobago
TV	Tuvalu
TW	Taiwan
TZ	Tanzania, United Republic of
UA	Ukraine
UG	Uganda
UM	United States Minor Outlying Islands
US	United States
UY	Uruguay
UZ	Uzbekistan
VA	Vatican City State (Holy See)
VC	Saint Vincent and the Grenadines
VE	Venezuela
VG	Virgin Islands (British)
VI	Virgin Islands (U.S.)
VN	Vietnam
VU	Vanuatu
WF	Wallis and Futuna Islands
WS	Samoa
YE	Yemen
YT	Mayotte
YU	Yugoslavia
ZA	South Africa
ZM	Zambia
ZR	Zaire
ZW	Zimbabwe

**Appendix B: Table of languages and their abbreviations**

(for pages 21 and 37 )

AA	Afar	FA	Persian	KM	Cambodian	OM	(Afan) Oromo	SU	Sundanese
AB	Abkhazian	FI	Finnish	KN	Kannada	OR	Oriya	SV	Swedish
AF	Afrikaans	FJ	Fiji	KO	Korean (KOR)	PA	Panjabi	SW	Swahili
AM	Ameharic	FO	Faroese	KS	Kashmiri	PL	Polish	TA	Tamil
AR	Arabic	FY	Frisian	KU	Kurdish	PS	Pashto, Pushto	TE	Telugu
AS	Assamese	GA	Irish	KY	Kirghiz	PT	Portuguese	TG	Tajik
AY	Aymara	GD	Scots Gaelic	LA	Latin	QU	Quechua	TH	Thai
AZ	Azerbaijani	GL	Galician	LN	Lingala	RM	Rhaeto-Romance	TI	Tigrinya
BA	Bashkir	GN	Guarani	LO	Laothian	RN	Kirundi	TK	Turkmen
BE	Byelorussian	GU	Gujarati	LT	Lithuanian	RO	Rumanian	TL	Tagalog
BG	Bulgarian	HA	Hausa	LV	Latvian, Lettish	RU	Russian	TN	Setswana
BH	Bihari	HI	Hindi	MG	Malagasy	RW	Kinyarwanda	TO	Tongan
BI	Bislama	HR	Croatian	MI	Maori	SA	Sanskrit	TR	Turkish
BN	Bengali, Bangla	HU	Hungarian	MK	Macedonian	SD	Sindhi	TS	Tsonga
BO	Tibetan	HY	Armenian	ML	Malayalam	SG	Sangho	TT	Tatar
BR	Breton	IA	Interlingua	MN	Mongolian	SH	Serbo-Croatian	TW	Twi
CA	Catalan	IE	Interlingue	MO	Moldavian	SI	Singhalese	UK	Ukrainian
CO	Corsican	IK	Inupiak	MR	Marathi	SK	Slovak	UR	Urdu
CS	Czech	IN	Indonesian	MS	Malay (MAY)	SL	Slovenian	UZ	Uzbek
CY	Welsh	IS	Icelandic	MT	Maltese	SM	Samoan	VI	Vietnamese
DA	Danish	IW	Hebrew	MY	Burmese	SN	Shona	VO	Volapuk
DZ	Bhutani	JI	Yiddish	NA	Nauru	SO	Somali	WO	Wolof
EL	Greek	JW	Javanese	NE	Nepali	SQ	Albanian	XH	Xhosa
EO	Esperanto	KA	Georgian	NL	Dutch	SR	Serbian	YO	Yoruba
ET	Estonian	KK	Kazakh	NO	Norwegian	SS	Siswati	ZU	Zulu
EU	Basque	KL	Greenlandic	OC	Occitan	ST	Sesotho		

**Appendix C: Digital output signal chart**

(for page 38)

Disc type	Output		
	PCM ONLY	DOLBY DIGITAL/PCM	STREAM/PCM
DVD with 48/44.1 kHz, 16/20/24 bit linear PCM DVD AUDIO with MLP	48/44.1 kHz, 16/20/24 bit, stereo linear PCM		
DVD with 192/176.4/96/88.2 kHz, 16/22/24 bit linear PCM DVD AUDIO with MLP	48/44.1 kHz, 16/20/24 bit, stereo linear PCM (Down sampling)		
DVD with DTS	48 kHz, 16 bit, stereo linear PCM		DTS bitstream
DVD with Dolby Digital	48 kHz, 16 bit, stereo linear PCM	Dolby Digital bitstream	
SVCD/Video CD/Audio CD	44.1 kHz, 16 bit, stereo linear PCM		
Audio CD with DTS	44.1kHz, 16 bit, stereo linear PCM		DTS bitstream
CD-R/RW with MP3/WMA	Linear PCM		

## Appendix D: Glossary

### 480i/480p

Indicates the number of scanning lines and scanning format of an image signal. 480i indicates 480 scanning lines with interlace format, and 480p indicates 480 scanning lines with progressive format.

### Aspect ratio

A ratio which defines the shape of the rectangular picture in a TV. It is the width of the picture relative to the height. A conventional TV picture is 4:3 in aspect ratio.

### Bit rate

Shows the number of digital information needed to play back sound for 1 second. The bit rate is expressed in bits per second.

### Bitstream

The digital form of multichannel audio data (e.g., 5.1-channel) before it is decoded into its various channels.

### Chapter/title

Chapter is the smallest division and title is the largest division on DVD VIDEO. A chapter is a division of a title and similar to a track for Video CD or Audio CD.

### Component video

Video signals with three channels of separate information that makes up the picture. There are some types of component video, such as R/G/B and Y/C<sub>B</sub>(P<sub>B</sub>)/C<sub>R</sub>(P<sub>R</sub>).

### Composite video

A single video signal commonly used in most consumer video products that contains all luminance, color, and synchronization information.

### Dolby Digital (AC3)

A six-channel system consisting of left, center, right, left rear, right rear and LFE (Low-Frequency Effect channel, for use with a sub-woofer) channels. All processing is done in the digital domain. Not all Dolby Digital discs contain six (5.1) channels of information.

### Dolby Surround/Dolby Pro Logic

Dolby Surround records four channels of front and rear audio in two channels in a way that allows a decoder to recover the original four channels for playback. Because the audio is recorded in two channels, it can be played back naturally by a two-channel stereo system.

Dolby Pro Logic introduces directional circuits in decoder-side processing (increasing the level of specific channels and lowering the level of silent channels) for greater spatial perspective, and adds a center speaker used primarily for dialog. The result is enhanced channel separation.

### Down-mix

Internal stereo mix of multichannel surround audio by a DVD unit. The down-mix signals are output from stereo output connectors.

### DTS

A Digital Surround audio encoding format configured with six (5.1) channels, similar to Dolby Digital. It requires a decoder, either in the unit or in an external receiver. DTS stands for Digital Theater Systems.

Not all DTS discs contain six (5.1) channels of information.

### Dynamic range

The difference between the loudest and softest sounds.

### Group

The largest division on DVD AUDIO.

### Interlaced scanning

In a conventional video system, a picture is shown on the display monitor in between lines of two halves. The Interlaced scanning system places lines of the second half of the picture in-between lines of the first half of the picture.

### JPEG

A popular file format for still image compression and storage. JPEG stands for Joint Photographic Experts Group.

There are three sub-types of the JPEG format as follows.

- baseline JPEG: used for digital cameras, the web, etc.
- progressive JPEG: used for the web
- lossless JPEG: an old type, rarely used now

### Linear PCM audio

PCM stands for "pulse code modulation." Linear PCM is the usual method for digitally encoding audio without compression, and is used for the audio tracks on DVD VIDEO discs, Audio CDs, etc.

### MLP

MLP stands for "Meridian Lossless Packing." A lossless audio compression system that can completely recreate the PCM signal.

### MP3

MP3 is an audio data compression format, which stands for MPEG-1 Audio Layer 3. Using MP3, you can achieve a data reduction of about 1:10.

### NTSC (National television system committee)

A black and white and color television system format used in the U.S.A., Canada, Mexico and Japan.

### PAL (Phase Alternation by Line)

A color television system format used extensively in Western Europe.

### PBC

PBC stands for "Playback control" and is a method of controlling disc play for Video CDs (VCD). You are able to interact with the disc through menus.

### Progressive scanning

Progressive scanning displays all the horizontal lines of a picture at one time, as a single frame. A progressive scanning DVD unit converts the interlaced (480i) video from DVD into progressive (480p) format for connection to a progressive display. It dramatically increases the vertical resolution.

### Sampling frequency

The rate at which measurements of an audio signal are taken during A/D and D/A conversion. The sampling frequency is expressed in samples per second.

### S-video

A video signal which improves picture quality over standard composite connections. Used on Super VHS, DVD, high end TV monitors, etc.

### Track

The smallest division on SVCD, Video CD and Audio CD discs.

### VR mode

A recording mode which is applied when video signals are recorded onto a DVD-RW or DVD-RAM disc. This mode allows to edit recording; for example, the VR mode enables a programmed recording and a manual recording in which recording time can be adjusted.

### WMA

WMA is an abbreviation of "Windows Media Audio," and is an audio data compression format developed by Microsoft Corporation. Sound quality of data compressed using WMA is the same as that of MP3, though the WMA file size is smaller than that of MP3.





# LIMITED WARRANTY

CONSUMER VIDEO 1-90

JVC COMPANY OF AMERICA warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original retail purchase for the period as shown below. ("The Warranty Period")

PARTS	<b>1 YR</b>	LABOR	<b>90 DAYS</b>
-------	-------------	-------	----------------

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN COMMONWEALTH OF PUERTO RICO.

**WHAT WE WILL DO:**

If this product is found to be defective, JVC will repair or replace defective parts at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products and parts thereof may be brought to a JVC authorized service center on a carry-in basis except for Television sets having a screen size 25 inches and above which are covered on an in-home basis.

**WHAT YOU MUST DO FOR WARRANTY SERVICE:**

Return your product to a JVC authorized service center with a copy of your bill of sale. For your nearest JVC authorized service center, please call toll free: (800) 537-5722.

If service is not available locally, box the product carefully, preferably in the original carton, and ship, insured, with a copy of your bill of sale plus a letter of explanation of the problem to the nearest JVC Factory Service Center, the name and location of which will be given to you by the toll-free number.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department.

**WHAT IS NOT COVERED:**

This limited warranty provided by JVC does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model number or serial number has been altered, tampered with, defaced or removed;
2. Initial installation and installation and removal for repair;
3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
5. Signal reception problems and failures due to line power surge;
6. Video Pick-up Tubes/CCD Image Sensor, Cartridge, Stylus (Needle) are covered for 90 days from the date of purchase;
7. Accessories;
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC COMPANY OF AMERICA                      1700 Valley Road  
 DIVISION OF JVC AMERICAS CORP.            Wayne, NJ 07470

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAILS OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

**For customer use:**

Enter below the Model No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. :	Serial No. :
Purchase data :	Name of dealer :

# Authorized Service Centers

---

QUALITY **JVC**<sup>®</sup> SERVICE  
*HOW TO LOCATE YOUR JVC SERVICE CENTER*  
**TOLL FREE: 1 (800) 537-5722**  
**<http://www.jvc.com>**

Dear Customer,

In order to receive the most satisfaction from your purchase, please read the instruction booklet before operating the unit. In the event that repairs are necessary, please call 1 (800)537-5722 for your nearest authorized servicer or visit our website at **[www.JVC.com](http://www.JVC.com)**

Remember to retain your Bill of Sale for Warranty Service.

---

## **Do not service the television yourself**

---


### **Caution**

To prevent electrical shock, do not open the cabinet. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

### **Accessories**

To purchase accessories for your JVC product, please call toll free: 1 (800)882-2345 or on the web at **[www.JVC.com](http://www.JVC.com)**

---

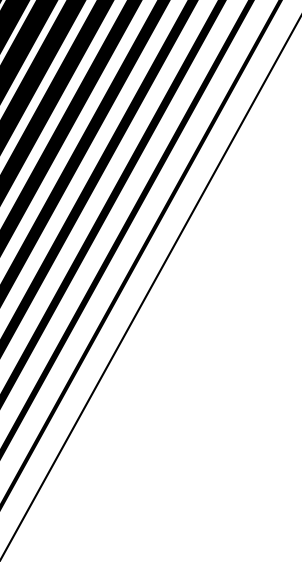

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>