

JVC

AUDIO/VIDEO P


PK

DVD
AUDIO/VIDEO

dts

Warnings, Cautions and Others

Mises en garde, précautions et indications diverses

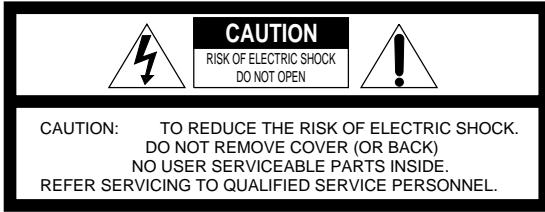

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

For Canada/pour le Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

ATTENTION: POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND

For Canada/pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS", ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMERIQUE DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUE", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:


1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.



Caution — STANDBY/ON button!

Disconnect the mains plug to shut the power off completely (the STANDBY/ON lamp goes off). The STANDBY/ON  button in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights red.
- When the unit is turned on, the STANDBY/ON lamp lights green.

The power can be remote controlled.

Attention — Commutateur STANDBY/ON !

Déconnectez la prise d'alimentation secteur pour mettre l'appareil complètement hors tension (le témoin STANDBY/ON  s'éteint). L'interrupteur STANDBY/ON  , sur n'importe quelle position, ne peut pas déconnecter l'appareil du secteur.

- Quand l'appareil est en mode de veille, le témoin STANDBY/ON est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY/ON est allumé en vert.

L'alimentation peut être télécommandée.

IMPORTANT FOR LASER PRODUCTS IMPORTANT POUR LES PRODUITS LASER

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user service-able parts inside the Unit; leave all servicing to qualified service personnel.
 1. PRODUIT LASER CLASSE 1
 2. **ATTENTION:** Radiation laser visible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
 3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

CAUTION

- Do not block the ventilation openings or holes.
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

ATTENTION

- Ne bloquez pas les orifices ou les trous de ventilation.
(Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.
- N'exposez pas cet appareil à la pluie, à l'humidité, à un égouttement ou à des éclaboussures et ne placez pas des objets remplis de liquide, tels qu'un vase, sur l'appareil.


Table of Contents

Introduction	Page 2
Supplied accessories	2
Notes on handling	3
Important cautions	3
Safety precautions	3
About discs	4
Playable disc types	4
Non-playable discs	4
Audio formats	4
Disc structure	5
Video CDs and SVCDs with Playback Control function	5
Care and handling of discs	5
Getting started	Page 6
Connections	6
Before making any connections	6
To connect to a TV	6
To connect to a stereo audio amplifier/receiver	9
To connect to an amplifier/receiver equipped with 5.1-channel inputs	9
To connect to a digital audio device	10
To connect the power cord	11
Using the remote control unit	12
To install batteries in the remote control unit	12
Remote sensor	12
To use the remote control unit for TV operation	13
To control the volume of a JVC's amplifier or receiver	13
Basic operations	Page 14
Before operation	14
Turning on/off the unit	14
The initial setup before using the unit	15
Basic playback	17
Inserting and removing discs	17
To start playback	18
To stop playback completely	18
To stop playback temporarily	18
Resuming playback	19
To memorize the interrupted position	19
To resume playback	20
Variable speed playback	21
To advance or reverse playback rapidly while monitoring	21
To advance a still picture frame-by-frame	21
To play back in slow-motion	21
To locate the beginning of the scene or song	22
To locate a desired selection using ◀◀ or ▶▶	22
To locate a desired selection using the numeric buttons	23
Other convenient functions	24
To check the playback status	24
To move back the playback position while DVD VIDEO playback [One touch replay function]	25
To change the brightness of the display window	25
Advanced operations	Page 26
Playing from a specific position on a disc	26
To locate a desired scene from the DVD menu	26
To locate a desired scene from the menu of the SVCD/Video CD with PBC	26
To specify a desired title/group	27
To locate a desired position in the current title, group or track [Time search]	28
To locate a desired scene from the display [DIGEST]	29
To select a still picture on a DVD AUDIO disc [PAGE]	30
To play back a bonus group of a DVD AUDIO disc	30
Changing the playback order	31
To play back in the desired order [Program playback]	31
To play back in random order [Random playback]	33
Repeat playback	33
To repeat the current selection or all tracks [Repeat playback]	33
To repeat a desired part [A-B repeat playback]	34


Changing the language, sound and scene angle	35
To select the subtitle language [SUB TITLE]	35
To change the audio language or sound [AUDIO]	36
To select a scene angle of DVD VIDEO [ANGLE]	37
Special picture playback and picture/sound effect	38
To display continuous still pictures [STROBE]	38
To zoom in/out pictures [ZOOM]	39
To adjust the picture character [VFP]	39
To simulate surround sound [3D PHONIC]	40
Checking the sampling frequency and bit rate	41
Menu bar functions	42
To bring up the menu bar	42
Basic operation procedure	42
Menu bar functions for DVD AUDIO	43
Menu bar functions for DVD VIDEO	44
Menu bar functions for SVCD/Video CD/Audio CD	45
MP3 disc playback	Page 47
About MP3 disc	47
Operations	47
Basic operations	47
Selecting the desired Group and Track	48
Direct selection	49
Repeat playback	49
Checking the sampling frequency and bit rate	50
JPEG disc playback	Page 51
About JPEG disc	51
Basic operations	52
To see a desired picture	52
To zoom in/out the picture [ZOOM]	53
To see pictures continuously [slide show mode]	53
To play back pictures from the beginning of the disc	53
Selecting the start point of the slide show	54
Repeat function	55
Changing the initial settings	Page 56
Selecting preferences	56
About the Preference display	56
How to set preferences	56
LANGUAGE page	57
PICTURE page	59
AUDIO page	60
SPK.SETTING page	62
OTHERS page	63
Making fine tuning for your speakers	64
To set the speaker sizes	64
To set the delay time	64
To set the speaker level	65
Limiting playback by children	66
To set Parental Lock for the first time [PARENTAL LOCK]	66
To change the settings [PARENTAL LOCK]	67
To temporarily release the Parental Lock [PARENTAL LOCK]	68
Additional information	Page 69
Names of parts and controls	69
Front panel	69
Display window	69
Rear panel	69
Remote control unit	70
AV COMPU LINK remote control system	71
Connection and setup	71
Operation	71
Troubleshooting	72
Frequently Asked Questions	74
Specifications	75
Appendix A: Country/Area code list for Parental Lock	76
Appendix B: Glossary	77
Appendix C: Index	79

Supplied accessories


- Audio/video cable (Yellow/White/Red) (x 1)

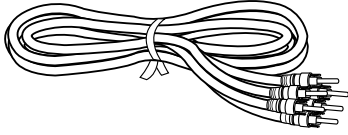

- R6P(SUM-3)/AA(15F) battery (x 2)

 


- Component video cable (Red/Green/Blue) (x 1)

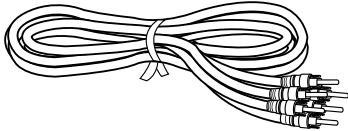


- AC power cord (x 1)

- AC power plug adaptor (x 1)
(for PX model only)


- Audio cable (White/Red) (x 2)

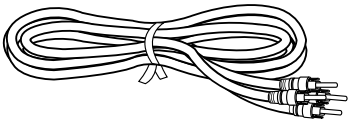

- Remote Control Unit (x 1)

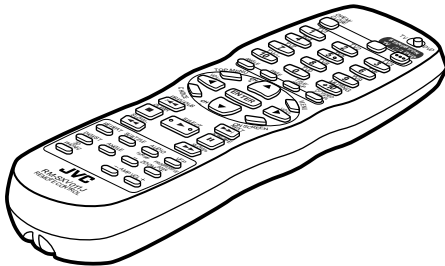

- AV compulink cable (x 1)

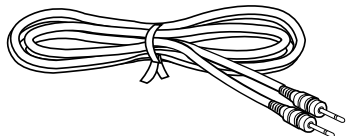

Notes on handling

Important cautions

Installation of the unit

- Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C, 41°F and 95°F).
- Leave sufficient distance between the unit and the TV.
- Do not use the unit in a place subject to vibrations.

Power cord

- Do not handle the power cord with wet hands!
- A small amount of power (2.0 W, for PX model:3.4 W) is always consumed while the power cord is connected to the wall outlet.
- When unplugging the unit from the wall outlet, always pull the plug, not the power cord.

To prevent malfunction of the unit

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the unit.
- Do not use any non-standard shape disc available on the market, because it may damage the unit.
- Do not use a disc with tape, seals, or paste on it, because damage to the unit may result.

Note about copyright laws

- Please check the copyright laws in your country before recording from DVD AUDIO, DVD VIDEO, SVCD, Video CD, Audio CD, MP3 and JPEG discs. Recording of copyrighted material may infringe copyright laws.

Note about the copyguard system

- The DVD VIDEO disc is protected by the copyguard system. When you connect the unit to your VCR (or integrated TV/Video system), the copyguard system activates and the picture may not be played back correctly.

Safety precautions

Avoid moisture, water and dust

Do not place the unit in moist or dusty places.

Avoid high temperatures

Do not expose the unit to direct sunlight or place it near a heating device.

When you are away

When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet.

Do not insert foreign objects into the unit

Do not insert wires, hairpins, coins, etc. into the unit.

Do not block the vents

Blocking the vents may damage the unit.

Care of the cabinet

When cleaning the unit, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

If water gets inside the unit

Turn off the power and remove the plug from the wall outlet, then call the store where you made your purchase. Using the unit in this state may cause a fire or electrical shock.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby," "MLP Lossless" and the double-D symbol are trademarks of Dolby Laboratories.

Confidential unpublished works.

Copyright 1992-1998 Dolby Laboratories. All rights reserved.


Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762, and other world-wide patents issued and pending. "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.



Disc structure


(For DVD AUDIO)

A DVD AUDIO disc is comprised of "groups," and each group is comprised of "tracks." Some DVD AUDIO discs also contain a "bonus group" that can be played back by entering the "key number" (a kind of password). Usually the contents of a "bonus group" are not opened to the public. Note that most DVD AUDIO discs include other information in addition to audio, such as still pictures, movies and text.

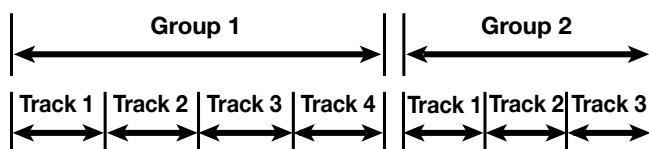


(For DVD VIDEO)

A DVD VIDEO disc is comprised of "titles" and each title may be divided into some "chapters." For example, if a DVD VIDEO disc contains some movies, each movie may have its own title number, and each movie may be divided into some chapters. In a DVD VIDEO KARAOKE disc, each song usually has its own title number and does not have chapters.

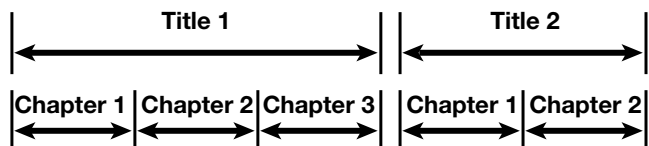

(For SVCD/Video CD/Audio CD)

 An SVCD, Video CD or Audio CD is simply comprised of "tracks."



Video CDs and SVCDs with Playback Control function


What is Playback Control (PBC) function?

The Playback Control function, allows you to enjoy menu-driven operation and high-resolution still images which have a resolution four times greater than moving pictures.

- **High-resolution still image display**
You can display high-quality images four times clearer than moving pictures.

- **Menu-driven playback**


A selection menu is displayed when you start playing an SVCD and Video CD disc with the Playback Control feature. The selection menu shows a list of numbers for selection. Some discs may show moving pictures or a divided screen. You can interact with the screen using a menu display to select and play an entry. See example illustration below about basic feature of menu-driven playback (for details about PBC, see also page 26).

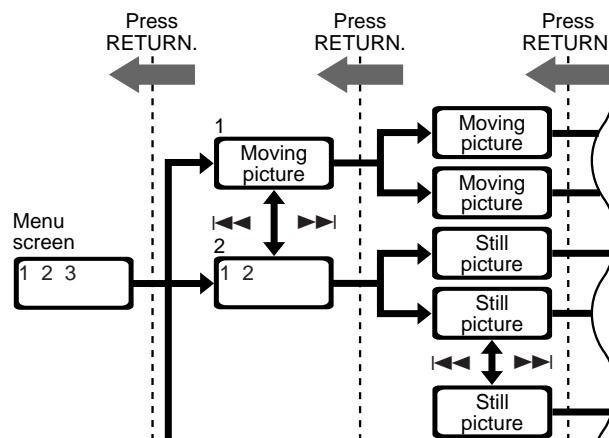

Care and handling of discs

How to handle discs

When handling a disc, do not touch the surface of the disc. Since discs are made of plastic, they are easily damaged. If a disc gets dirty, dusty, scratched or warped, the images and sound will not be picked up correctly, and such a disc may cause the player to malfunction.

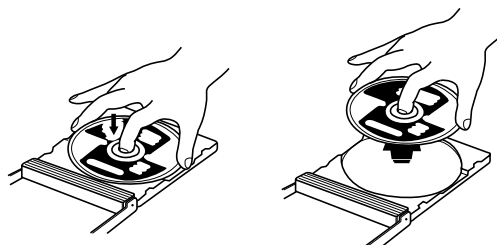

Label side

Do not damage the label side, stick paper to or use any adhesive on its surface.


Storage

Make sure that discs are kept in their cases. If discs are piled on top of one another without their protective cases, they can be damaged. Do not put discs in a location where they may be exposed to direct sunlight, or in a place where the humidity or temperature is high. Avoid leaving discs in your car!

Maintenance of discs

If there are fingerprints or other dirt adhering to a disc, wipe with a soft dry cloth, moving from the center outwards.

If a disc is difficult to clean, wipe with a cloth moistened with water. Never use record cleaners, petrol, alcohol or any anti-static agents.

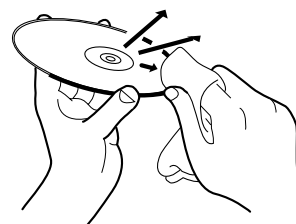

CAUTION


Sometimes during play images may be garbled or noisy. This is sometimes due to the disc.

Connections

*Before using the unit, you have to connect the unit to a TV and/or amplifier.

Before making any connections

- Do not connect the AC power cord until all other connections have been made.
- Connect VIDEO OUT of the unit directly to the video input of your TV. Connecting VIDEO OUT of the unit to a TV via a VCR may cause a monitor problem when playing back a copy-protected disc. You may also have a monitor problem when connecting the unit to an integrated TV/Video system.

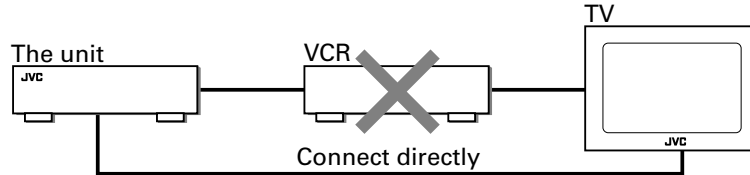

NOTES


- In the following description, "TV" may be substituted with "monitor" or "projector."
- Terminal names used for other components may be different from those used in the following description.

To connect to a TV

Connection to a conventional TV


You can enjoy playback by simply connecting the unit to a TV.

Connect the unit to a TV equipped with stereo audio input and video input jacks using the supplied audio/video cables.

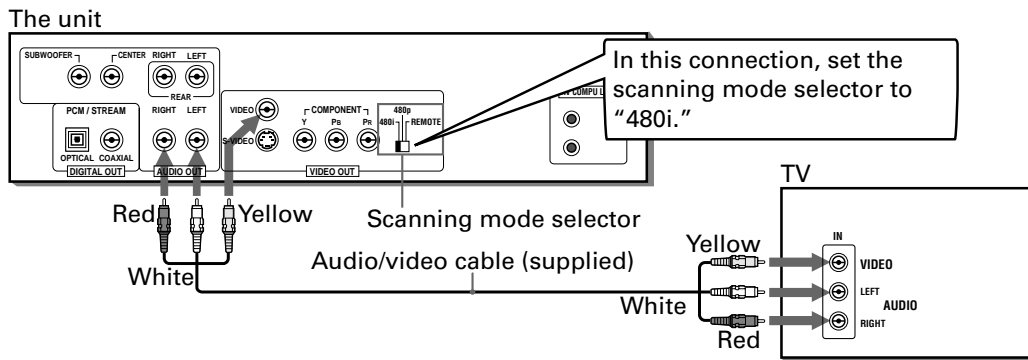

Connection to a TV equipped with an S-video jack

If your TV has an S-video input, you can get better picture quality by connecting it with the S-VIDEO output of the unit using the S-video cable instead of connecting the video input of the TV to the VIDEO jack of the unit.

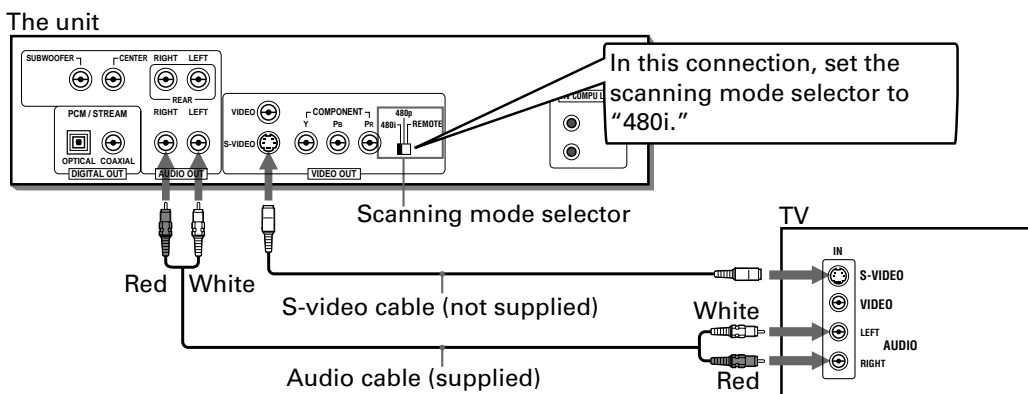

About SCANNING MODE

To display video on the television (monitor) screen, the conventional scanning method is called "Interlaced scanning." With this method, only half of the horizontal lines are displayed at a time. So two fields complete a single picture (frame); i.e., the first field, containing all the odd-numbered lines, is displayed followed by the second field, containing all the even-numbered lines.


On the other hand, the Progressive scanning system scans all horizontal lines at a time, so you can double the number of pictures compared with the interlaced scanning, resulting in flicker-free, high-density picture.

Depending on the material source format, DVD VIDEO discs can be classified into two types; film source and video source (note that some DVD VIDEO discs contain both film source and video source). Film sources are recorded as 24-frame-per-second information, while (NTSC) video sources are recorded as 30-frame-per-second (60-field-per-second interlaced) information.

When the unit plays back a film source material, uninterlaced progressive output signals are created using the original information. When a video source material is played back, the unit interleaves lines between the interlaced lines on each to create the interpolated picture and outputs as the progressive signal.

To make the Progressive scanning mode selection active from the remote control unit

The unit supports the Progressive scanning system as well as the conventional Interlaced scanning system. If your television or monitor supports the progressive video input, you can enjoy a high quality picture by making the Progressive scanning mode active.

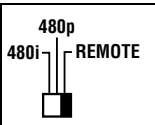

If you want to select the scanning mode between the interlace and progressive modes depending on the source condition or when connecting more than one television, you can select the mode from the remote control unit. To do this, set the scanning mode selector on the rear panel to "REMOTE."


- When the unit is turned on, and the scanning mode selector on the rear panel is set to "REMOTE."

Press and hold down VFP - PROGRESSIVE SCAN for a few seconds.

The scanning mode switches between the Progressive scanning and Interlaced scanning modes.

- When the scanning mode is set to the progressive mode, the PROGRESSIVE indicator on the front panel is lit. Depending on the "PROGRESSIVE MODE" setting on the "PICTURE" preference display and whether the current DVD VIDEO disc is film-source or video-source, the color of the indicator differs, as shown in the table below (see also pages 7 and 59).

Setting of PROGRESSIVE MODE	Source type of DVD VIDEO		Note
	Film Source	Video Source	
VIDEO	Red	Red	While stopped in the Progressive scanning mode, the PROGRESSIVE indicator is lit in red regardless of the "PROGRESSIVE MODE" selection.
FILM	Green	Green	
AUTO	Green	Red	

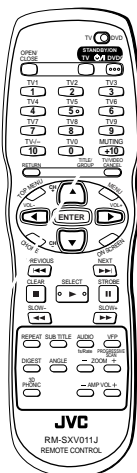


NOTES

- There are some progressive TV and High-Definition TV sets that are not fully compatible with the unit, resulting in the unnatural picture when playing back a DVD VIDEO disc in the Progressive scanning mode. In such a case, use the Interlaced scanning mode. To check the compatibility of your TV set, contact your local JVC customer service center.
- All JVC progressive TV and High-Definition TV sets are fully compatible with the unit (Example : AV-61S902).

To connect to a stereo audio amplifier/receiver

You can enjoy high-quality audio by connecting the unit's audio output to your amplifier or receiver. Connect the unit's AUDIO OUT (LEFT/RIGHT) jacks to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier or receiver.

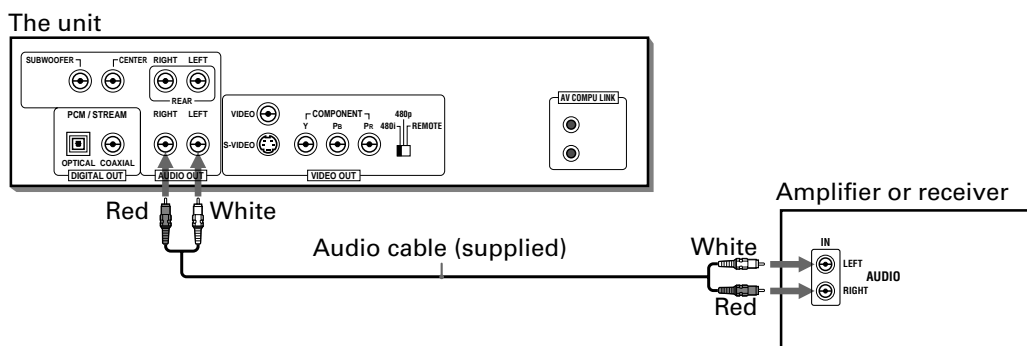

NOTES


- When using the unit with a stereo amplifier or receiver, set "ANALOG OUT" in the "AUDIO" preference display to "2-CH STEREO" (see page 61).
- If your stereo amplifier or receiver has an AV COMPU LINK terminal, you can use the AV COMPU LINK function. See "AV COMPU LINK remote control system" on page 71 for details

To connect to an amplifier/receiver equipped with 5.1-channel inputs

The unit supports the linear PCM multichannel format of DVD AUDIO and can feed multichannel audio output signals from the six analog AUDIO OUT jacks.

It is also equipped with the DTS and Dolby digital decoders. So you can enjoy any type of the high quality surround sounds by connecting the unit to an amplifier/receiver equipped with the 5.1-channel inputs.

Connect the unit's analog AUDIO OUT jacks to the analog 5.1-channel inputs of an amplifier or receiver using the supplied audio cables.

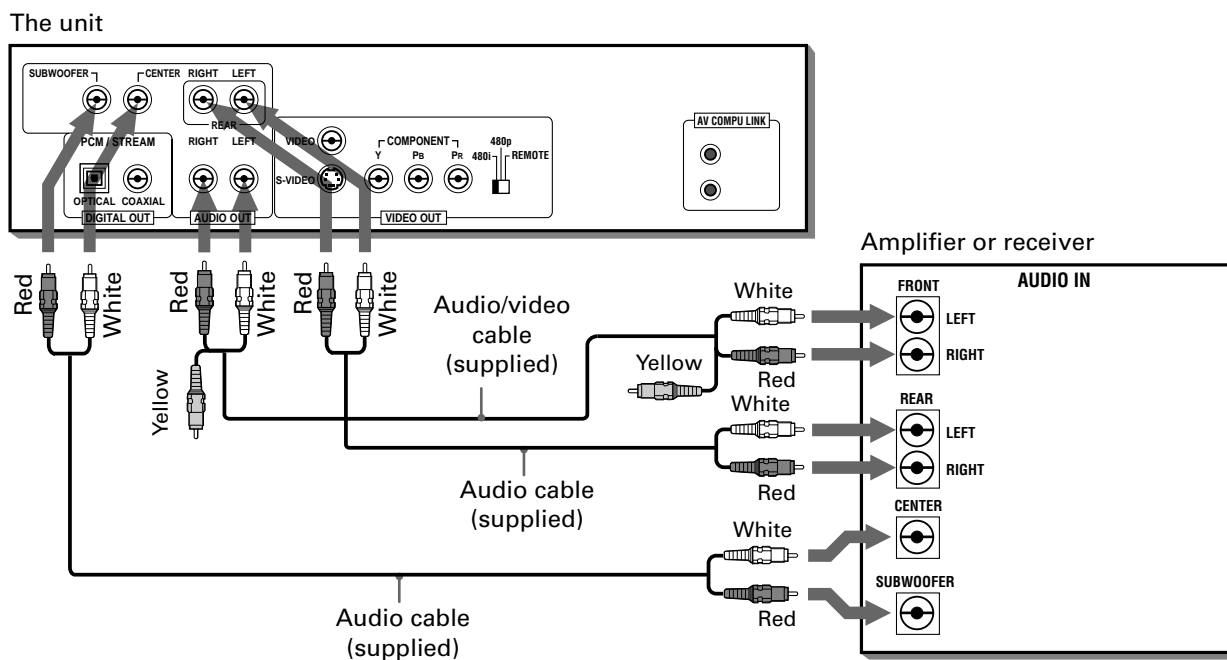


- Be sure to connect correctly between corresponding terminals. The order of the 5.1-channel terminals depend on units.

NOTES

- When using the 5.1-channel outputs of the unit, set the "ANALOG OUT" in the "AUDIO" preference display to "MULTI CHANNEL" (see page 61). If you select "EXPERT" in the "SPK.SETTING" preference display, you can control the audio output balance of the speakers (see page 62).

To connect to a digital audio device

You can enhance the sound quality by connecting either of the unit's DIGITAL OUT jacks to the digital input of an amplifier, etc. by using an optical or a coaxial digital cable (optional). The digital audio signal from a disc is directly transferred. If you connect the unit to a Dolby Digital or DTS decoder or an amplifier with a built-in decoder by using an optional digital cable, you can enjoy high-quality surround sound. For digital connection, connect the unit's DIGITAL OUT (OPTICAL or COAXIAL) to the digital input of digital audio device using an optical or a coaxial digital cable.

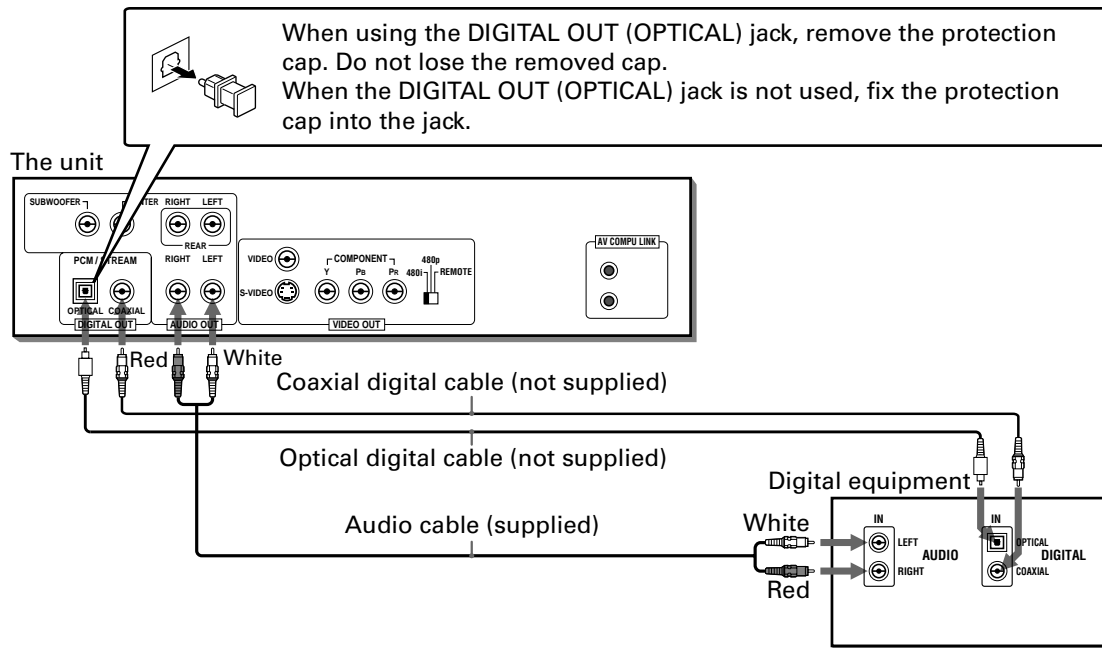

Note that the DIGITAL OUT jacks on the unit have been designed and equipped exclusively for enjoying the digital surround sound playback through the unit. It is not recommended to use the jacks for digital dubbing. When recording the sounds (DVD AUDIO, DVD VIDEO, SVCD, Video CD, or Audio CD) played back on the unit, record them through the analog jacks (in this case, set "ANALOG OUT" in the "AUDIO" preference display to "2-CH STEREO") (see page 61).

NOTES

- When you connect the unit's DIGITAL OUT to a digital audio device, before using, set "DIGITAL AUDIO OUTPUT" in the "AUDIO" preference display correctly according to the connected audio device. If "DIGITAL AUDIO OUTPUT" is not set correctly, loud noise may be generated from speakers, causing damage to them. See "DIGITAL AUDIO OUTPUT" on page 60.
- When you connect the unit's DIGITAL OUT to a Dolby Digital or DTS decoder (or amplifier with a built-in decoder) to enjoy surround sound, the unit's "D. RANGE COMPRESSION" setting in the "AUDIO" preference display is invalid. Make appropriate surround audio settings on the decoder.
- If your digital audio device has an AV COMPU LINK terminal, you can use the AV COMPU LINK function. See "AV COMPU LINK remote control system" on page 71 for details.


When all the audio/video connections have been made, insert the smaller plug of the supplied AC power cord to the



To use the remote control unit for TV operation

You can operate your TV from the remote control unit.

Setting the remote control signal for operating your TV

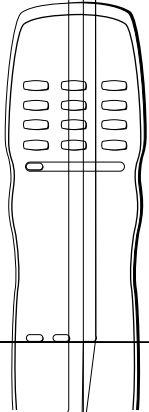

- 1 Set the TV - DVD switch to "TV."
- 2 Hold down TV/VIDEO - CANCEL until step 4 is finished.
- 3 Enter the manufacturer code of your TV listed below by using the numeric buttons (0 to 9).

Example:

To enter the manufacturer code "01": Press "0" then "1."

Hints

- When the "JVC"

- 4 Pre

Manufacturer code list

Manufacturer	No.
A	36
BEIJING	22
CCE	02
CHANGHONG	34
DAEWOO	
FERGUSON	
FINLUX	
FUNAI	
GRADIENT	
GRUNDIG	
HITACHI	
ITT	
JIN	
J	

- 5 Release TV

- 6 Try to open TV STANDBY mode. If your TV does not enter standby mode, the control unit will not work.

The following TV models are supported:

To use ▲/▼/▶/◀/STOP/POWER/CANCEL buttons, set the TV - DVD switch to "TV - DVD".

VIDEO - CANCEL buttons, set the TV - DVD switch to "VIDEO".

Started

Basic operations

In the following description, we assume that the buttons on the remote control unit are mainly used, however, you may use the corresponding buttons on the front panel if available.



NOTE

 



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.

Before operation

Turning on/off the unit

Press DVD STANDBY/ON  on the remote control unit or press STANDBY/ON  on the front panel. When the unit turns on, the STANDBY/ON indicator on the front panel, which illuminates in red during standby, lights in green.

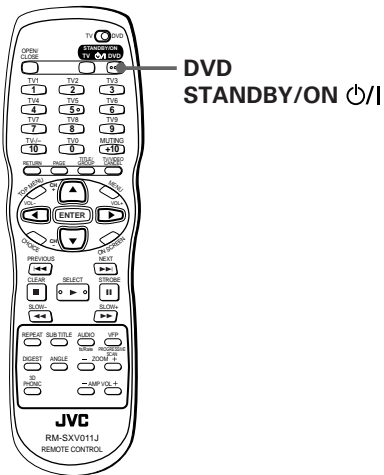

Hints



- You can turn on the unit by pressing the ► button. In this case, the unit starts playback if the disc is set in the disc tray. If no disc is set, "NO DISC" appears on the display window.
- You can turn on the unit by pressing the ▲ OPEN/CLOSE button on the front panel. In this case, the disc tray opens.

The opening display shown right appears on the TV screen. The following message may appear at the bottom of the opening display depending on the condition.

- NOW READING: The unit is reading the disc information.
- REGION CODE ERROR!: The region code of the DVD VIDEO disc does not match the unit. The disc cannot be played back.
- OPEN: The disc tray is opening.
- CLOSE: The disc tray is closing.
- NO DISC: No disc is loaded.
- RESUME STOP: The resume mode is set to "DISC RESUME."

When turning on the unit for the first time, the DVD PLAYER SET UP display automatically appears (see page 15).

NOTE

- Even if you press DVD STANDBY/ON  on the remote control unit or STANDBY/ON  on the front panel to turn off the unit, the unit is not disconnected from the AC power source as long as it is connected to the wall outlet. This state is called the standby mode. In this state, the unit consumes a very small amount of power.

7 Press ENTER.

The pull-down menu of the "DIGITAL AUDIO OUTPUT" appears.



DIGITAL AUDIO OUTPUT selection

8 Use ▲/▼ to select a desired digital output signal type.

You must set this item correctly when you connect the unit to an external surround decoder or D/A convertor (including an

Basic playback

This section describes basic operations for playback of discs. For MP3 and JPEG disc playback, see the separate chapter.

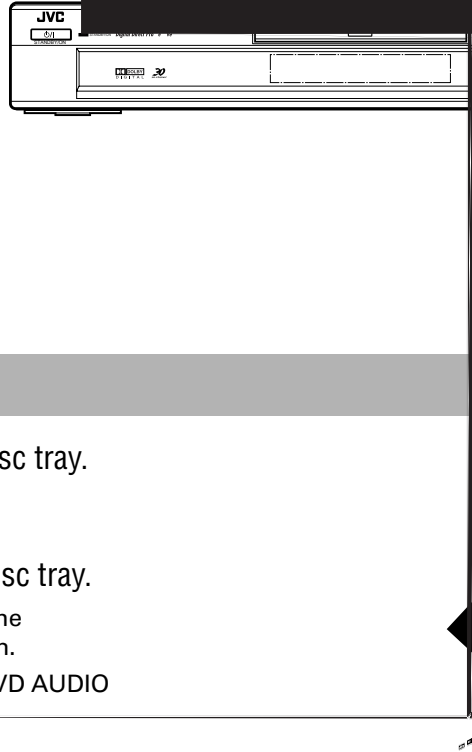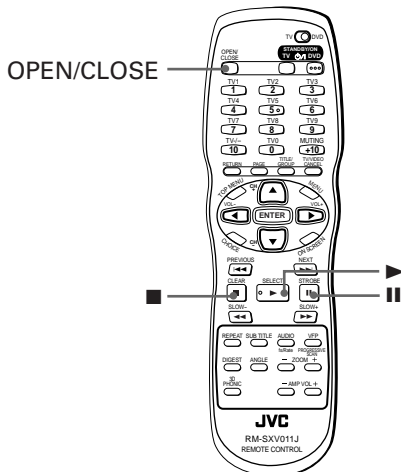

Inserting and removing discs

- 1 Press **▲** OPEN/CLOSE to open the disc tray.
- 2 Place a disc in the tray.
- 3 Press **▲** OPEN/CLOSE to close the disc tray.

The unit reads the disc information and the opening display appears on the TV screen.

When a DVD AUDIO disc is loaded, the DVD AUDIO indicator lights in blue.

With the label side up



- To insert an 8-cm disc, place it in the inner recess.



If a menu is shown on the TV screen

When inserting a DVD AUDIO, DVD VIDEO, SVCD, or Video CD disc, a menu display may be automatically shown on the TV screen. From a menu, you can select a desired item to be played back by following the procedure below.

(for DVD AUDIO/DVD VIDEO)

- 1 Use **▲/▼/◀/▶** to select a desired item.
- 2 Press ENTER.

The unit starts playback of the selected item.

(for SVCD/Video CD)

Use the numeric buttons to select a desired item.
The unit starts playback of the selected item.

NOTES

- Do not load a non-playable disc. For details about playable and non-playable disc types, see page 4.
- When loading a disc on the tray, be sure to position the disc inside the recess. Otherwise, the disc may be damaged when the tray is closed, or the disc may not be removed from the unit.
- Do not use any stabilizer when playing back a disc.
- With some DVD VIDEO discs, the unit starts playback automatically after inserting the disc.
- If you insert a DVD VIDEO disc whose region code does not match the unit, "REGION CODE ERROR!" is shown in the opening display. For detail about the region code, see page 4.

To start playback

Available :     

Press ►.

The unit starts playback from the beginning.



About screen saver function

- A television monitor screen may be burned out if a static picture is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.
- Pressing any buttons on the unit or the remote control unit will release the screen saver function and return to the previous display.
- You can also turn off the screen saver function (see page 60).

While the screen saver function is not activated








 
 



While the screen saver function is activated



About On-screen guide icons

- When you make an operation, you may see the following icons displayed over the picture for about 3 seconds. These have the following meanings.

You can set the unit not to display these icons below via the preference settings described on page 63.

Icon	Status
	Appears at the beginning of playback mode.
	Appears at the beginning of pause mode.
	Appears at the beginning of fast forward/backward playback with the current speed (see page 21).
	Appears at the beginning of slow-motion playback with the current speed (see page 21).
	Appears at the beginning of Repeat playback mode (see page 33).
	Appears at the beginning of a scene recorded from multiple angles (see page 37).
	Appears at the beginning of a scene recorded with multiple audio languages (see page 36).
	Appears at the beginning of a scene recorded with multiple subtitle languages (see page 35).
	Appears when the unit does not accept your operation because of disc contents, structure, playback status etc. Note that some operations are occasionally unacceptable even if  is not displayed. (This icon appears even when ON SCREEN GUIDE in the preference display is set to OFF.)

NOTES

- When the RESUME function is "ON" or "DISC RESUME" and the resume point is memorized, pressing ► starts playback from that point instead of the beginning. See page 20.
- During playback, the display window shows the title/chapter, group/track, or track number being played.
- During DVD VIDEO playback, pressing ► moves back the playback position 10 seconds before the current position. See page 25 for details.

To stop playback completely

Available :     

Press ■.

The unit stops playback.



- If you press ▲ OPEN/CLOSE during playback, the unit stops playback and opens the disc tray.

To stop playback temporarily

Available :     

Press ■■.

The unit pauses playback. To resume playback, press ►.

Resuming playback

The unit can memorize the position on a disc where you interrupt playback, and resume playback from that position later. There are two resume modes (DISC RESUME and ON) you can set on the preference display. See page 63 for details about how to set the resume mode.



- When purchasing the unit, the resume mode is initially set to "ON".
- You can deactivate the resume mode by setting "RESUME" on the "OTHERS" preference display to "OFF".

- During playback

When the resume mode is set to "DISC RESUME"

Press ■.

The unit stops playback and memorizes the interrupted position. After pressing ■, the display window on the front panel shows "----RESUME."

In this condition, a memory of the interrupted position is not cleared if you press ▲ OPEN/CLOSE to open the disc tray, or press DVD STANDBY/ON on the remote control unit or STANDBY/ON on the front panel to turn off the unit.



- The position interrupted is also memorized by pressing OPEN/CLOSE, DVD STANDBY/ON on the remote control unit or ▲ OPEN/CLOSE, STANDBY/ON on the front panel. In this case, "----RESUME" is not shown on the display window.
- If you do not want the disc played to resume playback, press ■ while stopped.
- It memorizes positions for the last 30 discs.
- If you interrupt playback of a disc which you resumed playback, the memory is updated to store the new interrupted position.
- When the unit has already memorized positions for 30 discs, memo

When the resume mode is set to "DISC RESUME"

- While stopped, or no disc is inserted

1 Press ▲ OPEN/CLOSE to insert a disc whose interrupted position is memorized.

After loading the disc, the display window on the front panel shows "----RESUME" and "RESUME STOP" appears at the bottom of the opening display.

If a disc for which you want to resume playback is already set in the disc tray, you need not to follow this step.

2 Press ►.

The display window shows "RESUME PLAY" and the unit resumes playback from the position you interrupted playback.

The unit keeps the memory for the position on a disc where you interrupted playback, even though you remove the disc from the disc tray and set it back again.

Of course, the unit keeps the memory when the disc remains in the disc tray since the last playback.

- **To play back a disc from the beginning (instead of the interrupted position)**

After loading the disc, press ■ before pressing ► to start playback.

Pressing ■ while the disc is stopped clears the memory for the interrupted position.

Every time you interrupt playback, the position is memorized as the "resuming" point.

When the resume mode is set to "ON"

- While the disc you interrupted playback last time* is still on the disc tray (*by pressing ■).


Press ►.

The unit resumes playback from the position you interrupted playback.

If you press ► then ■

Variable speed playback

You can play back slowly or fast, or advance a picture frame by frame.

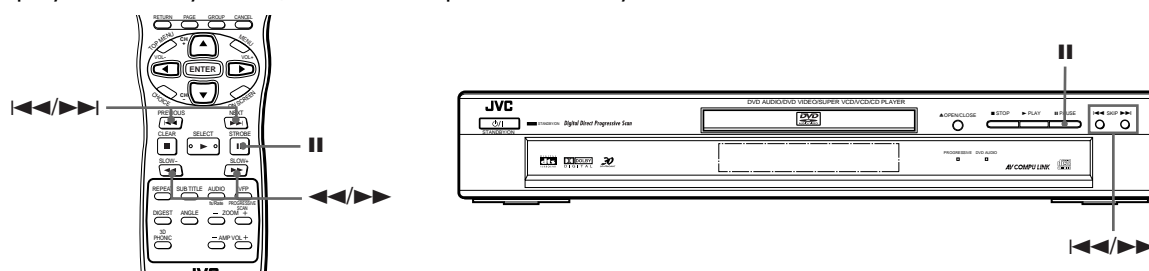

To advance or reverse playback rapidly while monitoring

Available : **DVD AUDIO** **DVD VIDEO** **Super VCD** **Video CD** **Audio CD**

- During playback

Method 1 (from the remote control unit only)

Press ◀◀ or ▶▶.

Each press of ◀◀ or ▶▶ increases the playback speed. You can select the speed among 2 x, 5 x, 10 x, 20 x and 60 x the normal speed.

Pressing ▶ returns the unit to normal playback.

Method 2

Hold down ◀◀ or ▶▶.

Holding down ▶▶ advances playback rapidly, while holding down ◀◀ reverses playback rapidly at five times the normal speed. Releasing the button returns the unit to normal playback.

NOTES

- During this operation, the sound is muted except when a DVD AUDIO and an Audio CD are played back. When playing back them in this function, the sound will come out discontinuously.
- This function does not work for an MP3 disc.

To advance a still picture frame-by-frame

Available : **DVD VIDEO** **Super VCD** **Video CD**

- While paused (still)

Press ⏸.

Each time you press ⏸, the still picture advances to the next frame.

Pressing ▶ returns to normal playback.

To play back in slow-motion

Available : **DVD VIDEO** **Super VCD** **Video CD**

You can play back the picture in slow-motion. The speed can be selected among 1/32 x, 1/16 x, 1/8 x, 1/4 x and 1/2 x the normal speed.

- During playback

Press ⏸, then use ◀◀/▶▶.

To play forward slow-motion, press ▶▶, and to play reverse slow-motion (for DVD VIDEO discs only), press ◀◀.

First, the unit plays the slowest speed, and each time you press the button, the playback speed increases.

Pressing ▶ returns to normal playback. Pressing ⏸ pauses slow-motion playback.

NOTES

- The sound is muted during slow-motion playback.
- Reverse slow-motion playback is not possible for an SVCD and Video CD.



You
Auc



or SVC



To locate

Available for DVD VIDEO, VIDEO, VCD

- For DVD VIDEO: During playback or while stopped
- For DVD VIDEO with PBC: During playback
- For SVCD/Video CD: During playback without PBC function

Press **◀◀** or **▶▶**.

With a DVD AUDIO, pressing the button skips a group or track depending on the disc configuration. With DVD VIDEO, pressing the button skips a chapter or title depending on the disc configuration. With an SVCD, Video CD, or Audio CD, pressing the button skips a track.

The selection number appears in the display window on the front panel.

- To skip forward titles/chapters/groups/tracks, press **▶▶** as many times as required.
- To skip to the beginning of the current titles/chapters/groups/tracks, press **◀◀** once.
- To skip back titles/chapters/groups/tracks, press **◀◀** as many times as required.

Do not use this function with some DVD VIDEO discs.

This function does not work during SVCD/Video CD playback with PBC function (see pages 5 and 26).

To locate a desired selection using the numeric buttons

Available :     

- For DVD AUDIO/DVD VIDEO/Audio CD: During playback or while stopped
- For SVCD/Video CD: During playback without PBC function or while stopped

Use the numeric buttons to specify the number.

Depending on the disc type and the unit status, what is specified differs.

Unit status	Disc type	What is specified
While stopped	DVD AUDIO	group or track* ¹
	DVD VIDEO	title or chapter* ²
	SVCD/Video CD/Audio CD	track
During playback	DVD AUDIO	track
	DVD VIDEO	chapter
	SVCD/ Video CD/Audio CD	track

- *¹ Pressing the numeric buttons simply selects a track. To select a group (When a disc contains more than one group), press TITLE/GROUP before pressing the numeric buttons.
- *² Pressing the numeric buttons simply selects a chapter when a disc contains only one title, or selects a title when a disc contains more than one title.

The selected title, group or track number appears in the display window on the front panel.

- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.

Examples:


To select 13: +10 → 3

To select 34: +10 → +10 → +10 → 4

To select 40: +10 → +10 → +10 → 10


The unit starts playback from the beginning of the selection. The selected title, chapter, group or track number appears in the display window on the front panel.

NOTES

- You can also specify the desired title during DVD VIDEO playback. See page 27 for details.
- During DVD AUDIO/DVD VIDEO playback, if a menu is shown on the TV screen, the numeric buttons may be used for selecting an item in the menu.
- When  appears on the TV screen:
The title, chapter, group or track you have selected is not contained in the disc.
- This function does not work during SVCD/Video CD playback with PBC function (see pages 5 and 26).

Other convenient functions

You can check the playback status, as well as change the brightness of the display window. Also, you can move back the playback position 10 seconds from the current position.

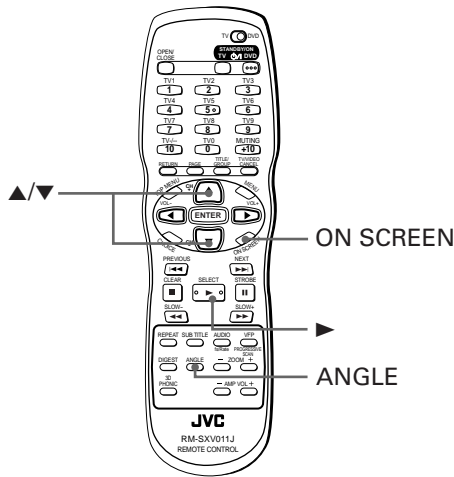

Basic operations

To check the playback status

Available : **DVD AUDIO** **DVD VIDEO** **Super VCD** **Video CD** **Audio CD**


You can see the current selection number (the group/track number for DVD AUDIO, the title/chapter number for DVD VIDEO or the track number for SVCD/Video CD/Audio CD), time information (the track, group or chapter time while stopped, or the elapsed track, group or chapter time during playback) and the transport status (stop, playback, pause etc.) on the TV screen.

- During playback or while stopped


Press ON SCREEN.

The playback status bar appears on the TV screen.


(for DVD AUDIO)

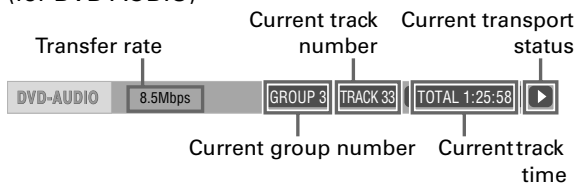


(for DVD VIDEO)

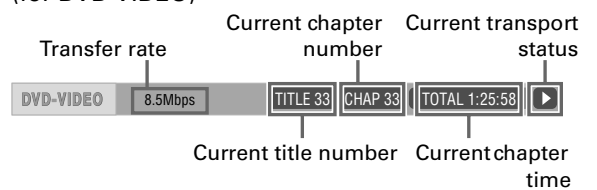


(for SVCD)

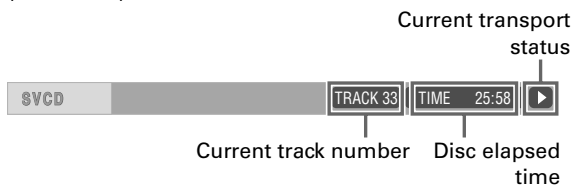



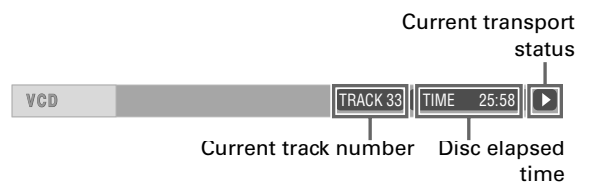


(for Video CD)

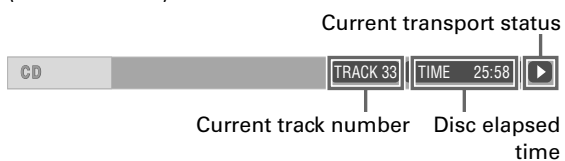

(for Audio CD)



The indication on the right most of the status bar shows the unit's transport status as follows:

Icon	Status
	Appears in the playback mode.
	Appears in the stop mode.
	Appears in the pause mode.
	Appears in the fast forward/backward playback mode.
	Appears in the slow-motion playback mode.

Note that pressing ON SCREEN again brings up the menu bar under the status bar, from which you can access various functions.

(Example of the menu bar for DVD VIDEO)




See page 42 for details about the menu bar.

NOTES

- **To dismiss the status bar:**
Press ON SCREEN until the status bar is dismissed.
- **The status bar cannot be displayed during MP3/JPEG playback.**

To move back the playback position while DVD VIDEO playback [One touch replay function]

Available : 


During playback of a DVD VIDEO disc, you can move back the playback position 10 seconds from the current position.

- During DVD VIDEO playback


Press .

The playback position moves back 10 seconds before the current position.

Note that this function works only in the same title, though it works between chapters.



If you press  within 10 seconds from the beginning of a title, playback starts from the beginning of the title.

NOTES

- **This function works only with DVD VIDEO discs.**
- **When  appears on the TV screen:**
Some DVD VIDEO disc may not accept this function because of disc contents.

To change the brightness of the display window

You can dim the brightness of the display window.

Press  or  while holding down ANGLE.

You can select the brightness of the display window from among three levels. Each time you press the button, the brightness changes among low, middle, high, and off.

Advanced operations

This chapter describes operations for various advanced functions of DVD AUDIO, DVD VIDEO, SVCD, Video CD and Audio CD discs. For MP3 and JPEG disc playback, see the separate chapters on and after pages 47 and 51.

NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶, numeric and TV/VIDEO - CANCEL buttons for controlling the unit.


Playing from a specific position on a disc

You can play a disc from the selected track, title, group or chapter, or from the specified time.

To locate a desired scene from the DVD menu

Available :

DVD AUDIO/DVD VIDEO discs generally have their own menus which show the disc contents. These menus contain various items such as titles of movies, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene by using the DVD menu.

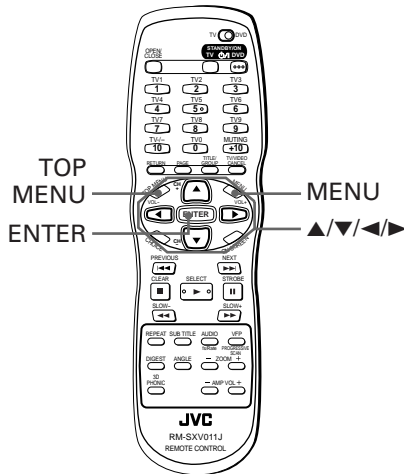


- Whenever a DVD AUDIO/DVD VIDEO disc is loaded

1 Press TOP MENU or MENU.

The menu appears on the TV screen.

Example:

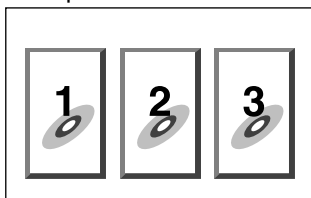

About DVD menu

Normally, a DVD AUDIO disc which contains more than one group may have a "top" menu which lists the groups. Similarly, a DVD VIDEO disc which contains more than one title may have a "title" menu which lists the titles. In such a case, the menu appears on the TV screen by pressing the TOP MENU button. Some DVD AUDIO/DVD VIDEO discs may also have a different menu which appears by pressing the MENU button.

See the instructions of each DVD AUDIO/DVD VIDEO disc for its particular menu.

2 Use ▲/▼/◀/▶ to select a desired item, then press ENTER.

The unit starts playback of the selected item.



- With some discs, you can also select items by entering the corresponding number using the numeric buttons, which may cause the unit to automatically start playback.


NOTES

- When appears on the TV screen by pressing TOP MENU or MENU in step 1:
The disc does not have an appropriate menu listing the titles or groups.
- The MENU button does not work while stopped.

To locate a desired scene from the menu of the SVCD/Video CD with PBC

Available :

Some SVCD/Video CD discs support the PBC function. PBC is an abbreviation of "PlayBack Control." An SVCD/Video CD disc recorded with PBC has its own menus, such as a list of the songs of the disc. You can locate a specific scene by using the PBC menu.

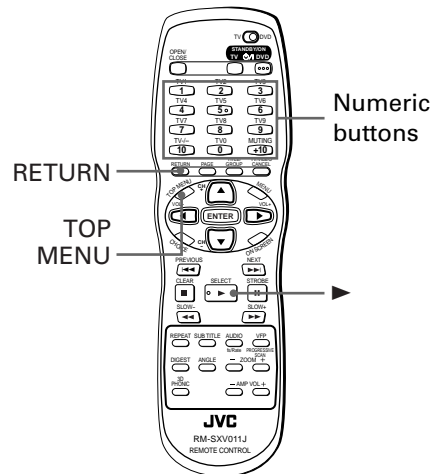


- When an SVCD/Video CD disc with PBC is stopped

To locate a desired position in the current title, group or track [Time search]

Available : **DVD AUDIO** **DVD VIDEO** **Super VCD** **Video CD** **Audio CD**

You can play a disc from the desired position by specifying the elapsed time from the beginning of the current group (for DVD AUDIO), the current title (for DVD VIDEO) or the disc (for SVCD/Video CD/Audio CD) using the time search function.

Note that some DVD VIDEO discs do not contain time information, and the time search function cannot be used.

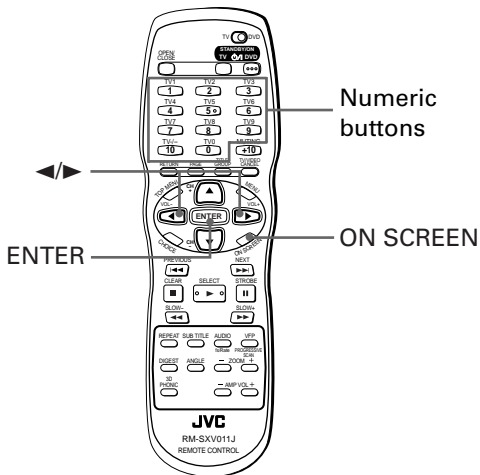

- For DVD AUDIO/DVD VIDEO/Audio CD:
During playback or while stopped
- For SVCD/Video CD:
In any condition except SVCD/Video CD playback with PBC

 
1 Press ON SCREEN twice.

The menu bar appears on the TV screen.
(See page 42 for details about the menu bar.)


2 Use ◀/▶ to move to , then press ENTER.

The pull-down menu for entering time appears under the .

(Screen example for DVD VIDEO)



(Screen example for Audio CD)

 

3 Use the numeric buttons (0 to 10) to enter the desired time.

The specified time is displayed in the pull-down menu.

Hints


- "10" button works as "0" and "+10" button is not used with this function.
- You can specify the time in hour/minute/second format for DVD AUDIO/DVD VIDEO discs, and in minute/second format for SVCD/Video CD and Audio CD discs.

4 Press ENTER.

The unit starts playback from the specified time.


• Example (for DVD AUDIO/DVD VIDEO)

To play back from 2(H):34(M):00(S)

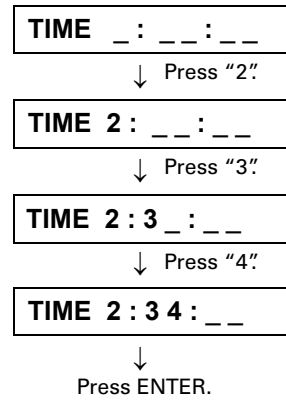

• Example (for SVCD/Video CD/Audio CD)

To play back from 23(M):40(S)

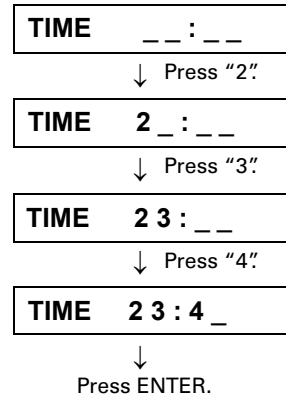


You do not have to press "0" to enter the trailing zeros (for the last two digits in the example above).

• When you correct a mistake


Use ◀ repeatedly to move back to the digit where you entered a undesired numeral (the leftmost "-" digit), and reenter the correct time.

(Example for changing "2:35:_" to "2:34:_.")

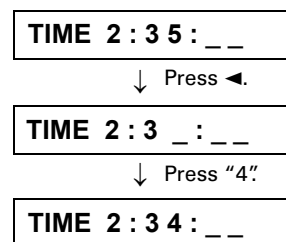




To select a still picture on a DVD AUDIO disc [PAGE]

Available : 

Most DVD AUDIO discs include still pictures, which usually appear in turn automatically during playback according to the playback sequence. However, there are other page(s) of the current still picture and you can change the picture (turn the page) manually.

Hints


- At the beginning of a part where there are selectable pictures, "PAGE" appears on the TV screen (except when the "ON SCREEN GUIDE" preference is set to "OFF"). See page 63 for details about "ON SCREEN GUIDE" preferences.

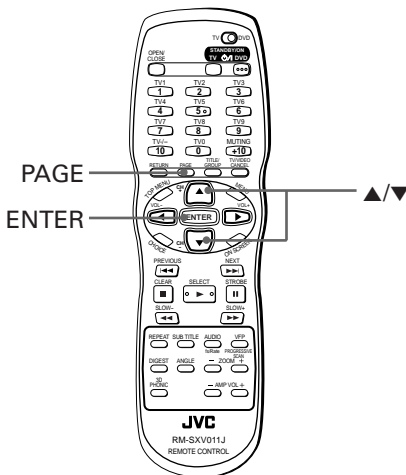

- During playback (except when the status bar is shown)

1 Press PAGE.

The Page selection window appears on the TV screen.

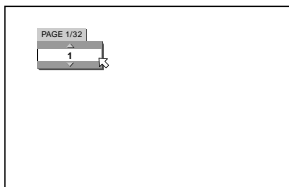

2 Use PAGE or ▲/▼ to select the desired page.

Each time you press PAGE or ▲/▼, the page number changes.


3 Press ENTER.

The selected page (picture) is shown. The Page selection window is dismissed.

NOTE

- The Page selection window will automatically disappear if you do not change the page for several seconds.
- You can also select the page via the menu bar. See page 44.


To play back a bonus group of a DVD AUDIO disc

Available : 

Some DVD AUDIO discs contain a special group called "bonus group" whose contents are not opened to the public. The bonus group is always assigned to the last group of a disc (for example, if a disc contains four groups including a bonus group, "group 4" is the bonus group).

To play back a bonus group, you have to enter the specific "key number" (a kind of password) for the bonus group. A way of getting the key number depends on discs.

After getting the key number, you can play back the bonus group by the following procedure.

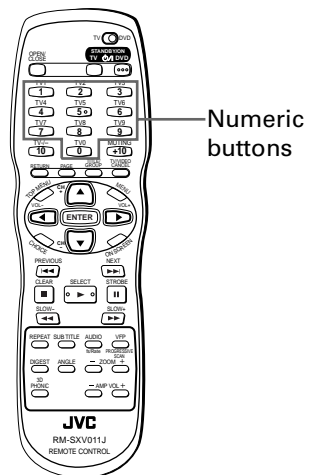

- While a disc containing a bonus group is stopped


1 Use the numeric buttons to select the bonus group number (the last group).

The display window and on-screen display prompt you to enter the key number as shown below.

(Display Window)



(TV screen)

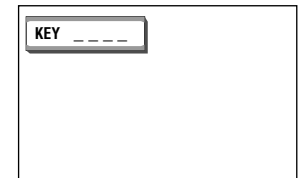

2 Use the numeric buttons (0 to 9) to enter the key number.

If you enter the key number correctly, the unit starts playback of the bonus group.

If you enter a wrong key number, the unit does not start playback and the display window and TV screen again prompt you to reenter the key number.

4 a (for DVD AUDIO)

Specify selections in the desired order by group and track numbers using the numeric buttons.

- For each program step, using the numeric buttons, specify a group first, then specify a track.
- For example, to specify "track 14 in group 2," Press 2 → +10 → 4.

4 b (for SVCD/Video CD/Audio CD)

Specify tracks in the desired order using the numeric buttons.


- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.

Examples:

- To select 13: +10 → 3
- To select 34: +10 → +10 → +10 → 4
- To select 40: +10 → +10 → +10 → 10

Up to 99 tracks can be programmed. You may select the same track more than once. The total program time is shown at the right top of the program table.

(Program table example for DVD AUDIO)

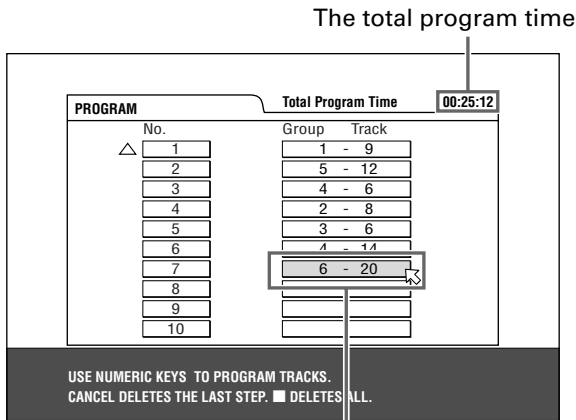

- **If you specify a wrong track**
Use ▲/▼ to move to the wrong track, then press TV/VIDEO - CANCEL. The track is erased and the subsequent programmed tracks move up.
- **To clear the program while programming**
Press ■.

5 Press ► to start program playback.

With a DVD AUDIO/SVCD/Video CD disc, the program table is automatically dismissed when the program playback starts.

With an Audio CD disc, the program table remains on the TV screen during program playback. However, pressing the ON SCREEN button brings up the status bar.

When all of the programmed tracks have finished playback, the unit stops and the program table appears again.

Note that the program remains.

- **To check the program contents**
During playback, press ■. Playback stops and the program table is shown.
When the unit is playing back an Audio CD and the program table is not shown, you can bring up the table by carrying out steps 1 to 3.
During DVD AUDIO/SVCD/Video CD playback, you cannot see the program table during playback.
- **To quit program playback**
Press ■. Note that the program remains.
- **To clear the program**
While stopped and the program table is shown on the TV screen, press ■.
All the programmed tracks are erased.
- **To exit the program mode**
After clearing all programmed tracks, press ON SCREEN.
The program table is dismissed and the status bar appears on the TV screen.
The PROGRAM indicator in the display window disappears and the unit quits program playback mode.

NOTES


- During program playback, you cannot edit the program contents.
- During program playback, pressing ►| skip to the next selection of the program. Pressing |◀ returns to the beginning of the current selection.
- If you are going to program a track in the bonus group of a DVD AUDIO, the unit will ask you to enter the key number for the bonus group (see page 30).
- **To dismiss the program table:**
Press ON SCREEN. The program table is dismissed and the status bar is shown.
- **To dismiss the menu bar (and the status bar):**
Press ON SCREEN.

Playback

back of the current group or track (for DVD VIDEO) or chapter (for DVD VIDEO) or track (for SVCD/Video CD/Audio CD). Repeat playback of a desired part.

Repeat playback of current selection or all tracks [DVD VIDEO]

Available : **DVD AUDIO** **DVD VIDEO** **Super VCD** **Video CD** **Audio CD**

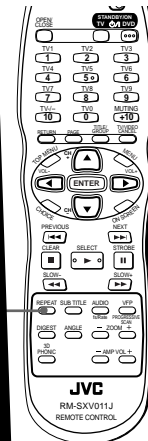


DVD VIDEO:
 During playback or while stopped
Audio CD:
 In any condition except SVCD/
 Video CD playback with PBC

Press REPEAT, the repeat mode is selected. All repeat, Repeat 1 and off. The selected mode by icons in the display window on the front panel as below. When REPEAT while stopped, you need to press REPEAT to start repeat playback.

When the current group for DVD AUDIO, current title for DVD VIDEO, or all tracks for SVCD/Video CD/Audio CD. When the current track for DVD VIDEO/Video CD/Audio CD or the current chapter for DVD VIDEO.

 Repeat mode is off.



Repeat mode indicators

When a window for repeat mode is displayed. You can check the current repeat mode in the window. The icon on the window is the same as the icon on the menu bar (see pages 43, 44 and 45). (Repeat mode indication window.)

To stop repeat playback

Press **■**.
 When a DVD AUDIO, SVCD, Video CD or Audio CD disc is set, the unit stops playback but does not quit the repeat mode.
 When a DVD VIDEO disc is set, the unit stops playback and quits the repeat mode.

To quit repeat playback

Press REPEAT until the repeat mode indicator goes off in the display window.


NOTES

- You can also select the repeat mode via the menu bar. See pages 43, 44 and 45.
- When the program playback mode is active with a DVD AUDIO, SVCD, Video CD or Audio CD, the repeat mode changes in the same manner. Note that, however, in the "⏮" mode the unit repeats all the programmed tracks, instead of all tracks on the disc.
- During playback in the title/chapter/group/track repeat mode, if you skip the title/chapter/group/track using ⏮/⏭, etc., the destination title/chapter/group/track is repeated.
- If ⏮ appears when pressing REPEAT during DVD VIDEO playback You cannot repeat the title or chapter because of the disc contents.
- Repeat playback function cannot be used during SVCD/Video CD playback with PBC function.

Advanced operations

To repeat a desired part [A-B repeat playback]

Available : **DVD AUDIO** **DVD VIDEO** **Super VCD** **Video CD** **Audio CD**

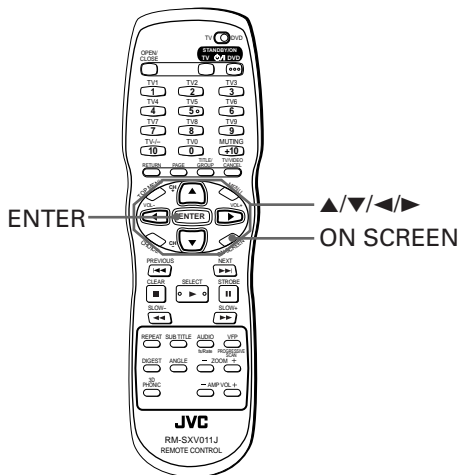

• During playback except SVCD/Video CD playback with PBC

- Press ON SCREEN twice.
 The menu bar appears on the TV screen. (See page 42 for details about the menu bar.)
- Use ⏮/⏭ to move **⏮** to **⏮**, then press ENTER.
 The pull-down menu for repeat mode selection appears under the **⏮**.

3 Use ▲/▼ to select "A-B."

Depending on the disc type and unit's status the repeat mode changes as follows:

• During DVD AUDIO playback



 
- Selected repeat mode
- TRACK : current track repeat
 - GROUP : current group repeat
 - A-B : repeats a desired part (during playback only)
 - OFF

• During DVD VIDEO playback




- Selected repeat mode
- CHAPTER : current chapter repeat
 - TITLE : current title repeat
 - A-B : repeats a desired part (during playback only)
 - OFF

• During SVCD/Video CD/Audio CD playback (Screen example for Audio CD)



- Selected repeat mode
- TRACK : current track repeat
 - ALL : all track repeat
 - A-B : repeats a desired part (during playback only)
 - OFF

4 Press ENTER at the beginning of the part you want to repeat (point A).

 
The pull-down menu turns off.
The repeat icon shows .

(Screen example for DVD VIDEO)



Repeat icon

5 Press ENTER at the end of the part you want to repeat (point B).



The repeat icon shows .

The unit locates "A" and starts repeat playback between "A" and "B."


• To quit A-B repeat playback

 Press ENTER. The A-B repeat mode turns off, while the playback continues.



- Selecting "OFF" from the pull-down menu for repeat mode selection, or pressing  quits the A-B repeat mode and continues playback.
- You can also stop and quit the A-B repeat mode by pressing .

NOTES

- **The A and B points must be set in the same title/ chapter/group/track.**
- **To dismiss the menu bar:**
Press ON SCREEN.
- **If  appears when pressing ENTER during DVD VIDEO playback**
You cannot repeat the selected portion because of the disc contents.

Changing the language, sound and scene angle

English

With some DVD AUDIO/DVD VIDEO discs, you can choose a desired subtitle language and/or audio language/sound, as well as a desired camera angle. Some DVD AUDIO discs support more than one audio language/sound, with some DVD VIDEO discs support more than one subtitle language and/or audio language/sound.


Similarly, you can choose a desired audio channel (or channel combination) of an SVCD/Video CD disc, as well as a subtitle channel of an SVCD disc.


To select the subtitle language [SUB TITLE]

Available :   

Some DVD AUDIO, DVD VIDEO and SVCD discs for movies, guides, etc. contain more than one subtitle language. You can choose a desired one from them.




- At the beginning of the part where the subtitle(s) is(are) recorded,  appears on the TV screen (except when the "ON SCREEN GUIDE" preference is set to "OFF"). See page 63 for details about "ON SCREEN GUIDE" preference.

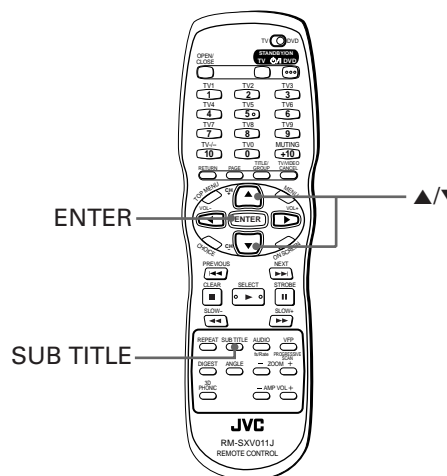

- During DVD AUDIO/DVD VIDEO/SVCD playback (except when the status bar is shown)


1 Press SUB TITLE.

The Subtitle selection window appears on the TV screen.

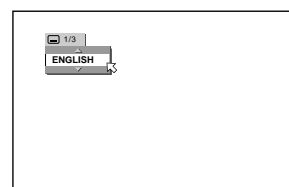

For SVCD/Video CD


Each time you press AUDIO-fs/Rate or ▲/▼, the playback audio changes as follows.

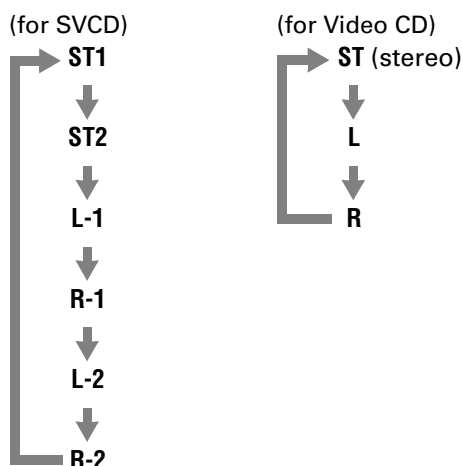


3 Press ENTER.

You can hear the selected audio.
The audio selection window is dismissed.

NOTES


- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Table of languages and their abbreviations" on page 58.
- The Audio selection window will automatically disappear if you do not change the audio for several seconds.
- When  appears on the TV screen (for a DVD AUDIO/ DVD VIDEO disc):
You cannot select the audio.
- If only one audio sound is recorded, you cannot select the audio.
- You can also select the audio via the menu bar. See pages 44, 45 and 46.


To select a scene angle of DVD VIDEO [ANGLE]

Available : 

You can enjoy a variety of scene angles if the DVD VIDEO disc contains "multi-angle" parts, where multiple cameras were used to shoot the same scene from different angles.

Hints

- At the beginning of a "multi-angle" part,  appears on the TV screen (except when the "ON SCREEN GUIDE" preference is set to "OFF"). See page 63 for details about "ON SCREEN GUIDE" preference.

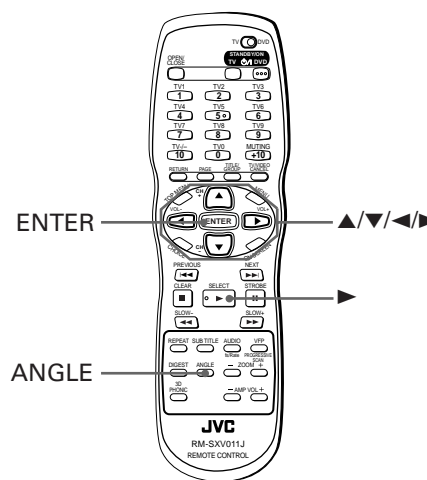


From Angle selection window

- During DVD VIDEO playback (except when the status bar is shown)

1 Press ANGLE.


The Angle selection window appears on the TV screen.

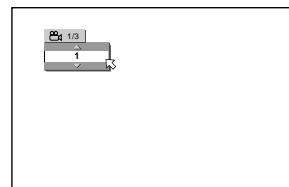

2 Use ANGLE or ▲/▼ to select the desired angle.

Each time you press ANGLE or ▲/▼, the angle changes.

 Example:



3 Press ENTER.

You can see the picture from the selected angle.
The Angle selection window is dismissed.

 
on the TV

preset.

, the VFP mode

suitable to the current conditions.

preset




3 To define a user setting, select a parameter to be edited using ▲/▼ from the followings.

- **GAMMA**
Controls the brightness of a shaded portion without changing the brightness of the entire picture.
This control is optimum when you adjust the pictures of software which generates subdued black in a bright room.
The setting range is +4 to -4.
- **BRIGHTNESS**
Controls the brightness of the screen.
The setting range is +16 to -16.
- **CONTRAST**
Controls the contrast of the screen.
The setting range is +16 to -16.
- **SATURATION**
Controls the color depth of the screen.
The setting range is +16 to -16.
- **TINT**
Controls the tint of the screen.
Use the appearance of a natural complexion as the guideline.
The setting range is +16 to -16.
- **SHARPNESS**
Controls the sharpness of the screen.
The setting range is +3 to 0.
- **Y DELAY**
Controls the color gap of the screen.
The setting range is +2 to -2.

4 Press ENTER.

A window for setting parameters appears instead of the VFP mode selection window.

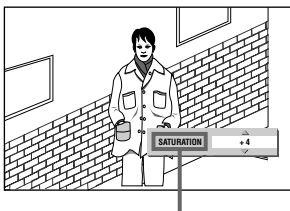

Selected parameter

5 Use ▲/▼ to adjust the level of the parameter.
The higher value enhances the effect.

6 Press ENTER.

The parameter is set and the VFP mode selection window appears again.
Repeat steps 3 to 6 if you want to set other parameters.


NOTES

- The number of setting steps depends on parameters.
- To dismiss the VFP mode selection window:
Press VFP - PROGRESSIVE SCAN.
- The window for VFP mode selection and parameter setting disappears if no operation is made for about 10 seconds.
- The VFP function cannot be used during JPEG playback.

To simulate surround sound [3D PHONIC]

Available :

Using the 3D PHONIC function, you can get a simulated surround effect from your stereo system.

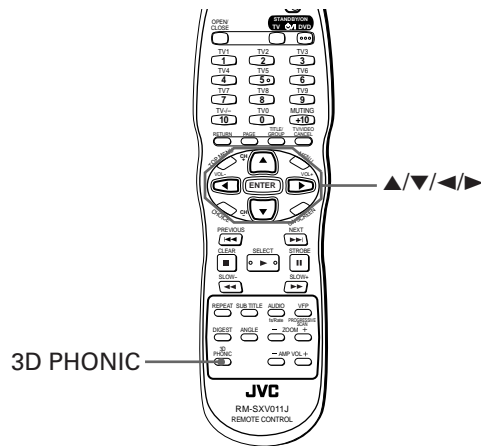


• During playback

1 Press 3D PHONIC.

The 3D PHONIC window appears on the TV screen.

2 Use ◀/▶ to select the desired mode.

Each time you press the button, the 3D PHONIC mode changes as follows:

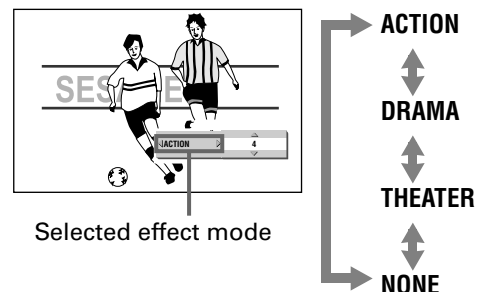

Selected effect mode

- **ACTION**
Suitable for action movies and sports programs in which sounds dynamically move.
- **DRAMA**
Natural and warm sound. You can enjoy movies in a relaxed mood.
- **THEATER**
You can enjoy sound effects like in a major theater in Hollywood.

NOTES

- To dismiss the 3D PHONIC window, press the 3D PHONIC button. Press 3D PHONIC.
- The 3D PHONIC window disappears after the operation is made for about 10 seconds.
- The 3D PHONIC function works correctly when playing back a DVD VIDEO disc recorded in Dolby Digital. With other sources, you cannot get a correct 3D PHONIC sound though you press the 3D PHONIC button.
- When playing back a DVD VIDEO disc recorded in Dolby Digital that does not contain the rear signal, you cannot get a correct 3D PHONIC sound though you change the 3D PHONIC setting.
- The 3D PHONIC function does not affect the Dolby Digital bitstream signal from the DIGITAL OUT jacks.
- When you set the 3D PHONIC function is active, the "ANALOG OUT" and "D. RANGE COMPRESSION" settings in the "AUDIO" preference display are disabled.

an
thos

(Examp



Channel
group*

- * The meanings of the symbols on the display window are:
 - L•R: Front speakers
 - SR: Rear speakers
 - C: Center speaker
 - SR•C: Rear and center speakers

The sampling frequencies indicated on the display window are 44.1, 48, 88.2, 96, 176.4, and 192 (kHz). The figure below the first decimal place is on the display window.


NOTE

- With some discs, "NO INFO." may appear instead of the sampling frequency and bit rate.

Menu bar functions

This section describes the functions you can perform via the menu bar.
The available menu bar functions differ depending on the disc type.

To bring up the menu bar

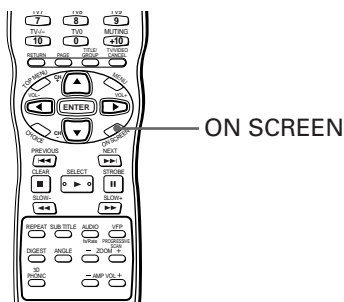

- When a disc is inserted

1 Press ON SCREEN.

The status bar, according to the disc type, appears on the TV screen.
See page 24 about the status bar.

(Example of the status bar for DVD VIDEO)



2 Press ON SCREEN again.

The appropriate menu bar, according to the disc type, appears together with the status bar. The menu bar includes some icons which indicate the associated functions.

 
(for DVD AUDIO)




(for DVD VIDEO)




(for SVCD)



(for Video CD)

 


(for Audio CD)

 

NOTE

- **To dismiss the menu bar (and status bar):**
Press ON SCREEN.

Basic operation procedure

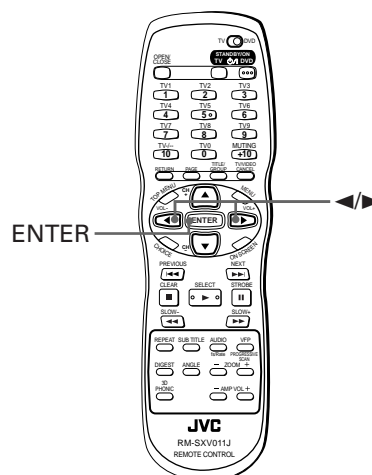

1 Use to select the icon you want to work with.

The selected icon is pointed by .

2 Press ENTER.


With many icons, an appropriate pull-down window appears, however, there are some exceptions.

- See the following pages for details about each function.
- Note that some functions are not available during playback. (You cannot move to the associated icon when it is not available.)

NOTES



- When appears on the TV screen:
You cannot use the selected function because of disc contents.
- A mark or text on the menu icon for the function or mode currently selected is shown in blue.

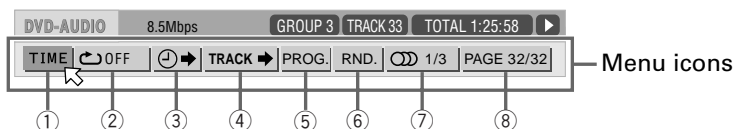Menu bar functions for DVD AUDIO




The following table shows the menu bar functions available for DVD AUDIO. Note that, in the description of the operation column, we assume the associated icon is selected.





Selected Icon	Operation	Note
<p>① TIME</p> <p>Time mode selection (During playback only)</p> <p>Selects the time mode shown in the display window on the front panel and in the status bar.</p>	<p>Press ENTER to select the time mode among the following.</p> <p>TIME → REM → TOTAL → T.REM → Return to initial</p> <ul style="list-style-type: none"> • TIME: Current track elapsed time • REM: Current track remaining time • TOTAL: Current group elapsed time • T.REM: Current group remaining time 	<ul style="list-style-type: none"> • If the disc has only one group and one track, "TOTAL" and "TIME" show the same value.
<p>② Repeat mode (During playback only)</p> <p>Select the repeat mode.</p>	<ol style="list-style-type: none"> 1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select the repeat mode among the followings. TRACK ↔ GROUP ↔ A-B ↔ OFF <ul style="list-style-type: none"> • TRACK: Current title repeat • GROUP: Current group repeat • A-B: Repeats a desired part (A-B repeat) 3 Press ENTER to make the selected repeat function active. (See pages 33 to 35 for details about repeat function.) 	<ul style="list-style-type: none"> • If you select "OFF" during repeat playback, the unit continues playback without repeating. • For the subsequent operations for the A-B repeat, see page 34.
<p>③ Time search</p> <p>Specifies the elapsed time from the beginning of the current group, from which the unit starts playback.</p>	<ol style="list-style-type: none"> 1 Press ENTER to open the pull-down window. 2 Use numeric buttons to enter a desired time. 3 Press ENTER to play back from the specified time. (See page 28 for details about time search function.) 	<hr/>
<p>④ Track search (During playback only)</p> <p>Specifies a desired track to be played back from.</p>	<ol style="list-style-type: none"> 1 Press ENTER to open the pull-down window. 2 Use numeric buttons to enter a desired track number. <ul style="list-style-type: none"> • For example of entering "12", press "1" then "2". 3 Press ENTER to play back from the specified track. <ul style="list-style-type: none"> • When the track number is incorrect: Overwrite the incorrect number with the correct number. 	<ul style="list-style-type: none"> • The "10" and "+10" buttons are not used in this function. • You can also locate a desired track directly by specifying the track number using the numeric buttons during playback. See page 23.
<p>⑤ Program (While stopped only)</p> <p>Specifies the playback order of tracks.</p>	<ol style="list-style-type: none"> 1 Press ENTER to bring up the program table. 2 Specify tracks in the desired order using the numeric buttons. 3 Press ► to start program playback. (See page 31 for details about program playback.) 	<hr/>
<p>⑥ Random (While stopped only)</p> <p>Activates random playback.</p>	<ol style="list-style-type: none"> 1 Press ENTER to activate random playback. (See page 33 for details about random playback.) 	<hr/>

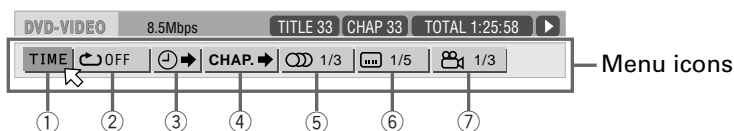Selected Icon	Operation	Note
⑦  Audio selection (During playback only) Selects the audio language or sound.	1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired audio language or sound. Example: 1/3 ENGLISH ↔ 2/3 FRENCH ↔ 3/3 SPANISH 3 Press ENTER to play back with the selected audio. (See page 36 for details about audio selection.)	_____
⑧  Page selection (During playback only) Selects the page.	1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired page number. 3 Press ENTER to play back with the selected page. (See page 30 for details about page selection.)	_____




Menu bar functions for DVD VIDEO




The following table shows the menu bar functions available for DVD VIDEO. Note that, in the description of the operation column, we assume the associated icon is selected.

Selected Icon	Operation	Note
①  Time mode selection (During playback only) Selects the time mode shown in the display window on the front panel and in the status bar.	Press ENTER to select the time mode among the followings. TOTAL ⇒ T.REM ⇒ TIME ⇒ REM ⇒ Return to initial • TOTAL: Current title elapsed time • T.REM: Current title remaining time • TIME: Current chapter elapsed time • REM: Current chapter remaining time	• If the disc has only one title and one chapter, "TOTAL" and "TIME" show the same value.
②  Repeat mode (During playback only) Select the repeat mode.	1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select the repeat mode among the following. CHAPTER ↔ TITLE ↔ A-B ↔ OFF • CHAPTER: Current chapter repeat • TITLE: Current title repeat • A-B: Repeats a desired part (A-B repeat) 3 Press ENTER to make the selected repeat function active. (See pages 33 to 35 for details about repeat function.)	• If you select "OFF" during repeat playback, the unit continues playback without repeating. • For the subsequent operations for the A-B repeat, see page 34.
③  Time search Specifies the elapsed time from the beginning of the current title, from which the unit starts playback.	1 Press ENTER to open the pull-down window. 2 Use numeric buttons to enter a desired time. 3 Press ENTER to play back from the specified time. (See page 28 for details about time search function.)	_____
④  Chapter search (During playback only) Specifies a desired chapter to be played back from.	1 Press ENTER to open the pull-down window. 2 Use numeric buttons to enter a desired chapter number. • For example of entering "12", press "1" then "2". 3 Press ENTER to play back from the specified chapter. • When the chapter number is incorrect: Overwrite the incorrect number with the correct number.	• The "10" and "+10" buttons are not used in this function. • You can also locate a desired chapter directly by specifying the chapter number using the numeric buttons during playback. See page 23.

 Advanced operations



Selected Icon	Operation	Note
<p>⑤  Audio selection (During playback only) Selects the audio language or sound.</p>	<p>1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired audio language or sound. Example: 1/3 ENGLISH ↔ 2/3 FRENCH ↔ 3/3 SPANISH 3 Press ENTER to play back with the selected audio. (See page 36 for details about audio selection.)</p>	<ul style="list-style-type: none"> For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Table of languages and their abbreviations" on page 58.
<p>⑥  Subtitle selection (During playback only) Selects the subtitle language.</p>	<p>1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired subtitle language. Example: 1/3 ENGLISH ↔ 2/3 FRENCH ↔ 3/3 SPANISH ↔ -/3 OFF 3 Press ENTER to play back with the selected subtitle. (See page 35 for details about subtitle selection.)</p>	
<p>⑦  Angle selection (during playback only) Selects a desired scene angle in the multi-angle part.</p>	<p>1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a scene angle. Example: 1/3 ↔ 2/3 ↔ 3/3 3 Press ENTER to play back with the selected scene angle. (See page 37 for details about angle selection.)</p>	

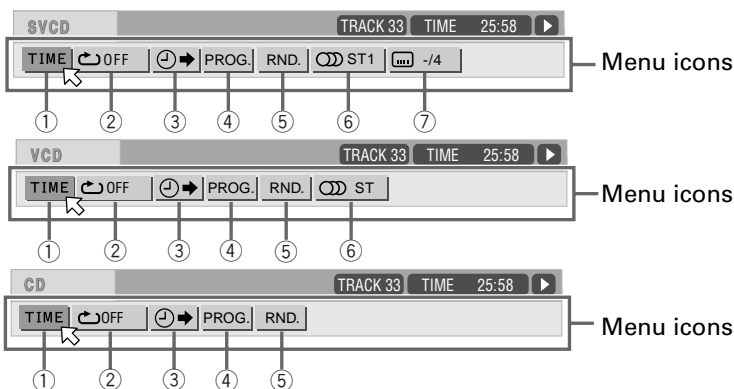




Menu bar functions for SVCD/Video CD/Audio CD



The following table shows the menu bar functions available for SVCD/Video CD/Audio CD.

Note that, in the description of the operation column, we assume the associated icon is selected.

Selected Icon	Operation	Note
<p>①  Time mode selection Selects the time mode shown in the display window on the front panel and in the status bar.</p>	<p>Press ENTER to select the time mode among the followings. TIME ⇒ REM ⇒ TOTAL ⇒ T.REM ⇒ Return to initial</p> <ul style="list-style-type: none"> TIME: Current track elapsed time REM: Current track remaining time TOTAL: Disc elapsed time T.REM: Disc remaining time 	<ul style="list-style-type: none"> When you select "REM" while stopped, you can change the track by pressing ◀◀ or ▶▶. During stopped, "REM" shows the recording time of the current track, while "T.REM" shows the total time of the disc.
<p>②  Repeat mode Select the repeat mode.</p>	<p>1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select the repeat mode among the followings. OFF ↔ TRACK ↔ ALL ↔ A-B ↔ OFF</p> <ul style="list-style-type: none"> TRACK: Current track repeat ALL: All track repeat A-B: Repeats a desired part (A-B repeat) <p>3 Press ENTER to make the selected repeat function active. (See pages 33 to 35 for details about the Repeat function.)</p>	<ul style="list-style-type: none"> If you select "OFF" during repeat playback, the unit continues playback without repeating. For the subsequent operations for the A-B repeat, see page 34.

Selected Icon	Operation	Note
③  Time search (Except during SVCD/Video CD playback with PBC) Specifies the elapsed time from the beginning of the disc, from which the unit starts playback.	1 Press ENTER to open the pull-down window. 2 Use numeric buttons to enter a desired time. 3 Press ENTER to play back from the specified time. (See page 28 for details.)	<ul style="list-style-type: none"> • This function cannot be used during program playback.
④  Program (While stopped only) Specifies the playback order of tracks.	1 Press ENTER to bring up the program table. 2 Specify tracks in the desired order using the numeric buttons. 3 Press ► to start program playback. (See page 31 for details.)	<hr/>
⑤  Random (While stopped only) Activates random playback.	1 Press ENTER to activate random playback. (See page 33 for details.)	<hr/>
⑥  Audio selection (During SVCD/Video CD playback only) Selects the audio channel(s).	1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired audio channel(s). 3 Press ENTER to play back with the selected audio channel(s). (See page 36 for details about audio selection.)	<hr/>
⑦  Subtitle selection (During SVCD playback only) Selects the subtitle.	1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired subtitle. 3 Press ENTER to play back with the selected subtitle. (See page 35 for details about subtitle selection.)	<hr/>

 
MP3 disc playback

The unit can play back MP3 files on a private CD-R/RW disc or commercial CD. We refer to a disc that contains MP3 file as an "MP3 disc" in this manual. Though available functions with MP3 discs are limited, operations for the available functions are similar to those with Audio CD discs. Note that, if a disc contains both of MP3 and JPEG files, you can only play back files of either type selected by the MP3/JPEG setting in the PICTURE preference display (see page 60).

What is MP3?

"MP3" stands for "MPEG Audio Layer-3," and is the part of the MPEG standard. It can store high quality stereo audio using very little space by only saving the audible sounds and discarding the sounds your ears won't pick up. A CD can store up to around 10 hours of MP3 audio, which is 10 times as much as Audio CD.

NOTE




Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.

About MP3 disc

On an MP3 disc, each material (song) is recorded on a file. Files are sometimes grouped into a folder by artist, album, category, etc. In addition, a folder can be a member of another folder, creating hierarchical folder layers. If you are familiar with a personal computer, you may easily understand the hierarchical file/folder construction of MP3 discs. This unit simplifies the hierarchical construction of a disc and manages files and folders by "Tracks" and "Groups" in the following manners.

- Each file is regarded as a Track.
- A folder which has one or more files (Tracks) is regarded as a Group.
- A folders' folder which does not manage any file directly is ignored.
- Files which do not belong to any folder are grouped into "Group 1."
- The unit recognizes up to 150 Tracks per Group, and up to 99 Groups per disc. It ignores those exceeding the maximum numbers and cannot play back them. If there is any type of files other than MP3 files in a folder. Those files are also counted down from the total number of 150.

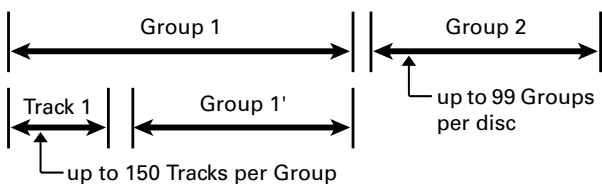

NOTES for making a private MP3 disc using a CD-R/CD-RW disc:

- Select "ISO 9660" as the disc format.
- Finalize the disc after completing recording.
- We recommend to record a material at 44.1-kHz Fs and at the 128-kbps data transfer rate.


NOTES

- Some discs may not be played back because of the disc characteristics or recording condition.
- Some tracks on an MP3 disc are skipped and may not be played back normally because of the disc configuration or characteristics determined by the writing (encoding) software and hardware used for recording. Such symptoms may occur regardless of whether using a disc you recorded or using a commercially available disc.
- The unit does not support "packet writing" discs.
- The unit does not support the ID3 tag.
- If the disc is recorded with multiple sessions, the unit supports up to five sessions.
- You cannot play back Tracks in the desired (programmed) or random order.
- The unit only can play back Tracks with any of the following file extensions; ".MP3", ".Mp3", ".mp3" and ".mP3".
- Time required for reading the disc contents differs with discs, depending on the numbers of Groups (folders) and Tracks (files) recorded, etc.
- While an MP3 disc is loaded, you cannot bring up any preference display (see pages 56 and 57).

Operations

Basic operations

Available : **MP3**

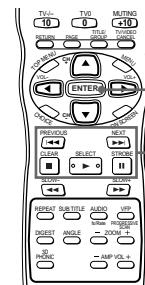

Basic control buttons

The following table shows basic functions of basic control buttons.

Buttons	Functions
	Starts playback while stopped.
	Starts playback while stopped or paused.
	Stops playback.
	Pauses playback.
	Skips back or forward a Track in the Group* during playback. Selects the previous or next Track in the Group* while stopped.

*You can skip a Track across a Group.

- If you press ► during playback, or press ■ to stop playback followed by ►, the unit starts playback from the beginning of the current track.
- The ◀/▶ buttons work the same as the |◀◀/▶▶| buttons.

NOTES

- The current Group and Track numbers are shown on the display window in the following manner.




Current Group number Current Track number Current track elapsed time

- You cannot advance or reverse playback of an MP3 disc rapidly.
- You cannot see any other time information but the current track elapsed time.


Selecting the desired Group and Track

Available : **MP3**

When loading an MP3 disc, after the disc contents are read, the MP3 CONTROL display automatically appears on the TV screen.

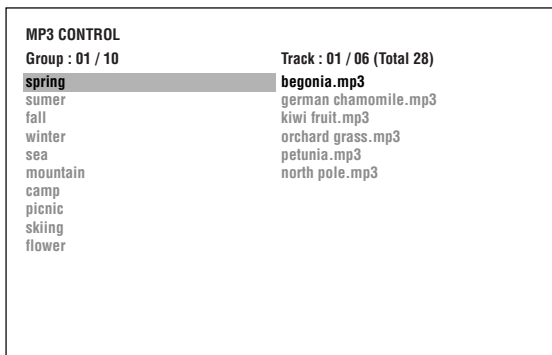

You can specify the desired Group/Track from the display by the following procedure.

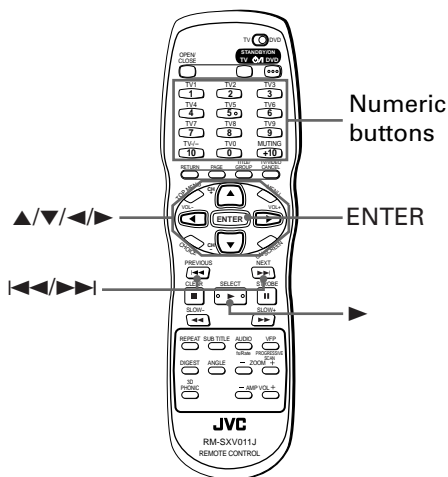

- When the MP3 CONTROL display is shown.

1 Make sure that the black (cursor) bar is in the left (Group) column.

If it is in the right column, press ◀ to move it to the left column.

2 Use ▲/▼ to move the bar to a desired Group.

On the right column, Tracks in the selected Group are shown.

When selecting a Group, Track 1 is initially selected (highlighted).

3 Use ◀◀/▶▶ to select a desired Track, then press ENTER or ▶.

or

Use the numeric buttons to directly specify a desired Track number.

- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.

Examples:


To select 13: +10 → 3

To select 34: +10 → +10 → +10 → 4

To select 40: +10 → +10 → +10 → 10

The unit starts playback from the selected Track.

In the MP3 CONTROL display and the display window on the front panel, you can see the current Group and Track numbers, as well as Track elapsed time.

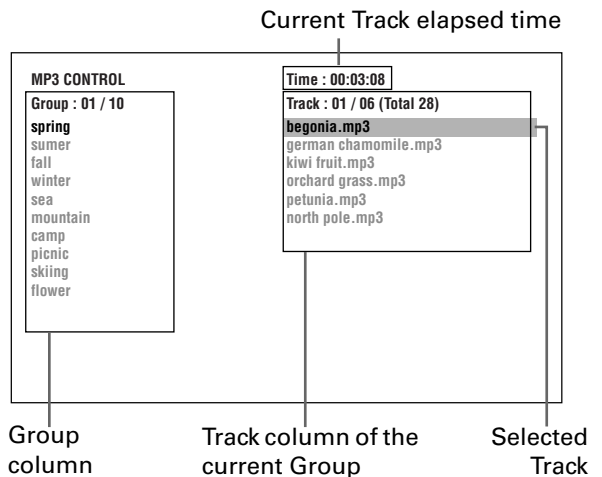

Hints

- You can also select a desired Track by pressing ▶ to move the black bar to the right (Track) column then using ▲/▼.


NOTES

- Up to 32 characters are displayed as a group or track name on the MP3 CONTROL display.
- If an MP3 file name includes any 2-byte character, the unit may not show the file name correctly.
- Only MP3 files are shown on the MP3 CONTROL display.
- The order of Groups/Tracks shown in the MP3 CONTROL display may differ from the order shown on your personal computer when you set the disc on your computer.

Direct selection

Available : **MP3**

You can select a desired Group directly by specifying the Group number.

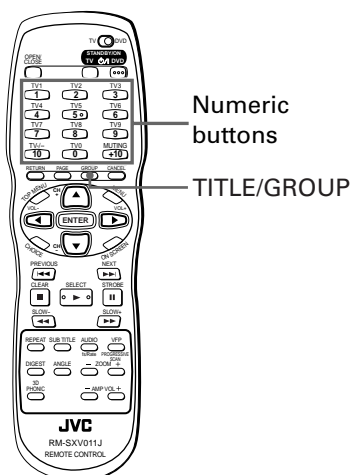


- During playback or while stopped

1 Press TITLE/GROUP.

"--" is shown in the Group display area of the display window.

(Example for the indication of window)

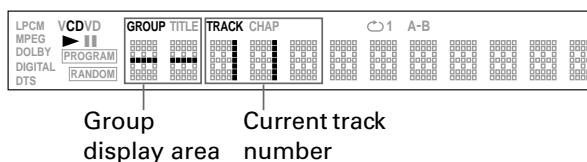

2 Use the numeric buttons to specify a desired Group number.

- To select a number between 1 and 10:
Press the corresponding button for the number.
- To select a number higher than 10:
Use the +10 button.

Examples:

- To select 13: +10 → 3
- To select 34: +10 → +10 → +10 → 4
- To select 40: +10 → +10 → +10 → 10

Specify the Group number within several seconds after pressing TITLE/GROUP (i.e. while the display window shows "--" for the Group number, instead of the current Group number).
The unit starts playback from Track 1 of the selected Group.


3 Use the numeric buttons to specify a desired Track number.

The unit starts playback from the specified Track. You can also use ◀◀/▶▶ or ▲/▼ for specifying a track, instead of the numeric buttons.

Repeat playback

Available : **MP3**

You can repeat playback of the current Track, current Group or all MP3 files on the disc.

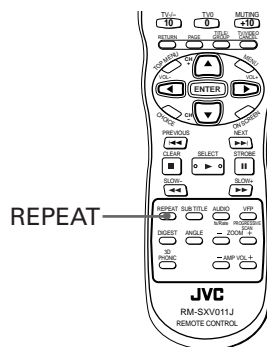

- During playback or while stopped


1 Press REPEAT.

Each time you press REPEAT, the repeat mode changes as follows. You can see the current mode via the display window as well as the MP3 CONTROL display.


If you press REPEAT while stopped, you need to press ENTER or ▶ to start repeat playback.

MP3 CONTROL display	Display Window	Function
REPEAT TRACK	↻1	Repeats the current Track.
REPEAT GROUP	↻	Repeats all Tracks in the current Group.
REPEAT ALL	↻	Repeats all Tracks on the disc.
No indication		The repeat mode is off.

(TV screen) Selected repeat mode

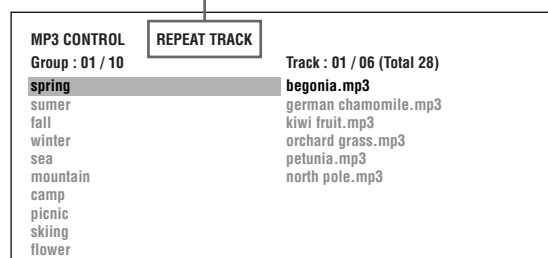

(Display window)

 


Repeat mode indicator

- **To stop repeat playback**
Press ■. Note that the repeat mode remains.
- **To quit repeat playback**
During playback, press REPEAT as many times until no repeat icon is shown on the display window. While stopped, press REPEAT as many times until repeat mode indication on the MP3 CONTROL display goes off.

Checking the sampling frequency and bit rate

Available : **MP3**

You can check the sampling frequency and bit rate of digital audio during playback.

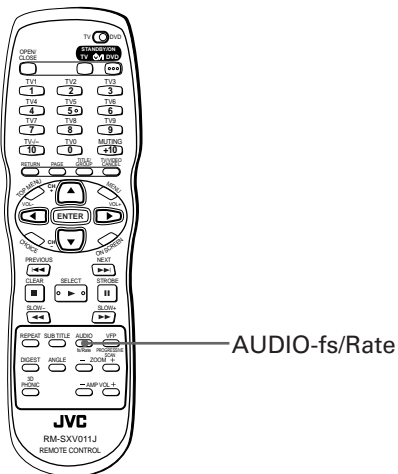


● During playback

1 Press and hold down AUDIO-fs/Rate for a few seconds.

The sampling frequency and bit rate of the current digital audio are shown in the display window temporarily.

(Example)

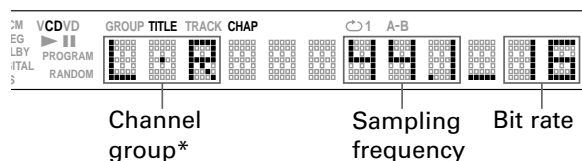

* The meaning of the channel group indication on the display window is as follows.
L•R: Front speakers

Note that any figure below the first decimal place is omitted in the display window.

NOTE

- With some discs, "NO INFO." may appear instead of the sampling frequency and bit rate.

The unit can play back JPEG files on a private CD-R/RW disc. We refer to a disc that contains JPEG files as a "JPEG disc" in this manual.

Note that, if a disc contains both of MP3 and JPEG files, you can only play back files of either type selected by the MP3/JPEG setting in the PICTURE preference display (See page 60).

What is JPEG?

"JPEG" is an abbreviation for the Joint Photographic Experts Group and is an image format that utilizes a compression technique.

There are three sub-types of the JPEG format as follows.

- baseline JPEG: used for digital cameras, web, etc.
- progressive JPEG: used for web
- lossless JPEG: an old type and rarely used now

The unit supports only the baseline JPEG type, therefore, it cannot display pictures of the other types (progressive and lossless). If a JPEG disc contains JPEG files of non-baseline type, the unit recognizes those files as JPEG files, the JPEG CONTROL display and the display window shows the information of the contents (file name, file number, etc.), but you cannot show the still pictures of those files (the TV screen appears only in black and "NON PLAYABLE FILE" is shown in the display window).

NOTE




Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶, numeric buttons for controlling the unit.

About JPEG disc

On a JPEG disc, each material (still picture) is recorded on a file. Files may be grouped into a folder by category, etc. In addition, a folder can be a member of another folder, creating hierarchical folder layers. If you are familiar with a personal computer, you may easily understand the hierarchical file/folder construction of JPEG discs. This unit simplifies the hierarchical construction of a disc and manages folders by "Groups" in the following manners.

- A folder which has one or more files is regarded as a Group.
- A folders' folder which does not manage any file directly is ignored.
- Files which do not belong to any folder are grouped into "Group 1."
- The unit recognizes up to 150 files per Group, and up to 99 Groups per disc. It ignores those exceeding the maximum numbers and cannot play back them. If there is any type of files other than JPEG files in a folder. Those files are also counted down from the total number of 150.

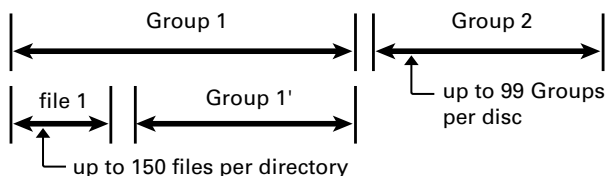

NOTES for making a private JPEG disc using a CD-R/CD-RW disc:

- Select "ISO 9660" as the disc format.
- Finalize the disc after completing recording.
- We recommend to record a material at "640 x 480" resolution.
- The unit supports only the baseline JPEG type, therefore, it cannot display pictures of the other types (progressive and lossless). If a JPEG disc contains JPEG files of non-baseline type, the unit recognizes those files as JPEG files. the JPEG CONTROL display and the display window shows the information of the contents (file name, file number, etc.), but you cannot show the still pictures of those files (the TV screen appears only in black).

NOTES


- The unit does not support "packet writing" discs.
- If the disc is recorded with multiple sessions, the unit supports up to five sessions.
- Some disc may not be played back, or take some time to open the whole picture because of the disc characteristics or recording condition.
- You cannot play back files in the desired (programmed) or random order.
- The screen saver function is activated while same picture is displayed for more than 5 minutes except during slide show playback (see page 53).
- The unit only can play back files with any of the following file extensions; ".jpg", ".jpeg", ".JPG", ".JPEG" and any uppercase and lowercase combination (such as ".Jpg").
- If a JPEG file name includes any 2-byte character, the unit may not show the file name correctly.
- When a picture resolution is more than "640 x 480", it takes some time to open the whole picture.
- Carry out an operation after opening the whole picture. The unit does not accept any operation (Stopping the unit, zooming in/out a picture etc.) while opening the picture.
- Time required for reading the disc contents differs with discs, depending on the numbers of Groups (folders) and files recorded, etc.
- If you play back a non-baseline JPEG file: The unit cannot display the still picture of the file. (the TV screen appears only in black.) In this case, other operations (such as stopping playback, selecting a file, etc.) are possible but may take a long time.
- While a JPEG disc is loaded, you cannot bring up any preference display (see pages 56 and 57).
- The available horizontal resolution of a JPEG file is up to 2,400 lines.

Basic operations


To see a desired picture

Available : **JPEG**

When loading a JPEG disc, after the disc contents are read, the JPEG CONTROL display automatically appears on the TV screen.

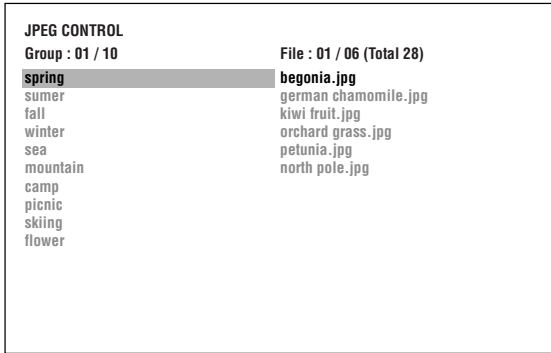

You can select a desired file for playback via this display.

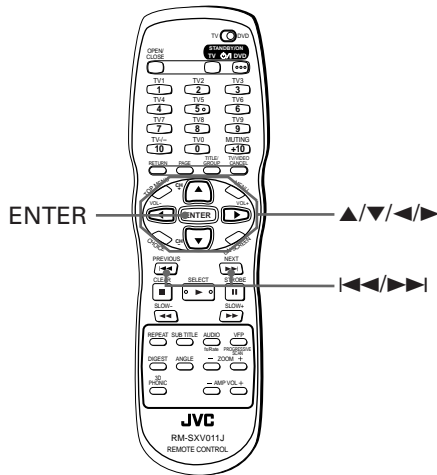


● When the JPEG CONTROL display is shown

- 1 Make sure that the black (cursor) bar is in the left (Group) column.
If it is in the right column, press ◀ to move it to the left column.
- 2 Use ▲/▼ to move the bar to a desired Group.
On the right column, files in the selected Group are shown.
When selecting a Group, file 1 is initially selected (highlighted).

- 3 Use ◀▶ to select a desired file.
- 4 Press ENTER.

The selected file (still picture) is shown on the TV. In the display window, you can see the current Group and file numbers.

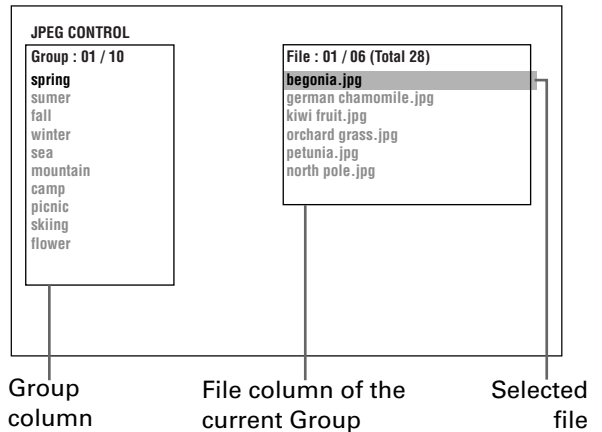


Hints

- You can also select a desired file by pressing ▶ to move the black bar to the right (file) column then using ▲/▼.
- To return the black bar to the Group column, press ◀.
- **To play back another picture:**
Use ◀▶ or ▲/▼ to select the desired picture.
You can select a picture in another Group.
- **To dismiss the picture:**
Press ■ or MENU.
The TV screen returns to the JPEG CONTROL display.

NOTES

- Up to 32 characters are displayed as a group or file name on the JPEG CONTROL display.
- The current Group and file number are also shown on the display window in the following manner.

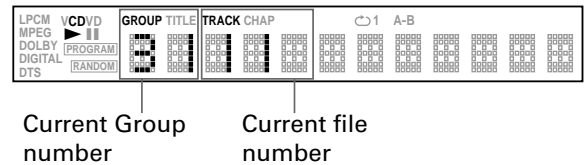


- Only JPEG files are shown on the display window.

JPEG disc playback

- During JPEG picture is shown


1 Press ZOOM + or -.

The unit zooms in by pressing ZOOM +, and zooms out by pressing ZOOM -. Each time you press ZOOM +, the magnification is doubled (up to x 1024). Each time you press ZOOM -, the magnification is halved (down to x 1/8).

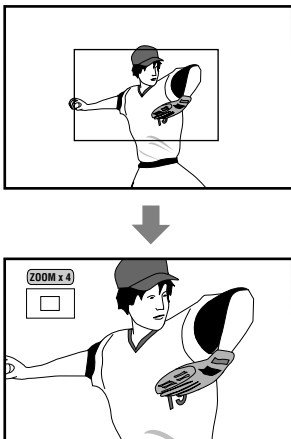

At the top-left of the screen, the information for the current magnification appears. While zoomed in, the indication for the zoomed-in position, which can be moved by operating the next step, appears together.

2 Use ▲/▼/◀/▶ to move the zoomed position.

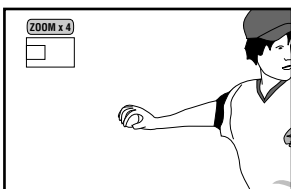

NOTES

- Even in the slide show mode, you can zoom in or out a picture while paused (see the next column).
- To return to normal screen:
Press ENTER.
- While zoomed, the picture may look coarse.
- The zoom information on the screen will disappear if you do not operate the zoom function for five seconds.
- The zoom information appears again when you press ZOOM +/-, or ▲/▼/◀/▶.

- After

1 Press


The s
disc.

NOTES

- To stop slide show
the middle of the
Press ■ or MENU.
The TV screen returns
Pressing ▶ resumes slide
picture you opened.
- To keep showing a current picture
Press ■ or ENTER.
The picture does not change to the
Pressing ▶ resumes the slide show
next picture.
- If a black screen appears continuously in
playback:
The file currently played may be non-baseline
In this case, select a playable file (a baseline JPEG
again (e.g., pressing ■ or MENU to open the JPEG
CONTROL display, etc.)
Note that it may take a long time to select another file

Selecting the start point of the slide show

Available : **JPEG**

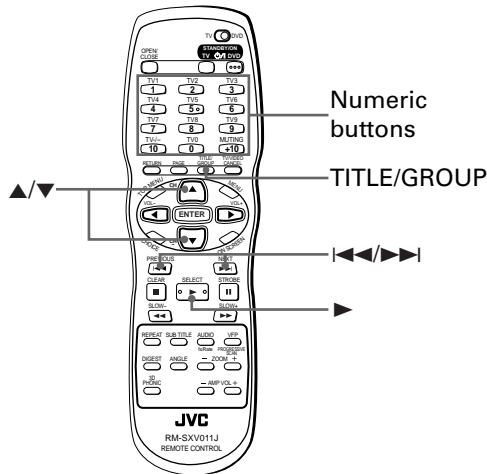


From the JPEG CONTROL display

• During JPEG CONTROL display is shown

1 Make sure that the black (cursor) bar is in the left (Group) column.

If it is in the right column, press ◀ to move it to the left column.

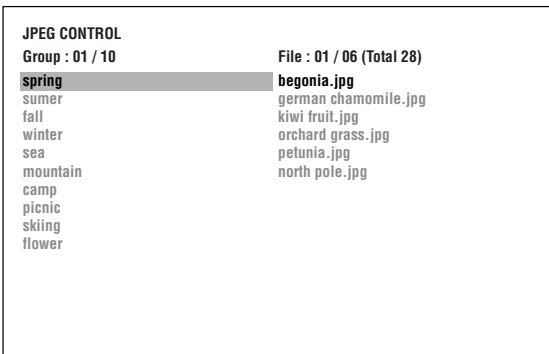

2 Use ▲/▼ to move the bar to a desired Group.

On the right column, files in the selected Group are shown.

When selecting a Group, file 1 is initially selected (highlighted).

3 Use ◀▶ to select a desired file.

4 Press ▶.

The slide show starts from the specified file.


Direct selection

• During playback or while stopped

1 Press TITLE/GROUP.

“--” is shown in the Group display area of the display window.

(Example for the indication of display window)

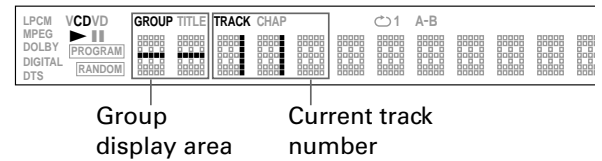

2 Use the numeric buttons to specify a desired Group number.

- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.

Examples:

To select 13: +10 → 3

To select 34: +10 → +10 → +10 → 4

To select 40: +10 → +10 → +10 → 10

Specify the Group number within several seconds after pressing TITLE/GROUP (i.e. while the display window shows “--” for the Group number, instead of the current Group number).

3 Use the numeric buttons to specify a desired Track number.

You can specify the Track number according to the order in the JPEG CONTROL display. You must specify a Track number within 5 seconds after carrying out step 2.

The unit starts slide show playback from the specified Track. If you do not specify a Track number, the unit starts slide show playback from the first Track in the Group.



- You can skip a file in the slide show by using ◀▶ or ▲/▼.
- You can select a file in the current group by using the numeric buttons.

NOTES

• **To stop slide show playback (to dismiss the picture) in the middle of the slide show playback:**

Press ■ or MENU.

The TV screen returns to the JPEG CONTROL display.

Pressing ▶ resumes slide show playback from the last picture you opened.

• **To keep showing a current picture during the slide show**

Press || or ENTER.

The picture does not change to the next picture.

Pressing ▶ resumes the slide show playback from the next picture.

• **If a black screen appears continuously in the slide show playback:**

The file currently played may be non-baseline JPEG file. In this case, select a playable file (a baseline JPEG file) again (e.g., pressing ■ or MENU to open the JPEG CONTROL display, etc.).

Note that it may take a long time to select another file.

Playback

at the repeat mode remains.

English

Playback

press REPEAT as many times until
shown on the display window.

press REPEAT as many times until
caption on the JPEG CONTROL

JPEG disc
playback

Changing the initial settings

NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.


Selecting preferences

This chapter refers to the settings which are already made when you purchase the unit. Read this section when you want to connect this machine to a wide-vision TV set or change the settings according to the environment you use this machine.


About the Preference display

The preference display consists of the LANGUAGE, PICTURE, AUDIO, SPK.SETTING, and OTHERS setting displays, each having setting items.


LANGUAGE

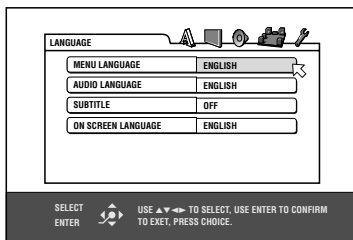


PICTURE

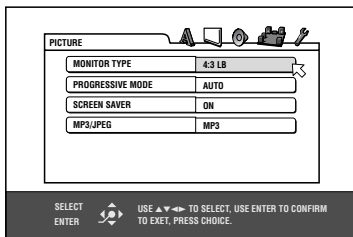


AUDIO

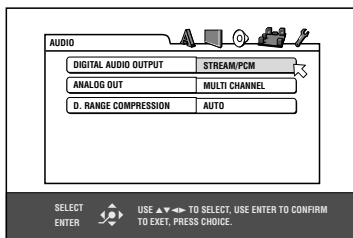


SPK.SETTING

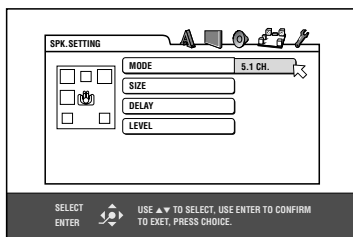

OTHERS

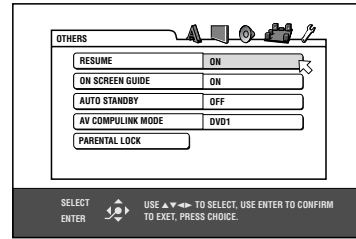

How to set preferences

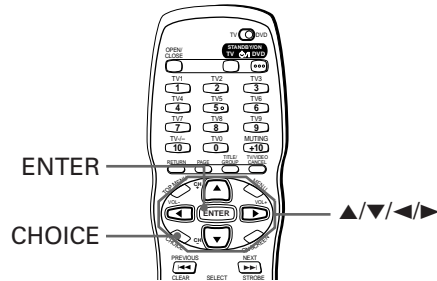

While stopped

1 Press CHOICE.

One of the Preference on-screen displays appears on the TV screen.

You can see five icons at the top right of the on-screen display for the settings.

- : Setting menu for language
- : Setting menu for pictures
- : Setting menu for sound
- : Setting menu for speakers
- : Setting menu for the systems, etc.

2 Use ◀/▶ to select the appropriate icon.


The appropriate display appears on the TV screen.

3 Use ▲/▼ to move to the item you want to edit by.

The color of the selected item changes.

4 Press ENTER.

The pull-down menu appears over the selected item.

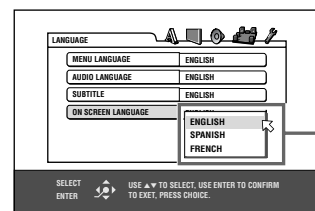

Selected item

5 Use ▲/▼ to select from options and press ENTER.


The selected option is set.

- For details about each setting, see the following.

NOTE

- To...
- Pres...
- While a...
- When a pre...

LANGUAGE page

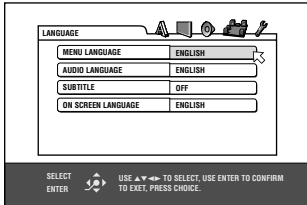


Menu items	
<p>MENU LANGUAGE You can select the default menu language to be displayed if it is contained on a DVD AUDIO/DVD VIDEO disc.</p>	<p>ENGLISH ↔ CHINESE ↔ ITALIAN ↔ JAPANESE ↔ SPANISH language code from AA to ZU</p>
<p>AUDIO LANGUAGE You can select the default audio language to be played if it is contained on a DVD AUDIO/DVD VIDEO disc.</p>	
<p>SUBTITLE You can select the default subtitle language to be displayed if it is contained on a DVD AUDIO/DVD VIDEO disc.</p>	<p>OFF ↔ ENGLISH ↔ SPANISH ↔ FRENCH ↔ CHINESE ↔ GERMAN ↔ ITALIAN ↔ JAPANESE ↔ KOREAN language code from AA to ZU</p>
<p>ON SCREEN LANGUAGE You can select the on-screen display language of the unit.</p>	<p>ENGLISH ↔ SPANISH ↔ FRENCH</p> <p>Spanish French</p> <ul style="list-style-type: none"> • Some languages are not shown in the setting. • You cannot select a language shown in the JPEG CONTROL menu.



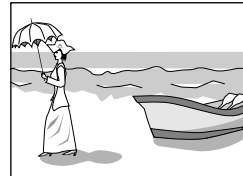
Table of languages and their abbreviations

AA	Afar	FA	Persian	KM	Cambodian	OM	(Afan) Oromo	SU	Sundanese
AB	Abkhazian	FI	Finnish	KN	Kannada	OR	Oriya	SV	Swedish
AF	Afrikaans	FJ	Fiji	KO	Korean (KOR)	PA	Panjabi	SW	Swahili
AM	Ameharic	FO	Faroese	KS	Kashmiri	PL	Polish	TA	Tamil
AR	Arabic	FY	Frisian	KU	Kurdish	PS	Pashto, Pushto	TE	Telugu
AS	Assamese	GA	Irish	KY	Kirghiz	PT	Portuguese	TG	Tajik
AY	Aymara	GD	Scots Gaelic	LA	Latin	QU	Quechua	TH	Thai
AZ	Azerbaijani	GL	Galician	LN	Lingala	RM	Rhaeto-Romance	TI	Tigrinya
BA	Bashkir	GN	Guarani	LO	Laothian	RN	Kirundi	TK	Turkmen
BE	Byelorussian	GU	Gujarati	LT	Lithuanian	RO	Rumanian	TL	Tagalog
BG	Bulgarian	HA	Hausa	LV	Latvian, Lettish	RU	Russian	TN	Setswana
BH	Bihari	HI	Hindi	MG	Malagasy	RW	Kinyarwanda	TO	Tonga
BI	Bislama	HR	Croatian	MI	Maori	SA	Sanskrit	TR	Turkish
BN	Bengali, Bangla	HU	Hungarian	MK	Macedonian	SD	Sindhi	TS	Tsonga
BO	Tibetan	HY	Armenian	ML	Malayalam	SG	Sangho	TT	Tatar
BR	Breton	IA	Interlingua	MN	Mongolian	SH	Serbo-Croatian	TW	Twi
CA	Catalan	IE	Interlingue	MO	Moldavian	SI	Singhalese	UK	Ukrainian
CO	Corsican	IK	Inupiak	MR	Marathi	SK	Slovak	UR	Urdu
CS	Czech	IN	Indonesian	MS	Malay (MAY)	SL	Slovenian	UZ	Uzbek
CY	Welsh	IS	Icelandic	MT	Maltese	SM	Samoan	VI	Vietnamese
DA	Danish	IW	Hebrew	MY	Burmese	SN	Shona	VO	Volapuk
DZ	Bhutani	JI	Yiddish	NA	Nauru	SO	Somali	WO	Wolof
EL	Greek	JW	Javanese	NE	Nepali	SQ	Albanian	XH	Xhosa
EO	Esperanto	KA	Georgian	NL	Dutch	SR	Serbian	YO	Yoruba
ET	Estonian	KK	Kazakh	NO	Norwegian	SS	Siswati	ZU	Zulu
EU	Basque	KL	Greenlandic	OC	Occitan	ST	Sesotho		

PICTURE page

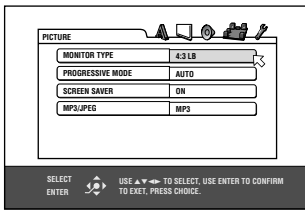


This page allows you to select desired options concerning with a picture or monitor screen.

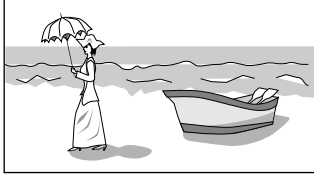Menu items	Setting options	Notes/examples
<p>MONITOR TYPE You can select the monitor type to match your TV when you playback DVD VIDEO discs recorded for wide screen televisions.</p>	<ul style="list-style-type: none"> • 16:9 NORMAL (Wide Television screen) Should be selected when you connect the unit to a wide-screen (16:9) TV whose aspect ratio is fixed to 16:9 (the unit automatically adjusts the screen width of the output signal correctly when playing back a "4:3" source). 	 <ul style="list-style-type: none"> • If you play back a "4:3" DVD VIDEO source with the "16:9 NORMAL" mode, the picture character slightly changes due to the process for converting the picture width.
	<ul style="list-style-type: none"> • 16:9 AUTO (Wide Television screen) Should be selected when you connect a wide-screen (16:9) TV to the unit. 	
	<ul style="list-style-type: none"> • 4:3 LB (Letter Box Conversion) Should be selected when you connect a normal (4:3) TV to the unit. When playing back a DVD VIDEO disc recorded by the wide picture format, the picture is shown with black bars at the top and bottom. 	 <ul style="list-style-type: none"> • With some discs recorded by the wide picture format, the picture is shown in the 4:3 LB mode even if you select the 4:3 PS mode.
	<ul style="list-style-type: none"> • 4:3 PS (Pan Scanning Conversion) Should be selected when you connect a normal (4:3) TV to the unit. When playing back a DVD VIDEO disc recorded by the wide picture format, the picture is automatically zoomed and the left and right sides are chopped off. 	<ul style="list-style-type: none"> • When progressive scanning mode is active, the PROGRESSIVE indicator is lit. Note that the color of indication changes depending on this setting, source type and the unit's status. (See pages 7 and 8.) • Some DVD VIDEO discs may not be played back correctly with the "AUTO" mode. If the playback picture is unclear or noisy with a particular DVD VIDEO disc, try to change the mode.
<p>PROGRESSIVE MODE When the unit is in the progressive scanning mode, you can select a desired mode from three options. Normally, set to "AUTO."</p>	<ul style="list-style-type: none"> • VIDEO Suitable for playing back a video source disc. 	
	<ul style="list-style-type: none"> • FILM Suitable for playing back a film or progressive source disc. 	
	<ul style="list-style-type: none"> • AUTO Used to play back a disc containing both video and film source materials. The unit recognizes the picture type (film or video source) of the current disc according to the disc information. 	

Menu items	Setting options	Notes/examples
SCREEN SAVER You can select the screen saver function ON or OFF. See page 18 for details about screen saver function.	<ul style="list-style-type: none"> ON The current picture gets dark. 	
	<ul style="list-style-type: none"> OFF The screen saver function is off. 	
MP3/JPEG The unit can play back MP3 and JPEG files recorded on a CD-R/CD-RW disc, however, if a disc contains both of MP3 and JPEG files, you can only play back files of either type selected by this menu item.	<ul style="list-style-type: none"> MP3 MP3 files can be played back if a disc contains both of MP3 and JPEG files. 	<ul style="list-style-type: none"> When a disc contains either MP3 or JPEG files, the unit can play back the files regardless of the setting.
	<ul style="list-style-type: none"> JPEG JPEG files can be played back if a disc contains both of MP3 and JPEG files. 	

AUDIO page

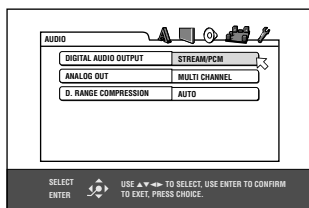

This page allows you to select desired options concerning with audio sound.

Menu items	Setting options	Notes/examples
DIGITAL AUDIO OUTPUT To connect the unit's digital output to an external device equipped with a digital input, this item must be set correctly. See the table below for details about the relation between the setting and output signals.	<ul style="list-style-type: none"> PCM ONLY Should be selected when you connect the DIGITAL OUT jacks of the unit to the linear PCM digital input of other audio equipment. 	<ul style="list-style-type: none"> When playing a DVD VIDEO or Audio CD disc with DTS, use a DTS decoder to get correct signals from your speakers. With some DVD VIDEO discs that are not fully copy-protected, a 20 or 24 bit digital signal may be output.
	<ul style="list-style-type: none"> DOLBY DIGITAL/PCM Should be selected when you connect the digital input of a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder. When this option is selected, playing back a disc recorded by the DTS or MPEG Multichannel format outputs a linear PCM digital signal. 	
	<ul style="list-style-type: none"> STREAM/PCM Should be selected when you connect the digital input of an amplifier with a built-in DTS, MPEG Multichannel or Dolby Digital decoder, or the stand-alone unit of such a decoder. 	


Digital output signal chart

Playback discs	Output		
	PCM ONLY	DOLBY DIGITAL/PCM	STREAM/PCM
DVD with 48/44.1 kHz, 16/20/24 bit linear PCM	48/44.1 kHz, 16 bit, stereo linear PCM		
DVD with 192/176.4/96/88.2 kHz, 16/22/24 bit linear PCM	No output		
DVD with DTS	48 kHz, 16 bit, stereo linear PCM		DTS bitstream
DVD with Dolby Digital	48 kHz, 16 bit, stereo linear PCM	Dolby Digital bitstream	
Audio CD/Video CD/SVCD	44.1 kHz, 16 bit, stereo linear PCM		
Audio CD with DTS	44.1 kHz, 16 bit, stereo linear PCM		DTS bitstream
CD-R/RW with MP3	Linear PCM		



Menu items	Setting options	Notes/examples
<p>ANALOG OUT To play back a DVD VIDEO disc recorded with surround multichannel audio correctly, this setting must be properly made according to your audio system.</p>	<ul style="list-style-type: none"> <li data-bbox="576 210 1015 371">• 2-CH DOLBY SURROUND Should be selected when you enjoy multichannel surround audio by connecting the unit's AUDIO OUT jacks to a surround decoder. <li data-bbox="576 371 1015 685">• 2-CH STEREO Should be selected when you enjoy conventional 2-channel stereo audio by connecting the unit's AUDIO OUT jacks to a stereo amplifier/receiver or television set, or when you duplicate audio of a DVD VIDEO disc recorded with surround audio to your MD, cassette, etc. <li data-bbox="576 685 1015 875">• MULTI CHANNEL When you enjoy multichannel surround audio by connecting the unit's 5.1-channel audio outputs to an amplifier equipped with 5.1-channel inputs. 	<ul style="list-style-type: none"> <li data-bbox="1031 210 1473 300">• This function does not work when the 3D PHONIC function is activated (see page 40). <li data-bbox="1031 300 1473 472">• "2-CH DOLBY SURROUND" and "2-CH STEREO" settings affect only the output signal from the AUDIO OUT jacks when playing back a DVD VIDEO disc recorded with surround multichannel audio. <li data-bbox="1031 472 1473 645">• Some DVD AUDIO discs prohibit the 2-channel down-mix. For such a disc, you cannot get the down-mixed signal even if you set "ANALOG OUT" to "2-DOLBY SURROUND" or "2-CH STEREO."
<p>D. RANGE COMPRESSION When enjoying a DVD VIDEO disc recorded with the Dolby Digital format at low or middle volume, this setting makes you hear sound comfortably.</p>	<ul style="list-style-type: none"> <li data-bbox="576 889 1015 987">• AUTO Audio is played back with the dynamic range compressed. <li data-bbox="576 987 1015 1093">• ON Audio is always played back with the dynamic range compressed. 	<ul style="list-style-type: none"> <li data-bbox="1031 889 1473 1003">• This function works only when playing back a disc recorded with Dolby Digital. The setting is not effective for other discs. <li data-bbox="1031 1003 1473 1093">• This function does not work when the 3D PHONIC function is activated (see page 40).


OTHERS page

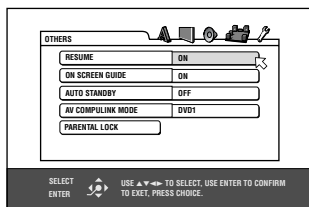
This page allows you to select desired options concerning with the system.



Menu items	Setting options	Notes/examples
<p>RESUME You can select the resume playback mode.</p>	<ul style="list-style-type: none"> ON The unit can resume playback of the disc from the position you interrupted playback last time if it is still on the tray. OFF The resume function is not active. DISC RESUME The unit can resume playback of last 30 discs (the unit keeps memory positions even if a disc is removed from the tray). 	<ul style="list-style-type: none"> See page 20 for details about resume playback function.
<p>ON SCREEN GUIDE The unit can display "on-screen guide" icons or characters on the picture, which show what is happening to the disc or the unit.</p>	<ul style="list-style-type: none"> ON The on-screen guide will be displayed. OFF The on-screen guide will not be displayed. 	<ul style="list-style-type: none"> See page 18 about on-screen guide icons. Examples of "on-screen guide" icons or characters:
<p>AUTO STANDBY When the unit is stopped for more than 30 minutes or 60 minutes, the unit enters standby mode automatically.</p>	<p>OFF ↔ 60 ↔ 30</p>	<hr/>
<p>AV COMPULINK MODE If you use the AV COMPU LINK system, you must set this item correctly.</p>	<p>DVD 1 ↔ DVD 2 ↔ DVD 3</p>	<ul style="list-style-type: none"> See page 71 for details about AV COMPU LINK function.
<p>PARENTAL LOCK When selecting this option, pressing ENTER on the remote control unit brings up the "PARENTAL LOCK" display shown right, in which you can restrict playback of DVD VIDEO discs for children.</p>	<p>See page 66 for details about the Parental Lock setting.</p>	<p>(PARENTAL LOCK display)</p>


 
- Use ▲/▼ to move  to [DELAY] and press ENTER.
The DELAY display page appears on the TV screen.  points to [CENTER SPEAKER].
See page 56 for details about how to bring up the "SPK.SETTING" page.

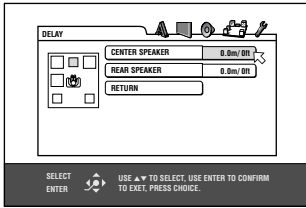


- Use ▲/▼ to select the speaker to be set and press ENTER.
CENTER SPEAKER: Center speaker
REAR SPEAKER: Rear speakers
 - Use ▲/▼ to select the delay time and press ENTER.
When you select "CENTER SPEAKER," you can select the delay time from "0.0m/0ft" to "1.5m/5ft" in 1ft units.
When you select "REAR SPEAKER," you can select the delay time from "0.0m/0ft" to "4.5m/15ft" in 1ft units.
 - Repeat steps 2 and 3 if you set other speakers.
- To return to the "SPK. SETTING" page**
Use ▲/▼ to move  to [RETURN] and press ENTER.

NOTE

- For the speaker(s) whose size is set to "NONE," the delay time cannot be set.

 - Use ▲/▼ to move  to [LEVEL] and press ENTER.
The LEVEL display page appears on the TV screen.  points to [CENTER SPEAKER].
See page 56 for details about how to bring up the "SPK.SETTING" page.


- Use ▲/▼ to select the speaker to be set and press ENTER.
FRONT SPEAKER: Front speakers (This item cannot be selected. The level is fixed to 0dB.)
CENTER SPEAKER: Center speaker
REAR SPEAKER: Rear speakers
SUB WOOFER: Subwoofer speaker
 - Use ▲/▼ to set the level and press ENTER.
When you select "CENTER SPEAKER," "REAR SPEAKER" or "SUB WOOFER," you can select the level from -6 to 6dB in 1dB units.
 - Repeat steps 2 and 3 if you set other speakers.
- To return to the "SPK.SETTING" page**
Use ▲/▼ to move  to [RETURN] and press ENTER.

NOTE

- For the speaker(s) whose size is set to "NONE," the speaker level cannot be set.

To set the speaker level

You can adjust the output level of each speaker.

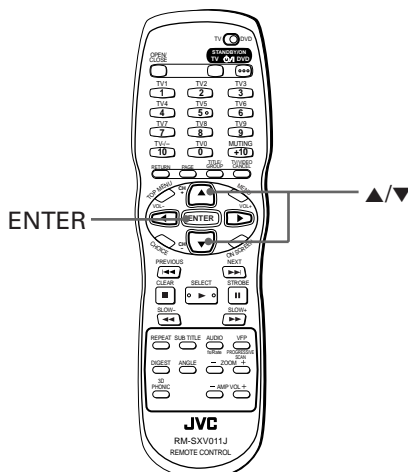

- While the "SPK.SETTING" page of the preference display is shown


To generate test tone signals

You can check the level setting by monitoring the test tone.

- Use ▲/▼ to select [TEST TONE] and press ENTER.
- Use ▲/▼ to select [ON] and press ENTER.
The test tone will be generated when you select the speaker(s) in the "LEVEL" display.


Limiting playback by children

This function restricts playback of DVD VIDEO discs which contain violent (and other) scenes according to the level set by the user. For example, if a movie which includes violent scenes supports the parental lock feature, such scenes which you do not want to let children view can be cut or replaced with other scenes. When selecting "PARENTAL LOCK" in the "OTHERS" page of the preference display (see page 63), pressing ENTER on the remote control unit brings up the PARENTAL LOCK sub-page shown below, in which you can make setting for limiting playback.

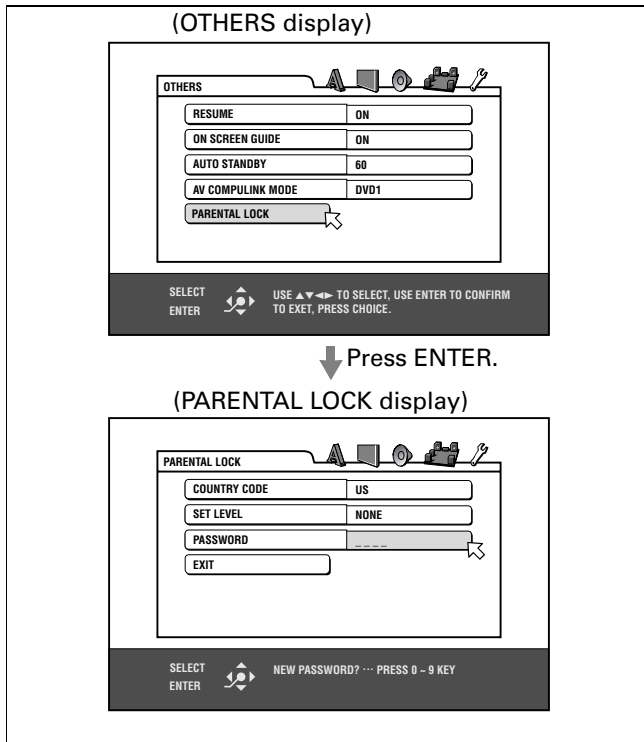

To set Parental Lock for the first time [PARENTAL LOCK]

Available :

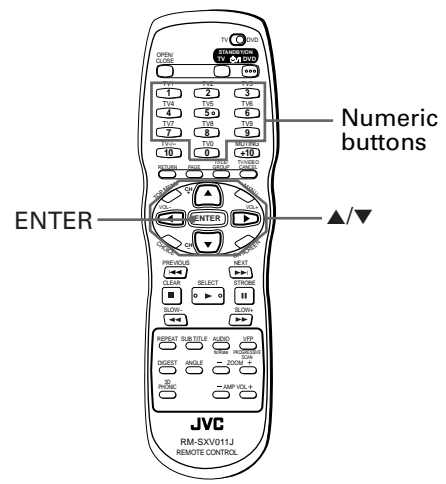

● While the "OTHERS" page of the preference display is shown

1 Use ▲/▼ to move to [PARENTAL LOCK] and press ENTER.

The Parental Lock on-screen display appears on the TV screen.

points to [COUNTRY CODE].


See page 56 for details about how to bring up the "OTHERS" page.

2 While points to [COUNTRY CODE], press ENTER to bring up the pull-down menu.

3 Use ▲/▼ to select the country code.


The country code whose standards were applied to rate the DVD VIDEO disc should be selected.

See "Appendix A: Country/Area code list for Parental Lock" on page 76.

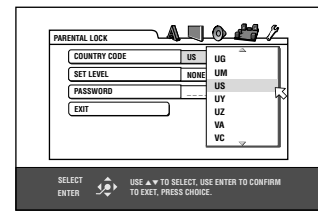

4 Press ENTER.


moves to [SET LEVEL].

3 To change the “COUNTRY CODE” or “SET LEVEL”, press ENTER to bring up the associated pull-down menu while  points the appropriate item.

To select the item to be set, use ▲/▼ when no pull-down menu is shown.


4 Use ▲/▼ to select a desired option and press ENTER.

Note that if you change the country code, you must reselect the Parental Lock level.

5 While  points to [PASSWORD], enter a 4-digit password using the numeric buttons (0 to 9).

 
The password entered in the above step becomes the new password. If you do not change the password, enter the same password as in the step 2. Even if you want to change only the country code and/or parental level, do not forget to enter the password after changing the country code and/or parental level. Otherwise, the new country code and/or parental level will not become effective.

6 Press ENTER.


 moves to [EXIT].

Pressing ENTER again returns to the “OTHERS” page of the preference display.


NOTES

- If you enter the wrong password more than three times in step 2 above,  moves to [EXIT] automatically and ▲/▼ does not work.
- If you forget your password in step 2
Enter “8888” The current password is deleted and you can set a new password.


To temporarily release the Parental Lock [PARENTAL LOCK]

Available : 


When you set the parental level strictly, some discs may not be played back at all. When you insert such a disc and try to play it, the following Parental Lock on-screen display appears on the TV screen, asking you whether you want the Parental Lock to be temporarily released or not.

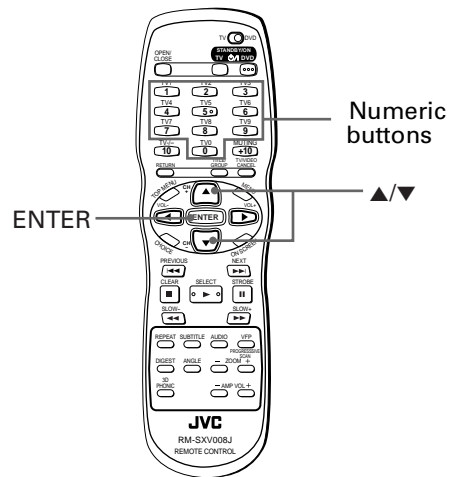

1 Use ▲/▼ to move  to [TEMPORARY RELEASE], then press ENTER.

 moves to the [PASSWORD].

When selecting [NOT RELEASE], press ▲ OPEN/CLOSE to remove the disc.

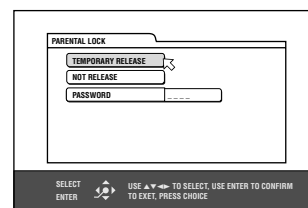


2 Enter your 4-digit password using the numeric buttons (0 to 9).

The Parental Lock is released, and the unit starts playback.

If you enter the wrong password, “WRONG! RETRY...” appears on the TV screen.

Enter the correct password.

 
NOTE

- When you enter the wrong password more than three times in step 2 above,  moves to [NOT RELEASE] automatically and ▲/▼ does not work.

Names of parts

Refer to the corresponding page for details.

Front panel

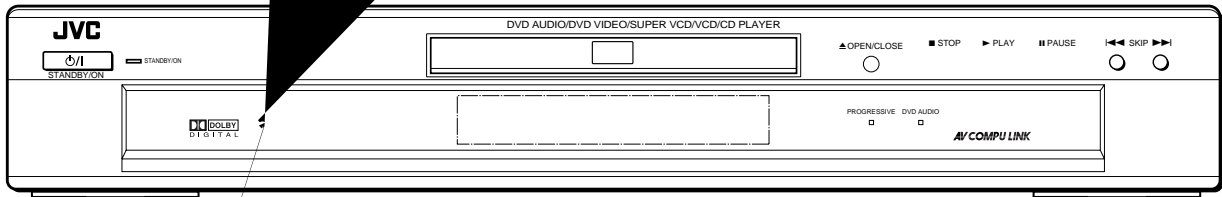

- ① **STANDBY/ON button (14)**
- ② **STANDBY/ON indicator (11, 14)**
- ③ **Disc tray (17, 19, 20)**
- ④ **▲ OPEN/CLOSE button (17, 19, 20)**
- ⑤ **■ STOP button (18, 19, 47)**
- ⑥ **▶ PLAY button (18, 20)**
- ⑦ **⏸ PAUSE button (18, 21)**
- ⑧ **⏮/⏭ SKIP buttons (21, 22)**
- ⑨ **Display windows (see the illustration below)**
- ⑩ **Remote sensor (12)**
- ⑪ **PROGRESSIVE indicator (7, 8, 59)**
- ⑫ **DVD AUDIO indicator (17)**

Display window

- ⑤ **Repeat mode indicators (33, 49, 55)**
- ⑥ **PROGRAM/RANDOM indicators (31, 33)**
- ⑦ **Multi-information window**

- ④ **AV/COMPU LINK jacks (71)**
- ⑤ **SCART IN connector (11)**
- ⑥ **Disc code label (4)**
- ⑦ **OPTICAL OUT jacks (OPTICAL/COAXIAL) (10)**

- ④ **...**
- ⑤ **Scan...**

AV COMPU LINK remote control system


The JVC AV COMPU LINK system allows you to enjoy video or audio with the simplest operation. If your video/audio player (such as a DVD player, CD player and VCR) and television or/and amplifier/receiver support the JVC AV COMPU LINK system and are tied with the JVC AV COMPU LINK cable(s), when you simply starting the player, all the necessary settings of the television and/or amplifier/receiver for enjoying playback are automatically performed.

AV COMPU LINK


Connection and setup

Using the AV COMPU LINK cable, connect the AV COMPU LINK terminals of each component to one another.


- The unit's AV COMPU LINK setting is operated in the OTHERS page in the preference display. See page 63 for operation.
- For information on the connection between the TV and the receiver, refer to the receiver's Instructions.

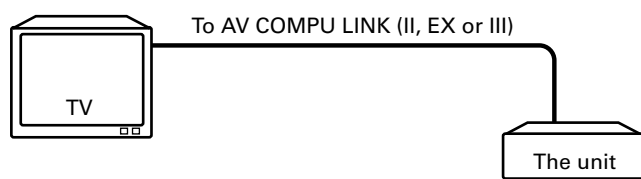

- If you connect the unit to a television via AV COMPU LINK, set the unit's AV COMPU LINK setting as follows.
 - When connecting to VIDEO-1 input terminal of the television: DVD2
 - When connecting to VIDEO-2 input terminal of the television: DVD3

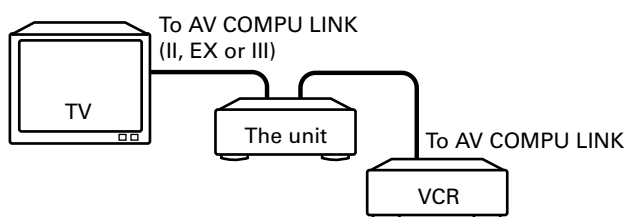

- If you connect the unit to a television and VCR via AV COMPU LINK, set the VCR's Remote Control Code and the unit's AV COMPU LINK setting as follows.
 - When connecting to VIDEO-1 input terminal of the television:
The unit's AV COMPU LINK setting: DVD2
VCR's Remote Control Code: B
 - When connecting to VIDEO-2 input terminal of the television:
The unit's AV COMPU LINK setting: DVD3
VCR's Remote Control Code: A

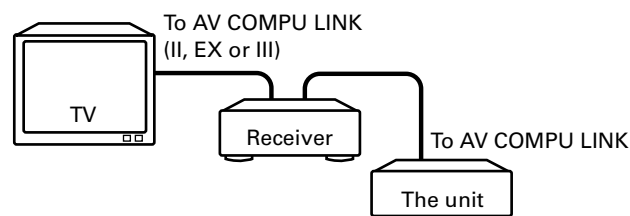

- If you connect the unit to a television and receiver via AV COMPU LINK, set the unit's AV COMPU LINK setting to DVD1.

IMPORTANT!

- When you make video connection between the unit and another device (such as a receiver and TV) via the composite, S-video or component jacks, as well as AV COMPU LINK connection, see also the instruction manual of the other device.

Notes for connection

- If you connect the unit to a receiver via AV COMPU LINK in a system including a Dolby Digital decoder, some functions may not be performed automatically.
- Connect the AUDIO OUT jacks of the unit to the audio input jacks of a receiver that indicating "DVD." Otherwise, the system will not work correctly.
- There may be no description about connections to the unit in the instruction manual of a television or VCR. However a television or VCR with AV COMPU LINK terminals indicating "II," "EX" or "III" can be connected to the unit.

Operation

You can enjoy pictures and/or sound by just putting a source component (which plays back the pictures and/or sound such as a DVD player or VCR) into play mode. You do not have to operate the TV and receiver including not having to perform power switching.

- 1 Turn on the main power of the television.
- 2 Insert a disc (or tape) into the source component.
- 3 Press ► of the source component.

The following actions are performed automatically:

- Turning on the power for the television.
- Setting the source of the television to the external input (VIDEO-1 or VIDEO-2).
- Turning on the power for the receiver.
- Setting the source of the receiver to the component which has started playback.

Troubleshooting

What appears to be a malfunction may not always be serious. Please go through the following list before requesting service.

POWER		
Symptom	Possible cause	Remedy
Power does not come on.	Power plug is not inserted securely.	Plug in securely.
OPERATION		
Symptom	Possible cause	Remedy
The remote control unit does not work.	Too far from the unit.	Move closer to the unit.
	The tip of the remote control unit is not pointed in the right direction.	Point the infrared light-emitting window toward the remote sensor on the front panel (see page 12).
	Batteries are exhausted.	Replace the batteries with new ones.
	Battery polarity is incorrect.	Take out the batteries and insert them again in the correct direction.
	The remote control unit is not set for operating your TV.	Set the remote control unit for operating your TV (see page 14).
The TV/VIDEO - CANCEL, ▲/▼/◀/▶ or numeric buttons do not work.	The TV - DVD switch is not correctly set.	To control the unit, set the TV - DVD switch to "DVD." To control your TV, set the TV - DVD switch to "TV" (see page 13).
Operation is not possible.	Microcomputer malfunction due to lightning or static electricity.	Turn off the power and unplug the power cord, then connect the power cord again.
	Moisture condensation caused by a sudden change of temperature or humidity.	Turn off the power, then turn it on a few hours later.
	The disc does not allow the operation. Or a non-playable disc is loaded.	Check and replace the disc (see page 4).
When using the TITLE/GROUP button to select a title during DVD VIDEO playback, ⊙ appears on the TV screen and the title cannot be selected.	The disc does not allow the operation because of disc contents.	Try to press ■ and select a title using the numeric buttons on the remote control unit.

PICTURE	
No picture is displayed.	"No picture" is shown in the display window.
No picture is displayed or the screen is blurred or distorted in some parts.	It depends on the model.
A picture is noisy or blurred.	It depends on the model.
A picture does not fit the television screen.	"Picture size" is shown in the display window. Television screen size.
The upper and lower parts of the preference display are cut off when using wide-aspect TV.	It depends on the model.
AUDIO	
Symptom	Possible Cause
No audio is reproduced.	Connection is incorrect. Input selection of amplifier is incorrect.
Audio volume is low when playing back the unit, compared with the TV or VCR.	The audio level recorded on a DVD VIDEO disc is lower, compared with TV broadcast.
Sound is distorted or noise is generated.	Disc is dirty.
"MULTI CH" is shown in the display window when playing back a DVD AUDIO disc.	The track is prohibited from down-mixing to 2-channel stereo audio. Lis

Frequently Asked Questions

Question	Answer	Ref. page
Can I play back DVD VIDEO and Video CD purchased abroad?	You can play back the DVD VIDEO discs with the Region Code (local code) containing "ALL" or "1" recorded in the NTSC or PAL system (PAL disc signals are reproduced by converting to the NTSC system). You can also play back the Video CD discs recorded in the NTSC system. Please check the information on each disc jacket.	4
Can I play back a DVD VIDEO disc without any Region Code number?	The Region code indicates the conformity of the disc to the standards. Any DVD VIDEO not conforming to the standards cannot be played back.	4
Can I play back a CD-R/RW disc with still pictures in other than the JPEG format?	No, you cannot play back that disc.	4
Can I play back audio on a disc labeled "Dolby Digital EX"?	Yes, you can play back the disc because Dolby Digital EX is compatible with Dolby Digital. However, to get the maximum performance of Dolby Digital EX, we recommend to connect the DIGITAL OUT jack to a decoder or amplifier/receiver with built-in decoder that supports Dolby Digital EX. In this case, set "DIGITAL AUDIO OUTPUT" on the "AUDIO" preference display to "STREAM/PCM."	60
Can I play back audio on a disc labeled "DTS ES"? Is there any difference in the playback settings between Discrete and Matrix recording systems for DTS ES?	Though you cannot enjoy audio using the analog audio outputs (AUDIO OUT), you can enjoy DTS ES audio by connecting the DIGITAL OUT jack to a decoder or amplifier/receiver with built-in decoder that supports DTS ES. In this case, set "DIGITAL AUDIO OUTPUT" on the "AUDIO" preference display to "STREAM/PCM."	60
Can this unit play back a disc labeled "THX"? What does "THX" mean?	Yes you can. "THX" is a name of the original standard for high quality picture/audio recording and playback established by Lucasfilm Ltd. A disc labeled "THX" is certified that it passed this standard.	—
When files of the MP3 and Audio CD formats are recorded on a same disc, can the unit play back files of both formats?	The disc is of the data CD format, therefore, the unit can play back only files of the MP3 format.	4, 47
Some Dolby Digital discs contain 5.1-ch Surround or Dolby Surround audio data. What is the difference between these two types?	Both are surround sound standards developed by Dolby Laboratories Inc. in the U.S.A. Dolby Surround records 2-channel surround audio information are recorded onto the analog stereo (left and right) channels together with front stereo audio information. When played back, the surround signals are separated by a Dolby Surround or Dolby Pro Logic decoder. Dolby Digital digitally encodes and records up to six channel information for left, right, center, rear left, rear right and LFE (Low-Frequency Effect for Sub-woofer etc.). When played back, a Dolby Digital decoder decodes data and outputs signals separately. Generally, Dolby Digital sounds better.	4
When playing back a DVD VIDEO or Video CD disc, something like mosaic appears on the TV screen. Is this because of a malfunction of the unit?	It is a block noise specific to a motion picture recorded in digital, and is not a malfunction of the unit.	—
The unit does not function as described in this Instruction Manual.	The operation of this unit may occasionally be unacceptable due to the intention of the disc contents creator and/or structural restrictions.	—
Can I record DVD VIDEO data on a video tape?	Most of all DVD VIDEO discs are copy-protected so that you cannot record DVD VIDEO data onto any video tape.	3
Can this unit record data?	No, you cannot.	—

Specifications

*Specifications and appearance subject to change without prior notice.

General

Readable discs: DVD AUDIO, DVD VIDEO, DVD-R (Video format), SVCD, Video CD, Audio CD (CD-DA), MP3 Format, JPEG, CD-R/RW (CD-DA, SVCD, Video CD, MP3 Format, JPEG)

Video format: NTSC, 480i (Interlaced scan)/480p (Progressive scan) selectable

Other

Power requirements: AC 120 V \sim , 60 Hz*

Power consumption: 14 W (POWER ON), 2.0 W (STANDBY mode)

Mass: 2.5 kg (5.6 lbs)

Dimensions (W x H x D): 435 mm x 73 mm x 267.5 mm
(17-3/16 inch x 2-7/8 inch x 10-9/16 inch)

Video outputs

COMPONENT (pin jacks): Y Output: 1.0 Vp-p (75 Ω)
P_B/P_R Output: 0.7 Vp-p (75 Ω)

VIDEO OUT (pin jack): 1.0 Vp-p (75 Ω)

S-VIDEO OUT (S jack): Y Output: 1.0 Vp-p (75 Ω)
C Output: 286 mVp-p (75 Ω)

Horizontal resolution: 500 Lines or more

Audio outputs

ANALOG OUT (pin jack): 2.0 V_{rms} (10 k Ω)

DIGITAL OUT: (COAXIAL): 0.5 Vp-p (75 Ω termination)

(OPTICAL): -21 dBm to -15 dBm (peak)

Audio characteristics

Frequency response: CD (sampling frequency 44.1 kHz): 2 Hz to 20 kHz
DVD (sampling frequency 48 kHz): 2 Hz to 22 kHz
(2 Hz to 20 kHz for DTS and Dolby Digital bitstream signals)

DVD (sampling frequency 96kHz/88.2 kHz): 2 Hz to 44 kHz
DVD (sampling frequency 192kHz/176.4 kHz): 2 Hz to 88 kHz

Dynamic range: 16 bit: More than 98 dB
20/24 bit: More than 110 dB

Wow and flutter: Unmeasurable (less than \pm 0.002%)

Total harmonic distortion: 16 bit: Less than 0.0018%
20/24 bit: Less than 0.0012%

***Notes for PX model** (Check the specification indication on the rear panel.):
Power requirements : AC 110V - 240V \sim , 50Hz/60Hz
Power consumption : 15W (POWER ON), 3.4W (STANDBY mode)

Appendix A: Country/Area code list for Parental Lock

This list is used for the Parental Lock operation. For details, see page 66.

AD	Andorra
AE	United Arab Emirates
AF	Afghanistan
AG	Antigua and Barbuda
AI	Anguilla
AL	Albania
AM	Armenia
AN	Netherlands Antilles
AO	Angola
AQ	Antarctica
AR	Argentina
AS	American Samoa
AT	Austria
AU	Australia
AW	Aruba
AZ	Azerbaijan
BA	Bosnia and Herzegovina
BB	Barbados
BD	Bangladesh
BE	Belgium
BF	Burkina Faso
BG	Bulgaria
BH	Bahrain
BI	Burundi
BJ	Benin
BM	Bermuda
BN	Brunei Darussalam
BO	Bolivia
BR	Brazil
BS	Bahamas
BT	Bhutan
BV	Bouvet Island
BW	Botswana
BY	Belarus
BZ	Belize
CA	Canada
CC	Cocos (Keeling) Islands
CF	Central African Republic
CG	Congo
CH	Switzerland
CI	Côte d'Ivoire
CK	Cook Islands
CL	Chile
CM	Cameroon
CN	China
CO	Colombia
CR	Costa Rica
CU	Cuba
CV	Cape Verde
CX	Christmas Island
CY	Cyprus
CZ	Czech Republic
DE	Germany
DJ	Djibouti
DK	Denmark
DM	Dominica
DO	Dominican Republic
DZ	Algeria
EC	Ecuador
EE	Estonia
EG	Egypt
EH	Western Sahara
ER	Eritrea

ES	Spain
ET	Ethiopia
FI	Finland
FJ	Fiji
FK	Falkland Islands
FM	Micronesia (Federated States of)
FO	Faroe Islands
FR	France
FX	France, Metropolitan
GA	Gabon
GB	United Kingdom
GD	Grenada
GE	Georgia
GF	French Guiana
GH	Ghana
GI	Gibraltar
GL	Greenland
GM	Gambia
GN	Guinea
GP	Guadeloupe
GQ	Equatorial Guinea
GR	Greece
GS	South Georgia and the South Sandwich
GT	Guatemala
GU	Guam
GW	Guinea-Bissau
GY	Guyana
HK	Hong Kong
HM	Heard Island and McDonald Islands
HN	Honduras
HR	Croatia
HT	Haiti
HU	Hungary
ID	Indonesia
IE	Ireland
IL	Israel
IN	India
IO	British Indian Ocean Territory
IQ	Iraq
IR	Iran (Islamic Republic of)
IS	Iceland
IT	Italy
JM	Jamaica
JO	Jordan
JP	Japan
KE	Kenya
KG	Kyrgyzstan
KH	Cambodia
KI	Kiribati
KM	Comoros
KN	Saint Kitts and Nevis
KP	Korea, Democratic People's Republic of
KR	Korea, Republic of
KW	Kuwait
KY	Cayman Islands
KZ	Kazakhstan
LA	Lao People's Democratic Republic

LB	Lebanon
LC	Saint Lucia
LI	Liechtenstein
LK	Sri Lanka
LR	Liberia
LS	Lesotho
LT	Lithuania
LU	Luxembourg
LV	Latvia
LY	Libyan Arab
MA	Morocco
MC	Monaco
MD	Moldova, Republic of
MG	Madagascar
MH	Marshall Islands
ML	Mali
MM	Myanmar
MN	Mongolia
MO	Macau
MP	Northern Mariana Islands
MQ	Martinique
MR	Mauritania
MS	Montserrat
MT	Malta
MU	Mauritius
MV	Maldives
MW	Malawi
MX	Mexico
MY	Malaysia
MZ	Mozambique
NA	Namibia
NC	New Caledonia
NE	Niger
NF	Norfolk Island
NG	Nigeria
NI	Nicaragua
NL	Netherlands
NO	Norway
NP	Nepal
NR	Nauru
NU	Niue
NZ	New Zealand
OM	Oman
PA	Panama
PE	Peru
PF	French Polynesia
PG	Papua New Guinea
PH	Philippines
PK	Pakistan
PL	Poland
PM	Saint Pierre and Miquelon
PN	Pitcairn
PR	Puerto Rico
PT	Portugal
PW	Palau
PY	Paraguay
QA	Qatar
RE	Réunion
RO	Romania
RU	Russian Federation
RW	Rwanda

Appendix B: Glossary

480i/480p

Indicates the number of scanning lines and scanning format of an image signal. 480i indicates 480 scanning lines with interlace format, and 480p indicates 480 scanning lines with progressive format.

Aspect ratio

A ratio which defines the shape of the rectangular picture in a TV. It is the width of the picture relative to the height. The conventional TV picture is 4:3 in aspect ratio.

Bitstream

The digital form of multichannel audio data (e.g., 5.1-channel) before it is decoded into its various channels.

Channel, CH

Stereo or multichannel audio consists of "channel" signals. "Stereo" audio consists of left and right channels, while 5.1-channel Dolby Digital consists of six channels (front left, front right, rear left, rear right, center and LFE (Low-Frequency Effect channel for sub-woofer, etc.)).

Chapter

The smallest division on DVD VIDEO. It is a division of a title and similar to a track for Audio CD or Video CD.

Component video

Video signals with three channels of separate information that makes up the picture. There are some types of component video, such as R/G/B and Y/C_B(P_B)/C_R(P_R).

Composite video

A single video signal commonly used in most consumer video products that contains all luminance, color, and synchronization information.

Dolby Digital (AC3)

A six-channel system consisting of left, center, right, left rear, right rear and LFE (Low-Frequency Effect channel for sub-woofer, etc.) channels. All processing is done in the digital domain.

Not all Dolby Digital discs contain six (5.1) channel information.

Dolby Surround/Dolby Prologic

Dolby Surround is a five-channel system consisting of left, center, right and left rear, right rear channels. All processing is done in the digital domain.

Dolby Prologic is a four-channel system consisting of left, center, right and rear channel (the single rear channel is usually played through two speakers).

Down-mix

Internal stereo mix of multichannel surround audio by a DVD player. The down-mix signals are output from stereo output connectors.

DTS

A Digital Surround audio encoding format configured with six (5.1) channels, similar to Dolby Digital. It requires a decoder, either in the player or in an external receiver. DTS stands for Digital Theater Systems.

Not all DTS discs contain six (5.1) channel information.

Dynamic range

The difference between the loudest and softest sounds.

Dynamic range compression

The dynamic range compression (DRC) reduces the dynamic range so that you can turn down the volume to avoid disturbing others yet still hear the detail of quiet passages.

Extension

Several letters at the end of a file name. File name extensions usually follow a period and indicate the type of information stored in the file.

Finalize

When conducting multisession recording, this means the closing of a session (fixing) by indicating the halting of writing so as to prevent the addition of any more sessions.

Fs

See "Sampling frequency."

Group

The F.0016 xTD (9)-1..0016 i(er)-96.7(ss)6.nn9V7(r)3(D A "S)4(Ua

2



I

a 64)(

T

F

Letter box

A type of picture playback with the normal (4:3) TV screen. Black bars are shown at the top and bottom of the image to allow playing of wide-screen (16:9) DVD movie without cutting off any sides of the image on a 4:3 TV.

Linear PCM audio

Stands for "pulse code modulation." Linear PCM is the usual digital method without compression, used for audio playback of DVD Video discs, Audio CD discs, etc.

Menu

Most DVD AUDIO, DVD VIDEO or SVCD/Video CD discs provide a menu, through which users can select a desired playback material, condition, etc.

MLP

MLP stands for "Meridian Lossless Packing." A lossless audio compression system that can completely recreate the PCM signal.

MP3

MP3 is an audio data reduction format, which stands for MPEG-1 Audio Layer 3. Using MP3, you can achieve a data reduction of about 1:10.

MPEG

A family of Standards for compressing audio-visual information. "MPEG" standards include MPEG-1, MPEG-2 and MPEG-4. Video CD and MP3 are based on MPEG-1, while DVD is based on MPEG-2. MPEG stands for Moving Picture coding Experts Group.

Multisession

A method of adding data to a CD-R/CD-RW in more than one recording session using the Track-At-Once method.

NTSC (National television system committee)

A black & white and color television system format used in U.S.A., Canada, Mexico and Japan.

Packet Writing

A method of writing data on a CD-R/CD-RW in small increments. Packets can be of fixed or variable length.

PAL (Phase Alternation by Line)

A color television system format used extensively in Western Europe.

Pan scanning

A type of picture playback with the normal (4:3) TV screen, which is panned and zoomed across the wider movie picture, chopping off the left and right sides.

Parental lock

A DVD function that prevents undesired viewing by children depending on disc contents. You need a password to play back a locked disc in the normal condition. Otherwise, undesirable scenes are automatically skipped or replaced with other pictures.

PBC

PBC stands for "Playback control" and is a method of controlling disc play for Video CDs (VCD). You are able to interact with the disc through menus.

Progressive scan

Progressive scanning displays all the horizontal lines of a picture at one time, as a single frame. A progressive-scanning DVD player converts the interlaced (480i) video from DVD into progressive (480p) format for connection to a progressive display. It dramatically increases the vertical resolution.

Region code

Code identifying a geographic region of compatibility for a DVD.

Sampling frequency

The rate at which measurements of an audio signal are taken during A/D and D/A conversion. The measure is samples per second.

Surround

An audio system with more than two (left and right) channels, usually including rear channels, etc.

S-video

A video signal which improves picture quality over standard composite connections. Used on Super VHS, DVD, high end TV monitors, etc.

Title

The largest division on DVD VIDEO.

Track

The smallest division on DVD AUDIO, SVCD, Video CD and Audio CD discs.

Transfer rate

The rate of transferring digital data. Usually the measure is in baud per second. The DVD system applies variable transfer rate system for high efficiency.

Appendix C: Index

Numerics

3D PHONIC
480i
480p

A

A-B repeat.....
Angle.....
Audio language.....
Auto standby.....
AV COMPU LINK.....
AV COMPULINK mode

B

Bonus group.....

C

Chapter 5, 22,
Chapter search
Component video
Copyguard system.....
Copy-protected disc.....
Country code.....

D

D. range compressi
Digest.....
Digital audio outp
Direct selection .
Disc resume.....
Dolby.....
Dolby Digital..
DTS
DVD menu ...
DVD PLAYER

E

Extension

F

Finalize
G
Group

I

ID3
Ini
In
In

Authorized Service Centers

QUALITY **JVC**[®] SERVICE

HOW TO LOCATE YOUR JVC SERVICE CENTER

TOLL FREE: 1 (800) 537-5722

<http://www.jvc.com>

Dear Customer,

In order to receive the most satisfaction from your purchase, please read the instruction booklet before operating the unit. In the event that repairs are necessary, please call 1 (800)537-5722 for your nearest authorized servicer or visit our website at **www.JVC.com**

Remember to retain your Bill of Sale for Warranty Service.

Do not service the television yourself

Caution

To prevent electrical shock, do not open the cabinet. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

Accessories

To purchase accessories for your JVC product, please call toll free: 1 (800)882-2345 or on the web at **www.JVC.com**

thereof may be brev

/

ving a screen



JVC
VICTOR COMPANY OF JAPAN, LIMITED

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>