


# JVC®

DV VIDEO CASSETTE RECORDER  
DV VIDEOKASSETTENREKORDER  
ENREGISTREUR A CASSETTE DIGITAL VIDEO  
DV VIDEOREGISTRATORE  
UNIDAD GRABADORA DE VÍDEO DV

## BR-DV3000E

# Mini DV

INSTRUCTION MANUAL  
BEDIENUNGSANLEITUNG  
MODE D'EMPLOI  
ISTRUZIONI PER L'USO  
MANUAL DE INSTRUCCIONES

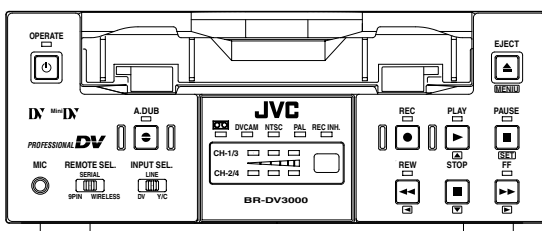

Thank you for purchasing this JVC product.  
Before operating this unit, please read the  
instructions carefully to ensure the best  
possible performance.

English

Deutsch

Français

Español

Italiano

---

---

# Supplement

This equipment is in conformity with the provisions and protection requirements of the corresponding European Directives. This equipment is designed for professional video appliances and can be used in the following environments:

- Residential (including both of the location type class 1 and 2 found in IEC 1000-2-5)
- Commercial and light industrial (including, for example, theatres)
- Urban outdoors (based on the definition of location type class 6 in IEC 1000-2-5)

This apparatus is designed for rack mounting or is used close to other apparatus.

In order to keep the best performance and furthermore for electromagnetic compatibility we recommend to use cables not exceeding the following lengths:

Port	Cable	Length
AUDIO	SHIELDED CABLE	10 meters
LINE	COAXIAL CABLE	10 meters
Y/C	COAXIAL CABLE	10 meters
DV	SHIELDED TWIST PAIR CABLE	4 meters
REMOTE	TWIST PAIR CABLE	5 meters

The inrush current of this apparatus is 1.7 amperes.

## Caution:

- Where there are strong electromagnetic waves or magnetism, for example near a radio or TV transmitter, transformer, motor, etc., the picture and sound may be disturbed. In such a case, please keep the apparatus away from the sources of the disturbance.

# SAFETY PRECAUTIONS

## Warning Notice FOR YOUR SAFETY (Australia)

1. Insert this plug only into effectively earthed three-pin power outlet.
2. If any doubt exists regarding the earthing, consult a qualified electrician.
3. Extension cord, if used, must be three-core correctly wired.

## IMPORTANT (In the United Kingdom) Mains Supply (AC 230 V ~) WARNING – THIS APPARATUS MUST BE EARTHED

The wires in this mains lead are coloured in accordance with the following code;

GREEN-and-YELLOW : EARTH  
BLUE : NEUTRAL  
BROWN : LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the safety earth symbol  $\perp$  or coloured GREEN or GREEN-AND-YELLOW. The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or which is coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

## POWER SYSTEM

### Connection to the mains supply

This unit operates on voltage of 220 V to 240 V AC, 50 Hz/60 Hz.

## WARNING:

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

## CAUTION

To prevent electric shock, do not open the cabinet. No user serviceable parts inside. Refer servicing to qualified service personnel.

## Note:

The rating plate and the safety caution are on the rear of the unit.

The OPERATE button does not completely shut off mains power from the unit, but switches operating current on and off.

## WARNING

It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast, or cable programme and in any literary, dramatic, musical or artistic work embodied therein.

## Caution for AC Mains Lead


### FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.

This product is equipped with 2 types of AC cable. One is for continental Europe, etc. and the other one is only for U.K.

Appropriate mains cable must be used in each local area, since the other type of mains cable is not suitable.


### FOR CONTINENTAL EUROPE, ETC.

Not to be used in the U.K.

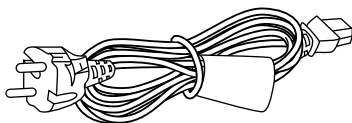

### FOR U.K. ONLY

If the plug supplied is not suitable for your socket outlet, it should be cut off and appropriate one fitted.

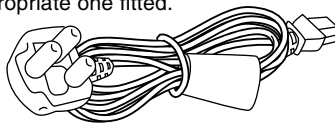

## Thank you for purchasing our DV Video Cassette Recorder BR-DV3000.



As this is a DV-format video cassette recorder, video cassettes with the DV or Mini DV logos can be used with it.

DVCAM cassettes can be recorded in DV format.

**This VTR features dual support for NTSC and PAL. Certain functions however, are supported by only one signal system. They are indicated with (NTSC only) or (PAL only).**

- In order to prevent crumpling due to tape slack, please do not perform important recording within the first and last 2 – 3 minutes run of the tape.
- Recorded video (music) is meant for personal entertainment only and must not be used for other purposes without the prior consent of the copyright owner.
- Our company shall not guarantee the content of any recording effort should this VTR fail to record normally due to defects, either of the main unit itself or the video cassette tape.

## MAIN FEATURES

- **DV format**  
High picture and sound quality by digital technology.
- **Compatible mechanisms for standard/mini DV cassettes**  
It records on and plays back DV cassettes of the standard and mini size. (SP mode only)  
DVCAM cassettes can be recorded in DV format.  
A tape recorded with the DVCAM format can be used only for playback for this VTR.
- **Equipped with composite and Y/C input & output terminal devices.**
- **Equipped with DV IN/OUT terminals. (IEEE1394)**  
It can exchange digital signals with IEEE1394-compatible devices.
- **Dual support for NTSC/PAL**  
Switch between NTSC or PAL as required. This makes it easy to work with internationally sourced material and transfer it to a non-linear system for editing. You can also record to Standard DV or Mini DV tape in either NTSC or PAL system.
- **Wireless/wired remote control**  
It can be controlled with the provided wireless remote controller or the optional wired remote controller RM-G30.
- **Support for RS-422A interface**  
It can be used as a player for an editing system that uses the RS-422A-compatible editing remote controller RM-G820.
- **Recording/playback of time codes**
- **Audio-dubbing (after-recording) function**  
Audio dubbing at a sampling frequency of 32kHz is allowed on CH3 and CH4 (except during DV input).
- **Backup recording function**  
By linking with other DV devices, long-duration continuous recording is possible.
- **Indexed search and blank search function**  
It can search for indexed signal recorded positions or unrecorded parts.
- **Repeat play function**  
There are 3 types of repeat function. (INDEX/VIDEO END/TAPE END)
- **Can be placed in an upright position**  
With the use of the provided stand, it can be positioned upright.

# TABLE OF CONTENTS

---

## INTRODUCTION

Precautions .....	6
Daily maintenance and regular inspection .....	7
Precautions on the use of cleaning tape .....	8
Cassette tape .....	8
Condensation .....	9

## NAMES AND FUNCTIONS OF VARIOUS PARTS

Front panel .....	10
Rear panel .....	14
Wireless remote controller .....	16

## ON-SCREEN DISPLAY

Regarding on-screen display .....	18
Status display .....	19
Event display .....	21
Alarm display .....	22

## PREPARATION

Provided wireless remote controller .....	24
Power .....	26
Selecting the NTSC/PAL signal system .....	28
OPERATION LOCK mode .....	29
Loading/ejecting cassettes .....	30
Setting/displaying date and time .....	31

## RECORDING

Connection and setting .....	34
Setting time codes .....	36
Recording method .....	38
Audio dubbing .....	39
Backup recording function .....	40
Recording using the serial remote terminal ...	41

## PLAYBACK

Connection/setting .....	42
Basic playback method .....	44
Special playback function .....	45
Locate function .....	47
Repeat playback .....	48
Selecting playback audio output .....	49

## EDIT

Using the unit in an editing system .....	50
---	----

## MENU SCREEN

Structure of the menu .....	53
Setting the menu .....	54
Contents of the menus .....	56

## OTHERS

Placing the unit in an upright position .....	65
Warning display .....	66
Troubleshooting .....	68
Checking the hour meter .....	69
Specification .....	70

# INTRODUCTION

## Precautions

### ■ Place of storage and use

Please avoid storing or using this VTR in the following places:

- Extremely hot or cold places beyond the allowable temperature for operation (5°C – 40°C).
- Humid or dry places beyond the allowable humidity range for operation (30% – 80% RH).
- Dusty or sandy places.
- Places exposed to oil, smoke or steam, such as the kitchen vicinity.
- Intensely vibrating or unstable places.
- Places prone to condensation.
- Places that generate strong magnetic fields, e.g., transformer or motor.
- Places near devices that generate electric waves, e.g., transceiver or mobile phone.
- Places that generate radiation, X-rays or corrosive gases.

### ■ Handling the unit

- Please do not place heavy objects on the VTR, like a monitor or TV.
- Please do not insert foreign objects into the cassette slot.
- Mind your finger when loading the cassette. Please be careful not to get your fingers clamped when loading the cassette to prevent injury.
- Place this VTR out of reach of young children. As injury may result from fingers getting clamped when loading the cassette, please keep this VTR out of reach of young children.
- Please do not block the ventilation openings.
- Avoid violent shocks to the unit. Do not drop the unit.
- Please remove the cassette tape from the cassette slot when transporting the unit.
- Please remove the AC adapter to save energy when the unit is not in use.

### ■ Maintaining the unit (Please turn off the power before performing maintenance work.)

Please wipe the unit with a soft cloth. Do not wipe it with thinner or benzene lest the surface melts or becomes dull. For stubborn stains, wipe first with a water-diluted neutral detergent and then wipe dry.

### ■ Please use the provided AC adapter to connect the VTR to a power source.

### ■ Use the supplied power cord. Using a different type or damaged cord may cause fire or electric shock.

## Daily maintenance and regular inspection

This unit uses consumables or components that will wear off. If a worn-out or deteriorated component continues to be used, it may cause the unit to break down. To prevent this, please perform daily maintenance using the head-cleaning tape. With the head-cleaning tape alone, however, the entire tape-winding mechanism cannot be completely cleaned.

Please perform regular maintenance of the components as shown below.

### Regular inspection (maintenance)

The tasks of maintenance involved are similar to that of replacing the engine oil or tire of a car. Depending on the number of usage hours, please clean, inspect or replace the components as follows:

Number of hours	500H	1000H	1500H	2000H	4000H
Drum assembly (including head)	○	○	○	●	●
Head cleaner	☆	●	☆	●	●
Tape guide, roller	○	☆	☆	●	●
Reel disk • tension bands	—	☆	—	●	●

- : Inspection
- : Cleaning, inspection and adjustment
- ☆ : Cleaning and inspection; Replacement if necessary
- : Replacement

**Maintenance necessity and frequency depends on the environment and usage. The above information serves only as a guide.**

#### Usage Time

: You can check the drum usage time via the hour meter display. For details, please refer to page 69, "Checking the hour meter".

#### Maintenance consultation

: For details on the maintenance plan and fee, please consult with your nearest JVC-authorized service agent.

### Head cleaning

- Recording or playing back with a stained head will result in block noise or disrupted sound. Please perform regular head cleaning to maintain superior image and sound quality.



Block noise

- If dust adheres on the head, "HEAD CLEANING REQUIRED!" will be displayed on the monitor when this unit plays a tape.

- For information on how to use the head cleaning tape and the relevant precautions, please refer to page 8, "Precautions on the use of cleaning tape".

# INTRODUCTION

## Precautions on the use of cleaning tape

Please use cleaning tape produced by JVC.

Please follow the instructions below when using the cleaning tape.

1. The tape will run for 10 seconds in the PLAY mode. (Thereafter, it stops automatically and enters the STOP mode.)
  - After loading the cleaning tape, press the PLAY button.
2. For a single cleaning session, use it up to 4 times.
3. Please refer to the following table as a guide for cleaning.

Operating environment of the unit	Low temperature 5°C to 10°C	Room temperature 10°C to 35°C	High temperature 35°C to 40°C
Guide for using cleaning tape	1 to 2 times every 5 hours	1 to 2 times every 20 to 30 hours	1 to 2 times every 5 hours

### Memo:

1. Under low humidity conditions, (10% RH to 30% RH), please perform head cleaning at intervals of half of the following stated periods.
2. If M-DV80 is used immediately after cleaning, the VTR warning (“HEAD CLEANING REQUIRED!”) may disappear only after the tape has run for some time.
3. Please use the cleaning tape at room temperature (10°C to 35°C).
4. Instructions for using the cleaning tape are stated inside its case. The contents may be slightly different from those stated here.  
Please follow the instructions in this manual.

## Cassette tape

This unit can record onto and playback standard DV and mini DV cassette tapes (for SP mode only). Please use the following JVC cassettes with the **DV** or the **Mini DV** logos.

- **Standard DV cassettes**
  - LA-DV276
  - LA-DV186
  - LA-DV124
- **Mini DV cassettes**
  - M-DV63PRO
  - M-DV60
  - M-DV30


### Memo

- DVCAM cassettes can be recorded in DV format. Tapes recorded in DVCAM format can be played (SP Mode).
- M-DV80 cassettes (Mini DV 80min tape) cannot be used with this unit.

### Erasure prevention

DV cassettes have a safety slide at the back to prevent accidental erasure.

- To prevent accidental erasure of important records, push the slide to the “SAVE” position.
- To record, push the slide to the “REC” position.

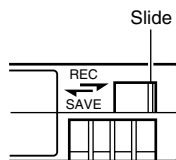

### Precautions on the use of tape

- Reverse sides of videotapes cannot be used.
- Please store the tape only after it has been fully rewound, so as to avoid damaging the tape.
- Please store the cassette in places low in humidity, well-ventilated and fungus-proof.
- When a cassette is used repeatedly, noise may increase due to e.g., dropout, etc. hence affecting its performance. Please do not use dirty or damaged tapes as they will shorten the life span of the rotation head.



## ■ For recording and storing videotapes in the best condition

Observe the following instructions for the best recording and storage of videotapes.

- Take care of the conditions of handling videotapes.

It is recommended that you record and store videotapes in the environment below.

	Recording	Storage	
		Short period (Up to 10 years)	Long period (Over 10 years)
Temperature	17°C to 25°C	15°C to 23°C	15°C to 19°C
Humidity	30% to 70%	40% to 55%	25% to 35%
Hourly temperature change	Less than 10°C	–	–
Hourly humidity change	Less than 10%	–	–

- Do not leave the videotapes neglected for a long period.


If videotapes are left wound for a long period of time, it may result in distortion of the tape. Also it may cause tape-to-tape adhesion (known as blocking). It is recommended that videotapes be unspooled and rewound once a year for refreshing.

- When tapes are not in use, store them in cases and on end.


Storage cases protect videotapes from humidity, dust and ultraviolet. Keep tapes in cases and do not store them lying flat. When housed in a horizontal position, pressure from other tapes can cause distortions and deformations of the tape edges.

## Condensation

- When this unit is moved from a cold to a warm place abruptly, the vapor in the warm air will come into contact with the head drum or the tape guides. When chilled, the vapor turns into droplets of water. This state is known as condensation. When condensation occurs, the videotape will adhere to the head drum or the tape guides and will be damaged.
- Condensation occurs on this unit in the following circumstances:
  - It is moved abruptly from a cold place to a warm place.
  - It is used in a room immediately after the heater has been turned on, or when cold breeze from an air-conditioner blows onto it.
  - It is used at a place of high humidity.

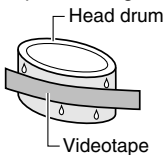

- When condensation occurs, the monitor displays the following warning:

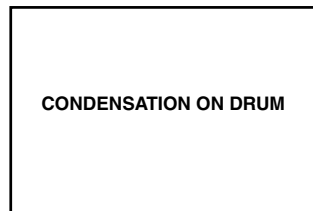

To remedy, leave the unit with the power ON and wait until the WARNING indicator disappears.

- Prevention of condensation


When transporting the BR-DV3000 from a cold to a warmer place abruptly, first take out the cassette. Then place the BR-DV3000 in a plastic bag and seal it before transporting the camera.

Leave the BR-DV3000 in the sealed plastic bag until the camera has the same temperature as the surroundings. This will prevent condensation.

When a cassette tape is loaded, please do not transport e.g., from an external cold place to a warm room thereby subjecting the unit to drastic temperature changes. After moving the unit, please do not use it until the innards are stabilized.

# NAMES AND FUNCTIONS OF VARIOUS PARTS

## - Front panel -

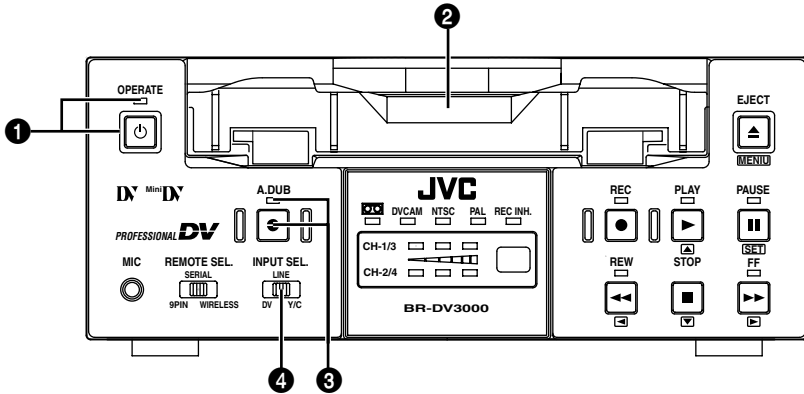

### ① [OPERATE] Operate button/LED

- Press this button to turn on the power and operate the unit. (Operate ON)  
Press this button again to turn off the power. (Operate OFF)
- The OPERATE LED lights up as follows.  
Operate ON : the LED lights up green  
Operate OFF : the LED lights up red  
VTR error : the LED blinks in red

#### Memo

- When the DC IN MODE item of the SYSTEM menu is set to "OPE ON" and power is supplied to the ① DC IN terminal located at the rear panel, the unit goes into the OPERATE ON state even if this button is not pressed.
- Even when the power has been turned off with this button, a small amount of electricity will still be channeled into the unit. Therefore, if the unit is not going to be used for a long period of time, please remove the AC adapter to reduce energy consumption.

### ② Cassette slot

- Load a cassette into or unload it from the slot. Please insert a standard DV or a mini DV cassette. (Page 30)
- When the unit is in the OPERATE OFF state and if a cassette is loaded, it goes into the ON state.

### ③ [A. DUB] Audio dubbing button/LED


- Press this button for audio dubbing (after-recording).  
For audio dubbing, set the AUDIO MODE item of the AUDIO/VIDEO menu to "32K".  
Sound produced by the ⑥ MIC terminal or the ⑨ AUDIO IN terminal at the rear panel (Page 15) is recorded on CH3 and CH4 channels.
- During audio dubbing, the A. DUB LED lights up red.
- If the INPUT SEL. switch is set at "DV", audio dubbing is not possible. (Page 39, "Audio dubbing")

### ④ [INPUT SEL.] Input video signal selection switch

- Select the video signal input with this switch.  
Y/C : YC separate video signals from the Y/C IN terminal  
LINE : composite video signals from the LINE IN terminal  
DV : DV signals from the DV IN/OUT terminal (IEEE1394)

#### Note

During recording, manipulating this switch will not bring about any effect.

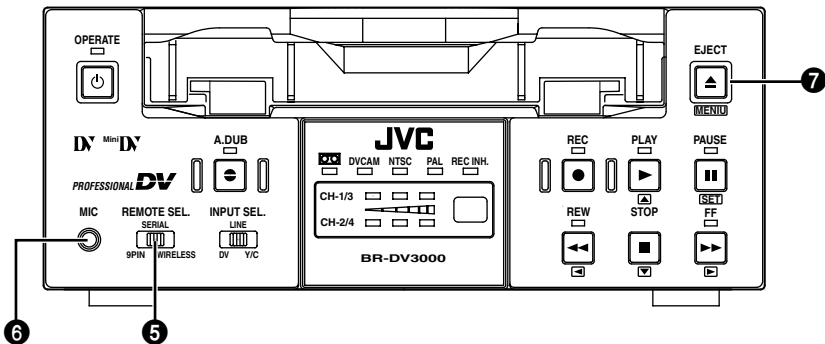

## 5 [REMOTE SEL.] Remote select switch

Use this switch to select the remote controller type.

**9 PIN** : Select this to use the RS-422A-compatible editing remote controller (RM-G820) that connects to the 4 9 PIN REMOTE terminal located at the rear panel. Please use this unit as a player.

\* This setting is valid only when the REMOTE item of the REMOTE menu is set to ON.

**SERIAL** : Select this to use the serial remote controller (RM-G30) that connects to the 3 SERIAL REMOTE terminal located at the rear panel.

\* This setting is valid only when the REMOTE item of the REMOTE menu is set to ON.

**WIRELESS** : Select this to use the provided wireless remote controller.

### Memo

- When 9 PIN or SERIAL is selected, the buttons on the unit you wish to render operable can be selected from the LOCAL FUNCTION item of the REMOTE menu. (Page 59)
- During OPERATION LOCK, this switch will not be effective.
- Control via the DV IN/OUT terminal is possible (ie unaffected by the switch setting).

## 6 [MIC] Microphone input terminal

This is the mini jack for monaural microphone input. When this terminal is connected to a microphone, sound input via the AUDIO IN terminal located on the rear panel is not recorded. Sound from this terminal is recorded on CH1/CH2 in the RECORD mode and CH3/CH4 in the AUDIO DUBBING mode.


## 7 [EJECT] Eject button

- Press this button to eject the cassette.

### Memo

It takes about 6 seconds for the cassette to be ejected.

- If no cassette is loaded and this button is pressed for at least 2 seconds, a menu will be displayed on the monitor connected to the VIDEO LINE OUT or Y/C OUT terminal.
- When the menu is displayed, pressing this button will resume the usual screen. (Page 54, "Setting the menu")

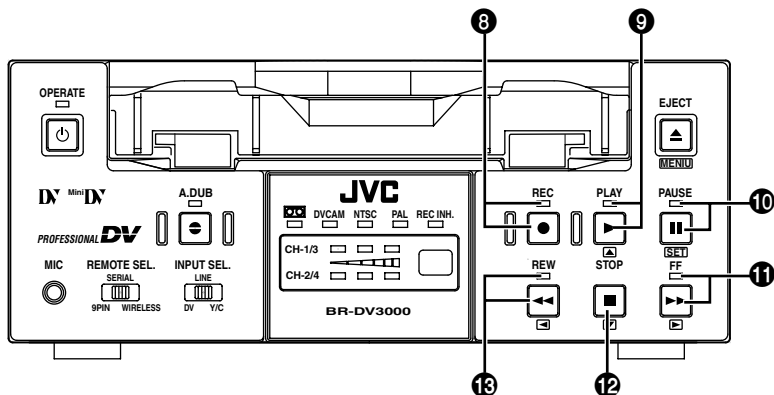

### 8 [REC] Record button/LED

- Hold down this button and press the 9 PLAY button to start recording. During recording, the LED lights up red.
- Hold down this button and press the 10 PAUSE button to pause the recording.
- When this button is pressed during recording, an index signal is recorded on the tape (valid when the INDEX WRITE item in the SYSTEM menu is set to ON).
- When recording is stopped, the time code generator value can be verified by holding this button down. If the TC DUPLICATE menu item is set to AUTO or NON DROP, EE signals of the DV Input time code and Date/Time can be verified.

### 9 [PLAY] Play button/LED

- Press this button to start playing back a tape. During playback, the LED lights up green.
- When recording is paused, press this button to resume recording.
- When the menu is displayed, use this button to select the menu items or setting values.

### 10 [PAUSE] Pause button/LED

- During recording, press this button to pause it. During playback or STOP mode, press this button to enter the STILL mode. When recording is paused or when the unit is in the STILL mode, the LED lights up green.
- If this button is pressed simultaneously with the A.DUB button in the STILL mode, the Audio Dubbing Pause mode will be engaged.
- When the menu is displayed, use this button to confirm the menu items or setting values.

### 11 [FF] Fast forward button/LED


- When the unit is in the STOP mode, press this button to execute fast-forward winding of the tape.
- When the unit is in the PLAYBACK or STILL mode, press this button to execute fast-forward playback. The Fast-forward playback speed changes in the following sequence each time this button is pressed:  
X20→X5→X10→X20...  
In the DVCAM mode, the maximum speed is 15X.
- During fast-forward winding or fast-forward playback, the LED lights up green.
- When the menu is displayed, use this button to display selected menu items.  
When setting up the date, time or time code, use this button to select the data segment.

### 12 [STOP] Stop button/LED

- Press this button to stop operation. (of rewind, playback, etc.)
- When the menu is displayed, use this button to select the menu items or setting values.

### 13 [REW] Rewind button/LED

- When the unit is in the STOP mode, press this button to rewind the tape.
- When the unit is in the PLAYBACK or STILL mode, press this button to execute reverse playback. The Reverse playback speed changes in the following sequence each time this button is pressed:  
X20→X5→X10→X20...  
In the DVCAM mode, the maximum speed is 15X.
- During rewinding or reverse playback, the LED lights up green.
- When the menu is displayed, press this button to return to the previous screen.  
When setting up the date, time or time code, use this button to select the data segment.

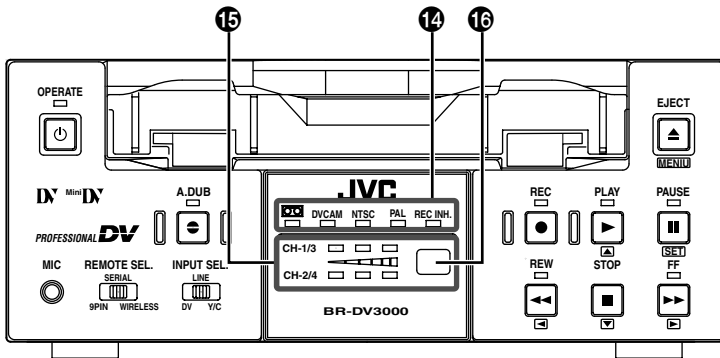

### 14 Indicator



: When a cassette is loaded, the LED lights up green. (Likewise when the unit is in the OPERATE OFF state.) When a cassette is being loaded or ejected, the LED blinks.

**DVCAM** : When the unit plays back a tape recorded in the DVCAM format, the LED lights up green.

**NTSC** : The LED lights up green in the following cases:

- In the composite video or YC video signal input mode and the 2 NTSC/PAL switch located at the rear panel (Page 14) is set as "NTSC".
- A tape recorded with NTSC signals is played back.
- When NTSC system DV signals are input while the INPUT SEL. switch is set at "DV".

**PAL** : The LED lights up green in the following cases:

- In the composite video or YC video signal input mode and the 2 NTSC/PAL switch located at the rear panel is set as "PAL".
- A tape recorded with PAL signals is played back.
- When PAL system DV signals are input while the INPUT SEL. switch is set at "DV".

**REC INH** : The LED lights up red for about 5 seconds when the unit is set to the recording mode but fails to record. E.g. when the rear slide of the cassette is pushed to the "SAVE" position.

### 15 Audio indicator


This indicator allows the user to check the availability of audio signals.

3 indicators each are available to CH1/3 and Ch2/4.

### 16 Sensor for wireless remote controller

When using the provided wireless remote controller, please point it to this sensor.

(Page 25, "Using the wireless remote controller")

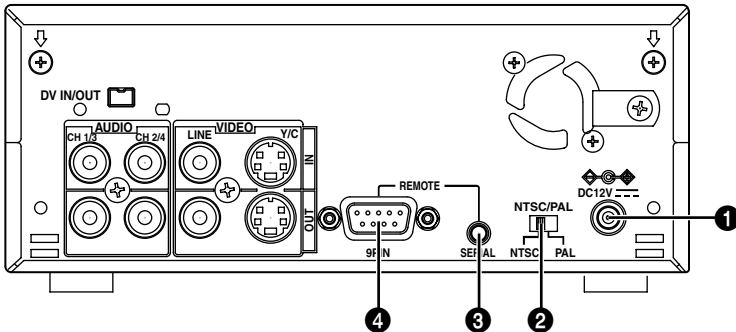

### 1 DC power input terminal (2P)

This is used for DC12V input. It connects the DC power cord of the provided AC adapter.

#### Memo

- When power is supplied to this terminal, the OPERATE indicator located at the front panel lights up. (The LED lights up red when the OPERATE indicator is OFF.)
- Setting this unit to OPERATE ON, OPERATE OFF or PLAY mode when the power is supplied to this terminal can be done by making the appropriate selections from the DC IN MODE item in the SYSTEM menu.

### 2 [NTSC/PAL] NTSC/PAL signal selection switch

Use this switch to select NTSC or PAL as the signal system. Use it to make a selection when composite video signals or YC separate video signals are input.

**NTSC** : Use this setting for NTSC signal input.  
The NTSC indicator on the front panel lights up.

**PAL** : Use this setting for PAL signal input.  
The PAL indicator on the front panel lights up.

#### Memo

- For playback or DV signal input, signals are determined automatically and not affected by the status of this switch.
- Please turn the unit to OPERATE OFF before using this switch. If switching is performed when the VTR is in the OPERATE ON mode, the VTR will automatically go into the OFF mode before engaging the ON mode.
- It cannot be used for NTSC/PAL conversion.

### 3 [SERIAL REMOTE] serial remote terminal (mini jack)

Connect this terminal to the serial remote controller RM-G30, which is available separately. To control this unit via this terminal, please set it up as follows.

- Set the REMOTE item of the REMOTE menu to "ON".
- Set the REMOTE SEL. switch on the front panel to "SERIAL".

 

#### Memo


To use this terminal as the FOOT switch input terminal, please set the FOOT SW item of the REMOTE (2/2) menu. (Page 60)

### 4 [9 PIN REMOTE] 9-pin remote terminal (D-SUB)

Use this terminal to connect to the RS-422A-compatible editing remote controller (RM-G820). Please use this unit as a player. To control this unit with this terminal, please set it up as follows:

- Set the REMOTE item of the REMOTE menu to "ON".
- Set the REMOTE SEL. switch on the front panel to "9 PIN".

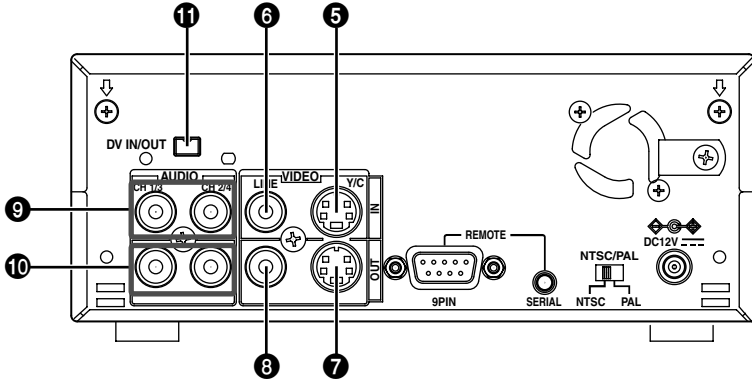

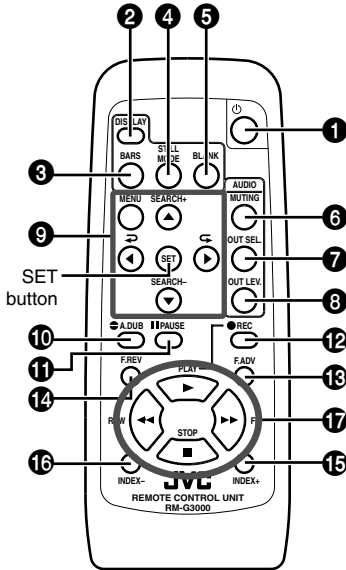


## 1 [OPERATE] button

Press this button to turn on the power of the unit. (OPERATE ON)

Press this button again to turn off the power. (OPERATE OFF)

## 2 [DISPLAY] button

Use this button to turn on/off, the on-screen (e.g. status screen) display on the monitor connected to the VIDEO LINE OUT terminal and Y/C OUT terminal. Each time this button is pressed, the display mode changes in the following sequence: ON (always display) → AUTO (display when switching mode) → OFF.

( Page 18, "On-screen display")

## 3 [BARS] button

When this button is pressed in the Stop or REC-Pause mode, the color bar of the built in signal generator will be output. When it is pressed again, the screen returns to the usual display. During DV signal input, the color bar will not be output.

### Note

Please do not use it as the standard signal because the signals are simplified.


## 4 [STILL MODE] button

Use this button to select images in the STILL mode.

When the unit is in the STILL mode, press this button to toggle images in the following sequence.

Field image (1st/2nd alternate still) → 1st field image → 2nd field image → frame image

## 5 [BLANK] button

When the unit enters the STOP mode, press this button to begin a blank search. Once it finds a blank part of the tape, it will enter the STILL mode. ( Page 47)

## 6 [AUDIO MUTING] button

During playback, press this button to mute the audio output. Press this button again to re-enable audio output.

## 7 [AUDIO OUT SEL.] button

When playing back tapes recorded in the 32K mode, use this button to select the audio channel that allows output from the AUDIO OUT terminal.

CH1/2 → CH3/4 → MIX

## 8 [AUDIO OUT LEV.] button

 
Use this button to switch the standard level of the playback or EE audio output (NORMAL or ATT). When it is set to ATT, the output level is reduced by 8dB.

## 9 Buttons related to menu setting and variable speed playback

### ■ [MENU] button

When the unit enters the STOP mode and this button is pressed, a menu will be displayed on the monitor connected to the VIDEO LINE OUT or Y/C OUT terminal. When the menu is displayed, press this button to return to the usual screen display.

### ■ [SEARCH+] / ▲ button

- During playback, STILL mode or variable speed playback in the forward direction, press this button to speed up playback.
- During reverse playback or variable speed playback in the reverse direction, press this button to slow down the playback speed. ( page 46)
- When the menu is displayed, use this button to select the menu items or setting values.



### ■ [SEARCH-] / ▼ button

- During playback, STILL mode or variable speed playback in the forward direction, press this button to slow down the playback speed.
- During reverse playback or variable speed playback in the reverse direction, press this button to speed up the playback speed. (☞ page 46)
- When the menu is displayed, use this button to select the menu items or setting values.

### ■ [◀] / ▶ button

- During reverse playback/ variable-speed playback, press this button to execute forward playback.
- When the menu is displayed, use this button to display the selected menu items. During date/time or time code setup, press this button to move the cursor to the right.

### ■ [▶] / ◀ button

- During forward playback/ variable-speed playback, press this button to execute reverse playback.
- When the menu is displayed, press this button to display the previous menu. During date/time or time code setup, press this button to move the cursor to the left.

### ■ SET button

During menu display, press this button to confirm the menu items or setting values.

## 10 [A. DUB] button

Press this button to perform audio dubbing (after-recording). (☞ Page 39, "Audio dubbing")

## 11 [PAUSE] button

During recording, audio dubbing or playback, press this button to pause recording or enter the STILL mode.

If this button is pressed in the STOP mode, the STILL mode will be engaged.

## 12 [REC] button

- Hold down this button and press the PLAY button to begin recording.
- During recording, press this button to record an index on the tape. (when the INDEX WRITE item of the SYSTEM menu is set to ON)
- When the unit enters the STOP mode, holding this button down will enable you to check the value of the time code generator.

## 13 [F. ADV] button

Each time this button is pressed in the STILL mode, the image is advanced one frame. When holding down this button, the image is advanced continuously frame by frame.

## 14 [F. REV] button

Each time this button is pressed in the STILL mode, the image is reversed one frame. When holding down this button, the image is reversed continuously frame by frame.

### Memo

The image of frame advance playback or frame reverse playback can be selected with the STL/ F.ADV MODE item of the SYSTEM menu or the STILL MODE button on the wireless remote controller.

## 15 [INDEX+] button

Press this button to perform an index search in the forward direction. (☞ Page 47)

## 16 [INDEX-] button

Press this button to perform an index search in the reverse direction. (☞ Page 47)

## 17 Operation buttons

### ■ [PLAY] (▶) button

- Press this button to play back.
- Press this button to resume recording from the PAUSE mode.

### ■ [FF] (▶▶) button

- Press this button to fast-forward the tape when the unit is in the STOP mode.
- Press this button to execute fast-forward playback in the PLAY or STILL mode.

### ■ [REW] (◀◀) button

- Press this button to rewind the tape when the unit is in the STOP mode.
- Press this button to execute reverse playback in the PLAY or STILL mode.


### ■ [STOP] (■) button

- Press this button to stop the tape.


# ON-SCREEN DISPLAY - Regarding on-screen display -

Besides E-E images and playback images, the monitor connected to the VIDEO LINE OUT terminal and Y/C OUT terminal provides the following on-screen information.

Wireless remote controller

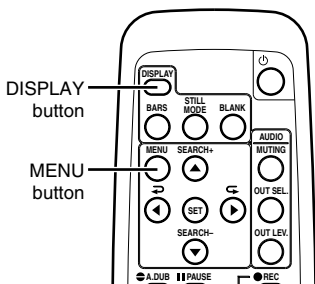


DISPLAY (1/2) menu

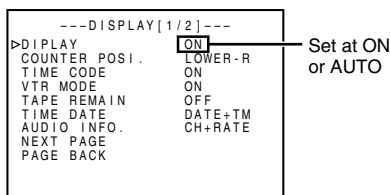

On-screen display	Contents	Method
<b>Status display</b>	It displays the setting status of date/time, time code and VTR operation mode.	<p><b>Main unit</b></p> <p>Set the DISPLAY item of the DISPLAY (1/2) menu as follows:</p> <p>ON : Always display. Depending on the items, Event and Alarm displays are shown for about 3 seconds.</p> <p>AUTO : It displays for about 4 seconds after switching between modes.</p> <p>OFF : No on-screen display.</p>
<b>Event display</b>	It displays the operating status of the blank search, index recording/search, or the wireless remote control.	<p><b>Remote controller</b></p> <p>The display can be turned ON/OFF with the DISPLAY button. Each time the DISPLAY button is pressed, the display mode changes in the following sequence: ON (Always display) → AUTO → OFF.</p> <p>*The settings for the DISPLAY menu items will also change accordingly.</p>
<b>Alarm display</b>	It displays alarm messages upon operation errors or if the unit is in a poor state for operation.	
<b>Warning display</b>	It displays warning messages with error codes in the event of VTR anomalies. (Page 66)	It is displayed automatically when anomalies happen.
<b>Menu display</b>	It displays the menu setting screen. (Page 53)	<p><b>Main unit</b></p> <p>If no cassette is loaded and the EJECT button is pressed for at least 2 seconds, the menu will be displayed.</p> <p><b>Remote controller</b></p> <p>If the unit is in the STOP mode and the MENU button is pressed, the menu screen will be displayed.</p>


# ON-SCREEN DISPLAY - Status display -

■ **Status display:** It displays the current settings and operating status.

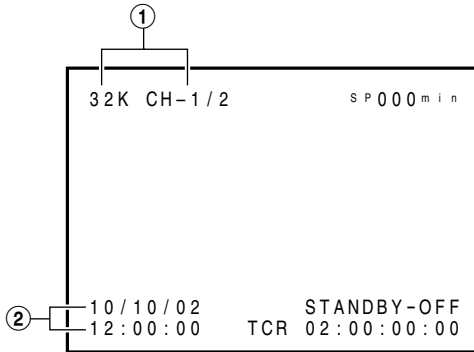

No.	Item	Content
①	<p><b>Sampling frequency/audio output CH</b></p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>Memo</b></p> <p>If the time code display position is set to the upper left, this item will be displayed on the lower right.</p> </div>	<ul style="list-style-type: none"> <li>• Sampling frequency During recording, the setting value of the AUDIO MODE item of the AUDIO/VIDEO menu is displayed (32K or 48K). During playback, the sampling frequency of the sound recorded on the tape is displayed (32K, 48K, 44.1K). During DV signal input, the sampling frequency of the sound input is displayed.</li> <li>• A.LOCK Lights up when the video and audio sampling clocks (at 48kHz) are synchronized in the PLAY mode. Lights up in the RECORDING mode and EE mode. Does not light up when the sampling rate is 32kHz or 44.1 kHz.</li> <li>• Audio output channel During recording, the audio channel recorded on the tape is displayed. During playback, the audio channel output from the AUDIO OUT terminal is displayed (CH1/2, CH3/4, MIX). (only in 32K mode)</li> <li>• The AUDIO INFO. item of the DISPLAY menu can be set to activate/deactivate the display.</li> </ul>
②	<p><b>Date/time</b></p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>Memo</b></p> <p>If the display position of the time code is set to the lower left, this item will be displayed on the lower right.</p> </div>	<ul style="list-style-type: none"> <li>• It displays the date (DD/MM/YY) and time (HR:MM:SS).</li> <li>• When the unit is in the RECORDING or STOP mode, it displays the data of the built-in clock.</li> <li>• During playback, fast forward or rewind, the data recorded on the tape is displayed.</li> <li>• During DV signal recording, the data from the DV terminal is displayed. If the REC button is pressed in the STOP mode, the input data from the DV terminal will be displayed.</li> <li>• The style for displaying the date and time can be selected from the DATE STYLE and TIME STYLE items of the DISPLAY menu.</li> <li>• The TIME/DATE setting of the DISPLAY menu can be set to turn on/off the date and time display or to select the style.</li> <li>• When the data/time is not set, "—" will be displayed. If a tape with no date and time data is played, "—" will be displayed.</li> </ul>


# ON-SCREEN DISPLAY - Status display - (continued)

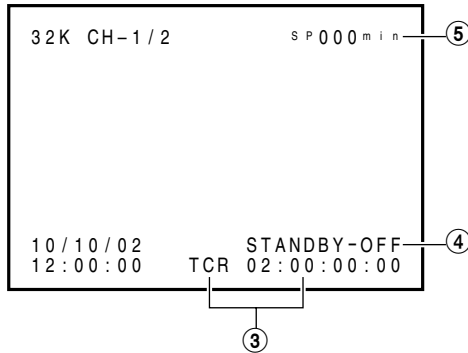

No.	Item	Content
③	<b>Time code</b>	<ul style="list-style-type: none"> <li>It displays the time codes (hour, minute, second and frame). During playback, the time codes recorded on the tape are displayed. <ul style="list-style-type: none"> <li>TCR : time code reader data</li> <li>TCG : time code generator data</li> <li>DTCG : time code data input from a DV IN terminal</li> </ul> </li> <li>The symbols for the second and frame differ according to the framing modes. (NTSC only) <p style="text-align: center;"><b>00 : 00 : 00 : 00</b></p> <ul style="list-style-type: none"> <li>dot (.) is used for a dropped frame.</li> <li>colon (:) is used for a non-dropped frame.</li> </ul> </li> <li>The time code display position can be set via the COUNTER POS1. item of the DISPLAY menu.</li> <li>The TIME CODE item can be set to turn on/off the time code display.</li> <li>The user's bit is not displayed.</li> </ul>
④	<b>VTR operation mode</b>	<p>It displays the VTR operation modes, including: PLAY, EJECT, FF, REW, STANDBY-ON, STANDBY-OFF, STILL, REC, REC PAUSE, A. DUB, A. DUB PAUSE, SHTL (shuttle search), JOG (F.ADV, R.ADV), BLANK SRH (blank search), NO CASSETTE (cassette not loaded), OPERATE OFF.</p> <p>When SHTL or JOG is displayed, the speed will also be displayed at the same time.</p> <ul style="list-style-type: none"> <li>The VTR MODE item of the DISPLAY menu can be set to turn on/off the VTR operation mode display.</li> </ul>
⑤	<b>Remaining tape</b>  <div style="border: 1px solid black; padding: 5px;"> <b>Memo</b>                      If the display position of the time code is set to the upper right, this item will be displayed on the lower right.                 </div>	<p>It displays the remaining tape duration (minutes). If it is not identified, " --- " is displayed.</p> <ul style="list-style-type: none"> <li>The TAPE REMAIN item in the DISPLAY menu can be set to turn on/off the remaining tape duration display.</li> <li>The SP display disappears when the DVCAM cassette is being played back.</li> <li>Please use the remaining tape time as a gauge.</li> </ul>

# ON-SCREEN DISPLAY - Event display -

■ **Event display** : When a specific function is in activation or when the operation status is changed with the remote controller, etc, the events will be displayed at the positions shown below.

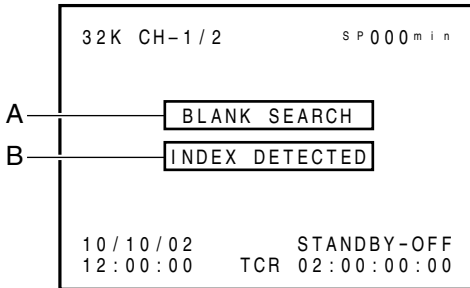

## ■ Display at position A ...Operation in progress

Display	Contents
<b>BLANK SEARCH</b>	Blank search in progress.
<b>INDEX + 1</b>	Index search in progress. The number indicates the index search position.
<b>INDEX MARK</b>	When an index is written on the tape during recording.

## ■ Display at position B ...Display for about 3 seconds

Display	Contents
<b>INDEX DETECTED</b>	Index is found during an index repeat operation.
<b>VIDEO END DETECTED</b>	Video end is found during a video end repeat operation.
<b>AUDIO MUTING ON</b>	Audio is muted with the remote controller.
<b>AUDIO MUTING OFF</b>	Audio is de-muted with the remote controller.

Display	Contents
<b>AUDIO OUT LEVEL NORM</b>	The standard level of the playback or EE audio level is set to NORMAL or ATT with the remote controller.
<b>AUDIO OUT LEVEL ATT</b>	
<b>AUDIO OUT CH-1/2</b>	The playback audio channel is set to CH1/2, CH3/4 or MIX with the remote controller.
<b>AUDIO OUT CH-3/4</b>	
<b>AUDIO OUT MIX</b>	
<b>DISPLAY ON</b>	The on-screen display is turned on with the remote controller.
<b>DISPLAY AUTO</b>	The on-screen display is set to AUTO with the remote controller. In the AUTO mode, the on-screen display is shown for about 4 seconds between mode switches.
<b>DISPLAY OFF</b>	The on-screen display is set to OFF with the remote controller.
<b>FIELD STEP</b>	Field by field advance playback is selected with the remote controller.
<b>1ST FIELD STILL</b>	When still or frame advance playback is selected with the remote controller, the type of still image is displayed.
<b>2ND FIELD STILL</b>	<ul style="list-style-type: none"> <li>• 1st FIELD STILL</li> <li>• 2nd FIELD STILL</li> <li>• FRAME STILL</li> </ul>
<b>FRAME STILL</b>	

# ON-SCREEN-DISPLAY - Alarm display -


---

- **Alarm display** : Alarm messages are displayed as shown below, when an operation error has occurred or when the unit is in a poor condition for operation. E.g., dirty head.

Display	Contents
<b>LOW VOLTAGE</b>	The voltage of the DC input power is 16.9V (nominal 14VDC). The voltage of the DC input power is 16.9V (nominal 14VDC). The voltage of the DC input power is 16.9V (nominal 14VDC). The voltage of the DC input power is 16.9V (nominal 14VDC).
<b>HEAD CLEANING REQUIRED!</b>	
<b>OVERHEATING!</b>	

Display	Contents
<b>COPY INHIBIT</b>	The user attempts to record signals protected with the copy guard.
<b>REC INHIBIT</b>	The user attempts to record on a write protected cassette tape. (The rear slide is pushed to "SAVE".)
<b>A. DUB INHIBIT (REC TAB)</b>	The user attempts to perform audio dubbing on a write protected cassette tape. (The rear slide is pushed to "SAVE".)
<b>A. DUB INHIBIT (48K)</b>	This message is displayed when audio dubbing is attempted under the following conditions: <ul style="list-style-type: none"> <li>• The AUDIO MODE item of the AUDIO/VIDEO menu is set to 48K.</li> <li>• The tape is recorded with a sample frequency of 48kHz.</li> </ul>
<b>A. DUB INHIBIT (LP)</b>	The user attempts to perform audio dubbing on a tape recorded in the LP mode.
<b>A. DUB INHIBIT (BLANK)</b>	The user attempts to perform audio dubbing on a blank tape.
<b>A. DUB INHIBIT (DV)</b>	The user attempts to perform audio dubbing during DV signal input. (The INPUT SEL. switch is set to "DV")
<b>A. DUB INHIBIT (NTSC/PAL)</b>	This message is displayed when the signal system is changed during audio dubbing (NTSC or PAL).
<b>A. DUB INHIBIT (DVCAM)</b>	The user attempts to perform audio dubbing on a DVCAM format tape.
<b>OPERATION LOCK</b>	This message is displayed when a button on the unit is pressed while the OPERATION LOCK function is engaged (ie, the OPERATION item of the SYSTEM (2/2) menu is set as "ON").

■ **Warning display** : When anomalies occur in the VTR, warning messages with error codes will be displayed.

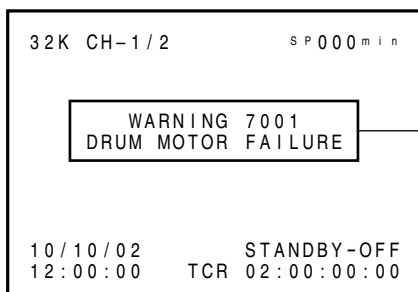

**Warning display**


For details, please refer to page 66, "Warning Display".

# PREPARATION - Provided wireless remote controller -


## Loading the batteries

Before using the wireless remote controller, please load 2 batteries (AA) in.


- 1** Lift up the cover of the battery compartment.

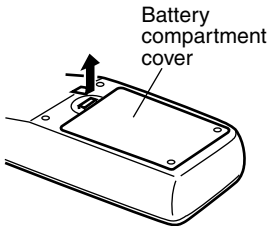

- 2** Load in 2 batteries (AA).  
• Please insert the ⊖ pole in first.

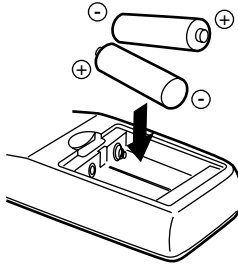

- 3** Close the cover.

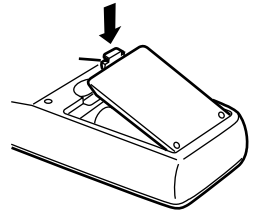

### Memo

#### Guide on battery replacement.

When the operable distance of the remote controller is decreased, the batteries have become exhausted. Please replace them.  
Guide for replacement: Approx 3 months based on average usage of 1000 times a day.

#### When replacing the batteries

- Please use AA batteries.
- Please use 2 new batteries.  
(Do not mix new and old batteries.)
- Please load the batteries correctly according to the ⊕ and ⊖ signs.
- Please read the precautions printed on the batteries.

 
### Precautions on the use of battery

- The provided batteries are for confirmation of operation.
- If the remote controller is not to be used for a long period of time, please remove the batteries from the compartment.
- If the remote controller does not work as expected, please remove the batteries and reload them after 5 minutes.

### Note

If fluid leaks from the battery, please wipe the battery compartment thoroughly.  
If the fluid comes into contact with your body, please rinse the affected parts with water thoroughly.

### Gebruikte batterijen:



For Nederlands only.  
Uitsluitend voor Nederlands.



---


## Using the wireless remote controller

**Maximum distance to the sensor  
of the unit : 6m  
Angle : within 30°**


# PREPARATION - Power -

---

Connect the provided AC adapter to the main unit.

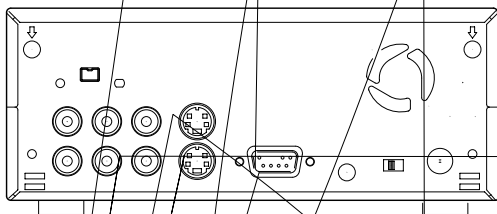

## Switching on the power

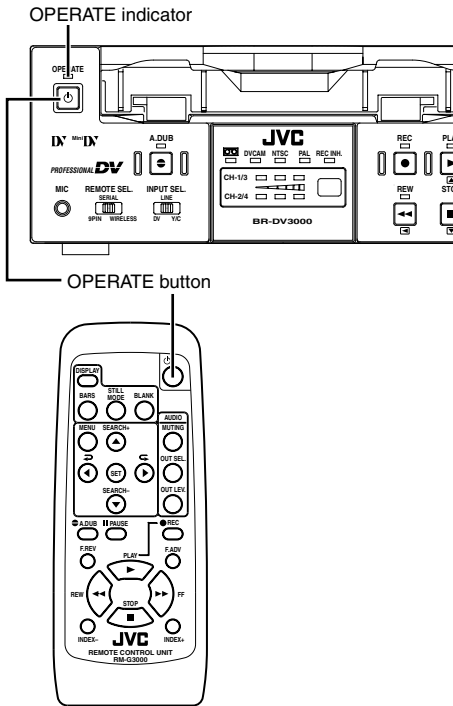

- When the unit is in the OPERATE OFF mode (the OPERATE indicator lights up red), press the OPERATE button on the unit or the remote controller.

- The power is turned on and the OPERATE indicator lights up green. The unit is now ready for operation. (OPERATE ON mode)

### Memo

- Once a cassette has been loaded in the OPERATE OFF mode, power will be turned on and the OPERATE ON mode will be engaged.
- The remote controller is only effective when the REMOTE SEL. switch is set to "WIRELESS".

### Note

- After pressing the OPERATE button and turning on the power, if the LED blinks in green or the "UNPLUG MAIN POWER, PLUG BACK IN AFTER A WHILE" is displayed on the monitor, please unplug the power cord from the outlet and then wait for some time before plugging it in again.

## Turning off the power

- Stop all operational activities of the unit.

### 1. Press the OPERATE button on the unit or the remote controller.

- The unit will enter the OPERATE OFF mode and the OPERATE indicator will light up red.


### 2. If the unit is not to be used for a long period of time, please unplug the AC adapter.

- To disconnect the AC adapter, please unplug the power cord from the socket first.

# PREPARATION - Selecting the NTSC/PAL signal system -

This unit supports both the NTSC and PAL signal system.

Before inputting analogue signals (composite or YC separate video signals), please select the signal system.

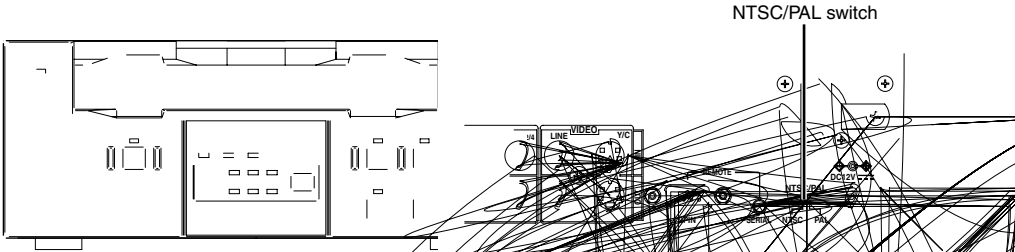

## Steps

1. Set the unit to the **OPERATE OFF** mode.
2. Please select the signal system with the **NTSC/PAL switch** on the rear panel.
3. Press the **OPERATE** button to engage the **OPERATE ON** mode. Either the **NTSC** or **PAL** indicator on the front will then light up, according to the **NTSC/PAL switch** setting.

## Memo

- In the playback mode, the signal system of the tape is automatically identified, regardless of the NTSC/PAL switch setting.
- During DV signal input, the signal system of the input signal is automatically identified, regardless of the NTSC/PAL switch setting.
- This unit is equipped with a function to automatically detect the signal system of the cassette being played back or the signal being received at the DV input connector. However, this function may not operate correctly in some instances.


To ensure the correct system selection, it is recommended that you match the rear panel's NTSC/PAL switch to the signal system of the input signal or playback tape.

- When the unit enters the **STOP** mode, the NTSC/PAL switch setting will be engaged.
- If a tape recorded in both NTSC & PAL signal systems is played, the video, audio or time code may be distorted at the position where the signal system is switched.
- When the signal system of the tape and the NTSC/PAL setting differ, video and sound output will be upset for about 5 seconds after playback starts or stops.
- NTSC/PAL signal system conversion is not possible.

# PREPARATION - OPERATION LOCK mode -

This unit comes with an operation lock function to prevent unintended, erroneous operation. In the OPERATE LOCK mode, the buttons on the main unit and the slide switch are invalid. However, OPERATE ON and MENU operations are still possible.

## SYSTEM (2/2) menu

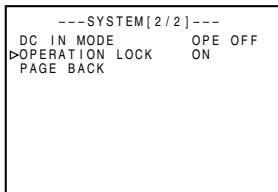

### ■ To set the unit to the OPERATION LOCK mode:

Set the OPERATION LOCK item of the SYSTEM (2/2) menu to "ON". (☞ Page 54, "Setting the Menu")

- In the OPERATION LOCK mode, when a button on the unit is pressed, "OPERATION LOCK" will be displayed on the monitor for about 3 seconds.

### ■ To turn off the OPERATION LOCK mode:

Set the OPERATE LOCK item of the SYSTEM(2/2) menu to "OFF".

If the EJECT button is pressed while the VTR is in the OPERATE LOCK mode, "OPERATION LOCK" will be displayed. However, pressing the EJECT mode button persistently will eventually bring on the MENU screen.

||

||

 
**Memo**

**Ejecting the cassette**



## **PREPARATION - Setting/displaying date and time -**

---




This function sets up the date and time data of the built-in clock. With the built-in chargeable battery, the configured date and time data is maintained even after the main power is turned off. The data will be displayed on the monitor according to the menu setting. During tape recording, the time and date data is registered.



# PREPARATION - Setting/displaying date and time - (continued)

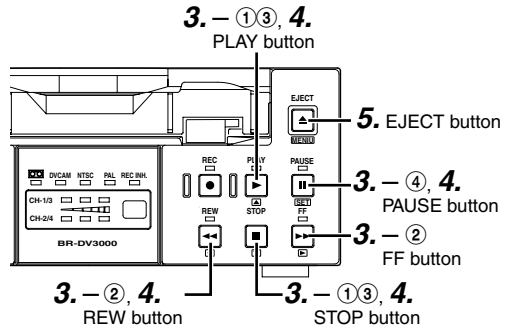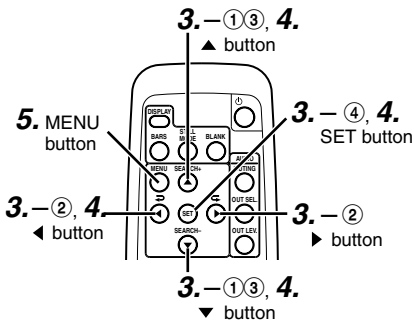

## 3. Set the date or time on the CLOCK ADJUST menu.

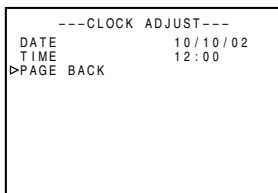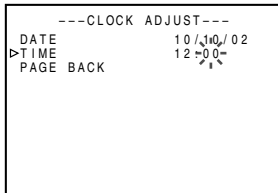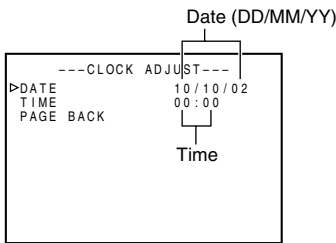

### Remote controller

- ① Press the ▲ or ▼ button and bring the cursor to the date or time setting. Then press the ▶ or SET button.
- ② Press the ▶ or ◀ button and select the data segment to set up.
  - The selected data segment blinks.
- ③ Press the ▲ or ▼ to set the value.
- ④ Repeat step ① – ③. After completing the necessary settings, press the SET button.

### Main unit

- ① Press the PLAY or STOP button and bring the cursor to the DATE or TIME setting. Then press the FF or PAUSE button.
- ② Press the FF or REW button and select the data segment to be set up.
  - The selected value blinks.
- ③ Press the PLAY or STOP button to set the value.
- ④ Repeat step ① – ③. After completing the necessary settings, press the PAUSE button.

## Memo

The 'seconds' segment cannot be set up. After the 'minute' segment is set up, please press the SET button (remote controller) or the PAUSE button (main unit) in synchronization with a separate time indicator (clock).

## 4. To return to the top MENU after completing all settings, do the following:

### Remote controller

- Press the ◀ button.
- Or
- Press the ▲ or ▼ button to bring the cursor to PAGE BACK and then press the SET button.

### Main unit

- Press the REW button.
- Or
- Press the PLAY or STOP button to bring the cursor to PAGE BACK and then press the PAUSE button.

## 5. To return to the usual menu, do the following:

### Remote controller

- Press the MENU button.
- Or
- Bring the cursor to the EXIT item of the top MENU and press the SET button.

### Main unit

- Press the EJECT button.
- Or
- Bring the cursor to the EXIT item of the top MENU and press the PAUSE button.



## Selecting date/time display

The date and time data is displayed on the monitor screen connected to the VIDEO LINE OUT terminal and Y/C OUT terminal. Setup can be performed via the DISPLAY (1/2) menu to turn on/off the date & time display and via the DISPLAY (2/2) menu to determine the display style. (For details on setup method: Page 54)

### Top MENU display

```

---MENU---
SYSTEM . .
REMOTE . .
AUDIO/VIDEO . .
TIME CODE . .
▶ DISPLAY SET . .
CLOCK ADJUST . .
FACTORY SETTING CANCEL
DRUM HOUR METER 000000
EXIT
    
```

### DISPLAY (1/2) menu

```


---DISPLAY[1/2]---
DIPLAY          OFF
COUNTER POSI . . LOWER-R
TIME CODE      ON
VTR MODE       ON
TAPE REMAIN    OFF
▶ TIME DATE     DATE+TM
AUDIO INFO . . CH+RATE
NEXT PAGE
PAGE BACK
    
```

### DISPLAY (2/2) menu

```

---DISPLAY[2/2]---
▶ DATE STYLE    DD/MM/YY
TIME STYLE     24H
BARS           OFF
PAGE BACK
    
```

### DISPLAY button

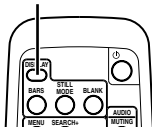

### On screen display

```

32K CH-1/2          S P 0 0 0 m i n
10/10/02           STANDBY-OFF
12:00:00           TCR 02:00:00:00
    
```

Date/time display

## Setting

**1. Select DISPLAY SET item from the top MENU and display the DISPLAY (1/2) menu.**

**2. Set the TIME/DATE setting on the DISPLAY (1/2) menu.**

#### ■ TIME DATE

- OFF : Does not display date or time.
- TIME : Displays time only.
- DATE : Displays date only.
- DATE + TM : Displays both the time and date.

**3. Select the NEXT PAGE item of the DISPLAY (1/2) menu to engage the DISPLAY (2/2) menu.**

**4. Set the DATE STYLE and TIME STYLE items of the DISPLAY (2/2) menu.**

#### ■ DATE STYLE... Set the order of the date display.

- YY/MM/DD: Year / month / day
- MM/DD/YY: Month / day / year
- DD/MM/YY: Day / month / year

#### ■ TIME STYLE... Select the style of time display.

- 24H: 24-hour time mode
- 12H: 12-hour time mode

## Enabling on-screen display:

### Remote controller

- Press the DISPLAY button.

### Main unit

- Set the DISPLAY item of the DISPLAY (1/2) menu to ON or AUTO.

## Memo

- RECORDING or STOP mode : Data in the built-in clock is displayed.
- During Playback : The date/time recorded on the tape is displayed.
- During DV signal recording : The date/time data from the DV terminal is displayed.

# RECORDING - Connection and setting -


This chapter explains the connection, setting and operation methods required to use this unit as a recorder.

This unit cannot be used as an editing system recorder.

## Connection

### ■ When connected to a video device equipped with a DV terminal


Images can be recorded with almost no deterioration of image quality.

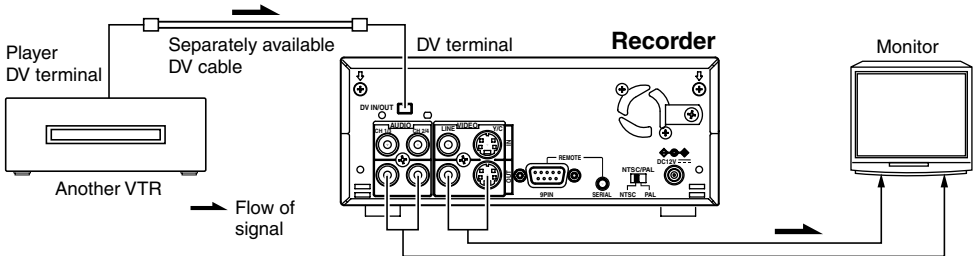



### Memo

- When signals are input from the DV terminal, the sound recording mode of the recorder is the same as that of the player.
- The Date and time data from the DV terminal will be recorded.
- To record the time code data from the DV terminal, set the TC DUPLICATE item of the TIME CODE menu to AUTO or NON DROP. (Page 62)
- For the BR-DV600 player, when the mode is changed from STILL to PLAY, the audio output will be muted for a while shortly after coming on. Thereafter, it will resume as per normal. (This does not occur with BR-DV600A.)
- When it is connected to D9VTR (equipped with SA-DV60), exchanging of the date/time information is not possible.

### ■ This unit is connected to a video device with no DV terminal (analogue input):

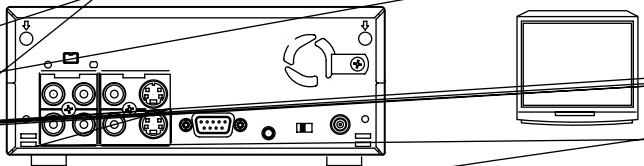

# Setting

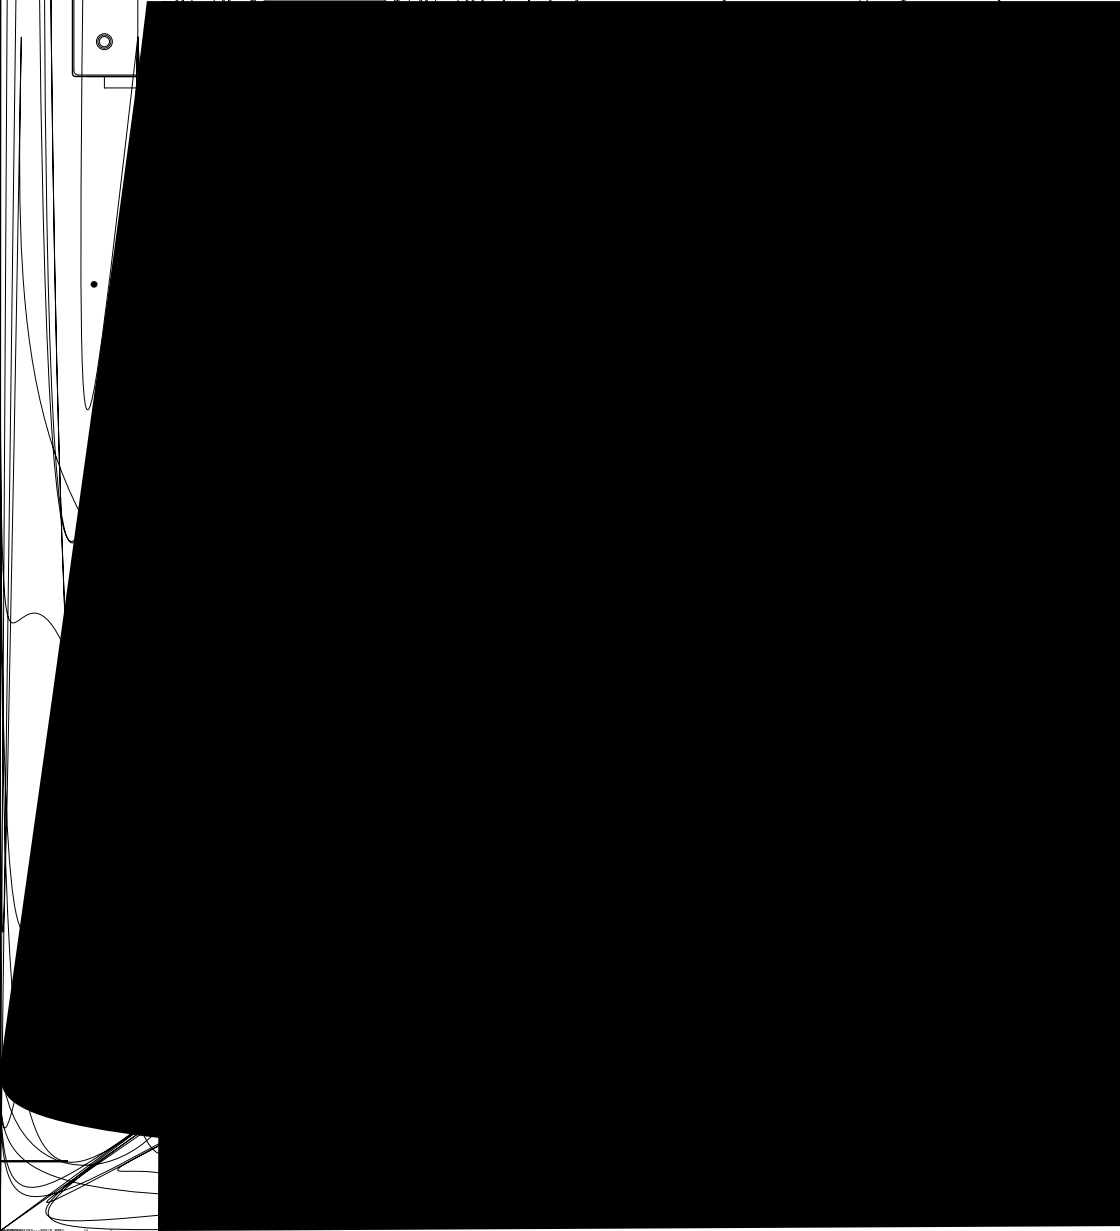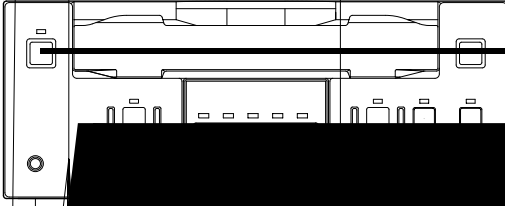

# RECORDING - Setting time codes -

## Time code recording




This unit has a built-in time code reader/ generator. It records time codes during recording. It does not record the user's bit.

Time codes are recorded according to the recording condition as follows:


Time codes are recorded in the REC RUN mode. (REC RUN: time codes run only during recording.)

Condition	Time code recording
Time code is preset with this unit.	
Time code is not preset.	


## Preset time codes.

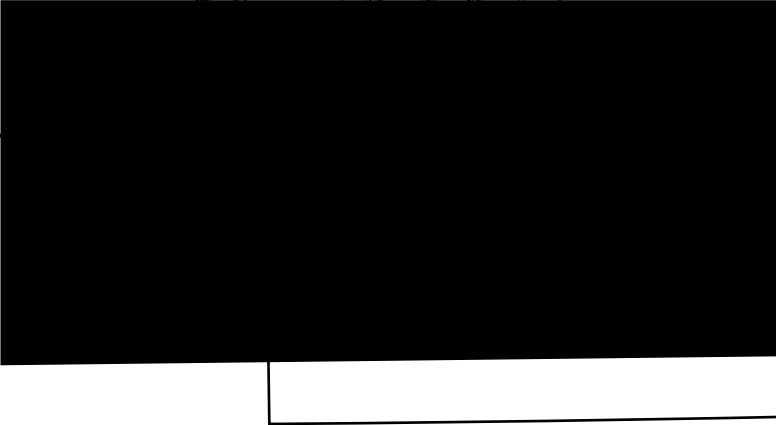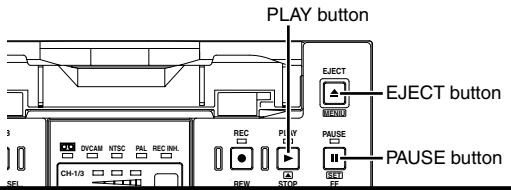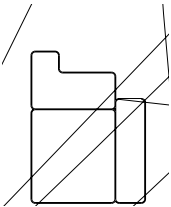

## Top MENU

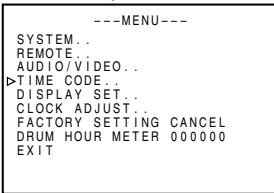

## TIME CODE menu

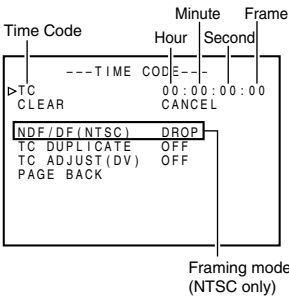

### ■ Resetting the time code to zero:

- ① Select the CLEAR menu item.
- ② Set the value to EXECUTE and press the SET button (remote controller) or the PAUSE button (Main unit).

### Memo

#### Framing mode (NTSC only) DROP

: Time codes that match the actual time.

#### NON DROP

: Use this setting if the number of frames is important.

## 1. Display the top MENU.

### Remote controller

Press the MENU button.

### Main unit

Press the EJECT button for at least 2 seconds.

## 2. Display the TIME CODE menu.

### Remote controller

Select the TIME CODE item with the ▲/▼ button and press the SET or ► button.

### Main unit

Select the TIME CODE item with the PLAY/STOP button and press the PAUSE or FF button.

## 3. Preset the time code (hour, minute, second and frame).

### Remote controller

- ① Select the TC item with the ▲/▼ button and press the SET or ► button.  
→ The hour digits blink.
- ② Press the ►/◀ button to shift to the next digit segment.
- ③ Press the ▲/▼ button to change the value of the blinking digits.
- ④ Repeat steps ② and ③ above and set all the values. Press the SET button.

### Main unit

- ① Select the TIME CODE item with the PLAY/STOP button and press the PAUSE or FF button.
- ② Press the FF or REW button to shift to the next digit segment.
- ③ Press the PLAY/STOP button to change the value of the blinking digits.
- ④ Repeat ② and ③ steps above and set all the values. Press the PAUSE button.

## 4. Set the framing mode (NON DROP / DROP) ... (NTSC only)

### Remote controller

- ① Select the NDF/DF item with the ▲/▼ button and press the SET or ► button.
- ② Press the ▲/▼ button to select the value.
- ③ Press the SET button to confirm the setting value.

### Main unit

- ① Select the NDF/DF item with the PLAY/STOP button and press the SET or FF button.
- ② Press the PLAY/STOP button to select the value.
- ③ Press the PAUSE button to confirm the setting.

## 5. Return to the usual screen.

### Remote controller

Press the MENU button.

### Main unit

Press the EJECT button.

## Recording time codes of a DV input terminal:


- Set the TC DUPLICATE item of the TIME CODE menu to AUTO.
- To record time codes in the non-drop frame mode from BR-DV600, GY-DV500 or GY-DV700W, set the TC DUPLICATE setting to NON DROP.

### Memo


If the REC button is held down in the STOP mode when the TC DUPLICATE item is set to AUTO or NON DROP, the EE signals of the time codes from the DV input terminal can be checked.

# RECORDING - Recording method -

## Remote controller

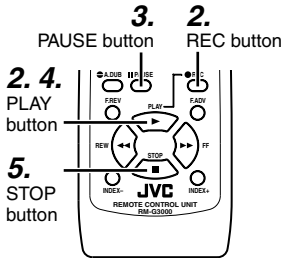

## Main unit

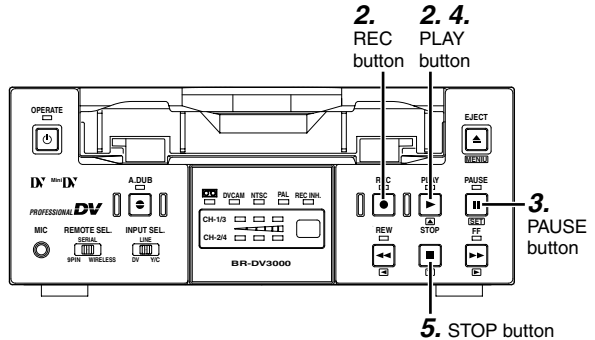

### Memo

- If recording has been paused for an extended period of time, the unit will automatically go into the STOP mode to protect the tape. The time period after the lapse of which the unit will enter the STOP mode can be configured via the LONG PAUSE TIME item of the SYSTEM (1/2) menu.
- This unit cannot perform editing functions.

### Memo

If recording is executed right after the RECORDING PAUSE state, index signals will not be recorded.

### 1. Load the cassette.

- Before loading the cassette, please check that the rear slide of the cassette is pushed to REC.  
→ The Main unit is powered on.

### 2. Start recording.

- Hold down the REC button and press the PLAY button.

### 3. Pause recording.

- Press the PAUSE button.

### 4. Resume recording.

- Press the PLAY button.

### 5. Stop recording.

- Press the STOP button.

## Recording index signals

When the INDEX WRITE item of the SYSTEM (1/2) menu is set as ON, an index signal is recorded at the starting position of recording.

In the PLAYBACK mode, the position where the index signal is recorded can be detected. (Index search)

### ■ During recording, please press the REC button to record the index signal.

\* Please allow at least an interval of 1 minute between recording of index signals.



Recording of index signals after tape recording is not possible.

# RECORDING - Audio dubbing -

For tapes recorded in the 32kHz audio mode, audio dubbing can be performed on the CH3 and CH4 channel after the recording. (After-recording)

## Notes

- For tapes recorded in the 48kHz audio mode, audio dubbing cannot be performed.
- Audio dubbing cannot be performed for DV input signals.

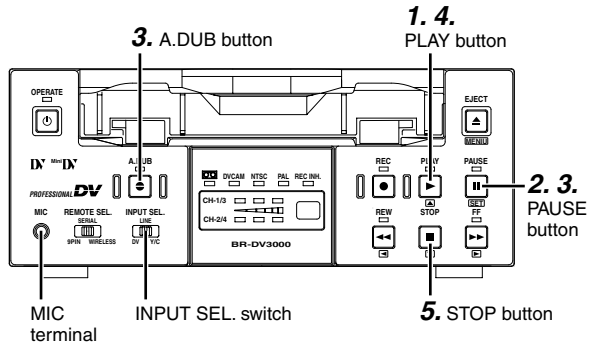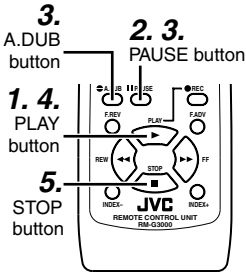

## Connection

Audio dubbing sounds are input from the AUDIO IN terminal on the rear panel or the MIC terminal on the front panel. MIC terminal prevail over the AUDIO IN terminal.

## Setting

- Set the AUDIO item of the AUDIO/VIDEO menu to "32K".
- Do not set the INPUT SEL. switch on the front panel to "DV".

## Operation

- 1. Press the PLAY button to play the tape.**
- 2. At the position where you want to audio dub, press the PAUSE button.**  
→ The unit goes into the STILL mode.
- 3. Hold down the PAUSE button and press the A.DUB button.**  
→ The unit goes into the audio dubbing pause mode.
- 4. Press the PLAY button.**  
→ Audio dubbing begins. Audio signals are recorded on the CH3 and CH4 channel.

■ **To stop audio dubbing temporarily, press the PAUSE button.**

- 5. To end audio dubbing, press the STOP button.**

## Memo


- During audio dubbing, if the tape comes to a part recorded in a non dubbing-feasible mode (such as LP mode or 48kHz audio mode), the VTR will enter the STOP mode. When this happens, high-volume noise from the DV output will occur. Hence, before audio-dubbing, please check the recording mode of the tape.
- In the case that a microphone is connected to the MIC terminal, sound output from this terminal will be recorded. In the absence of MIC input, signals from the CH1/3, CH2/4 AUDIO IN terminal on the rear panel will be recorded.
- When audio dubbing cannot be performed, an alarm message will be displayed on the monitor. (Page 23)
- Audio dubbing PAUSE cannot be executed directly in the STOP mode. Please execute it in the STILL mode.

During audio dubbing pause, sound from the CH3/CH4 channel is output via the monitor but sound output from the DV terminal is not possible.

- If audio dubbing is repeated on a short section of the tape, noise may occur for an instant when the section is played.
- During audio dubbing, noise may be produced on the playback video or EE sound but the recording is normal.
- The playback sound of CH1/2 cannot be recorded on CH3/4 (sound on sound).
- During backspace operation of audio dubbing, audio dubbing cannot be performed on unrecorded parts.
- When audio dubbing is performed on tapes recorded on other devices, it may not record correctly. Please record with this unit before performing audio dubbing.

# RECORDING - Backup recording function -

By linking this unit to other DV devices, this unit can perform continuous, long-hour recording. This unit can be set as a backup unit connected to a DV camcorder (GY-DV300/DV500/DV550/DV5000, etc.). When the recording tape of the source unit ends, this unit can start recording. This enables long-hour recording.

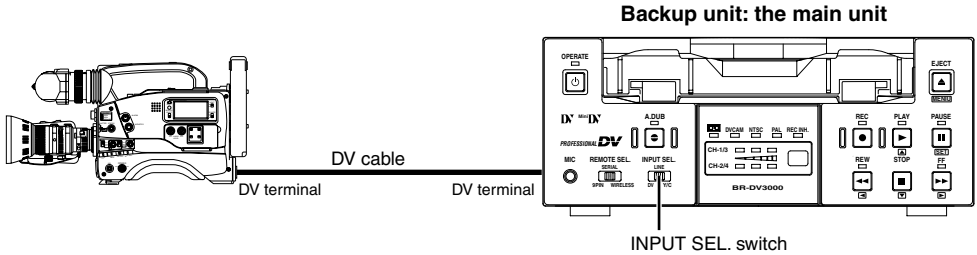

## Connection

Connect the DV terminal of the source unit to the DV terminal of this unit with a DV cable.

## Setting up this unit

- Set the **INPUT SEL. switch** on the front panel to “DV”.
- Set the **BACKUP REC TIME** item of the **SYSTEM (1/2)** menu.

Use the following settings according to the length of the tape of the source unit.

For DV or mini DV cassettes:

25MIN	: 30-minute tape
55MIN	: 60-minute tape
75MIN	: 80-minute tape
115MIN	: 120-minute tape
175MIN	: 180-minute tape
265MIN	: 270-minute tape
OFF	: No backup recording

- Set the **TC DUPLICATE** item of the **TIME CODE** menu to “OFF”.

- It records the data of the built-in time code generator or the built-in clock.
- When the TC DUPLICATE menu item is set to “AUTO” or “NON DROP”, the time code of the DV camcorder will stop advancing. If the DV cable is disconnected, the time code of the backup recording will stop advancing.

## Operation

- 1. Recording begins on the source unit.**
  - \* Please record from the beginning of the recording tape.
- 2. This unit begins recording when the tape of the source unit is near the end (about 5 minutes before the end of the tape).**
  - This unit begins recording when the recording time of the source unit reaches the time configured by the BACKUP REC TIME setting.


## Memo

- Backup recording records the video and sound from the source unit to the main unit. While this unit is performing backup recording, please continue shooting from the source unit.
- The audio mode is the mode configured in the source unit. (32K/48K)
- Please set the BACKUP REC TIME item to “OFF” if the unit is not performing backup recording.



# RECORDING - Recording using the serial remote terminal -

Recording can be turned ON/OFF with the serial remote controller or the footswitch connected to the SERIAL REMOTE terminal on the rear panel.

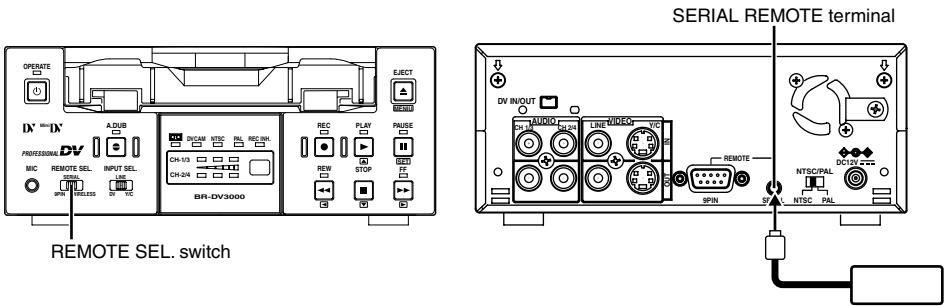

- Serial remote controller: RM-G30
- Footswitch

## REMOTE (1/2) menu

```

---REMOTE[1/2]---
▷REMOTE          ON
LOCAL FUNCTION   ALL KEYS
PREROLL         SS
REM FF/REW MODE  FF/REW
REM STOP SEL    EE
PB START DELAY  OF
SYNCHRONIZATION ON
NEXT PAGE
PAGE BACK
    
```

## Memo

- The serial remote controller can perform operations other than recording.
- The buttons on the unit to be rendered operable can be set via the LOCAL FUNCTION item of the REMOTE(1/2) menu.

## REMOTE (2/2) menu

```

---REMOTE[2/2]---
CONTROLLER SEL TYPE1
▷FOOT SW          OFF
PAGE BACK
    
```

## Connection

Connect the serial remote controller (available separately: RM-G30) or the footswitch to the SERIAL REMOTE terminal on the rear panel.

## Setting

- Set the REMOTE SEL. switch on the front panel to “SERIAL”.
- Set the REMOTE item of the REMOTE (1/2) menu to “ON”.
- Set the FOOT SW item of the REMOTE (2/2) menu according to the way in which the serial remote terminal is used.
  - OFF : Set to “OFF” when the serial remote controller is used. The footswitch cannot be used.
  - L EDGE : Recording and recording pause operations are switched at the LOW edge of the footswitch signal.
  - H EDGE : Recording and recording pause operations are switched at the HIGH edge of the footswitch signal.
  - L LEVEL : Record at the LOW edge and pause recording at the HIGH edge of the footswitch signal.

## Operation

Before using the footswitch, first engage the recording or recording pause mode via the buttons on the main unit.

## Memo


- The footswitch can only be used for switching the recording operation ON/OFF.
- The footswitch functions irrespectively of the REMOTE SEL. switch settings.

# PLAYBACK - Connection/setting -


This section explains the required connection, setting and operation method for using this unit as a player.

## Connection

### ■ Using this unit as a standalone device

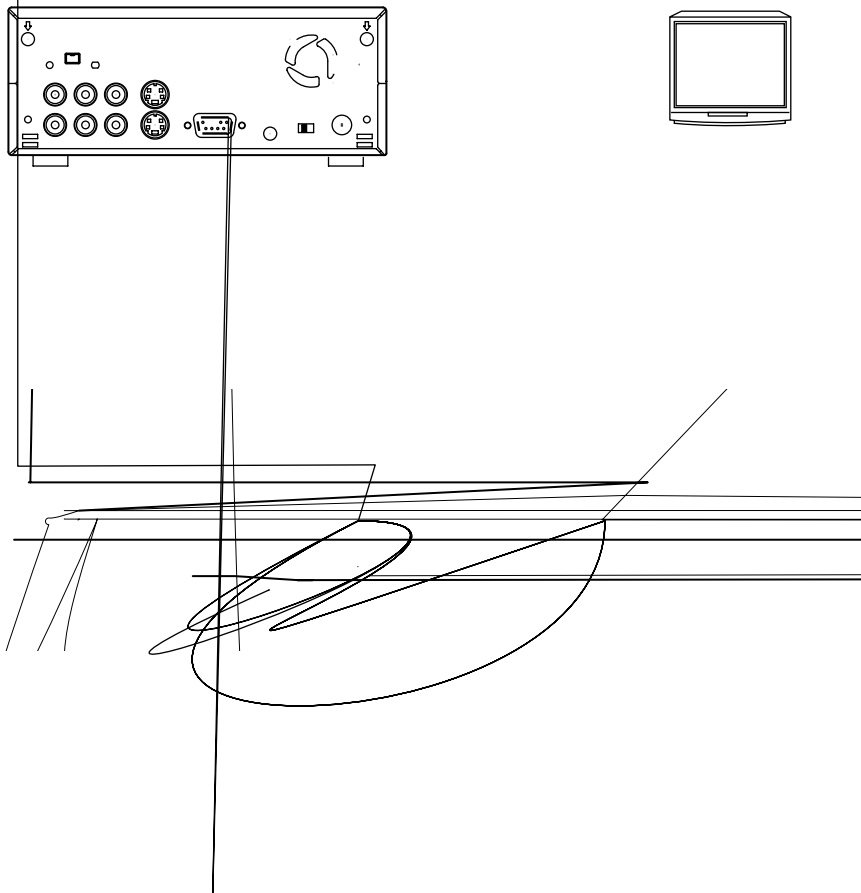

## Setting

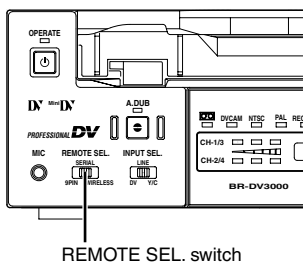

### ■ REMOTE SEL. switch on the front panel

To use the wireless remote controller, set the switch to "WIRELESS".

#### Memo

To control the unit with the 9 PIN REMOTE or the SERIAL REMOTE terminal, set the REMOTE menu item to "ON".

### SYSTEM (1/2) menu

```
---SYSTEM[1/2]---
▷STL/F.ADV          2ND
BACKUP REC TIME    OFF
LONG PAUSE TIME    5MIN
LONG PAUSE MODE    F.ADV
INDEX WRITE        ON
REPEAT MODE        BLANK
NEXT PAGE
PAGE BACK
```

### ■ SYSTEM menu

#### • STL/F.ADV MODE

Use this to select the image type for still image playback or frame advance playback.

(Field image, 1st field image, 2nd field image and frame image)

**Note:** Still images can also be selected with the STILL MODE button of the wireless remote controller.

#### • LONG PAUSE TIME

Use this menu item to set the time interval, after the lapse of which, the unit will go into the tape protection mode.

(5, 3, 2 or 1 minute, 30 seconds)

#### • LONG PAUSE MODE

Use this mode to select the operation state when tape protection mode is engaged after an extended period of being in the STILL mode. (F.ADV or STBY-OFF)

#### • REPEAT MODE

Use this menu item to turn ON/OFF the REPEAT PLAYBACK function or select the type of REPEAT PLAYBACK. To disable REPEAT PLAYBACK, set it to "OFF".

(OFF, INDEX, VIDEO END, TAPE END)

### AUDIO/VIDEO menu

```
---AUDIO VIDEO---
AUDIO MODE          48K
▷A OUT AT SEARCH    ON
AUDIO OUT SEL       CH-1/2
AUDIO OUT LEVEL     NORM
SET UP (NTSC)      OFF
PAGE BACK
```

### ■ AUDIO/VIDEO menu

#### • A. OUT AT SEARCH

Use this menu item to turn ON/OFF audio output during variable speed playback.

#### • AUDIO OUT SEL

Use this menu item to select the output audio channel when playing tapes recorded in the 32kHz mode. (CH1/2, CH3/4, MIX)

#### • AUDIO OUT LEVEL

Use this menu item to select the audio output level (NORM, ATT). Set it to "ATT" when playing tapes recorded at -12dB with consumer DV devices.


 
#### • SETUP (NTSC only)

Use this setting to determine whether to apply the setups to the composite video or Y/C separate video output signals.

#### Memo

AUDIO OUT SEL or AUDIO OUT LEVEL items can also be set via the AUDIO OUT SEL or AUDIO OUT LEV button on the wireless remote controller.


# PLAYBACK - Basic playback method -

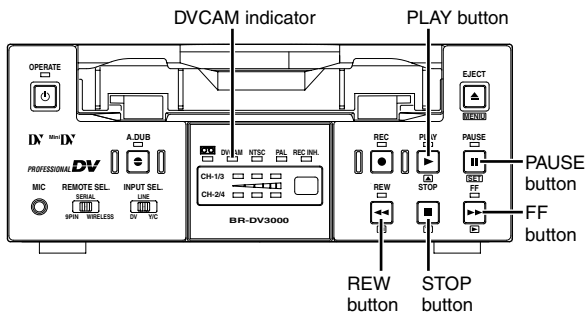

# PLAYBACK - Special playback function -

## Frame advance (reverse) playback

Use the remote controller.

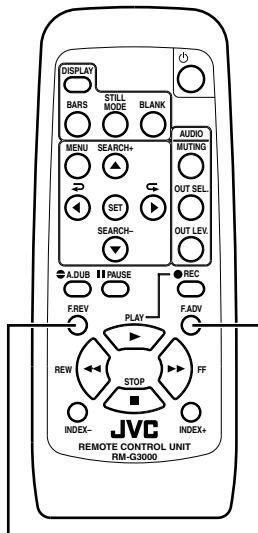

F.REV  
button

F.ADV  
button

### Setting

#### ■ The STL/F. ADV MODE item of the SYSTEM menu

Select the amount of frame advance playback and still image.

**FIELD** : Image is advanced field by field. (1st /2nd alternate)

**1st FIELD** : Image is advanced frame by frame and the 1st field image is displayed.

**2nd FIELD** : Image is advanced frame by frame, and 2nd field image is displayed.

**FRAME** : Image is advanced frame by frame, and frame image is displayed.

### Operation

#### 1. Set the unit to the STILL mode.

#### 2. Frame advance in the forward direction.

Press the F. ADV button.

When the F. ADV button is held down, the image will advance continuously in the forward direction.

#### ■ Frame reverse in the reverse direction.

Press the F. REV button.

When the F. REV button is held down, the image will reverse continuously in the reverse direction.


### Memo

When pressing the PAUSE button on the main unit in the STILL mode, the image is advanced frame-by-frame.

# PLAYBACK - Special playback - (continued)

## Variable speed playback

Use the remote controller.

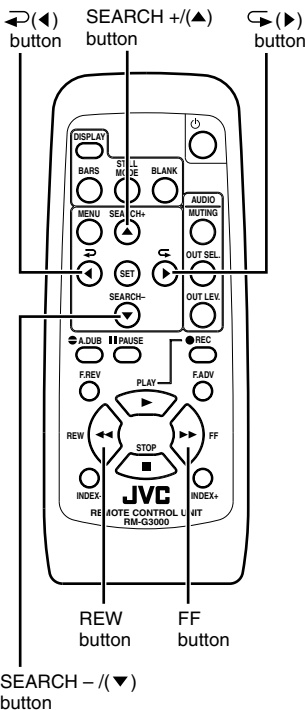

### Memo

- The A. OUT AT SEARCH item of the AUDIO/VIDEO menu can be set to turn on/off audio output during the search mode.
- If 0.1 X speed playback (step slow) has been continued for about 40 seconds, the unit will automatically change to the 0.2 X speed playback (linear slow) in order to protect the tape.

### Set the unit to the search mode.

The main unit button can also be used to set the unit to the search mode.

1. Set the unit to the **PLAYBACK** or the **STILL** mode.
2. Press the **FF** button to execute fast-forward playback. Press the **REW** button to execute reverse playback.

■ The search speed changes according to the following sequence each time the FF or REW button is pressed:

X20→X5→X10→X20...  
In DVCAM mode, the maximum speed is 15X.

### Changing the speed of fast-forward playback or reverse playback:

■ **During normal playback or forward search:**

If the **SEARCH + (▲)** buttons are pressed, the playback speed increases.

If the **SEARCH - (▼)** buttons are pressed, the playback speed decreases.

■ **During reverse playback or reverse search:**

If the **SEARCH + (▲)** buttons are pressed, the playback speed decreases.

If the **SEARCH - (▼)** buttons are pressed, the playback speed increases.

The variable playback speed changes as follows in the forward and reverse direction.

0→0.1→0.33→0.5→1→2→5→10→20X speed  
(Still)

\* 0.1 X speed indicates step slow playback (continuous frame advance).

■ **During the STILL mode:**

If the **SEARCH + (▲)** buttons are pressed, the tape will play in the forward direction.

If the **SEARCH - (▼)** buttons are pressed, the tape will play in the reverse direction.

### Changing the direction of playback

■ **To change from normal or fast-forward playback to reverse playback:**

- Press the **↶ (◀)** button.

If this button is pressed during playback, reverse playback will be engaged.

■ **To change from reverse or rewind playback to forward playback:**

- Press the **↷ (▶)** button.


If this button is pressed during reverse playback, normal playback will be engaged.

If this button is pressed during rewind playback, fast-forward playback will be engaged.


# PLAYBACK - Locate function -

## Index search

This function locates and advances/rewinds to the position where the index signal is recorded. Use the remote controller.

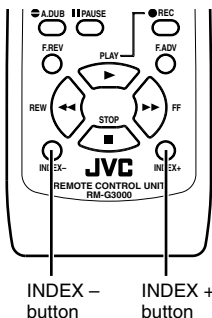

Monitor screen

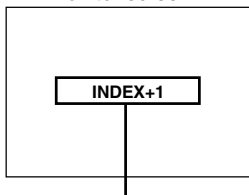

During index search, this message is displayed on the monitor (the number represents the position of the index).

### ■ To locate an index in the forward direction vis-a-vis the current tape position:

- Press the INDEX + button.

The index position to be located can be specified by the number of times this button is pressed. (Max: 99)

### ■ To locate an index in the reverse direction vis-a-vis the current tape position:

- Press the INDEX - button.

The index position to be located can be specified by the number of times this button is pressed. (Max: 99)

### ■ When the INDEX + or INDEX - button is pressed, the unit will fast-forward or rewind to the specified indexed position and start playing.


#### Memo

- If the interval between index signals is less than 1 minute, the function may not work well.
- The specifications for index signal recording varies with the device used.

## Blank search

This function locates the unrecorded parts of the tape. Use the remote controller.

BLANK button

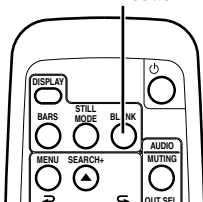

Monitor screen



### ■ In the STOP mode, press the BLANK button.

- If the current position is at a recorded part of the tape, the unit fast-forwards until an unrecorded part is reached and goes into the STOP mode.
- If the current position of the tape is unrecorded, the unit will first advance the tape in the forward direction for confirmation and thereafter rewind and go into the STILL mode at the last recorded position.
- During a blank search, "BLANK SEARCH" is displayed on the monitor.

# PLAYBACK - Repeat playback -

This unit is capable of 3 types of repeat playback.

The repeat playback function is set via the REPEAT MODE item of the SYSTEM (1/2) menu.

## SYSTEM (1/2) menu

```
---SYSTEM[1/2]---
STL/F.ADV      2ND
BACKUP REC TIME OFF
LONG PAUSE TIME 5MIN
LONG PAUSE MODE F.ADV
INDEX WRITE    ON
▶REPEAT MODE   BLANK
NEXT PAGE
PAGE BACK
```

## Setting

### REPEAT MODE item of the SYSTEM (1/2) menu

- OFF** : No repeat playback.
- INDEX** : Repeat playback between positions where index signals are recorded.
- VIDEO END** : Repeat playback from the beginning of the tape to the position where video signal recording ends.
- TAPE END** : Repeat playback from the beginning to the end of the tape.

## INDEX repeat playback

- If no index signal is detected during playback, the tape will run till the end. If no index signal is detected during rewind, the tape will rewind till the beginning.
- If the interval between index signals is less than 1 minute, the function may not work well.


## Memo

If there is dust adhered to the head, repeat playback may not work well.

## Operation

1. Press the **REW** button and rewind the tape to the beginning.
  2. Press the **PLAY** button to begin replay.
    - When it reaches the position set at the REPEAT MODE menu item, the tape rewinds and plays back again.
- To abort the repeat playback function, press the **STOP** button.


## Repeat operation

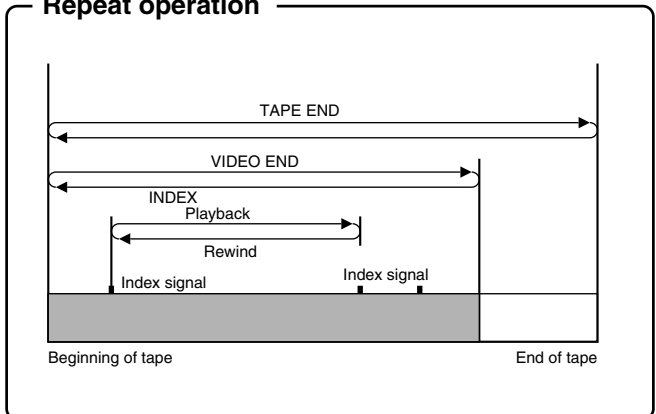



# PLAYBACK - Selecting playback audio output -

The output mode for audio playback can be selected with the remote controller.

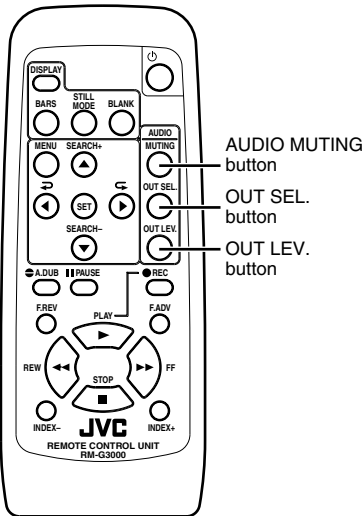


- To turn the audio muting function ON/OFF or to mute the EE audio, press the **AUDIO MUTING** button.

To resume the audio output, press the button again.

- **Selecting the audio output channel for playback of tapes recorded in the 32kHz mode.**

 Each time the OUT SEL. button is pressed, the channel changes in the following sequence:



- CH3/CH4: CH3 audio is output via the CH1/3 AUDIO OUT terminal whereas CH4 audio is output via the CH2/4 AUDIO OUT terminal.
- MIX: Sounds mixed from CH1 and CH3 are output via the CH1/3 AUDIO OUT terminal whereas Sounds mixed from CH2 and CH4 are output via the CH2/4 AUDIO OUT terminal.

## Note

Depending on the sound source, noise may occur in the MIX mode. In this case, please use CH1/CH2 or CH3/CH4.

## Memo

- The output channel for playback audio of tapes recorded in the 32kHz mode can also be set via the AUDIO OUT SEL item of the AUDIO/VIDEO menu of the main unit.
- The audio output level can be set via the AUDIO OUT LEVEL item of the AUDIO/VIDEO menu.  
(Page 61 "AUDIO/VIDEO menu")

- **Select the output level for audio playback**

Each time the OUT LEV. button is pressed, the standard level for the output audio level changes. (NORMAL or ATT)

- To play back tapes recorded at a standard level of -12dB (using a consumer DV device), set the output level to ATT. In so doing, the audio output level decreases.
- To play back tapes recorded on this unit, set the output level to NORMAL.

# EDIT - Using the unit in an editing system -

## Cut-edit system

This unit can be used as a feeder (player) for an editing system that uses a RS-422A-compatible editing remote controller (RM-G820).

### ■ Applicable model


**Editing remote controller :** RM-G820

**Recorder :** VHS/S-VHS ..... BR-S800 (equipped with SA-K26 or SA-R50), BR-S822  
 \* DV signals cannot be input.


D9 (digital S) ..... BR-D80, BR-D85, BR-D750

\* To input DV signals, please install SA-DV60 to D9VTR.

### Example of connection

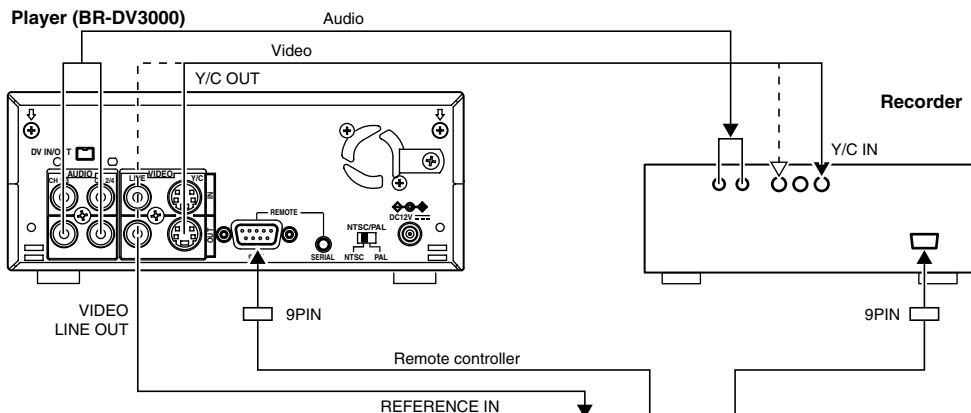


**Memo**  
 If editing precision is critical, please input the composite signals of the VIDEO LINE OUT of BR-DV3000 as standard synchronization signals into the editing remote controller. Use the Y/C OUT terminal for video signals.

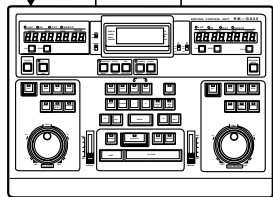

RM-G820

### Setting the main unit

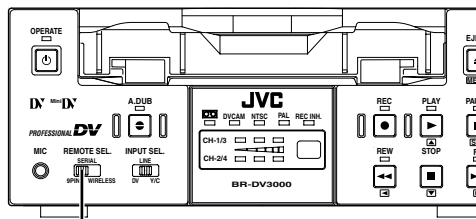

REMOTE SEL. switch

- Set the REMOTE SEL. switch of the front panel to "9 PIN".
- Set the NTSC/PAL switch according to the playback signals.
- Set the REMOTE menu.

- REMOTE : Set it to "ON".
- PREROLL : Set the pre-roll time (second).  
 The setting is recommended to be at least 7 seconds.

**Memo**  
 The setting will be that which is set (if any) via the editing remote controller.

## REMOTE (1/2) menu

```
---REMOTE[1/2]---
▶REMOTE          ON
LOCAL FUNCTION   ALL KEYS
PREROLL          SS
REM FF/REW MODE  FF/REW
REM STOP SEL     EE
PB START DELAY   OF
SYNCHRONIZATION ON
NEXT PAGE
PAGE BACK
```

### Memo

#### LOCAL FUNCTION:

- For controlling with the REMOTE terminal, use this menu item to select the buttons on the unit to be rendered operable.

#### REM FF/REM MODE:

- Use this menu item to select the action to be executed when an FF or REW command is received during playback. (FF/FEW or search)

#### • REM STOP SEL:

Use this menu item to set the operation mode upon reception of a standby-on signal.

**EE** : EE mode (STOP mode)

**PB** : PLAYBACK mode (STILL mode)

#### • PB START DELAY:

Use this menu item to set the edit timing. If delay occurs at the start of editing, correct this time discrepancy by adjusting the timing for starting playback.

**0F** : No compensation. Usually, this option is selected.

**1F to 15F** : Delay by the number of frames set by the user. In the case that the unit is connected to an editing remote controller with no BUMP function, use this setting to adjust editing precision.

#### • SYNCHRONIZATION

Use this menu item to turn on/off the synchronize function (BUMP) to enhance editing precision.

**OFF** : No adjustments to synchronize.

**ON** : Execute adjustments to synchronize. The editing operation may take more time.

#### • CONTROLLER SEL [REMOTE (2/2) menu]

Use this menu item to set the type of controller connected.

( Page 60)

Set it to TYPE 1 when RM-G820 is used.

### ■ Setting the TC ADJUST item of the TIME CODE menu

To edit DV signals, set the timing of the time code output from BR-DV3000 to the editing controller.

• Usually, it is set to "OFF".

• To edit DV signal with D9 VTR (equipped with SA-DV60), set it to -2F.

## RM-G820 Settings

PREROLL

: At least 7 sec is recommended.

BUMP

: ON

COUNTER

: LCT (Player)

After setting has been done, activate the LEARN function.

MENU NO. 18 BUMP SELECT: Select PLAYER if the recorder used is not equipped with the BUMP function.

### Notes


- Please do not use this unit as a recorder.
- It does not support AB roll editing.
- It does not support the following editing tasks:
  - Variable search
  - Slow-motion edit
  - CTL edit
- When performing jog operation using the editing remote controller, do it slowly. Otherwise, the VTR may not be able to keep up.
- For certain controllers, the LEARN function will not work normally:
  - SONY : RM-450, PVE-500
  - Enabling the LEARN function:  
Insert the tape with time code recorded till 23:59:00:00~00:01:00:00 into the BR-DV3000 before activating the LEARN function.

# EDIT - Using the unit in an editing system - (continued)

## Using the unit in a non-linear system

This is a system that captures the content of the source tape on a non-linear editing system and records the non-linear edited contents onto the main unit.

### Connection

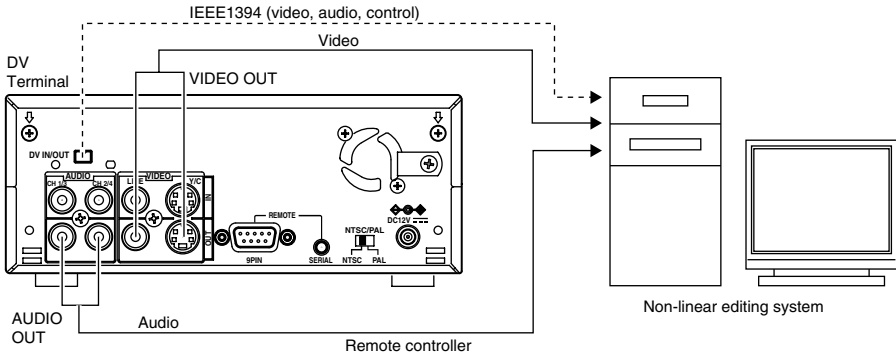

### Setting this unit

■ The REMOTE SEL. switch on the front panel can be set at any position.

■ Set the REMOTE menu.


- REMOTE:  
Set it to "ON".
- REMOTE FF/REW MODE:  
Use this menu item to select the action to be executed when an FF or REW command is received during playback (FF/REW or search). If the search and locate function does not work well, set it to SEARCH.
- CONTROLLER TYPE (REMOTE 2/2 menu):  
Set it to "TYPE 1".

### Memo

If an error occurs to the time code of BR-DV3000 when the tape is advanced /reversed by 1 frame by the non-linear edit system, please set the STILL mode of the main unit to "FRAME".



# MENU SCREEN - Structure of the menu -

Hierarchical menus are displayed on the monitor.

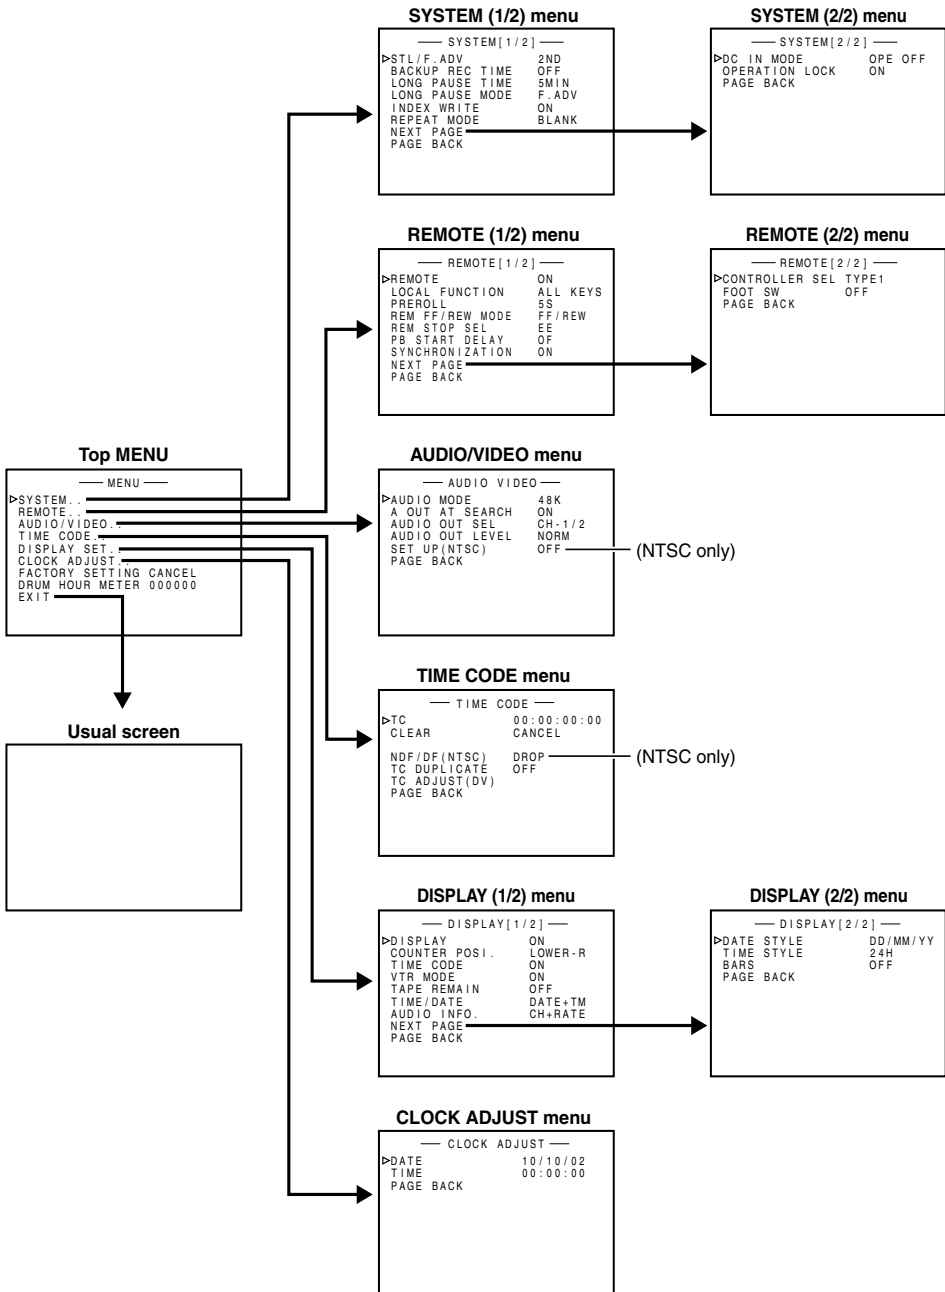

# MENU SCREEN - Setting the menu -

The various functions of this unit can be set from the menu. The configured settings are saved in the unit's memory and are maintained even after the power is turned off.

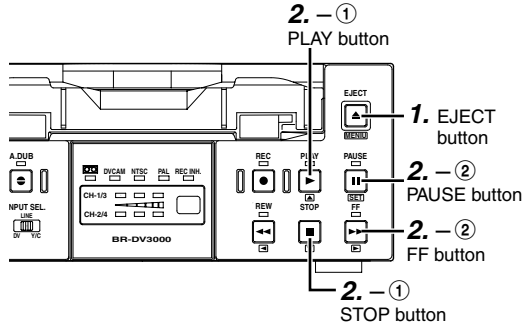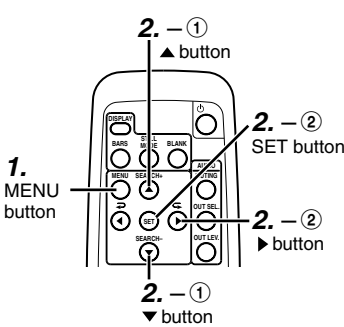

The menu screen settings can be done while viewing the monitor connected to the VIDEO LINE OUT or Y/C OUT terminal, using either the remote controller or the buttons on the main unit.

## ■ Set the unit to the STOP mode.

To perform setting with the operation buttons on the main unit, first remove the cassette if one is loaded.

### 1. Display the top MENU.

#### Remote controller

Press the MENU button.

#### Main unit

Press the EJECT button for at least 2 seconds.

### 2. Display the menu for setting.


#### Remote controller

- ① Press the ▲ / ▼ button and bring the cursor to the item to be set.
- ② Press the SET or ► button.

#### Main unit


- ① Press the PLAY/STOP button and bring the cursor to the menu item.
- ② Press the PAUSE or FF button.

#### Top MENU


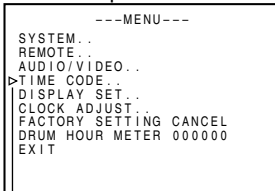


Cursor



#### SYSTEM (1/2) menu

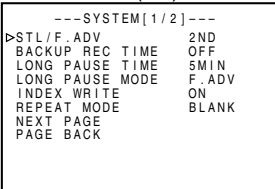


- If the EXIT item of the top MENU is selected, the usual screen resumes.
- If the FACTORY SETTING item of the top MENU is set to "EXECUTE", the set values on the menu will be reset to those initially set at manufacture. (Except DRUM HOUR METER)
- The DRUM HOUR METER item cannot be set.

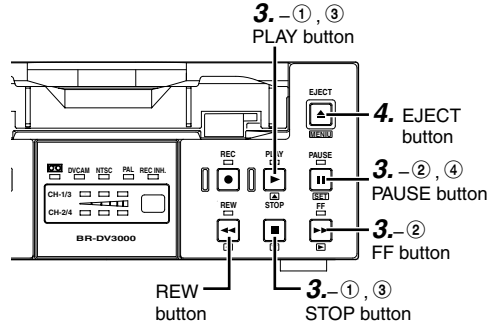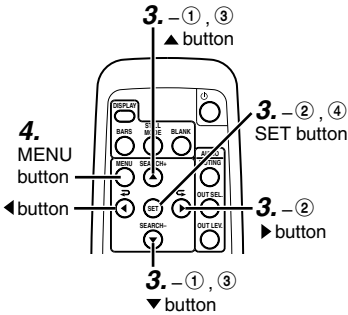

### 3. Set the items on the menu.

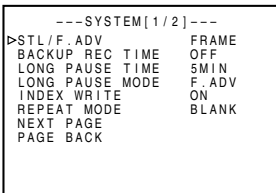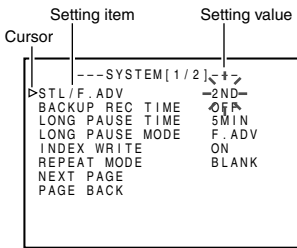

#### Top MENU

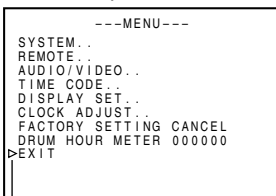

Cursor

#### Remote controller

- Press the ▲/▼ button and bring the cursor to the item to be set.
- Press the SET or ▶ button.

→ The selected value blinks and becomes available for changing.

- Press the ▲/▼ button to change the value as desired.
- Press the SET button to confirm the value.

→ The value stops blinking and is confirmed.

- Repeat steps ① - ④ above and perform the necessary settings.

#### Main unit

- Press the PLAY/STOP button and bring the cursor to the item to be set.
- Press the PAUSE or FF button.

- Press the PLAY/STOP button to change the value as desired.

- Press the PAUSE button to confirm the value.

■ To display the menu of the next level of the hierarchy, select NEXT PAGE.

■ To return to the previous screen, do either of the following:

#### Remote controller

- Press the ◀ button.
- Or
- Select PAGE BACK.

#### Main unit

- Press the REW button.
- Or
- Select PAGE BACK.

4. To return to the usual screen, do either of the following:

#### Remote controller

- Press the MENU button.
- Or
- Select EXIT from the top MENU.

#### Main unit

- Press the EJECT button.
- Or
- Select EXIT from the top MENU.

# MENU SCREEN - Contents of the menus -

In the menu descriptions below, settings with ● marks are factory settings.

## Top MENU


Items	Setting	Contents
SYSTEM		Displays the menus related to the operation system of this unit.
REMOTE		Displays the menus related to the remote controller.
AUDIO/VIDEO		Displays the menus related to the audio and video.
TIME CODE		Displays the menu for setting time codes.
DISPLAY		Displays the menu related to the displays on the monitor connected to the VIDEO LINE OUT or Y/C OUT terminal.
CLOCK ADJUST		Displays the menu for setting date/time. For information on the setting method, please refer to page 31 "Setting date/time".
FACTORY SETTING	● CANCEL EXECUTE	Sets whether to return the values on the menu to those initially set at manufacture: CANCEL : Do not use the factory settings EXECUTE : Use the factory settings
DRUM HOUR METER		Displays the drum usage time. *The cursor cannot be moved to this item.
EXIT		Return to the usual screen.



## SYSTEM menu

The SYSTEM menu consists of the following 2 screens. (1/2 and 2/2 menu)

### ■ SYSTEM (1/2) menu

Items	Setting	Contents
STL/F.ADV MODE	FIELD 1st ● 2nd FRAME	Use this item to select the still image type during the STILL mode or frame advance playback: FIELD : Displays field image. During frame advance playback, 1st and 2nd field images are displayed alternately. 1st : displays the 1st field image. 2nd : displays the 2nd field image. FRAME : displays the frame image. <b>– Memo</b> The image type for the STILL mode can also be selected with the STILL MODE button on the wireless remote controller.
BACKUP REC TIME	● OFF 25MIN 55MIN 75MIN 115MIN 175MIN 265MIN	Set this item according to the recording time of the source tape during DV signal input backup recording: OFF : No backup recording. 25MIN : Use this setting if the recording time of the source tape is 30 mins. 55MIN : Use this setting if the recording time of the source tape is 60 mins. 75MIN : Use this setting if the recording time of the source tape is 80 mins. 115MIN : Use this setting if the recording time of the source tape is 120 mins. 175MIN : Use this setting if the recording time of the source tape is 180 mins. 265MIN : Use this setting if the recording time of the source tape is 270 mins. (  Page 40 “Backup recording function”)
LONG PAUSE TIME	30SEC 1MIN 2MIN 3MIN ● 5MIN	Sets the interval after the lapse of which the tape protection mode will be engaged during an extended STILL mode, STOP mode or recording pause. The setting for the STILL mode can be made via the LONG PAUSE MODE menu item: 30SEC: 30 seconds 1MIN : 1 minute      3MIN : 3 minutes 2MIN : 2 minutes    5MIN : 5 minutes <b>– Memo</b> To prevent damage, please set as short a time interval as possible.
LONG PAUSE MODE	● F.ADV STBY-OFF	Use this menu item to set the action to be done when the unit has been left in the STILL mode for an extended period of time. In the case that the unit had been left in the recording pause or STOP mode, the unit will go into the Standby Off mode: F.ADV : It advances in the forward direction. On the 6th advancement, it goes into the STOP state. STBY-OFF : Goes into the STOP state.

# MENU SCREEN - Contents of the menus - (continued)

## SYSTEM menu (continued)

Items	Setting	Contents
INDEX WRITE	OFF ● ON	Use this setting to enable/disable index signal recording: OFF : No recording of index signal. ON : Use this setting to record index signals. An index signal is automatically registered at the position where recording starts.
REPEAT MODE	● OFF INDEX VIDEO OUT TAPE END	Use this setting to enable/disable repeat playback: OFF : No repeat playback. INDEX : Repeat playback between the positions where index signals are recorded. VIDEO OUT : Repeat playback from the beginning of the tape to the position where recording of video signals ends. TAPE END : Repeat playback from the beginning to the end of the tape.
NEXT PAGE		Display the SYSTEM (2/2) menu.
PAGE BACK		Return to the top MENU.

## ■ SYSTEM (2/2) menu

Items	Setting	Contents
DC IN MODE	● OPE OFF OPE ON PLAY	Select the action to perform when power is supplied via the DC IN terminal: OPE OFF : Sets the unit to OPERATE OFF. OPE ON : Sets the unit to OPERATE ON. PLAY : If a tape has been inserted, the VTR will go into the PLAY mode. (AUTO PLAY)
OPERATION LOCK	● OFF ON	Turn ON/OFF the OPERATION LOCK: OFF : Turns off the OPERATION LOCK and enables the buttons on the main unit. ON : VTR goes into the OPERATE LOCK mode. The buttons and the slide switch on the main unit are inhibited. However, OPERATE ON and menu operations are still possible.  — Memo — Even when this setting is OFF, disabling the buttons on the main unit while it is controlled via a remote controller connected to the 9 PIN REMOTE or SERIAL REMOTE terminal is possible, by setting the LOCAL FUNCTION item of the REMOTE menu.
PAGE BACK		Return to the SYSTEM (1/2).

## REMOTE menu

The REMOTE menu consists of 2 menus. (1/2 and 2/2 menu)

### ■ REMOTE (1/2) menu

Items	Setting	Contents
REMOTE	<input type="radio"/> OFF <input checked="" type="radio"/> ON	<p>Use this menu item to enable/disable the REMOTE SEL. switch on the front panel:</p> <p>OFF : Disables the 9 PIN/SERIAL setting of the REMOTE SEL. switch.</p> <p>ON : Enables the 9 PIN/SERIAL setting of the REMOTE SEL. switch. Use this setting when remote controlling the unit via the 9 PIN and SERIAL terminal.</p>
LOCAL FUNCTION	<input type="radio"/> NO KEY <input type="radio"/> EJECT <input type="radio"/> STP + EJT <input checked="" type="radio"/> ALL KEYS	<p>Use this to select the buttons on the main unit to be rendered operable when remote controlling the unit via the 9 PIN REMOTE terminal or the SERIAL REMOTE terminal:</p> <p>NO KEY : No button enabled.</p> <p>EJECT : Only the EJECT button enabled.</p> <p>STP + EJT : Only the STOP button and the EJECT button are enabled.</p> <p>ALL KEYS : All operation buttons are enabled.</p> <p>— <b>Memo</b> —</p> <p>If the OPERATION LOCK item of the SYSTEM (2/2) menu is set as ON, the buttons on the main unit will be disabled regardless of the setting here.</p>
PREROLL	<input type="radio"/> 3SEC <input type="radio"/> 5SEC <input checked="" type="radio"/> 7SEC <input type="radio"/> 10SEC	<p>When remote controlling the unit via the 9 PIN REMOTE terminal, use this item to set the PREROLL time of the unit. Configurations done via the editing remote controller prevail over other settings:</p> <p>3SEC : 3 seconds</p> <p>5SEC : 5 seconds</p> <p>7SEC : 7 seconds</p> <p>10SEC : 10 seconds</p> <p>— <b>Memo</b> —</p> <p>To enhance editing precision, please set it to at least 7 seconds.</p>
REM FF/REW MODE	<input checked="" type="radio"/> FF/REW <input type="radio"/> SEARCH	<p>Use this menu item to set the action to be performed when an FF/REW command is received via the 9 PIN REMOTE terminal or DV terminal:</p> <p>FF/REW : Sets the unit to execute FF/REW when a command is received. This is the usual setting.</p> <p>SEARCH : Sets the unit to go into the SEARCH state when a command is received. Use this setting if the locate(cue up) function does not work well.</p>

# MENU SCREEN - Contents of the menus - (continued)

## REMOTE menu (continued)

Items	Setting	Contents
REM STOP SEL	● EE PB	Use this menu item to set the action to be performed when a STANDBY ON command is received via the 9 PIN REMOTE terminal or DV terminal: EE: Sets the unit to the EE mode. (The unit will go into the STOP mode.) PB: Sets the unit to the PLAY mode. (The unit will go into the STILL mode.)
PB START DELAY	● 0F   15F	Use this menu item to adjust the edit timing. When the remote controller is used, there will be a slight delay time before edit starts. To rectify the time discrepancy, adjust the timing for starting playback: 0F : No compensation. 1F to 15F : Delay by the number of frames set by the user. When this unit is connected to an editing remote controller with no BUMP (synchronization) function, use this setting to adjust the editing precision.
SYNCHRONIZATION	OFF ● ON	Use this setting to turn on/off the BUMP function when the unit is connected to an editing remote controller: OFF : No synchronization. ON : Execute synchronization. The editing precision is enhanced . Please set the pre-roll time to at least 7 seconds.
NEXT PAGE		Display the REMOTE (2/2) menu.
PAGE BACK		Return to the top MENU.

## ■ REMOTE (2/2) menu

Items	Setting	Contents
CONTROLLER SEL	● TYPE1- TYPE7	When remote control is executed via the RS-422A interface, use this menu item to set the type of controller connected: TYPE1 : RM-G820 TYPE2 : RM-G860 TYPE3 : AG-A850 TYPE4 : RM-450,PVE-500 TYPE5 - TYPE7 : (not in use)
FOOT SW	● OFF L EDGE H EDGE L LEVEL	Set this menu item when an external switch (e.g., a footswitch) is connected to the SERIAL REMOTE terminal. Before using an external switch (footswitch), please engage the recording pause or recording mode: OFF : Use this setting if the external switch is not used. L EDGE : Recording and recording pause is switched at the LOW edge of the external switch signal. H EDGE : Recording and recording pause is switched at the HIGH edge of the external switch signal. L LEVEL : Record at the LOW edge and pause recording at the HIGH edge of the external switch signal.
PAGE BACK		Return to the REMOTE (1/2) menu.

## AUDIO/VIDEO menu

Items	Setting	Contents
AUDIO MODE	<input checked="" type="radio"/> 48K <input type="radio"/> 32K	Select the audio sampling frequency for recording: 48K : Records at 48kHz. It records in the 2-channel stereo mode. No audio dubbing. 32K : Records at 32kHz. It records in the 4-channel mode. To perform audio dubbing on CH3 and CH4 later, use this setting. — <b>Memo</b> — This setting is not required for DV signal input.
A.OUT AT SEARCH	<input type="radio"/> OFF <input checked="" type="radio"/> ON	Use this menu item to enable/disable audio output from the AUDIO OUT terminal during a search: OFF : No output. ON : Output.
AUDIO OUT SEL	<input checked="" type="radio"/> CH1/CH2 <input type="radio"/> MIX <input type="radio"/> CH3/CH4	Use this menu item to select the audio channel output from the AUDIO OUT terminal when playing back tapes recorded in the 32K mode: CH1/CH2 : Outputs CH1 and CH2 audio. MIX : Outputs mixed audio of CH1 and CH3 and mixed audio of CH2 and CH4. CH3/CH4 : Outputs CH3 and CH4 audio. — <b>Memo</b> — This setting can also be selected from the AUDIO OUT SEL. button on the wireless remote controller.
<div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p><b>Memo</b></p> <p>When it is set to the MIX mode, noise may be produced. If this occurs, please set it to CH1/CH2 or CH3/CH4.</p> </div>		
AUDIO OUT LEVEL	<input type="radio"/> ATT <input checked="" type="radio"/> NORM	Use this menu item to select the standard level for audio playback output: ATT : Attenuates the standard level to -12db. Use this setting when playing tapes recorded at the standard level of -12dB. The playback level is decreased by 8db. NORM : Sets the standard level to -20dB. Usually, this is selected. — <b>Memo</b> — This setting can also be selected with the AUDIO OUT LEV. button on the wireless remote controller.
SET UP (NTSC only)	<input checked="" type="radio"/> OFF <input type="radio"/> ON	Use this setting to determine whether to apply the setups to the analogue video signals (composite, Y/C): (For recording and playback) OFF : does not apply the setups. ON : applies the setups. — <b>Memo</b> — • If dubbing is repeatedly done with the settings of the playback or recording video signals differing from the setting here, the hue and brightness of the video may turn out abnormal.
PAGE BACK		Return to the top MENU.

# MENU SCREEN - Contents of the menus - (continued)

## TIME CODE menu

Items	Setting	Contents
TC		Presets the time code: For details, please refer to Page 36 "Presetting Time Codes".
CLEAR	<ul style="list-style-type: none"> <li>● CANCEL</li> <li>EXECUTE</li> </ul>	Use this menu item to choose whether to clear the time code values: CANCEL : Do not clear. EXECUTE : clear.
NDF/DF (NTSC ONLY)	<ul style="list-style-type: none"> <li>NDF</li> <li>● DF</li> </ul>	Select the framing mode for the time code generator: NDF : Sets the unit to the non-drop mode. Use this setting when the number of frames of the time code is important. DF : Sets the unit to the drop-frame mode. Use this setting for real-time based time codes.
TC DUPLICATE	<ul style="list-style-type: none"> <li>● OFF</li> <li>AUTO</li> <li>NON DROP</li> </ul>	Use this menu item to select the type of time code to be recorded for DV signal input: OFF : Records the time codes of the built-in time code generator of the main unit. AUTO : Records the time code input to the DV IN terminal. The framing mode of the time code will be automatically set to the framing of the input time code. NON DROP : Records the time code input to the DV IN terminal. The framing mode of the time code will be fixed as non-drop framing. Use this setting when dubbing on tapes recorded with BR-DV600, GY-DV500, GY-DV550, or GY-DV700W in the non-drop frame mode. (NTSC only)
TC ADJUST (DV)	<ul style="list-style-type: none"> <li>● OFF</li> <li>+1F</li> <li>+2F</li> <li>-2F</li> <li>-1F</li> </ul>	Use this menu item to set the timing to output time codes from the 9PIN remote terminal of the main unit to the editing remote controller: OFF : Usually, this is selected. +1F : Sets the timing to 1 frame faster. +2F : Sets the timing to 2 frames faster. -2F : Sets the timing to 2 frames slower. Use this setting when editing video or audio using DV signals. -1F : Sets the timing to 1 frame slower.
PAGE BACK		Return to the top MENU.

## DISPLAY menu

The DISPLAY menu consists of 2 menus (1/2 and 2/2 menu)

### ■ DISPLAY (1/2) menu

Items	Setting	Contents
DISPLAY	OFF <input checked="" type="radio"/> ON AUTO	Use this menu item to choose whether to have the characters of the status screen displayed on the monitor connected to VIDEO LINE OUT or Y/C OUT terminal: OFF : No on-screen display. Video display only. ON : Always provide on-screen display. AUTO : Provide on-screen display for about 4 seconds on switching modes. <hr/> <b>– Memo</b> This setting can also be selected from the DISPLAY button of the wireless remote controller.
COUNTER POSI.	<input checked="" type="radio"/> LOWER-R LOWER-L <input type="radio"/> UPPER-R <input type="radio"/> UPPER-L <input type="radio"/> CENTER	Use this menu item to select the position on the monitor for time code display: LOWER-R : Lower right LOWER-L : Lower left UPPER-R : Upper right UPPER-L : Upper left CENTER : Center
TIME CODE	OFF <input checked="" type="radio"/> ON	Use this menu item to turn on/off the display of time codes on the monitor: OFF : No display ON : Display
VTR MODE	OFF <input checked="" type="radio"/> ON	Use this menu item to turn on/off the display of the VTR mode on the monitor: OFF : No display ON : Display
TAPE REMAIN	OFF <input checked="" type="radio"/> ON	Use this menu item to turn on/off the display of remaining tape on the monitor: OFF : No display ON : Display
TIME/DATE	OFF TIME DATE <input checked="" type="radio"/> DATE +TM	Use this menu item to turn on/off the date/time display on the monitor and to select the display format: OFF : No display of date/time. TIME : Display the time only. DATE : Display the date only. DATE +TM : Display the date/time.

# MENU SCREEN - Contents of the menus - (continued)

## DISPLAY menu (continued)

Items	Setting	Contents
AUDIO INFO.	OFF ● ON	Use this setting to turn on/off the display of audio channel or sampling frequency on the monitor: OFF : No display ON : Display
NEXT PAGE		Display the DISPLAY (2/2) menu.
PAGE BACK		Return to the top MENU.

## ■ DISPLAY (2/2) menu


Items	Setting	Contents
DATE STYLE	YY/MM/DD MM/DD/YY ● DD/MM/YY	Select the date format: YY/MM/DD : Display year/month/day. MM/DD/YY : Display month/day/year. DD/MM/YY : Display day/month/year.
TIME STYLE	● 24HOUR 12HOUR	Select the time format: 24HOUR : Display in the 24-hour mode. 12HOUR : Display in the 12-hour mode.
BARS	● OFF ON	Use this menu item to choose whether to output, as test signals, color bar signals from the built-in signal generator: OFF : No output ON : Output  — <b>Memo</b> — <ul style="list-style-type: none"> <li>• This color bar cannot be used as the standard signal for hue calibration.</li> <li>• This setting can also be selected from the BARS button on the wireless remote controller.</li> <li>• During DV signal input, the color bar will not be output even if this item is set to "ON".</li> </ul>
PAGE BACK		Return to the DISPLAY (1/2) menu.



## **OTHERS - Placing the unit in an upright position -**

With the use of the provided stand, the main unit can be placed in an upright position as shown in the following diagram.

The left side should be at the bottom.

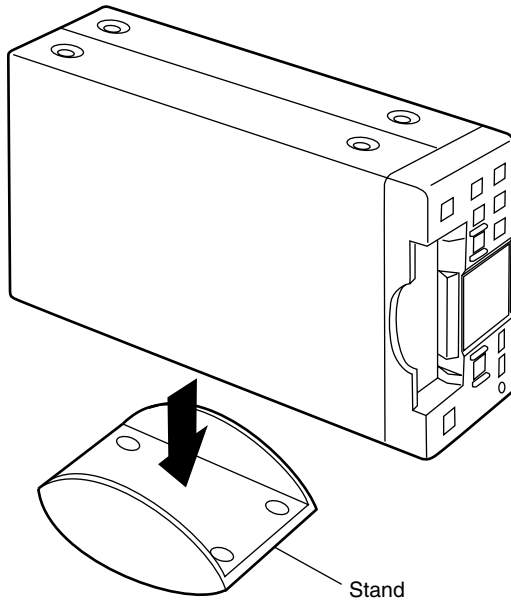


### **Notes**

- To place the VTR in an upright position, please use the provided stand.  
If the stand is not used, the unit may topple and result in injuries or breakdown.
- Please place the unit on a leveled place.


# OTHERS - Warning display -

When an anomaly occurs, this unit automatically identifies the cause and displays an error-coded warning message on the monitor. If the unit is in a state needing rectification, or if an operation error has occurred, an alarm display will be shown on the monitor.

**Warning display**

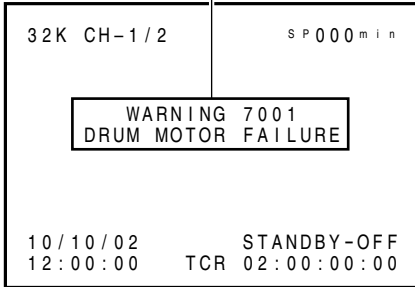

**Alarm display**

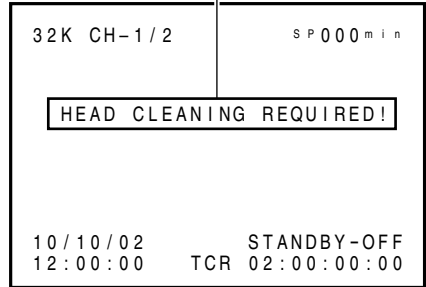

## ■ Alarm display (Displayed regardless of the DISPLAY mode)

Display	Status	Action
LOW VOLTAGE	The DC power voltage is low. The unit will eventually go into the OPERATE OFF mode if operation is continued.	Please check the power voltage.
HEAD CLEANING REQUIRED!	The video head is dirty. If the head is clogged, it will be detected and the alarm message will be displayed during the PLAYBACK mode. When the STOP mode is engaged or when the cassette is ejected, the display will go off. When the head clog is cleared, the message will disappear.	Please clean it with the dedicated head-cleaning tape. (Page 8) If the message persists despite cleaning, it could be due to bad recording condition, bad tape or lifespan of the head.
OVER HEATING!	The internal temperature of the unit has exceeded the regulated value.	Please disconnect the power and place the unit in a cool place. If this message is displayed again, the unit may have been damaged. Please consult your JVC authorized dealer.
UNPLUG MAIN POWER, PLUG BACK IN AFTER A WHILE	This is a system error that occurs when the power is turned on. The OPERATE indicator on this unit blinks in green. The unit will not accept any operation commands.	Unplug the power cord from the power outlet and wait for some time before plugging it back in.

- For alarm displays resulting from operation errors, please refer to page 22.

## ■ Warning display (Displayed regardless of the DISPLAY mode)

When a warning display appears, this unit stops operation and ceases to accept any operation commands. When TAPE DEFFECTIVE (5605 - 5609) is displayed, the unit similarly stops operation but accepts one command, viz EJECT.

Display	Status	Action
CONDENSATION ON DRUM	Condensation.	Please leave the power on and wait for the display to disappear.
WARNING 3200 LOADING FAILURE	Unable to load tape.	This error can be resolved by restarting the unit. However, doing so may damage the tape in some cases. Please consult your JVC authorized dealer.
WARNING 3300 UNLOADING FAILURE	Unable to eject tape.	
WARNING 4100 CASSETTE EJECT FAILURE	Eject error.	
DEFFECTIVE TAPE! 5605 - 5609	Tape is cut.	Press the EJECT button and retrieve the cassette. Then replace the tape.
WARNING 5702 TAPE END DET. ERROR!	Tape ending sensor error.	This error can be resolved by restarting the unit. However, doing so may damage the tape in some cases. Please consult your JVC authorized dealer.
WARNING 5802 TAPE BEGIN DET. ERROR!	Tape begin sensor error.	
WARNING 7001 DRUM MOTOR FAILURE	Drum rotation error.	
WARNING 7101 CAP MOTOR FAILURE	Capstan rotation error.	
WARNING 7202 - 7203 SUPPLY REEL FAILURE	Supply reel rotation error.	
WARNING 7302 - 7303 TAKE UP REEL FAILURE	Take up reel rotation error.	
WARNING 7305 TAKE UP REEL FAILURE	Tape winding error during unloading.	
WARNING 7401 REEL MOTOR FAILURE	Reel motor rotation error.	

### Memo



This unit uses a microcomputer. It may not function correctly if there is external noise. If this happens, please turn off the power and then on again.

## OTHERS - Troubleshooting -

Symptom	Action
<b>The power does not come on.</b>	Is the AC adapter correctly connected?
<b>The cassette cannot be loaded.</b>	Is the cassette indicator lit? If so, a cassette is already loaded. Please unload the cassette first. Push the center of the cassette and make sure that the cassette enters levelly.
<b>Unable to record.</b>	Is the slide of the cassette set to "REC"? Please set it to "REC" if it is at the "SAVE" position.
<b>The operation buttons of the main unit do not work.</b>	Is the OPERATION LOCK item of the SYSTEM (2/2) menu set to "ON"? Please set it to "OFF" so that the operation buttons of the main unit can to be used. During REMOTE mode, please use the LOCAL function menu item to select the buttons to be rendered operable.
<b>The 9 PIN REMOTE or SERIAL REMOTE cannot be engaged with the REMOTE SEL switch.</b>	Is the REMOTE item of the REMOTE (1/2) menu set to "OFF"? To use the 9 PIN REMOTE or the SERIAL REMOTE, please set it to "ON". When the OPERATE LOCK item of the SYSTEM(2/2) menu is set to "ON", the REMOTE SEL. switch will not function.
<b>Noise appears on the playback screen. Playback audio is disrupted.</b>	<ul style="list-style-type: none"> <li>• Is the tape damaged? Please replace the cassette.</li> <li>• Is the head dirty? Please clean it with the dedicated head-cleaning tape. (▶ Page 8)</li> </ul>
<b>During DV signal input, the time codes are not recorded correctly.</b>	Is the TC DUPLICATE item of the TIME CODE menu set correctly?
<b>After holding down the EJECT button of the main unit for 2 seconds or longer, the menu screen does not appear.</b>	Is a cassette loaded? Before attempting to display the menu screen with the EJECT button, please remove the cassette.
<b>Video and sound are distorted for a few seconds after starting playback.</b>	This occurs if the signal system of the playback tape is different from the NTSC/PAL setting.
<b>The wireless remote controller does not work at all.</b>	<ul style="list-style-type: none"> <li>• Is the REMOTE SEL switch on the main unit set to "WIRELESS"?</li> <li>• Are the batteries exhausted?</li> </ul>
<b>Power is not supplied even when the OPERATE button is pressed.</b>	Is the REMOTE SEL switch set at either "SERIAL" or "9 PIN" when the LOCAL FUNCTION item of the REMOTE menu is set to something other than ALL KEYS? Please set the REMOTE SEL. switch to "WIRELESS".

# OTHERS - Checking the hour meter -

This unit displays the drum usage time on the DRUM HOUR METER item of the top MENU. Please use it as a guide for regular maintenance. (☞ Page 7)

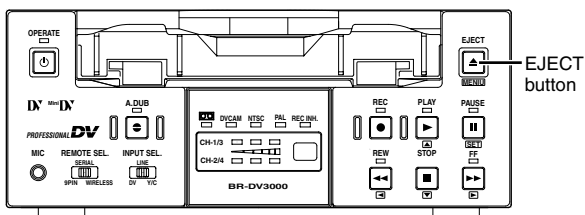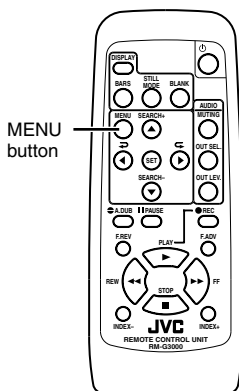

## Operation

### ■ To set the unit to the STOP mode:

When operating with the buttons on the main unit, unload the cassette.

#### 1. Display the top MENU.

**Remote controller**

Press the MENU button.

**Main unit**

Press the EJECT button for at least 2 seconds.

- Display the drum usage time on the DRUM HOUR METER item of the top MENU.


#### 2. To return to the usual screen:

**Remote controller**

Press the MENU button.

**Main unit**

Press the EJECT button.

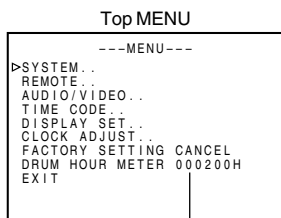

DRUM HOUR METER item

# OTHERS - Specification -

## ■ General

**Recording system** : DV system (SP mode only)

**Signal system** : NTSC/PAL

**Cassette** : Standard/ mini DV cassette

**Tape width** : 6.35mm

**Tape speed** : 18.812mm/s (NTSC)

18.831mm/s (PAL)

### Recording/ playback time

: 276 minutes (LA-DV276)

60 minutes (M-DV60)

### Fast forward/ rewind time

: About 3 minutes (LA-DV276)

About 1 minute (M-DV60)

**Power** : DC12V (supplied via the provided AC adapter)

**Power consumption** : 14W, 1.17A

**External dimension** : 174mm × (W) × 68mm (H) × 260mm (D) (Excluding protruding parts, e.g., foot)

**Weight** : About 2.5 kg

### Allowable operating temperature

: 5°C to 40°C

### Allowable storage temperature

: -20°C to 60°C

### Allowable operating RH

: 30%RH to 80%RH

## ■ Video

**Recording format** : 8 bit, 13.5MHz,

4:1:1 (NTSC)

4:2:0 (PAL)

### Video input

**Line (composite)** : 1.0V (p-p), 75Ω unbalance

**Y/C Y** : 1.0V (p-p), 75Ω unbalance

**C** : 0.286V (p-p) (NTSC) /

0.3V (p-p) (PAL)

75Ω unbalance

### Video output

**Line (composite)** : 1.0V (p-p), 75Ω unbalance

**Y/C Y** : 1.0V (p-p), 75Ω unbalance

**C** : 0.286V (p-p) (NTSC) /

0.3V (p-p) (PAL)

75Ω unbalance

### Horizontal resolution

: 500 line or more

**S/N** : 48dB or higher

## ■ Audio

**Recording format** : 16 bit, 48kHz, 2 channels

PCM audio/12 bit, 32kHz,

4-channel PCM audio

**Number of track** : 2 (16 bit, 48kHz) /

4 (12 bit, 32kHz)

**Audio input** : -8dBs, 10kΩ unbalance

**Mike input** : -60dBs, 3kΩ unbalance

**Audio output** : -8dBs, 1kΩ unbalance

### Frequency characteristics

: 20Hz to 20kHz (48kHz)

20Hz to 16kHz (32kHz)

## ■ DV interface

**Input/output** : IEEE1394

## ■ AC adapter section

**Power** : AC 100V to 240V~,

50Hz/60Hz.

### Power consumption

: 1.0A to 0.5A

**Output** : DC 12V = 3.5A

## ■ Accessories

Wireless remote controller ..... × 1

AC adapter ..... × 1


Power Cable ..... × 2

Battery(AA) ..... × 2

Stand ..... × 1

# OTHERS - Specification - (continued)

## ■ Diagram of external dimension (Unit: mm)

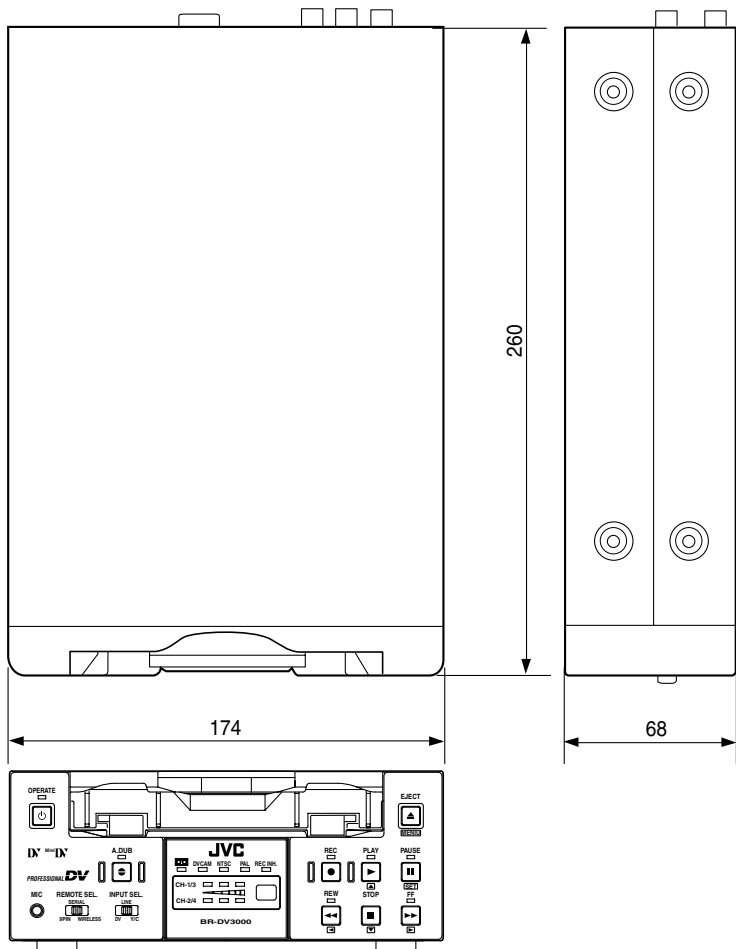

Design and specifications subject to change without notice.



**JVC**® is a registered trademark owned by VICTOR COMPANY OF JAPAN, LTD.  
**JVC**® is a registered trademark in Japan, the U.S.A., the U.K. and many other countries.  
© 2002 VICTOR COMPANY OF JAPAN, LIMITED



Printed in Thailand  
LLT0025-001D-H



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>