

JVC

ENGLISH
DEUTSCH
FRANÇAIS
NEDERLANDS
CASTELLANO
ITALIANO
PORTUGUÊS

LT-37R70BU/SU LT-37E70BU
LT-32R70BU/SU LT-32E70BU
LT-26R70BU/SU LT-26E70BU
LT-37ED6SU/LT-32ED6SU/LT-26ED6SU

WIDE LCD PANEL TV

16:9 LCD TV

TELEVISEUR A ECRAN LCD PANORAMIQUE

BREEDBEELD LCD TV

TELEVISOR CON PANEL LCD PANORÁMICO

TV LCD WIDESCREEN

TELEVISOR COM ECRÃ PANORÂMICO DE

CRISTAL LÍQUIDO

INSTRUCTIONS

BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS


GEBRUIKSAANWIJZING

MANUAL DE INSTRUCCIONES

ISTRUZIONI

INSTRUÇÕES

JVC

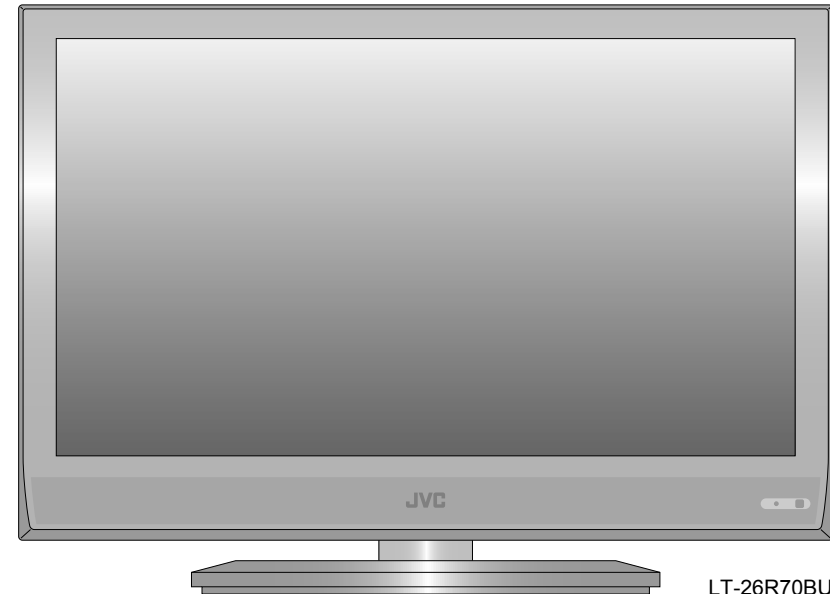

LT-26R70BU

HD
ready
DynaPiX HD
Powered by D.L.S.
InteriArt

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE
T-V LINK



ENGLISH

Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

JVC Manufacturing U.K. Limited

2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
United Kingdom

CASTELLANO

Apreciado cliente,

Este aparato cumple con las normativas y normas europeas respecto a la seguridad eléctrica y a la compatibilidad electromagnética.

JVC Manufacturing U.K.Limited

2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
Reino Unido

DEUTSCH

Sehr geehrter Kunde, sehr geehrte Kundin,

dieses Gerät stimmt mit den gültigen europäischen Richtlinien und Normen bezüglich elektromagnetischer Verträglichkeit und elektrischer Sicherheit überein.

JVC Manufacturing U.K. Limited

2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
Großbritannien

ITALIANO

Gentile Cliente,

Questa apparecchiatura è conforme alle direttive e alle norme europee relative alla compatibilità elettromagnetica e alla sicurezza elettrica.

JVC Manufacturing U.K. Limited

2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
Regno Unito

FRANÇAIS

Cher(e) client(e),

Cet appareil est conforme aux directives et normes européennes en vigueur concernant la compatibilité électromagnétique et à la sécurité électrique.

JVC Manufacturing U.K. Limited

2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
Royaume-Uni

PORTUGUÊS

Caro Cliente,

Este aparelho encontra-se em conformidade com as directivas Europeias válidas e padrões referentes à compatibilidade magnética e segurança eléctrica.

JVC Manufacturing U.K. Limited

2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
Reino Unido


NEDERLANDS

Geachte klant,

Dit apparaat voldoet aan de geldende Europese normen en richtlijnen inzake elektromagnetische compatibiliteit en elektrische veiligheid.

JVC Manufacturing U.K. Limited

2 Glenburn Road, College Milton Industrial Estate, East Kilbride G74 5BA
Verenigd Koninkrijk

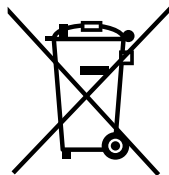

[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Attention:


This symbol is only valid in the European Union.

(Business users)

If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

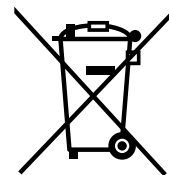

[Union européenne]

Lorsque ce symbole figure sur un appareil électrique et électronique, cela signifie qu'il ne doit pas être éliminé en tant que déchet ménager à la fin de son cycle de vie. Le produit doit être porté au point de pré-collecte approprié au recyclage des appareils électriques et électroniques pour y subir un traitement, une récupération et un recyclage, conformément à la législation nationale.

En éliminant correctement ce produit, vous contribuez à la conservation des ressources naturelles et à la prévention des éventuels effets négatifs sur l'environnement et la santé humaine, pouvant être dus à la manipulation inappropriée des déchets de ce produit. Pour plus d'informations sur le point de pré-collecte et le recyclage de ce produit, contactez votre mairie, le service d'évacuation des ordures ménagères ou le magasin dans lequel vous avez acheté le produit.

Des amendes peuvent être infligées en cas d'élimination incorrecte de ce produit, conformément à la législation nationale.

Attention:

Ce symbole n'est reconnu que dans l'Union européenne.

(Utilisateurs professionnels)

Si vous souhaitez éliminer ce produit, visitez notre page Web www.jvc-europe.com afin d'obtenir des informations sur sa récupération.

[Pays ne faisant pas partie de l'Union européenne]

Si vous souhaitez éliminer ce produit, faites-le conformément à la législation nationale ou autres règles en vigueur dans votre pays pour le traitement des appareils électriques et électroniques usagés.



[Europäische Union]

Dieses Symbol zeigt an, dass das elektrische bzw. elektronische Gerät nicht als normaler Haushaltsabfall entsorgt werden soll. Stattdessen sollte das Produkt zur fachgerechten Entsorgung, Weiterverwendung und Wiederverwertung in Übereinstimmung mit der Landesgesetzgebung einer entsprechenden Sammelstelle für das Recycling elektrischer und elektronischer Geräte zugeführt werden.

Die korrekte Entsorgung dieses Produkts dient dem Umweltschutz und verhindert mögliche Schäden für die Umwelt und die menschliche Gesundheit, welche durch unsachgemäße Behandlung des Produkts auftreten können. Weitere Informationen zu Sammelstellen und dem Recycling dieses Produkts erhalten Sie bei Ihrer Gemeindeverwaltung, Ihrem örtlichen Entsorgungsunternehmen oder in dem Geschäft, in dem Sie das Produkt gekauft haben.

Für die nicht fachgerechte Entsorgung dieses Abfalls können gemäß der Landesgesetzgebung Strafen ausgesprochen werden.

Hinweis:


Dieses Symbol ist nur in der Europäischen Union gültig.

(Geschäftskunden)

Wenn Sie dieses Produkt entsorgen möchten, besuchen Sie bitte unsere Webseite www.jvc-europe.com, um Informationen zur Rücknahme des Produkts zu erhalten.

[Andere Länder außerhalb der Europäischen Union]

Wenn Sie dieses Produkt entsorgen möchten, halten Sie sich dabei bitte an die entsprechenden Landesgesetze und andere Regelungen in Ihrem Land zur Behandlung elektrischer und elektronischer Geräte.

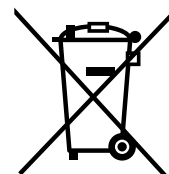

[Europese Unie]

Deze markering geeft aan dat de elektrische en elektronische apparatuur bij het einde van de gebruiksduur niet bij het huishoudelijk afval mag worden gegooid. Het product moet in plaats daarvan worden ingeleverd bij het relevante inzamelingspunt voor hergebruik van elektrische en elektronische apparatuur, voor juiste verwerking, terugwinning en hergebruik in overeenstemming met uw nationale wetgeving.

Door dit product naar het inzamelingspunt te brengen, werkt u mee aan het behoud van natuurlijke hulpbronnen en met het voorkomen van potentiële negatieve effecten op het milieu en de volksgezondheid, die anders veroorzaakt zouden kunnen worden door onjuiste afvalverwerking van dit product. Neem voor meer informatie over inzamelingspunten en hergebruik van dit product contact op met de gemeente in uw woonplaats, het afvalverwerkingsbedrijf of de winkel waar u het product hebt aangeschaft.

Er kunnen boetes gelden voor een onjuiste verwijdering van dit afval, in overeenstemming met de nationale wetgeving.

Let op:

Dit symbool is alleen geldig in de Europese Unie.

(Zakelijke gebruikers)

Bezoek als u dit product wilt weggooien onze website www.jvc-europe.com voor informatie over het terugnemen van het product.

[Landen buiten de Europese Unie]

Wanneer u dit product wilt verwijderen, houdt u dan aan de geldende nationale wetgeving of andere regels in uw land voor de verwerking van oude elektrische en elektronische apparatuur.

Información para los usuarios sobre la eliminación de equipos usados

CASTELLANO

[Unión Europea]



Este símbolo indica que los aparatos eléctricos y electrónicos no deben desecharse junto con la basura doméstica al final de su vida útil. El producto deberá llevarse al punto de recogida correspondiente para el reciclaje y el tratamiento adecuado de equipos eléctricos y electrónicos de conformidad con la legislación nacional.

Si desecha el producto correctamente, estará contribuyendo a conservar los recursos naturales y a prevenir los posibles efectos negativos en el medio ambiente y en la salud de las personas que podría causar el tratamiento inadecuado del producto desechado. Para obtener más información sobre el punto de recogida y el reciclaje de este producto, póngase en contacto con su oficina municipal, su servicio de recogida de basura doméstica o la tienda en la que haya adquirido el producto.

De acuerdo con la legislación nacional, podrían aplicarse multas por la eliminación incorrecta de estos desechos.

Atención:

Este símbolo sólo es válido en la Unión Europea.

(Empresas)

Si desea desechar este producto, visite nuestra página Web www.jvc-europe.com para obtener información acerca de la retirada del producto.

[Otros países no pertenecientes a la Unión Europea]

Si desea desechar este producto, hágalo de conformidad con la legislación nacional vigente u otras normativas de su país para el tratamiento de equipos eléctricos y electrónicos usados.

Informações para os Utilizadores sobre a Eliminação de Equipamento Antigo

PORTUGUÊS

[União Europeia]



Este símbolo indica que o equipamento eléctrico e electrónico não deve ser eliminado como um resíduo doméstico geral, no fim da respectiva vida útil. Pelo contrário, o produto deve ser entregue num ponto de recolha apropriado, para efectuar a reciclagem de equipamento eléctrico e electrónico e aplicar o tratamento, recuperação e reciclagem adequados, de acordo com a respectiva legislação nacional.

Ao eliminar este produto da forma correcta, ajudará a conservar recursos naturais e ajudará a evitar potenciais efeitos negativos no ambiente e saúde humana, que poderiam ser causados pelo tratamento residual inadequado deste produto. Para mais informações sobre o ponto de recolha e reciclagem deste produto, contacte a respectiva entidade local, o serviço de eliminação de resíduos ou a loja onde adquiriu o produto.

Caso estes resíduos não sejam correctamente eliminados, poderão ser aplicadas penalizações, em conformidade com a respectiva legislação nacional.

Atenção:

Este símbolo apenas é válido na União Europeia.

(utilizadores profissionais)

Se pretender eliminar este produto, visite a nossa página da web em www.jvc-europe.com para obter informações sobre a devolução do produto.


[Outros países fora da União Europeia]

Se pretender eliminar este produto, faça-o de acordo com a legislação nacional aplicável ou outras regras no seu país para o tratamento de equipamento eléctrico e electrónico velho.

Informazioni per gli utenti sullo smaltimento delle apparecchiature obsolete

ITALIANO

[Unione Europea]

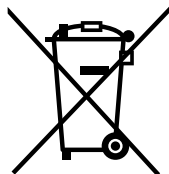

Questo simbolo indica che l'apparecchiatura elettrica ed elettronica a cui è relativo non deve essere smaltita tra i rifiuti domestici generici alla fine della sua vita utile. Il prodotto, invece, va consegnato a un punto di raccolta appropriato per il riciclaggio di apparecchiature elettriche ed elettroniche, per il trattamento, il recupero e il riciclaggio corretti, in conformità alle proprie normative nazionali.

Mediante lo smaltimento corretto di questo prodotto, si contribuirà a preservare le risorse naturali e a prevenire potenziali effetti negativi sull'ambiente e sulla salute umana che potrebbero essere provocati, altrimenti, da uno smaltimento inappropriato del prodotto. Per ulteriori informazioni sul punto di raccolta e il riciclaggio di questo prodotto, contattare la sede comunale locale, il servizio di smaltimento rifiuti domestici o il negozio in cui si è acquistato il prodotto.

L'utente è responsabile del conferimento dell'apparecchio a fine vita alle appropriate strutture di raccolta, pena le sanzioni previste dalla vigente legislazione sui rifiuti.

Attenzione:

Questo simbolo è valido solo nell'Unione Europea.


(Per gli utenti aziendali)

Qualora si desideri smaltire questo prodotto, visitare la nostra pagina web www.jvc-europe.com per ottenere informazioni sul ritiro del prodotto.

[Per altre nazioni al di fuori dell'Unione Europea]

Qualora si desideri smaltire questo prodotto, effettuare lo smaltimento in conformità alla normativa nazionale applicabile o alle altre leggi della propria nazione relative al trattamento delle apparecchiature elettriche ed elettroniche obsolete.

Expanding the world of beautiful images

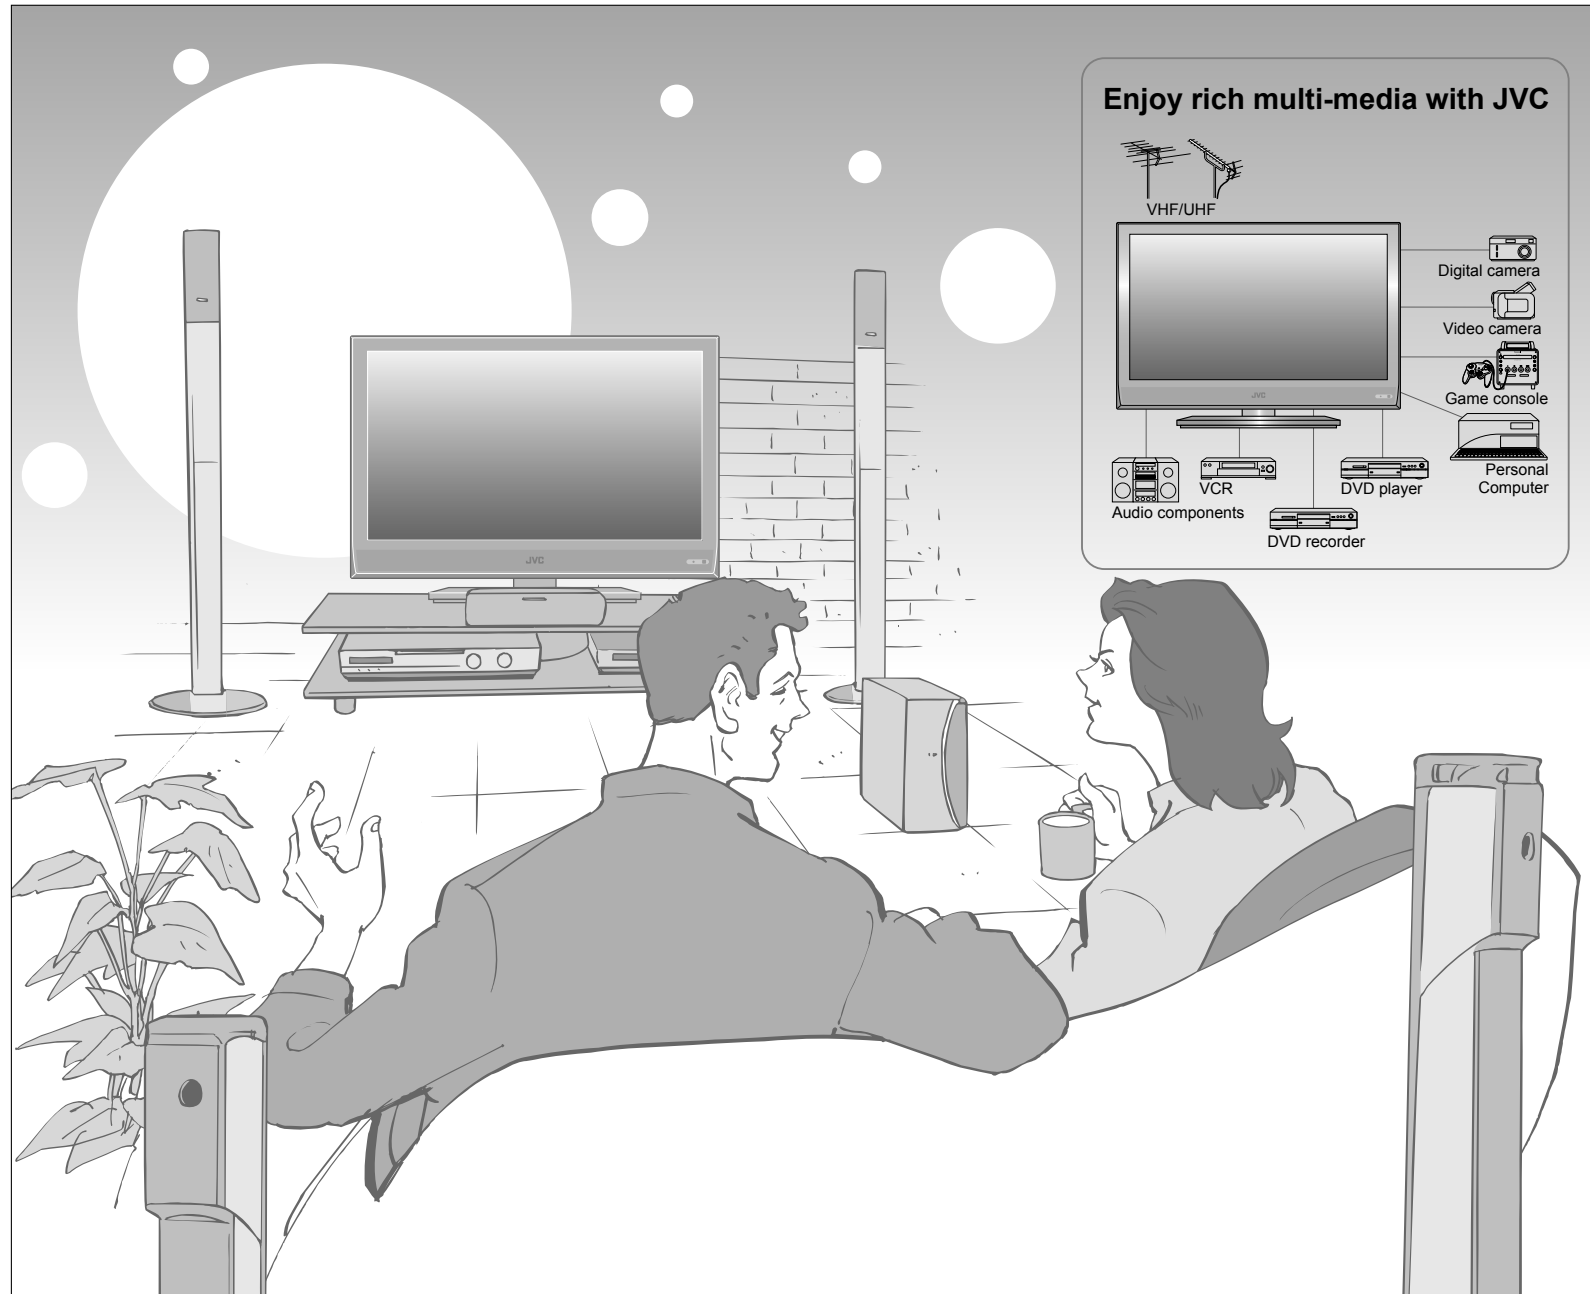

Contents

First things first!

- Warning 3

Getting started

- Names of all the parts 5
- Basic connections 7
- Initial settings 9
- Editing channels 11
 - Registering channels
- Connecting external devices 13

Let's try it out

- Enjoying your new TV! 15
 - TV / Teletext / Video / etc.
- Watching TV 17
- Viewing teletext 19
- Watching videos / DVDs 21

Try the advanced features

- Useful functions 23
 - Take a snapshot
 - View and search in multi-picture mode
 - "Sleep timer" / "Child lock"
- Operate JVC recorders and other devices 25

Just the way you like it

- Customising your TV 27
- Advanced picture adjustment 29
 - Reduce noise / Watch a more natural picture
 - Set the aspect ratio, etc.

When you have trouble

- Troubleshooting 31
- Technical information 34
- "CH/CC" List 35
- Specifications 36

Warning

Please follow all the guidelines below

Follow this manual regarding setup!

- Connect only to a 220-240V, 50Hz AC outlet.

Do not allow the TV to fall!

- Do not rest your elbows on, or allow children to hang from the TV. There is a risk that the TV will fall and cause injuries.

On disposal of the TV!

- Follow the instruction in "Information for Users on Disposal of Old Equipment" (P.III to VI).



Never place anything on the TV!

- Placing liquids, naked flames, cloths, paper, etc. on the TV may cause a fire.




Make enough room for inserting and removing the power plug!

Place the TV as close to the outlet as possible!

- The main power supply for this TV is controlled by inserting or removing the power plug.

Never cut or damage the power cord!

- If the AC plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult your retailer.)

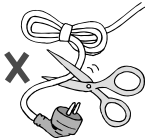

Never try to repair the TV yourself!

- ➔ If the problem cannot be solved in "Troubleshooting" (P. 31), unplug the power cord and contact your retailer.

If the TV is damaged or behaving strangely, stop using it at once!

- ➔ Unplug the power cord and contact your retailer.

Never expose to rain or moisture!

- To prevent fire or electric shock, never allow liquids to enter the unit.



Never insert objects into the cabinet openings!

- It may cause a fatal electric shock. Take care when children are near.




Never listen to headphones at high volume!

- It may damage your hearing.

Unplug the power cord when going out!

- The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for bedridden people.)

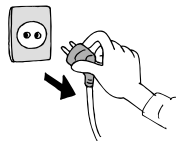

When attaching the TV to the wall, use the optional JVC wall mounting unit!

- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.

Never dismantle the rear panel!

- It may cause an electric shock.

Never obstruct the ventilation holes!

- It may cause overheating or a fire.

Handle LCD panel with care!

- Use a soft, dry cloth when cleaning.

Hold the TV so as not to scratch the screen!

- Do not touch the screen when carrying the TV.



Do not carry the TV on your own!

- In order to prevent accidents, ensure that the TV is carried by two or more people.




■ For more details on installation, usage and safety ➔ Consult your retailer

Names of all the parts

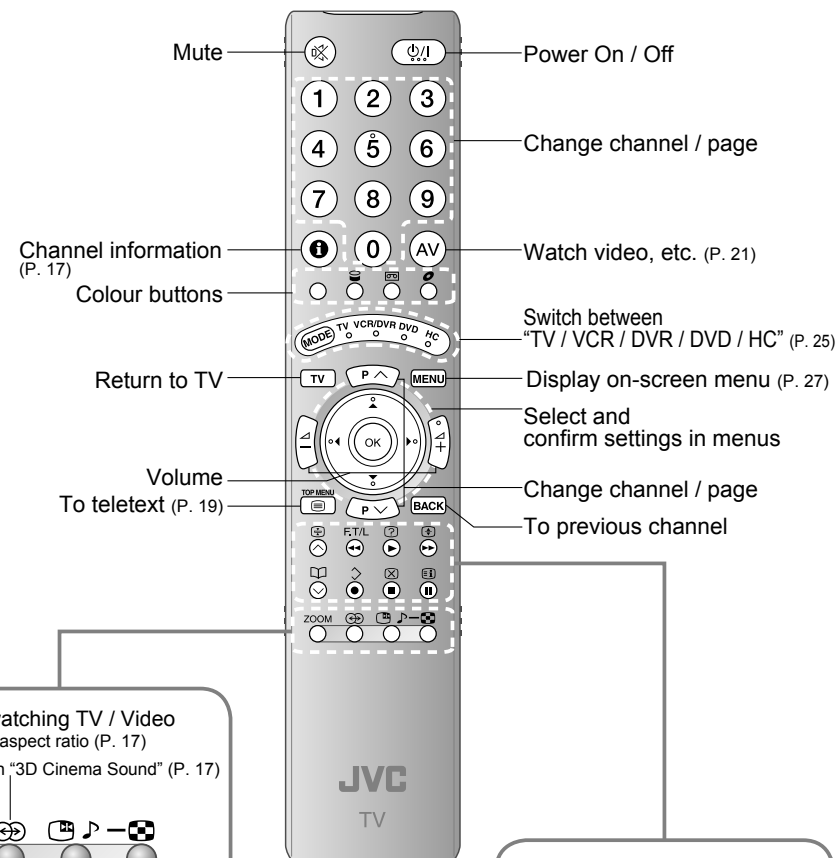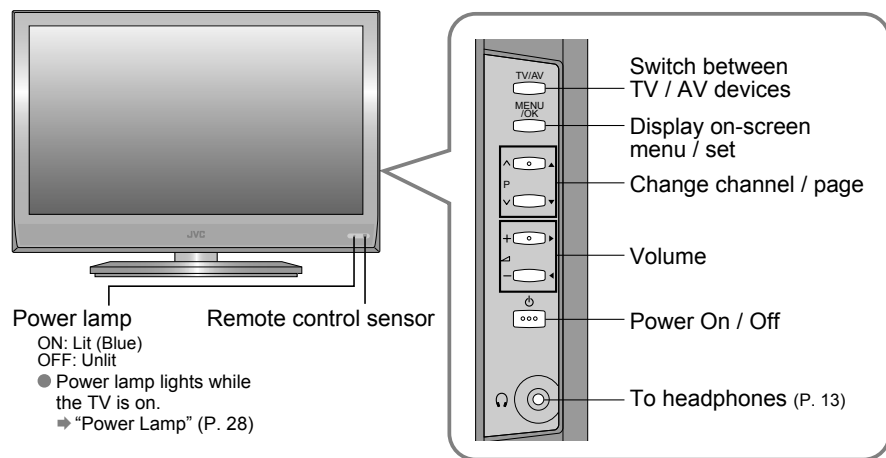


Remove the terminal cover

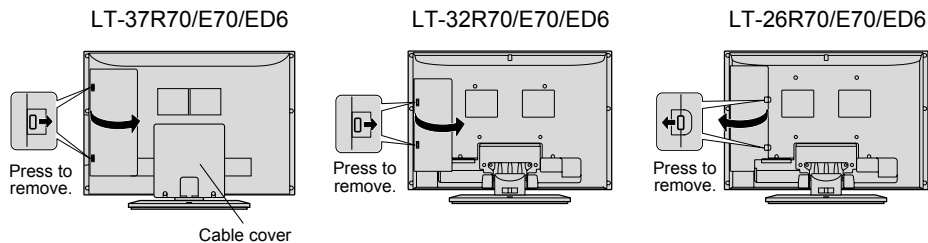

- If the cover cannot be closed due to the cables being in the way
 ➔ Do not force the cover to close (leave it open).
- Connecting terminals on the back of the TV ➔ Connecting External devices (P. 13)
- To remove the cable cover, refer to the included sheet.


Change the direction of TV

LT-37R70/E70/ED6

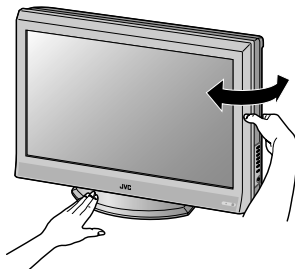

- For LT-32R70/E70/ED6 and LT-26R70/E70/ED6, the direction of the TV is fixed.

Check accessories

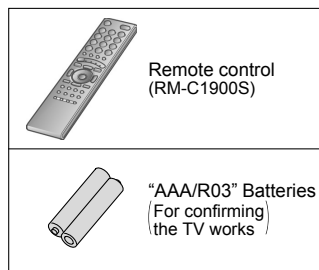

- LT-26R70/E70/ED6
 To attach the stand, refer to the included sheet.

When watching TV / Video
 Change the aspect ratio (P. 17)
 Turn on "3D Cinema Sound" (P. 17)

Take a snapshot of the screen (P. 23)
 View in multi-picture mode (P. 23)

Insert the batteries
 Use two "AAA/R03" dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

When viewing teletext (P. 19)
 Hold the current page
 Bookmark pages
 Reveal hidden pages
 Enlarge the text

Switch briefly between teletext and TV
 To index page

ENGLISH

IMPORTANT!

PREPARE

USE

SETTINGS


TROUBLE?

Basic connections

Please read the user manuals of each device carefully before setup.
It is necessary to connect an aerial to watch TV.


■ Connect with other devices → "Connecting external devices" (P. 13)

Connect the aerial

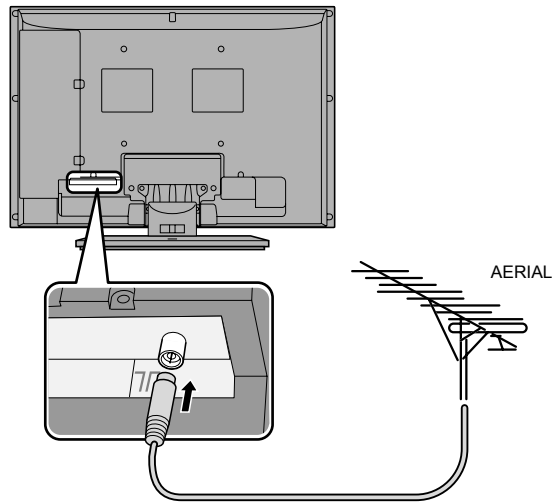

- After all the connections have been made, insert the plug into an AC outlet.

Connect a VCR / DVD recorder

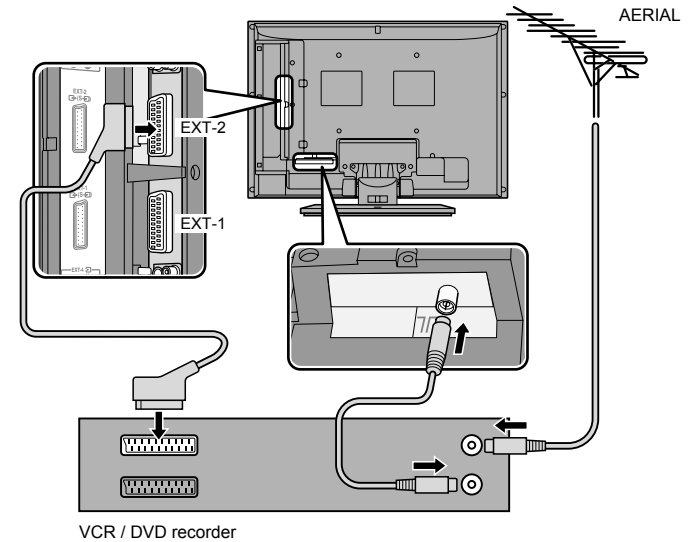

- After all the connections have been made, insert the plug into an AC outlet.
- Connect "T-V LINK" compatible recording device to "EXT-2".
- "T-V LINK" → "What is "T-V LINK"?" (P. 9)

Care when setting

■ Power requirements


- Connect the power cord only to a 220-240V, 50Hz AC outlet.

■ When attaching the TV to the wall, use the optional JVC wall mounting unit

- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.
- 200mm × 200mm mount which conforms to VESA standards.


■ Installation requirements

- To avoid overheating, ensure the unit has ample room.

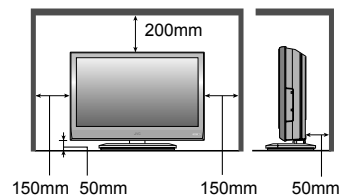


Tidying the cables

LT-37R70/E70/ED6

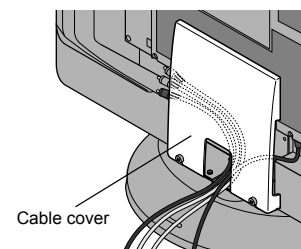

LT-32R70/E70/ED6, LT-26R70/E70/ED6

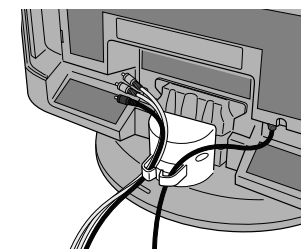

- To remove the cable cover, refer to the included sheet.


Initial settings

Set the menu language, installation location and automatically register the TV channels.
 These channels can be edited later in "Editing channels" (P. 11).
 (Channel data on the TV can be sent to a connected recording device that is compatible with "T-V LINK".)

- To the previous screen → **BACK**
- Exit → **TV**
- If the "JVC" logo does not appear or if you wish to make changes later → "Language" and "Auto Program" (P. 28)

What is "T-V LINK"?
 Connecting the TV to a "T-V LINK" compatible device allows :

- Channels on the TV to be instantly registered on the device.
- The "DIRECT REC" function to be used. → "Technical information" (P. 34)
- "T-V LINK" variations
 "T-V LINK" (JVC) "Q-LINK" (Panasonic)
 "Megalogic" (Grundig) "Data Logic" (Metz)
 "SMARTLINK" (Sony) "Easy Link" (Philips)

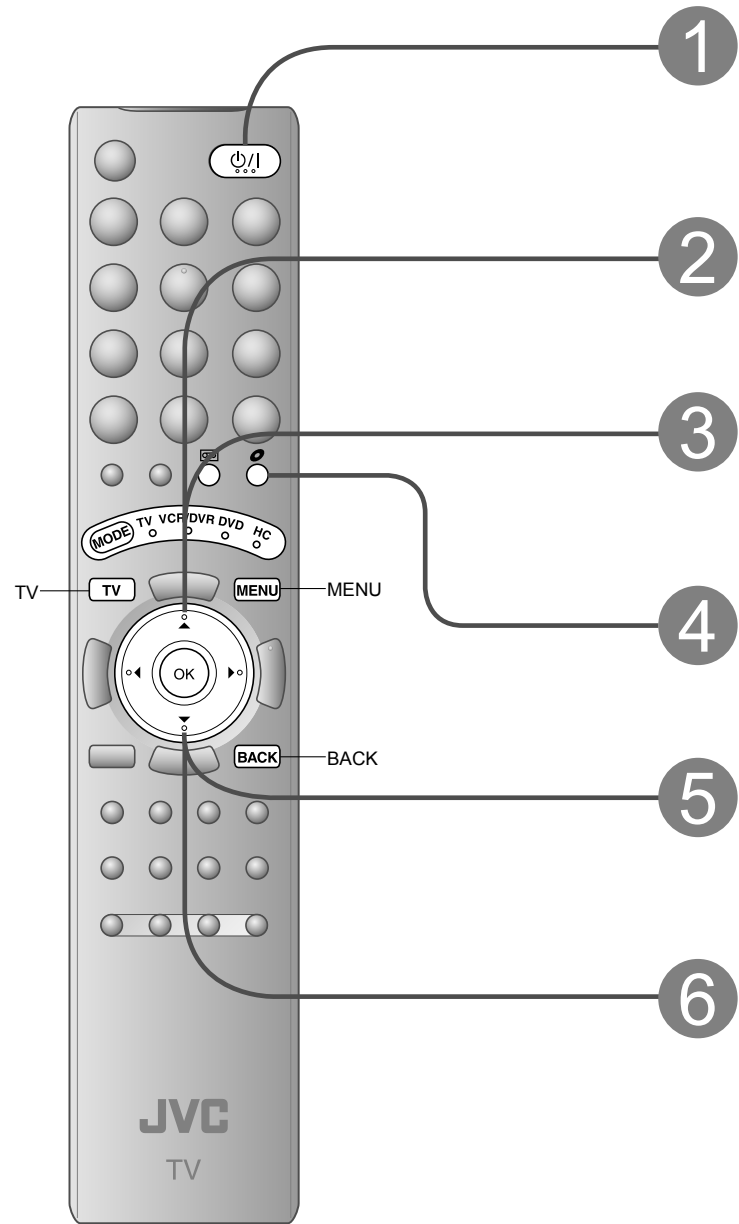

1 Begin

- Shown only when powering on for the first time.
- The power on the unit can also be used.

■ The remote control doesn't work

- Confirm the mode is set to "TV".

2 Select a language

① select
 ② set

3 Select the country of installation

select

- For the next page → "●" (Yellow)

4 Automatically register channels

- If "ACI Start" appears, select and start settings. (This will set up cable television channels.)
- "What is "ACI" (Automatic Channel Installation)?" (P. 34)

5 Check what was registered

- Edit channels → ① in "Editing channels" (P. 11)
- Confirm

6 Finish

- When using "T-V LINK"
- If "Feature Not Available" appears :
 → Is the "T-V LINK" compatible device connected to "EXT-2"?
 → Is the device turned on?

■ When not using "T-V LINK"

Editing channels

Edit the channels registered with "Auto Program" in "Initial settings" (P. 9).

When coming from "Initial settings" (P. 9), skip to 4.



- 1 **Display the menu bar**
- 2 **Select "Set Up"**
- 3 **Select "Edit / Manual"**
- 4 **Select a row**
- 5 **Edit**
- 6 **Confirm settings**
- 7 **Finish**
 - If "Feature Not Available" appears :
 - ➔ Is the "T-V LINK" compatible device connected to "EXT-2"?
 - ➔ Is the device turned on?
 - "T-V LINK" ➔ (P. 9)
 - When using "T-V LINK"
 - When not using "T-V LINK"
 - ➔ TV button

Move a channel's position

MOVE

Edit a channel name

ID

Insert a channel

INSERT

Delete a channel

DELETE

Register a new channel

MANUAL


- 1 **Begin**
 - 2 **Select a destination**
 - 3 **Finish**
-
- 1 **Begin**
 - 2 **Enter a channel name**
 - When selecting a preset name from the "ID List"
 - 1 select
 - 2 set
 - When manually naming a channel
 - 1 enter
 - 2 next column
 - 3 set
-
- 1 **Begin**
 - 2 **Select a "CH / CC"**
 - "CH/CC" List ➔ (P. 35)
 - 3 **Enter a number**
 - Receives the broadcast signal.
-
- 1 **Delete**
-
- 1 **Begin**
 - 2 **Beginning channel search**
 or
 - If necessary, press ➔ to change the broadcasting system.
 ➔ "Receivable broadcast systems" (P. 34)
 - 3 **Set**
 - Adjust
 - Picture fine tuning ➔
 - Sound fine tuning ➔
 - select a system

Connecting external devices

You can connect many different devices to the rear panel of the TV.
Please read the user manuals of each device before setting up.
(Connecting cables are not supplied with this TV.)

VCR / DVD / other devices

⇒ : signal direction

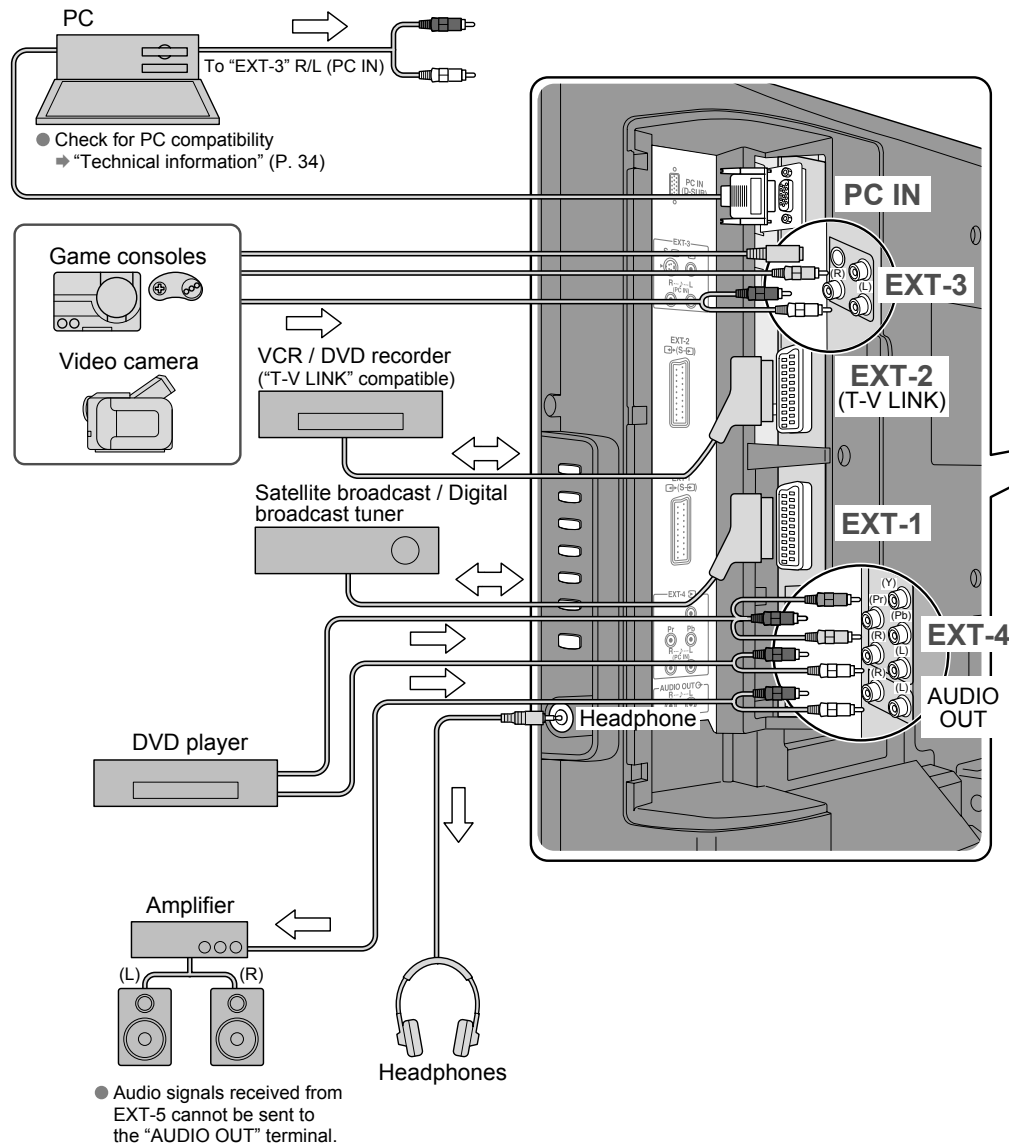

■ Connect "DVI" devices
⇒ (P. 34)

■ "T-V LINK" ⇒ (P. 9)

EXT-1 Watching videos

Output ↑	Input ↓
· Composite signal · Sound L / R	· Composite signal / RGB / S-VIDEO · Sound L / R

● Use S-VIDEO ⇒ "S-IN" (P. 22)

EXT-2 Dubbing videos Using "T-V LINK"

Output ↑	Input ↓
· Composite signal · Sound L / R	· Composite signal / RGB / S-VIDEO · Sound L / R
· T-V LINK	

- Use S-VIDEO ⇒ "S-IN" (P. 22)
- Select dubbing sources
⇒ "DUBBING" (P. 22)
- Connect a decoder
⇒ "Decoder (EXT-2)" (P. 28)

EXT-3 Watching videos

Output ↑	Input ↓
	· Composite signal / S-VIDEO · Sound L / R

EXT-4 Watching DVDs

Output ↑	Input ↓
	· Component signal (P. 36) · Sound L / R

● "Component Auto Select" ⇒ (P. 28)

EXT-5 Connecting HDMI devices

Output ↑	Input ↓
	· HDMI signal (P. 36)

● "HDMI Setting" ⇒ (P. 28)

AUDIO OUT

Listening to the TV on external speakers



Output ↑
· Sound L / R

Enjoying your new TV!

PAGE
17

Watching TV

- View channel information
- Change the aspect ratio
- Enjoy "3D Cinema Sound"
- Register your favourite channels

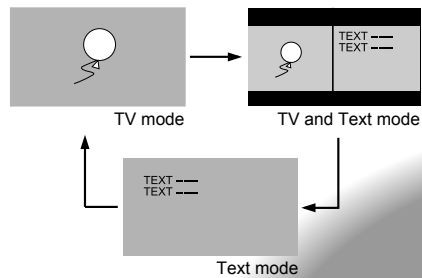
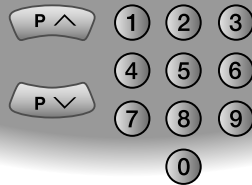


Viewing teletext

PAGE
19

- Enlarge the text
- To the index page
- Hold the current page
- Switch briefly between teletext and TV
- Bookmark your favourite pages
- Reveal hidden pages

TOP MENU

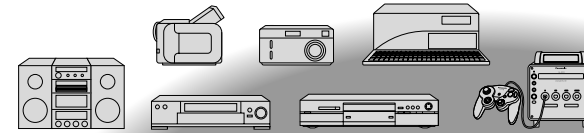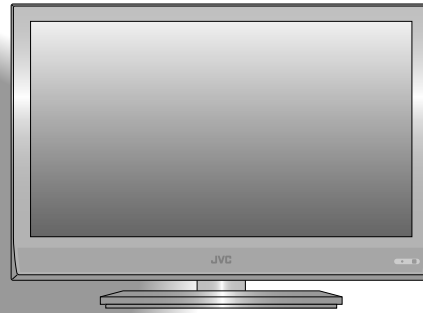

PAGE
21

Watching videos / DVDs

- Watch high quality video (S-VIDEO)
- Name connected devices
- Dub videos
- PC position adjustment




MENU

Personal preferences

PAGE
27

- Adjust the picture
- Adjust the sound
- Advanced settings (sleep-timer / child lock, etc.)
- Basic settings (channel settings, etc.)

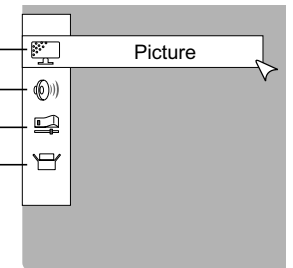

Watching TV

1 Set to "TV"
 MODE TV VCR/DVR DVD HC

2 Power on
 The blue power lamp on the TV lights

3 Select a channel
 1 2 3 E.g.
 4 5 6 1 : 0 → 1
 7 8 9 15 : 1 → 5
 0

■ Move up or down a channel
 P ^ up
 P v down

■ Switch between mono / stereo / bilingual broadcasting
 → "Stereo / I-II" (P. 28)

■ To the previous channel
 → **BACK**

Note
 ● To completely turn off the TV, unplug the AC plug.

■ Mute

■ Volume

Basic operations using the side buttons

1 Power on

2 Change the channel

■ Volume

<h3>Channel information and clock</h3> <p>INFORMATION</p>	<p>PR List</p> <ul style="list-style-type: none"> ● Channels registered in "Initial settings" will appear here. <p>Channel information</p> <p>Time (in case of having viewed teletext)</p> <p>(No indication)</p> <p>■ Select a page → select</p> <p>■ Select and view a channel → select</p>
<h3>Change the aspect ratio</h3> <p>ZOOM</p>	<p>ZOOM</p> <p>Auto Regular Panoramic 14:9 Zoom 16:9 Zoom 16:9 Zoom Subtitle Full</p> <p>Move the picture with ▲ or ▼ while this bar is displayed</p> <ul style="list-style-type: none"> ● When set to "Auto", the aspect ratio will turn to the ratio obtained from the information the TV received. Without receiving aspect information, it will be the setting in "4:3 Auto Aspect" (P. 30) ● Not available in 1080i (1125i) / 720p (750p) signals. ● In PC mode, "Regular" and "Full" can be selected.
<h3>Enjoy ambient sound</h3> <p>3D CINEMA SOUND</p>	<p>3D Cinema Sound High</p> <ul style="list-style-type: none"> High : For stereo sound Low : For stereo sound (when the sound distorts in "High" mode) Mono : For mono sound (emulates a stereo-like sound) Off : Turns off "3D Cinema Sound"
<h3>Register a channel to a button</h3> <p>FAVOURITE CHANNEL</p>	<p>While the channel is displayed</p> <p>Hold down for 3 seconds</p> <p>Press the number to register it on</p> <p>Programmed!</p> <p>Disappears after a few seconds</p> <p>■ Recall the favourite channel</p> <p>Press the number you registered</p> <p>Customisations (P. 28) to the picture of a favourite channel get saved as well.</p> <p>■ Check your favourite channels → Press "i" and confirm that the channels you have registered have a beside them</p> <p>■ Delete a favourite channel</p> <p>→ "MENU" → "Features" → "Favourite Setting"</p> <p>select delete</p>

Viewing teletext

This TV can display TV broadcasts and teletext on the same channel in two windows.

1 TOP MENU

2 Enter a teletext page

1 2 3
4 5 6
7 8 9
0

■ Move up or down a page

P ^ up
P v down

■ View sub-pages

01 02

to sub-page

When watching TV

TV TEXT

TEXT

Bookmark your favourite page

LIST MODE

1 Display your favourites list F.T/L

(RED) (GREEN) (YELLOW) (BLUE)

???

2 Select a coloured button to save your page to

(red) (green) (yellow) (blue)

???

3 Enter the number of the page to save

1 2 3
4 5 6
7 8 9
0

???

4 Save

■ Recall your favourite page → Press the coloured button as in step 2

Hold the current page

HOLD

Hold the current page

■ Release → Press "HOLD" again

Reveal hidden pages

REVEAL

Display hidden information (answers to quizzes, etc.)

1 + 2 =
2 x 3 =

1 + 2 = 3
2 x 3 = 6

Enlarge the text

SIZE

Double the size of the displayed text

TEXT SIZE

TEXT SIZE

To the index page

INDEX

Returns to page "100" or a previously designated page

Switch briefly from teletext to TV

CANCEL

Leave the current page open, while you switch to watch TV

P233

TEXT

TEXT

● Useful when running a page search.

Watching videos / DVDs

1 Select the video source

AV → EXT Mode

0	AV
1	EXT-1
2	EXT-2
3	EXT-3
4	EXT-4
5	HDMI
6	PC

① select
② watch

E.g. For EXT-1

2 Operate the connected device and play a video

■ Operate JVC recorders and other devices (P. 25)

Select the video source using the side buttons

1 TV/AV →

2 Select the video source

3 MENU/OK →

■ To TV

PC position adjustment

1 **MENU** Display the menu bar

2 Select "Set Up" → Select "PC Position"

① select
② next

● Shown only when "PC" is selected.

3 PC Position → adjust → set

● Reset position →

Advanced functions

1 Display the menu bar

MENU

2 Select "Set Up" → Select "EXT Setting"

① select
② next

Switch to S-VIDEO input

S-IN

① Select the "EXT" connected to S-VIDEO ② Set the S-VIDEO mode

● The device selection display will change from "E1" to "S1".

■ Cancel this mode → Press **STOP** in ② again

Edit names of connected devices

ID LIST

① Select an "EXT" to assign a name to ② Show the name list

③ Select a name from the list

■ Clear the name → Select the blank space in ③

Set up dubbing on "EXT-2"

DUBBING

① Select the arrow ② Select the dubbing source

ENGLISH

IMPORTANT!

PREPARE

USE


SETTINGS

TROUBLE?

Useful functions

Take snapshots of the screen


FREEZE

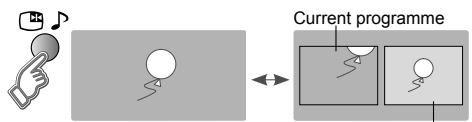

- **Cancel**
→ Press "⏮" again, or change the channel
- Not available when the SUB-PICTURE is displayed, or when in PC mode.
- You cannot save or export the snapshot.

Watch in multi-picture mode

MULTI-PICTURE

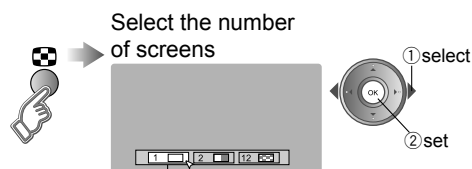


- Selecting "1" returns to normal viewing mode
- Not available in PC mode.

■ Watch in dual-picture mode

E.g. You can watch TV and video at the same time.

 
(For wide aspect ratio signals)



- Switch between the sound sources
→ (Main) (Sub)
- Change the channel
→ (Main) (Sub)


■ Select a channel in 12-screen mode

All registered channels are displayed as still images.

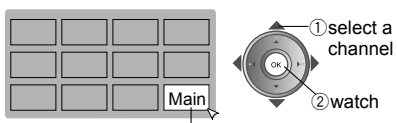


Only the selected frame has a moving picture.

- Move up or down a page → (Up) (Down)
- Not available for EXT-5 input.

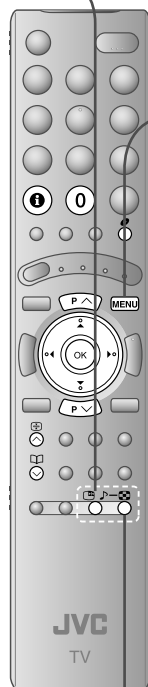

Set a time for the TV to turn itself off


SLEEP TIMER

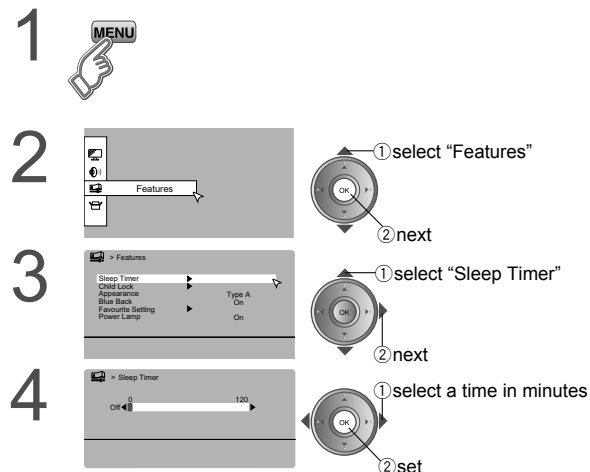

- **Cancel** → Set the time to "0" in step 4
- **Remaining time** → You can confirm the remaining time at step 4, after repeating this process.

Stop children from watching specific channels

CHILD LOCK

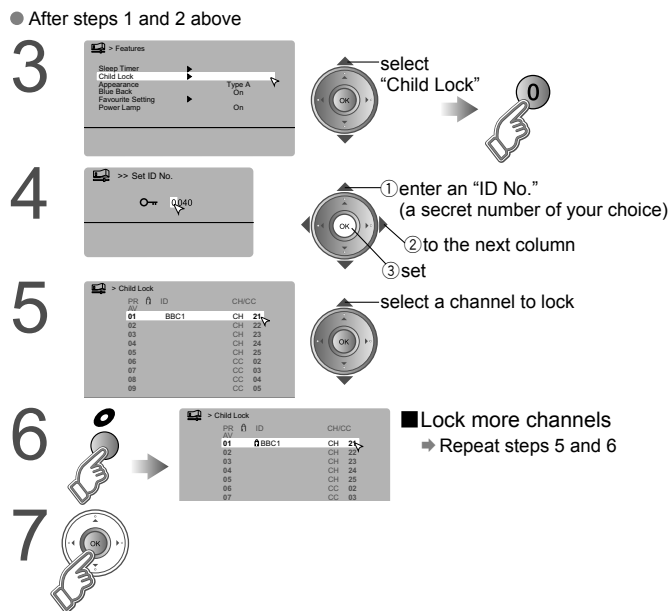

- After steps 1 and 2 above
- **Release a channel** → Press "0" again in step 6
- **View a locked channel** → Use the numerical buttons to enter the channel number. When Ⓜ appears, press "0" and enter your "ID No.". (If you forget your "ID No.", check it in step 4.)

Operate JVC recorders and other devices

The included remote control can be used to operate JVC recorders and other devices.



- 1 Select a device**

VCRs
DVD recorders
HDD recorders

Home theatre system

TV (P. 6) DVD players

 
 
● The indicator lights for 3 seconds each time the remote control is operated.
- 2 Turn on the device**
- 3 Operate the device**

● Other buttons can be used to operate the TV at any time.

Try changing the remote control code if you cannot operate a recorder.

■ Code A or 1 (Default)

■ Code C or 3



- Confirm the code for your recorder by checking the manual it came with.
- Some models of JVC devices cannot be operated with this remote control.
- JVC DVD recorders and HDD recorders are set to code "C" or "3" by default.


Note

- If the battery is removed, the remote control code reverts back to code A or 1.


Operate the VCR, DVD recorder or HDD recorder

VCR/DVR


Select VCR / DVD recorder / HDD recorder

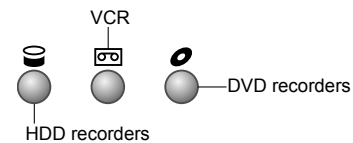

■ Operate DVD / HDD recorder menus

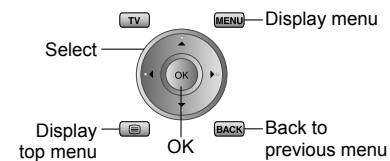

■ Playback / Record etc.

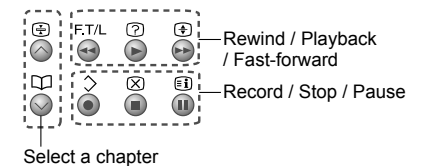


■ Display the subtitle (DVD / HDD recorder mode) → Press "i"


Operate the DVD player

DVD

■ Operate DVD menus

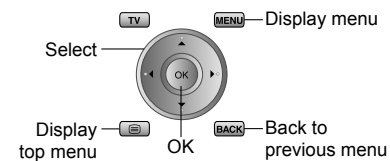

■ Playback etc.

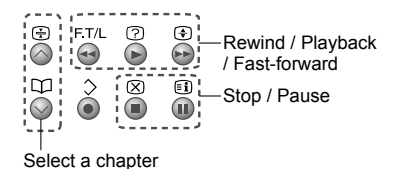


■ Display the subtitle → Press "i"


Operate the home theatre system

HC

■ Operate HC menus

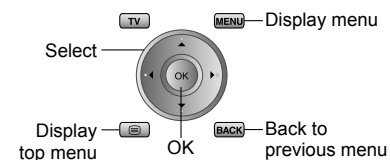

■ Playback etc.

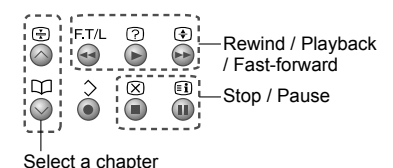


■ Display the subtitle → Press "i"

■ Mute → Press "MUTE"

■ Volume → Press "VOL+ / VOL-"

■ Select a surround mode → Press "SURROUND"

Customising your TV



1 Display the menu bar
 Press the **MENU** button.

2 Select a menu
 Press the **select** (OK) button to enter the menu. Press the **next** (right arrow) button to move between menu items.

3 Select an item
 Press the **select** (OK) button to enter the sub-menu.

4 Adjust / Configure
 Press the **adjust / select** (OK) button to enter the adjustment screen. Press the **set** (right arrow) button to confirm the selection.

■ To the previous screen
 → **BACK**

■ Exit
 → **MENU**

● The menu disappears after one minute of inactivity.

■ When adjusting with the sliding-bar
 Move the slider to the desired position. Press the **adjust / select** (OK) button to enter the adjustment screen. Press the **set** (right arrow) button to confirm the selection.

■ When selecting from presets
 Press the **select** (OK) button to enter the sub-menu. Press the **set** (right arrow) button to confirm the selection.


● Some items have a sub-menu.


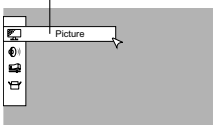
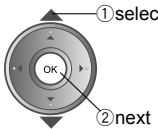
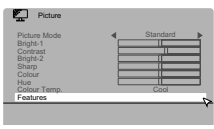
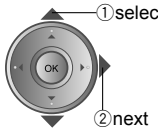
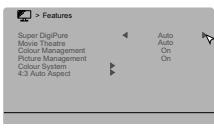
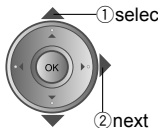

 

Menu	Item	Adjustments / Configurations
Picture	Picture Mode	Picture mode (Bright / Standard / Soft)
	Bright-1	Backlight brightness (Darker ⇄ Brighter)
	Contrast	Contrast (Lower ⇄ Higher)
	Bright-2	Brightness (Darker ⇄ Brighter)
	Sharp	Sharpness (Softer ⇄ Sharper)
	Colour	Colour (Lighter ⇄ Deeper)
	Hue	Tint (Reddish ⇄ Greenish)
	Colour Temp.	Colour temperature (Warm / Normal / Cool)
	Features	Finer picture adjustments (P. 29)
	Sound	Stereo / I · II
Bass		Low tones (Weaker ⇄ Stronger)
Treble		High tones (Weaker ⇄ Stronger)
Balance		Speaker balance (Left Stronger ⇄ Right Stronger)
3D Cinema Sound		Ambience level (High / Low / Mono / Off)
Features	Tone Correction	Make the sound more clear (On / Off)
	Sleep Timer	Timer for turning off the TV (P. 24)
	Child Lock	Stops children from watching specific channels (P. 24)
	Appearance	Format for displaying the channel number (Type A / Type B)
	Blue Back	Displays a blue screen and mute the sound when the signal is weak or absent (On / Off)
Set Up	Favourite Setting	Clear favourite channel settings (P. 17)
	Power Lamp	Lights power lamp (P. 5) while the TV is on (On / Off)
	Auto Program	Select a country, it automatically registers channels (P. 10, 4)
	Edit / Manual	Change registered channels or add new ones (P. 11)
	Language	Select a language for on-screen menus (P. 10, 2)
Set Up	Decoder (EXT-2)	For when connected to VCR with "T-V LINK" (On / Off)
	Component Auto Select	Changes the TV input to "EXT-4" when a component signal is input to "EXT-4" (On / Off) (Not available when viewing PC)
	EXT Setting	For use with video players and other devices (P. 22)
	HDMI Setting	Size (1 / 2 / Auto), Audio (Digital / Analogue / Auto)
	PC Position	PC position adjustment (P. 21)

- Other settings · Change the aspect ratio → "ZOOM" (P. 17)
- Turn on "3D Cinema Sound" → "3D CINEMA SOUND" (P. 17)

Advanced picture adjustment

By default, the TV automatically adjusts itself for the best picture.



- 1 **Display the menu bar**

- 2 **Select "Picture"**


- 3 **Select "Features"**


- 4 **Select an item**


- 5 **Change settings**


- 6 **Finish**


 
 






■ To the previous screen
 → **BACK**

■ Exit
 → **MENU**

● The menu disappears after one minute of inactivity.

E.g. "Super DigiPure"

  E.g. "Super DigiPure"

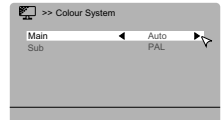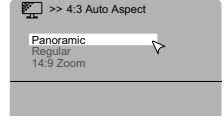Super DigiPure	For natural-looking outlines		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> Min : When the picture loses sharpness	<input type="checkbox"/> Max : When noise appears	<input type="checkbox"/> Auto : Automatically adjusts
Movie Theatre	For smooth cinema film		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Function is always on	<input type="checkbox"/> Auto : Automatically adjusts	
Colour Management	For natural-looking pictures		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Maintain a natural colour balance		
Picture Management	Fix bright / dark pictures		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Make it easier to view bright / dark pictures		
Smart Picture	Fix brightness of white areas		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Make it easier to view white areas	● Not available when "Picture Mode" is set to "Bright" (P. 28).	
MPEG Noise Reduction	To reduce MPEG video noise		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : When noise appears		
Colour System	When there is no colour		① Select the screen to change settings on <input type="checkbox"/> Main <input type="checkbox"/> Sub : Main picture : Sub-picture in MULTI-PICTURE mode (P. 23)			
			② Select the colour system <input type="checkbox"/> PAL <input type="checkbox"/> SECAM <input type="checkbox"/> NTSC 3.58 <input type="checkbox"/> NTSC 4.43 <input type="checkbox"/> Auto : Western Europe : Eastern Europe / France : USA 3.58 MHz : USA 4.43 MHz : When watching videos, etc.			
4:3 Auto Aspect	Set a default aspect ratio		Select a default aspect ratio for Auto in "Zoom" (P.17) <input type="checkbox"/> Panoramic <input type="checkbox"/> Regular <input type="checkbox"/> 14:9 Zoom 16 : 9 4 : 3 14 : 9			

ENGLISH

IMPORTANT!

PREPARE

USE

SETTINGS

TROUBLE?

Troubleshooting

Severe noise or snow



- Is the TV connected correctly to the aerial?
- Change the direction of the aerial.
- Is the aerial or its cable damaged?
 - ➔ Consult your retailer

 
Patterns, stripes or noise




- Is the aerial receiving interference from high-voltage power lines or wireless transmitters?
 - ➔ Consult your retailer
- Are connected devices too close to the TV?
 - ➔ Insert the minimum distance between the aerial and the cause of interference until no interference

Ghosting

(Doubling of images)




- Are you receiving interference from signals reflected off mountains or buildings?
 - ➔ Adjust the direction of your aerial, or change to a good-quality directional aerial

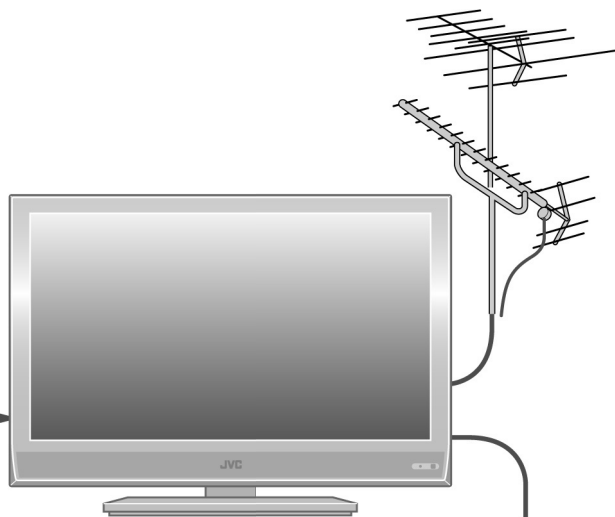

I can't turn it on!

- Is the power cord connected to the AC outlet correctly?

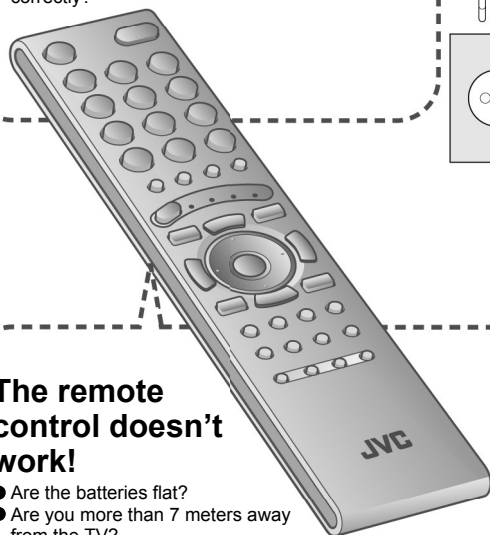

The remote control doesn't work!

- Are the batteries flat?
- Are you more than 7 meters away from the TV?
- Is the "MODE (TV, VDR/DVR, DVD, HC)" set to "TV"?
- When viewing teletext, the TV menu bar does not appear.
- Depending on the stability of the signal, there may be a time lag when changing channels.

	Problem	Actions	page
Basics	Remote control stops working	<ul style="list-style-type: none"> ● Unplug TV, several minutes later plug it in again. 	-
	Aspect ratio changes unintentionally	<ul style="list-style-type: none"> ● Press "ZOOM" to return to your settings. 	17
Screen	PC screen alignment is off	<ul style="list-style-type: none"> ● Adjust the "PC Position". 	21
	Poor picture quality	<ul style="list-style-type: none"> ● Unnatural colour >>> Adjust "Colour" and "Bright-1". Check your "Colour System". ● Noise >>> Set to the following functions. <ul style="list-style-type: none"> Picture Mode : Standard 28 Super DigiPure : Max 30 ● Dull picture >>> Set to the following functions. <ul style="list-style-type: none"> Picture Mode : Bright 28 Super DigiPure : Min 30 	28 30 28 30
Picture	Strange picture when using an external device	<ul style="list-style-type: none"> ● If you connected S-Video output device, check the "S-IN" setting. ● If the top of the image is distorted, check the video signal quality itself. ● If movement appears unnatural when receiving a signal from a DVD player, etc. with 625p (progressive-scanning), change the output setting of the external device to 625i (interlace-scanning). 	22 - -
	Poor sound	<ul style="list-style-type: none"> ● Adjust the "Bass" and "Treble". ● If receiving a poor signal in "Stereo / I-II", switch to "Mono". ● Adjust the channel reception using "Manual". 	28 28 11
Sound	No sound from the audio component	<ul style="list-style-type: none"> ● Audio signals received from EXT-5 cannot be sent to the "AUDIO OUT" terminal. 	-

Troubleshooting (continued)

	Problem	Actions	page
HDMI	Wrong screen size	● Switch "Size" in "HDMI Setting" to "1" or "2".	28
	No picture, no sound	● Use the cable marked with HDMI logo. HDMI	—
	No sound	● Check if the device is compliant with HDMI. ● Switch "Audio" in "HDMI Setting" to "Digital" or "Auto" for HDMI devices, or "Analogue" or "Auto" for DVI devices.	— 28
Functions	Green and distorted screen	● Wait a little for the signal to stabilize when switching the signal format for an "HDMI" device.	—
	Some functions do not work	● It is not a malfunction. Some functions (dark background) in the menu do not work depending on the situation.	—
	Some inputs cannot be selected in the sub-picture	● "EXT-4", "EXT-5" inputs and PC mode cannot be selected in the sub-picture. ● RGB input signal of "EXT-1" and "EXT-2" are not available in dual-picture mode.	—
Display	"Feature Not Available" appears	● Is the "T-V LINK" compatible device connected to "EXT-2"? ● Is the SCART CABLE "Fully Wired"? ● Is the "T-V LINK" compatible device turned on? After confirming all the conditions above, press "OK" button again.	34 34 —
	"ACI Error" appears	● Press ◀ to start "ACI" again. If you still receive the "ACI Error" after numerous tries, press ▶ to cancel "ACI".	—
	Black or white dots appear on the screen	● LCD panels use fine dots ("pixels") to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time. Please understand that this is not a malfunction.	—
Screen	The shadow of a different image is seen on the screen.	● When changing to another image after displaying a still image for a long period of time, the shadow of the previous image remains on the screen. This is not a malfunction, it is known as "temporary image retention", a phenomenon that is unique to LCD panels. The shadow will disappear after some time.	—

Technical information

What is "T-V LINK"?

"T-V LINK" allows the TV to share information easily with a connected "T-V LINK" compatible device. By using T-V LINK :

- You can send the channel information programmed on the TV to the "T-V LINK" compatible device, so that both the TV and the external device have the same channel settings. When connecting a new external device, channel information is loaded into it, allowing channel setup to be completed very quickly. For more details, refer to the external device's manual.
- You can easily record the TV programme you are viewing on a "T-V LINK" compatible device by using the "DIRECT REC" feature. For more details, refer to the external device's manual.

What is "ACI" (Automatic Channel Installation)?

Some cable companies transmit a signal called "ACI" which contains information that allows TV channels to be registered automatically on your TV.

When an ACI signal is received, "ACI Start / ACI Skip" appears in the "Auto Program" screen.

Receivable broadcast systems

Depending on the country selected during "Auto Program", the receivable broadcast system differs.

- UNITED KINGDOM: Receive only PAL-I.
- FRANCE: Can receive SECAM-L.

To receive SECAM-L in countries other than France:

- 1) Change the "Country" to "France" in "Auto Program".
- 2) Press the "BACK" button to return to the menu and enter the channel using "Insert" or "Manual".

PC Signals that can be displayed

Macintosh computers are not supported. (Macintosh is a registered trademark of Apple Computer, Inc.)

Resolution	640 x 480 (VGA)	1024 x 768 (XGA)
Vertical frequency (Hz)	60.0	60.0

- If the signal doesn't appear, check that the vertical frequency on the PC is set to "60Hz".

Connect "DVI" devices

Connect a "DVI" device to "EXT-5 (HDMI)" using "DVI-HDMI" conversion cable. Connect analogue sound output of the DVI device to L and R terminals in EXT-4.

- Set "Audio" in "HDMI Setting" to "Analogue" or "Auto" → (P. 28)

“CH/CC” List

To use the INSERT function (P. 11), find the “CH/CC” number corresponding to the TV’s Channel number from this table.

● When the Country setting is “France”, select a three-digit CH/CC number.

CH	Channel	CH	Channel	CC	Channel	CC	Channel
CH 02/CH 202	E2, R1	CH 40/CH 240	E40, R40	CC 01/CC 201	S1	CC 31/CC 231	S31
CH 03/CH 203	E3, ITALY A	CH 41/CH 241	E41, R41	CC 02/CC 202	S2	CC 32/CC 232	S32
CH 04/CH 204	E4, ITALY B, R2	CH 42/CH 242	E42, R42	CC 03/CC 203	S3	CC 33/CC 233	S33
CH 05/CH 205	E5, ITALY D, R6	CH 43/CH 243	E43, R43	CC 04/CC 204	S4	CC 34/CC 234	S34
CH 06/CH 206	E6, ITALY E, R7	CH 44/CH 244	E44, R44	CC 05/CC 205	S5	CC 35/CC 235	S35
CH 07/CH 207	E7, ITALY F, R8	CH 45/CH 245	E45, R45	CC 06/CC 206	S6	CC 36/CC 236	S36
CH 08/CH 208	E8, R9	CH 46/CH 246	E46, R46	CC 07/CC 207	S7	CC 37/CC 237	S37
CH 09/CH 209	E9, ITALY G	CH 47/CH 247	E47, R47	CC 08/CC 208	S8	CC 38/CC 238	S38
CH 10/CH 210	E10, ITALY H, R10	CH 48/CH 248	E48, R48	CC 09/CC 209	S9	CC 39/CC 239	S39
CH 11/CH 211	E11, ITALY H+1, R11	CH 49/CH 249	E49, R49	CC 10/CC 210	S10	CC 40/CC 240	S40
CH 12/CH 212	E12, ITALY H+2, R12	CH 50/CH 250	E50, R50	CC 11/CC 211	S11	CC 41/CC 241	S41
CH 21/CH 221	E21, R21	CH 51/CH 251	E51, R51	CC 12/CC 212	S12	CC 75/CC 275	X
CH 22/CH 222	E22, R22	CH 52/CH 252	E52, R52	CC 13/CC 213	S13	CC 76/CC 276	Y, R3
CH 23/CH 223	E23, R23	CH 53/CH 253	E53, R53	CC 14/CC 214	S14	CC 77/CC 277	Z, ITALY C, R4
CH 24/CH 224	E24, R24	CH 54/CH 254	E54, R54	CC 15/CC 215	S15	CC 78/CC 278	Z+1, R5
CH 25/CH 225	E25, R25	CH 55/CH 255	E55, R55	CC 16/CC 216	S16	CC 79/CC 279	Z+2
CH 26/CH 226	E26, R26	CH 56/CH 256	E56, R56	CC 17/CC 217	S17		
CH 27/CH 227	E27, R27	CH 57/CH 257	E57, R57	CC 18/CC 218	S18		
CH 28/CH 228	E28, R28	CH 58/CH 258	E58, R58	CC 19/CC 219	S19		
CH 29/CH 229	E29, R29	CH 59/CH 259	E59, R59	CC 20/CC 220	S20		
CH 30/CH 230	E30, R30	CH 60/CH 260	E60, R60	CC 21/CC 221	S21		
CH 31/CH 231	E31, R31	CH 61/CH 261	E61, R61	CC 22/CC 222	S22		
CH 32/CH 232	E32, R32	CH 62/CH 262	E62, R62	CC 23/CC 223	S23		
CH 33/CH 233	E33, R33	CH 63/CH 263	E63, R63	CC 24/CC 224	S24		
CH 34/CH 234	E34, R34	CH 64/CH 264	E64, R64	CC 25/CC 225	S25		
CH 35/CH 235	E35, R35	CH 65/CH 265	E65, R65	CC 26/CC 226	S26		
CH 36/CH 236	E36, R36	CH 66/CH 266	E66, R66	CC 27/CC 227	S27		
CH 37/CH 237	E37, R37	CH 67/CH 267	E67, R67	CC 28/CC 228	S28		
CH 38/CH 238	E38, R38	CH 68/CH 268	E68, R68	CC 29/CC 229	S29		
CH 39/CH 239	E39, R39	CH 69/CH 269	E69, R69	CC 30/CC 230	S30		

CH	Channel	CH	Channel	CC	Frequency (MHz)	CC	Frequency (MHz)
CH 102	F2	CH 141	F41	CC 110	116-124	CC 152	391-399
CH 103	F3	CH 142	F42	CC 111	124-132	CC 153	399-407
CH 104	F4	CH 143	F43	CC 112	132-140	CC 154	407-415
CH 105	F5	CH 144	F44	CC 113	140-148	CC 155	415-423
CH 106	F6	CH 145	F45	CC 114	148-156	CC 156	423-431
CH 107	F7	CH 146	F46	CC 115	156-164	CC 157	431-439
CH 108	F8	CH 147	F47	CC 116	164-172	CC 158	439-447
CH 109	F9	CH 148	F48	CC 123	220-228	CC 159	447-455
CH 110	F10	CH 149	F49	CC 124	228-236	CC 160	455-463
CH 121	F21	CH 150	F50	CC 125	236-244	CC 161	463-469
CH 122	F22	CH 151	F51	CC 126	244-252		
CH 123	F23	CH 152	F52	CC 127	252-260		
CH 124	F24	CH 153	F53	CC 128	260-268		
CH 125	F25	CH 154	F54	CC 129	268-276		
CH 126	F26	CH 155	F55	CC 130	276-284		
CH 127	F27	CH 156	F56	CC 131	284-292		
CH 128	F28	CH 157	F57	CC 132	292-300		
CH 129	F29	CH 158	F58	CC 133	300-306		
CH 130	F30	CH 159	F59	CC 141	306-311		
CH 131	F31	CH 160	F60	CC 142	311-319		
CH 132	F32	CH 161	F61	CC 143	319-327		
CH 133	F33	CH 162	F62	CC 144	327-335		
CH 134	F34	CH 163	F63	CC 145	335-343		
CH 135	F35	CH 164	F64	CC 146	343-351		
CH 136	F36	CH 165	F65	CC 147	351-359		
CH 137	F37	CH 166	F66	CC 148	359-367		
CH 138	F38	CH 167	F67	CC 149	367-375		
CH 139	F39	CH 168	F68	CC 150	375-383		
CH 140	F40	CH 169	F69	CC 151	383-391		

Specifications

Main unit			
Model	LT-37R70BU/SU LT-37E70BU LT-37ED6SU	LT-32R70BU/SU LT-32E70BU LT-32ED6SU	LT-26R70BU/SU LT-26E70BU LT-26ED6SU
Broadcasting systems	CCIR I / B / G / D / K / L (See “Technical information”, P. 34)		
Colour systems	TV broadcast : PAL, SECAM External input : PAL, SECAM, NTSC 3.58/4.43MHz		
Channels and frequencies	E2-E12 / E21-E69, F2-F10 / F21-F69, IR A-IR J, ITALY A-H / H+1 / H+2, R1-R12 / R21-R69, S1-S41, X / Y / Z / Z+1 / Z+2, French cable channels (Frequency : 116-172 MHz / 220-469 MHz)		
Sound-multiplex systems	NICAM (I / B / G / D / K / L), A2 (B / G / D / K)		
Teletext systems	FLOF (Fastext), TOP, WST (standard system)		
Power requirements	AC 220 V - 240 V, 50Hz		
Audio output (Rated power output)	10 W + 10 W		
Speakers	(16 cm x 4 cm) oval x 2	(15 cm x 5.5 cm) oval x 2	(12 cm x 5 cm) oval x 2
Power consumption [standby]	153 W [0.5 W]	127 W [0.6 W]	100 W [0.6 W]
Screen size (visible area size measured diagonally)	94 cm	80 cm	66 cm
Dimensions (W x H x D: mm) [without stand]	919 x 649.4 x 311 [919 x 603.7 x 128]	800 x 591 x 244 [800 x 545 x 137.8]	672 x 512 x 244 [672 x 471 x 137.7]
Weights [without stand]	22.7 kg [19.8 kg]	17.4 kg [15.5 kg]	14.4 kg [12.5 kg]
Accessories	(See “Check accessories”, P. 5)		

Terminals / Connectors				
Terminal name	Terminal type	Signal type (IN)	Signal type (OUT)	Notes
Input / Output terminals	EXT-1	Euroconnector x1 (SCART connector)	Composite video, S-video, Analogue RGB AUDIO L / R	TV out
	EXT-2	Euroconnector x1 (SCART connector)	Composite video, S-video, Analogue RGB AUDIO L / R	Dubbing out “T-V LINK” compatible
Input terminals	EXT-3	RCA connectors x 3, S-VIDEO connector x 1	Composite video, S-video AUDIO L / R	
	EXT-4	RCA connectors x 5	Analogue component (576i (625i) / 480i (525i), Progressive : 576p (625p) / 480p (525p), HD : 1080i (1125i), 720p (750p)) AUDIO L / R	
	EXT-5 (HDMI)	HDMI connector x 1	HDMI (576i (625i) / 480i (525i) / 576p (625p) / 480p (525p), 1080i (1125i), 720p (750p))	
Output terminals	PC INPUT	D-SUB (15 pins) x 1	Analogue PC signal (P. 34)	
	AUDIO OUT	RCA connectors x 2		Audio L / R
	Headphone	Stereo mini-jack x 1 (3.5 mm in diameter)		Headphone output

● We may change the design and specifications without notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>