

JVC



English

STEREO HEADPHONES
CASQUE STEREO
AURICULARES ESTÉREO

HA-NC70-J/C



For Customer Use :
Enter below the Model No. and Serial No.
which is located on the back of battery cover.
Retain this information for future reference.

Model No. _____
Serial No. _____

INSTRUCTIONS
MANUEL D' INSTRUCTIONS
MANUAL DE INSTRUCCIONES

JVC

Thank you for purchasing this JVC product.
Before you begin operating this unit, please read the operating instructions carefully to be sure you get the best possible performance.
If you have any questions, consult your JVC dealer.

CAUTION

Headphones

1. For your safety...

- Never use the headphones when driving a car, motorcycle, or bicycle. This could result in an accident.
- Pay close attention to traffic around you when using the headphones while walking. Not doing so could result in an accident.
- Be careful not to turn the sound volume up too high when using the headphones. Your hearing can be damaged by listening to sounds at excessive volume for long periods.
- Do not disassemble or modify the headphones.
- Do not allow inflammables, water or metallic objects to enter the headphones.

2. Avoid using the headphones...

- in places subject to excessive humidity or dust
- in places subject to extremely high (over 40°C or 104°F) or low (under 0°C or 32°F) temperatures

3. DO NOT leave the headphones...

- in direct sunlight
- near a heater

4. To protect the headphones, DO NOT...

- allow them to get wet
- drop them or shake them against hard objects.

- Be careful not to add power that exceeds the headphones' input capacity. This may result in distorted sound and could damage the oscillation board.
- Grasp and pull the plug firmly to disconnect the headphone. Do not pull on the cord.
- When using the headphones nearby a cellular phone, noise may occur. Keep the headphones away from the cellular phone.
- The ear pads will wear out earlier than the other parts even in normal use or in normal keeping due to the material characteristics.
- For replacement of the ear pads, please consult with the dealer where you purchased the headphones.
- When covering the headphones with an object, the noise-canceling function may not work well or howling noise may occur. In this case, take away the object covering the headphones.

FEATURES

 
1. **Noise Canceling Function** reduces ambient noise* in airplanes, buses, trains, etc. as well as ventilation hum in rooms for enhanced listening enjoyment even at low volume levels.

* Mainly reduces low-frequency noise; not designed to eliminate all noise.

2. **Lightweight and comfortable** is yours to enjoy as this ear clip phones, with serious sound performance.




PARTS NAME

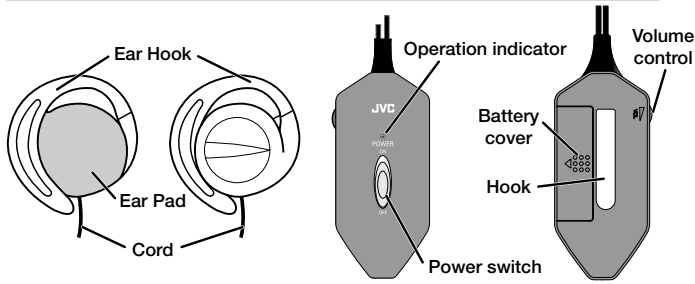

BATTERY INSERTION

 1. Slide open the battery cover.
2. Insert the provided battery, matching the ⊕ and ⊖. Press in on ⊕ end first and down on ⊖ end.
3. Close the battery cover.

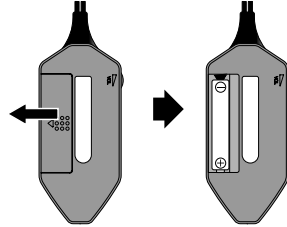

- Supplied battery is for your initial use.

Changing the Battery

The battery should be changed when the Operation indicator fades or does not turn on. The Noise Canceling Function becomes less effective as the battery wears down so make sure to replace the battery as necessary to maintain the proper performance of the headphones.

 
NOTES: Misuse of battery could result in leakage. This could cause a fire or explosion.

To prevent this, pay special attention to the following points:

- Be sure to insert the battery with correct positive ⊕ and negative ⊖ polarities.
- Do not heat, disassemble or short-circuit battery and never dispose of battery by throwing them in a fire.
- Read the caution displayed on the battery when in use.


USING THE HEADPHONES

1. Put on the headphones.

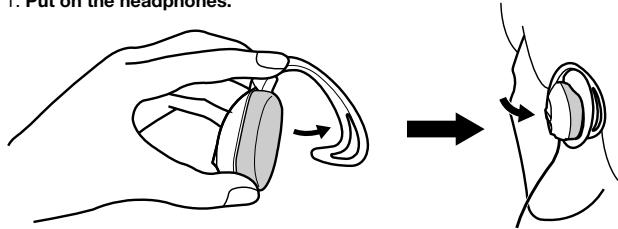

Push the Ear Hook slightly.

 Place the Ear Hook over your ear and adjust the Ear Hook position to fit your ear.

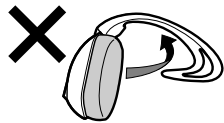

NOTE: Stretching the ear hook on the headphone from its original position may result in damage to the ear hook.

2. Plug the headphones to the audio component.

- Keep the volume level of the headphones to a minimum.
- Select the appropriate plug adaptor that fits in the airplane headphone plug.

3. Slide the power switch to ON to activate the noise-canceling function.

The Operation indicator lights up.

- You can use the headphones even if the power switch is set to OFF.
- To use the headphones as the noise canceling system, turn on the power without plugging to the audio component.

SPECIFICATIONS

English

Frequency response:	14 Hz — 22,000 Hz
Noise cancellation frequency range:	150 Hz — 1,000 Hz
Noise reduction:	more than 10 dB at 500 Hz
Sensitivity:	99 dB/1 mW (when ON), 99 dB/1 mW (when OFF)
Input impedance:	28 Ω (when ON), 48 Ω (when OFF)
Power supply:	AAA battery (DC 1.5 V) x 1
Battery life*:	approx. 25 hours** (using Manganese AAA battery), approx. 50 hours** (using Alkaline AAA battery) <small>*Depends on use. **Without ambient noise.</small>
Cord length:	1.5 m (4.9 ft) (from mini plug to the left channel of headphone)
Mass:	76 g (2.68 oz) (incl. cord and battery)
Accessories:	carrying pouch x 1, Manganese AAA battery (R03) x 1, dual plug adaptor (for in-flight use) x 1

Design and specifications subject to change without notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>