

# JVC



## MICRO COMPONENT SYSTEM

---

UX-G6

Consists of AX-UXG6, XT-UXG6, TD-UXG6,  
and SP-UXG6.

STEREO AMPLIFIER

---

AX-UXG6

COMPACT DISC/TUNER

---

XT-UXG6

CASSETTE DECK

---

TD-UXG6

SPEAKER SYSTEM

---

SP-UXG6



COMPACT  
disc  
DIGITAL AUDIO

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

LVT0377-006A

[A]

## Warnings, Cautions and Others


### CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### Caution — switch!

Disconnect the mains plug to shut the power off completely (the STANDBY/ON lamp goes off).

The  switch in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights red.
- When the unit is turned on, the STANDBY/ON lamp lights green.


The power can be remote controlled.

### Caution: Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

- 1 Front: No obstructions and open spacing.
- 2 Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
- 3 Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.


### The STANDBY/ON lamp

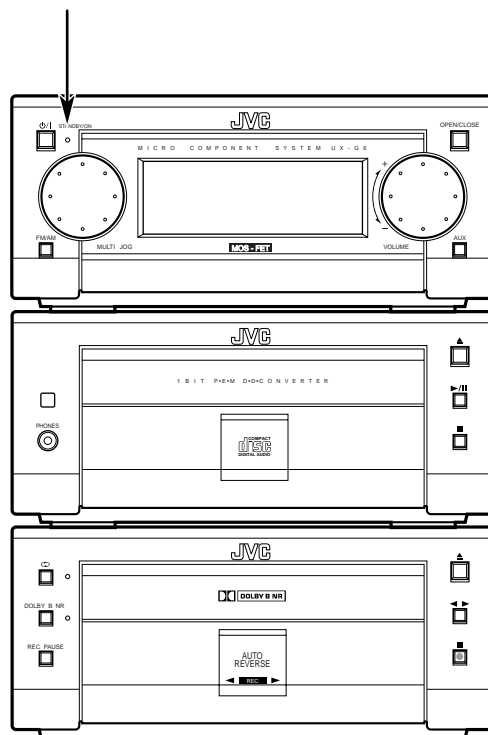

Front view

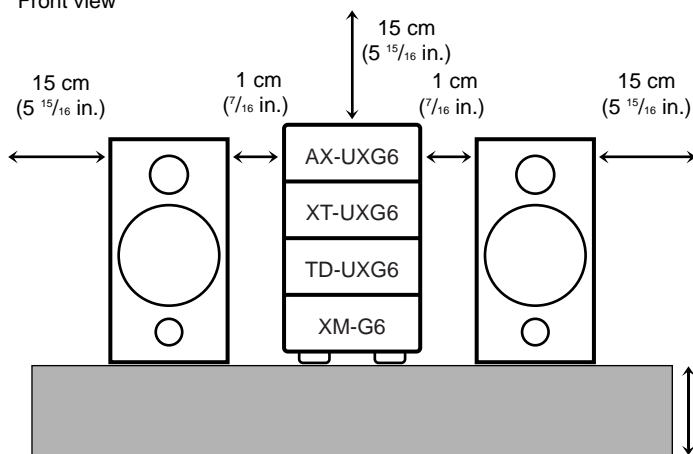

Side view

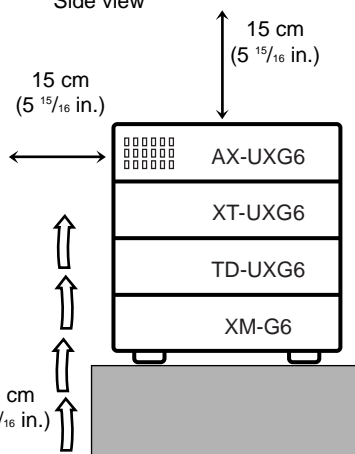


# IMPORTANT FOR LASER PRODUCTS

---

## REPRODUCTION OF LABELS

- ① CLASSIFICATION LABEL, PLACED ON EXTERIOR SURFACE

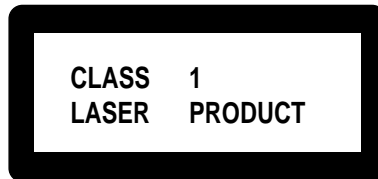

- ② WARNING LABEL, PLACED INSIDE THE UNIT

<b>DANGER:</b> Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	<b>WARNING:</b> Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)
<b>ADVARSEL:</b> Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling (d)	<b>VARO:</b> Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

# Introduction

**We would like to thank you for purchasing one of our JVC products. Before operating this micro component system, read this manual carefully and thoroughly to obtain the best possible performance from your system, and retain this manual for future reference.**

## About This Manual

This manual is organized as follows:

- The manual mainly explains operations using the buttons and controls on the units. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the units. If operation using the remote control is different from that using each unit, it is then explained.
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the system, setting the volume, changing the sound effects, and others, which are explained in the section “Basic Settings” and “Common Operations” on pages 10 to 13.
- The following marks are used in this manual:



Gives you warnings and cautions to prevent from a damage or risk of fire/ electric shock.

Also gives you information which is not good for obtaining the best possible performance from the units.



Gives you information and hints you had better know.

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold — between 5°C (41°F) and 35°C (95°F).
- Install the units in a location with adequate ventilation to prevent internal heat buildup in the units.
- Leave sufficient distance between the units and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the units in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

### Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lens inside the units in the following cases:

- After starting heating in the room
- In a damp room
- If the units are brought directly from a cold to a warm place

Should this occur, the system may malfunction. In this case, leave the units turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

### Others

- Should any metallic object or liquid fall into a unit, unplug the units and consult your dealer before operating any further.
- If you are not going to operate the units for an extended period of time, unplug the AC power cord from the wall outlet.



DO NOT disassemble the units since there are no user serviceable parts inside.

If anything goes wrong, unplug the AC power cord and consult your dealer.

# Contents

---


<b>Introduction .....</b>	<b>1</b>	<b>Playing Back a Tape .....</b>	<b>20</b>
About This Manual .....	1	Playing Back a Tape — Basic Operation .....	20
Precautions .....	1	Fast-Winding a Tape .....	21
<b>Contents .....</b>	<b>2</b>	Searching and Skipping to Each Program	
<b>Location of the Buttons and Controls .....</b>	<b>3</b>	— Music Scan .....	21
Front Panels .....	4	Playing Back Dolby-Recorded Tape .....	21
Remote Control .....	5	<b>Recording onto a Tape .....</b>	<b>22</b>
<b>Getting Started .....</b>	<b>6</b>	Manual Recording onto a Tape .....	22
Unpacking .....	6	Recording in Auto Reverse .....	23
Putting the Batteries into the Remote Control .....	6	Synchronized Recording from a CD .....	24
Connecting the System Control Cables and the External		Recording from the External Equipment .....	24
Wire .....	6	<b>Using the Timers .....</b>	<b>25</b>
Connecting MD Recorder XM-G6 .....	7	Using Recording Timer .....	25
Connecting Sub Woofer System .....	7	Using Daily Timer .....	26
Connecting Antennas .....	7	Using Sleep Timer .....	28
Connecting Speakers .....	8	Timer Priority .....	28
Connecting Other Equipments .....	9	<b>Maintenance and Additional Information .....</b>	<b>29</b>
<b>Basic Settings .....</b>	<b>10</b>	Handling CDs .....	29
Setting the Clock .....	10	Handling Cassette Tapes .....	30
Setting the Display Illumination (Dimmer) .....	10	Types of Cassette Tapes .....	30
<b>Common Operations .....</b>	<b>11</b>	<b>Troubleshooting .....</b>	<b>31</b>
Turning On the Power and Selecting the Sources .....	11	<b>Specifications .....</b>	<b>32</b>
Adjusting the Volume .....	11		
Reinforcing the Bass Sound .....	12		
Adjusting Bass and Treble Sounds .....	12		
Operating the Sliding Panel .....	13		
Listening to the External Equipment .....	13		
<b>Listening to FM and AM Broadcasts .....</b>	<b>14</b>		
Tuning in a Station .....	14		
Presetting Stations .....	15		
<b>Playing Back a CD .....</b>	<b>16</b>		
Playing Back the Entire Disc — Normal Play .....	16		
Searching and Skipping Tracks .....	17		
Programing the Playing Order of the Tracks			
— Program Play .....	17		
Playing at Random — Random Play .....	19		
Repeating Tracks — Repeat Play .....	19		

# Location of the Buttons and Controls


Become familiar with the buttons and controls on the units.

## Front Panels


AX-UXG6  
Stereo Amplifier

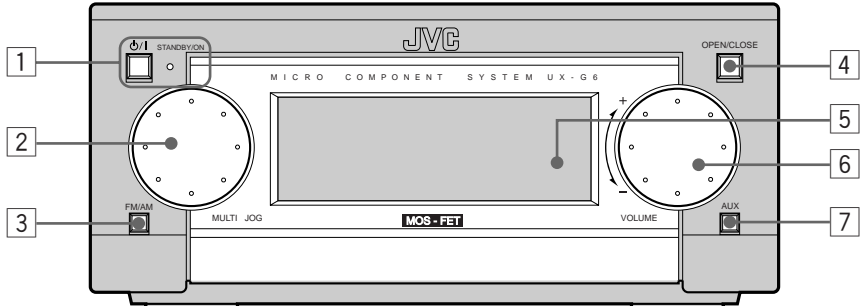


XT-UXG6  
Compact Disc  
/Tuner

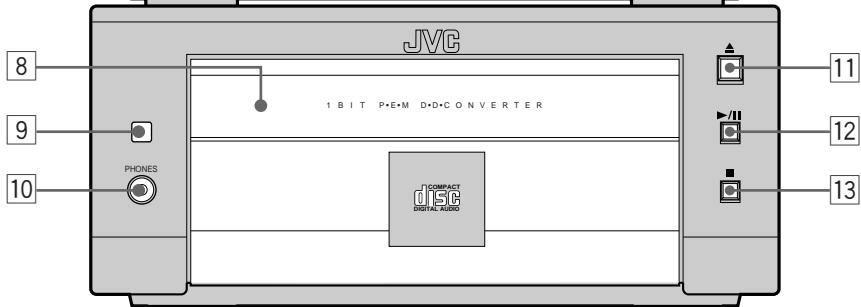

TD-UXG6  
Cassette Deck

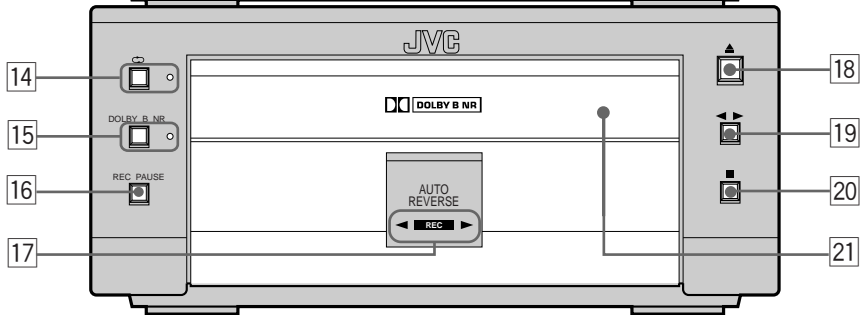


## Display window



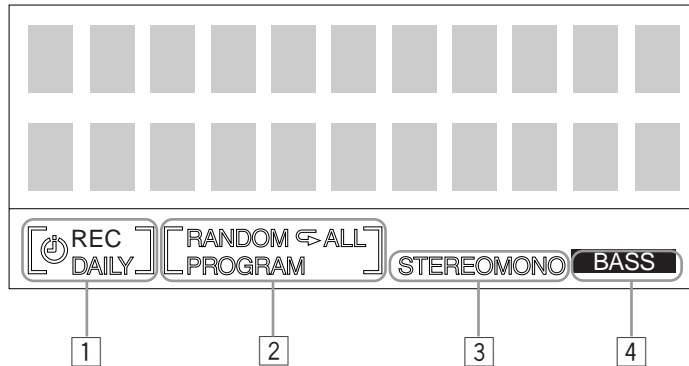


## Front Panels

 


    
 

### AX-UXG6 Stereo Amplifier


- 1  button and STANDBY/ON lamp (11)\*
- 2 MULTI JOG dial
- 3 FM/AM button (14)\*
- 4 OPEN/CLOSE button (13)\*
- 5 Display window
- 6 VOLUME dial (11)
- 7 AUX button (13, 24)\*



### XT-UXG6 Compact Disc/Tuner

 - 8 CD tray
- 9 Remote sensor (5)
- 10 PHONES jack (12)
- 11  (open/close) button for CD tray (16)\*
- 12  (play/pause) button (17)\*
- 13  (stop) button (17)

### TD-UXG6 Cassette Deck

- 14  (auto-reverse) button and lamp (20, 23)
- 15 DOLBY B NR button and lamp (21, 23)
- 16 REC PAUSE button (22)
- 17 Tape operations indicators (20, 22)
  - Tape direction ( / ) and REC indicators
- 18  (open/close) button for Tape tray (20)\*
- 19  (playback) button (20)\*
- 20  (stop) button (21)
- 21 Tape tray

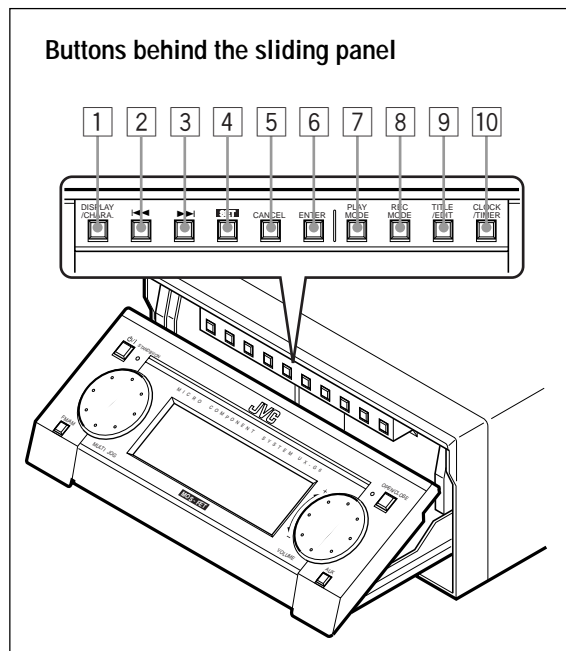






- 1 DISPLAY/CHARA. button \*\*
- 2  button (14, 17, 18, 21)
- 3  button (14, 17, 18, 21)
- 4 SET button (18, 25)
- 5 CANCEL button (10, 18, 25)
- 6 ENTER button \*\*
- 7 PLAY MODE button (17)
- 8 REC MODE button (24)
- 9 TITLE/EDIT button \*\*
- 10 CLOCK/TIMER button (10, 25)

\*\* Used only with MiniDisc recorder XM-G6 (not supplied).

 To press the buttons suffixed with \* mark also turns on the system.



### Display window

- 1 Timer mode indicators
  -  REC (recording timer) and  DAILY (daily timer) indicators
- 2 CD playback mode indicators
  - PROGRAM, RANDOM, , and  ALL (repeat all) mode indicators
- 3 FM mode indicators
  - STEREO and MONO indicators
- 4 BASS indicator

 • DO NOT operate any button and control until the system setup is completed.  
 • DO NOT operate the sliding panel by hands, otherwise it will cause serious damages on the sliding mechanism (see page 13).

Become familiar with the buttons on the remote control.

## Remote Control

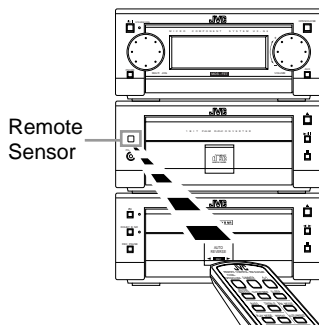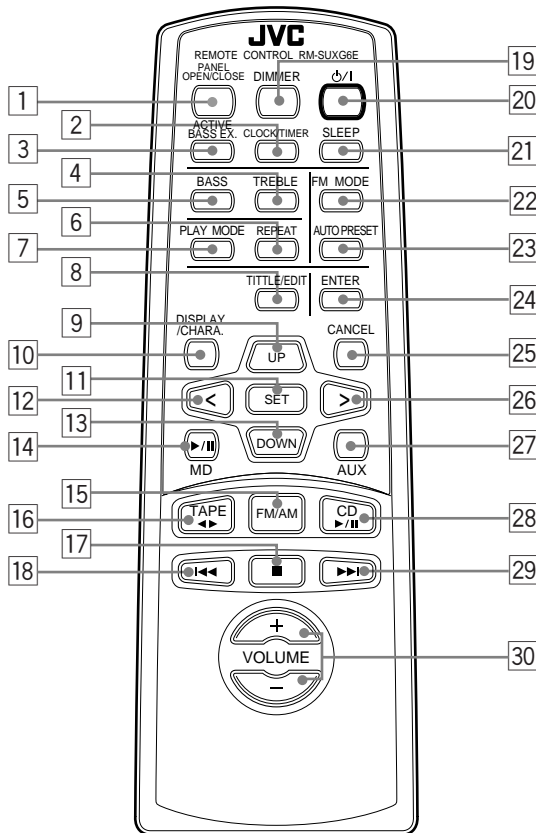

When using the remote control, point it at the remote sensor on the front panel.

## Remote Control

- 1 PANEL OPEN/CLOSE button (13)
- 2 CLOCK/TIMER button (10, 25)
- 3 ACTIVE BASS EX. (extension) button (12)
- 4 TREBLE button (12)
- 5 BASS button (12)
- 6 REPEAT button (19)
- 7 PLAY MODE button (17)
- 8 TITLE/EDIT button \*
- 9 UP button (12, 14, 17)
- 10 DISPLAY/CHARA. button \*
- 11 SET button (18, 25)
- 12 < (left cursor) button (10, 17, 25)
- 13 DOWN button (12, 14, 17)
- 14 MD >/|| (play/pause) button \*
- 15 FM/AM button (14)
- 16 TAPE << (playback) button (20)
- 17 ■ (stop) button (17, 21)
- 18 <<< (rewind) button (14, 17, 18, 21)
- 19 DIMMER button (10)
- 20 ⏻/⏿ (standby/on) button (11)
- 21 SLEEP button (28)
- 22 FM MODE button (15)
- 23 AUTO PRESET button (15)
- 24 ENTER button \*
- 25 CANCEL button (10, 18, 25)
- 26 > (right cursor) button (10, 17, 25)
- 27 AUX button (13, 24)
- 28 CD >/|| (play/pause) button (17)
- 29 >>> (fast forward) button (14, 17, 18, 21)
- 30 VOLUME +/- button (11)

\* Used only with MiniDisc recorder XM-G6 (not supplied).



### To operate the system correctly using the remote control

Before using these buttons:

**For Tuner operations**, press FM/AM button on the remote control first.

**For CD operations**, press CD >/|| (play/pause) button on the remote control first.

**For Tape operations**, press TAPE << (playback) button on the remote control first.



# Getting Started

## Unpacking

After unpacking, check to be sure that you have all the following items.

The number in the parentheses indicates the quantity of the pieces supplied.


- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)
- Speaker cords (2)
- External wire (1)

If any is missing, consult your dealer immediately.

## Putting the Batteries into the Remote Control

Insert the batteries — R6P (SUM-3)/AA (15F) — into the remote control, by matching the polarity (+ and –) on the batteries with the + and – markings on the battery compartment.

When the remote control can no longer operate the units, replace both batteries at the same time.

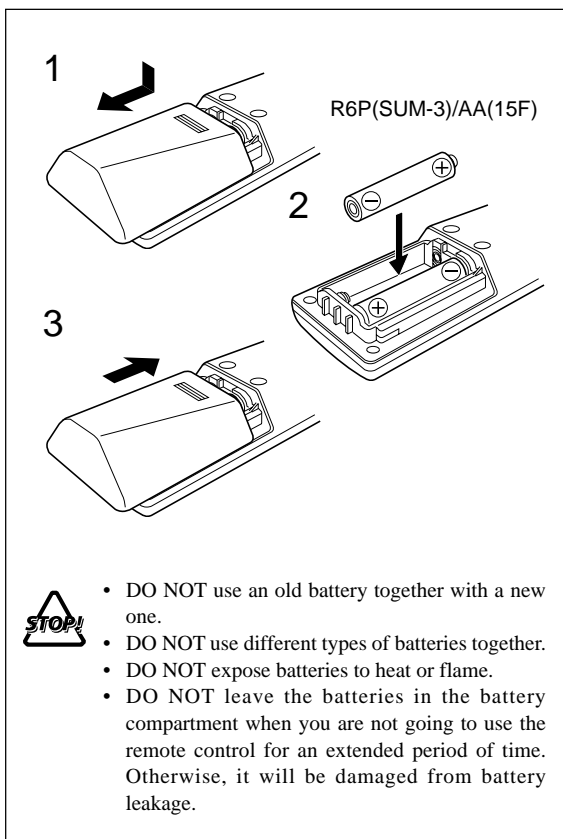


## Connecting the System Control Cables and the External Wire


UX-G6 micro component system consists of three units, AX-UXG6 Stereo Amplifier, XT-UXG6 Compact Disc/Tuner, TD-UXG6 Cassette Deck, and SP-UXG6 Speaker System.

You can easily connect these units using the system control cables equipped on the rear panel of the units.

- **To prevent malfunction**, connect the external wire as illustrated.

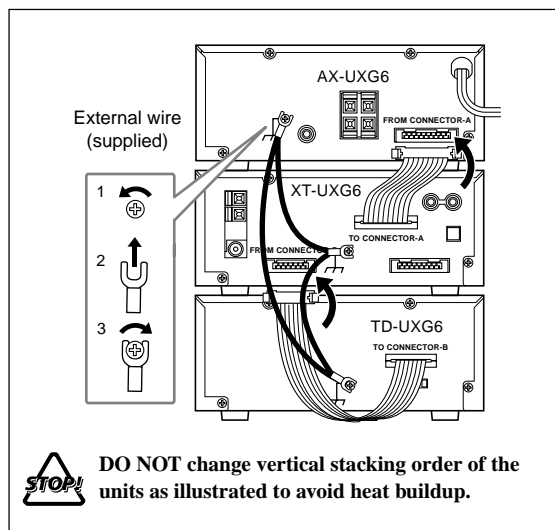

- **To connect the cables**, press the middle of the connector body until it clicks into the connector on the rear panel.
- **To disconnect**, if needed, pull the connector out pushing both sides of the connector body. Never pull out the cables themselves.

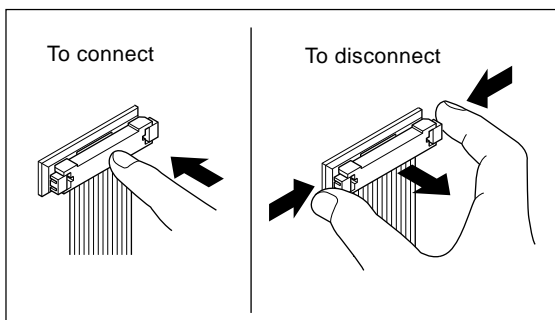


### When connecting the system control cables to the connectors

Make sure to connect the cable to the connector having the same name such as "FROM CONNECTOR-A" and "TO CONNECTOR-A."

## Connecting MD Recorder XM-G6


You can also connect the MD recorder XM-G6 (not supplied), specifically designed for UX-G6. This unit will complete UX-G6 micro component system.

When you connect and use this unit, refer to the Instructions supplied with it for details.

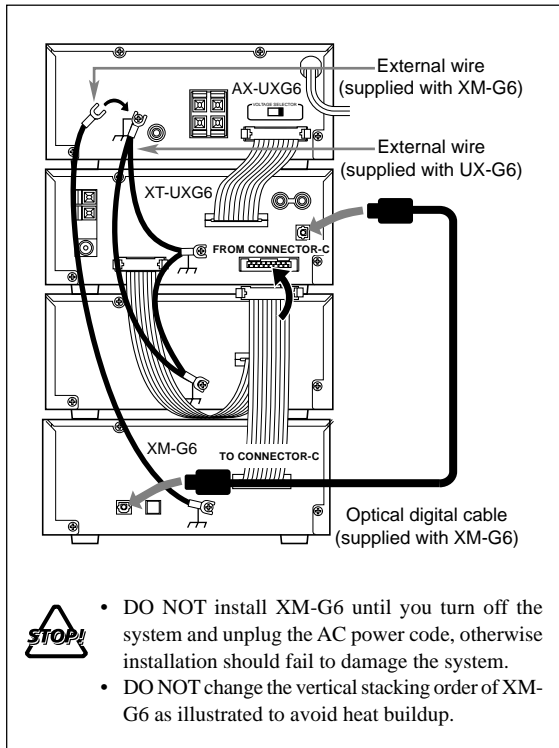

## Connecting Antennas

### Supplied FM antenna

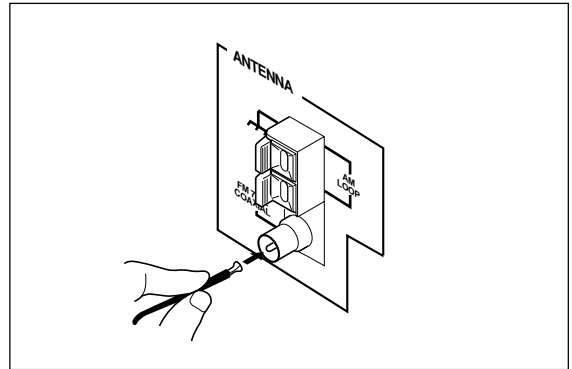

- 1 Attach the FM antenna to the FM 75 Ω COAXIAL terminal on the rear panel of XT-UXG6.
- 2 Extend the FM antenna.
- 3 Fasten it up in the position which gives you the best reception.




#### About the supplied FM antenna

The FM antenna supplied with this unit can only be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.


### To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

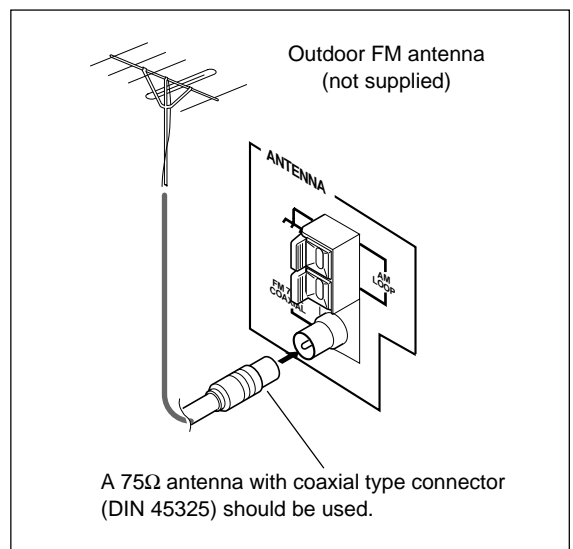


## Connecting Sub Woofer System

When using JVC external sub woofer system, connect audio cable between AX-UXG6's SUB WOOFER OUT jack and the input of your sub woofer system.

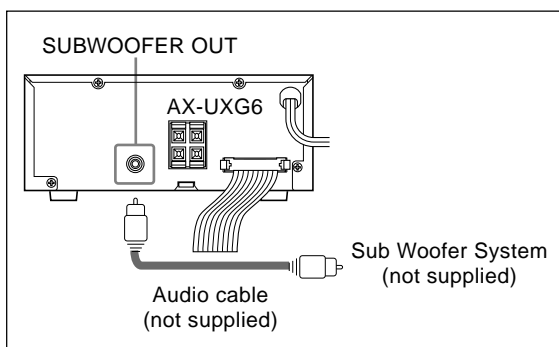

## AM antenna

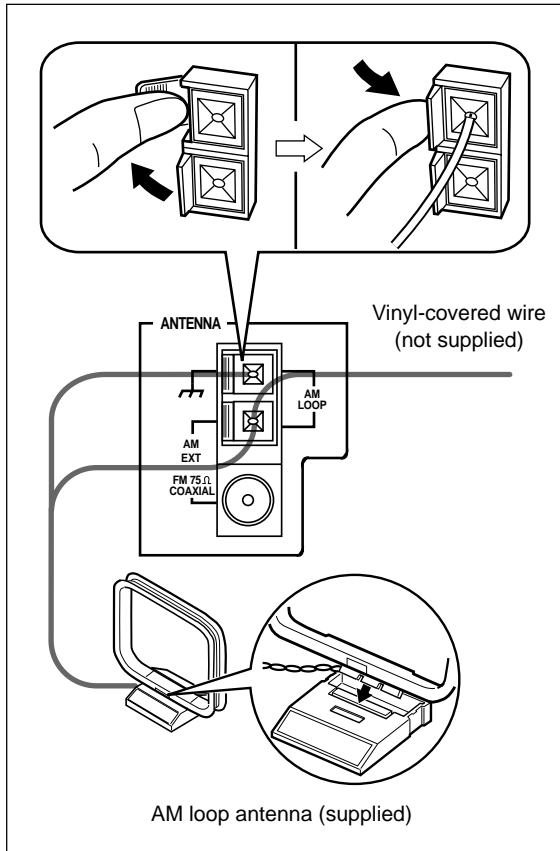

- 1** Connect the AM loop antenna to the AM LOOP terminals as illustrated.
- 2** Turn the AM loop antenna until you have the best reception.

### To connect an external AM antenna

When reception is poor, connect a single vinyl-covered wire to the AM EXT terminal and extend it horizontally. (The AM loop antenna must remain connected.)




#### For better reception of both FM and AM

- Make sure the antenna conductors do not touch any other terminals and connecting cables.
- Keep the antennas away from metallic parts of the units, connecting cables, and the AC power cord.

## Connecting Speakers

You can connect the speakers using the speaker cords.

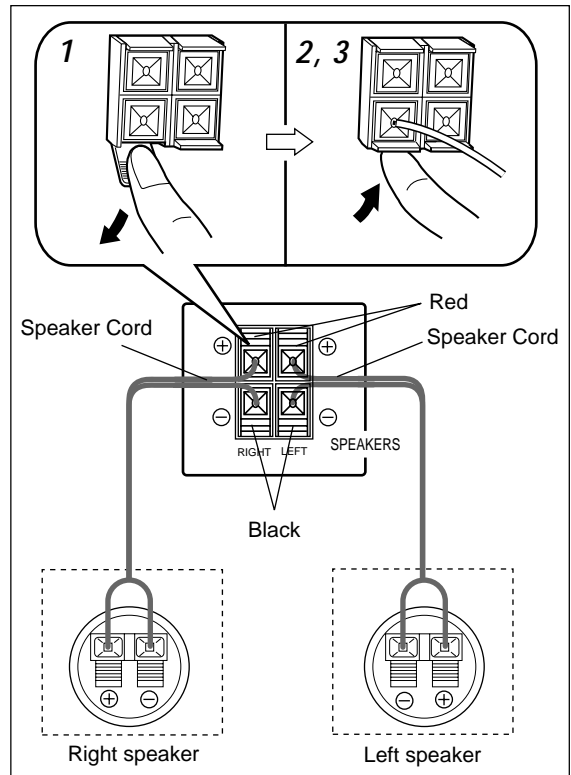

- 1** Open the speaker terminal.
- 2** Insert the end of the speaker cord to the terminal. Match the polarity of the speaker terminals: Red (+) to red (+) and black (-) to black (-).
- 3** Close the speaker terminal on the rear of the unit.



#### When connecting speaker cords

- Make sure to connect the cords correctly following the right series of above steps. During operation, wrong connection or a short circuit make the power turned off to protect the system. The clock loses the setting and is reset to "0:00". Also the MD recording may fail.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

## Connecting Other Equipments

You can connect the following equipments to the system:

- Audio equipment — used only as an analog playback device.
- Audio equipment with an optical digital input terminal — used as a digital recording device.

When you connect and use these equipments, refer also to the manuals supplied with them.


### To connect audio equipment without a digital output terminal

Connect the audio output jacks on the other equipment and the ANALOG IN jacks, using an audio cable (not supplied).

Be sure that the plugs of the audio cables and the jacks on the rear panel of the unit are color coded: White plugs and jacks are for left audio signals, and red ones for right audio signals.




- DO NOT connect other equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

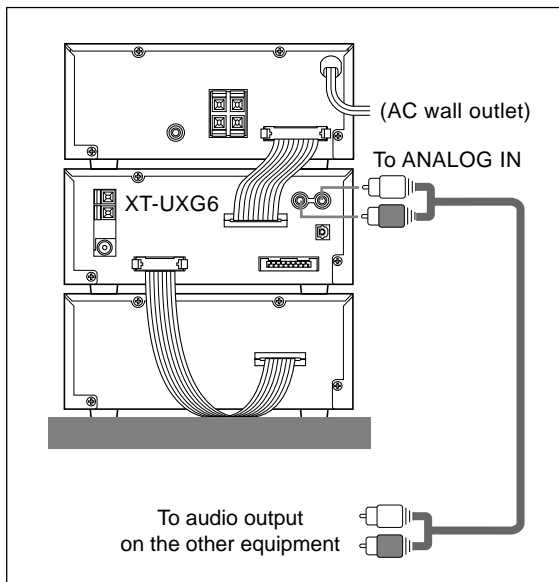

### To connect audio equipment with an optical digital input terminal

By using both an optical digital cable (not supplied) and an audio cable (not supplied), connect:

- Between the optical digital input terminal on the other equipment and the optical digital output terminal on XT-UXG6.
- Between the audio output jacks on the other equipment and the ANALOG IN jacks.

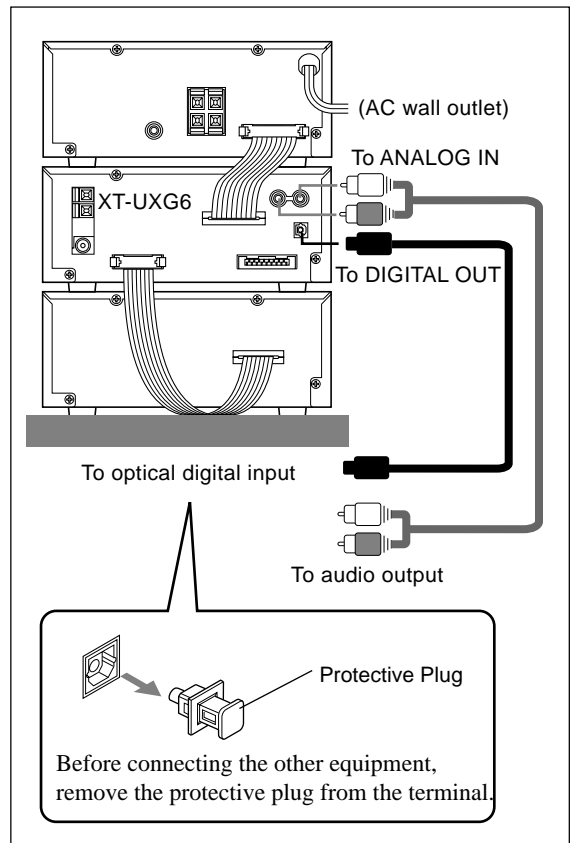


**NOW, you can plug in the system and other connected equipment FINALLY!**

When connecting the AC power cord into a wall outlet, the system switches to standby mode with STANDBY/ON lamp lit red.

- By using audio cable (not supplied), connect between the audio output jacks on the other equipment and the ANALOG IN jacks.

# Basic Settings

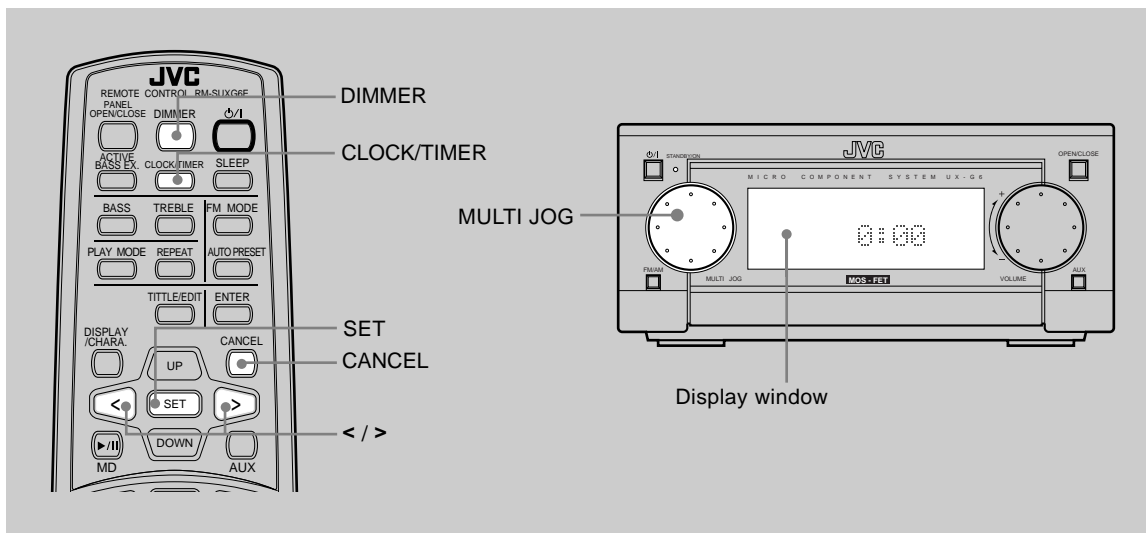

Before operating the system any further, set the clock built in this system first, then some other basic settings.

## Setting the Clock

You can set the clock using the remote control whether the system is turned on or turned off (i.e. standby mode).

- 1 Press CLOCK/TIMER button on the remote control.**  
The hour digit in the display window starts blinking.



- 2 Press < / > button on the remote control to adjust the hour, then press SET button on the remote control (rotating MULTI JOG dial also available).**



- **To correct the hour after pressing SET button,** press CANCEL button. The hour digit starts blinking again.

- 3 Press < / > button on the remote control to adjust the minute, then press SET button on the remote control (rotating MULTI JOG dial also available).**



### If there is a power failure

The clock loses the setting and is reset to "0:00."

### To adjust the clock again

You need to press CLOCK/TIMER button five times until the clock setting mode is selected.

## Setting the Display Illumination (Dimmer)

You can adjust the brightness of around the display window. Each time you press DIMMER, the display window dims and brightens alternately.

- **While the system is turned off:**

Press DIMMER button, "DISPLAY OFF" appears in the display window for a while and the system clock disappears.

DISPLAY OFF

Press the button again, "DISPLAY ON" appears in the display window for a while and only the system clock become dimmed.

DISPLAY ON

- **While the system is turned on:**


Press DIMMER button, both operating information and indicators in the display window dims. The light around MULTI JOG dial also becomes darker than usual. Press the button again, all the illumination around the display window recovers as usual.



### Dimmer setting in the standby mode

Once the system is turned on, the dimmer setting in the standby mode does affect neither normal operations nor display indications.

# Common Operations

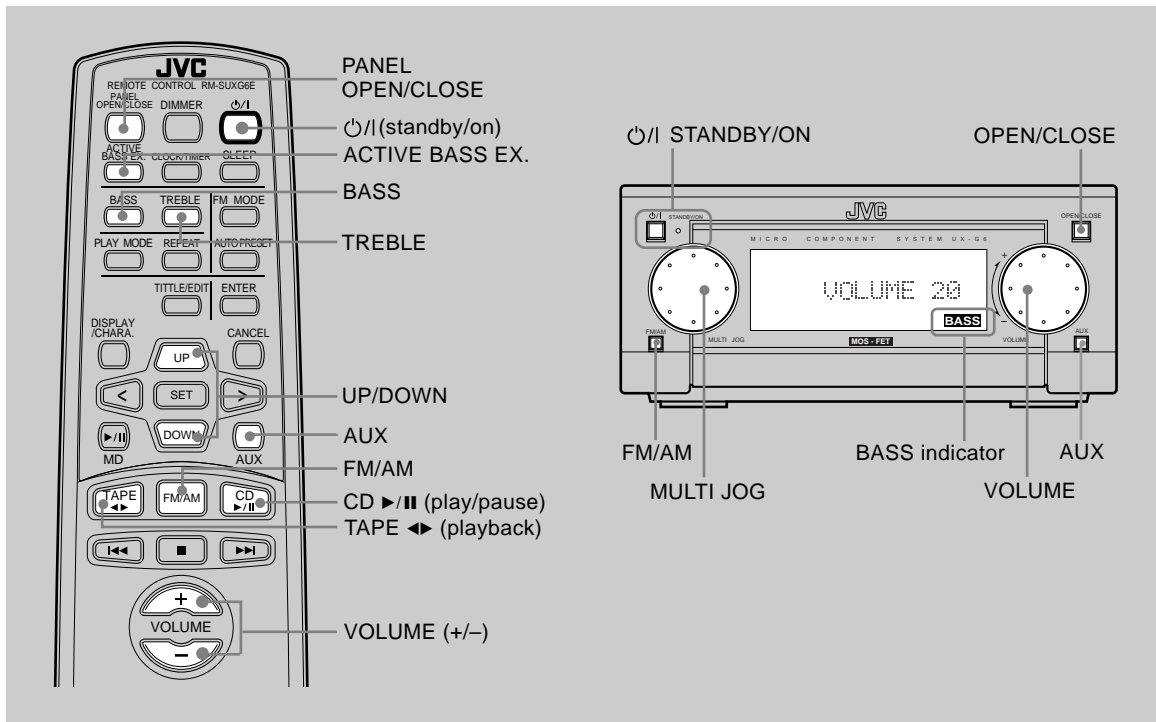

Here are basic and common things that apply to all the operations of UX-G6 system.

## Turning On the Power and Selecting the Sources

When you press a play button for example, like FM/AM, CD ►/|| (play/pause), or TAPE ◀ (playback), the system automatically turns on and STANDBY/ON lamp lights green.

### One Touch Play

If any CD or a tape, or last tuned station provided, the system starts playing that source.

To select the external equipment as the source, press MD ►/|| (play/pause) or AUX button so that the system automatically turns on.

### Using ⏻ button

- **To turn on the system without playing**, press ⏻ button so that STANDBY/ON lamp lights green.
- **To turn off the system (standby mode)**, press again ⏻ button so that STANDBY/ON lamp lights red.

A little power is always consumed even while the system is in standby mode.

- **To save the power consumption**, make use of Dimmer feature (see page 10).
- **To switch off the power supply completely**, unplug the AC power cord from the AC outlet. STANDBY/ON lamp goes off.



### When you unplug the AC power cord or if a power failure occurs

The clock is reset to "0:00" right away, while the tuner preset stations will be erased in a few days.

## Adjusting the Volume

You can adjust the volume level only while the system is turned on.

- Rotate VOLUME dial clockwise to increase the volume level or counterclockwise to decrease it.
- Using VOLUME dial, rotating quickly makes a large change in the volume level while rotating slowly makes a step-by-step change.

- When using the remote control, press **VOLUME +** button to increase the volume level or press **VOLUME –** button to decrease it.


The volume level (from 0 to 50) appears in the display window as follows:

VOLUME 20



**For private listening**

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume level before connecting or putting headphones.

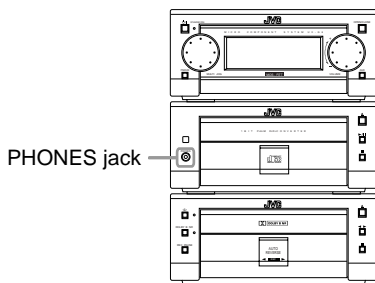

DO NOT turn off the system with the volume level set to an extremely high level; otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the system or start playing any source.  
REMEMBER you cannot adjust the volume level while the system is turned off.

## Reinforcing the Bass Sound

The richness and fullness of the bass sound is maintained regardless of how low you set the volume level. You can use this effect only while listening sources.

- **To get the effect**, press **ACTIVE BASS EX.** button on the remote control, and its indicator lights in the display window.
- **To cancel the effect**, press the button again so that the indicator goes off.

## Adjusting Bass and Treble Sounds

You can adjust bass and treble sound effects with the remote control, conforming to your preference and acoustic surroundings.

You can use this effect only while listening sources.

### To adjust the bass

**1 Press BASS button.**

The current level settings shortly appears as follows:

BASS +3

To exit from the level setting, press the button again.

**2 Press UP/DOWN button to adjust the level.**

- Press **UP** button to increase the bass tone level.
- Press **DOWN** button to decrease the bass tone level.

The bass level can be adjusted in seven steps from –3 through 0 to +3 (step “0” makes no effect).

**To cancel the effect**, adjust the level to “0.”

### To adjust the treble

**1 Press TREBLE button.**

The current level settings shortly appears as follows:

TREBLE –2

To exit from the level setting, press the button again.

**2 Press UP/DOWN button to adjust the level.**


- Press **UP** button to increase the treble tone level.
- Press **DOWN** button to decrease the treble tone level.

The treble level can be adjusted in seven steps from –3 through 0 to +3 (step “0” makes no effect).

**To cancel the effect**, adjust the level to “0.”

## Operating the Sliding Panel

You can use the sliding panel to enable advanced operations features provided for UX-G6 micro component system.

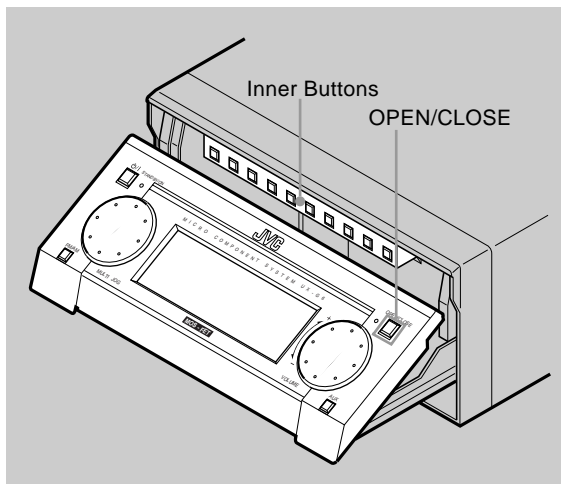


- Press OPEN/CLOSE button on the front panel (or PANEL OPEN/CLOSE button on the remote control).  
The sliding panel opens to uncover the inner buttons behind the panel for further operations.
- Press OPEN/CLOSE button again.  
The sliding panel automatically closes to hide the 10 inner buttons.

Each time you press the button, the sliding panel opens and closes repeatedly.

The buttons behind the sliding panel provided to control various program settings such as playback, recording, and presetting mode of each source. For details, refer to chapters concerning to the particular unit.



### When turning off the system

After pressing  button, the system closes sliding panel as well as other CD tray and Tape tray automatically if they are still opened.

## Listening to the External Equipment

You can listen to an external equipment such as MD recorder, VCR, and other auxiliaries.

First make sure that the external equipment is properly connected to the system (see page 7 and 9). For operation of the equipment, refer to its Instructions.


- 1 Press AUX button to select an external source.**
  - To play an audio equipment without optical digital output, select AUX so that the following information appears in the display window.

AUX

- 2 Start playing back the external equipment.**
- 3 Adjust the volume level to the desired listening level.**
- 4 Apply other sound effects, if you wish.**



# Listening to FM and AM Broadcasts

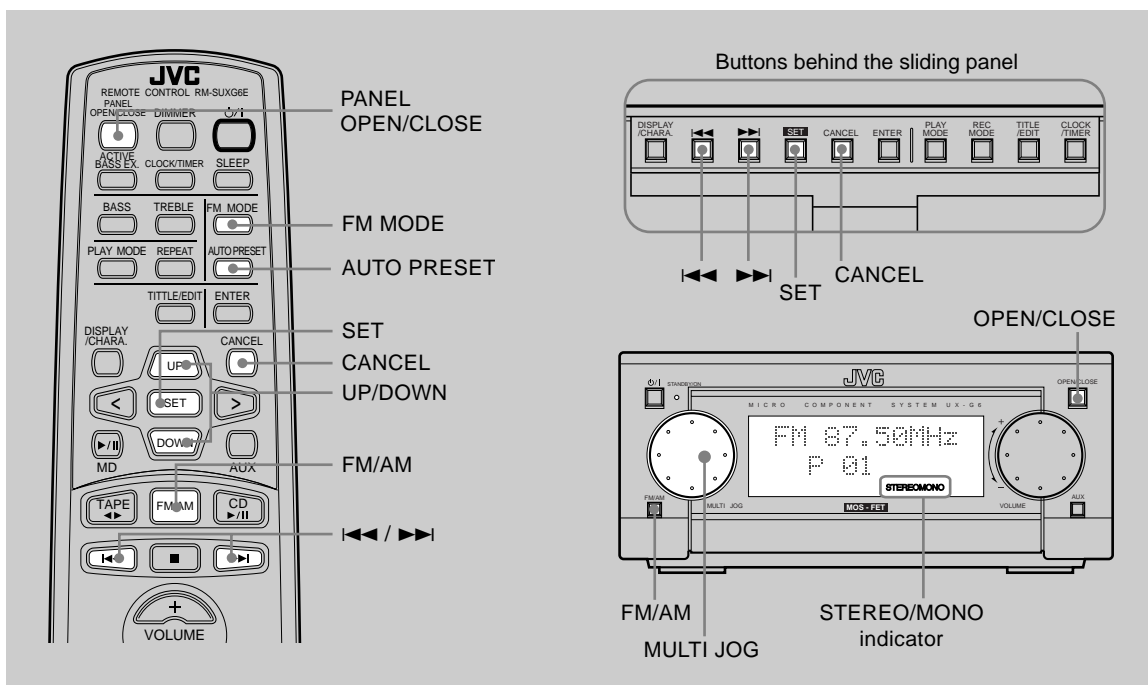

You can tune in FM and AM (MW/LW) stations manually, automatically, and use the preset station feature.

## Tuning in a Station

### 1 Press FM/AM button.

The system automatically turns on and tunes in the last tuned station (either FM or AM—MW/LW). The following information appears in the display window.

FM 87.50MHz  
P 01 — Preset number

- Each time you press the button, the band alternates between FM and AM.
- If a program on FM band is broadcast in stereo, STEREO indicator lights.

### 2 Select a station using one of the following three methods.

#### • Manual Tuning

Opening the sliding panel, press **◀◀ / ▶▶** (lower/higher frequencies) button repeatedly to change the frequencies step by step until you find the desired station.

#### • Auto Tuning

Opening the sliding panel, press and hold **◀◀ / ▶▶** (lower/higher frequencies) button for a second or more to start searching a station and stop automatically until the station of sufficient signal strength is tuned in.

#### • Preset Station Tuning

Rotate MULTI JOG dial clockwise to increase the preset number or counterclockwise to decrease it until the desired station is easily found.



#### Using the remote control:

**UP/DOWN** button on the remote control also has the same function as **MULTI JOG** dial on the front panel.



#### Preset Station

You are possibly not allowed to use the feature until the station presetting completes. In some cases, test frequencies have been already memorized for the system since the factory examined the preset station features before shipment. This is not a malfunction.

## Presetting Stations

You can preset up to 30 FM and 15 AM (MW/LW) stations into memory by following two methods: manual/automatic presettings.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

### To preset stations manually — Manual Preset

- 1 Press **◀◀ / ▶▶** (lower/higher frequencies) button to tune in the desired station manually.

FM 87.50MHz

- 2 Press **SET** button.

“SET” appears in the display window for a while (not blinking).

SET

- Note that “SET” message disappears, presetting procedure is cancelled.

- 3 Rotate **MULTI JOG** dial or press repeatedly **UP/DOWN** button to select the preset channel numbered from 1 to 30 on FM, or 1 to 15 on AM.

FM 87.50MHz  
P 02

- Note that the selected channel “02” disappears, presetting procedure is cancelled.

- 4 Press **SET** button again.

“STORED” appears in the display window for a while.

STORED

- 5 The tuned station in step 1 is now stored in the preset channel selected in step 3.

FM 87.50MHz  
P 02



Storing a new station on an used channel erases the previously stored one.

### To preset stations automatically — Auto Preset

You can automatically preset 30 FM, 15 AM (MW/LW) stations. Preset numbers will be allocated as stations are found, starting from the lowest frequency and moving up to the higher frequency.

#### On the remote control only:

- 1 Press **FM/AM** button to select a desired band.
- 2 Press and hold **AUTO PRESET** button on the remote control for more than two seconds.

The system automatically starts searching for stations with the strong signals continuously, and they are stored successively into memory as follows:

FM 91.25MHz  
↓  
P 01  
↓  
FM 95.75MHz  
↓  
P 02




When you unplug the AC power cord or if a power failure occurs

The preset stations will be erased in a few days. If this happens, preset the stations again.

### To change the FM reception mode

- When an FM stereo broadcast is hard to receive or noisy, press **FM MODE** button on the remote control so that **MONO** indicator lights in the display window. Reception improves.
- To restore the stereo effect, press **FM MODE** button again so that **STEREO** indicator lights in the display window. In this stereo mode, you can hear stereo sounds when a program is broadcast in stereo.

# Playing Back a CD

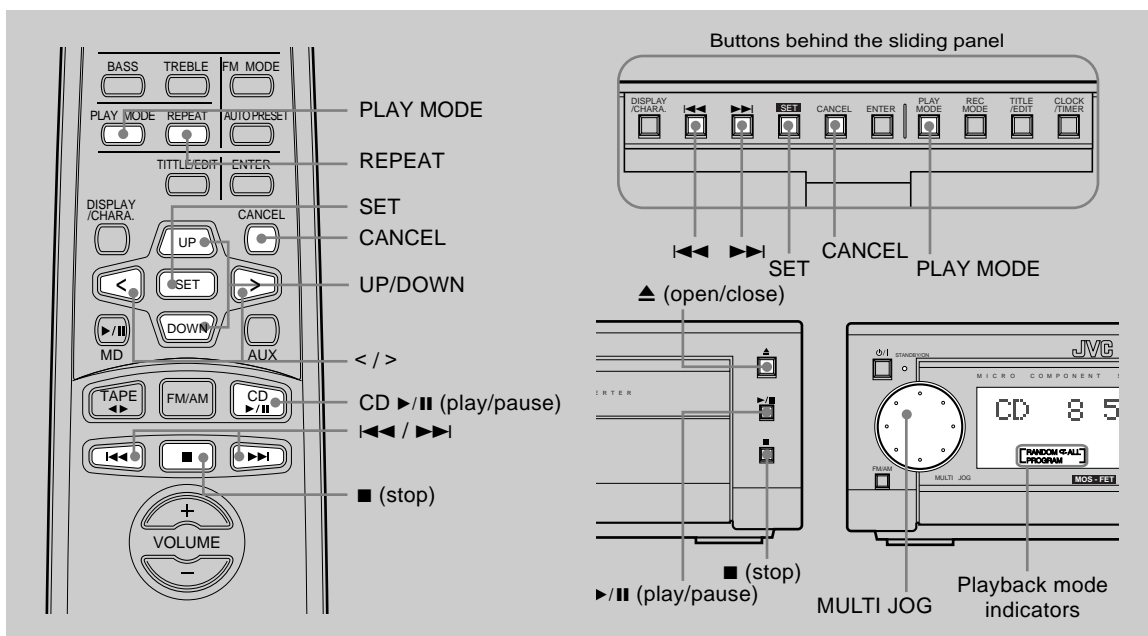

You can use Normal, Program, Random, or Repeat Play.

- When using the buttons behind the sliding panel, press OPEN/CLOSE button on the AX-UXG6 to open the sliding panel first.
- When using the remote control, press CD ►/|| (play/pause) button first and ■ (stop) button successively.




- DO NOT try to open or close the CD tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may results damages on the unit.


## Playing Back the Entire Disc — Normal Play

### 1 Press ▲ (open/close) button on CD unit.

The system automatically turns on and the disc tray comes out.

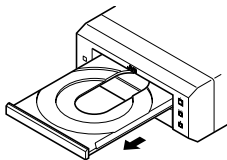


### 2 Place a disc correctly on the circle of the disc tray, with its label side up.

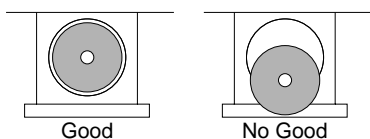

- When using a CD single (8 cm), place it on the inner circle of the disc tray.

### 3 Press ▲ (open/close) button again.

The disc tray closes while the information appears one after another as follows.

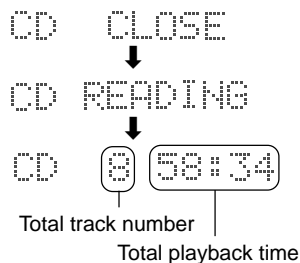

- When closing the tray without a CD placed, "CD NO DISC" appears.



When pressing ►/|| (play/pause) button directly, the system starts playback a CD immediately.

#### 4 Press ►/|| (play/pause) button on the CD unit.

Each track of the CD starts playing one after another, and stops when the final track has finished playing.

CD 1 0:01

- **To stop playing back for a moment, press ►/|| (play/pause) button on the CD unit.**  
The playback time starts blinking in the display window.

CD 5 03:34

- **To resume playback, press ►/|| (play/pause) button again.**  
Playback continues from the point where it was stopped for a while.

#### 5 Press ■ (stop) button to stop playing back the CD.

Following information for the CD appears in the display window.

CD 8 53:34

Total track number      Total playback time

#### 6 Press ▲ (open/close) button on the CD unit to remove the CD.

- Pressing ▲ (open/close) button during playback directly, the CD unit stops playback and opens CD tray.

## Searching and Skipping Tracks

While playing back a CD, you can do the following operations.

#### To search and skip to a particular point in a track

During playback, press and hold ◀◀ / ▶▶ button to meet the desired passages in a track:

Press and hold or ▶▶ button:

Fast forwards in the track.

Press and hold or ◀◀ button:

Fast reverses in the track.



**UP/DOWN button on the remote control is also available to searching operations.**

#### To go to another track

Before or during playback, press ◀◀ / ▶▶ button repeatedly:

Press ▶▶ button:

Skips to the beginning of the next and succeeding tracks.

Press ◀◀ button:

Goes back to the beginning of the current and previous tracks.

Rotating MULTI JOG dial clockwise also changes the tracks forwards quickly, while rotating it counterclockwise the tracks reverse quickly.



**</> button on the remote control is also available to skipping operations.**

## Programming the Playing Order of the Tracks — Program Play

You can arrange the order in which the tracks play before you start playback. You can program up to 32 tracks.

 
#### 1 Place a CD.

- If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

#### 2 Press PLAY MODE button repeatedly until “CD PROGRAM” appears in the display window.

CD PROGRAM


- Each time you press the button, playback mode indicators also change as follows:



#### 3 Rotate MULTI JOG dial to select a track number to be programmed (</> buttons also available).

CD 1 P .....

Track number      Program number

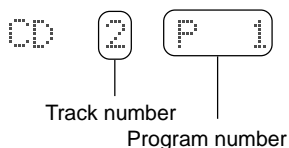**4 Press SET button to program the track number.**

Here the track number 2 on the CD is stored into a program number 1, and shortly after that the total playback time of programmed tracks appears in the display window as follows:

**5 Repeat steps 3 to 4 to program other tracks you want up to 32 tracks.**

- **If you try to program a 33rd step** "MEMORY FULL" will appear in the display window, and your entry is ignored.
- **The total playback time of programmed tracks exceeds 99'59"** "--:--" will appear in the display window.

**To modify the program**

Before playing back the CD, you can erase the last programmed track by pressing CANCEL button. Each time you press the button, the last programmed track is erased from the end of program.

- **To add new tracks to the program** before you start playing-back, simply select a track number again you want to add (repeat steps 3 to 4).

**To erase all the programmed data**

After playing back the CD, you can erase all the programmed track data by pressing ■ (stop) button. New program can be entered again.

**To exit from the Program play mode**

Before or during playback, you can exit from Program play mode as follows:

- Before playback, press PLAY MODE button twice.
- During playback, press ■ (stop) button then PLAY MODE button twice.

Playback mode indicator goes off and the system resumes Normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the program play.

**6 Press ►/|| (play/pause) button on the CD unit.**

The programmed tracks are played back in the order you have set.

- Other CD operations are the same as Normal play.

**7 Press ■ (stop) button to quit the Program play.**

- When Program play finished, CD unit automatically stops.

**To check the program contents**

Before playing back the CD, you can check the program contents by using ◀◀/▶▶ button.

Press ▶▶ button:

Shows the programmed tracks in the programmed order.

Press ◀◀ button:

Shows them in the reverse order.

## Playing at Random — Random Play

The tracks of the loaded CD will play in no special order (at random) when you select this mode.

 
### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press PLAY MODE button repeatedly until “CD RANDOM” appears in the display window.

CD  RANDOM

- Each time you press the button, playback mode indicator also changes as follows:



### 3 Press ►/|| (play/pause) button on the CD unit.

CD   RANDOM

The track numbers are shuffled in the display window for a few seconds, and start playing back at random. Random play ends when all the tracks are played back once.

- Other CD operations are the same as Normal play.

### 4 Press ■ (stop) button to quit Random play.

#### To exit from Random play mode

Before playing back the CD, you can exit from Random play mode as follows:

- Before playback, press PLAY MODE button once.
- During playback, press ■ (stop) button then press PLAY MODE button once.

Play mode indicator goes off and the system resumes the normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the random play.

## Repeating Tracks — Repeat Play

 
You can have the entire disc, the programmed tracks, or the individual track repeat as many times as you like.



### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press REPEAT button on the remote control repeatedly to set the repeat mode.



- Each time you press the button, repeat mode indicators light in the display window, and Repeat playback mode changes as follows:



-  : Repeats one track on the CD or in a program.
-  ALL : Repeats all the tracks on the CD or a program.




### 3 Press ■ (stop) button to quit Repeat play.
  
#### To exit from Repeat play mode


Pressing REPEAT button repeatedly until repeat mode indicators ( and  ALL) goes off in the display window.



#### Combining play modes:

- When combining Program play and Repeat play, you can repeat whole the programmed tracks or one track among them ( and  ALL).
- When combining Random play and Repeat play, you can just repeat whole the shuffled tracks (only  ALL).

# Playing Back a Tape

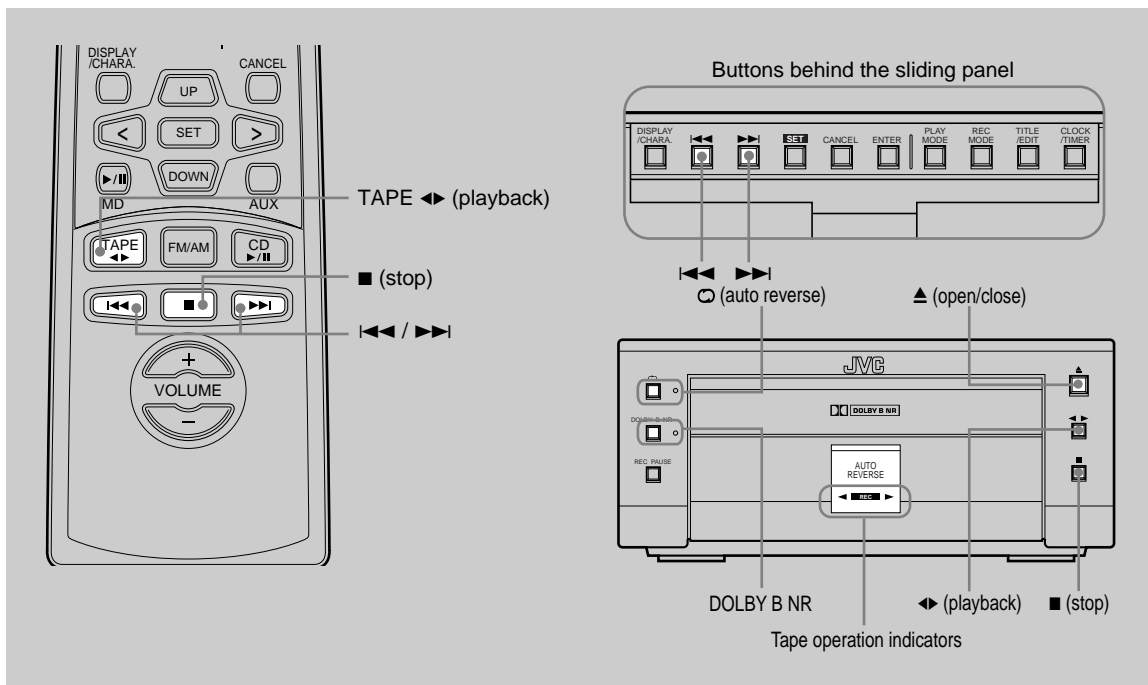

You can listen to Normal (Type I), High position (Type II), and Metal (Type IV) type tapes without further settings.

- When using the inner buttons, press OPEN/CLOSE button on AX-UXG6 unit to open the sliding panel first.
- When using the remote control, press TAPE ◀▶ (playback) button first and ■ (stop) button successively.



**DO NOT use tapes longer than 120 minutes.**  
The characteristic deterioration may occur and these tapes easily jam in the tape transport mechanism.




- DO NOT try to open or close the tape tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may results damages on the unit.

## Playing Back a Tape — Basic Operation

**1 Press ▲ (open/close) button on the cassette deck unit.**

The system automatically turns on and the tape tray comes out.

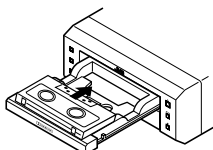


**2 Place a tape on the tray with the side you want to listen to facing up (forward side).**

Tape fits in the caved-in area so that an exposed edge of the tape faces toward the inside of the unit.

**3 Press ▲ (open/close) button again to close the tray.**

**4 Press ◀▶ (playback) button on the unit or TAPE ◀▶ (playback) button on the remote control.**

 The tape playback starts and the tape direction indicator blinks slowly in orange to show the tape running direction.



- Each time you press ◀▶ (playback) on the cassette deck unit or TAPE ◀▶ (playback) button on the remote control, you can change the tape sides to be played back currently.

- ▶ : plays the forward side.
- ◀ : plays the reverse side.



### Playback comes to an end (Auto Reverse)

The cassette deck unit automatically changes the tape direction to the reverse side, and continue playback both sides. Each time to press the button, Auto Reverse feature is set to on/off alternately.

- 5 Press ■ (stop) button to stop playback the tape.
- 6 Press ▲ (open/close) button directly to stop and remove the tape.



**While the system is turned off (standby mode)**  
Pressing ◀▶ (playback) or TAPE ▶▶ (playback) button automatically switches the system turned on and starts playback if a tape is already loaded.

## Fast-Winding a Tape

While stopping the tape, press ◀◀ / ▶▶ button to fast-wind the tape.

 
**To fast-forward, if the current tape direction is:**

- ▶ ⇒ Press ▶▶ button.
- ◀ ⇒ Press ◀◀ button.

**To fast-rewind, if the current tape direction is:**

- ▶ ⇒ Press ◀◀ button.
- ◀ ⇒ Press ▶▶ button.

During fast-winding, the tape direction indicator starts blinking quickly.



**When the tape comes to an end**  
The deck unit automatically stops.

## Searching and Skipping to Each Program — Music Scan

While playing the tape, you can search and skip to the beginning of the current and next program on a tape.



Music scan searches for blank portions that usually separate programs recorded onto the tape, then automatically plays the program beginning after that blank portion.

**To skip backward to the current music**

Press the button opposite to the tape direction indicator as follows:

 
- ▶ ⇒ Press ◀◀ button.
- ◀ ⇒ Press ▶▶ button.

**To skip forward to the next music**

Press the button same as the tape direction indicator as follows:

- ▶ ⇒ Press ▶▶ button.
- ◀ ⇒ Press ◀◀ button.

During Music Scan progressed, the tape direction indicator starts blinking rhythmically.



**Repeating Music Scan feature made easy**

searching a desired program on a tape one after another.



**The beginning of the desired program may not be located properly**

If blanks between music are too short, the blanks contain too much noise or the program itself contains very low-level or silent part.

## Playing Back Dolby-Recorded Tape

You can play back the tape recorded with Dolby B NR system. The Dolby NR system allows to reduce hiss noise in playback.

Press DOLBY B NR button on the cassette deck before playback. Each time you press the button, the Dolby NR lamp on the unit lights up orange or turns off.




**A tape recorded using Dolby NR**

Should be played back using the Dolby NR of the same type as that used in recording. The audio quality will be affected if a different type is used in playback.

Dolby Noise Reduction manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.



# Recording onto a Tape

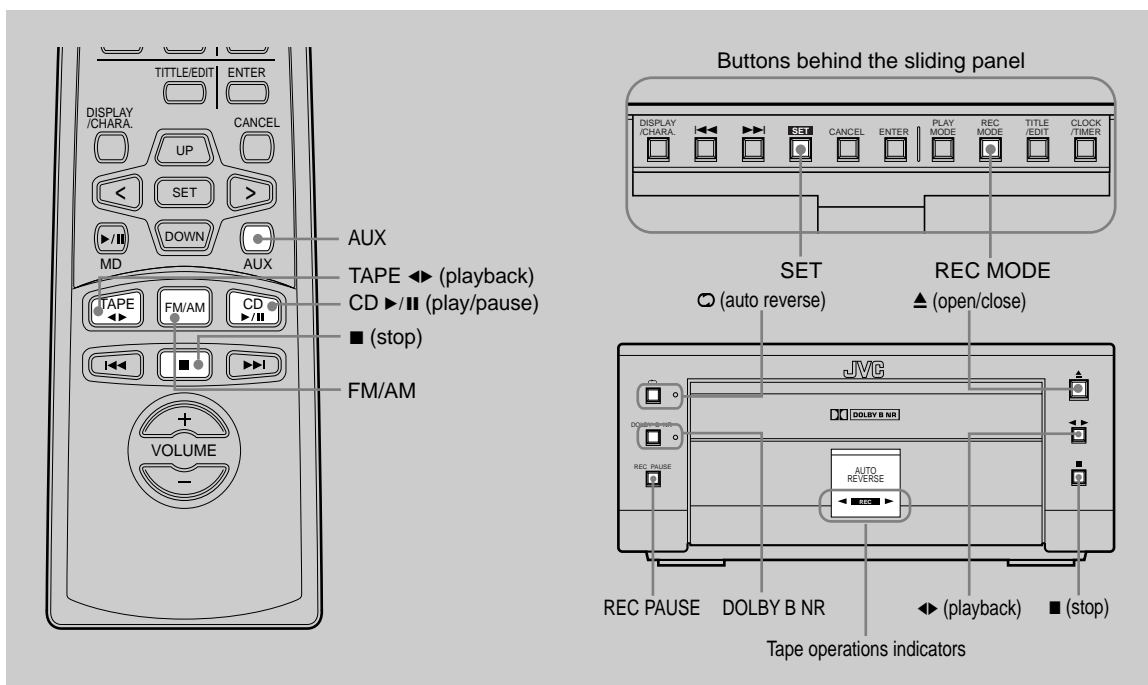

Two types of cassette tapes can be recorded onto, including normal (Type I), and High position (Type II) tapes. These types are identified automatically by the cassette deck unit and the recording level is also corrected automatically. Neither volume level nor sound effects during playback does affect to the recording.

## IMPORTANT:

- It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

## Manual Recording onto a Tape

### 1 Select one of the recording sources — FM/AM broadcasts, CD, or other external equipment.


- To record FM/AM broadcasts, receive a station with Tuner unit.
- To record a CD or its tracks programed, set the play-pause mode for CD unit.
- To record from an external equipment connected to ANALOG IN jacks, prepare it as required.




Make sure to select a source first, otherwise you cannot use recording function.

### 2 Place a recordable tape with the side you want to record facing up.

Press ▲ (open/close) button on the cassette deck unit to open the tape tray; place a tape on it; and press ▲ (open/close) button again to close it.

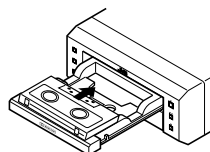

 - You cannot record onto the tape without a protect tab. When using that tape, cover the hole for desired side with adhesive tape.



### 3 Press REC PAUSE button on the cassette deck unit.



REC indicator lights red to show the recording pause mode, and "TAPE REC" appears in the display window as follows,

```

FM 87.50MHz
TAPE REC
or
CD 8 58:34
TAPE REC

```

#### To change the recording source

 
You cannot change the selected source during the recording pause mode. To exit from the recording pause mode, press **■** (stop) button on the cassette deck unit.

#### To make the blank tape

Press AUX button to start recording without connecting nor playing back the external equipment.

### 4 Press **Tape** ◀▶ (playback) button for FM/AM broadcasts or ▶/|| (play/pause) button on the CD unit to start recording.

Tape direction indicator starts blinking slowly in the display window.



- **To stop recording for a moment**, press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
- **To resume recording**, press ◀▶ (playback) button again. Recording continues from the point where it was stopped for a while.

### 5 Press **■** (stop) button on the cassette deck unit for FM/AM broadcasts recording, or **■** (stop) button on the CD unit for the CD recording.

Recording stops and REC indicator goes off in the display window.

On CD recording, cassette deck unit will stop after leaving a non-recorded portion of 4 seconds. If you want to quit recording immediately, press **■** (stop) button on the cassette deck unit.

### 6 Press **▲** (open/close) button on the cassette deck unit to remove the tape.

- Pressing **▲** (open/close) button directly during recording, the cassette deck unit stops recording and opens the tape tray.



#### • **Dolby B NR**

Press DOLBY B NR button before recording to reduce frequency response noise.

When the tape is played back later, also press the button with its lamp lit.

#### • **BEAT CUT on AM (MW/LW)**

When recording AM broadcast, beats noise may be heard.

Set the BEAT CUT selector to either position 1 or 2 on the rear panel of the cassette deck unit to reduce the noise.

## Recording in Auto Reverse

- 1 Select one of the recording sources — FM/AM broadcasts, CD, or other external equipments.
- 2 Make sure the tape side for recording meets the tape direction indicator ▶ (forward).



- Each time to press ◀▶ (playback) button or TAPE ◀▶ (playback) button on the remote control, you can change the tape direction to be recorded onto.

▶ : Good, records onto the forward side.

◀ : No good, records onto the reverse side.



- The recording in the auto reverse mode stops automatically after completing recording onto the ◀ (reverse) direction side. Be sure to start recording from the ▶ (forward) direction side.
- When the auto reverse mode is set to off, recording stops after having recorded onto one side of the tape.

### 3 Press **○** (auto reverse) button on the cassette deck unit to set the reverse mode on.

The auto reverse lamp lights orange on the front panel.

### 4 Press REC PAUSE button on the cassette deck unit.

### 5 Repeat the steps 4 to 5 of "Manual Recording onto a Tape" mentioned in the left column.

## Synchronized Recording from a CD

CD application on UX-G6 system can be recorded with a simple, one-touch operation.

- 1 Place a recordable tape and a source CD into each tray.**
  - To record using Dolby B NR, press the DOLBY B NR button before recording so that its lamp near the button lights orange.
- 2 Press ►/|| (play/pause) button on the CD unit, then ■ (stop) button to set the system to CD operation mode.**
- 3 Press REC MODE button behind the sliding panel.** The display window shows information as follows:

```
SYNC REC
  >TAPE
```

- 4 Press SET button.** Display window shows as follows:

```
SYNC REC
TAPE REC

then

CD 1  ---#---
TAPE REC
```

UX-G6 starts playback on the CD unit as well as recording on the cassette deck unit simultaneously. You can get an entire copy of the source CD.

**To select a particular track or program,** use REC PAUSE button on the cassette deck unit. During SYNC REC mode, you cannot operate CD unit except ■ (stop) button.

- To make recording pause temporarily,** press REC PAUSE button on the cassette deck unit.
- To resume recording,** press ◀▶ (playback) button on the cassette deck unit.



### Using Program play for CD recording

To edit CD's tracks to be recorded, it is useful to set the desired tracks to be played back into a program in advance.

When CD playback finished, the CD unit first, then the cassette deck stops recording automatically.



**Cassette deck unit will stop after leaving a non-recorded portion of 4 seconds.**

If you want to quit recording immediately, press ■ (stop) button on the cassette deck unit.

- 5 Press ▲ (open/close) button on each unit to remove the CD and the tape.**

## Recording from the External Equipment

You can record audio sources played-back on the external equipment onto a tape manually. First of all, make sure to connect the external equipment properly (see also page 9).

### Recording an external audio source manually

- 1 Press AUX button to show "AUX" in the display window.** The external audio source is selected.
- 2 Repeat the steps 2 and 3 on page 22 to prepare a tape to record.** Information appears as follows:

```
AUX
TAPE REC
```


- 3 Press ◀▶ (playback) button on the cassette deck unit or TAPE ◀▶ (playback) button on the remote control to start recording.** Tape direction indicator starts blinking slowly in the display window.



Tape direction indicator

- 4 Start playing back the external equipment.**
  - To stop recording for a moment,** press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
  - To resume recording,** press ◀▶ (playback) button again.
  - To end the recording,** press ■ (stop) button on the cassette deck unit. Recording stops and REC indicator goes off in the display window.

# Using the Timers

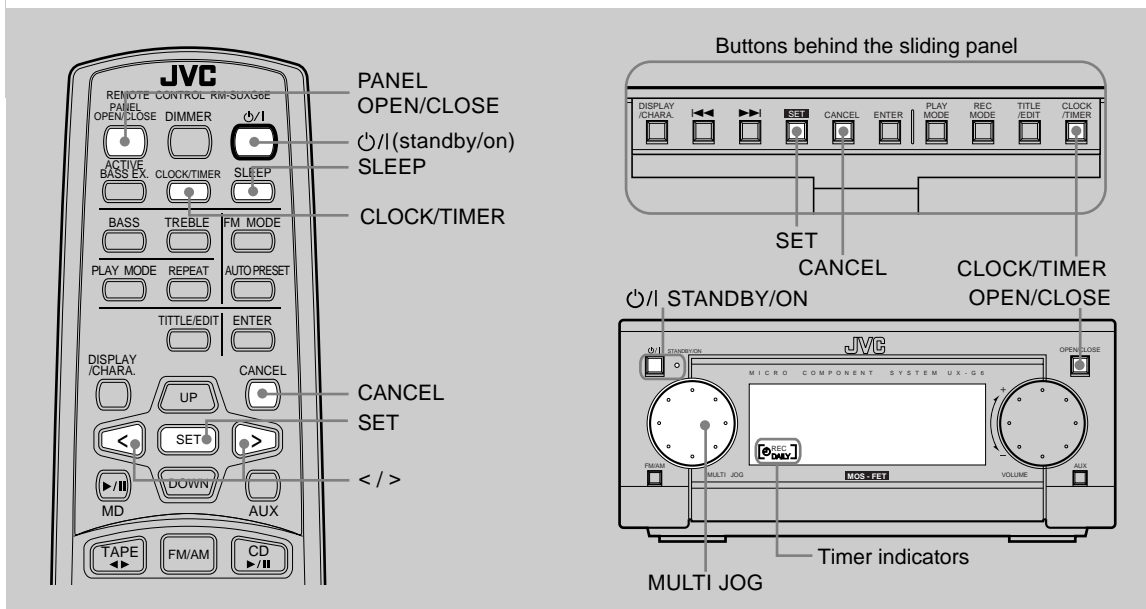

On UX-G6 system, three timer features are available — Recording Timer, Daily Timer, and Sleep Timer. Before using these timers, you need to set the clock built in the system (see page 10).

## Using Recording Timer

With Recording Timer, you can make a tape of a radio broadcast automatically.

- You can set Recording Timer whether the system is turned on or off.
- To correct a mis-entry any time during the setting process, press CANCEL button.

### How Recording Timer actually works

The system automatically turns on, tunes into the specified station, turns off the volume, and starts recording when the timer-on time comes.

Then, when the timer-off time comes, the system automatically turns off (standby).

 
The timer settings remain stored in memory until you reset them or unplug the AC power cord.

**1** Press **CLOCK/TIMER** button repeatedly until “REC TIMER” and its timer-on time appear in the display window.

You can select the timer-on/off time, a tuner preset channel to record, and recording media.

- If MD recorder XM-G6 (not supplied) connected, you can select MD as recording media (see page 7).

- Each time you press the button, the timer mode changes as follows:



**2** Rotate **MULTI JOG** dial (</> button on the remote control also available) to select the hour of the timer-on time, then press **SET** button.

```
REC TIMER
ON 21:30
```

**3** Rotate **MULTI JOG** dial (</> button on the remote control also available) to select the minute of the timer-on time, then press **SET** button.

```
REC TIMER
ON 21:30
```

**4** Rotate **MULTI JOG** dial (</> button on the remote control also available) to select the hour of the timer-off time, then press **SET** button.

```
REC TIMER
OFF 22:30
```

**5** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-off time, then press SET button.



**6** Rotate MULTI JOG dial (</> button on the remote control also available) to select either “TUNER FM” or “TUNER AM,” then press SET button.

**7** Rotate MULTI JOG dial (</> button on the remote control also available) to select a preset channel, then press SET button.



“TAPE REC” follows in the display window as selected recording media, unless any MD recorder connected.

- If XM-G6 MD recorder connected, you can select either a tape or an MD as recording media.

**8** Press SET button to select recording media, and turn off the system.

**After completing the settings...**

The REC timer indicator lights and the setting items appear one after another in the display window. Thus the Recording Timer is ready for unattended recording.



**After a timer recording is complete...**

Set the volume to an appropriate listening level.



**If you press a certain button while Recording Timer is operating**  
Recording will stop.

**To use the same Recording Timer settings repeatedly**

Once you have set the recording timer, it remains stored in memory until you change it.

To activate the recording timer with the previous settings, follow the procedure below:

**1** Press CLOCK/TIMER button repeatedly until “REC TIMER” appears in the display window.



**2** Press SET button to call the previous settings for next timer recording.

The REC timer indicator lights, and the setting items appear one after another in the display window.

- To erase the recording timer, press CANCEL button in this step.

**Using Daily Timer**

With Daily Timer, you can wake up on your favorite music or radio program.

- You can set the daily timer whether the system is turned on or off.

 
**How Daily Timer actually works**

The system automatically turns on, and starts playing the specified source when the timer-on time comes. Then, when the timer-off time comes, the system automatically turns off (standby).

The timer settings remain stored in memory until you reset them or disconnect the AC power cord.

**1** Press CLOCK/TIMER button repeatedly until “DAILY TIMER” and its timer-on time appear.

- Each time you press the button, the timer mode changes as follows:



**2** Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-on time, then press SET button.



**3** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-on time, then press SET button.




- 4** Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-off time, then press SET button.

DAILY TIMER  
OFF 7:00

- 5** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-off time, then press SET button.

DAILY TIMER  
OFF 7:00

- 6** Rotate MULTI JOG dial (</> button on the remote control also available) to select the source, then press SET button.

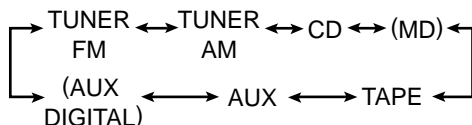

**TUNER FM:** Tunes into a preset FM station. Go to step 7.

**TUNER AM:** Tunes into a preset AM station. Go to step 7.

**CD:** Plays a CD. Prepare a CD, then go to step 7.

**(MD):** Plays a MD, only when XM-G6 MD recorder connected. Then go to step 7.

**TAPE:** Plays a tape. Prepare a tape, then go to step 8.

**AUX\*:** Selects "AUX" as the source. Make the external equipment ready for playback.

**(AUX DIGITAL):**  
Selects an external digital audio equipment as the source if connected.

\* To use the external equipment with the Daily Timer, it also has the timer function.

- 7** If you have selected FM/AM as the source in the above step, select a preset channel.

- 1) Rotate MULTI JOG dial (</> button on the remote control also available) to select a preset channel.
- 2) Press SET button.

FM 87.50MHz  
P 02

If you have selected CD as the source in the above step, select a track.

- 1) Rotate MULTI JOG dial (</> button on the remote control also available) to select a track.
- 2) Press SET button.

CD 1

- 8** Rotate MULTI JOG dial (</> button on the remote control also available) to adjust the volume level, then press SET button.

- You can adjust the volume within the range of "0" to "50." If you select "--," the volume is set to the previous level when the unit is turned off.

VOLUME -----

**After completing the settings...**

The daily timer indicator lights, and the setting items appear one after another in the display window.

Turns off the unit (standby) if you have set the daily timer with the unit turned on.

DAILY timer indicator



**If you press a certain button while Daily Timer is operating**  
The unit will not turn off automatically.

**To use the same Daily Timer settings repeatedly**

Once you have set Daily Timer, it remains stored in memory until you change it.

To activate the daily timer with the previous settings, follow the procedure below:

- 1** Press CLOCK/TIMER button repeatedly until "DAILY TIMER" appears in the display window.

DAILY TIMER

- 2** Press SET button to activate Daily timer.

The daily timer indicator lights, and the setting items appear one after another in the display window.

- To deactivate the daily timer, press CANCEL button in this step.

## Using Sleep Timer

With Sleep Timer, you can fall asleep to your favorite music or radio program.

 
### How Sleep Timer actually works

The system automatically turns off after the selected time length passes while playing any source.

**On the remote control only:**

#### 1 Press SLEEP button on the remote control repeatedly to select the sleep timer.

- Each time you press the button, the time length changes as follows:



#### 2 Wait for about 5 seconds after selecting the time length.

When the sleep timer setting is completed, the display window dims and just shows the remaining time until the shut-off time minute by minute like "SLEEP 30" then "SLEEP 29".


- To change the shut-off time, press SLEEP button repeatedly until the desired time length appears.
- To cancel the setting, press SLEEP button repeatedly until the sleep timer indication disappears.

## Timer Priority


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are the priorities for each timer.

- Recording Timer has priority over Daily Timer and Sleep Timer.**

If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

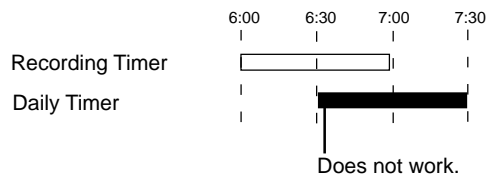


If Recording Timer is set to come on while Sleep Timer is operating, Sleep Timer will be canceled several seconds before Recording Timer comes on.

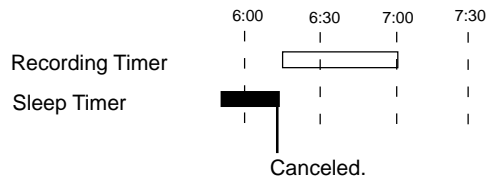

- Sleep Timer has priority over Daily Timer.**

If Daily Timer is set to come on while Sleep Timer is operating, Daily Timer will not come on at all.

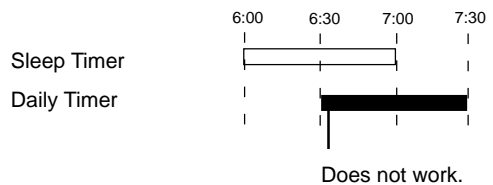

Therefore, the equation is like this (high > low):

**Recording Timer > Sleep Timer > Daily Timer**

# Maintenance and Additional Information

## General Notes

 
In general, you will have the best performance by keeping your CDs, cassette tapes and the mechanism clean.

- Store CDs and cassette tapes in their cases, and keep them in cabinets or on shelves.
- Keep the CD disc tray, and the cassette tapes tray closed when not in use.


## Handling CDs



- Only CDs bearing this mark can be used with this system. However, continued use of irregular shape CDs (e.g. heart shape, octagonal) can damage the system.



- Remove the CD from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the CD.
- Put the CD back in its case after use to prevent warping.

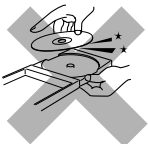

- Be careful not to scratch the surface of the CD when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



- To clean the CD  
Wipe the CD with a soft cloth in a straight line from center to edge.




DO NOT use any solvent — such as conventional record cleaner, spray, thinner, or benzine — to clean the CD.



## Handling Cassette Tapes

### Cautions regarding handling

- Do not touch the surface of the tape or pull the tape out of the cassette.
- Tape spooled loosely around the hubs is likely to jam in the pinch rollers and capstans. Before loading the tape into the cassette tray, take up the slack in the tape as shown below.

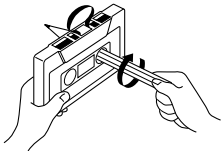


### Tape storage

- Place tapes in their cases for storage.
- Avoid storing tapes on top of TVs or speakers, in sunlight or places of high temperature, or in humid or dusty areas.

### To prevent accidental erasure


- Cassette tapes have tabs to prevent accidental erasure.
- If you remove the tabs after making a recording, the cassette deck cannot be set to record when that tape is loaded. Remove the tabs so that valuable recordings will not be accidentally erased.

Recording (erasure) is not possible when the tabs are removed.

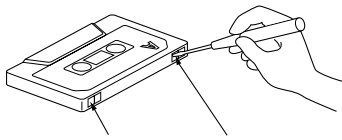

For reverse side (B) For front side (A)

- To make another recording on a tape whose tabs have been removed, cover the tab holes with adhesive tape.

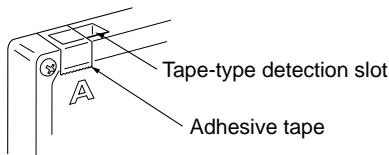

**STOP!** DO NOT cover the tape-type detection slots.

## Types of Cassette Tapes

This cassette deck unit incorporates an Automatic Tape Detection function. This mechanism uses the tape-type detection holes to distinguish which type of tape was inserted, and sets the bias and equalizer to the optimum settings for that tape automatically.

 
The following types of tapes may be used with this cassette deck unit.

### Normal tape

#### TYPE I

BIAS: NORMAL

EQ: 120 $\mu$ s




Normal (No detection slots) Tab  
(to prevent accidental erasure)

### High position (CrO<sub>2</sub>) tape
 
#### TYPE II

BIAS: HIGH

EQ: 70 $\mu$ s




High position  
detection slots

### Metal tape (only for playback)
 
#### TYPE IV

BIAS: METAL

EQ: 70 $\mu$ s



Metal detection slots

- notes**
- Certain early period Metal and High position (CrO<sub>2</sub>) tapes may not have tape-type detection slots. The cassette deck unit cannot obtain the correct characteristics for these tapes.
  - Ferromagnetic (FeCr) TYPE III tapes cannot be used with this cassette deck unit.

# Troubleshooting

If you are having a problem with your system, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the units has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
No sound is heard.	<ul style="list-style-type: none"> <li>• Connections are incorrect, or loose.</li> <li>• Headphones are connected.</li> <li>• Volume level is set to “–”.</li> </ul>	<ul style="list-style-type: none"> <li>• Check all connections and make corrections (see pages 6 – 9).</li> <li>• Disconnect the headphones (see page 12).</li> <li>• Adjust the volume again (see page 11).</li> </ul>
Poor radio reception.	<ul style="list-style-type: none"> <li>• The antenna is not connected correctly.</li> <li>• The AM loop antenna is too close to the units.</li> <li>• The FM antenna is not properly extended and positioned.</li> <li>• The AM radio noise interferes with tape recording.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect the antenna securely.</li> <li>• Change the position and direction of the AM loop antenna.</li> <li>• Extend FM antenna to the best reception position (see page 7).</li> <li>• Set the BEAT CUT selector again (see page 23).</li> </ul>
Unable to record onto a tape.	<ul style="list-style-type: none"> <li>• You are using a tape without a protect tab.</li> <li>• Tape-type detection slots are covered by foreign matters.</li> </ul>	<ul style="list-style-type: none"> <li>• Cover the hole with adhesive tape (see page 30).</li> <li>• Remove the foreign matters.</li> </ul>
The CD skips.	<ul style="list-style-type: none"> <li>• The CD is dirty or scratched.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean or replace the CD (see page 29).</li> </ul>
Unable to operate using the remote control.	<ul style="list-style-type: none"> <li>• The path between the remote control and the remote sensor on the front panel is blocked.</li> <li>• The batteries have lost their charge.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the obstruction.</li> <li>• Replace the batteries (see page 6).</li> </ul>
Loaded CD and tape cannot be ejected.	<ul style="list-style-type: none"> <li>• The main AC power cord is not plugged in.</li> <li>• The system is under the recording operations.</li> </ul>	<ul style="list-style-type: none"> <li>• Plug in the AC power plug.</li> <li>• Stop the recording if required (see pages 23).</li> </ul>
The CD does not play.	<ul style="list-style-type: none"> <li>• The CD is upside down.</li> </ul>	<ul style="list-style-type: none"> <li>• Put in the CD with the label side up.</li> </ul>
Operations are disabled.	<ul style="list-style-type: none"> <li>• The built-in microprocessor has malfunctioned due to external electrical interference.</li> </ul>	<ul style="list-style-type: none"> <li>• Unplug the system then plug it back in.</li> </ul>

# Specifications

## Stereo Amplifier AX-UXG6

Output power:	6 $\Omega$ (6 $\Omega$ to 16 $\Omega$ allowance)
	<b>48 W (24 W + 24 W) at 6 <math>\Omega</math> (Max.)</b>
	<b>42 W (21 W + 21 W) at 6 <math>\Omega</math> (10% THD)</b>
Load impedance:	6 $\Omega$ (6 $\Omega$ to 16 $\Omega$ allowance)
Load impedance:	6 $\Omega$ (6 $\Omega$ to 16 $\Omega$ allowance)
Audio output level/Impedance (at 1 kHz):	Sub Woofer 800 mV/440 $\Omega$
Power requirement:	AC 240 V $\sim$ , 50 Hz
Power consumption:	63 W (at operation)
	2.0 W (on standby; with Dimmer)
Dimensions (approx.):	182 mm x 81 mm x 313 mm (W/H/D)
	(7 <sup>3</sup> / <sub>16</sub> in. x 3 <sup>1</sup> / <sub>4</sub> in. x 12 <sup>3</sup> / <sub>8</sub> in.)
Mass (approx.):	3.8 kg (8.4 lbs)

## Compact Disc/Tuner XT-UXG6

Audio input sensitivity/Impedance (at 1 kHz):	AUX: 400 mV/47 k $\Omega$
[CD section]	
Digital output:	OPTICAL DIGITAL OUT
Wow and flutter:	Immeasurable
[Tuner section]	
FM tuning range:	87.50 MHz – 108.00 MHz
AM tuning range:	MW 522 kHz – 1,629 kHz
	LW 144 kHz – 288 kHz
Dimensions (approx.):	181 mm x 81 mm x 313 mm (W/H/D)
	(7 <sup>3</sup> / <sub>16</sub> in. x 3 <sup>1</sup> / <sub>4</sub> in. x 12 <sup>3</sup> / <sub>8</sub> in.)
Mass (approx.):	1.9 kg (4.2 lbs)

## Cassette Deck TD-UXG6

Frequency response :	
Normal	30 Hz – 15,000 Hz
High position	30 Hz – 16,000 Hz
Wow and flutter:	0.1 % WRMS
Dimensions (approx.):	181 mm x 81 mm x 304 mm (W/H/D)
	(7 <sup>3</sup> / <sub>16</sub> in. x 3 <sup>1</sup> / <sub>4</sub> in. x 12 in.)
Mass (approx.):	1.9 kg (4.2 lbs)

## Speaker System SP-UXG6


Type:	2-way Bass-Reflex Type
Speaker unit:	Woofer 11.5 cm (4 <sup>9</sup> / <sub>16</sub> in.)
	Cone x 1
	Tweeter 3.0 cm (1 <sup>3</sup> / <sub>16</sub> in.)
	Balanced Dome x 1
Impedance:	6 $\Omega$
Frequency range:	40 Hz – 20,000 Hz
Sound Pressure Level:	85.5 dB/W•m
Dimensions (approx.):	157 mm x 295 mm x 232 mm (W/H/D)
	(6 <sup>3</sup> / <sub>16</sub> in. x 11 <sup>5</sup> / <sub>8</sub> in. x 9 <sup>3</sup> / <sub>16</sub> in.)
Mass (approx.):	3.3 kg (7.3 lbs) each

## Supplied Accessories

See page 6.

Design and specifications are subject to change without notice.

US and foreign patents licensed from Dolby Laboratories Licensing Corporation.

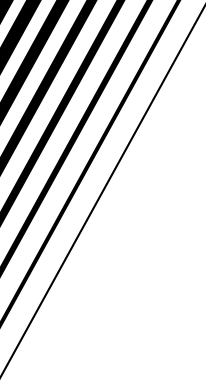

# JVC



## MICRO COMPONENT SYSTEM

### **UX-G6**

Consists of **AX-UXG6**, **XT-UXG6**, **TD-UXG6**,  
and **SP-UXG6**.

STEREO AMPLIFIER

### **AX-UXG6**

COMPACT DISC/TUNER


### **XT-UXG6**

CASSETTE DECK

### **TD-UXG6**

SPEAKER SYSTEM

### **SP-UXG6**

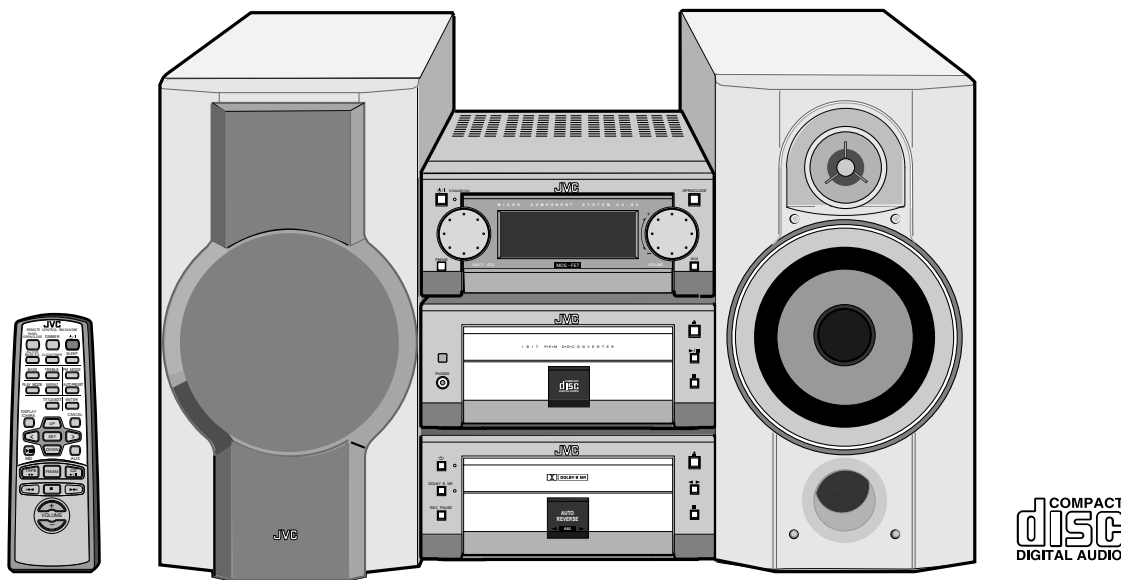

## **INSTRUCTIONS** **MANUAL DE INSTRUCCIONES** **使用说明书**

### For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_


Serial No. \_\_\_\_\_

LVT0377-005A  
[U, UB, US]

## Warnings, Cautions and Others Avisos, precauciones y otras notas 警告，注意及其他须知事项

### Caution — /I switch!

Disconnect the mains plug to shut the power off completely (the STANDBY/ON lamp goes off).


The /I switch in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights red.
- When the unit is turned on, the STANDBY/ON lamp lights green.

The power can be remote controlled.

### Precaución — Interruptor /I


Desconecte el enchufe de la red para desconectar la alimentación por completo (la lámpara STANDBY/ON se apaga).

El interruptor /I no desconectará completamente la alimentación principal, cualquiera que sea su posición.

- Cuando la unidad está en espera, la lámpara STANDBY/ON se enciende en rojo.
- Cuando conecta la unidad, la lámpara STANDBY/ON se enciende en verde.

La alimentación puede ser controlada a distancia.

### 注意 — /I 开关！

无论 /I 开关在任何位置，电源线的电源还是没有被切断，若要将电源完全关闭，应把电源插头拔离插座


（STANDBY/ON 灯熄灭）。

- 当主机正处于备用状态，STANDBY/ON 灯为红色。
- 当主机开启后，STANDBY/ON 灯为青色。

电源开关可用遥控器控制。

### The STANDBY/ON lamp Lámpara STANDBY/ON

备用/开启灯

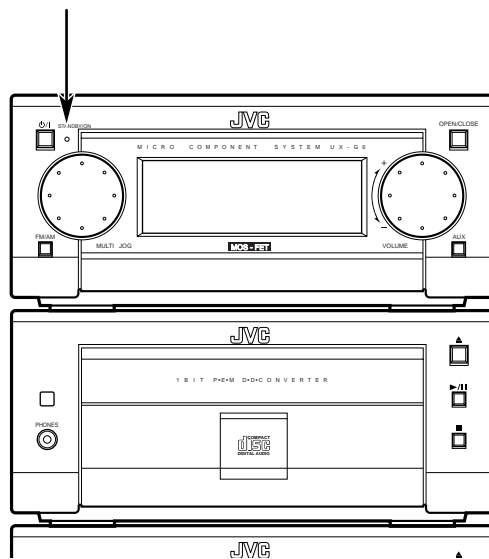

---

**CAUTION**

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

**PRECAUCIÓN**

Para reducir riesgos de choques eléctricos, incendio, etc.:

1. No extraiga los tornillos, las cubiertas ni la caja.
2. No exponga este aparato a la lluvia o a la humedad.

**警告**

为了减低触电，火灾等危险：

1. 请勿擅自卸下螺丝钉，盖子或机壳。
2. 切勿让本机受雨淋或置潮湿环境中。

### Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

- 1 Front: No obstructions and open spacing.
- 2 Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
- 3 Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

### Precaución: el aparato debe estar bien ventilado


Para evitar posibles riesgos de descargas eléctricas e incendios y prevenir cualquier posible daño, coloque el aparato del modo siguiente:

- 1 Parte delantera: No ponga nada delante, deje el espacio libre.
- 2 Laterales/ parte superior/ parte trasera: No se debería colocar nada en las áreas y las distancias que se detallan a continuación.
- 3 Parte inferior: Coloque el aparato sobre una superficie recta. Debe haber buena circulación de aire; para ello, coloque el aparato sobre una base a una altura mínima de 10 cm.

### 注意：正确通风

为免发生触电和火警的危险，及防止本机受损，请将本机如下放置：

1. 前面： 没有障碍物及地方开阔。
2. 侧面/顶面/背面： 在图中所示范围中，不应放置任何障碍物。
3. 底部： 放置在水平面上。放置在一个高 10 厘米或以上的台上，以保持足够的通风道。

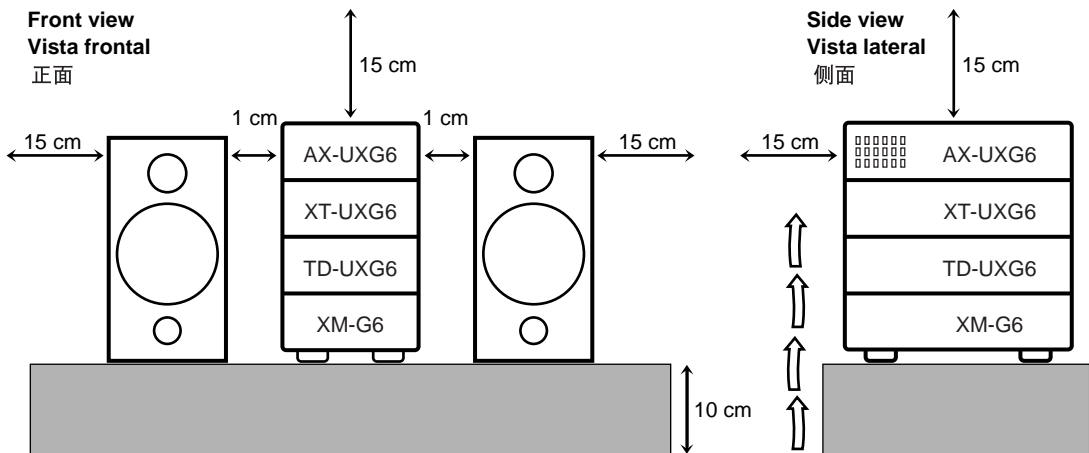




**IMPORTANT FOR LASER PRODUCTS**  
**IMPORTANTE PARA PRODUCTOS LÁSER**  
雷射产品的重要说明

**REPRODUCTION OF LABELS / REPRODUCCIÓN DE ETIQUETAS / 标签内容说明**

- |  |   |
|--|---|
| ① CLASSIFICATION LABEL, PLACED ON EXTERIOR SURFACE①                | ② WARNING LABEL, PLACED INSIDE THE UNIT                       |
| ① ETIQUETA DE CLASIFICACION, PROVISTA SOBRE LA SUPERFICIE EXTERIOR | ② ETIQUETA DE ADVERTENCIA, PEGADA EN EL INTERIOR DE LA UNIDAD |
| ① 分类标签，贴在机壳外部表面  | ② 警告标签，贴于机内   |

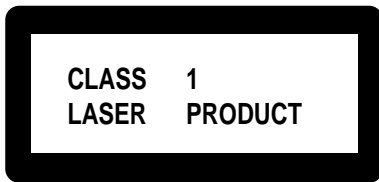

<b>DANGER:</b> Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	<b>WARNING:</b> Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)
<b>ADVARSEL:</b> Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for strålning. (d)	<b>VARO:</b> Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

1. PRODUCTO LÁSER CLASE 1
2. **PELIGRO:** En el interior hay radiación láser invisible. Evite el contacto directo con el haz.
3. **PRECAUCIÓN:** No abra la tapa superior. En el interior de la unidad no existen piezas reparables por el usuario; deje todo servicio técnico en manos de personal calificado.

1. 一级雷射产品
2. **危险：**当内部锁定装置失效或者损坏后，打开盖板可能会产生不可见的雷射辐射。应避免受到光束直接照射。
3. **注意：**请勿打开顶盖板。本机内部没有用户可自行维修的部件；所有维修工作应由有资格的人员完成。

# Introduction

We would like to thank you for purchasing one of our JVC products. Before operating this micro component system, read this manual carefully and thoroughly to obtain the best possible performance from your system, and retain this manual for future reference.

## About This Manual

This manual is organized as follows:

- The manual mainly explains operations using the buttons and controls on the units. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the units. If operation using the remote control is different from that using each unit, it is then explained.
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the system, setting the volume, changing the sound effects, and others, which are explained in the section “Basic Settings” and “Common Operations” on pages 10 to 13.
- The following marks are used in this manual:



Gives you warnings and cautions to prevent from a damage or risk of fire/ electric shock.

Also gives you information which is not good for obtaining the best possible performance from the units.



Gives you information and hints you had better know.

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold — between 5°C and 35°C.
- Install the units in a location with adequate ventilation to prevent internal heat buildup in the units.
- Leave sufficient distance between the units and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the units in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

### Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lens inside the units in the following cases:

- After starting heating in the room
- In a damp room
- If the units are brought directly from a cold to a warm place

Should this occur, the system may malfunction. In this case, leave the units turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

### Others

- Should any metallic object or liquid fall into a unit, unplug the units and consult your dealer before operating any further.
- If you are not going to operate the units for an extended period of time, unplug the AC power cord from the wall outlet.



DO NOT disassemble the units since there are no user serviceable parts inside.

If anything goes wrong, unplug the AC power cord and consult your dealer.

# Contents


<b>Introduction .....</b>	<b>1</b>	<b>Playing Back a Tape .....</b>	<b>20</b>
About This Manual .....	1	Playing Back a Tape — Basic Operation .....	20
Precautions .....	1	Fast-Winding a Tape .....	21
<b>Contents .....</b>	<b>2</b>	Searching and Skipping to Each Program — Music Scan .....	21
<b>Location of the Buttons and Controls .....</b>	<b>3</b>	Playing Back Dolby-Recorded Tape .....	21
Front Panels .....	4	<b>Recording onto a Tape .....</b>	<b>22</b>
Remote Control .....	5	Manual Recording onto a Tape .....	22
<b>Getting Started .....</b>	<b>6</b>	Recording in Auto Reverse .....	23
Unpacking .....	6	Synchronized Recording from a CD .....	24
Putting the Batteries into the Remote Control .....	6	Recording from the External Equipment .....	24
Connecting the System Control Cables and the External Wire .....	6	<b>Using the Timers .....</b>	<b>25</b>
Connecting MD Recorder XM-G6 .....	7	Using Recording Timer .....	25
Connecting Sub Woofer System .....	7	Using Daily Timer .....	26
Connecting Antennas .....	7	Using Sleep Timer .....	28
Connecting Speakers .....	8	Timer Priority .....	28
Connecting Other Equipments .....	9	<b>Maintenance and Additional Information .....</b>	<b>29</b>
<b>Basic Settings .....</b>	<b>10</b>	Handling CDs .....	29
Setting the Clock .....	10	Handling Cassette Tapes .....	30
Setting the Display Illumination (Dimmer) .....	10	Types of Cassette Tapes .....	30
<b>Common Operations .....</b>	<b>11</b>	<b>Troubleshooting .....</b>	<b>31</b>
Adjusting the Voltage Selector .....	11	<b>Specifications .....</b>	<b>32</b>
Turning On the Power and Selecting the Sources .....	11		
Adjusting the Volume .....	12		
Reinforcing the Bass Sound .....	12		
Adjusting Bass and Treble Sounds .....	12		
Operating the Sliding Panel .....	13		
Listening to the External Equipment .....	13		
<b>Listening to FM and AM Broadcasts .....</b>	<b>14</b>		
Setting the AM Tuner Interval Spacing .....	14		
Tuning in a Station .....	14		
Presetting Stations .....	15		
<b>Playing Back a CD .....</b>	<b>16</b>		
Playing Back the Entire Disc — Normal Play .....	16		
Searching and Skipping Tracks .....	17		
Programing the Playing Order of the Tracks — Program Play .....	17		
Playing at Random — Random Play .....	19		
Repeating Tracks — Repeat Play .....	19		

# Location of the Buttons and Controls


Become familiar with the buttons and controls on the units.

## Front Panels


AX-UXG6  
Stereo Amplifier

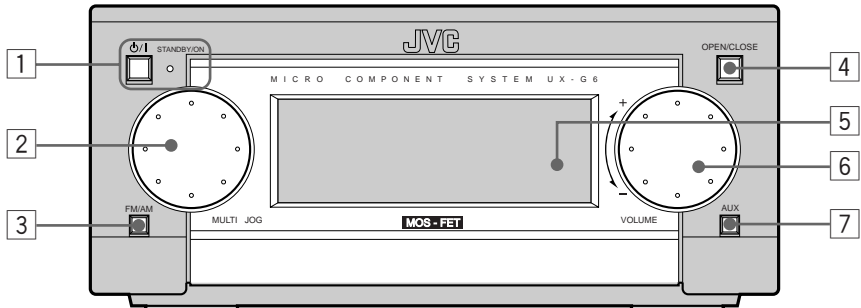


XT-UXG6  
Compact Disc  
/Tuner

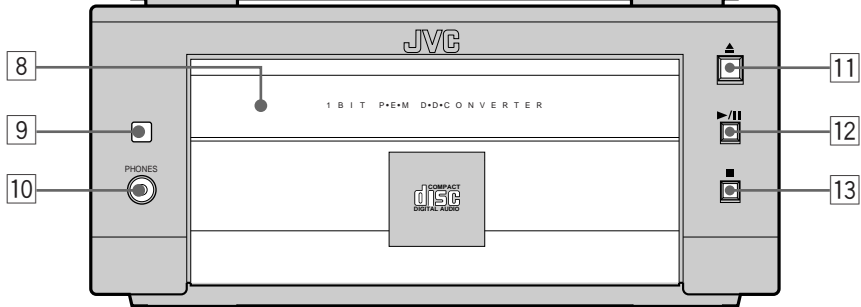

TD-UXG6  
Cassette Deck

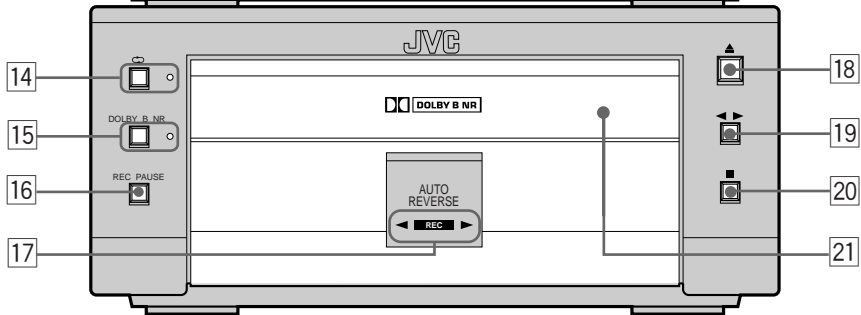

## Display window

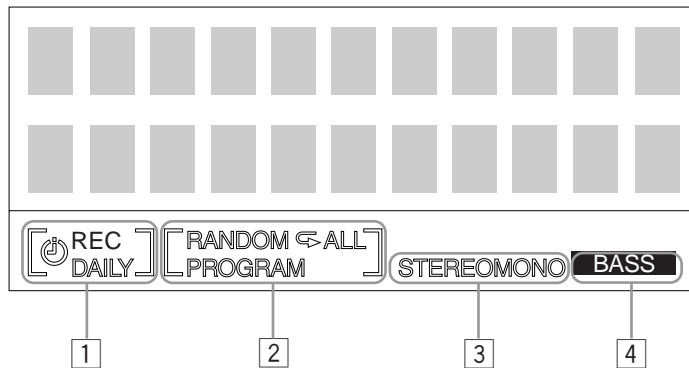

## Front Panels

### AX-UXG6 Stereo Amplifier

- 1 ⏻ button and STANDBY/ON lamp (11)\*
- 2 MULTI JOG dial
- 3 FM/AM button (14)\*
- 4 OPEN/CLOSE button (13)\*
- 5 Display window
- 6 VOLUME dial (12)
- 7 AUX button (13, 24)\*

### XT-UXG6 Compact Disc/Tuner

- 8 CD tray
- 9 Remote sensor (5)
- 10 PHONES jack (12)
- 11 ▲ (open/close) button for CD tray (16)\*
- 12 ▶/|| (play/pause) button (17)\*
- 13 ■ (stop) button (17)

### TD-UXG6 Cassette Deck

- 14 ⏪ (auto-reverse) button and lamp (20, 23)
- 15 DOLBY B NR button and lamp (21, 23)
- 16 REC PAUSE button (22)
- 17 Tape operations indicators (20, 22)
  - Tape direction (◀/▶) and REC indicators
- 18 ▲ (open/close) button for Tape tray (20)\*
- 19 ◀▶ (playback) button (20)\*
- 20 ■ (stop) button (21)
- 21 Tape tray




To press the buttons suffixed with \* mark also turns on the system.

### Display window

- 1 Timer mode indicators
  - ⌚ REC (recording timer) and ⌚ DAILY (daily timer) indicators
- 2 CD playback mode indicators
  - PROGRAM, RANDOM, ↺ (repeat 1), and ↺ ALL (repeat all) mode indicators
- 3 FM mode indicators
  - STEREO and MONO indicators
- 4 BASS indicator

### Buttons behind the sliding panel

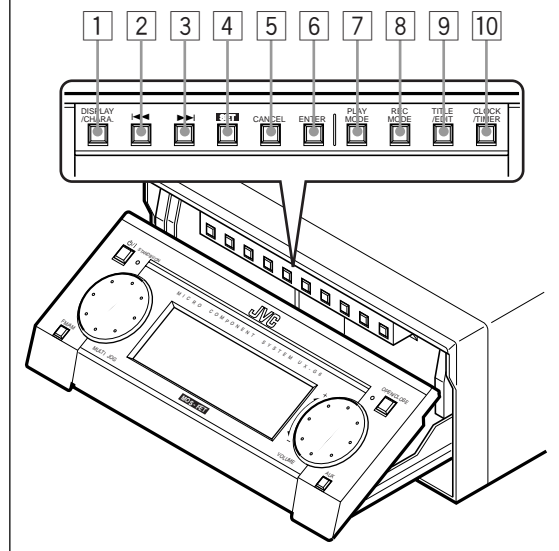

- 1 DISPLAY/CHARA. button \*\*
- 2 <<< button (14, 17, 18, 21)
- 3 >>> button (14, 17, 18, 21)
- 4 SET button (18, 25)
- 5 CANCEL button (10, 18, 25)
- 6 ENTER button \*\*
- 7 PLAY MODE button (17)
- 8 REC MODE button (24)
- 9 TITLE/EDIT button \*\*
- 10 CLOCK/TIMER button (10, 25)



\*\* Used only with MiniDisc recorder XM-G6 (not supplied).



- DO NOT operate any button and control until the system setup is completed.
- DO NOT operate the sliding panel by hands, otherwise it will cause serious damages on the sliding mechanism (see page 13).

Become familiar with the buttons on the remote control.

## Remote Control

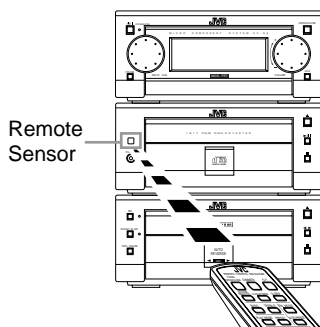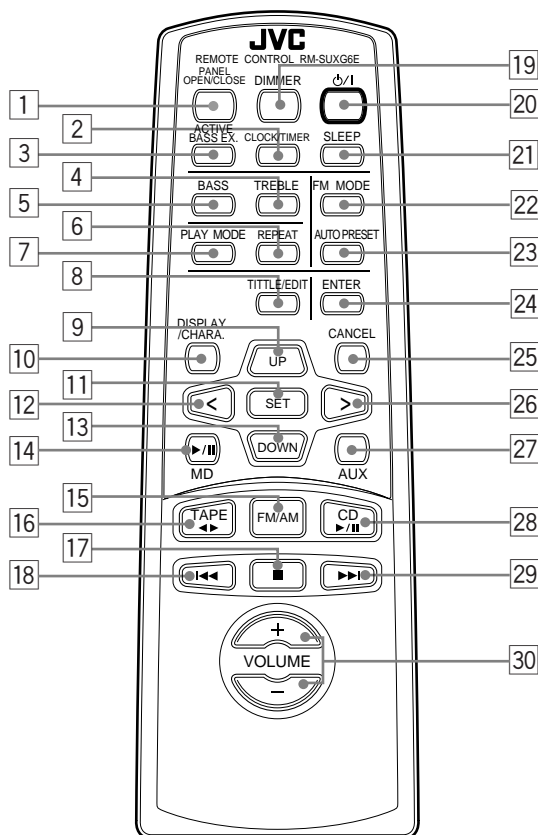

When using the remote control, point it at the remote sensor on the front panel.

## Remote Control

- 1 PANEL OPEN/CLOSE button (13)
- 2 CLOCK/TIMER button (10, 25)
- 3 ACTIVE BASS EX. (extension) button (12)
- 4 TREBLE button (12)
- 5 BASS button (12)
- 6 REPEAT button (19)
- 7 PLAY MODE button (17)
- 8 TITLE/EDIT button \*
- 9 UP button (12, 14, 17)
- 10 DISPLAY/CHARA. button \*
- 11 SET button (18, 25)
- 12 < (left cursor) button (10, 17, 25)
- 13 DOWN button (12, 14, 17)
- 14 MD ►/|| (play/pause) button \*
- 15 FM/AM button (14)
- 16 TAPE ◀▶ (playback) button (20)
- 17 ■ (stop) button (17, 21)
- 18 ◀◀ button (14, 17, 18, 21)
- 19 DIMMER button (10)
- 20 ⏻/⏿ (standby/on) button (11)
- 21 SLEEP button (28)
- 22 FM MODE button (15)
- 23 AUTO PRESET button (15)
- 24 ENTER button \*
- 25 CANCEL button (10, 18, 25)
- 26 > (right cursor) button (10, 17, 25)
- 27 AUX button (13, 24)
- 28 CD ►/|| (play/pause) button (17)
- 29 ►► button (14, 17, 18, 21)
- 30 VOLUME +/- button (12)

\* Used only with MiniDisc recorder XM-G6 (not supplied).



### To operate the system correctly using the remote control

Before using these buttons:

**For Tuner operations**, press FM/AM button on the remote control first.

**For CD operations**, press CD ►/|| (play/pause) button on the remote control first.

**For Tape operations**, press TAPE ◀▶ (playback) button on the remote control first.

# Getting Started

## Unpacking

After unpacking, check to be sure that you have all the following items.

The number in the parentheses indicates the quantity of the pieces supplied.


- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)
- Speaker cords (2)
- External wire (1)

If any is missing, consult your dealer immediately.

## Putting the Batteries into the Remote Control

Insert the batteries — R6P (SUM-3)/AA (15F) — into the remote control, by matching the polarity (+ and –) on the batteries with the + and – markings on the battery compartment.

When the remote control can no longer operate the units, replace both batteries at the same time.

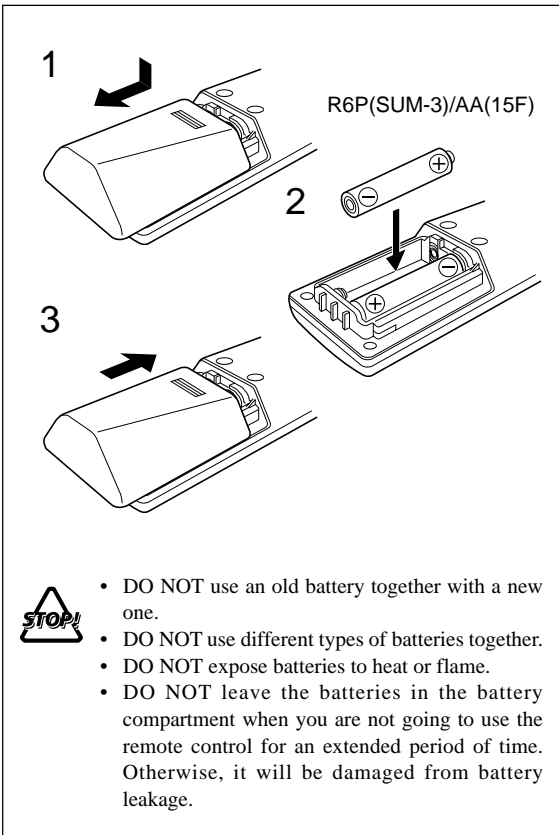


## Connecting the System Control Cables and the External Wire


UX-G6 micro component system consists of three units, AX-UXG6 Stereo Amplifier, XT-UXG6 Compact Disc/Tuner, TD-UXG6 Cassette Deck, and SP-UXG6 Speaker System.

You can easily connect these units using the system control cables equipped on the rear panel of the units.

- **To prevent malfunction**, connect the external wire as illustrated.

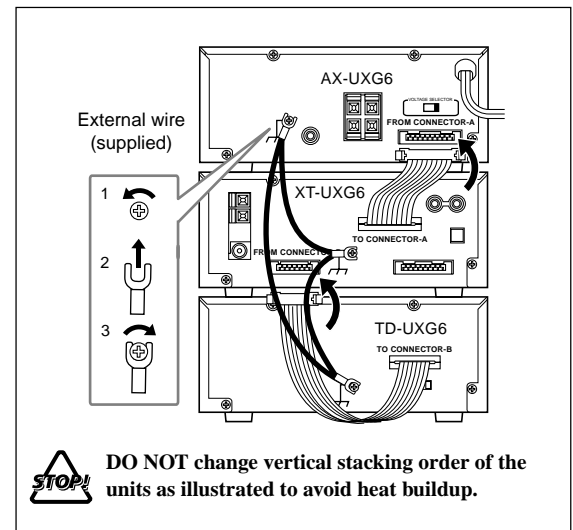

- **To connect the cables**, press the middle of the connector body until it clicks into the connector on the rear panel.
- **To disconnect**, if needed, pull the connector out pushing both sides of the connector body. Never pull out the cables themselves.

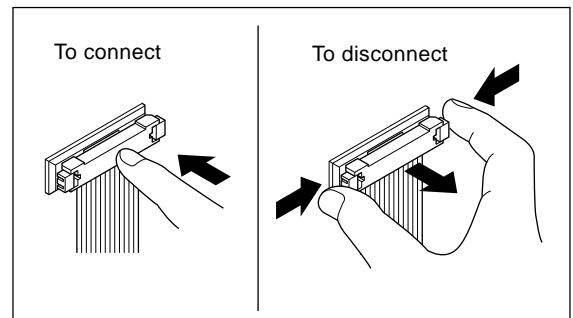


### When connecting the system control cables to the connectors

Make sure to connect the cable to the connector having the same name such as "FROM CONNECTOR-A" and "TO CONNECTOR-A."


## Connecting MD Recorder XM-G6

You can also connect the MD recorder XM-G6 (not supplied), specifically designed for UX-G6. This unit will complete UX-G6 micro component system. When you connect and use this unit, refer to the Instructions supplied with it for details.

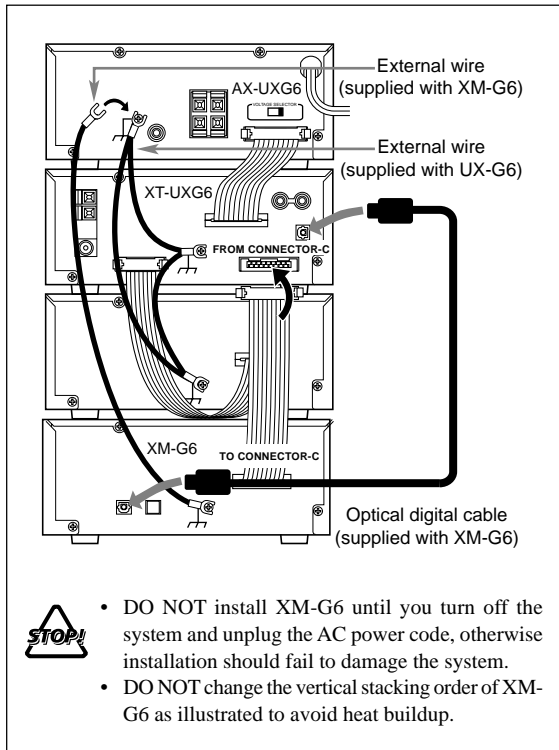

## Connecting Antennas

### Supplied FM antenna

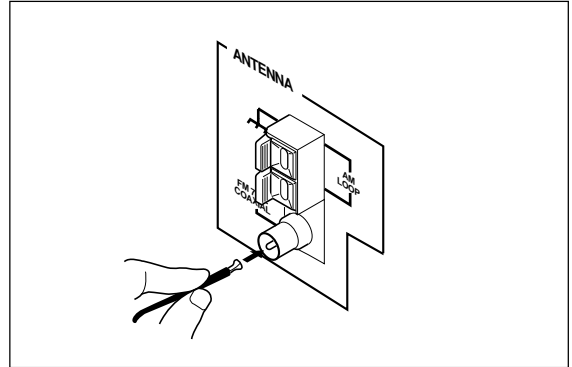

- 1 Attach the FM antenna to the FM 75 Ω COAXIAL terminal on the rear panel of XT-UXG6.
- 2 Extend the FM antenna.
- 3 Fasten it up in the position which gives you the best reception.




#### About the supplied FM antenna

The FM antenna supplied with this unit can only be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.


### To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

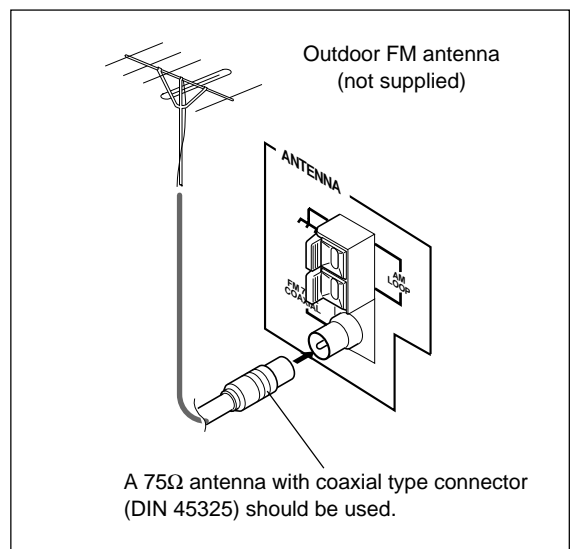


## Connecting Sub Woofer System

When using JVC external sub woofer system, connect audio cable between AX-UXG6's SUB WOOFER OUT jack and the input of your sub woofer system.

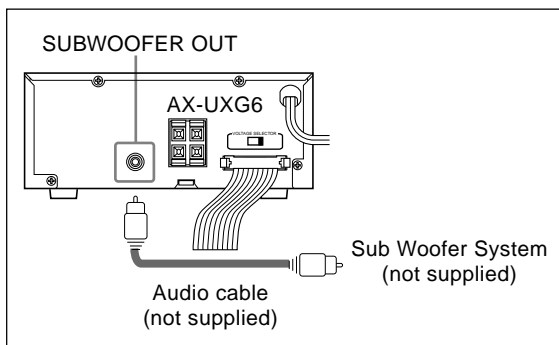




### AM antenna

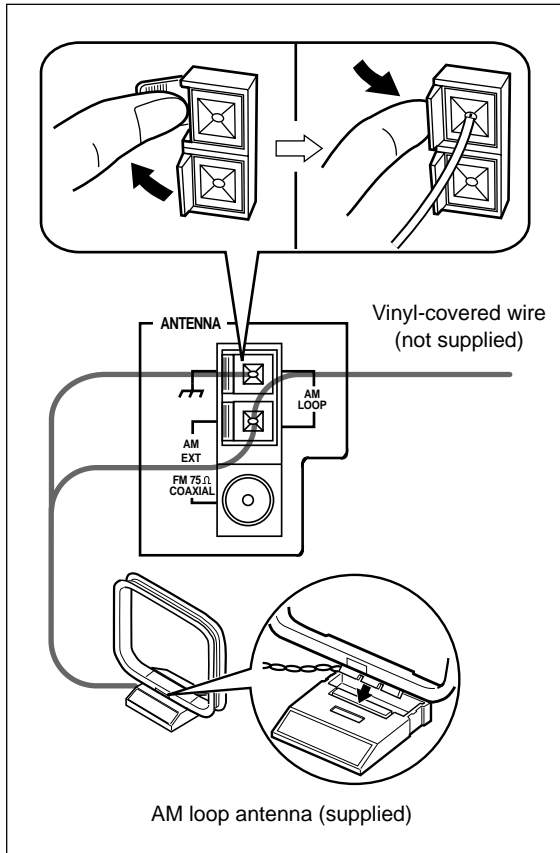

- 1** Connect the AM loop antenna to the AM LOOP terminals as illustrated.
- 2** Turn the AM loop antenna until you have the best reception.

#### To connect an external AM antenna


When reception is poor, connect a single vinyl-covered wire to the AM EXT terminal and extend it horizontally. (The AM loop antenna must remain connected.)

 **For better reception of both FM and AM**


- Make sure the antenna conductors do not touch any other terminals and connecting cables.
- Keep the antennas away from metallic parts of the units, connecting cables, and the AC power cord.

### Connecting Speakers

You can connect the speakers using the speaker cords.

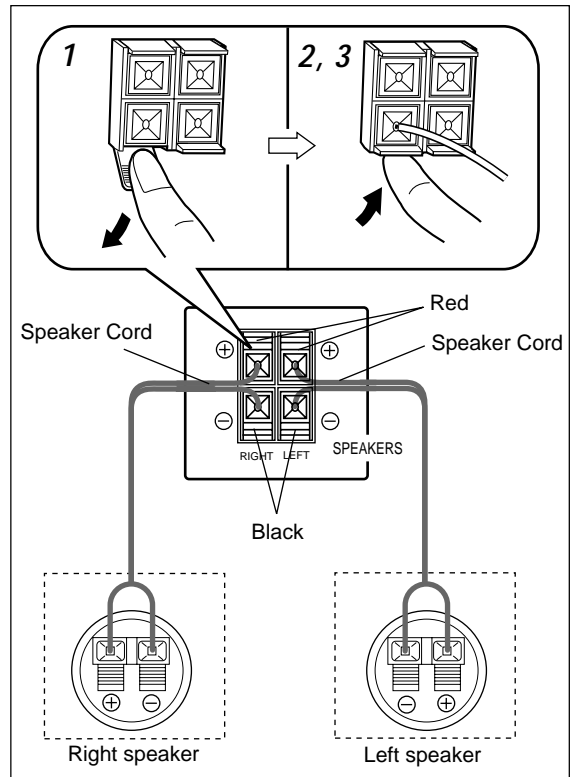

- 1** Open the speaker terminal.
- 2** Insert the end of the speaker cord to the terminal. Match the polarity of the speaker terminals: Red (+) to red (+) and black (-) to black (-).
- 3** Close the speaker terminal on the rear of the unit.

 **When connecting speaker cords**

- Make sure to connect the cords correctly following the right series of above steps. During operation, wrong connection or a short circuit make the power turned off to protect the system. The clock loses the setting and is reset to "0:00". Also the MD recording may fail.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

## Connecting Other Equipments

You can connect the following equipments to the system:

- Audio equipment — used only as an analog playback device.
- Audio equipment with an optical digital input terminal — used as a digital recording device.

When you connect and use these equipments, refer also to the manuals supplied with them.


### To connect audio equipment without a digital output terminal

Connect the audio output jacks on the other equipment and the ANALOG IN jacks, using an audio cable (not supplied).

Be sure that the plugs of the audio cables and the jacks on the rear panel of the unit are color coded: White plugs and jacks are for left audio signals, and red ones for right audio signals.



- DO NOT connect other equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

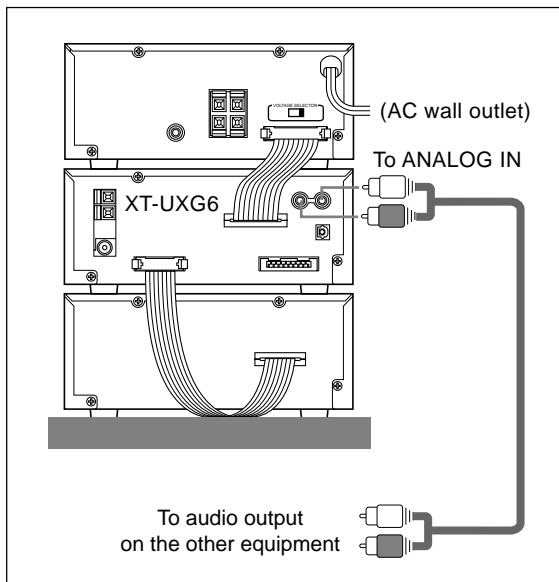


- By using audio cable (not supplied), connect between the audio output jacks on the other equipment and the ANALOG IN jacks.

### To connect audio equipment with an optical digital input terminal

By using both an optical digital cable (not supplied) and an audio cable (not supplied), connect:

- Between the optical digital input terminal on the other equipment and the optical digital output terminal on XT-UXG6.
- Between the audio output jacks on the other equipment and the ANALOG IN jacks.

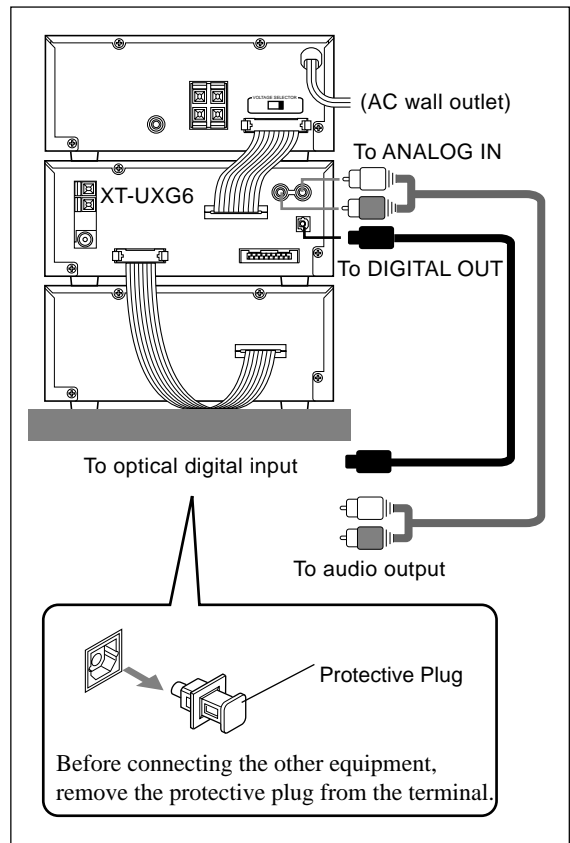


**NOW, you can plug in the system and other connected equipment FINALLY!**



**DO NOT plug in before setting the voltage selector switch on the rear of the unit and all connection procedure are complete (check to see page 11).**

When connecting the AC power cord into a wall outlet, the system switches to standby mode with STANDBY/ON lamp lit red.

# Basic Settings

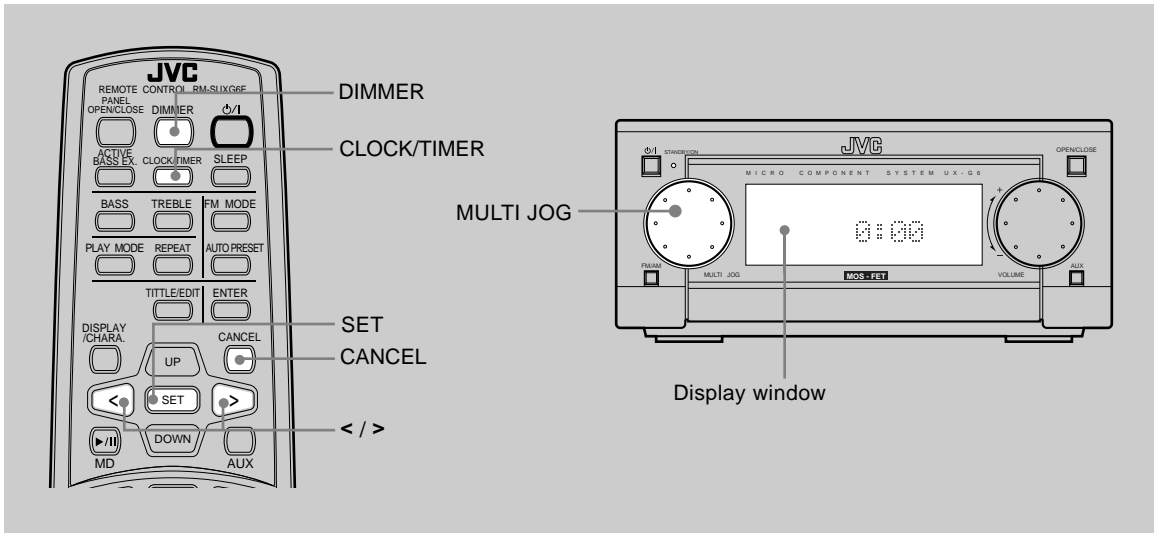

Before operating the system any further, set the clock built in this system first, then some other basic settings.

## Setting the Clock

You can set the clock using the remote control whether the system is turned on or turned off (i.e. standby mode).

- 1 Press **CLOCK/TIMER** button on the remote control. The hour digit in the display window starts blinking.



- 2 Press **< / >** button on the remote control to adjust the hour, then press **SET** button on the remote control (rotating **MULTI JOG** dial also available).



- To correct the hour after pressing **SET** button, press **CANCEL** button. The hour digit starts blinking again.

- 3 Press **< / >** button on the remote control to adjust the minute, then press **SET** button on the remote control (rotating **MULTI JOG** dial also available).



**notes** **If there is a power failure**  
The clock loses the setting and is reset to "0:00."  
**To adjust the clock again**  
You need to press **CLOCK/TIMER** button five times until the clock setting mode is selected.

## Setting the Display Illumination (Dimmer)

You can adjust the brightness of around the display window. Each time you press **DIMMER**, the display window dims and brightens alternately.

- **While the system is turned off:**  
Press **DIMMER** button, "DISPLAY OFF" appears in the display window for a while and the system clock disappears.




- Press the button again, "DISPLAY ON" appears in the display window for a while and only the system clock become dimmed.



- **While the system is turned on:**  
Press **DIMMER** button, both operating information and indicators in the display window dims. The light around **MULTI JOG** dial also becomes darker than usual. Press the button again, all the illumination around the display window recovers as usual.

**notes** **Dimmer setting in the standby mode**  
Once the system is turned on, the dimmer setting in the standby mode does affect neither normal operations nor display indications.



# Common Operations

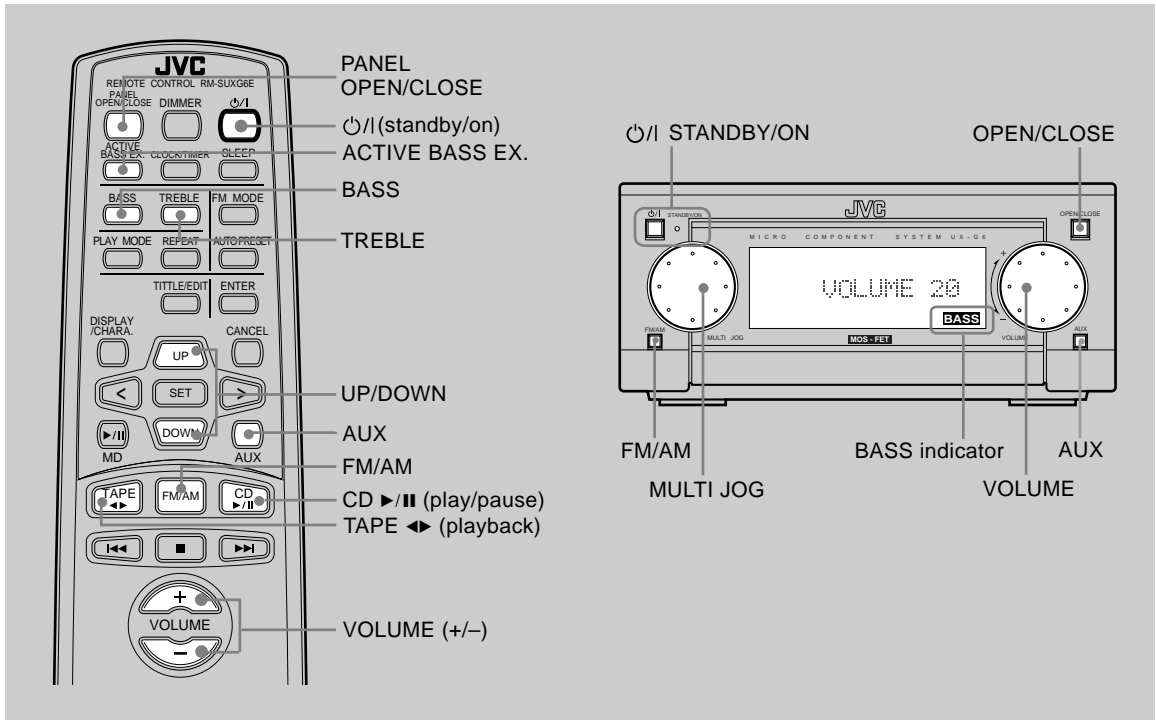

Here are basic and common things that apply to all the operations of UX-G6 system.

## Adjusting the Voltage Selector

Before plugging in the system, set the correct voltage for your area with the voltage selector on the rear of AX-UXG6 unit.

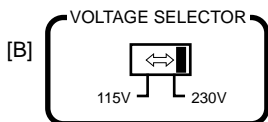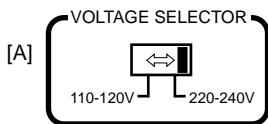

### Notes on [B] type voltage selector

115 V position of the selector covers from 110 V to 120 V in service, and 230 V position covers from 220 V to 240 V in service.

## Turning On the Power and Selecting the Sources

When you press a play button for example, like FM/AM, CD ►/|| (play/pause), or TAPE ◀▶ (playback), the system automatically turns on and STANDBY/ON lamp lights green.

### One Touch Play

If any CD or a tape, or last tuned station provided, the system starts playing that source.


To select the external equipment as the source, press MD ►/|| (play/pause) or AUX button so that the system automatically turns on.

### Using POWER button

- **To turn on the system without playing,**  
press POWER button so that STANDBY/ON lamp lights green.
- **To turn off the system (standby mode),**  
press again POWER button so that STANDBY/ON lamp lights red.

A little power is always consumed even while the system is in standby mode.

- **To save the power consumption**, make use of Dimmer feature (see page 10).
- **To switch off the power supply completely**, unplug the AC power cord from the AC outlet. STANDBY/ON lamp goes off.

 **When you unplug the AC power cord or if a power failure occurs**  
The clock is reset to "0:00" right away, while the tuner preset stations will be erased in a few days.

## Adjusting the Volume

You can adjust the volume level only while the system is turned on.

- Rotate VOLUME dial clockwise to increase the volume level or counterclockwise to decrease it.
- Using VOLUME dial, rotating quickly makes a large change in the volume level while rotating slowly makes a step-by-step change.
- When using the remote control, press VOLUME + button to increase the volume level or press VOLUME - button to decrease it.


The volume level (from 0 to 50) appears in the display window as follows:


VOLUME 20



### For private listening

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume level before connecting or putting headphones.

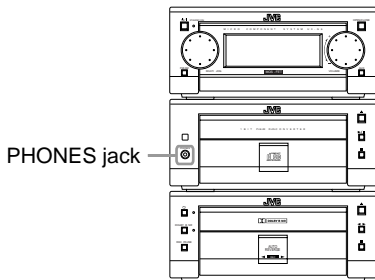

 **DO NOT** turn off the system with the volume level set to an extremely high level; otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the system or start playing any source.  
REMEMBER you cannot adjust the volume level while the system is turned off.

## Reinforcing the Bass Sound

The richness and fullness of the bass sound is maintained regardless of how low you set the volume level.

You can use this effect only while listening sources.

- **To get the effect**, press ACTIVE BASS EX. button on the remote control, and its indicator lights in the display window.
- **To cancel the effect**, press the button again so that the indicator goes off.

## Adjusting Bass and Treble Sounds

You can adjust bass and treble sound effects with the remote control, conforming to your preference and acoustic surroundings.

You can use this effect only while listening sources.

### To adjust the bass

#### 1 Press BASS button.

The current level settings shortly appears as follows:

BASS +3

To exit from the level setting, press the button again.

#### 2 Press UP/DOWN button to adjust the level.

- Press UP button to increase the bass tone level.
- Press DOWN button to decrease the bass tone level. The bass level can be adjusted in seven steps from -3 through 0 to +3 (step "0" makes no effect).

**To cancel the effect**, adjust the level to "0."

### To adjust the treble

#### 1 Press TREBLE button.

The current level settings shortly appears as follows:

TREBLE -2

To exit from the level setting, press the button again.


#### 2 Press UP/DOWN button to adjust the level.

- Press UP button to increase the treble tone level.
- Press DOWN button to decrease the treble tone level. The treble level can be adjusted in seven steps from -3 through 0 to +3 (step "0" makes no effect).

**To cancel the effect**, adjust the level to "0."

## Operating the Sliding Panel

You can use the sliding panel to enable advanced operations features provided for UX-G6 micro component system.

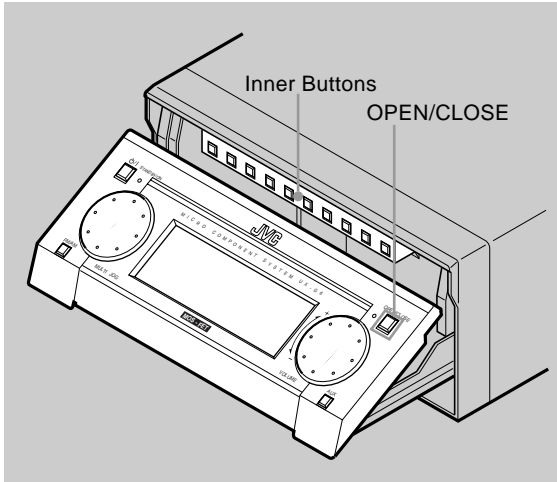


- Press OPEN/CLOSE button on the front panel (or PANEL OPEN/CLOSE button on the remote control).  
The sliding panel opens to uncover the inner buttons behind the panel for further operations.
- Press OPEN/CLOSE button again.  
The sliding panel automatically closes to hide the 10 inner buttons.

Each time you press the button, the sliding panel opens and closes repeatedly.

The buttons behind the sliding panel provided to control various program settings such as playback, recording, and presetting mode of each source. For details, refer to chapters concerning to the particular unit.



### When turning off the system

After pressing  button, the system closes sliding panel as well as other CD tray and Tape tray automatically if they are still opened.

## Listening to the External Equipment

You can listen to an external equipment such as MD recorder, VCR, and other auxiliaries.


First make sure that the external equipment is properly connected to the system (see page 7 and 9). For operation of the equipment, refer to its Instructions.

- 1 Press AUX button to select an external source.
  - To play an audio equipment without optical digital output, select AUX so that the following information appears in the display window.

AUX

- 2 Start playing back the external equipment.
- 3 Adjust the volume level to the desired listening level.
- 4 Apply other sound effects, if you wish.

# Listening to FM and AM Broadcasts

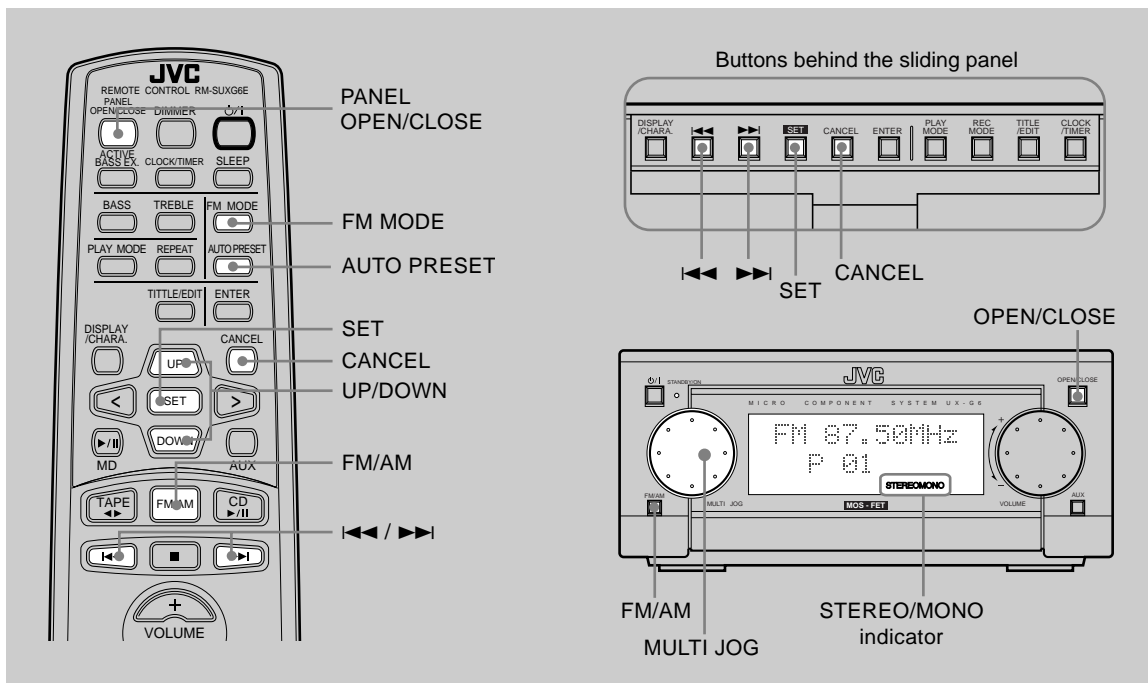

You can tune in FM and AM stations manually, automatically, and use the preset station feature.

## Setting the AM Tuner Interval Spacing

Some countries space AM stations 9 kHz apart, and some countries use 10 kHz spacing.

When shipped, the built-in AM tuner is set to 9 kHz spacing.

- **To set the frequency spacing — on the front panel only**  
Press FM/AM button first.


While pressing and holding **■** (stop) button on XT-UXG6, press FM/AM button on AX-UXG6 repeatedly to select “AM-9kHz” or “AM-10kHz” appeared alternately in the display window.

## Tuning in a Station

### 1 Press FM/AM button.

The system automatically turns on and tunes in the last tuned station (either FM or AM). The following information appears in the display window.

FM 87.50MHz  
P 01 — Preset number

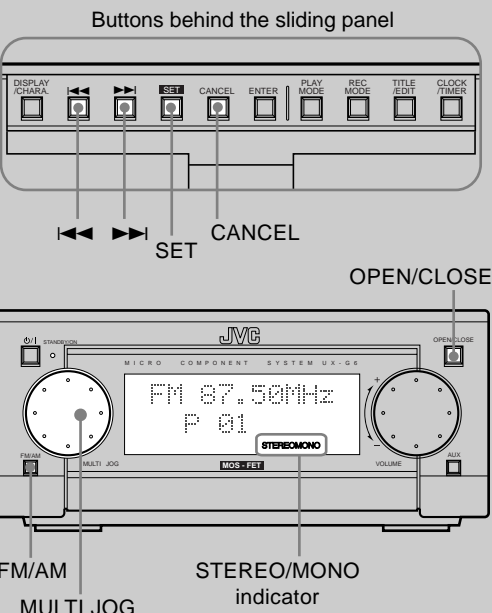

- Each time you press the button, the band alternates between FM and AM.
- If a program on FM band is broadcast in stereo, STEREO indicator lights.

### 2 Select a station using one of the following three methods.

- **Manual Tuning**  
Opening the sliding panel, press **◀◀ / ▶▶** (lower/higher frequencies) button repeatedly to change the frequencies step by step until you find the desired station.
- **Auto Tuning**  
Opening the sliding panel, press and hold **◀◀ / ▶▶** (lower/higher frequencies) button for a second or more to start searching a station and stop automatically until the station of sufficient signal strength is tuned in.
- **Preset Station Tuning**  
Rotate MULTI JOG dial clockwise to increase the preset number or counterclockwise to decrease it until the desired station is easily found.



#### Using the remote control:

**UP/DOWN** button on the remote control also has the same function as **MULTI JOG** dial on the front panel.

**Preset Station**

You are possibly not allowed to use the feature until the station presetting completes.

In some cases, test frequencies have been already memorized for the system since the factory examined the preset station features before shipment. This is not a malfunction.

- 5** The tuned station in step 1 is now stored in the preset channel selected in step 3.

FM 87.50MHz  
P 02



Storing a new station on an used channel erases the previously stored one.

## Presetting Stations

You can preset up to 30 FM and 15 AM stations into memory by following two methods: manual/automatic presettings.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

### To preset stations manually — Manual Preset

- 1** Press **◀◀ / ▶▶** (lower/higher frequencies) button to tune in the desired station manually.

FM 87.50MHz

- 2** Press **SET** button.

“SET” appears in the display window for a while (not blinking).

SET

- Note that “SET” message disappears, presetting procedure is cancelled.

- 3** Rotate **MULTI JOG** dial or press repeatedly **UP/DOWN** button to select the preset channel numbered from 1 to 30 on FM, or 1 to 15 on AM.

FM 87.50MHz  
P 02

- Note that the selected channel “02” disappears, presetting procedure is cancelled.

- 4** Press **SET** button again.

“STORED” appears in the display window for a while.

STORED

### To preset stations automatically — Auto Preset

You can automatically preset 30 FM, 15 AM stations. Preset numbers will be allocated as stations are found, starting from the lowest frequency and moving up to the higher frequency.

#### On the remote control only:

- 1** Press **FM/AM** button to select a desired band.

- 2** Press and hold **AUTO PRESET** button on the remote control for more than two seconds.

The system automatically starts searching for stations with the strong signals continuously, and they are stored successively into memory as follows:

FM 91.25MHz  
↓  
P 01  
↓  
FM 95.75MHz  
↓  
P 02



When you unplug the AC power cord or if a power failure occurs

The preset stations will be erased in a few days. If this happens, preset the stations again.


### To change the FM reception mode

- When an FM stereo broadcast is hard to receive or noisy, press **FM MODE** button on the remote control so that **MONO** indicator lights in the display window. Reception improves.
- To restore the stereo effect, press **FM MODE** button again so that **STEREO** indicator lights in the display window.

In this stereo mode, you can hear stereo sounds when a program is broadcast in stereo.



# Playing Back a CD

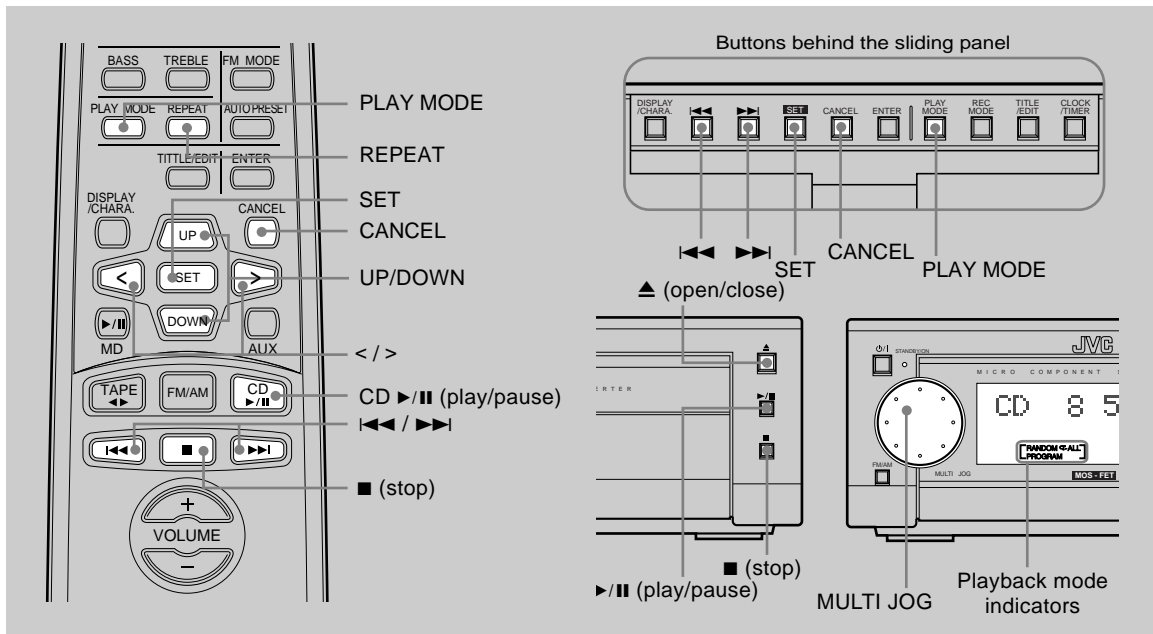

You can use Normal, Program, Random, or Repeat Play.

- When using the buttons behind the sliding panel, press OPEN/CLOSE button on the AX-UXG6 to open the sliding panel first.
- When using the remote control, press CD ►/|| (play/pause) button first and ■ (stop) button successively.




- DO NOT try to open or close the CD tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may results damages on the unit.


## Playing Back the Entire Disc — Normal Play

### 1 Press ▲ (open/close) button on CD unit.

The system automatically turns on and the disc tray comes out.

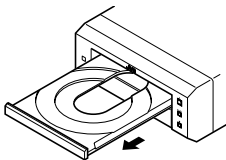


### 2 Place a disc correctly on the circle of the disc tray, with its label side up.

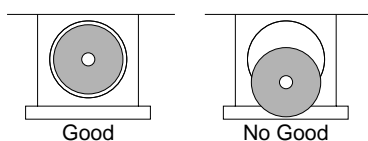

- When using a CD single (8 cm), place it on the inner circle of the disc tray.

### 3 Press ▲ (open/close) button again.

The disc tray closes while the information appears one after another as follows.

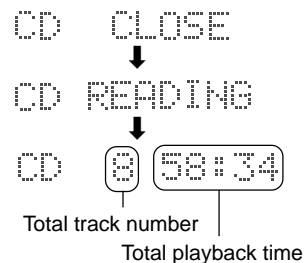

- When closing the tray without a CD placed, "CD NO DISC" appears.



When pressing ►/|| (play/pause) button directly, the system starts playback a CD immediately.

#### 4 Press ►/|| (play/pause) button on the CD unit.

Each track of the CD starts playing one after another, and stops when the final track has finished playing.

CD 1 0:01

- **To stop playing back for a moment, press ►/|| (play/pause) button on the CD unit.**  
The playback time starts blinking in the display window.

CD 5 38:34

- **To resume playback, press ►/|| (play/pause) button again.**  
Playback continues from the point where it was stopped for a while.

#### 5 Press ■ (stop) button to stop playing back the CD.

Following information for the CD appears in the display window.

CD 8 53:34

Total track number      Total playback time

#### 6 Press ▲ (open/close) button on the CD unit to remove the CD.

- Pressing ▲ (open/close) button during playback directly, the CD unit stops playback and opens CD tray.

## Searching and Skipping Tracks

While playing back a CD, you can do the following operations.

#### To search and skip to a particular point in a track

During playback, press and hold ◀◀ / ▶▶ button to meet the desired passages in a track:

Press and hold or ▶▶ button:

Fast forwards in the track.

Press and hold or ◀◀ button:

Fast reverses in the track.



**UP/DOWN button on the remote control is also available to searching operations.**

#### To go to another track

Before or during playback, press ◀◀ / ▶▶ button repeatedly:

Press ▶▶ button:

Skips to the beginning of the next and succeeding tracks.

Press ◀◀ button:

Goes back to the beginning of the current and previous tracks.

Rotating MULTI JOG dial clockwise also changes the tracks forwards quickly, while rotating it counterclockwise the tracks reverses quickly.



**</> button on the remote control is also available to skipping operations.**

## Programming the Playing Order of the Tracks — Program Play

You can arrange the order in which the tracks play before you start playback. You can program up to 32 tracks.

 
#### 1 Place a CD.

- If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

#### 2 Press PLAY MODE button repeatedly until “CD PROGRAM” appears in the display window.

CD PROGRAM


- Each time you press the button, playback mode indicators also change as follows:



#### 3 Rotate MULTI JOG dial to select a track number to be programmed (</> buttons also available).

CD 1 P .....

Track number      Program number

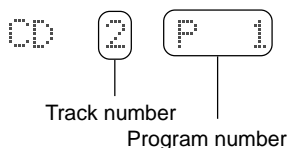**4 Press SET button to program the track number.**

Here the track number 2 on the CD is stored into a program number 1, and shortly after that the total playback time of programmed tracks appears in the display window as follows:

**5 Repeat steps 3 to 4 to program other tracks you want up to 32 tracks.**

- **If you try to program a 33rd step** "MEMORY FULL" will appear in the display window, and your entry is ignored.
- **The total playback time of programmed tracks exceeds 99'59"** "-- : --" will appear in the display window.

**6 Press ►/|| (play/pause) button on the CD unit.**

The programmed tracks are played back in the order you have set.

- Other CD operations are the same as Normal play.

**7 Press ■ (stop) button to quit the Program play.**

- When Program play finished, CD unit automatically stops.

**To check the program contents**

Before playing back the CD, you can check the program contents by using ◀◀ / ▶▶ button.

Press ▶▶ button:

Shows the programmed tracks in the programmed order.

Press ◀◀ button:

Shows them in the reverse order.

**To modify the program**

Before playing back the CD, you can erase the last programmed track by pressing CANCEL button. Each time you press the button, the last programmed track is erased from the end of program.

- **To add new tracks to the program** before you start playing-back, simply select a track number again you want to add (repeat steps 3 to 4).

**To erase all the programmed data**

After playing back the CD, you can erase all the programmed track data by pressing ■ (stop) button. New program can be entered again.

**To exit from the Program play mode**

Before or during playback, you can exit from Program play mode as follows:

- Before playback, press PLAY MODE button twice.
- During playback, press ■ (stop) button then PLAY MODE button twice.

Playback mode indicator goes off and the system resumes Normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the program play.

## Playing at Random — Random Play

The tracks of the loaded CD will play in no special order (at random) when you select this mode.

 
### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press PLAY MODE button repeatedly until “CD RANDOM” appears in the display window.

CD  RANDOM

- Each time you press the button, playback mode indicator also changes as follows:



### 3 Press ►/|| (play/pause) button on the CD unit.

CD   RANDOM

The track numbers are shuffled in the display window for a few seconds, and start playing back at random. Random play ends when all the tracks are played back once.

- Other CD operations are the same as Normal play.

### 4 Press ■ (stop) button to quit Random play.

#### To exit from Random play mode

Before playing back the CD, you can exit from Random play mode as follows:

- Before playback, press PLAY MODE button once.
- During playback, press ■ (stop) button then press PLAY MODE button once.

Play mode indicator goes off and the system resumes the normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the random play.

## Repeating Tracks — Repeat Play

 
You can have the entire disc, the programmed tracks, or the individual track repeat as many times as you like.



### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press REPEAT button on the remote control repeatedly to set the repeat mode.


 
- Each time you press the button, repeat mode indicators light in the display window, and Repeat playback mode changes as follows:



-  : Repeats one track on the CD or in a program.
-  ALL : Repeats all the tracks on the CD or a program.




### 3 Press ■ (stop) button to quit Repeat play.

#### To exit from Repeat play mode


Pressing REPEAT button repeatedly until repeat mode indicators ( and  ALL) goes off in the display window.



#### Combining play modes:

- When combining Program play and Repeat play, you can repeat whole the programmed tracks or one track among them ( and  ALL).
- When combining Random play and Repeat play, you can just repeat whole the shuffled tracks (only  ALL).

# Playing Back a Tape

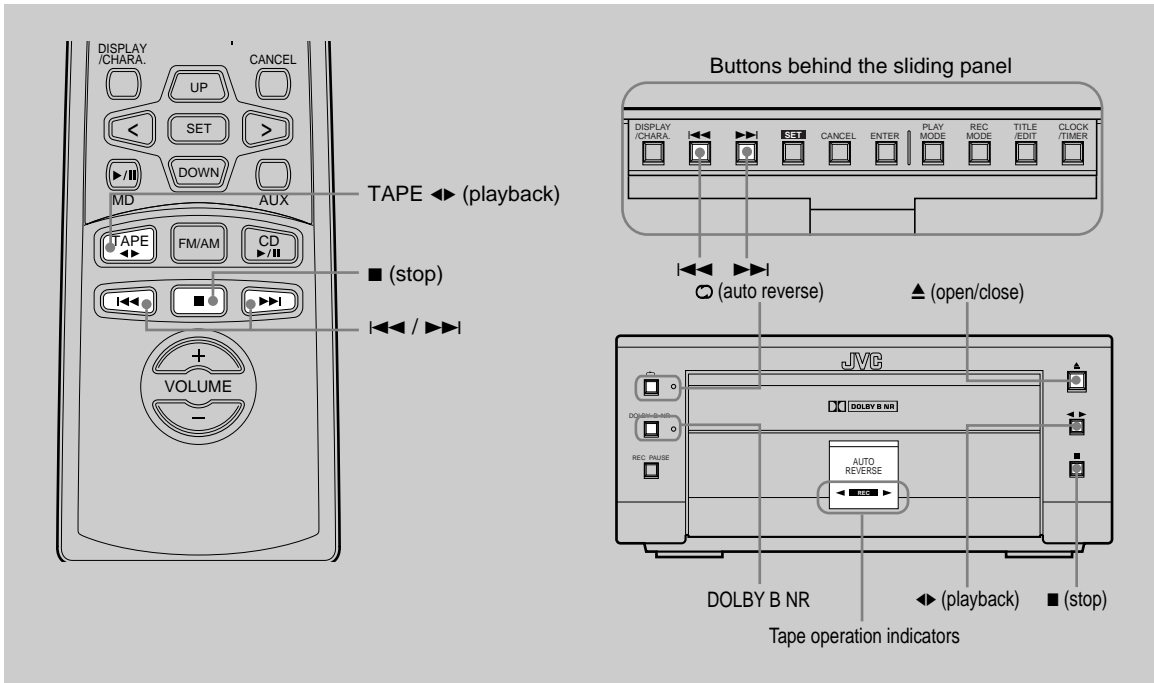

You can listen to Normal (Type I), High position (Type II), and Metal (Type IV) type tapes without further settings.

- When using the inner buttons, press OPEN/CLOSE button on AX-UXG6 unit to open the sliding panel first.
- When using the remote control, press TAPE <math>\blacktriangleleft/\blacktriangleright</math> (playback) button first and ■ (stop) button successively.



**DO NOT use tapes longer than 120 minutes.**  
The characteristic deterioration may occur and these tapes easily jam in the tape transport mechanism.




- DO NOT try to open or close the tape tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may result in damages on the unit.

## Playing Back a Tape — Basic Operation

**1 Press <math>\blacktriangle</math> (open/close) button on the cassette deck unit.**

The system automatically turns on and the tape tray comes out.

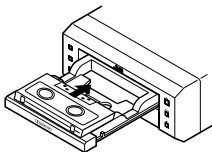


**2 Place a tape on the tray with the side you want to listen to facing up (forward side).**

Tape fits in the caved-in area so that an exposed edge of the tape faces toward the inside of the unit.

**3 Press <math>\blacktriangle</math> (open/close) button again to close the tray.**

**4 Press <math>\blacktriangleleft/\blacktriangleright</math> (playback) button on the unit or TAPE <math>\blacktriangleleft/\blacktriangleright</math> (playback) button on the remote control.**

 The tape playback starts and the tape direction indicator blinks slowly in orange to show the tape running direction.



- Each time you press <math>\blacktriangleleft/\blacktriangleright</math> (playback) on the cassette deck unit or TAPE <math>\blacktriangleleft/\blacktriangleright</math> (playback) button on the remote control, you can change the tape sides to be played back currently.

- ▶ : plays the forward side.
- ◀ : plays the reverse side.



**Playback comes to an end (Auto Reverse)**

The cassette deck unit automatically changes the tape direction to the reverse side, and continue playback both sides. Each time to press the button, Auto Reverse feature is set to on/off alternately.

Continued

5 Press **■** (stop) button to stop playback the tape.

6 Press **▲** (open/close) button directly to stop and remove the tape.



**While the system is turned off (standby mode)**  
Pressing **▶◀** (playback) or **TAPE ▶◀** (playback) button automatically switches the system turned on and starts playback if a tape is already loaded.

## Fast-Winding a Tape

While stopping the tape, press **◀◀** / **▶▶** button to fast-wind the tape.

 
To fast-forward, if the current tape direction is:

- ▶ ⇒ Press **▶▶** button.
- ◀ ⇒ Press **◀◀** button.

To fast-rewind, if the current tape direction is:

- ▶ ⇒ Press **◀◀** button.
- ◀ ⇒ Press **▶▶** button.

During fast-winding, the tape direction indicator starts blinking quickly.



**When the tape comes to an end**  
The deck unit automatically stops.

## Searching and Skipping to Each Program — Music Scan

While playing the tape, you can search and skip to the beginning of the current and next program on a tape.



Music scan searches for blank portions that usually separate programs recorded onto the tape, then automatically plays the program beginning after that blank portion.

To skip backward to the current music

Press the button opposite to the tape direction indicator as follows:

 
- ▶ ⇒ Press **◀◀** button.
- ◀ ⇒ Press **▶▶** button.

To skip forward to the next music

Press the button same as the tape direction indicator as follows:

- ▶ ⇒ Press **▶▶** button.
- ◀ ⇒ Press **◀◀** button.

During Music Scan progressed, the tape direction indicator starts blinking rhythmically.



**Repeating Music Scan feature made easy**

searching a desired program on a tape one after another.



**The beginning of the desired program may not be located properly**

If blanks between music are too short, the blanks contain too much noise or the program itself contains very low-level or silent part.

## Playing Back Dolby-Recorded Tape

You can play back the tape recorded with Dolby B NR system. The Dolby NR system allows to reduce hiss noise in playback.

Press **DOLBY B NR** button on the cassette deck before playback. Each time you press the button, the Dolby NR lamp on the unit lights up orange or turns off.




**A tape recorded using Dolby NR**

Should be played back using the Dolby NR of the same type as that used in recording. The audio quality will be affected if a different type is used in playback.

Dolby Noise Reduction manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

# Recording onto a Tape

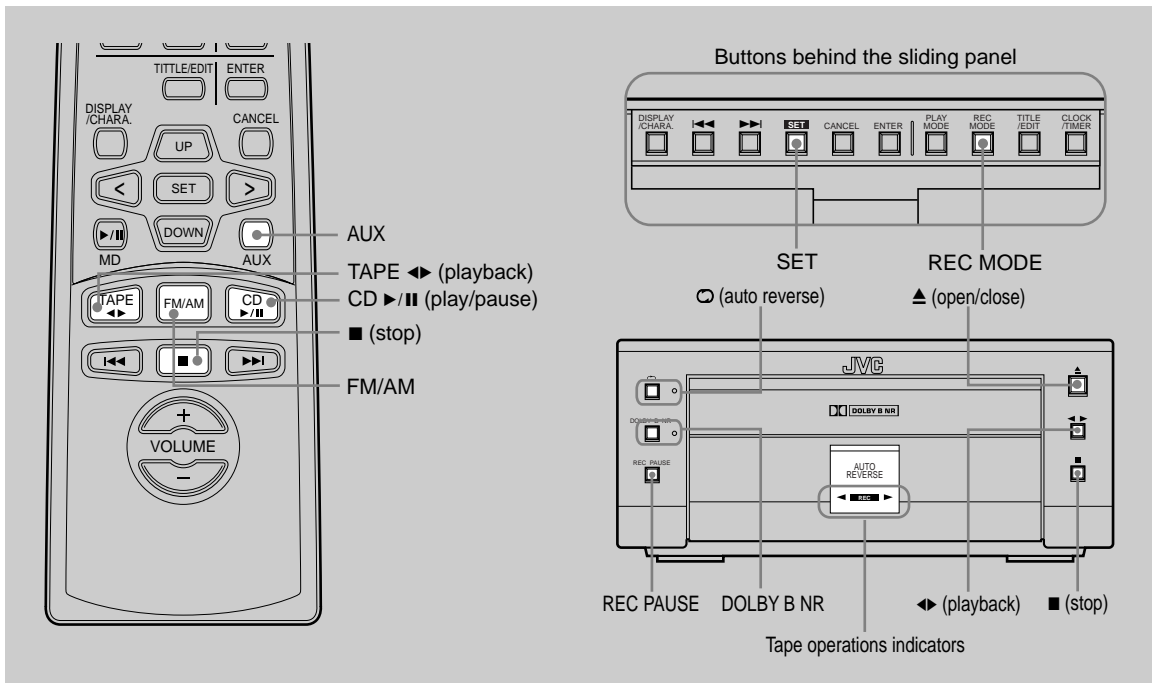

Two types of cassette tapes can be recorded onto, including normal (Type I), and High position (Type II) tapes. These types are identified automatically by the cassette deck unit and the recording level is also corrected automatically. Neither volume level nor sound effects during playback does affect to the recording.

## IMPORTANT:

- It may be unlawful to record or play back copyrighted material without the consent of the copy right owner.

## Manual Recording onto a Tape

### 1 Select one of the recording sources — FM/AM broadcasts, CD, or other external equipment.


- To record FM/AM broadcasts, receive a station with Tuner unit.
- To record a CD or its tracks programed, set the play-pause mode for CD unit.
- To record from an external equipment connected to ANALOG IN jacks, prepare it as required.




Make sure to select a source first, otherwise you cannot use recording function.

### 2 Place a recordable tape with the side you want to record facing up.

Press ▲ (open/close) button on the cassette deck unit to open the tape tray; place a tape on it; and press ▲ (open/close) button again to close it.

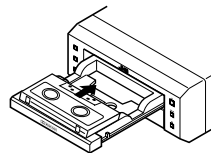

 - You cannot record onto the tape without a protect tab. When using that tape, cover the hole for desired side with adhesive tape.



### 3 Press REC PAUSE button on the cassette deck unit.



REC indicator

REC indicator lights red to show the recording pause mode, and "TAPE REC" appears in the display window as follows,

FM 87.50MHz  
TAPE REC

or

CD 8 58:34  
TAPE REC



#### To change the recording source

You cannot change the selected source during the recording pause mode. To exit from the recording pause mode, press ■ (stop) button on the cassette deck unit.

 


#### To make the blank tape

Press AUX button to start recording without connecting nor playing back the external equipment.

### 4 Press Tape ◀▶ (playback) button for FM/AM broadcasts or ▶/|| (play/pause) button on the CD unit to start recording.

Tape direction indicator starts blinking slowly in the display window.



Tape direction indicator

- **To stop recording for a moment**, press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
- **To resume recording**, press ◀▶ (playback) button again. Recording continues from the point where it was stopped for a while.

### 5 Press ■ (stop) button on the cassette deck unit for FM/AM broadcasts recording, or ■ (stop) button on the CD unit for the CD recording.

Recording stops and REC indicator goes off in the display window.



**On CD recording, cassette deck unit will stop after leaving a non-recorded portion of 4 seconds.**

If you want to quit recording immediately, press ■ (stop) button on the cassette deck unit.

### 6 Press ▲ (open/close) button on the cassette deck unit to remove the tape.

- Pressing ▲ (open/close) button directly during recording, the cassette deck unit stops recording and opens the tape tray.



#### Dolby B NR

Press DOLBY B NR button before recording to reduce frequency response noise.

When the tape is played back later, also press the button with its lamp lit.

## Recording in Auto Reverse

### 1 Select one of the recording sources — FM/AM broadcasts, CD, or other external equipments.

### 2 Make sure the tape side for recording meets the tape direction indicator ▶ (forward).



reverse forward

- Each time to press ◀▶ (playback) button or TAPE ◀▶ (playback) button on the remote control, you can change the tape direction to be recorded onto.
  - ▶ : Good, records onto the forward side.
  - ◀ : No good, records onto the reverse side.



The recording in the auto reverse mode stops automatically after completing recording onto the ◀ (reverse) direction side.

Be sure to start recording from the ▶ (forward) direction side.

- When the auto reverse mode is set to off, recording stops after having recorded onto one side of the tape.

### 3 Press ◻ (auto reverse) button on the cassette deck unit to set the reverse mode on.

The auto reverse lamp lights orange on the front panel.

### 4 Press REC PAUSE button on the cassette deck unit.

### 5 Repeat the steps 4 to 5 of "Manual Recording onto a Tape" mentioned in the left column.



## Synchronized Recording from a CD

CD application on UX-G6 system can be recorded with a simple, one-touch operation.

- 1 **Place a recordable tape and a source CD into each tray.**
  - To record using Dolby B NR, press the DOLBY B NR button before recording so that its lamp near the button lights orange.
- 2 Press ►/|| (play/pause) button on the CD unit, then ■ (stop) button to set the system to CD operation mode.
- 3 Press REC MODE button behind the sliding panel. The display window shows information as follows:

```

SYNC REC
  >TAPE
  
```

- 4 Press SET button. Display window shows as follows:

```

SYNC REC
TAPE REC

then

CD 1  --- # ---
TAPE REC
  
```

UX-G6 starts playback on the CD unit as well as recording on the cassette deck unit simultaneously. You can get an entire copy of the source CD.

**To select a particular track or program,** use REC PAUSE button on the cassette deck unit. During SYNC REC mode, you cannot operate CD unit except ■ (stop) button.

- **To make recording pause temporarily,** press REC PAUSE button on the cassette deck unit.
- **To resume recording,** press ◀▶ (playback) button on the cassette deck unit.



### Using Program play for CD recording

To edit CD's tracks to be recorded, it is useful to set the desired tracks to be played back into a program in advance.

When CD playback finished, the CD unit first, then the cassette deck stops recording automatically.



**Cassette deck unit will stop after leaving a non-recorded portion of 4 seconds.**

If you want to quit recording immediately, press ■ (stop) button on the cassette deck unit.

- 5 Press ▲ (open/close) button on each unit to remove the CD and the tape.

## Recording from the External Equipment

You can record audio sources played-back on the external equipment onto a tape manually. First of all, make sure to connect the external equipment properly (see also page 9).

 
### Recording an external audio source manually

- 1 Press AUX button to show "AUX" in the display window. The external audio source is selected.
- 2 Repeat the steps 2 and 3 on page 22 to prepare a tape to record. Information appears as follows:

```

AUX
TAPE REC
  
```


- 3 Press ◀▶ (playback) button on the cassette deck unit or TAPE ◀▶ (playback) button on the remote control to start recording. Tape direction indicator starts blinking slowly in the display window.



Tape direction indicator

- 4 **Start playing back the external equipment.**
  - **To stop recording for a moment,** press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
  - **To resume recording,** press ◀▶ (playback) button again.
  - **To end the recording,** press ■ (stop) button on the cassette deck unit. Recording stops and REC indicator goes off in the display window.

# Using the Timers

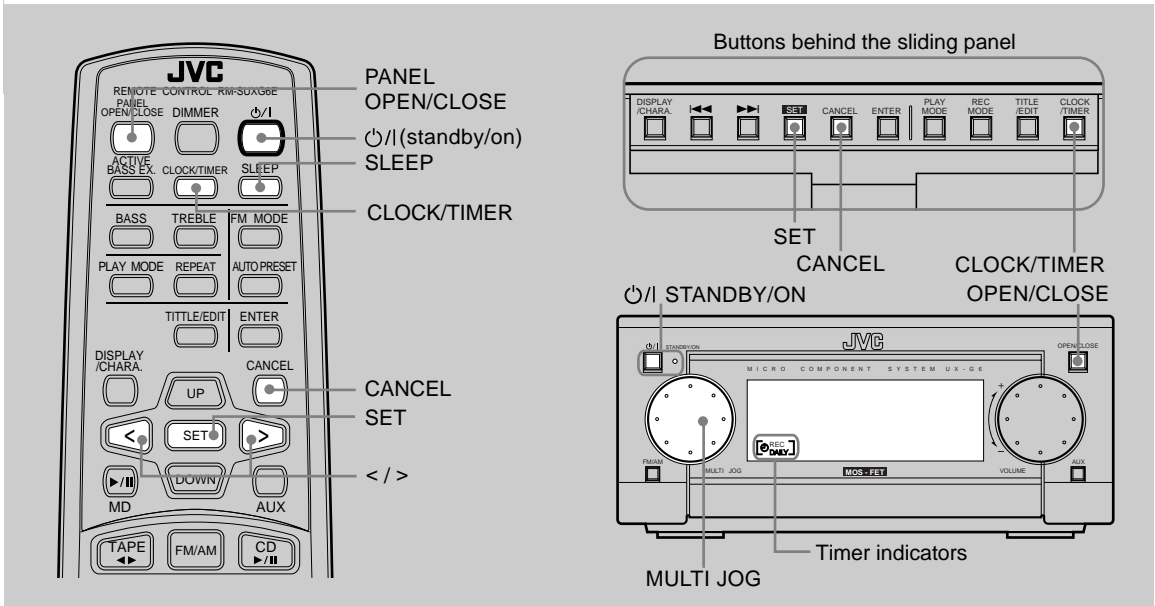

On UX-G6 system, three timer features are available — Recording Timer, Daily Timer, and Sleep Timer. Before using these timers, you need to set the clock built in the system (see page 10).

## Using Recording Timer

With Recording Timer, you can make a tape of a radio broadcast automatically.

- You can set Recording Timer whether the system is turned on or off.
- To correct a mis-entry any time during the setting process, press CANCEL button.

### How Recording Timer actually works

The system automatically turns on, tunes into the specified station, turns off the volume, and starts recording when the timer-on time comes.

Then, when the timer-off time comes, the system automatically turns off (standby).

 
The timer settings remain stored in memory until you reset them or unplug the AC power cord.

- 1 Press CLOCK/TIMER button repeatedly until "REC TIMER" and its timer-on time appear in the display window.**

You can select the timer-on/off time, a tuner preset channel to record, and recording media.

- If MD recorder XM-G6 (not supplied) connected, you can select MD as recording media (see page 7).

- Each time you press the button, the timer mode changes as follows:



- 2 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-on time, then press SET button.**

REC TIMER  
ON 21:30

- 3 Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-on time, then press SET button.**

REC TIMER  
ON 21:30

- 4 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-off time, then press SET button.**

REC TIMER  
OFF 22:30

**5** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-off time, then press SET button.



**6** Rotate MULTI JOG dial (</> button on the remote control also available) to select either “TUNER FM” or “TUNER AM,” then press SET button.

**7** Rotate MULTI JOG dial (</> button on the remote control also available) to select a preset channel, then press SET button.



“TAPE REC” follows in the display window as selected recording media, unless any MD recorder connected.

- If XM-G6 MD recorder connected, you can select either a tape or an MD as recording media.

**8** Press SET button to select recording media, and turn off the system.


**After completing the settings...**

The REC timer indicator lights and the setting items appear one after another in the display window. Thus the Recording Timer is ready for unattended recording.



**After a timer recording is complete...**

Set the volume to an appropriate listening level.



**If you press a certain button while Recording Timer is operating**  
Recording will stop.

**To use the same Recording Timer settings repeatedly**

Once you have set the recording timer, it remains stored in memory until you change it.

To activate the recording timer with the previous settings, follow the procedure below:

**1** Press CLOCK/TIMER button repeatedly until “REC TIMER” appears in the display window.



**2** Press SET button to call the previous settings for next timer recording.

The REC timer indicator lights, and the setting items appear one after another in the display window.

- To erase the recording timer, press CANCEL button in this step.

**Using Daily Timer**

With Daily Timer, you can wake up on your favorite music or radio program.

- You can set the daily timer whether the system is turned on or off.

 
**How Daily Timer actually works**

The system automatically turns on, and starts playing the specified source when the timer-on time comes. Then, when the timer-off time comes, the system automatically turns off (standby).

The timer settings remain stored in memory until you reset them or disconnect the AC power cord.

**1** Press CLOCK/TIMER button repeatedly until “DAILY TIMER” and its timer-on time appear.

- Each time you press the button, the timer mode changes as follows:




**2** Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-on time, then press SET button.



**3** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-on time, then press SET button.



 
**4** Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-off time, then press SET button.



- 5** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-off time, then press SET button.

DAILY TIMER  
OFF 7:00

- 6** Rotate MULTI JOG dial (</> button on the remote control also available) to select the source, then press SET button.

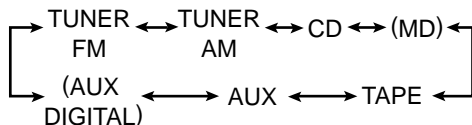

TUNER FM: Tunes into a preset FM station. Go to step 7.

TUNER AM: Tunes into a preset AM station. Go to step 7.

CD: Plays a CD. Prepare a CD, then go to step 7.

(MD): Plays a MD, only when XM-G6 MD recorder connected. Then go to step 7.

TAPE: Plays a tape. Prepare a tape, then go to step 8.

AUX\*: Selects "AUX" as the source. Make the external equipment ready for playback.

(AUX DIGITAL): Selects an external digital audio equipment as the source if connected.

\* To use the external equipment with the Daily Timer, it also has the timer function.

- 7** If you have selected FM/AM as the source in the above step, select a preset channel.

- 1) Rotate MULTI JOG dial (</> button on the remote control also available) to select a preset channel.
- 2) Press SET button.

FM 87.50MHz  
P 02

If you have selected CD as the source in the above step, select a track.

- 1) Rotate MULTI JOG dial (</> button on the remote control also available) to select a track.
- 2) Press SET button.

CD 1

- 8** Rotate MULTI JOG dial (</> button on the remote control also available) to adjust the volume level, then press SET button.

- You can adjust the volume within the range of "0" to "50." If you select "--," the volume is set to the previous level when the unit is turned off.

VOLUME -----

After completing the settings...

The daily timer indicator lights, and the setting items appear one after another in the display window.

Turns off the unit (standby) if you have set the daily timer with the unit turned on.



**If you press a certain button while Daily Timer is operating**

The unit will not turn off automatically.

**To use the same Daily Timer settings repeatedly**

Once you have set Daily Timer, it remains stored in memory until you change it.

To activate the daily timer with the previous settings, follow the procedure below:

- 1** Press CLOCK/TIMER button repeatedly until "DAILY TIMER" appears in the display window.

DAILY TIMER

- 2** Press SET button to activate Daily timer.

The daily timer indicator lights, and the setting items appear one after another in the display window.

- To deactivate the daily timer, press CANCEL button in this step.

## Using Sleep Timer

With Sleep Timer, you can fall asleep to your favorite music or radio program.

 
### How Sleep Timer actually works

The system automatically turns off after the selected time length passes while playing any source.

**On the remote control only:**

#### 1 Press SLEEP button on the remote control repeatedly to select the sleep timer.

- Each time you press the button, the time length changes as follows:



#### 2 Wait for about 5 seconds after selecting the time length.

When the sleep timer setting is completed, the display window dims and just shows the remaining time until the shut-off time minute by minute like "SLEEP 30" then "SLEEP 29".


- To change the shut-off time**, press SLEEP button repeatedly until the desired time length appears.
- To cancel the setting**, press SLEEP button repeatedly until the sleep timer indication disappears.

## Timer Priority


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are the priorities for each timer.

- Recording Timer has priority over Daily Timer and Sleep Timer.**

If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

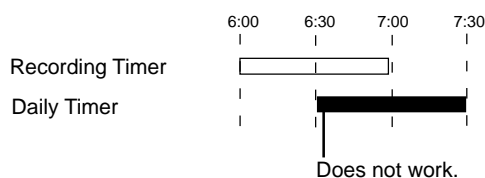


If Recording Timer is set to come on while Sleep Timer is operating, Sleep Timer will be canceled several seconds before Recording Timer comes on.

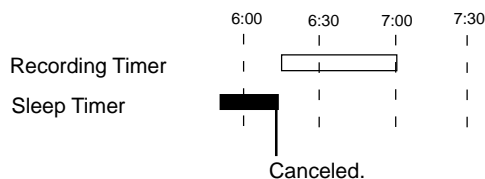

- Sleep Timer has priority over Daily Timer.**

If Daily Timer is set to come on while Sleep Timer is operating, Daily Timer will not come on at all.

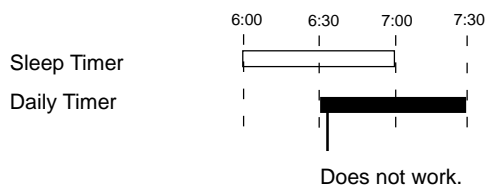

Therefore, the equation is like this (high > low):

**Recording Timer > Sleep Timer > Daily Timer**

# Maintenance and Additional Information

## General Notes

 
 
In general, you will have the best performance by keeping your CDs, cassette tapes and the mechanism clean.

- Store CDs and cassette tapes in their cases, and keep them in cabinets or on shelves.
- Keep the CD disc tray, and the cassette tapes tray closed when not in use.


## Handling CDs



- Only CDs bearing this mark can be used with this system. However, continued use of irregular shape CDs (e.g. heart shape, octagonal) can damage the system.



- Remove the CD from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the CD.
- Put the CD back in its case after use to prevent warping.

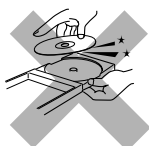

- Be careful not to scratch the surface of the CD when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



- To clean the CD  
Wipe the CD with a soft cloth in a straight line from center to edge.




DO NOT use any solvent — such as conventional record cleaner, spray, thinner, or benzine — to clean the CD.

## Handling Cassette Tapes

### Cautions regarding handling

- Do not touch the surface of the tape or pull the tape out of the cassette.
- Tape spooled loosely around the hubs is likely to jam in the pinch rollers and capstans. Before loading the tape into the cassette tray, take up the slack in the tape as shown below.

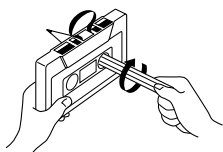


### Tape storage

- Place tapes in their cases for storage.
- Avoid storing tapes on top of TVs or speakers, in sunlight or places of high temperature, or in humid or dusty areas.

### To prevent accidental erasure


- Cassette tapes have tabs to prevent accidental erasure.
- If you remove the tabs after making a recording, the cassette deck cannot be set to record when that tape is loaded. Remove the tabs so that valuable recordings will not be accidentally erased.

Recording (erasure) is not possible when the tabs are removed.

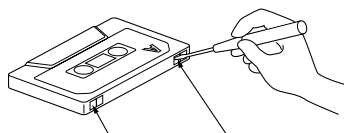

For reverse side (B) For front side (A)

- To make another recording on a tape whose tabs have been removed, cover the tab holes with adhesive tape.

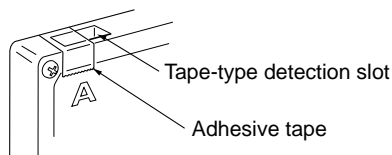

**DO NOT cover the tape-type detection slots.**

## Types of Cassette Tapes

This cassette deck unit incorporates an Automatic Tape Detection function. This mechanism uses the tape-type detection holes to distinguish which type of tape was inserted, and sets the bias and equalizer to the optimum settings for that tape automatically.

 
The following types of tapes may be used with this cassette deck unit.

### Normal tape

#### TYPE I

BIAS: NORMAL

EQ: 120 $\mu$ s




Normal (No detection slots) Tab  
(to prevent accidental erasure)

### High position (CrO<sub>2</sub>) tape
 
#### TYPE II

BIAS: HIGH

EQ: 70 $\mu$ s




High position  
detection slots

### Metal tape (only for playback)
 
#### TYPE IV

BIAS: METAL

EQ: 70 $\mu$ s



Metal detection slots



- Certain early period Metal and High position (CrO<sub>2</sub>) tapes may not have tape-type detection slots. The cassette deck unit cannot obtain the correct characteristics for these tapes.
- Ferromagnetic (FeCr) TYPE III tapes cannot be used with this cassette deck unit.

# Troubleshooting

If you are having a problem with your system, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the units has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
No sound is heard.	<ul style="list-style-type: none"> <li>• Connections are incorrect, or loose.</li> <li>• Headphones are connected.</li> <li>• Volume level is set to “–”.</li> </ul>	<ul style="list-style-type: none"> <li>• Check all connections and make corrections (see pages 6 – 9).</li> <li>• Disconnect the headphones (see page 12).</li> <li>• Adjust the volume again (see page 12).</li> </ul>
Poor radio reception.	<ul style="list-style-type: none"> <li>• The antenna is not connected correctly.</li> <li>• The AM loop antenna is too close to the units.</li> <li>• The FM antenna is not properly extended and positioned.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect the antenna securely.</li> <li>• Change the position and direction of the AM loop antenna.</li> <li>• Extend FM antenna to the best reception position (see page 7).</li> </ul>
Unable to record onto a tape.	<ul style="list-style-type: none"> <li>• You are using a tape without a protect tab.</li> <li>• Tape-type detection slots are covered by foreign matters.</li> </ul>	<ul style="list-style-type: none"> <li>• Cover the hole with adhesive tape (see page 30).</li> <li>• Remove the foreign matters.</li> </ul>
The CD skips.	<ul style="list-style-type: none"> <li>• The CD is dirty or scratched.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean or replace the CD (see page 29).</li> </ul>
Unable to operate using the remote control.	<ul style="list-style-type: none"> <li>• The path between the remote control and the remote sensor on the front panel is blocked.</li> <li>• The batteries have lost their charge.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the obstruction.</li> <li>• Replace the batteries (see page 6).</li> </ul>
Loaded CD and tape cannot be ejected.	<ul style="list-style-type: none"> <li>• The main AC power cord is not plugged in.</li> <li>• The system is under the recording operations.</li> </ul>	<ul style="list-style-type: none"> <li>• Plug in the AC power plug.</li> <li>• Stop the recording if required (see pages 23).</li> </ul>
The CD does not play.	<ul style="list-style-type: none"> <li>• The CD is upside down.</li> </ul>	<ul style="list-style-type: none"> <li>• Put in the CD with the label side up.</li> </ul>
Operations are disabled.	<ul style="list-style-type: none"> <li>• The built-in microprocessor has malfunctioned due to external electrical interference.</li> </ul>	<ul style="list-style-type: none"> <li>• Unplug the system then plug it back in.</li> </ul>



# Specifications

## Stereo Amplifier AX-UXG6

Output power	<b>48 W (24 W + 24 W) at 6 Ω (Max.)</b>
Load impedance:	6 Ω (6 Ω to 16 Ω allowance)
Audio output level/Impedance (at 1 kHz):	Sub Woofer 800 mV/440 Ω
Power requirement:	[A] AC 110 V – 120 V/220 V – 240 V ~, [B] AC 115 V/230 V ~ (adjustable with the voltage selector), 50 Hz/60 Hz
Power consumption:	[A] 59 W (at operation) [B] 54 W (at operation) 2.0 W (on standby: with Dimmer)
Dimensions (approx.):	182 mm x 81 mm x 313 mm (W/H/D)
Mass (approx.):	3.8 kg

## Compact Disc/Tuner XT-UXG6

Audio input sensitivity/Impedance (at 1 kHz):	AUX: 400 mV/47 kΩ
[CD section]	
Digital output:	OPTICAL DIGITAL OUT
Wow and flutter:	Immeasurable
[Tuner section]	
FM tuning range:	87.50 MHz – 108.00 MHz
AM tuning range:	531 kHz – 1,710 kHz (at 9 kHz channel spacing) 530 kHz – 1,710 kHz (at 10 kHz channel spacing)
Dimensions (approx.):	181 mm x 81 mm x 313 mm (W/H/D)
Mass (approx.):	1.9 kg

## Cassette Deck TD-UXG6

Frequency response :	
Normal	30 Hz – 15,000 Hz
High position	30 Hz – 16,000 Hz
Wow and flutter:	0.1 % WRMS
Dimensions (approx.):	181 mm x 81 mm x 304 mm (W/H/D)
Mass (approx.):	1.9 kg

## Speaker System SP-UXG6

Type:	2-way Bass-Reflex Type
Speaker unit:	Woofer 11.5 cm Cone x 1 Tweeter 3.0 cm Balanced Dome x 1
Impedance:	6 Ω
Frequency range:	40 Hz – 20,000 Hz
Sound Pressure Level:	85.5 dB/W•m
Dimensions (approx.):	157 mm x 295 mm x 232 mm (W/H/D)
Mass (approx.):	3.3 kg each

## Supplied Accessories

See page 6.


Design and specifications are subject to change without notice.

US and foreign patents licensed from Dolby Laboratories Licensing Corporation.

## Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia and U.K.)

Instrucción sobre la línea de la red (CA) (no aplicable para Europa, EE.UU., Canadá, Australia, ni el Reino Unido)

主 (AC) 电源线路说明 (不适用于欧洲、美国、加拿大、澳洲及英国型号)

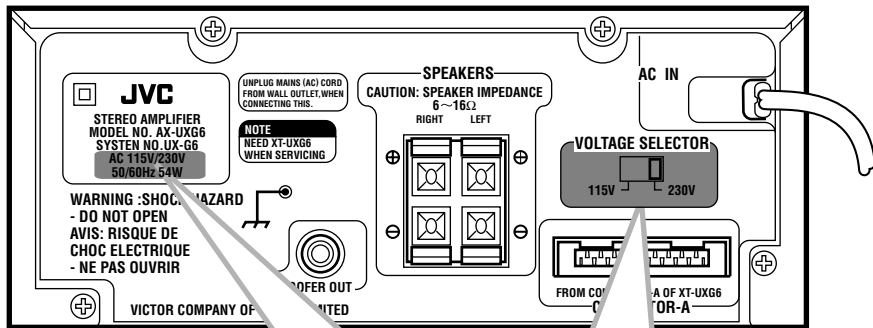

### CAUTION for mains (AC) line

BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/ electric shock.


### PRECAUCIÓN para la línea de la red (CA)

ANTES DE ENCHUFAR EL EQUIPO, compruebe si la tensión de la línea de la red (CA) corresponde con la posición del selector de tensión situado en la parte exterior del equipo, y si es diferente, reajuste el selector de tensión para evitar el riesgo de incendios/descargas eléctricas.


### 有关主 (AC) 电源线路的重要事项

接插电源以前，务请检查当地的主 (AC) 电源线路电压是否和位于本机外面的电压选择开关设定的位置一致。如果不一致，即重新设定电压选择开关使符合当地电压，以免损坏机器或引起火灾/触电的危险。

[A]

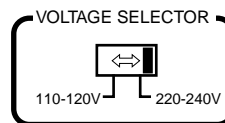

[B]

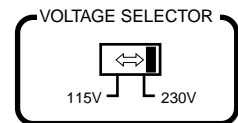

### Notes on [B] type voltage selector

115 V position of the selector covers from 110 V to 120 V in service, and 230 V position covers from 220 V to 240 V in service.


### Notas sobre el selector de tensión tipo [B]

La posición de 115v del selector cubre desde 110 V hasta 120 V en funcionamiento, y la posición de 230 V cubra desde 220 V hasta 240 V en funcionamiento.

### 使用[B]型选择掣的注意事项

此型电压选择掣定到115V的位置可以保护从110V到120V的电压，而设定到230V位置可以保护从220V到240V的电压。

# JVC

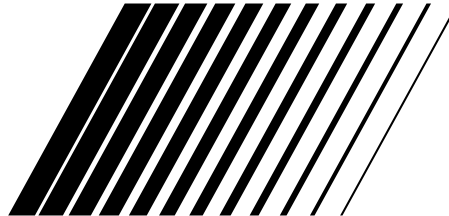

## MICRO COMPONENT SYSTEM

UX-G6R

Consists of AX-UXG6, XT-UXG6R, TD-UXG6,  
and SP-UXG6.

STEREO AMPLIFIER

AX-UXG6

COMPACT DISC/TUNER


XT-UXG6R

CASSETTE DECK

TD-UXG6

SPEAKER SYSTEM

SP-UXG6

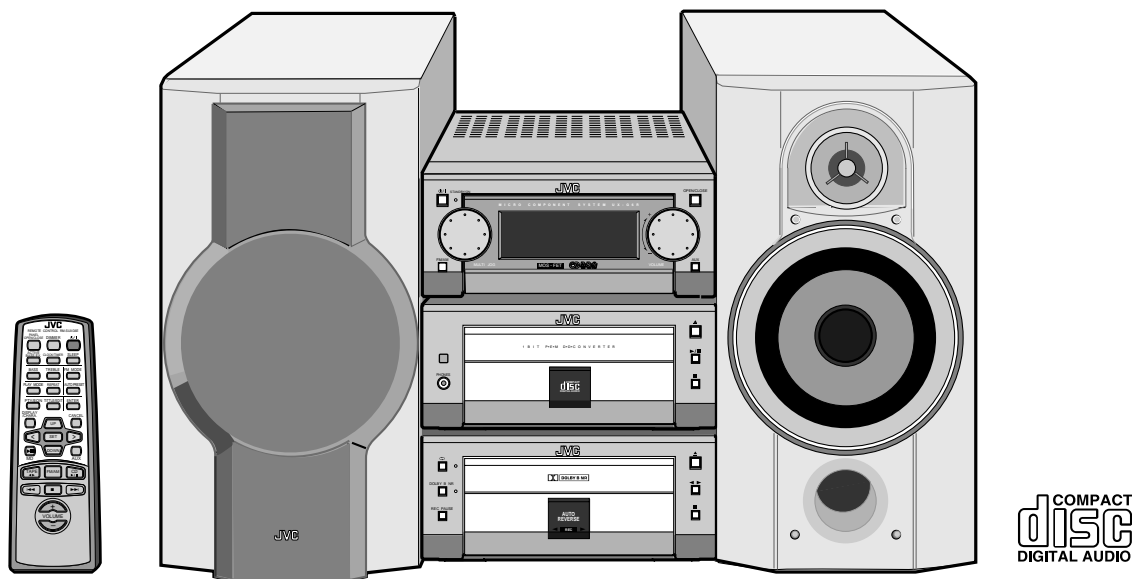

 **R-D-SEON**

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_


LVT0376-001B

[B]

# Warnings, Cautions and Others

## Caution — switch!

 Disconnect the mains plug to shut the power off completely (the STANDBY/ON lamp goes off).

The  switch in any position does not disconnect the mains line.


- When the unit is on standby, the STANDBY/ON lamp lights red.
- When the unit is turned on, the STANDBY/ON lamp lights green.

The power can be remote controlled.

## CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

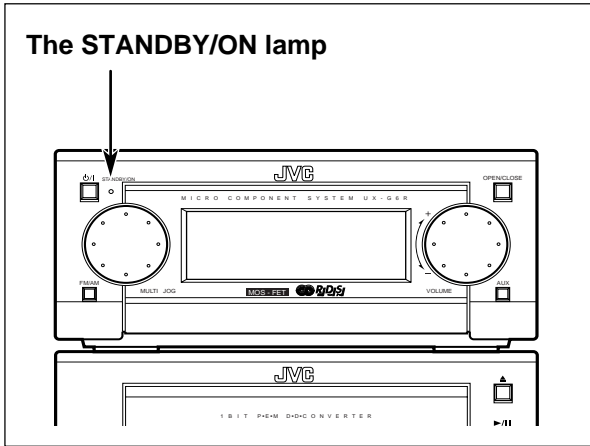

## Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

### 1 Front:


No obstructions and open spacing.

### 2 Sides/ Top/ Back:

No obstructions should be placed in the areas shown by the dimensions below.

### 3 Bottom:

Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

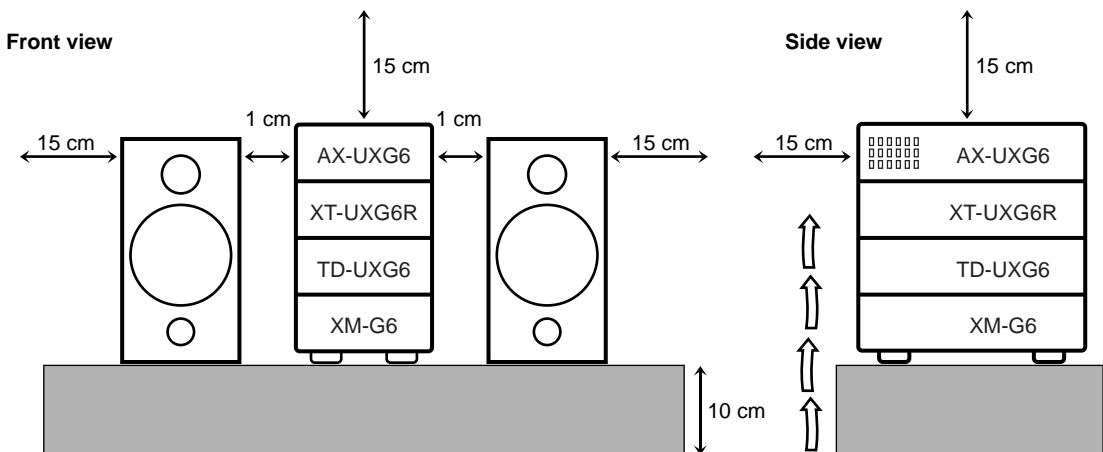


## IMPORTANT FOR LASER PRODUCTS

---

### REPRODUCTION OF LABELS

① CLASSIFICATION LABEL, PLACED ON EXTERIOR SURFACE

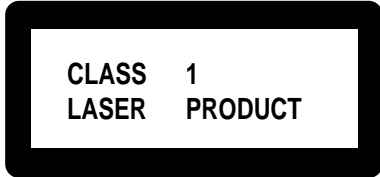

② WARNING LABEL, PLACED INSIDE THE UNIT

**DANGER:** Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

**WARNING:** Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)

**ADVARSEL:** Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling (d)

**VARO:** Avattaessa ja suo-  
jalukitus ohitettaessa olet  
alttiina näkymättömälle  
lasersäteilylle. Älä katso  
säteeseen. (f)

- 
1. CLASS 1 LASER PRODUCT
  2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
  3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

# Introduction

**We would like to thank you for purchasing one of our JVC products. Before operating this micro component system, read this manual carefully and thoroughly to obtain the best possible performance from your system, and retain this manual for future reference.**

## About This Manual

This manual is organized as follows:

- The manual mainly explains operations using the buttons and controls on the units. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the units. If operation using the remote control is different from that using each unit, it is then explained.
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the system, setting the volume, changing the sound effects, and others, which are explained in the section “Basic Settings” and “Common Operations” on pages 10 to 13.
- The following marks are used in this manual:



Gives you warnings and cautions to prevent from a damage or risk of fire/ electric shock.

Also gives you information which is not good for obtaining the best possible performance from the units.



Gives you information and hints you had better know.

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold — between 5°C (41°F) and 35°C (95°F).
- Install the units in a location with adequate ventilation to prevent internal heat buildup in the units.
- Leave sufficient distance between the units and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the units in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

### Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lens inside the units in the following cases:

- After starting heating in the room
- In a damp room
- If the units are brought directly from a cold to a warm place

Should this occur, the system may malfunction. In this case, leave the units turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

### Others

- Should any metallic object or liquid fall into a unit, unplug the units and consult your dealer before operating any further.
- If you are not going to operate the units for an extended period of time, unplug the AC power cord from the wall outlet.



DO NOT disassemble the units since there are no user serviceable parts inside.

If anything goes wrong, unplug the AC power cord and consult your dealer.

# Contents

---


<b>Introduction .....</b>	<b>1</b>	<b>Playing Back a Tape .....</b>	<b>24</b>
About This Manual .....	1	Playing Back a Tape — Basic Operation .....	24
Precautions .....	1	Fast-Winding a Tape .....	25
<b>Contents .....</b>	<b>2</b>	Searching and Skipping to Each Program — Music Scan .....	25
<b>Location of the Buttons and Controls .....</b>	<b>3</b>	Playing Back Dolby-Recorded Tape .....	25
Front Panels .....	4	<b>Recording onto a Tape .....</b>	<b>26</b>
Remote Control .....	5	Manual Recording onto a Tape .....	26
<b>Getting Started .....</b>	<b>6</b>	Recording in Auto Reverse .....	27
Unpacking .....	6	Synchronized Recording from a CD .....	28
Putting the Batteries into the Remote Control .....	6	Recording from the external equipment .....	28
Connecting the System Control Cables and the External Wire .....	6	<b>Using the Timers .....</b>	<b>29</b>
Connecting MD Recorder XM-G6 .....	7	Using Recording Timer .....	29
Connecting Sub Woofer System .....	7	Using Daily Timer .....	30
Connecting Antennas .....	7	Using Sleep Timer .....	32
Connecting Speakers .....	8	Timer Priority .....	32
Connecting Other Equipments .....	9	<b>Maintenance and Additional Information .....</b>	<b>33</b>
<b>Basic Settings .....</b>	<b>10</b>	Handling CDs .....	33
Setting the Clock .....	10	Handling Cassette Tapes .....	34
Setting the Display Illumination (Dimmer) .....	10	Types of Cassette Tapes .....	34
<b>Common Operations .....</b>	<b>11</b>	<b>Troubleshooting .....</b>	<b>35</b>
Turning On the Power and Selecting the Sources .....	11	<b>Specifications .....</b>	<b>36</b>
Adjusting the Volume .....	11		
Reinforcing the Bass Sound .....	12		
Adjusting Bass and Treble Sounds .....	12		
Operating the Sliding Panel .....	13		
Listening to the External Equipment .....	13		
<b>Listening to FM and AM Broadcasts .....</b>	<b>14</b>		
Tuning in a Station .....	14		
Presetting Stations .....	15		
<b>Receiving FM Stations with RDS .....</b>	<b>16</b>		
Changing the RDS Information .....	16		
Searching for Programs by PTY Codes (PTY Search) .....	17		
Switching to a Program Type Temporarily .....	17		
<b>Playing Back a CD .....</b>	<b>20</b>		
Playing Back the Entire Disc — Normal Play .....	20		
Searching and Skipping Tracks .....	21		
Programing the Playing Order of the Tracks — Program Play .....	21		
Playing at Random — Random Play .....	23		
Repeating Tracks — Repeat Play .....	23		

# Location of the Buttons and Controls


Become familiar with the buttons and controls on the units.

## Front Panels


AX-UXG6  
Stereo Amplifier

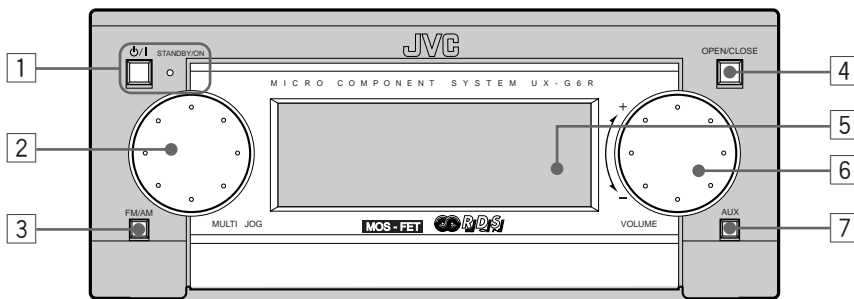


XT-UXG6R  
Compact Disc  
/Tuner

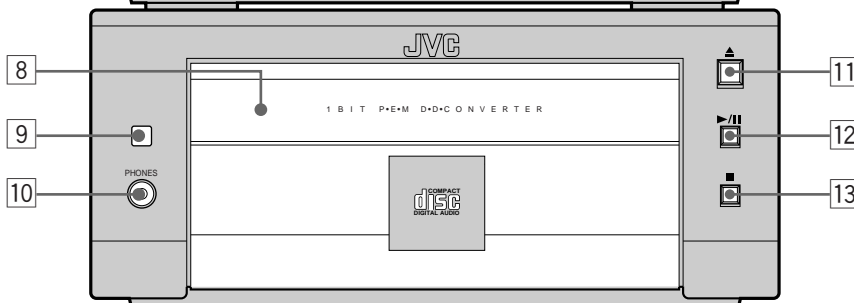

TD-UXG6  
Cassette Deck

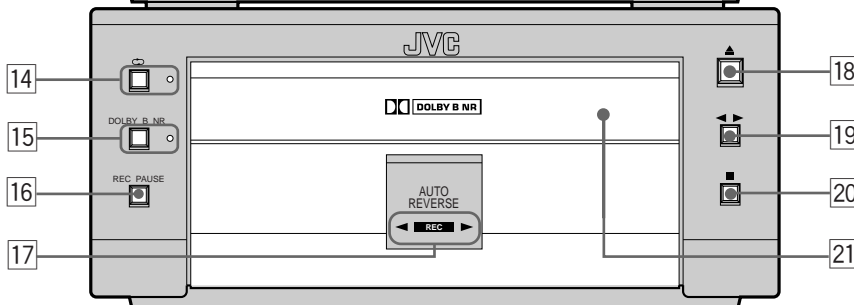


## Display window

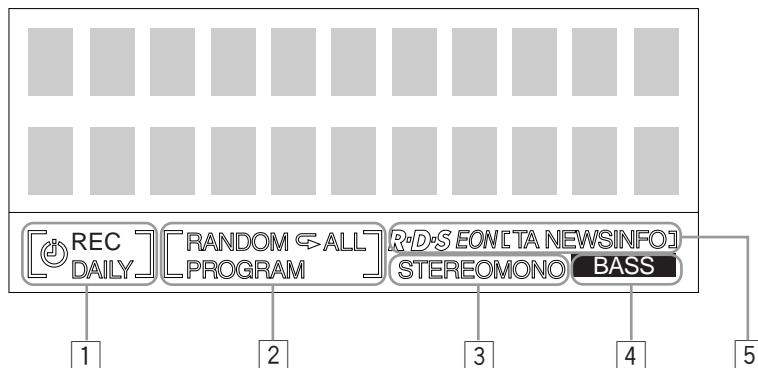






## Front Panels

 





### AX-UXG6 Stereo Amplifier


- 1  button and STANDBY/ON lamp (11)\*
- 2 MULTI JOG dial
- 3 FM/AM button (14)\*
- 4 OPEN/CLOSE button (13)\*
- 5 Display window
- 6 VOLUME dial (11)
- 7 AUX button (13, 28)\*



### XT-UXG6R Compact Disc/Tuner

- 8 CD tray
- 9 Remote sensor (5)
- 10 PHONES jack (12)
- 11  (open/close) button for CD tray (20)\*
- 12  (play/pause) button (21)\*
- 13  (stop) button (21)


### TD-UXG6 Cassette Deck

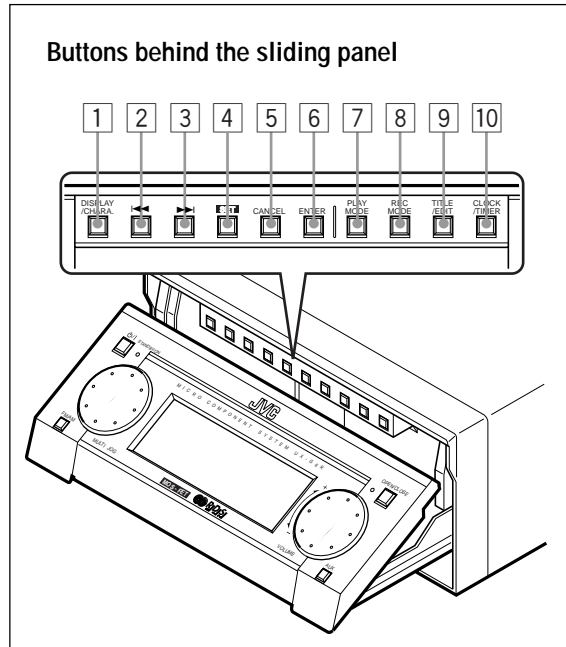- 14  (auto-reverse) button and lamp (24, 27)
- 15 DOLBY B NR button and lamp (25, 27)
- 16 REC PAUSE button (26)
- 17 Tape operations indicators (24, 26)
  - Tape direction ( / ) and REC indicators
- 18  (open/close) button for Tape tray (24)\*
- 19  (playback) button (24)\*
- 20  (stop) button (25)
- 21 Tape tray








- 1 DISPLAY/CHARA. button (16)
- 2  button (14, 21, 22, 25)
- 3  button (14, 21, 22, 25)
- 4 SET button (22, 29)
- 5 CANCEL button (10, 22, 29)
- 6 ENTER button \*\*
- 7 PLAY MODE button (21)
- 8 REC MODE button (28)
- 9 TITLE/EDIT button \*\*
- 10 CLOCK/TIMER button (10, 29)

\*\* Used only with MiniDisc recorder XM-G6 (not supplied).

 **To press the buttons suffixed with \* mark also turns on the system.**

### Display window



- 1 Timer mode indicators
  -  REC (recording timer) and  DAILY (daily timer) indicators
- 2 CD playback mode indicators
  - PROGRAM, RANDOM, , and  ALL (repeat all) mode indicators
- 3 FM mode indicators
  - STEREO and MONO indicators
- 4 BASS indicator
- 5 RDS mode indicators
  - RDS, EON, and TA/NEWS/INFO indicators

 • DO NOT operate any button and control until the system setup is completed.

• DO NOT operate the sliding panel by hands, otherwise it will cause serious damages on the sliding mechanism (see page 13).

Become familiar with the buttons on the remote control.

## Remote Control

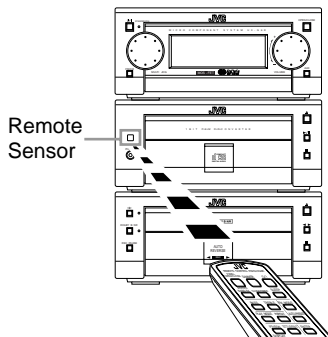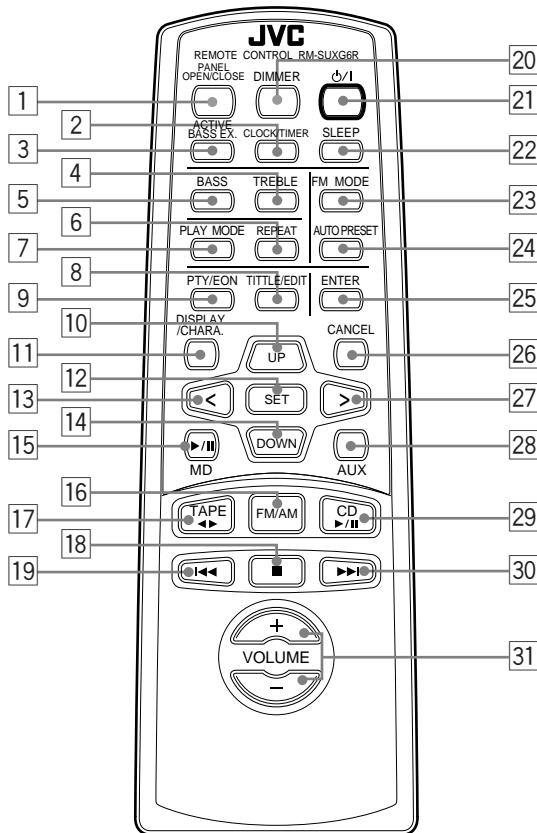

When using the remote control, point it at the remote sensor on the front panel.

## Remote Control

- 1 PANEL OPEN/CLOSE button (13)
- 2 CLOCK/TIMER button (10, 29)
- 3 ACTIVE BASS EX. (extension) button (12)
- 4 TREBLE button (12)
- 5 BASS button (12)
- 6 REPEAT button (23)
- 7 PLAY MODE button (21)
- 8 TITLE/EDIT button \*
- 9 PTY/EON button (17)
- 10 UP button (12, 14, 21)
- 11 DISPLAY/CHARA. button (16)
- 12 SET button (22, 29)
- 13 < (left cursor) button (10, 21, 29)
- 14 DOWN button (12, 14, 21)
- 15 MD ►/|| (play/pause) button \*
- 16 FM/AM button (14)
- 17 TAPE ◀▶ (playback) button (24)
- 18 ■ (stop) button (21, 25)
- 19 ◀◀ button (14, 21, 22, 25)
- 20 DIMMER button (10)
- 21 ◻/I (standby/on) button (11)
- 22 SLEEP button (32)
- 23 FM MODE button (15)
- 24 AUTO PRESET button (15)
- 25 ENTER button \*
- 26 CANCEL button (10, 22, 29)
- 27 > (right cursor) button (10, 21, 29)
- 28 AUX button (13, 28)
- 29 CD ►/|| (play/pause) button (21)
- 30 ►►I button (14, 21, 22, 25)
- 31 VOLUME +/- button (11)

\* Used only with MiniDisc recorder XM-G6 (not supplied).



### To operate the system correctly using the remote control

Before using these buttons:

**For Tuner operations**, press FM/AM button on the remote control first.

**For CD operations**, press CD ►/|| (play/pause) button on the remote control first.

**For Tape operations**, press TAPE ◀▶ (playback) button on the remote control first.

# Getting Started

## Unpacking

After unpacking, check to be sure that you have all the following items.

The number in the parentheses indicates the quantity of the pieces supplied.


- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)
- Speaker cords (2)
- External wire (1)

If any is missing, consult your dealer immediately.

## Putting the Batteries into the Remote Control

Insert the batteries — R6P (SUM-3)/AA (15F) — into the remote control, by matching the polarity (+ and -) on the batteries with the + and - markings on the battery compartment.

When the remote control can no longer operate the units, replace both batteries at the same time.

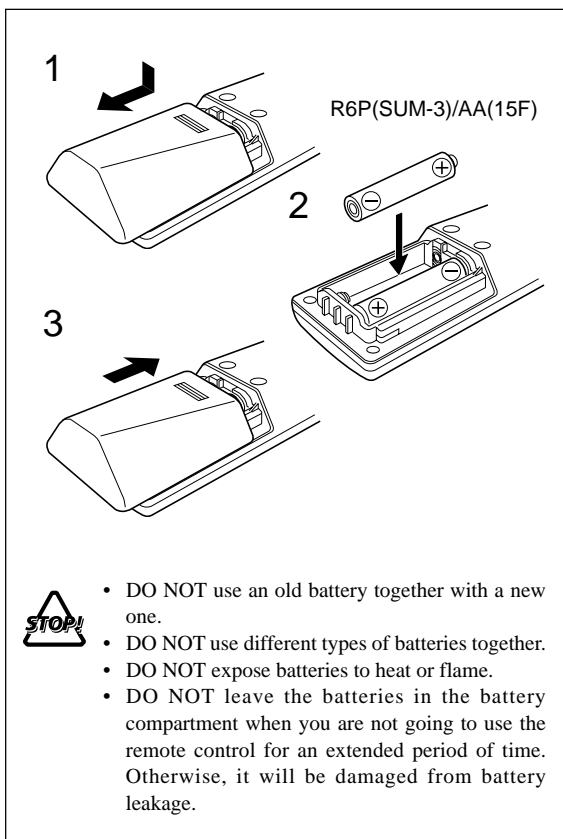


## Connecting the System Control Cables and the External Wire


UX-G6R micro component system consists of three units, AX-UXG6 Stereo Amplifier, XT-UXG6R Compact Disc/Tuner, TD-UXG6 Cassette Deck, and SP-UXG6 Speaker System.

You can easily connect these units using the system control cables equipped on the rear panel of the units.

- **To prevent malfunction**, connect the external wire as illustrated.

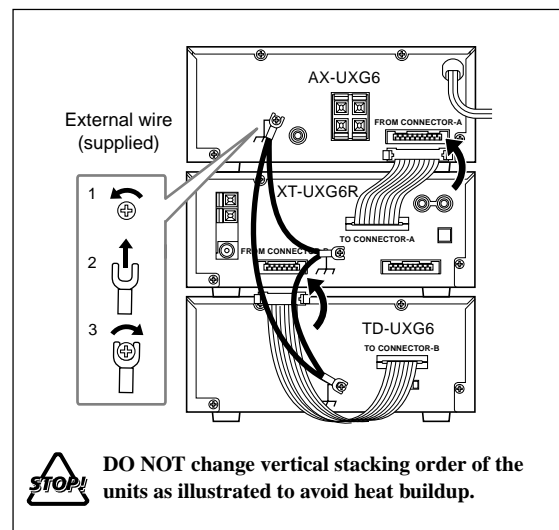

- **To connect the cables**, press the middle of the connector body until it clicks into the connector on the rear panel.
- **To disconnect**, if needed, pull the connector out pushing both sides of the connector body. Never pull out the cables themselves.

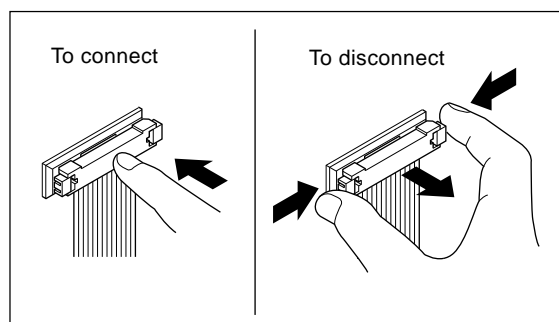


### When connecting the system control cables to the connectors

Make sure to connect the cable to the connector having the same name such as "FROM CONNECTOR-A" and "TO CONNECTOR-A."


## Connecting MD Recorder XM-G6

You can also connect the MD recorder XM-G6 (not supplied), specifically designed for UX-G6R. This unit will complete UX-G6R micro component system. When you connect and use this unit, refer to the Instructions supplied with it for details.

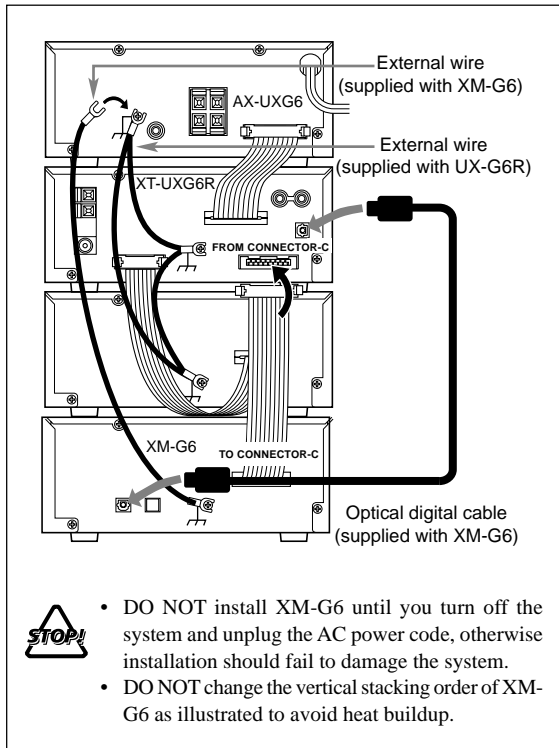

## Connecting Antennas

### Supplied FM antenna

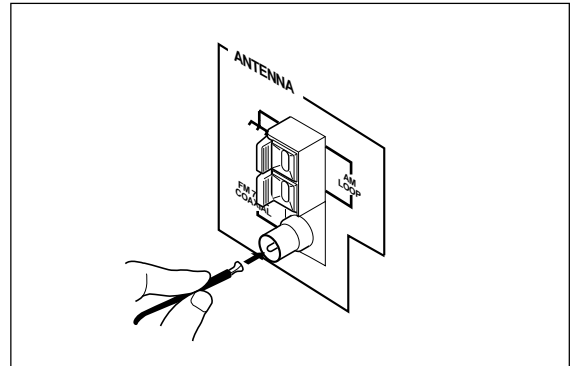

- 1 Attach the FM antenna to the FM 75 Ω COAXIAL terminal on the rear panel of XT-UXG6R.
- 2 Extend the FM antenna.
- 3 Fasten it up in the position which gives you the best reception.




#### About the supplied FM antenna

The FM antenna supplied with this unit can only be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.


### To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

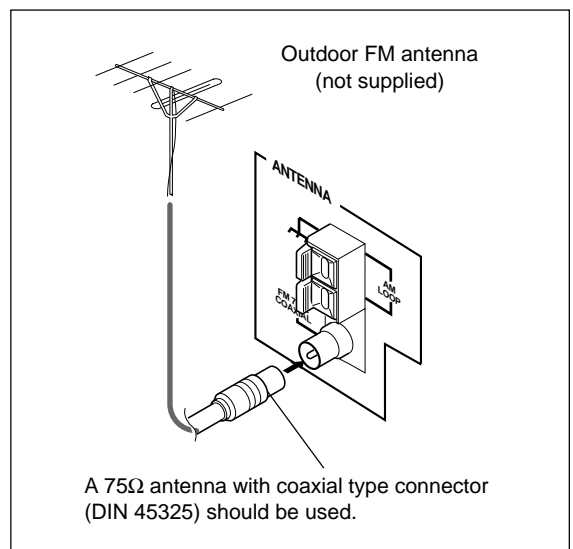


## Connecting Sub Woofer System

When using JVC external sub woofer system, connect audio cable between AX-UXG6's SUB WOOFER OUT jack and the input of your sub woofer system.

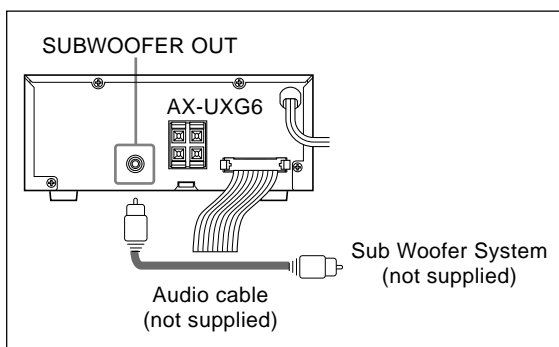

## AM antenna

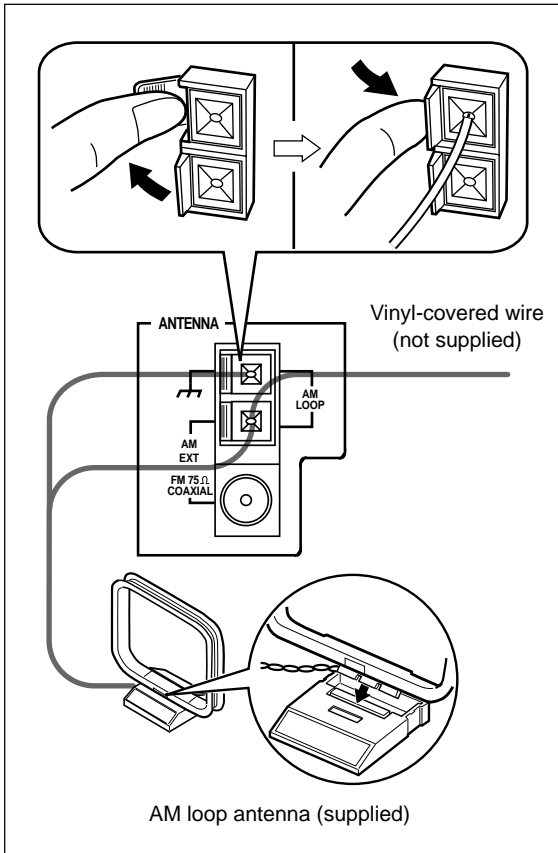

- 1** Connect the AM loop antenna to the AM LOOP terminals as illustrated.
- 2** Turn the AM loop antenna until you have the best reception.

### To connect an external AM antenna

When reception is poor, connect a single vinyl-covered wire to the AM EXT terminal and extend it horizontally. (The AM loop antenna must remain connected.)




#### For better reception of both FM and AM

- Make sure the antenna conductors do not touch any other terminals and connecting cables.
- Keep the antennas away from metallic parts of the units, connecting cables, and the AC power cord.

## Connecting Speakers

You can connect the speakers using the speaker cords.

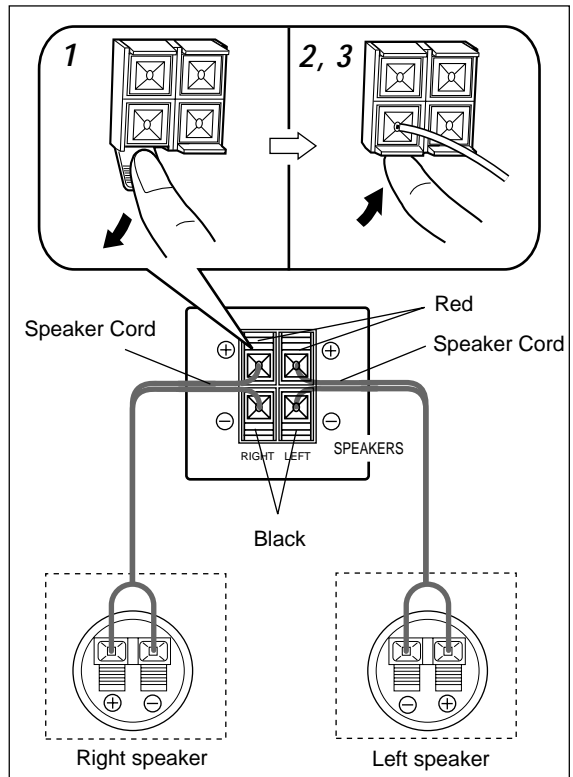

- 1** Open the speaker terminal.
- 2** Insert the end of the speaker cord to the terminal. Match the polarity of the speaker terminals: Red (+) to red (+) and black (-) to black (-).
- 3** Close the speaker terminal on the rear of the unit.



#### When connecting speaker cords

- Make sure to connect the cords correctly following the right series of above steps. During operation, wrong connection or a short circuit make the power turned off to protect the system. The clock loses the setting and is reset to "0:00". Also the MD recording may fail.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

## Connecting Other Equipments

You can connect the following equipments to the system:

- Audio equipment — used only as an analog playback device.
- Audio equipment with an optical digital input terminal — used as a digital recording device.

When you connect and use these equipments, refer also to the manuals supplied with them.


### To connect audio equipment without a digital output terminal

Connect the audio output jacks on the other equipment and the ANALOG IN jacks, using an audio cable (not supplied).

Be sure that the plugs of the audio cables and the jacks on the rear panel of the unit are color coded: White plugs and jacks are for left audio signals, and red ones for right audio signals.




- DO NOT connect other equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

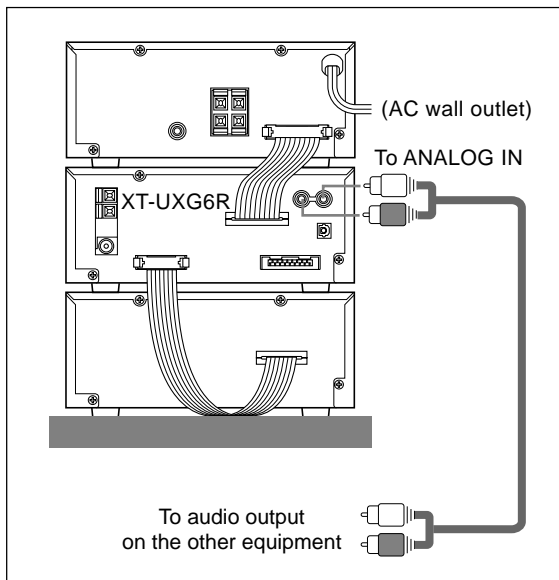

### To connect audio equipment with an optical digital input terminal

By using both an optical digital cable (not supplied) and an audio cable (not supplied), connect:

- Between the optical digital input terminal on the other equipment and the optical digital output terminal on XT-UXG6R.
- Between the audio output jacks on the other equipment and the ANALOG IN jacks.

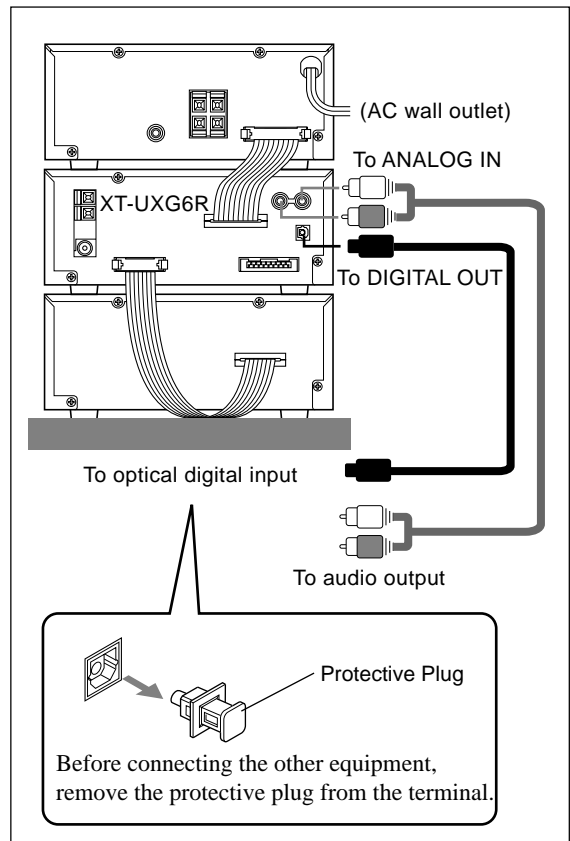


**NOW, you can plug in the system and other connected equipment FINALLY!**

When connecting the AC power cord into a wall outlet, the system switches to standby mode with STANDBY/ON lamp lit red.

- By using audio cable (not supplied), connect between the audio output jacks on the other equipment and the ANALOG IN jacks.

# Basic Settings

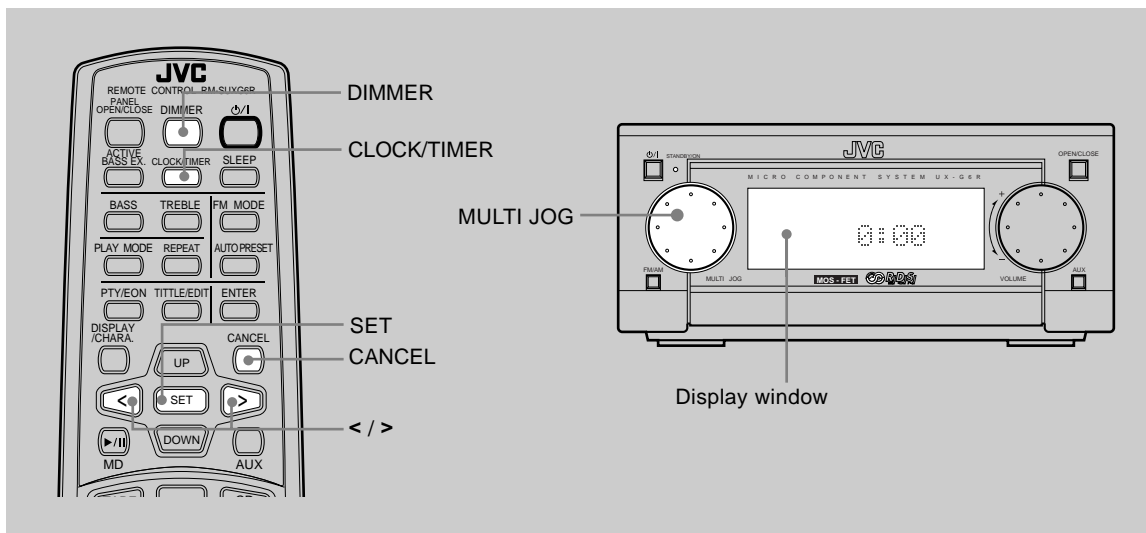

Before operating the system any further, set the clock built in this system first, then some other basic settings.

## Setting the Clock

You can set the clock using the remote control whether the system is turned on or turned off (i.e. standby mode).

- 1 Press **CLOCK/TIMER** button on the remote control. The hour digit in the display window starts blinking.



- 2 Press **</>** button on the remote control to adjust the hour, then press **SET** button on the remote control (rotating **MULTI JOG** dial also available).



- To correct the hour after pressing **SET** button, press **CANCEL** button. The hour digit starts blinking again.

- 3 Press **</>** button on the remote control to adjust the minute, then press **SET** button on the remote control (rotating **MULTI JOG** dial also available).



### If there is a power failure

The clock loses the setting and is reset to "0:00."

### To adjust the clock again

You need to press **CLOCK/TIMER** button five times until the clock setting mode is selected.

## Setting the Display Illumination (Dimmer)

You can adjust the brightness of around the display window. Each time you press **DIMMER**, the display window dims and brightens alternately.

- **While the system is turned off:**

Press **DIMMER** button, "DISPLAY OFF" appears in the display window for a while and the system clock disappears.

DISPLAY OFF

Press the button again, "DISPLAY ON" appears in the display window for a while and only the system clock become dimmed.

DISPLAY ON

- **While the system is turned on:**


Press **DIMMER** button, both operating information and indicators in the display window dims. The light around **MULTI JOG** dial also becomes darker than usual. Press the button again, all the illumination around the display window recovers as usual.



### Dimmer setting in the standby mode

Once the system is turned on, the dimmer setting in the standby mode does affect neither normal operations nor display indications.

# Common Operations

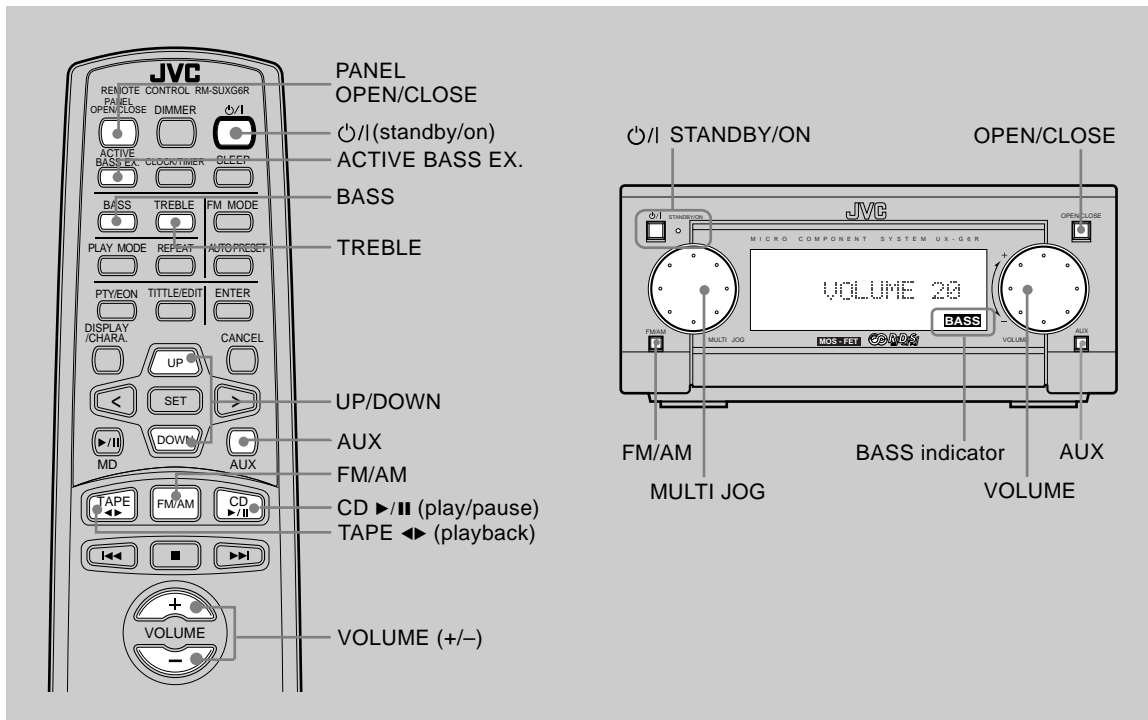

Here are basic and common things that apply to all the operations of UX-G6R system.

## Turning On the Power and Selecting the Sources

When you press a play button for example, like FM/AM, CD ►/|| (play/pause), or TAPE ◀▶ (playback), the system automatically turns on and STANDBY/ON lamp lights green.

### One Touch Play

If any CD or a tape, or last tuned station provided, the system starts playing that source.

To select the external equipment as the source, press MD ►/|| (play/pause) or AUX button so that the system automatically turns on.

### Using $\text{O}/\text{I}$ button

- **To turn on the system without playing,** press  $\text{O}/\text{I}$  button so that STANDBY/ON lamp lights green.
- **To turn off the system (standby mode),** press again  $\text{O}/\text{I}$  button so that STANDBY/ON lamp lights red.

A little power is always consumed even while the system is in standby mode.

- **To save the power consumption,** make use of Dimmer feature (see page 10).
- **To switch off the power supply completely,** unplug the AC power cord from the AC outlet. STANDBY/ON lamp goes off.



### When you unplug the AC power cord or if a power failure occurs

The clock is reset to "0:00" right away, while the tuner preset stations will be erased in a few days.

## Adjusting the Volume

You can adjust the volume level only while the system is turned on.

- Rotate VOLUME dial clockwise to increase the volume level or counterclockwise to decrease it.
- Using VOLUME dial, rotating quickly makes a large change in the volume level while rotating slowly makes a step-by-step change.



- When using the remote control, press **VOLUME +** button to increase the volume level or press **VOLUME –** button to decrease it.


The volume level (from 0 to 50) appears in the display window as follows:

VOLUME 20



**For private listening**

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume level before connecting or putting headphones.

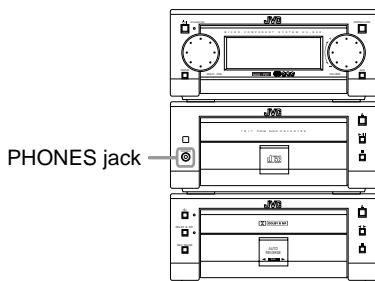

DO NOT turn off the system with the volume level set to an extremely high level; otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the system or start playing any source.  
REMEMBER you cannot adjust the volume level while the system is turned off.

## Reinforcing the Bass Sound

The richness and fullness of the bass sound is maintained regardless of how low you set the volume level. You can use this effect only while listening sources.

- **To get the effect**, press **ACTIVE BASS EX.** button on the remote control, and its indicator lights in the display window.
- **To cancel the effect**, press the button again so that the indicator goes off.

## Adjusting Bass and Treble Sounds

You can adjust bass and treble sound effects with the remote control, conforming to your preference and acoustic surroundings.

You can use this effect only while listening sources.

### To adjust the bass

**1 Press BASS button.**

The current level settings shortly appears as follows:

BASS +3

To exit from the level setting, press the button again.

**2 Press UP/DOWN button to adjust the level.**

- Press **UP** button to increase the bass tone level.
- Press **DOWN** button to decrease the bass tone level.

The bass level can be adjusted in seven steps from –3 through 0 to +3 (step “0” makes no effect).

**To cancel the effect**, adjust the level to “0.”

### To adjust the treble

**1 Press TREBLE button.**

The current level settings shortly appears as follows:

TREBLE –2

To exit from the level setting, press the button again.

**2 Press UP/DOWN button to adjust the level.**


- Press **UP** button to increase the treble tone level.
- Press **DOWN** button to decrease the treble tone level.

The treble level can be adjusted in seven steps from –3 through 0 to +3 (step “0” makes no effect).

**To cancel the effect**, adjust the level to “0.”

## Operating the Sliding Panel

You can use the sliding panel to enable advanced operations features provided for UX-G6R micro component system.

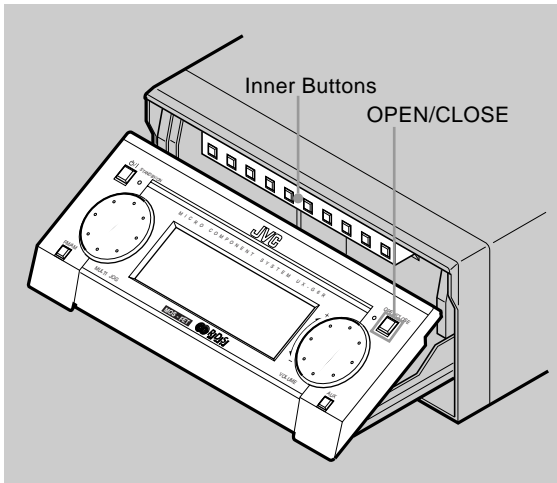


- Press OPEN/CLOSE button on the front panel (or PANEL OPEN/CLOSE button on the remote control).  
The sliding panel opens to uncover the inner buttons behind the panel for further operations.
- Press OPEN/CLOSE button again.  
The sliding panel automatically closes to hide the 10 inner buttons.

Each time you press the button, the sliding panel opens and closes repeatedly.

The buttons behind the sliding panel provided to control various program settings such as playback, recording, and presetting mode of each source. For details, refer to chapters concerning to the particular unit.



### When turning off the system

After pressing  button, the system closes sliding panel as well as other CD tray and Tape tray automatically if they are still opened.

## Listening to the External Equipment

You can listen to an external equipment such as MD recorder, VCR, and other auxiliaries.


First make sure that the external equipment is properly connected to the system (see page 7 and 9). For operation of the equipment, refer to its Instructions.

- 1 Press AUX button to select an external source.
  - To play an audio equipment without optical digital output, select AUX so that the following information appears in the display window.

AUX

- 2 Start playing back the external equipment.
- 3 Adjust the volume level to the desired listening level.
- 4 Apply other sound effects, if you wish.

# Listening to FM and AM Broadcasts

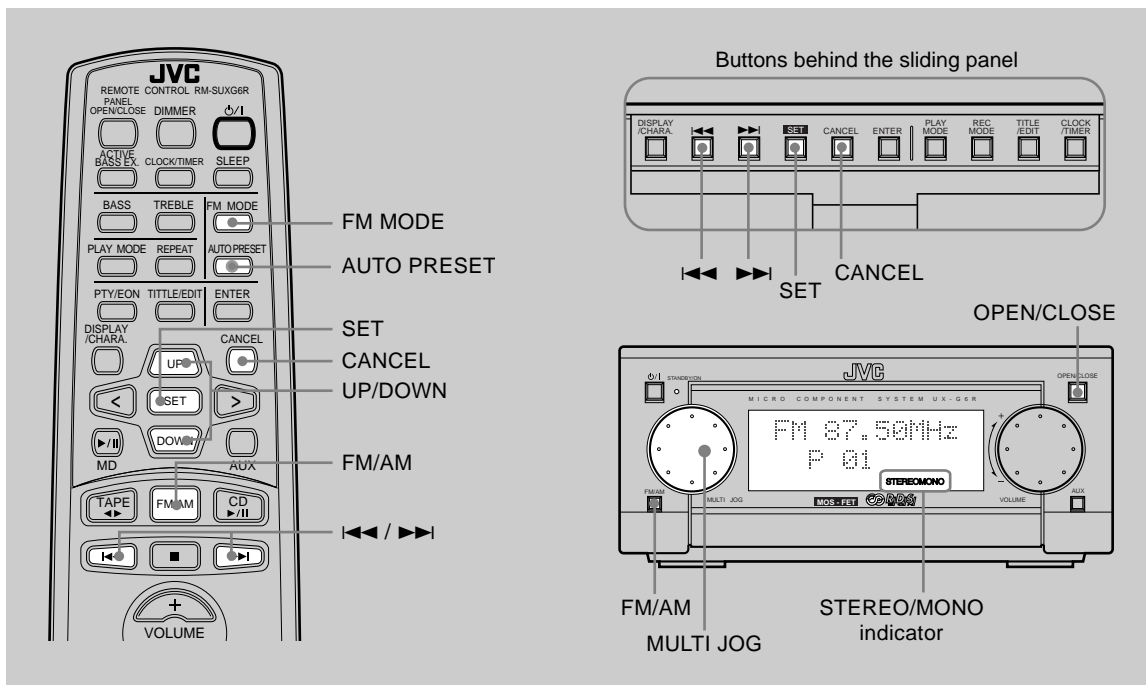

You can tune in FM and AM (MW/LW) stations manually, automatically, and use the preset station feature.

## Tuning in a Station

### 1 Press FM/AM button.

The system automatically turns on and tunes in the last tuned station (either FM or AM—MW/LW). The following information appears in the display window.

FM 87.50MHz  
P 01 — Preset number

- Each time you press the button, the band alternates between FM and AM.
- If a program on FM band is broadcast in stereo, STEREO indicator lights.

### 2 Select a station using one of the following three methods.

#### • Manual Tuning

Opening the sliding panel, press  $\lll / \ggg$  (lower/higher frequencies) button repeatedly to change the frequencies step by step until you find the desired station.

#### • Auto Tuning

Opening the sliding panel, press and hold  $\lll / \ggg$  (lower/higher frequencies) button for a second or more to start searching a station and stop automatically until the station of sufficient signal strength is tuned in.

#### • Preset Station Tuning

Rotate MULTI JOG dial clockwise to increase the preset number or counterclockwise to decrease it until the desired station is easily found.



#### Using the remote control:

UP/DOWN button on the remote control also has the same function as MULTI JOG dial on the front panel.



#### Preset Station

You are possibly not allowed to use the feature until the station presetting completes. In some cases, test frequencies have been already memorized for the system since the factory examined the preset station features before shipment. This is not a malfunction.

## Presetting Stations

You can preset up to 30 FM and 15 AM (MW/LW) stations into memory by following two methods: manual/automatic presettings.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

### To preset stations manually — Manual Preset

- 1 Press **◀◀ / ▶▶** (lower/higher frequencies) button to tune in the desired station manually.

FM 87.50MHz

- 2 Press **SET** button.

“SET” appears in the display window for a while (not blinking).

SET

- Note that “SET” message disappears, presetting procedure is cancelled.

- 3 Rotate **MULTI JOG** dial or press repeatedly **UP/DOWN** button to select the preset channel numbered from 1 to 30 on FM, or 1 to 15 on AM.

FM 87.50MHz  
P 02

- Note that the selected channel “02” disappears, presetting procedure is cancelled.

- 4 Press **SET** button again.

“STORED” appears in the display window for a while.

STORED

- 5 The tuned station in step 1 is now stored in the preset channel selected in step 3.

FM 87.50MHz  
P 02



Storing a new station on an used channel erases the previously stored one.

### To preset stations automatically — Auto Preset

You can automatically preset 30 FM, 15 AM (MW/LW) stations. Preset numbers will be allocated as stations are found, starting from the lowest frequency and moving up to the higher frequency.

#### On the remote control only:

- 1 Press **FM/AM** button to select a desired band.

- 2 Press and hold **AUTO PRESET** button on the remote control for more than two seconds.

The system automatically starts searching for stations with the strong signals continuously, and they are stored successively into memory as follows:

FM 91.25MHz  
↓  
P 01  
↓  
FM 95.75MHz  
↓  
P 02



When you unplug the AC power cord or if a power failure occurs


The preset stations will be erased in a few days. If this happens, preset the stations again.

### To change the FM reception mode

- When an FM stereo broadcast is hard to receive or noisy, press **FM MODE** button on the remote control so that **MONO** indicator lights in the display window. Reception improves.
- To restore the stereo effect, press **FM MODE** button again so that **STEREO** indicator lights in the display window.

In this stereo mode, you can hear stereo sounds when a program is broadcast in stereo.

# Receiving FM Stations with RDS

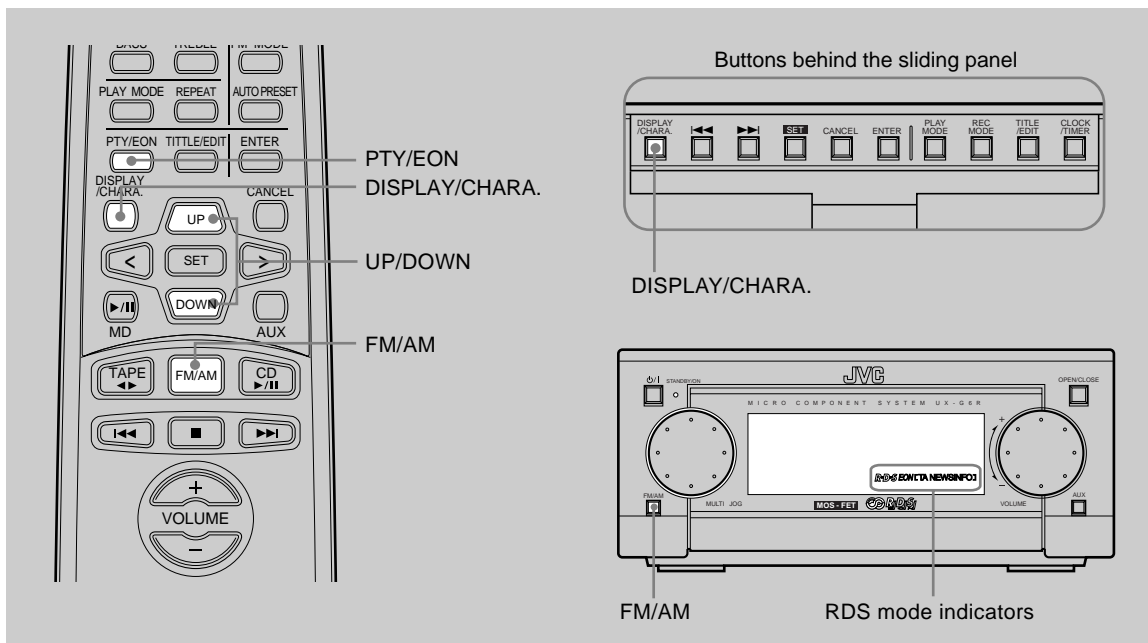

RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast such as sports and music.

When tuned in an FM station which provides the RDS service, RDS indicator lights in the display window. You can receive the following types of RDS signals.

## PS (Program Service):

Shows commonly known station names.

## PTY (Program Type):

Shows types of broadcast programs.

## RT (Radio Text):

Shows text messages the station sends.

## EON (Enhanced Other Networks):

Provides the information about the types of the programs sent by other RDS stations than the one being received.



### More about RDS

- Not all the FM stations provide RDS signals, nor do all RDS stations provide the same services. If in doubt, check with local radio stations for details on RDS in your area.
- RDS may not work correctly if the received station is not transmitting the signals properly or if the signal strength is weak.

 
## Changing the RDS Information

You can see RDS information in the display window while listening to an FM station.

- RDS operations are possible only using the remote control except DISPLAY/CHARA. button.

**Press DISPLAY/CHARA. button repeatedly while listening to an FM station.**

Each time you press the button, the display window changes to show the following information:



**If no PS, PTY, or RT signals are sent by a station** "NO PS," "NO PTY," or "NO RT" appears in the display window.  
**If the unit takes time to show RDS information received from a station** "PS," "PTY," or "RT" may appear in the display window.

## Searching for Programs by PTY Codes (PTY Search)

One of the RDS advantages is that you can locate a particular kind of program by specifying the PTY codes.

- The PTY Search is applicable only to preset stations.
- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

To search a program, use the remote control.

### 1 Press PTY/EON button on the remote control while listening to an FM station.

“SELECT PTY” appears and starts blinking in the display window.



### 2 Press UP/DOWN button repeatedly to select a PTY code while “SELECT PTY” is blinking.

Each time you press the button, the PTY codes change as follows (refer also to the list on page 19):

News ⇄ Affairs ⇄ Info ⇄ Sport ⇄ Educate  
 ⇄ Drama ⇄ Culture ⇄ Science ⇄ Varied ⇄  
 Pop M ⇄ Rock M ⇄ Easy M ⇄ Light M ⇄  
 Classics ⇄ Other M ⇄ Weather ⇄ Finance ⇄  
 Children ⇄ Social ⇄ Religion ⇄ Phone In ⇄  
 Travel ⇄ Leisure ⇄ Jazz ⇄ Country ⇄ Nation  
 M ⇄ Oldies ⇄ Folk M ⇄ Document ⇄ Test  
 ⇄ Alarm! ⇄ (back to the beginning)

### 3 Press SET button to enter the PTY code.

While searching, “SEARCH” appears in the display window.

The unit searches 30 preset FM stations, and stops when it finds the one you have selected, and tunes in that station.

- **To continue searching after the first stop:**  
Press SET button again while the indications in the display window are blinking.  
If no program is found, “NOT FOUND” appears and the unit returns to the last received station.
- **To stop searching during the process:**  
Press PTY/EON button while searching.

## Switching to a Program Type Temporarily

The EON function allows the system to switch temporarily to a broadcast program of your choice (News, TA, and/or Info) from a different station except when you are listening to a non-RDS stations — some FM stations and AM (MW/LW) stations.

- EON indicator lights while receiving a station with the EON code.
- EON function is applicable only to preset stations.

To activate the EON function, use the remote control.

### 1 Press PTY/EON button.

The last EON data type selected and “SELECT EON” appears and starts blinking in the display window.



### 2 Press UP/DOWN button repeatedly to select the EON data type you want.

Each time you press the button, the EON data types change as follows:

(Blank indications) → TA → News → Info → TA  
 News → News Info → TA Info → TA News Info →  
 (back to the beginning)

TA: Traffic announcement  
 News: News  
 Info: Program the purpose of which is to impart advice in the widest sense.

### 3 Press SET button to enter the EON data types.

RDS system switches to EON standby mode to receive a desired data type.

When the program is over, the indicator of received PTY code stops blinking and remains lit, but the EON function still remains activated.

- **To cancel the EON function:**  
Press PTY/EON button again so that TA/News/Info indicator goes off.

**How the EON function actually works:**

**CASE 1**  
**If there is no station broadcasting the program you have selected**  
 The unit continues tuning in the current station.

↓

When a station starts broadcasting the program you have selected, the unit automatically switches to the station. The indicator of received PTY code starts flashing.

↓

When the program is over, "EON END" appears in the display window, and the unit goes back to the previously tuned station, but the EON function still remains activated.

**CASE 2**  
**If there is a station broadcasting the program you have selected**  
 The unit tunes in the program. The indicator of received PTY code starts flashing.

↓

When the program is over, "EON END" appears in the display window, and the unit goes back to the previously tuned station, but the EON function still remains activated.

**CASE 3**  
**If the FM station you are listening to is broadcasting the program you have selected**  
 The unit continues to receive the station but the indicator of received PTY code starts flashing.

↓

When the program is over, the indicator of received PTY code stops flashing and remains lit, but the EON function still remains activated.



**More about the EON function**

- EON data sent from some stations may not be compatible with this unit.
- While listening to a program tuned in by the EON function, the station does not change even if another network station starts broadcasting a program of the same EON data.
- While listening to a program tuned in by the EON function, you can only use PTY/EON and DISPLAY/CHARA. buttons as the tuner operation buttons.
- If the stations alternate intermittently between the station tuned by the EON function and the currently tuned station ("WAITING" flashes in the display window), press PTY/EON button to cancel the EON function.  
 If you do not press the button, the currently tuned station is received finally, and the indication of the EON data type flashing in the display window disappears.


## Description of the PTY codes:

<b>News:</b>	News.	<b>Finance:</b>	Stock market reports, commerce, trading etc.
<b>Affairs:</b>	Topical program expanding or enlarging upon the news — debate or analysis.	<b>Children:</b>	Programs targeted at a young audience.
<b>Info:</b>	Program the purpose of which is to impart advice in the widest sense.	<b>Social:</b>	Programs about sociology, history, geography, psychology and society.
<b>Sport:</b>	Program concerned with any aspect of sports.	<b>Religion:</b>	Religious programs.
<b>Educate:</b>	Educational programs.	<b>Phone In:</b>	Involving members of the public expressing their views either by phone or at a public forum.
<b>Drama:</b>	All radio plays and serials.	<b>Travel:</b>	Travel information.
<b>Culture:</b>	Programs concerning any aspect of national or regional culture, including language, theater.	<b>Leisure:</b>	Programs about recreational activities.
<b>Science:</b>	Programs about natural sciences and technology.	<b>Jazz:</b>	Jazz music.
<b>Varied:</b>	Used for mainly speech-based programs like quizzes, panel games and personality interviews.	<b>Country:</b>	Songs which originate from, or continue the musical tradition of the American Southern States.
<b>Pop M:</b>	Commercial music of current popular appeal.	<b>Nation M:</b>	Current popular music of the nation or region in that country's language.
<b>Rock M:</b>	Rock music.	<b>Oldies:</b>	Music from the so-called "golden age" of popular music.
<b>Easy M:</b>	Current contemporary music considered to be "easy-listening."	<b>Folk M:</b>	Music which has its roots in the musical culture of a particular nation.
<b>Light M:</b>	Instrumental music, and vocal or choral works.	<b>Document:</b>	Program concerning factual matters, presented in an investigative style.
<b>Classics:</b>	Performances of major orchestral works, symphonies, chamber music, etc.	<b>Test:</b>	Broadcast when testing emergency broadcast equipment or receivers.
<b>Other M:</b>	Music not fitting into any of the other categories.	<b>Alarm!:</b>	Emergency announcement.
<b>Weather:</b>	Weather reports and forecasts.		

**Classification of the PTY codes for some FM stations may be different from the above list.**



# Playing Back a CD

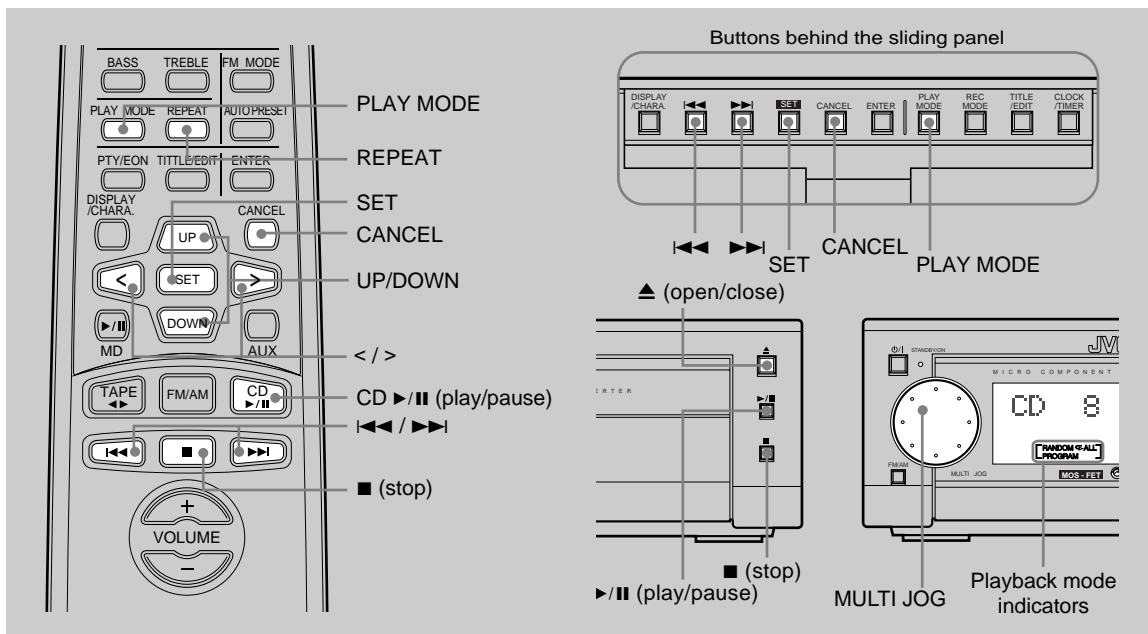

You can use Normal, Program, Random, or Repeat Play.

- When using the buttons behind the sliding panel, press OPEN/CLOSE button on the AX-UXG6 to open the sliding panel first.
- When using the remote control, press CD ►/|| (play/pause) button first and ■ (stop) button successively.




- DO NOT try to open or close the CD tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may results damages on the unit.


## Playing Back the Entire Disc — Normal Play

### 1 Press ▲ (open/close) button on CD unit.

The system automatically turns on and the disc tray comes out.

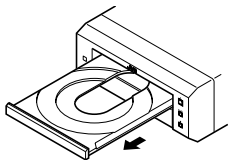


### 2 Place a disc correctly on the circle of the disc tray, with its label side up.

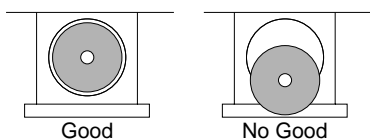

- When using a CD single (8 cm), place it on the inner circle of the disc tray.

### 3 Press ▲ (open/close) button again.

The disc tray closes while the information appears one after another as follows.

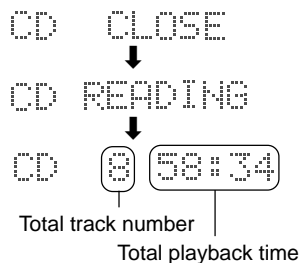

- When closing the tray without a CD placed, “CD NO DISC” appears.



When pressing ►/|| (play/pause) button directly, the system starts playback a CD immediately.

**4 Press ►/|| (play/pause) button on the CD unit.**

Each track of the CD starts playing one after another, and stops when the final track has finished playing.

CD 1 0:01

- **To stop playing back for a moment, press ►/|| (play/pause) button on the CD unit.**  
The playback time starts blinking in the display window.

CD 5 35:34

- **To resume playback, press ►/|| (play/pause) button again.**  
Playback continues from the point where it was stopped for a while.

**5 Press ■ (stop) button to stop playing back the CD.**

Following information for the CD appears in the display window.

CD 8 53:34

Total track number      Total playback time

**6 Press ▲ (open/close) button on the CD unit to remove the CD.**

- Pressing ▲ (open/close) button during playback directly, the CD unit stops playback and opens CD tray.

**Searching and Skipping Tracks**

While playing back a CD, you can do the following operations.

**To search and skip to a particular point in a track**

During playback, press and hold ◀◀ / ▶▶ button to meet the desired passages in a track:

- Press and hold ▶▶ button:  
Fast forwards in the track.
- Press and hold ◀◀ button:  
Fast reverses in the track.



**UP/DOWN button on the remote control is also available to searching operations.**

**To go to another track**

Before or during playback, press ◀◀ / ▶▶ button repeatedly:

Press ▶▶ button:

Skips to the beginning of the next and succeeding tracks.

Press ◀◀ button:

Goes back to the beginning of the current and previous tracks.

Rotating MULTI JOG dial clockwise also changes the tracks forwards quickly, while rotating it counterclockwise the tracks reverse quickly.



**</> button on the remote control is also available to skipping operations.**

**Programming the Playing Order of the Tracks — Program Play**

You can arrange the order in which the tracks play before you start playback. You can program up to 32 tracks.

 
**1 Place a CD.**

- If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

**2 Press PLAY MODE button repeatedly until “CD PROGRAM” appears in the display window.**


CD PROGRAM

- Each time you press the button, playback mode indicators also change as follows:

**3 Rotate MULTI JOG dial to select a track number to be programmed (</> buttons also available).**

CD 1 P .....

Track number      Program number

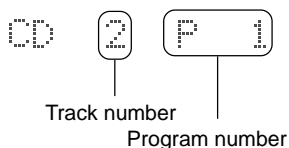**4 Press SET button to program the track number.**

Here the track number 2 on the CD is stored into a program number 1, and shortly after that the total playback time of programmed tracks appears in the display window as follows:

**5 Repeat steps 3 to 4 to program other tracks you want up to 32 tracks.**

- **If you try to program a 33rd step** "MEMORY FULL" will appear in the display window, and your entry is ignored.
- **The total playback time of programmed tracks exceeds 99'59"** "-- : --" will appear in the display window.

**6 Press ►/|| (play/pause) button on the CD unit.**

The programmed tracks are played back in the order you have set.

- Other CD operations are the same as Normal play.

**7 Press ■ (stop) button to quit the program play.**

- When Program play finished, CD unit automatically stops.

**To check the program contents**

Before playing back the CD, you can check the program contents by using ◀◀ / ▶▶ button.

Press ▶▶ button:

Shows the programmed tracks in the programmed order.

Press ◀◀ button:

Shows them in the reverse order.

**To modify the program**

Before playing back the CD, you can erase the last programmed track by pressing CANCEL button. Each time you press the button, the last programmed track is erased from the end of program.

- **To add new tracks to the program** before you start playing-back, simply select a track number again you want to add (repeat steps 3 to 4).

**To erase all the programmed data**

After playing back the CD, you can erase all the programmed track data by pressing ■ (stop) button. New program can be entered again.

**To exit from the Program play mode**

Before or during playback, you can exit from Program play mode as follows:

- Before playback, press PLAY MODE button twice.
- During playback, press ■ (stop) button then PLAY MODE button twice.

Playback mode indicator goes off and the system resumes Normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the program play.

## Playing at Random — Random Play

The tracks of the loaded CD will play in no special order (at random) when you select this mode.

 
### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press PLAY MODE button repeatedly until “CD RANDOM” appears in the display window.

CD RANDOM

- Each time you press the button, playback mode indicator also changes as follows:



### 3 Press ►/|| (play/pause) button on the CD unit.

CD  RANDOM

The track numbers are shuffled in the display window for a few seconds, and start playing back at random. Random play ends when all the tracks are played back once.

- Other CD operations are the same as Normal play.

### 4 Press ■ (stop) button to quit Random play.

#### To exit from Random play mode

Before playing back the CD, you can exit from Random play mode as follows:

- Before playback, press PLAY MODE button once.
- During playback, press ■ (stop) button then press PLAY MODE button once.

Play mode indicator goes off and the system resumes the normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the random play.

## Repeating Tracks — Repeat Play

 
You can have the entire disc, the programmed tracks, or the individual track repeat as many times as you like.



### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press REPEAT button on the remote control repeatedly to set the repeat mode.



- Each time you press the button, repeat mode indicators light in the display window, and Repeat playback mode changes as follows:



-  : Repeats one track on the CD or in a program.
-  ALL : Repeats all the tracks on the CD or a program.




### 3 Press ■ (stop) button to quit Repeat play.
 
#### To exit from Repeat play mode


Pressing REPEAT button repeatedly until repeat mode indicators ( and  ALL) goes off in the display window.



#### Combining play modes:

- When combining Program play and Repeat play, you can repeat whole the programmed tracks or one track among them ( and  ALL).
- When combining Random play and Repeat play, you can just repeat whole the shuffled tracks (only  ALL).

# Playing Back a Tape

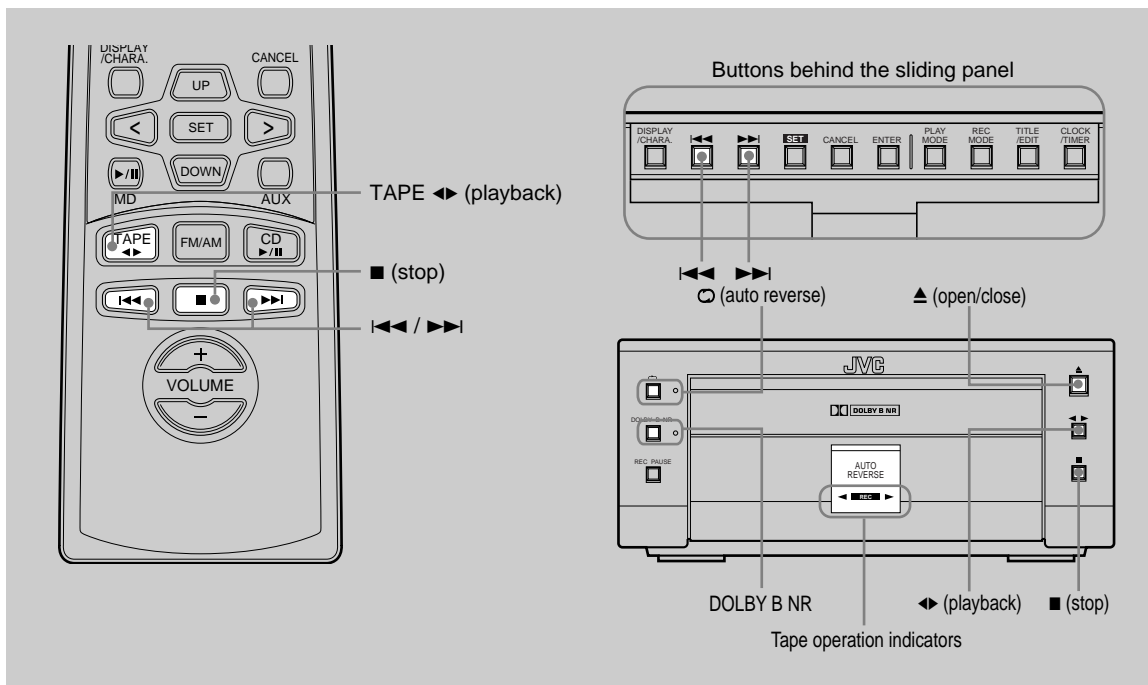

You can listen to Normal (Type I), High position (Type II), and Metal (Type IV) type tapes without further settings.

- When using the inner buttons, press OPEN/CLOSE button on AX-UXG6 unit to open the sliding panel first.
- When using the remote control, press TAPE ◀▶ (playback) button first and ■ (stop) button successively.



**DO NOT use tapes longer than 120 minutes.**  
The characteristic deterioration may occur and these tapes easily jam in the tape transport mechanism.




- DO NOT try to open or close the tape tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may results damages on the unit.

## Playing Back a Tape — Basic Operation

**1 Press ▲ (open/close) button on the cassette deck unit.**

The system automatically turns on and the tape tray comes out.

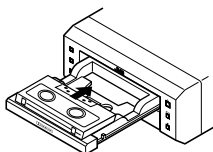


**2 Place a tape on the tray with the side you want to listen to facing up (forward side).**

Tape fits in the caved-in area so that an exposed edge of the tape faces toward the inside of the unit.

**3 Press ▲ (open/close) button again to close the tray.**

**4 Press ◀▶ (playback) button on the unit or TAPE ◀▶ (playback) button on the remote control.**

 The tape playback starts and the tape direction indicator blinks slowly in orange to show the tape running direction.



- Each time you press ◀▶ (playback) on the cassette deck unit or TAPE ◀▶ (playback) button on the remote control, you can change the tape sides to be played back currently.

- ▶ : plays the forward side.
- ◀ : plays the reverse side.



**Playback comes to an end (Auto Reverse)**

The cassette deck unit automatically changes the tape direction to the reverse side, and continue playback both sides. Each time to press the button, Auto Reverse feature is set to on/off alternately.

**5** Press **■** (stop) button to stop playback the tape.

**6** Press **▲** (open/close) button directly to stop and remove the tape.



**While the system is turned off (standby mode)**  
Pressing **▶◀** (playback) or **TAPE ▶◀** (playback) button automatically switches the system turned on and starts playback if a tape is already loaded.

## Fast-Winding a Tape

**While stopping the tape**, press **◀◀◀ / ▶▶▶** button to fast-wind the tape.

 
**To fast-forward, if the current tape direction is:**

- ▶ ⇒ Press **▶▶▶** button.
- ◀ ⇒ Press **◀◀◀** button.

**To fast-rewind, if the current tape direction is:**

- ▶ ⇒ Press **◀◀◀** button.
- ◀ ⇒ Press **▶▶▶** button.

During fast-winding, the tape direction indicator starts blinking quickly.



**When the tape comes to an end**  
The deck unit automatically stops.

## Searching and Skipping to Each Program — Music Scan

**While playing the tape**, you can search and skip to the beginning of the current and next program on a tape.



Music scan searches for blank portions that usually separate programs recorded onto the tape, then automatically plays the program beginning after that blank portion.

**To skip backward to the current music**

Press the button opposite to the tape direction indicator as follows:

 
- ▶ ⇒ Press **◀◀◀** button.
- ◀ ⇒ Press **▶▶▶** button.

**To skip forward to the next music**

Press the button same as the tape direction indicator as follows:

- ▶ ⇒ Press **▶▶▶** button.
- ◀ ⇒ Press **◀◀◀** button.

During Music Scan progressed, the tape direction indicator starts blinking rhythmically.



**Repeating Music Scan feature made easy**  
searching a desired program on a tape one after another.



**The beginning of the desired program may not be located properly**

If blanks between music are too short, the blanks contain too much noise or the program itself contains very low-level or silent part.

## Playing Back Dolby-Recorded Tape

You can play back the tape recorded with Dolby B NR system. The Dolby NR system allows to reduce hiss noise in playback.


Press **DOLBY B NR** button on the cassette deck before playback. Each time you press the button, the Dolby NR lamp on the unit lights up orange or turns off.



**A tape recorded using Dolby NR**  
Should be played back using the Dolby NR of the same type as that used in recording. The audio quality will be affected if a different type is used in playback.

Dolby Noise Reduction manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

# Recording onto a Tape

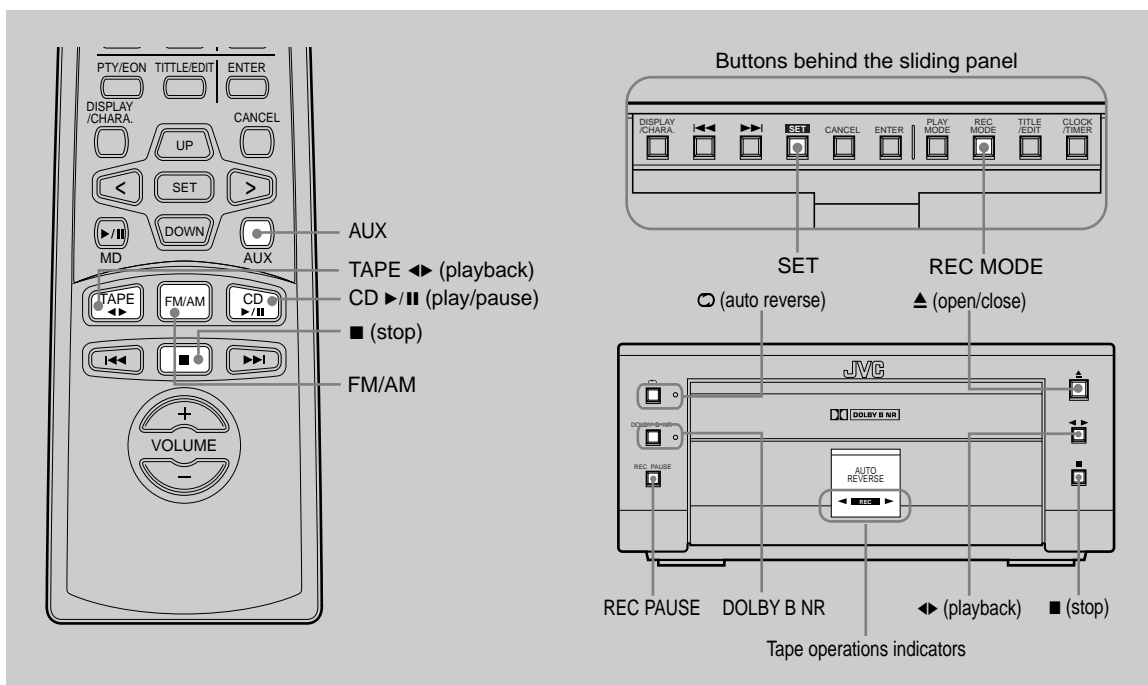

Two types of cassette tapes can be recorded onto, including normal (Type I), and High position (Type II) tapes. These types are identified automatically by the cassette deck unit and the recording level is also corrected automatically. Neither volume level nor sound effects during playback does affect to the recording.

## IMPORTANT:

- It should be noted that it may be unlawful to pre-recorded tapes, records, or discs without the consent of the owner of copy right in the sound or video recording, broadcast or cable program and in any literary, dramatic, or artistic embodied therein.

## Manual Recording onto a Tape

**1** Select one of the recording sources — FM/AM broadcasts, CD, or other external equipment.


- To record FM/AM broadcasts, receive a station with Tuner unit.
- To record a CD or its tracks programed, set the play-pause mode for CD unit.
- To record from an external equipment connected to ANALOG IN jacks, prepare it as required.




**Make sure to select a source first, otherwise you cannot use recording function.**

**2** Place a recordable tape with the side you want to record facing up.

Press ▲ (open/close) button on the cassette deck unit to open the tape tray; place a tape on it; and press ▲ (open/close) button again to close it.

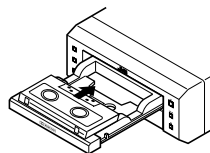

 - You cannot record onto the tape without a protect tab. When using that tape, cover the hole for desired side with adhesive tape.



**3** Press REC PAUSE button on the cassette deck unit.



REC indicator

REC indicator lights red to show the recording pause mode, and "TAPE REC" appears in the display window as follows,

```

FM 87.50MHz
TAPE REC

or

CD 8:58:34
TAPE REC

```



#### To change the recording source

You cannot change the selected source during the recording pause mode. To exit from the recording pause mode, press ■ (stop) button on the cassette deck unit.

 


#### To make the blank tape

Press AUX button to start recording without connecting nor playing back the external equipment.

### 4 Press Tape ◀▶ (playback) button for FM/AM broadcasts or ▶/II (play/pause) button on the CD unit to start recording.

Tape direction indicator starts blinking slowly in the display window.



Tape direction indicator

- To stop recording for a moment, press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
- To resume recording, press ◀▶ (playback) button again. Recording continues from the point where it was stopped for a while.

### 5 Press ■ (stop) button on the cassette deck unit for FM/AM broadcasts recording, or ■ (stop) button on the CD unit for the CD recording.

Recording stops and REC indicator goes off in the display window.



On CD recording, cassette deck unit will stop after leaving a non-recorded portion of 4 seconds. If you want to quit recording immediately, press ■ (stop) button on the cassette deck unit.

### 6 Press ▲ (open/close) button on the cassette deck unit to remove the tape.

- Pressing ▲ (open/close) button directly during recording, the cassette deck unit stops recording and opens the tape tray.



#### • Dolby B NR

Press DOLBY B NR button before recording to reduce frequency response noise.

When the tape is played back later, also press the button with its lamp lit.

#### • BEAT CUT on AM (MW/LW)

 
When recording AM broadcast, beats noise may be heard.

Set the BEAT CUT selector to either position 1 or 2 on the rear panel of the cassette deck unit to reduce the noise.

## Recording in Auto Reverse

### 1 Select one of the recording sources — FM/AM broadcasts, CD, or other external equipments.

### 2 Make sure the tape side for recording meets the tape direction indicator ▶ (forward).



- Each time to press ◀▶ (playback) button or TAPE ◀▶ (playback) button on the remote control, you can change the tape direction to be recorded onto.

▶ : Good, records onto the forward side.

◀ : No good, records onto the reverse side.



- The recording in the auto reverse mode stops automatically after completing recording onto the ◀ (reverse) direction side.

Be sure to start recording from the ▶ (forward) direction side.

- When the auto reverse mode is set to off, recording stops after having recorded onto one side of the tape.

### 3 Press ⏮ (auto reverse) button on the cassette deck unit to set the reverse mode on.

The auto reverse lamp lights orange on the front panel.

### 4 Press REC PAUSE button on the cassette deck unit.

### 5 Repeat the steps 4 to 5 of "Manual Recording onto a Tape" mentioned in the left column.



## Synchronized Recording from a CD

CD application on UX-G6R system can be recorded with a simple, one-touch operation.

- 1 Place a recordable tape and a source CD into each tray.**
  - To record using Dolby B NR, press the DOLBY B NR button before recording so that its lamp near the button lights orange.
- 2 Press ►/|| (play/pause) button on the CD unit, then ■ (stop) button to set the system to CD operation mode.**
- 3 Press REC MODE button behind the sliding panel.**  
The display window shows information as follows:

```
SYNC REC
  >TAPE
```

- 4 Press SET button.**  
Display window shows as follows:

```
SYNC REC
TAPE REC

then

CD 1 ----#----
TAPE REC
```

UX-G6R starts playback on the CD unit as well as recording on the cassette deck unit simultaneously. You can get an entire copy of the source CD.

**To select a particular track or program,** use REC PAUSE button on the cassette deck unit. During SYNC REC mode, you cannot operate CD unit except ■ (stop) button.

- To make recording pause temporarily,** press REC PAUSE button on the cassette deck unit.
- To resume recording,** press ◀▶ (playback) button on the cassette deck unit.



### Using Program play for CD recording

To edit CD's tracks to be recorded, it is useful to set the desired tracks to be played back into a program in advance.

When CD playback finished, the CD unit first, then the cassette deck stops recording automatically.



**Cassette deck unit will stop after leaving a non-recorded portion of 4 seconds.**

If you want to quit recording immediately, press ■ (stop) button on the cassette deck unit.

- 5 Press ▲ (open/close) button on each unit to remove the CD and the tape.**

## Recording from the External Equipment

You can record audio sources played-back on the external equipment onto a tape manually. First of all, make sure to connect the external equipment properly (see also page 9).

### Recording an external audio source manually

- 1 Press AUX button to show "AUX" in the display window.**  
The external audio source is selected.
- 2 Repeat the steps 2 and 3 on page 26 to prepare a tape to record.**  
Information appears as follows:

```
AUX
TAPE REC
```


- 3 Press ◀▶ (playback) button on the cassette deck unit or TAPE ◀▶ (playback) button on the remote control to start recording.**  
Tape direction indicator starts blinking slowly in the display window.



Tape direction indicator

- 4 Start playing back the external equipment.**
  - To stop recording for a moment,** press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
  - To resume recording,** press ◀▶ (playback) button again.
  - To end the recording,** press ■ (stop) button on the cassette deck unit.  
Recording stops and REC indicator goes off in the display window.

# Using the Timers

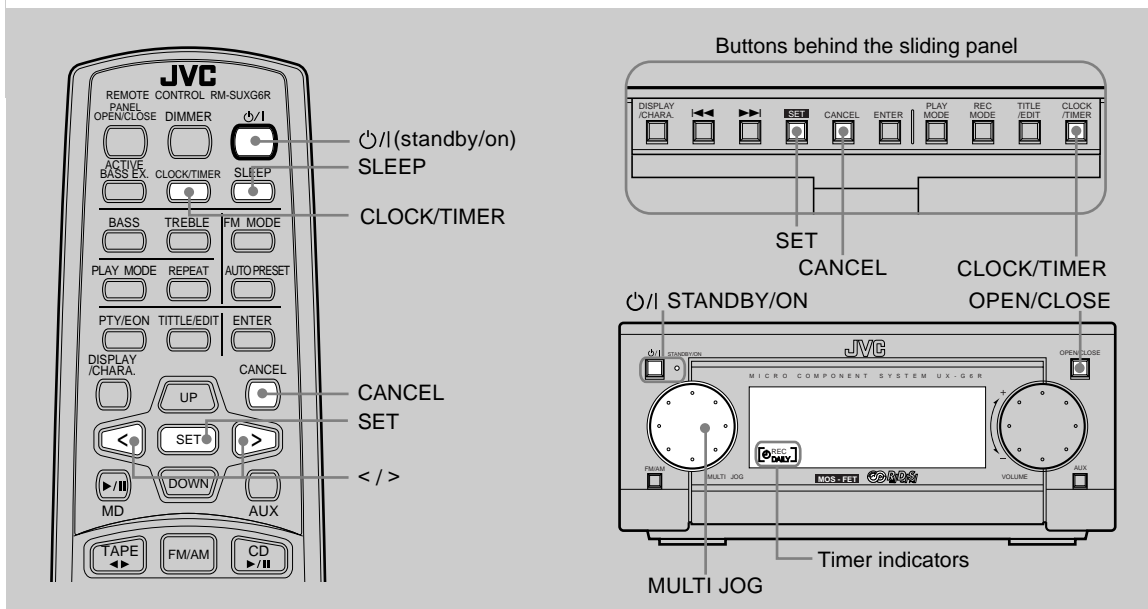

On UX-G6R system, three timer features are available — Recording Timer, Daily Timer, and Sleep Timer. Before using these timers, you need to set the clock built in the system (see page 10).

## Using Recording Timer

With Recording Timer, you can make a tape of a radio broadcast automatically.

- You can set Recording Timer whether the system is turned on or off.
- To correct a mis-entry any time during the setting process, press CANCEL button.

### How Recording Timer actually works

The system automatically turns on, tunes into the specified station, turns off the volume, and starts recording when the timer-on time comes.

Then, when the timer-off time comes, the system automatically turns off (standby).

 
The timer settings remain stored in memory until you reset them or unplug the AC power cord.

- 1 Press CLOCK/TIMER button repeatedly until "REC TIMER" and its timer-on time appear in the display window.**

You can select the timer-on/off time, a tuner preset channel to record, and recording media.

- If MD recorder XM-G6 (not supplied) connected, you can select MD as recording media (see page 7).

- Each time you press the button, the timer mode changes as follows:



- 2 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-on time, then press SET button.**

REC TIMER  
ON 21:30

- 3 Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-on time, then press SET button.**

REC TIMER  
ON 21:30

- 4 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-off time, then press SET button.**

REC TIMER  
OFF 22:30

- 5 Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-off time, then press SET button.



- 6 Rotate MULTI JOG dial (</> button on the remote control also available) to select either “TUNER FM” or “TUNER AM,” then press SET button.

- 7 Rotate MULTI JOG dial (</> button on the remote control also available) to select a preset channel, then press SET button.




“TAPE REC” follows in the display window as selected recording media, unless any MD recorder connected.

- If XM-G6 MD recorder connected, you can select either a tape or an MD as recording media.

- 8 Press SET button to select recording media, and turn off the system.

**After completing the settings...**

 The REC timer indicator lights and the setting items appear one after another in the display window. Thus the Recording Timer is ready for unattended recording.



**After a timer recording is complete...**

Set the volume to an appropriate listening level.



**If you press a certain button while Recording Timer is operating**  
Recording will stop.

**To use the same Recording Timer settings repeatedly**

Once you have set the recording timer, it remains stored in memory until you change it.

To activate the recording timer with the previous settings, follow the procedure below:

- 1 Press CLOCK/TIMER button repeatedly until “REC TIMER” appears in the display window.



- 2 Press SET button to call the previous settings for next timer recording.

The REC timer indicator lights, and the setting items appear one after another in the display window.

- To erase the recording timer, press CANCEL button in this step.

**Using Daily Timer**

With Daily Timer, you can wake up on your favorite music or radio program.

- You can set the daily timer whether the system is turned on or off.

 
**How Daily Timer actually works**

The system automatically turns on, and starts playing the specified source when the timer-on time comes. Then, when the timer-off time comes, the system automatically turns off (standby).

The timer settings remain stored in memory until you reset them or disconnect the AC power cord.

- 1 Press CLOCK/TIMER button repeatedly until “DAILY TIMER” and its timer-on time appear.

- Each time you press the button, the timer mode changes as follows:



- 2 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-on time, then press SET button.



- 3 Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-on time, then press SET button.




- 4 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-off time, then press SET button.



- 5** Rotate **MULTI JOG** dial (</> button on the remote control also available) to select the minute of the timer-off time, then press **SET** button.

DAILY TIMER  
OFF 7:00

- 6** Rotate **MULTI JOG** dial (</> button on the remote control also available) to select the source, then press **SET** button.

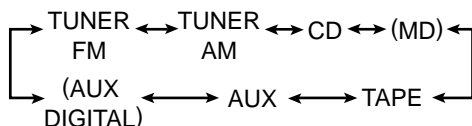

**TUNER FM:** Tunes into a preset FM station. Go to step 7.

**TUNER AM:** Tunes into a preset AM station. Go to step 7.

**CD:** Plays a CD. Prepare a CD, then go to step 7.

**(MD):** Plays a MD, only when XM-G6 MD recorder connected. Then go to step 7.

**TAPE:** Plays a tape. Prepare a tape, then go to step 8.

**AUX\*:** Selects "AUX" as the source. Make the external equipment ready for playback.

**(AUX DIGITAL):**  
Selects an external digital audio equipment as the source if connected.

\* To use the external equipment with the Daily Timer, it also has the timer function.

- 7** If you have selected FM/AM as the source in the above step, select a preset channel.

- 1) Rotate **MULTI JOG** dial (</> button on the remote control also available) to select a preset channel.
- 2) Press **SET** button.

FM 87.50kHz  
P 02

If you have selected **CD** as the source in the above step, select a track.

- 1) Rotate **MULTI JOG** dial (</> button on the remote control also available) to select a track.
- 2) Press **SET** button.

CD 1

- 8** Rotate **MULTI JOG** dial (UP/DOWN button on the remote control also available) to adjust the volume level, then press **SET** button.

- You can adjust the volume within the range of "0" to "50." If you select "–," the volume is set to the previous level when the unit is turned off.

VOLUME .....

**After completing the settings...**

The daily timer indicator lights, and the setting items appear one after another in the display window.

Turns off the unit (standby) if you have set the daily timer with the unit turned on.



**If you press a certain button while Daily Timer is operating**

The unit will not turn off automatically.

**To use the same Daily Timer settings repeatedly**

Once you have set Daily Timer, it remains stored in memory until you change it.

To activate the daily timer with the previous settings, follow the procedure below:

- 1** Press **CLOCK/TIMER** button repeatedly until "DAILY TIMER" appears in the display window.

DAILY TIMER

- 2** Press **SET** button to activate Daily timer.

The daily timer indicator lights, and the setting items appear one after another in the display window.

- To deactivate the daily timer, press **CANCEL** button in this step.

## Using Sleep Timer

With Sleep Timer, you can fall asleep to your favorite music or radio program.

 
### How Sleep Timer actually works

The system automatically turns off after the selected time length passes while playing any source.

**On the remote control only:**

#### 1 Press SLEEP button on the remote control repeatedly to select the sleep timer.

- Each time you press the button, the time length changes as follows:



#### 2 Wait for about 5 seconds after selecting the time length.

When the sleep timer setting is completed, the display window dims and just shows the remaining time until the shut-off time minute by minute like "SLEEP 30" then "SLEEP 29".


- To change the shut-off time, press SLEEP button repeatedly until the desired time length appears.
- To cancel the setting, press SLEEP button repeatedly until the sleep timer indication disappears.

## Timer Priority


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are the priorities for each timer.

- Recording Timer has priority over Daily Timer and Sleep Timer.**

If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

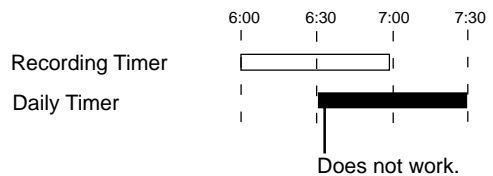


If Recording Timer is set to come on while Sleep Timer is operating, Sleep Timer will be canceled several seconds before Recording Timer comes on.

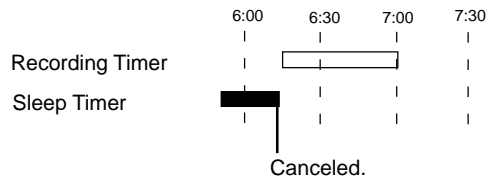

- Sleep Timer has priority over Daily Timer.**

If Daily Timer is set to come on while Sleep Timer is operating, Daily Timer will not come on at all.

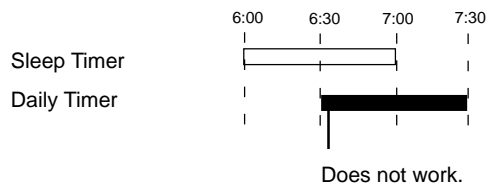

Therefore, the equation is like this (high > low):

**Recording Timer > Sleep Timer > Daily Timer**

# Maintenance and Additional Information

## General Notes

 
 
In general, you will have the best performance by keeping your CDs, cassette tapes and the mechanism clean.

- Store CDs and cassette tapes in their cases, and keep them in cabinets or on shelves.
- Keep the CD disc tray, and the cassette tapes tray closed when not in use.


## Handling CDs



- Only CDs bearing this mark can be used with this system. However, continued use of irregular shape CDs (e.g. heart shape, octagonal) can damage the system.



- Remove the CD from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the CD.
- Put the CD back in its case after use to prevent warping.

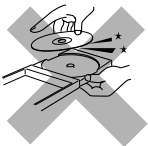

- Be careful not to scratch the surface of the CD when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



- To clean the CD  
Wipe the CD with a soft cloth in a straight line from center to edge.




DO NOT use any solvent — such as conventional record cleaner, spray, thinner, or benzine — to clean the CD.

## Handling Cassette Tapes

### Cautions regarding handling

- Do not touch the surface of the tape or pull the tape out of the cassette.
- Tape spooled loosely around the hubs is likely to jam in the pinch rollers and capstans. Before loading the tape into the cassette tray, take up the slack in the tape as shown below.

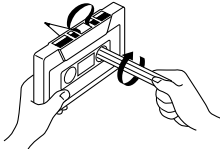


### Tape storage

- Place tapes in their cases for storage.
- Avoid storing tapes on top of TVs or speakers, in sunlight or places of high temperature, or in humid or dusty areas.

### To prevent accidental erasure


- Cassette tapes have tabs to prevent accidental erasure.
- If you remove the tabs after making a recording, the cassette deck cannot be set to record when that tape is loaded. Remove the tabs so that valuable recordings will not be accidentally erased.

Recording (erasure) is not possible when the tabs are removed.

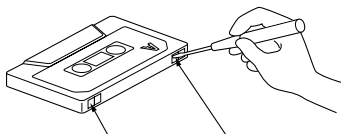

For reverse side (B) For front side (A)

- To make another recording on a tape whose tabs have been removed, cover the tab holes with adhesive tape.

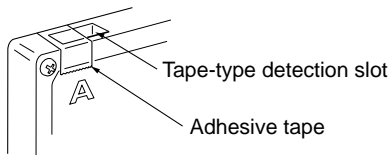

**DO NOT cover the tape-type detection slots.**

## Types of Cassette Tapes

This cassette deck unit incorporates an Automatic Tape Detection function. This mechanism uses the tape-type detection holes to distinguish which type of tape was inserted, and sets the bias and equalizer to the optimum settings for that tape automatically.

 
The following types of tapes may be used with this cassette deck unit.

### Normal tape

#### TYPE I

BIAS: NORMAL

EQ: 120 $\mu$ s




Normal (No detection slots) Tab  
(to prevent accidental erasure)

### High position (CrO<sub>2</sub>) tape
 
#### TYPE II

BIAS: HIGH

EQ: 70 $\mu$ s




High position  
detection slots

### Metal tape (only for playback)
 
#### TYPE IV

BIAS: METAL

EQ: 70 $\mu$ s



Metal detection slots



- Certain early period Metal and High position (CrO<sub>2</sub>) tapes may not have tape-type detection slots. The cassette deck unit cannot obtain the correct characteristics for these tapes.
- Ferromagnetic (FeCr) TYPE III tapes cannot be used with this cassette deck unit.

# Troubleshooting

If you are having a problem with your system, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the units has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
No sound is heard.	<ul style="list-style-type: none"> <li>• Connections are incorrect, or loose.</li> <li>• Headphones are connected.</li> <li>• Volume level is set to “–”.</li> </ul>	<ul style="list-style-type: none"> <li>• Check all connections and make corrections (see pages 6 – 9).</li> <li>• Disconnect the headphones (see page 12).</li> <li>• Adjust the volume again (see page 11).</li> </ul>
Poor radio reception.	<ul style="list-style-type: none"> <li>• The antenna is not connected correctly.</li> <li>• The AM loop antenna is too close to the units.</li> <li>• The FM antenna is not properly extended and positioned.</li> <li>• The AM radio noise interferes with tape recording.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect the antenna securely.</li> <li>• Change the position and direction of the AM loop antenna.</li> <li>• Extend FM antenna to the best reception position (see page 7).</li> <li>• Set the BEAT CUT selector again (see page 27).</li> </ul>
Unable to record onto a tape.	<ul style="list-style-type: none"> <li>• You are using a tape without a protect tab.</li> <li>• Tape-type detection slots are covered by foreign matters.</li> </ul>	<ul style="list-style-type: none"> <li>• Cover the hole with adhesive tape (see page 34).</li> <li>• Remove the foreign matters.</li> </ul>
The CD skips.	<ul style="list-style-type: none"> <li>• The CD is dirty or scratched.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean or replace the CD (see page 33).</li> </ul>
Unable to operate using the remote control.	<ul style="list-style-type: none"> <li>• The path between the remote control and the remote sensor on the front panel is blocked.</li> <li>• The batteries have lost their charge.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the obstruction.</li> <li>• Replace the batteries (see page 6).</li> </ul>
Loaded CD and tape cannot be ejected.	<ul style="list-style-type: none"> <li>• The main AC power cord is not plugged in.</li> <li>• The system is under the recording operations.</li> </ul>	<ul style="list-style-type: none"> <li>• Plug in the AC power plug.</li> <li>• Stop the recording if required (see pages 27).</li> </ul>
The CD does not play.	<ul style="list-style-type: none"> <li>• The CD is upside down.</li> </ul>	<ul style="list-style-type: none"> <li>• Put in the CD with the label side up.</li> </ul>
Operations are disabled.	<ul style="list-style-type: none"> <li>• The built-in microprocessor has malfunctioned due to external electrical interference.</li> </ul>	<ul style="list-style-type: none"> <li>• Unplug the system then plug it back in.</li> </ul>



# Specifications

## **Stereo Amplifier**      **AX-UXG6**

Output power:  
    **48 W (24 W + 24 W) at 6 Ω (Max.)**  
    **42 W (21 W + 21 W) at 6 Ω (10% THD)**  
Load impedance:            6 Ω (6 Ω to 16 Ω allowance)  
Audio output level/Impedance (at 1 kHz):  
    Sub Woofer 800 mV/440 Ω  
Power requirement:        AC 230 V  $\sim$ , 50 Hz  
Power consumption:        63 W (at operation)  
                                  2.0 W (on standby: with  
                                  Dimmer)  
Dimensions (approx.):     182 mm x 81 mm x 313 mm  
                                  (W/H/D)  
                                  (7 <sup>3</sup>/<sub>16</sub> in. x 3 <sup>1</sup>/<sub>4</sub> in. x 12 <sup>3</sup>/<sub>8</sub> in.)  
Mass (approx.):            3.8 kg (8.4 lbs)

## **Compact Disc/Tuner**    **XT-UXG6R**

Audio input sensitivity/Impedance (at 1 kHz):  
    AUX: 400 mV/47 kΩ

[CD section]

Digital output:            OPTICAL DIGITAL OUT  
Wow and flutter:           Immeasurable

[Tuner section]

FM tuning range:         87.50 MHz – 108.00 MHz  
AM tuning range:         MW: 522 kHz – 1,629 kHz  
                                  LW: 144 kHz – 288 kHz  
Dimensions (approx.):     181 mm x 81 mm x 313 mm  
                                  (W/H/D)  
                                  (7 <sup>3</sup>/<sub>16</sub> in. x 3 <sup>1</sup>/<sub>4</sub> in. x 12 <sup>3</sup>/<sub>8</sub> in.)  
Mass (approx.):            1.9 kg (4.2 lbs)

## **Cassette Deck**            **TD-UXG6**

Frequency response :  
    Normal                    30 Hz – 15,000 Hz  
    High position            30 Hz – 16,000 Hz  
Wow and flutter:            0.1 % WRMS  
Dimensions (approx.):     181 mm x 81 mm x 304 mm  
                                  (W/H/D)  
                                  (7 <sup>3</sup>/<sub>16</sub> in. x 3 <sup>1</sup>/<sub>4</sub> in. x 12 in.)  
Mass (approx.):            1.9 kg (4.2 lbs)

## **Speaker System**         **SP-UXG6**


Type:                         2-way Bass-Reflex Type  
Speaker unit:                Woofer     11.5 cm (4 <sup>9</sup>/<sub>16</sub> in.)  
                                  Cone x 1  
                                  Tweeter    3.0 cm (1 <sup>3</sup>/<sub>16</sub> in.)  
                                  Balanced Dome x 1  
Power handling capacity: 24 W  
Impedance:                   6 Ω  
Frequency range:            40 Hz – 20,000 Hz  
Sound Pressure Level:      85.5 dB/W•m  
Dimensions (approx.):      157 mm x 295 mm x 232 mm  
                                  (W/H/D)  
                                  (6 <sup>3</sup>/<sub>16</sub> in. x 11 <sup>5</sup>/<sub>8</sub> in. x 9 <sup>3</sup>/<sub>16</sub> in.)  
Mass (approx.):            3.3 kg (7.3 lbs) each

## **Supplied Accessories**

See page 6.

Design and specifications are subject to change without notice.

US and foreign patents licensed from Dolby Laboratories Licensing Corporation.

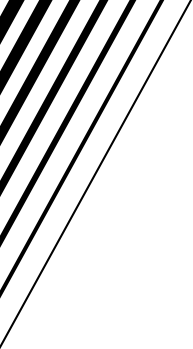

# JVC



## MICRO COMPONENT SYSTEM

UX-G6R

Consists of AX-UXG6, XT-UXG6R, TD-UXG6,  
and SP-UXG6.

STEREO AMPLIFIER

AX-UXG6

COMPACT DISC/TUNER


XT-UXG6R

CASSETTE DECK

TD-UXG6

SPEAKER SYSTEM

SP-UXG6

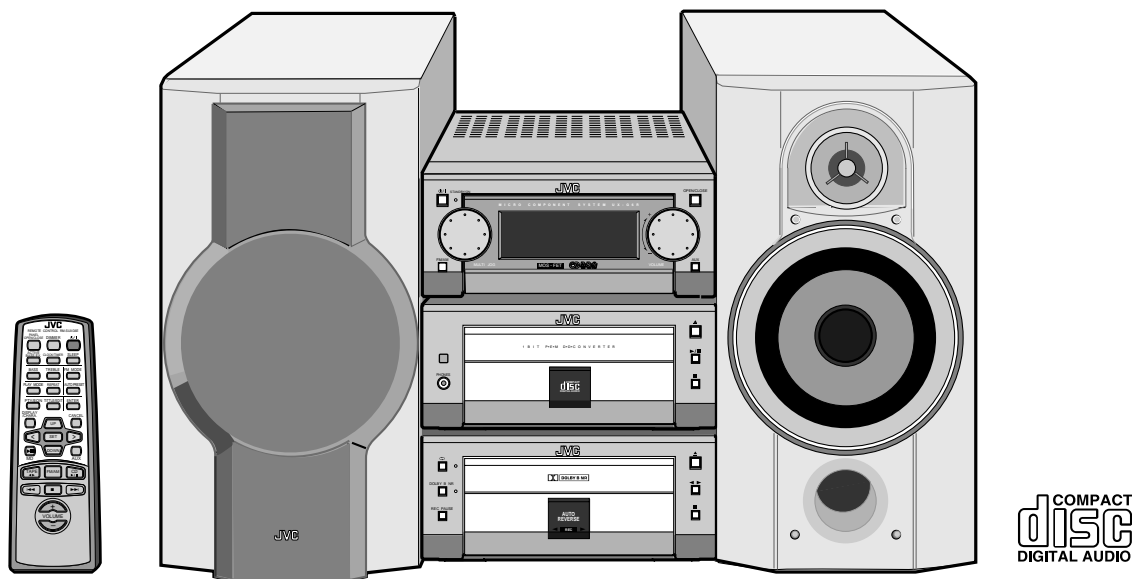

 **R-D-SEON**

**INSTRUCTIONS**  
**BEDIENUNGSANLEITUNG**  
**MANUEL D'INSTRUCTIONS**  
**GEBRUIKSAANWIJZING**  
**MANUAL DE INSTRUCCIONES**  
**ISTRUZIONI**

**For Customer Use:**

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

LVT0376-002B

[E]

# Warnings, Cautions and Others

## Warnung, Achtung und sonstige Hinweise

## Mises en garde, précautions et indications diverses

## Waarschuwingen, voorzorgen en andere mededelingen

## Avisos, precauciones y otras notas

## Avvertenze e precauzioni da osservare

### Caution — $\odot/!$ switch!

Disconnect the mains plug to shut the power off completely (the STANDBY/ON lamp goes off).

The  $\odot/!$  switch in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights red.
- When the unit is turned on, the STANDBY/ON lamp lights green.

The power can be remote controlled.

### Achtung — Netzschalter $\odot/!$

Ziehen Sie den Netzstecker ab, um die Stromversorgung vollständig auszuschalten (die Leuchte STANDBY/ON schaltet sich aus).

Die Stromversorgung wird unabhängig davon, in welcher Stellung sich der Netzschalter  $\odot/!$  befindet, nicht unterbrochen.

- Wenn sich die Anlage im Bereitschaftsbetrieb befindet, leuchtet die Leuchte STANDBY/ON rot.
- Wenn die Anlage eingeschaltet ist, leuchtet die Leuchte STANDBY/ON grün.

Die Stromversorgung kann per Fernsteuerung ein- und ausgeschaltet werden.

### Attention — Commutateur $\odot/!$

Déconnectez la prise d'alimentation secteur pour mettre l'appareil complètement hors tension (le témoin STANDBY/ON s'éteint).

L'interrupteur  $\odot/!$ , sur n'importe quelle position, ne peut pas déconnecter l'appareil du secteur.

- Quand l'appareil est en mode de veille, le témoin STANDBY/ON est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY/ON est allumé en vert.

L'alimentation peut être télécommandée.

### Waarschuwing — $\odot/!$ toets!

Verwijder de stekker uit het stopcontact om de stroomtoevoer helemaal uit te schakelen (het lampje STANDBY/ON gaat uit).

Met de toets  $\odot/!$  is het niet mogelijk om de stroomtoevoer naar de eenheid helemaal uit te schakelen. U moet hiertoe de stekker uit het stopcontact verwijderen.

- Als de eenheid standby staat, is het lampje STANDBY/ON rood van kleur.
- Als de eenheid is ingeschakeld, is het lampje STANDBY/ON groen van kleur.

De stroomtoevoer kan met behulp van de afstandsbediening worden geregeld.

### Precaución — Interruptor $\odot/!$

Desconecte el enchufe de la red para desconectar la alimentación por completo (la lámpara STANDBY/ON se apaga).

El interruptor  $\odot/!$  no desconectará completamente la alimentación principal, cualquiera que sea su posición.

- Cuando la unidad está en espera, la lámpara STANDBY/ON se enciende en rojo.
- Cuando conecta la unidad, la lámpara STANDBY/ON se enciende en verde.

La alimentación puede ser controlada a distancia.

### Attenzione — Interruttore $\odot/!$


Disinserire la spina di rete per disattivare completamente l'alimentazione (la spia STANDBY/ON si spegne).

L'interruttore  $\odot/!$ , in qualsiasi posizione, non disattiva la linea di rete.

- Quando l'impianto è in standby, la spia STANDBY/ON è rossa.
- Quando l'impianto viene attivato, la spia STANDBY/ON è verde.

L'alimentazione può essere comandata a distanza.

The STANDBY/ON lamp  
Leuchte STANDBY/ON  
Le témoin STANDBY/ON  
Het lampje STANDBY/ON  
Lámpara STANDBY/ON  
La spia STANDBY/ON

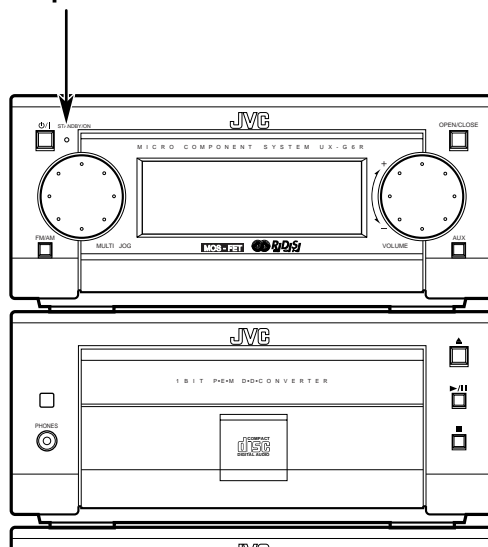

### Per l'Italia:

“Si dichiara che il questo prodotto di marca JVC è conforme alle prescrizioni del Decreto Ministeriale n.548 del 28/08/95 pubblicato sulla Gazzetta Ufficiale della Repubblica Italiana n.301 del 28/12/95.”

---

**CAUTION**

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

**ACHTUNG**

Zur Verhinderung von elektrischen Schlägen, Brandgefahr, usw:

1. Keine Schrauben lösen oder Abdeckungen entfernen und das Gehäuse nicht öffnen.
2. Dieses Gerät weder Regen noch Feuchtigkeit aussetzen.

**ATTENTION**

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

**VOORZICHTIG**

Ter vermindering van gevaar voor brand, elektrische schokken, enz.:

1. Verwijder geen schroeven, panelen of de behuizing.
2. Stel het toestel niet bloot aan regen of vocht.

**PRECAUCIÓN**

Para reducir riesgos de choques eléctricos, incendio, etc.:

1. No extraiga los tornillos, los cubiertas ni la caja.
2. No exponga este aparato a la lluvia o a la humedad.

**ATTENZIONE**

Per ridurre il rischio di shock elettrici, incendi, ecc...

1. Non togliete viti, coperchi o la scatola.
2. Non esponete l'apparecchio alla pioggia e all'umidità.

### Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

- 1 Front:
  - No obstructions and open spacing.
- 2 Sides/ Top/ Back:
  - No obstructions should be placed in the areas shown by the dimensions below.
- 3 Bottom:
  - Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

### Vorsicht: Ausreichende Belüftung

Zur Vermeidung von elektrischen Schlägen, Feuer und sonstigen Schäden sollte das Gerät unter folgenden Bedingungen aufgestellt werden:

- 1 Vorderseite:
  - Hindernisfrei und gut zugänglich.
- 2 Seiten- und Rückwände:
  - Hindernisfrei in allen gegebenen Abständen (s. Abbildung).
- 3 Unterseite:
  - Die Stellfläche muß absolut eben sein. Sorgen Sie für ausreichende Luftzufuhr durch Aufstellung auf einem Stand mit mindestens 10 cm Höhe.

### Attention: Aération correcte

Pour prévenir tout risque de décharge électrique ou d'incendie et éviter toute détérioration, installez l'appareil de la manière suivante:

- 1 Avant:
  - Bien dégagé de tout objet.
- 2 Côtés/dessus/dessous:
  - Assurez-vous que rien ne bloque les espaces indiqués sur le schéma ci-dessous.
- 3 Dessous:
  - Posez l'appareil sur une surface plane et horizontale. Veillez à ce que sa ventilation correcte puisse se faire en le plaçant sur un support d'au moins dix centimètres de hauteur.

### Voorzichtig: Goede ventilatie vereist

Om brand, elektrische schokken en beschadiging te voorkomen, moet u het toestel als volgt opstellen:

- 1 Voorkant:
  - Geen belemmeringen en voldoende ruimte.
- 2 Zijkanten/boven-/onderkant:
  - Geen belemmeringen plaatsen in de hieronder aangegeven zones.
- 3 Onderkant:
  - Op vlakke ondergrond plaatsen. Voldoende ventilatieruimte voorzien door het toestel op een onderstel met een hoogte van 10 cm of meer te plaatsen.

### Precaucion: ventilación correcta


Para evitar el riesgo de descargas eléctricas e incendio y prevenir posibles daños, instale el equipo en un lugar que cumpla los siguientes requisitos:

- 1 Parte frontal:
  - Sin obstrucciones, espacio abierto.
- 2 Lados/parte superior/parte posterior:
  - No debe haber ninguna obstrucción en las áreas mostradas por las dimensiones de la siguiente figura.
- 3 Parte inferior:
  - Sitúe el equipo sobre una superficie nivelada. Mantenga un espacio adecuado para permitir el paso del aire y una correcta ventilación, situando el equipo sobre un soporte de 10 o más cm de altura.

### Attenzione: Per una corretta ventilazione


Per prevenire il rischio di scosse elettriche e di incendio ed evitare possibili danni, collocare le apparecchiature nel modo seguente:

- 1 Parte anteriore:
  - Nessun ostacolo e spazio libero.
- 2 Lati/Parte superiore/Retro:
  - Lasciare libere le zone indicate dalle dimensioni di seguito.
- 3 Base:
  - Collocare su una superficie piana. Consentire un'adeguata ventilazione dell'impianto appoggiandolo su un tavolinetto alto almeno 10 cm.

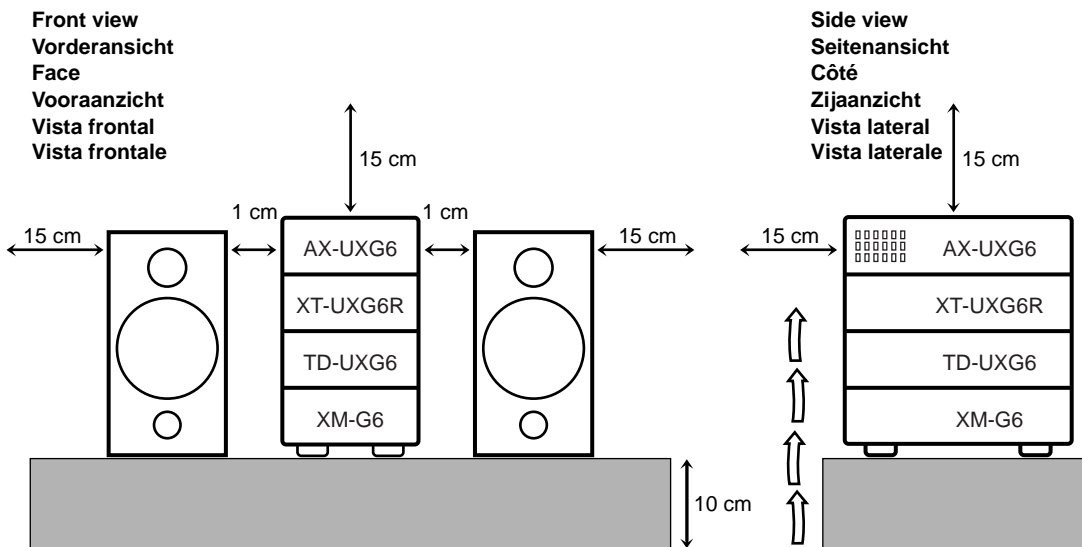

**REPRODUCTION OF LABELS/ANBRINGUNGSORTE FÜR LASER-PRODUKTE/REPRODUCTION DES ETIQUETTES/ VERKLARING VAN DE LABELS/REPRODUCCIÓN DE ETIQUETAS/RIPRODUZIONE DELLE ETICHETTE**

- |  |   |
|--|---|
| ① CLASSIFICATION LABEL, PLACED ON EXTERIOR SURFACE                 | ② WARNING LABEL, PLACED INSIDE THE UNIT                         |
| ① KLASSIFIZIERUNGSHINWEIS BEFINDET SICH AUF DER AUSSENSIETE        | ② WARNETIKETTE IM GERÄTEINNEREN                                 |
| ① ÉTIQUETTE DE CLASSIFICATION, PLACÉE SUR LA SURFACE EXTÉRIEURE    | ② ETIQUETTE D'AVERTISSEMENT PLACÉE À L'INTERIEUR DE L'APPAREIL  |
| ① CLASSIFICATIE-ETIKET AAN DE BUITENKANT VAN HET APPARAAT          | ② WAARSCHUWINGSLABEL, IN HET APPARAAT                           |
| ① ETIQUETA DE CLASIFICACION, PROVISTA SOBRE LA SUPERFICIE EXTERIOR | ② ETIQUETA DE ADVERTENCIA, PEGADA EN EL INTERIOR DE LA UNIDAD   |
| ① ETICHETTA DI CLASSIFICAZIONE POSTA ALL'ESTERNO                   | ② ETICHETTA DI AVVERTENZA, SITUATA ALL'INTERNO DELL'APPARECCHIO |

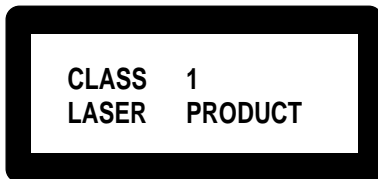

**DANGER:** Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

**WARNING:** Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)

**ADVASEL:** Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling (d)

**VARO:** Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

1. LASER-PRODUKT DER KLASSE 1
2. **GEFAHR:** Unsichtbare Laserstrahlung bei Öffnung und fehlerhafter oder beschädigter Spre. Direkten Kontakt mit dem Strahl vermeiden!
3. **ACHTUNG:** Das Gehäuse nicht öffnen. Das Gerät enthält keinerlei Teile, die vom Benutzer gewartet werden können. Überlassen Sie Wartungsarbeiten bitte qualifizierten Kundendienst-Fachleuten.

1. PRODUIT LASER CLASSE 1
2. **ATTENTION:** Radiation laser invisible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

1. KLAS 1 LASERPRODUKT
2. **GEVAARLIJK:** Onzichtbare laserstraling wanneer open en de beveiliging faalt of uitgeschakeld is. Voorkom het direct blootstaan aan de straal.
3. **VOORZICHTIG:** De bovenkap niet openen. Binnenin het toestel bevinden zich geen door de gebruiker te repareren onderdelen: laat onderhoud over aan bekwame vakpersoneel.

1. PRODUCTO LASER CLASE 1
2. **PELIGRO:** En el interior hay radiación láser invisible. Evite el contacto directo con el haz.
3. **PRECAUCIÓN:** No abra la tapa superior. En el interior de la unidad no existen piezas reparables por el usuario; deje todo servicio técnico en manos de personal calificado.

1. PRODOTTO LASER CLASSE 1
2. **PERICOLO:** Radiazione laser invisibile quando l'apparecchio è aperto ed il dispositivo di sicurezza è guasto o disattivato. Evitare l'esposizione diretta ai raggi.
3. **ATTENZIONE:** Non aprire il coperchio superiore. Non vi sono parti adoperabili dall'utente all'interno di questo apparecchio; lasciare tutti i controlli a personale qualificato.

# Introduction

We would like to thank you for purchasing one of our JVC products. Before operating this micro component system, read this manual carefully and thoroughly to obtain the best possible performance from your system, and retain this manual for future reference.

## About This Manual

This manual is organized as follows:

- The manual mainly explains operations using the buttons and controls on the units. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the units. If operation using the remote control is different from that using each unit, it is then explained.
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the system, setting the volume, changing the sound effects, and others, which are explained in the section “Basic Settings” and “Common Operations” on pages 10 to 13.
- The following marks are used in this manual:



Gives you warnings and cautions to prevent from a damage or risk of fire/ electric shock.

Also gives you information which is not good for obtaining the best possible performance from the units.



Gives you information and hints you had better know.

### Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lens inside the units in the following cases:

- After starting heating in the room
- In a damp room
- If the units are brought directly from a cold to a warm place

Should this occur, the system may malfunction. In this case, leave the units turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

### Others

- Should any metallic object or liquid fall into a unit, unplug the units and consult your dealer before operating any further.
- If you are not going to operate the units for an extended period of time, unplug the AC power cord from the wall outlet.



DO NOT disassemble the units since there are no user serviceable parts inside.

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold — between 5°C (41°F) and 35°C (95°F).
- Install the units in a location with adequate ventilation to prevent internal heat buildup in the units.
- Leave sufficient distance between the units and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the units in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

If anything goes wrong, unplug the AC power cord and consult your dealer.



# Contents


<b>Introduction .....</b>	<b>1</b>	<b>Playing Back a Tape .....</b>	<b>24</b>
About This Manual .....	1	Playing Back a Tape — Basic Operation .....	24
Precautions .....	1	Fast-Winding a Tape .....	25
<b>Contents .....</b>	<b>2</b>	Searching and Skipping to Each Program — Music Scan .....	25
<b>Location of the Buttons and Controls .....</b>	<b>3</b>	Playing Back Dolby-Recorded Tape .....	25
Front Panels .....	4	<b>Recording onto a Tape .....</b>	<b>26</b>
Remote Control .....	5	Manual Recording onto a Tape .....	26
<b>Getting Started .....</b>	<b>6</b>	Recording in Auto Reverse .....	27
Unpacking .....	6	Synchronized Recording from a CD .....	28
Putting the Batteries into the Remote Control .....	6	Recording from the external equipment .....	28
Connecting the System Control Cables and the External Wire .....	6	<b>Using the Timers .....</b>	<b>29</b>
Connecting MD Recorder XM-G6 .....	7	Using Recording Timer .....	29
Connecting Sub Woofer System .....	7	Using Daily Timer .....	30
Connecting Antennas .....	7	Using Sleep Timer .....	32
Connecting Speakers .....	8	Timer Priority .....	32
Connecting Other Equipments .....	9	<b>Maintenance and Additional Information .....</b>	<b>33</b>
<b>Basic Settings .....</b>	<b>10</b>	Handling CDs .....	33
Setting the Clock .....	10	Handling Cassette Tapes .....	34
Setting the Display Illumination (Dimmer) .....	10	Types of Cassette Tapes .....	34
<b>Common Operations .....</b>	<b>11</b>	<b>Troubleshooting .....</b>	<b>35</b>
Turning On the Power and Selecting the Sources .....	11	<b>Specifications .....</b>	<b>36</b>
Adjusting the Volume .....	11		
Reinforcing the Bass Sound .....	12		
Adjusting Bass and Treble Sounds .....	12		
Operating the Sliding Panel .....	13		
Listening to the External Equipment .....	13		
<b>Listening to FM and AM Broadcasts .....</b>	<b>14</b>		
Tuning in a Station .....	14		
Presetting Stations .....	15		
<b>Receiving FM Stations with RDS .....</b>	<b>16</b>		
Changing the RDS Information .....	16		
Searching for Programs by PTY Codes (PTY Search) .....	17		
Switching to a Program Type Temporarily .....	17		
<b>Playing Back a CD .....</b>	<b>20</b>		
Playing Back the Entire Disc — Normal Play .....	20		
Searching and Skipping Tracks .....	21		
Programing the Playing Order of the Tracks — Program Play .....	21		
Playing at Random — Random Play .....	23		
Repeating Tracks — Repeat Play .....	23		

# Location of the Buttons and


Become familiar with the buttons and controls on the units.

## Front Panels


AX-UXG6  
Stereo Amplifier

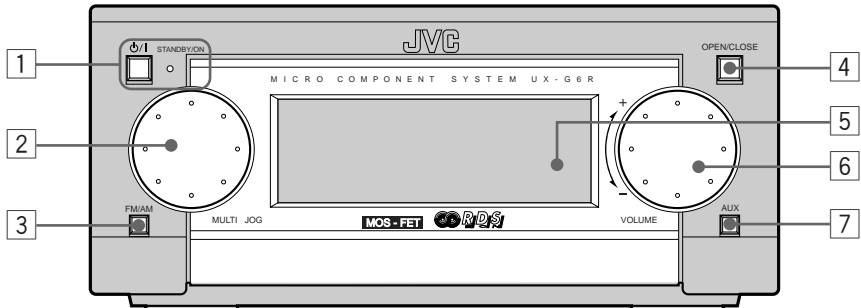


XT-UXG6R  
Compact Disc  
/Tuner

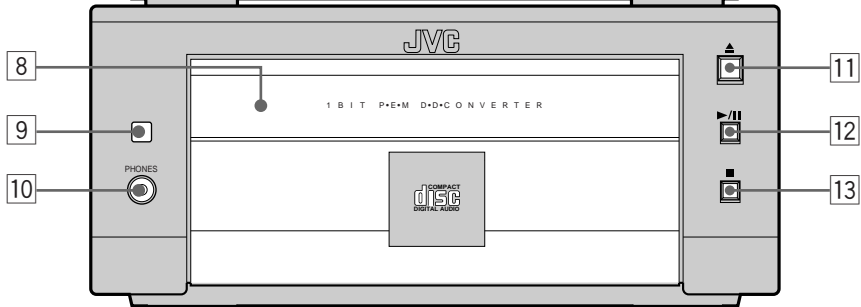

TD-UXG6  
Cassette Deck

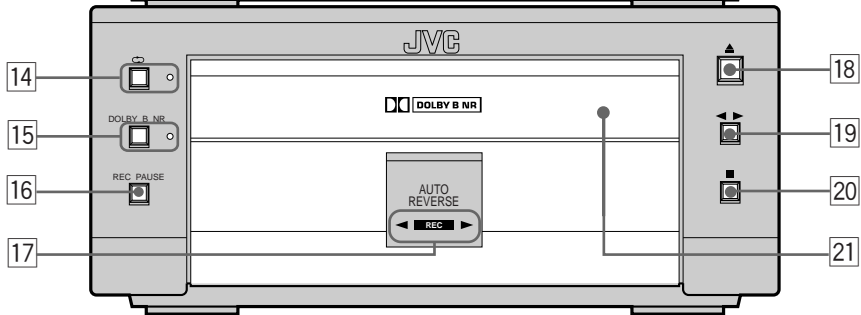

## Display window

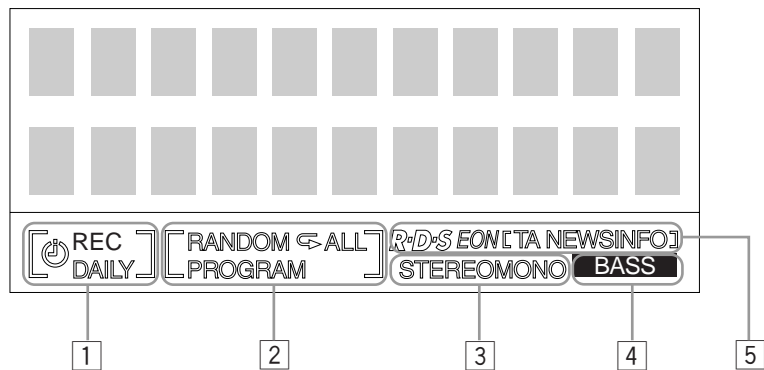

## Front Panels

### AX-UXG6 Stereo Amplifier

- 1 button and STANDBY/ON lamp (11)\*
- 2 MULTI JOG dial
- 3 FM/AM button (14)\*
- 4 OPEN/CLOSE button (13)\*
- 5 Display window
- 6 VOLUME dial (11)
- 7 AUX button (13, 28)\*

### XT-UXG6R Compact Disc/Tuner

- 8 CD tray
- 9 Remote sensor (5)
- 10 PHONES jack (12)
- 11 (open/close) button for CD tray (20)\*
- 12 (play/pause) button (21)\*
- 13 (stop) button (21)

### TD-UXG6 Cassette Deck

- 14 (auto-reverse) button and lamp (24, 27)
- 15 DOLBY B NR button and lamp (25, 27)
- 16 REC PAUSE button (26)
- 17 Tape operations indicators (24, 26)
  - Tape direction ( / ) and REC indicators
- 18 (open/close) button for Tape tray (24)\*
- 19 (playback) button (24)\*
- 20 (stop) button (25)
- 21 Tape tray




To press the buttons suffixed with \* mark also turns on the system.

### Display window

- 1 Timer mode indicators
  - REC (recording timer) and DAILY (daily timer) indicators
- 2 CD playback mode indicators
  - PROGRAM, RANDOM, (repeat 1), and ALL (repeat all) mode indicators
- 3 FM mode indicators
  - STEREO and MONO indicators
- 4 BASS indicator
- 5 RDS mode indicators
  - RDS, EON, and TA/NEWS/INFO indicators

### Buttons behind the sliding panel

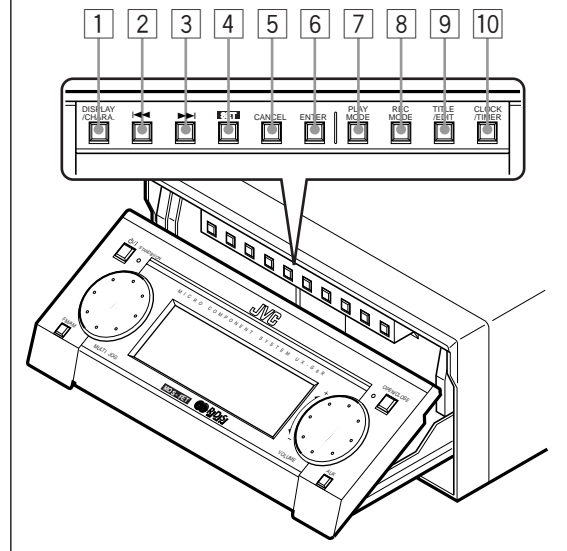

- 1 DISPLAY/CHARA. button (16)
- 2 button (14, 21, 22, 25)
- 3 button (14, 21, 22, 25)
- 4 SET button (22, 29)
- 5 CANCEL button (10, 22, 29)
- 6 ENTER button \*\*
- 7 PLAY MODE button (21)
- 8 REC MODE button (28)
- 9 TITLE/EDIT button \*\*
- 10 CLOCK/TIMER button (10, 29)



\*\* Used only with MiniDisc recorder XM-G6 (not supplied).



- DO NOT operate any button and control until the system setup is completed.
- DO NOT operate the sliding panel by hands, otherwise it will cause serious damages on the sliding mechanism (see page 13).

Become familiar with the buttons on the remote control.

## Remote Control

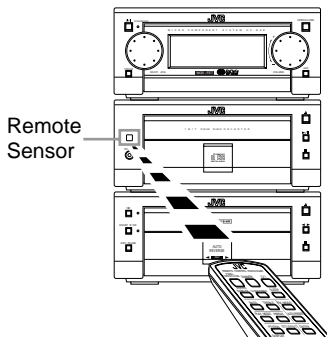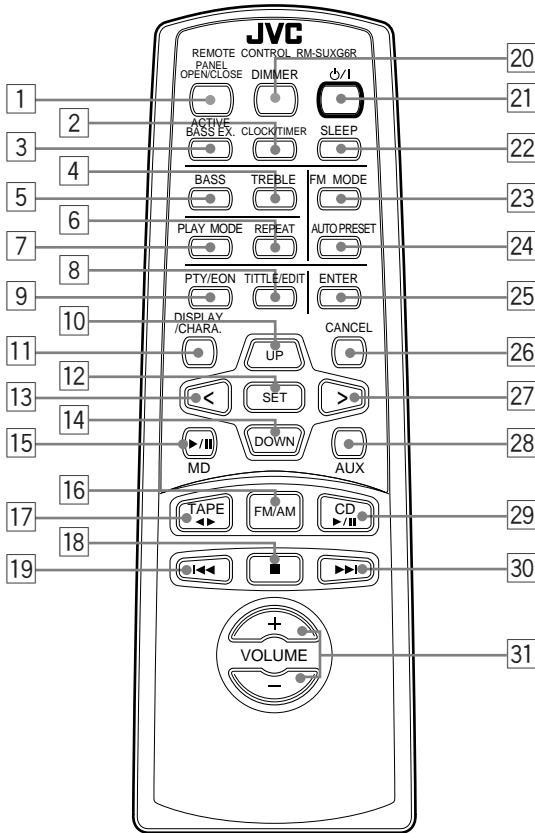

When using the remote control, point it at the remote sensor on the front panel.

## Remote Control

- 1 PANEL OPEN/CLOSE button (13)
- 2 CLOCK/TIMER button (10, 29)
- 3 ACTIVE BASS EX. (extension) button (12)
- 4 TREBLE button (12)
- 5 BASS button (12)
- 6 REPEAT button (23)
- 7 PLAY MODE button (21)
- 8 TITLE/EDIT button \*
- 9 PTY/EON button (17)
- 10 UP button (12, 14, 21)
- 11 DISPLAY/CHARA. button (16)
- 12 SET button (22, 29)
- 13 < (left cursor) button (10, 21, 29)
- 14 DOWN button (12, 14, 21)
- 15 MD >|| (play/pause) button \*
- 16 FM/AM button (14)
- 17 TAPE <> (playback) button (24)
- 18 ■ (stop) button (21, 25)
- 19 <<< button (14, 21, 22, 25)
- 20 DIMMER button (10)
- 21 < (left cursor) button (10, 21, 29)
- 22 SLEEP button (32)
- 23 FM MODE button (15)
- 24 AUTO PRESET button (15)
- 25 ENTER button \*
- 26 CANCEL button (10, 22, 29)
- 27 > (right cursor) button (10, 21, 29)
- 28 AUX button (13, 28)
- 29 CD >|| (play/pause) button (21)
- 30 >>> button (14, 21, 22, 25)
- 31 VOLUME +/- button (11)

\* Used only with MiniDisc recorder XM-G6 (not supplied).



### To operate the system correctly using the remote control

Before using these buttons:

**For Tuner operations**, press FM/AM button on the remote control first.

**For CD operations**, press CD >|| (play/pause) button on the remote control first.

**For Tape operations**, press TAPE <> (playback) button on the remote control first.

# Getting Started

## Unpacking

After unpacking, check to be sure that you have all the following items.

The number in the parentheses indicates the quantity of the pieces supplied.


- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)
- Speaker cords (2)
- External wire (1)

If any is missing, consult your dealer immediately.

## Putting the Batteries into the Remote Control

Insert the batteries — R6P (SUM-3)/AA (15F) — into the remote control, by matching the polarity (+ and –) on the batteries with the + and – markings on the battery compartment.

When the remote control can no longer operate the units, replace both batteries at the same time.

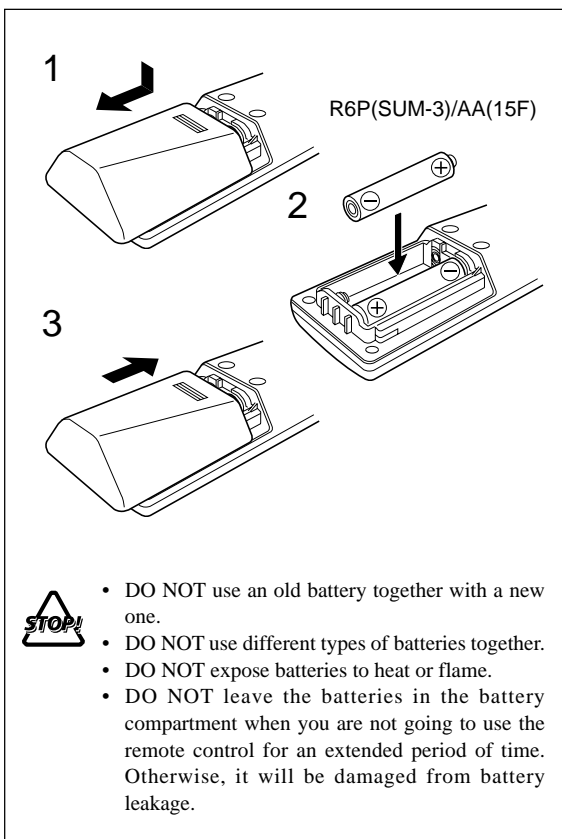


## Connecting the System Control Cables and the External Wire


UX-G6R micro component system consists of three units, AX-UXG6 Stereo Amplifier, XT-UXG6R Compact Disc/Tuner, TD-UXG6 Cassette Deck, and SP-UXG6 Speaker System.

You can easily connect these units using the system control cables equipped on the rear panel of the units.

- **To prevent malfunction**, connect the external wire as illustrated.

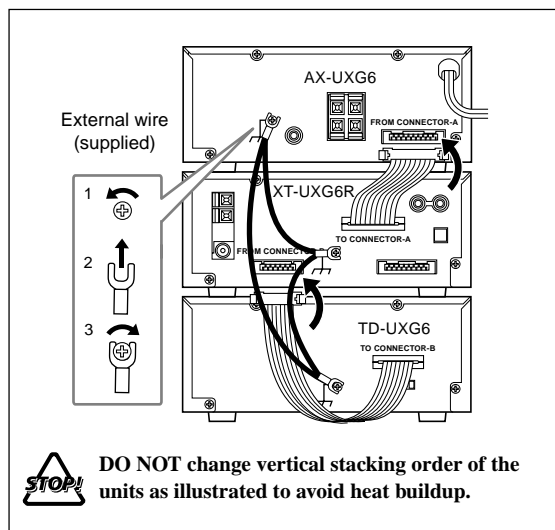

- **To connect the cables**, press the middle of the connector body until it clicks into the connector on the rear panel.
- **To disconnect**, if needed, pull the connector out pushing both sides of the connector body. Never pull out the cables themselves.

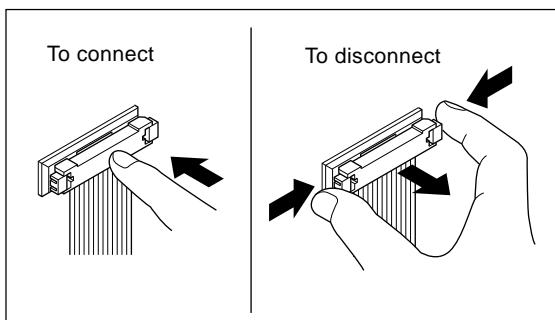


### When connecting the system control cables to the connectors

Make sure to connect the cable to the connector having the same name such as "FROM CONNECTOR-A" and "TO CONNECTOR-A."


## Connecting MD Recorder XM-G6

You can also connect the MD recorder XM-G6 (not supplied), specifically designed for UX-G6R. This unit will complete UX-G6R micro component system. When you connect and use this unit, refer to the Instructions supplied with it for details.

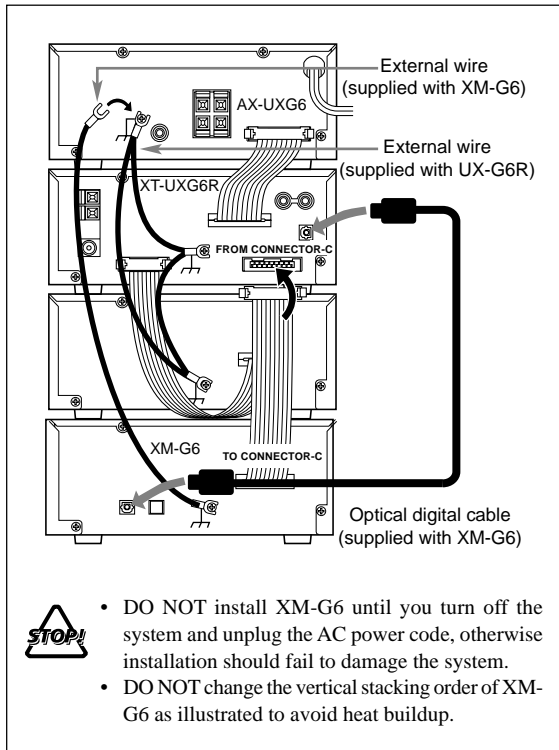


## Connecting Sub Woofer System

When using JVC external sub woofer system, connect audio cable between AX-UXG6's SUB WOOFER OUT jack and the input of your sub woofer system.

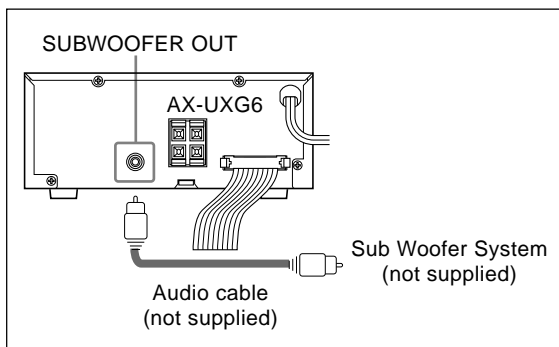

## Connecting Antennas

### Supplied FM antenna

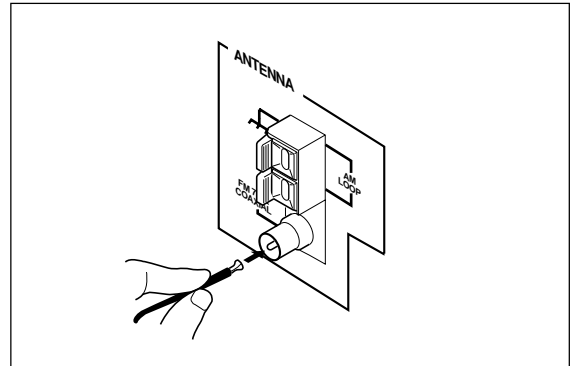

- 1 Attach the FM antenna to the FM 75  $\Omega$  COAXIAL terminal on the rear panel of XT-UXG6R.
- 2 Extend the FM antenna.
- 3 Fasten it up in the position which gives you the best reception.




#### About the supplied FM antenna


The FM antenna supplied with this unit can only be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.

### To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

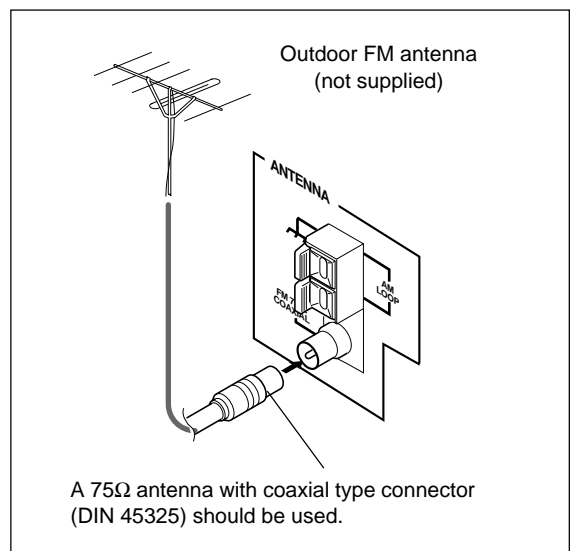


### AM antenna

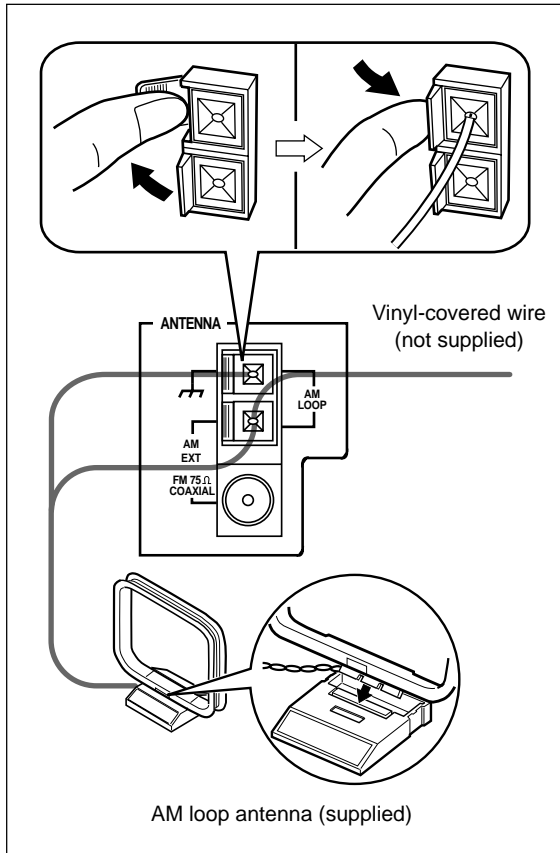

- 1** Connect the AM loop antenna to the AM LOOP terminals as illustrated.
- 2** Turn the AM loop antenna until you have the best reception.

#### To connect an external AM antenna


When reception is poor, connect a single vinyl-covered wire to the AM EXT terminal and extend it horizontally. (The AM loop antenna must remain connected.)

 **For better reception of both FM and AM**


- Make sure the antenna conductors do not touch any other terminals and connecting cables.
- Keep the antennas away from metallic parts of the units, connecting cables, and the AC power cord.

### Connecting Speakers

You can connect the speakers using the speaker cords.

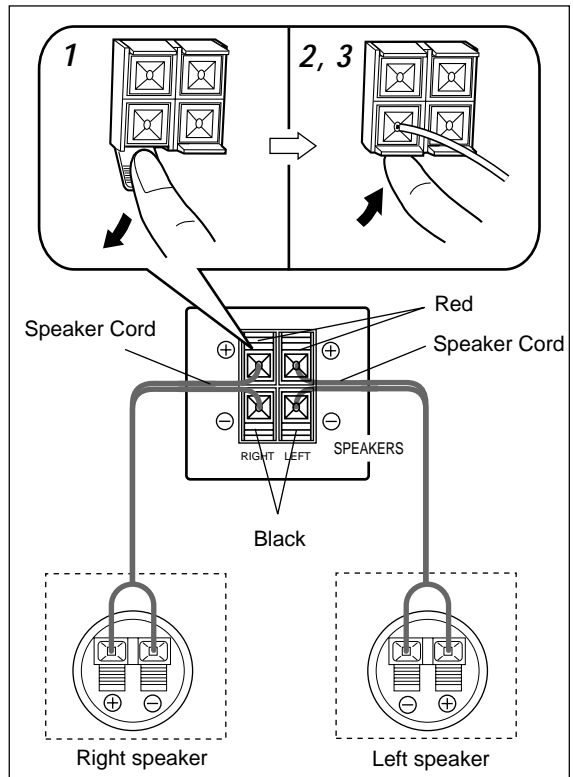

- 1** Open the speaker terminal.
- 2** Insert the end of the speaker cord to the terminal. Match the polarity of the speaker terminals: Red (+) to red (+) and black (-) to black (-).
- 3** Close the speaker terminal on the rear of the unit.

 **When connecting speaker cords**

- Make sure to connect the cords correctly following the right series of above steps. During operation, wrong connection or a short circuit make the power turned off to protect the system. The clock loses the setting and is reset to "0:00". Also the MD recording may fail.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

## Connecting Other Equipments

You can connect the following equipments to the system:

- Audio equipment — used only as an analog playback device.
- Audio equipment with an optical digital input terminal — used as a digital recording device.

When you connect and use these equipments, refer also to the manuals supplied with them.


### To connect audio equipment without a digital output terminal

Connect the audio output jacks on the other equipment and the ANALOG IN jacks, using an audio cable (not supplied).

Be sure that the plugs of the audio cables and the jacks on the rear panel of the unit are color coded: White plugs and jacks are for left audio signals, and red ones for right audio signals.




- DO NOT connect other equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

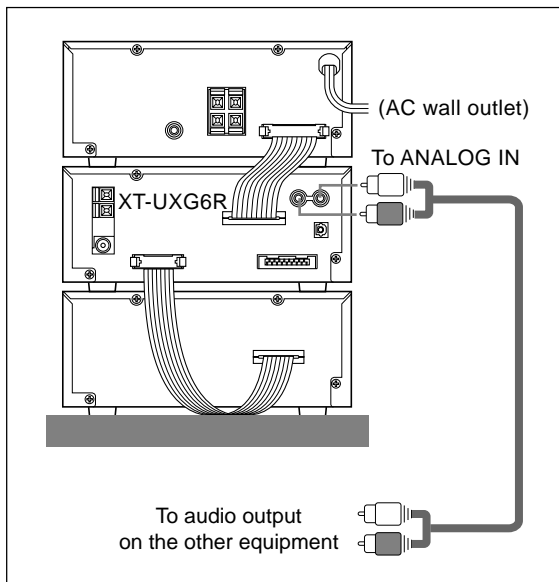

### To connect audio equipment with an optical digital input terminal

By using both an optical digital cable (not supplied) and an audio cable (not supplied), connect:

- Between the optical digital input terminal on the other equipment and the optical digital output terminal on XT-UXG6R.
- Between the audio output jacks on the other equipment and the ANALOG IN jacks.

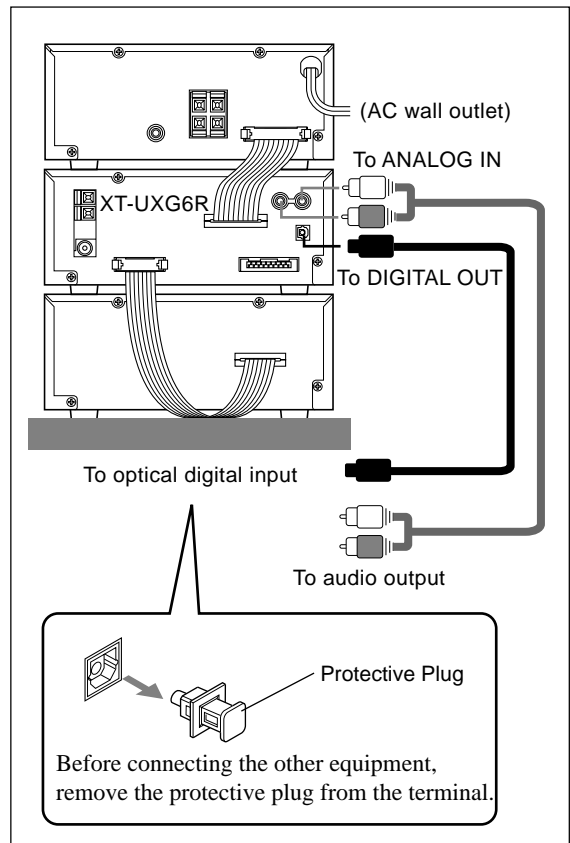


**NOW, you can plug in the system and other connected equipment FINALLY!**

When connecting the AC power cord into a wall outlet, the system switches to standby mode with STANDBY/ON lamp lit red.

- By using audio cable (not supplied), connect between the audio output jacks on the other equipment and the ANALOG IN jacks.



# Basic Settings

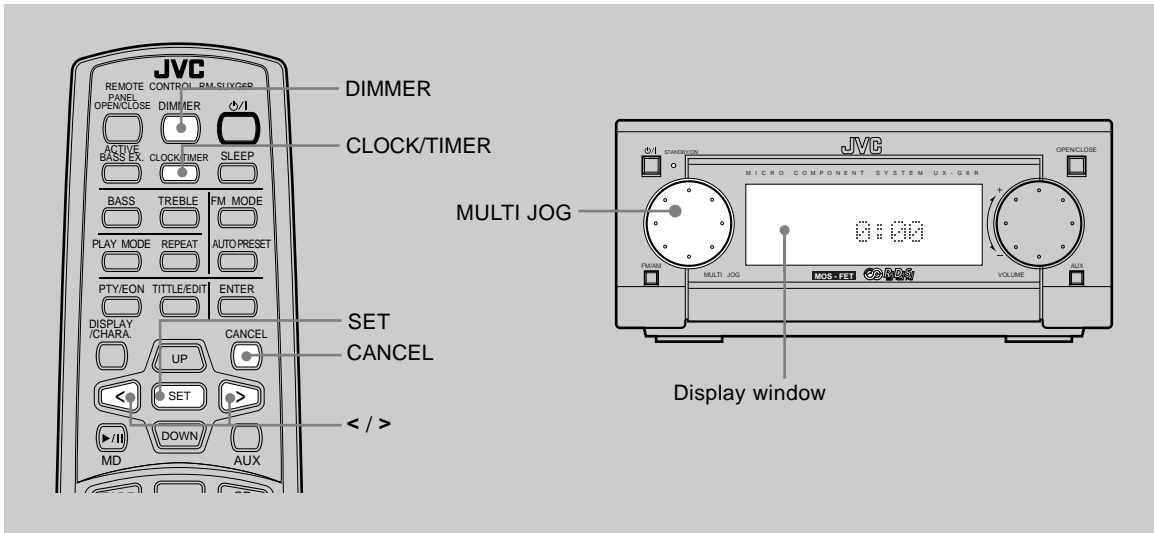

Before operating the system any further, set the clock built in this system first, then some other basic settings.

## Setting the Clock

You can set the clock using the remote control whether the system is turned on or turned off (i.e. standby mode).

- 1 Press **CLOCK/TIMER** button on the remote control. The hour digit in the display window starts blinking.



- 2 Press **</>** button on the remote control to adjust the hour, then press **SET** button on the remote control (rotating **MULTI JOG** dial also available).



- To correct the hour after pressing **SET** button, press **CANCEL** button. The hour digit starts blinking again.

- 3 Press **</>** button on the remote control to adjust the minute, then press **SET** button on the remote control (rotating **MULTI JOG** dial also available).



**notes** **If there is a power failure**  
The clock loses the setting and is reset to "0:00."  
**To adjust the clock again**  
You need to press **CLOCK/TIMER** button five times until the clock setting mode is selected.

## Setting the Display Illumination (Dimmer)

You can adjust the brightness of around the display window. Each time you press **DIMMER**, the display window dims and brightens alternately.

- **While the system is turned off:**  
Press **DIMMER** button, "DISPLAY OFF" appears in the display window for a while and the system clock disappears.




Press the button again, "DISPLAY ON" appears in the display window for a while and only the system clock become dimmed.



- **While the system is turned on:**  
Press **DIMMER** button, both operating information and indicators in the display window dims. The light around **MULTI JOG** dial also becomes darker than usual. Press the button again, all the illumination around the display window recovers as usual.

**notes** **Dimmer setting in the standby mode**  
Once the system is turned on, the dimmer setting in the standby mode does affect neither normal operations nor display indications.

# Common Operations

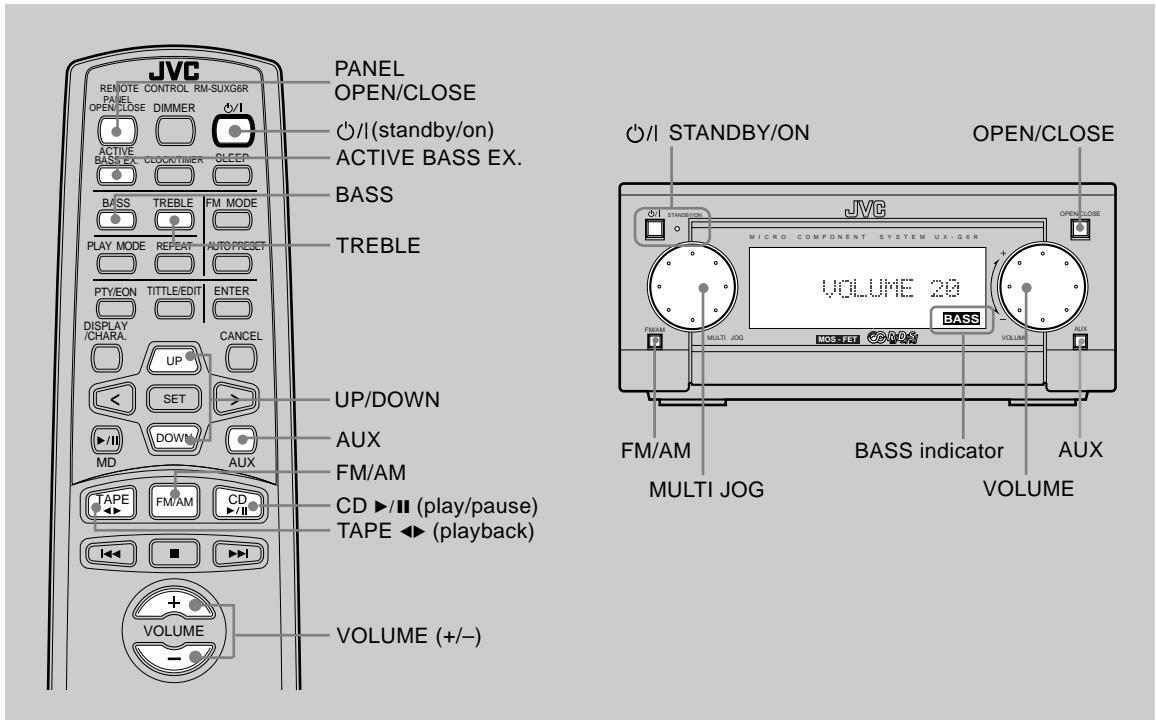

Here are basic and common things that apply to all the operations of UX-G6R system.

## Turning On the Power and Selecting the Sources

When you press a play button for example, like FM/AM, CD ►/|| (play/pause), or TAPE ◀▶ (playback), the system automatically turns on and STANDBY/ON lamp lights green.

### One Touch Play

If any CD or a tape, or last tuned station provided, the system starts playing that source.

To select the external equipment as the source, press MD ►/|| (play/pause) or AUX button so that the system automatically turns on.

### Using $\odot/|$ button

- **To turn on the system without playing,** press  $\odot/|$  button so that STANDBY/ON lamp lights green.
- **To turn off the system (standby mode),** press again  $\odot/|$  button so that STANDBY/ON lamp lights red.

A little power is always consumed even while the system is in standby mode.

- **To save the power consumption,** make use of Dimmer feature (see page 10).
- **To switch off the power supply completely,** unplug the AC power cord from the AC outlet. STANDBY/ON lamp goes off.



### When you unplug the AC power cord or if a power failure occurs

The clock is reset to "0:00" right away, while the tuner preset stations will be erased in a few days.

## Adjusting the Volume

You can adjust the volume level only while the system is turned on.

- Rotate VOLUME dial clockwise to increase the volume level or counterclockwise to decrease it.
- Using VOLUME dial, rotating quickly makes a large change in the volume level while rotating slowly makes a step-by-step change.

- When using the remote control, press VOLUME + button to increase the volume level or press VOLUME – button to decrease it.


The volume level (from 0 to 50) appears in the display window as follows:


VOLUME 20



**For private listening**

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume level before connecting or putting headphones.

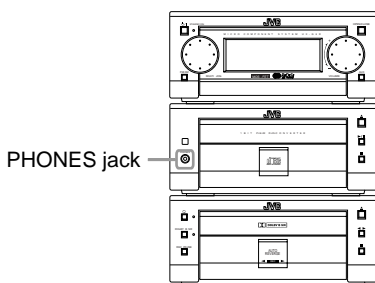



DO NOT turn off the system with the volume level set to an extremely high level; otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the system or start playing any source.  
REMEMBER you cannot adjust the volume level while the system is turned off.

## Reinforcing the Bass Sound

The richness and fullness of the bass sound is maintained regardless of how low you set the volume level. You can use this effect only while listening sources.

- **To get the effect**, press ACTIVE BASS EX. button on the remote control, and its indicator lights in the display window.
- **To cancel the effect**, press the button again so that the indicator goes off.

## Adjusting Bass and Treble Sounds

You can adjust bass and treble sound effects with the remote control, conforming to your preference and acoustic surroundings.

You can use this effect only while listening sources.

### To adjust the bass

**1 Press BASS button.**

The current level settings shortly appears as follows:

BASS +3

To exit from the level setting, press the button again.

**2 Press UP/DOWN button to adjust the level.**

- Press UP button to increase the bass tone level.
- Press DOWN button to decrease the bass tone level.

The bass level can be adjusted in seven steps from –3 through 0 to +3 (step “0” makes no effect).

**To cancel the effect**, adjust the level to “0.”

### To adjust the treble

**1 Press TREBLE button.**

The current level settings shortly appears as follows:

TREBLE –2

To exit from the level setting, press the button again.

**2 Press UP/DOWN button to adjust the level.**


- Press UP button to increase the treble tone level.
- Press DOWN button to decrease the treble tone level.

The treble level can be adjusted in seven steps from –3 through 0 to +3 (step “0” makes no effect).

**To cancel the effect**, adjust the level to “0.”

## Operating the Sliding Panel

You can use the sliding panel to enable advanced operations features provided for UX-G6R micro component system.

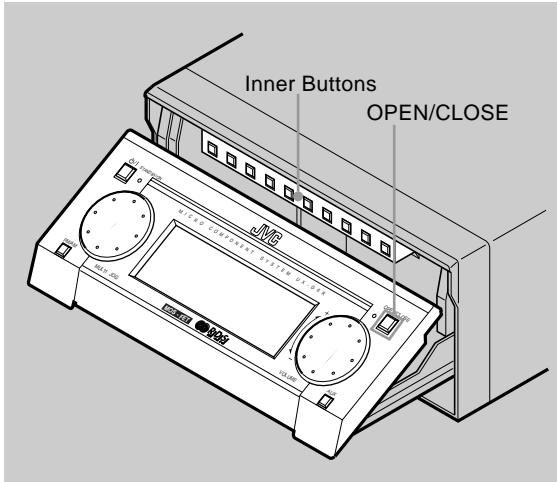


- Press OPEN/CLOSE button on the front panel (or PANEL OPEN/CLOSE button on the remote control).  
The sliding panel opens to uncover the inner buttons behind the panel for further operations.
- Press OPEN/CLOSE button again.  
The sliding panel automatically closes to hide the 10 inner buttons.

Each time you press the button, the sliding panel opens and closes repeatedly.

The buttons behind the sliding panel provided to control various program settings such as playback, recording, and presetting mode of each source. For details, refer to chapters concerning to the particular unit.



### When turning off the system

After pressing  button, the system closes sliding panel as well as other CD tray and Tape tray automatically if they are still opened.

## Listening to the External Equipment

You can listen to an external equipment such as MD recorder, VCR, and other auxiliaries.


First make sure that the external equipment is properly connected to the system (see page 7 and 9). For operation of the equipment, refer to its Instructions.

- 1 Press AUX button to select an external source.**
  - To play an audio equipment without optical digital output, select AUX so that the following information appears in the display window.

AUX

- 2 Start playing back the external equipment.**
- 3 Adjust the volume level to the desired listening level.**
- 4 Apply other sound effects, if you wish.**

# Listening to FM and AM Broadcasts

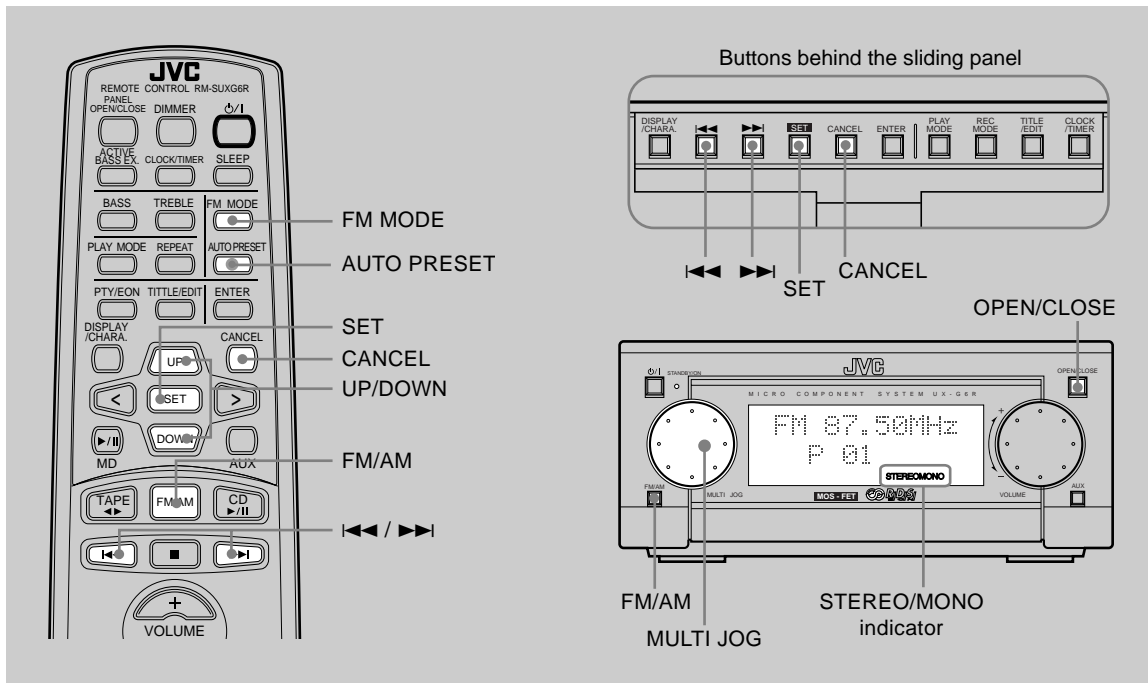

You can tune in FM and AM (MW/LW) stations manually, automatically, and use the preset station feature.

## Tuning in a Station

### 1 Press FM/AM button.


The system automatically turns on and tunes in the last tuned station (either FM or AM—MW/LW). The following information appears in the display window.

FM 87.50MHz  
P 01 — Preset number

- Each time you press the button, the band alternates between FM and AM.
- If a program on FM band is broadcast in stereo, STEREO indicator lights.

### 2 Select a station using one of the following three methods.

- **Manual Tuning**  
Opening the sliding panel, press  $\lll / \ggg$  (lower/higher frequencies) button repeatedly to change the frequencies step by step until you find the desired station.

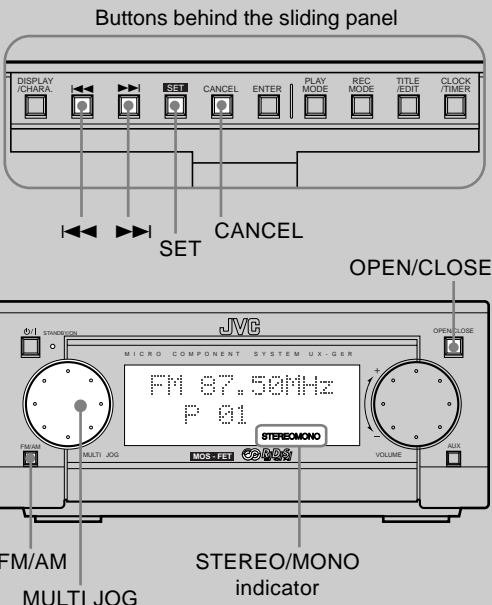

- **Auto Tuning**  
Opening the sliding panel, press and hold  $\lll / \ggg$  (lower/higher frequencies) button for a second or more to start searching a station and stop automatically until the station of sufficient signal strength is tuned in.
- **Preset Station Tuning**  
Rotate MULTI JOG dial clockwise to increase the preset number or counterclockwise to decrease it until the desired station is easily found.



#### Using the remote control:

UP/DOWN button on the remote control also has the same function as MULTI JOG dial on the front panel.



#### Preset Station

You are possibly not allowed to use the feature until the station presetting completes. In some cases, test frequencies have been already memorized for the system since the factory examined the preset station features before shipment. This is not a malfunction.

## Presetting Stations

You can preset up to 30 FM and 15 AM (MW/LW) stations into memory by following two methods: manual/automatic presettings.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

### To preset stations manually — Manual Preset

- 1 Press **◀◀ / ▶▶** (lower/higher frequencies) button to tune in the desired station manually.

FM 87.50MHz

- 2 Press **SET** button.

“SET” appears in the display window for a while (not blinking).

SET

- Note that “SET” message disappears, presetting procedure is cancelled.

- 3 Rotate **MULTI JOG** dial or press repeatedly **UP/DOWN** button to select the preset channel numbered from 1 to 30 on FM, or 1 to 15 on AM.

FM 87.50MHz  
P 02

- Note that the selected channel “02” disappears, presetting procedure is cancelled.

- 4 Press **SET** button again.

“STORED” appears in the display window for a while.

STORED

- 5 The tuned station in step 1 is now stored in the preset channel selected in step 3.

FM 87.50MHz  
P 02



Storing a new station on an used channel erases the previously stored one.

### To preset stations automatically — Auto Preset

You can automatically preset 30 FM, 15 AM (MW/LW) stations. Preset numbers will be allocated as stations are found, starting from the lowest frequency and moving up to the higher frequency.

#### On the remote control only:

- 1 Press **FM/AM** button to select a desired band.
- 2 Press and hold **AUTO PRESET** button on the remote control for more than two seconds.

The system automatically starts searching for stations with the strong signals continuously, and they are stored successively into memory as follows:

FM 91.25MHz  
↓  
P 01  
↓  
FM 95.75MHz  
↓  
P 02




When you unplug the AC power cord or if a power failure occurs

The preset stations will be erased in a few days. If this happens, preset the stations again.

### To change the FM reception mode

- When an FM stereo broadcast is hard to receive or noisy, press **FM MODE** button on the remote control so that **MONO** indicator lights in the display window. Reception improves.
- To restore the stereo effect, press **FM MODE** button again so that **STEREO** indicator lights in the display window. In this stereo mode, you can hear stereo sounds when a program is broadcast in stereo.

# Receiving FM Stations with RDS

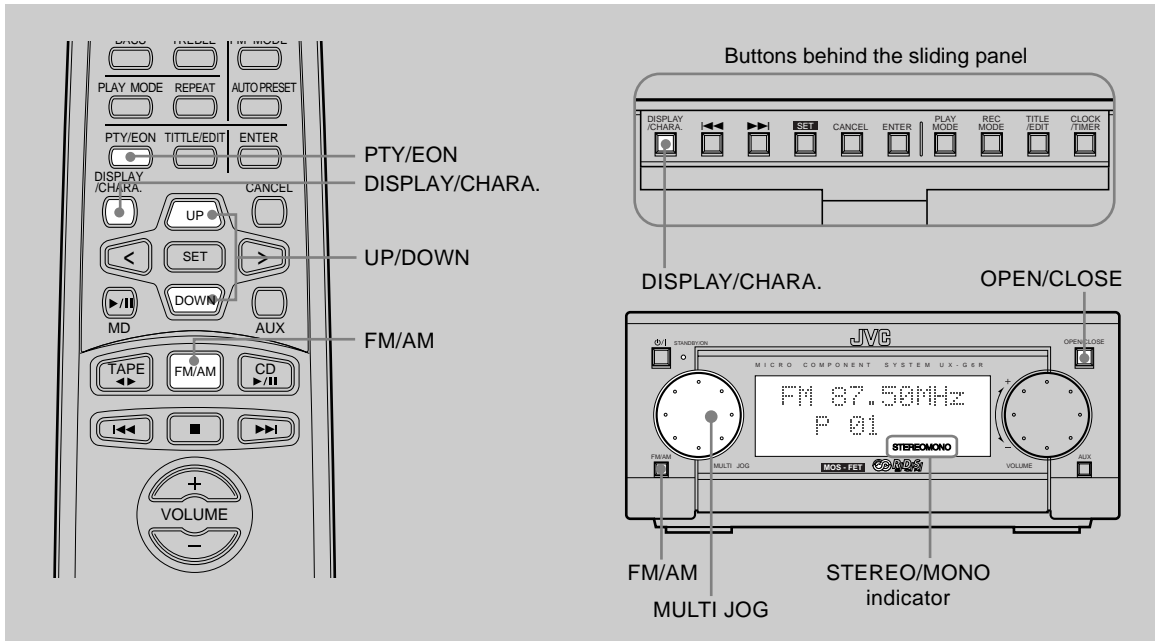

RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast such as sports and music.

When tuned in an FM station which provides the RDS service, RDS indicator lights in the display window. You can receive the following types of RDS signals.

## PS (Program Service):

Shows commonly known station names.

## PTY (Program Type):

Shows types of broadcast programs.

## RT (Radio Text):

Shows text messages the station sends.

## EON (Enhanced Other Networks):

Provides the information about the types of the programs sent by other RDS stations than the one being received.



### More about RDS

- Not all the FM stations provide RDS signals, nor do all RDS stations provide the same services. If in doubt, check with local radio stations for details on RDS in your area.
- RDS may not work correctly if the received station is not transmitting the signals properly or if the signal strength is weak.

 
## Changing the RDS Information

You can see RDS information in the display window while listening to an FM station.

- RDS operations are possible only using the remote control except DISPLAY/CHARA. button.

**Press DISPLAY/CHARA. button repeatedly while listening to an FM station.**

Each time you press the button, the display window changes to show the following information:



**If no PS, PTY, or RT signals are sent by a station** "NO PS," "NO PTY," or "NO RT" appears in the display window.

**If the unit takes time to show RDS information received from a station**

"PS," "PTY," or "RT" may appear in the display window.

## Searching for Programs by PTY Codes (PTY Search)

One of the RDS advantages is that you can locate a particular kind of program by specifying the PTY codes.

- The PTY Search is applicable only to preset stations.
- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

To search a program, use the remote control.

### 1 Press PTY/EON button on the remote control while listening to an FM station.

“SELECT PTY” appears and starts blinking in the display window.



### 2 Press UP/DOWN button repeatedly to select a PTY code while “SELECT PTY” is blinking.

Each time you press the button, the PTY codes change as follows (refer also to the list on page 19):

News ⇄ Affairs ⇄ Info ⇄ Sport ⇄ Educate  
 ⇄ Drama ⇄ Culture ⇄ Science ⇄ Varied ⇄  
 Pop M ⇄ Rock M ⇄ Easy M ⇄ Light M ⇄  
 Classics ⇄ Other M ⇄ Weather ⇄ Finance ⇄  
 Children ⇄ Social ⇄ Religion ⇄ Phone In ⇄  
 Travel ⇄ Leisure ⇄ Jazz ⇄ Country ⇄ Nation  
 M ⇄ Oldies ⇄ Folk M ⇄ Document ⇄ Test  
 ⇄ Alarm! ⇄ (back to the beginning)

### 3 Press SET button to enter the PTY code.

While searching, “SEARCH” appears in the display window.

The unit searches 30 preset FM stations, and stops when it finds the one you have selected, and tunes in that station.

- **To continue searching after the first stop:**  
Press SET button again while the indications in the display window are blinking.  
If no program is found, “NOT FOUND” appears and the unit returns to the last received station.
- **To stop searching during the process:**  
Press PTY/EON button while searching.

## Switching to a Program Type Temporarily

The EON function allows the system to switch temporarily to a broadcast program of your choice (News, TA, and/or Info) from a different station except when you are listening to a non-RDS stations — some FM stations and AM (MW/LW) stations.

- EON indicator lights while receiving a station with the EON code.
- EON function is applicable only to preset stations.

To activate the EON function, use the remote control.

### 1 Press PTY/EON button.

The last EON data type selected and “SELECT EON” appears and starts blinking in the display window.



### 2 Press UP/DOWN button repeatedly to select the EON data type you want.

Each time you press the button, the EON data types change as follows:

(Blank indications) → TA → News → Info → TA  
 News → News Info → TA Info → TA News Info →  
 (back to the beginning)

TA: Traffic announcement  
 News: News  
 Info: Program the purpose of which is to impart advice in the widest sense.

### 3 Press SET button to enter the EON data types.

RDS system switches to EON standby mode to receive a desired data type.

When the program is over, the indicator of received PTY code stops blinking and remains lit, but the EON function still remains activated.

- **To cancel the EON function:**  
Press PTY/EON button again so that TA/News/Info indicator goes off.



**How the EON function actually works:**

**CASE 1**

**If there is no station broadcasting the program you have selected**

The unit continues tuning in the current station.

↓

When a station starts broadcasting the program you have selected, the unit automatically switches to the station. The indicator of received PTY code starts flashing.

↓

When the program is over, "EON END" appears in the display window, and the unit goes back to the previously tuned station, but the EON function still remains activated.

**CASE 2**

**If there is a station broadcasting the program you have selected**

The unit tunes in the program. The indicator of received PTY code starts flashing.

↓

When the program is over, "EON END" appears in the display window, and the unit goes back to the previously tuned station, but the EON function still remains activated.

**CASE 3**

**If the FM station you are listening to is broadcasting the program you have selected**

The unit continues to receive the station but the indicator of received PTY code starts flashing.

↓

When the program is over, the indicator of received PTY code stops flashing and remains lit, but the EON function still remains activated.




**More about the EON function**

- EON data sent from some stations may not be compatible with this unit.
- While listening to a program tuned in by the EON function, the station does not change even if another network station starts broadcasting a program of the same EON data.
- While listening to a program tuned in by the EON function, you can only use PTY/EON and DISPLAY/CHARA. buttons as the tuner operation buttons.
- If the stations alternate intermittently between the station tuned by the EON function and the currently tuned station ("WAITING" flashes in the display window), press PTY/EON button to cancel the EON function.  
If you do not press the button, the currently tuned station is received finally, and the indication of the EON data type flashing in the display window disappears.

## Description of the PTY codes:

<b>News:</b>	News.	<b>Finance:</b>	Stock market reports, commerce, trading etc.
<b>Affairs:</b>	Topical program expanding or enlarging upon the news — debate or analysis.	<b>Children:</b>	Programs targeted at a young audience.
<b>Info:</b>	Program the purpose of which is to impart advice in the widest sense.	<b>Social:</b>	Programs about sociology, history, geography, psychology and society.
<b>Sport:</b>	Program concerned with any aspect of sports.	<b>Religion:</b>	Religious programs.
<b>Educate:</b>	Educational programs.	<b>Phone In:</b>	Involving members of the public expressing their views either by phone or at a public forum.
<b>Drama:</b>	All radio plays and serials.	<b>Travel:</b>	Travel information.
<b>Culture:</b>	Programs concerning any aspect of national or regional culture, including language, theater.	<b>Leisure:</b>	Programs about recreational activities.
<b>Science:</b>	Programs about natural sciences and technology.	<b>Jazz:</b>	Jazz music.
<b>Varied:</b>	Used for mainly speech-based programs like quizzes, panel games and personality interviews.	<b>Country:</b>	Songs which originate from, or continue the musical tradition of the American Southern States.
<b>Pop M:</b>	Commercial music of current popular appeal.	<b>Nation M:</b>	Current popular music of the nation or region in that country's language.
<b>Rock M:</b>	Rock music.	<b>Oldies:</b>	Music from the so-called "golden age" of popular music.
<b>Easy M:</b>	Current contemporary music considered to be "easy-listening."	<b>Folk M:</b>	Music which has its roots in the musical culture of a particular nation.
<b>Light M:</b>	Instrumental music, and vocal or choral works.	<b>Document:</b>	Program concerning factual matters, presented in an investigative style.
<b>Classics:</b>	Performances of major orchestral works, symphonies, chamber music, etc.	<b>Test:</b>	Broadcast when testing emergency broadcast equipment or receivers.
<b>Other M:</b>	Music not fitting into any of the other categories.	<b>Alarm!:</b>	Emergency announcement.
<b>Weather:</b>	Weather reports and forecasts.	<b>Classification of the PTY codes for some FM stations may be different from the above list.</b>	

# Playing Back a CD

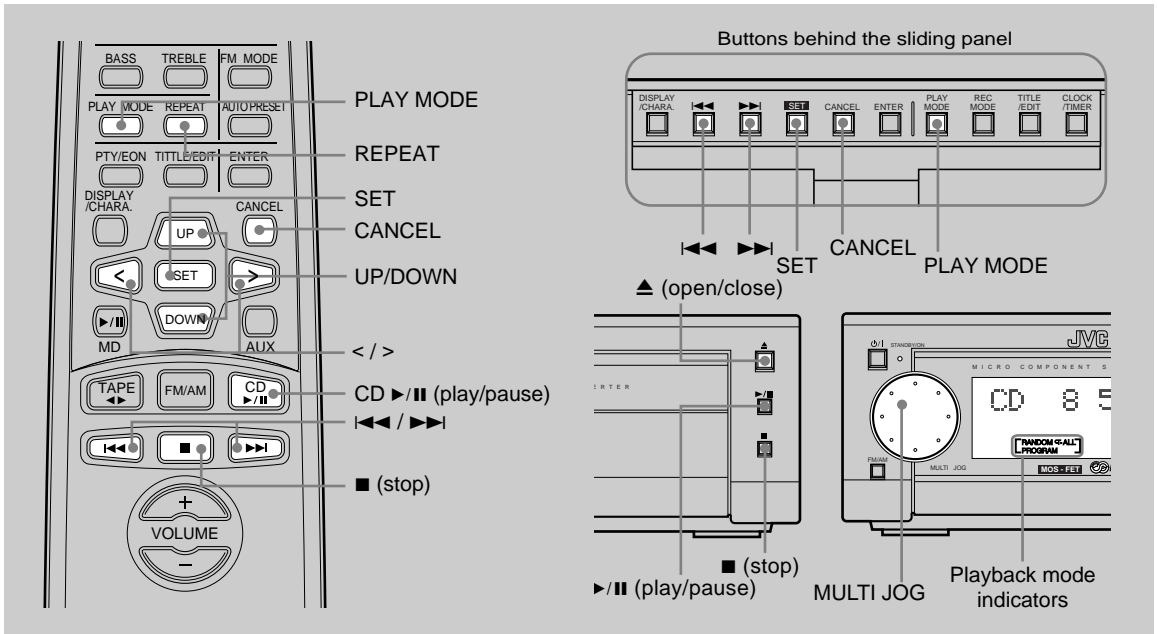


- You can use Normal, Program, Random, or Repeat Play.
- When using the buttons behind the sliding panel, press OPEN/CLOSE button on the AX-UXG6 to open the sliding panel first.
  - When using the remote control, press CD ►/|| (play/pause) button first and ■ (stop) button successively.

- DO NOT try to open or close the CD tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may results damages on the unit.


## Playing Back the Entire Disc — Normal Play

### 1 Press ▲ (open/close) button on CD unit.

The system automatically turns on and the disc tray comes out.

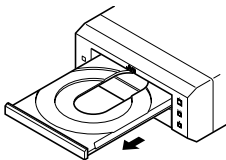


### 2 Place a disc correctly on the circle of the disc tray, with its label side up.

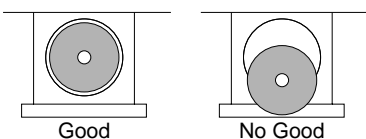

- When using a CD single (8 cm), place it on the inner circle of the disc tray.

### 3 Press ▲ (open/close) button again.

The disc tray closes while the information appears one after another as follows.

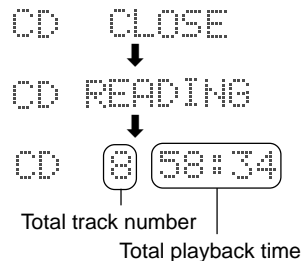

- When closing the tray without a CD placed, "CD NO DISC" appears.

When pressing ►/|| (play/pause) button directly, the system starts playback a CD immediately.

#### 4 Press ►/|| (play/pause) button on the CD unit.

Each track of the CD starts playing one after another, and stops when the final track has finished playing.

CD 1 0:01

- **To stop playing back for a moment, press ►/|| (play/pause) button on the CD unit.**  
The playback time starts blinking in the display window.

CD 5 38:34

- **To resume playback, press ►/|| (play/pause) button again.**  
Playback continues from the point where it was stopped for a while.

#### 5 Press ■ (stop) button to stop playing back the CD.

Following information for the CD appears in the display window.

CD 8 53:34

Total track number      Total playback time

#### 6 Press ▲ (open/close) button on the CD unit to remove the CD.

- Pressing ▲ (open/close) button during playback directly, the CD unit stops playback and opens CD tray.

## Searching and Skipping Tracks

While playing back a CD, you can do the following operations.

#### To search and skip to a particular point in a track

During playback, press and hold ◀◀ / ▶▶ button to meet the desired passages in a track:

- Press and hold ▶▶ button:  
Fast forwards in the track.
- Press and hold ◀◀ button:  
Fast reverses in the track.



**UP/DOWN button on the remote control is also available to searching operations.**

#### To go to another track

Before or during playback, press ◀◀ / ▶▶ button repeatedly:

Press ▶▶ button:

Skips to the beginning of the next and succeeding tracks.

Press ◀◀ button:

Goes back to the beginning of the current and previous tracks.

Rotating MULTI JOG dial clockwise also changes the tracks forwards quickly, while rotating it counterclockwise the tracks reverse quickly.



**</> button on the remote control is also available to skipping operations.**

## Programming the Playing Order of the Tracks — Program Play

You can arrange the order in which the tracks play before you start playback. You can program up to 32 tracks.

 
#### 1 Place a CD.

- If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

#### 2 Press PLAY MODE button repeatedly until “CD PROGRAM” appears in the display window.

CD PROGRAM


- Each time you press the button, playback mode indicators also change as follows:




#### 3 Rotate MULTI JOG dial to select a track number to be programmed (</> buttons also available).

CD 1 P .....

Track number      Program number

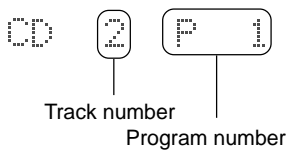**4 Press SET button to program the track number.**

 Here the track number 2 on the CD is stored into a program number 1, and shortly after that the total playback time of programmed tracks appears in the display window as follows:

**5 Repeat steps 3 to 4 to program other tracks you want up to 32 tracks.**

- **If you try to program a 33rd step** "MEMORY FULL" will appear in the display window, and your entry is ignored.
- **The total playback time of programmed tracks exceeds 99'59"** "-- : --" will appear in the display window.

**6 Press ►/|| (play/pause) button on the CD unit.**

The programmed tracks are played back in the order you have set.

- Other CD operations are the same as Normal play.

**7 Press ■ (stop) button to quit the program play.**

- When Program play finished, CD unit automatically stops.

**To check the program contents**

Before playing back the CD, you can check the program contents by using ◀◀ / ▶▶ button.

Press ▶▶ button:

Shows the programmed tracks in the programmed order.

Press ◀◀ button:

Shows them in the reverse order.

**To modify the program**

Before playing back the CD, you can erase the last programmed track by pressing CANCEL button. Each time you press the button, the last programmed track is erased from the end of program.

- **To add new tracks to the program** before you start playing-back, simply select a track number again you want to add (repeat steps 3 to 4).

**To erase all the programmed data**

After playing back the CD, you can erase all the programmed track data by pressing ■ (stop) button. New program can be entered again.

**To exit from the Program play mode**

Before or during playback, you can exit from Program play mode as follows:

- Before playback, press PLAY MODE button twice.
- During playback, press ■ (stop) button then PLAY MODE button twice.

Playback mode indicator goes off and the system resumes Normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the program play.

## Playing at Random — Random Play

The tracks of the loaded CD will play in no special order (at random) when you select this mode.

 
### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press PLAY MODE button repeatedly until “CD RANDOM” appears in the display window.

CD RANDOM

- Each time you press the button, playback mode indicator also changes as follows:



### 3 Press ►/|| (play/pause) button on the CD unit.

CD  RANDOM

The track numbers are shuffled in the display window for a few seconds, and start playing back at random. Random play ends when all the tracks are played back once.

- Other CD operations are the same as Normal play.

### 4 Press ■ (stop) button to quit Random play.

#### To exit from Random play mode

Before playing back the CD, you can exit from Random play mode as follows:

- Before playback, press PLAY MODE button once.
- During playback, press ■ (stop) button then press PLAY MODE button once.

Play mode indicator goes off and the system resumes the normal play mode.



Pressing ▲ (open/close) button to open the CD tray also quits and erases the random play.

## Repeating Tracks — Repeat Play

 
You can have the entire disc, the programmed tracks, or the individual track repeat as many times as you like.



### 1 Place a CD.

If the current playing source is not the CD, press ►/|| (play/pause) button on the CD unit, then ■ (stop) button before going to the next step.

### 2 Press REPEAT button on the remote control repeatedly to set the repeat mode.


 
- Each time you press the button, repeat mode indicators light in the display window, and Repeat playback mode changes as follows:



-  : Repeats one track on the CD or in a program.
-  ALL : Repeats all the tracks on the CD or a program.




### 3 Press ■ (stop) button to quit Repeat play.

#### To exit from Repeat play mode


Pressing REPEAT button repeatedly until repeat mode indicators ( and  ALL) goes off in the display window.



#### Combining play modes:

- When combining Program play and Repeat play, you can repeat whole the programmed tracks or one track among them ( and  ALL).
- When combining Random play and Repeat play, you can just repeat whole the shuffled tracks (only  ALL).

# Playing Back a Tape

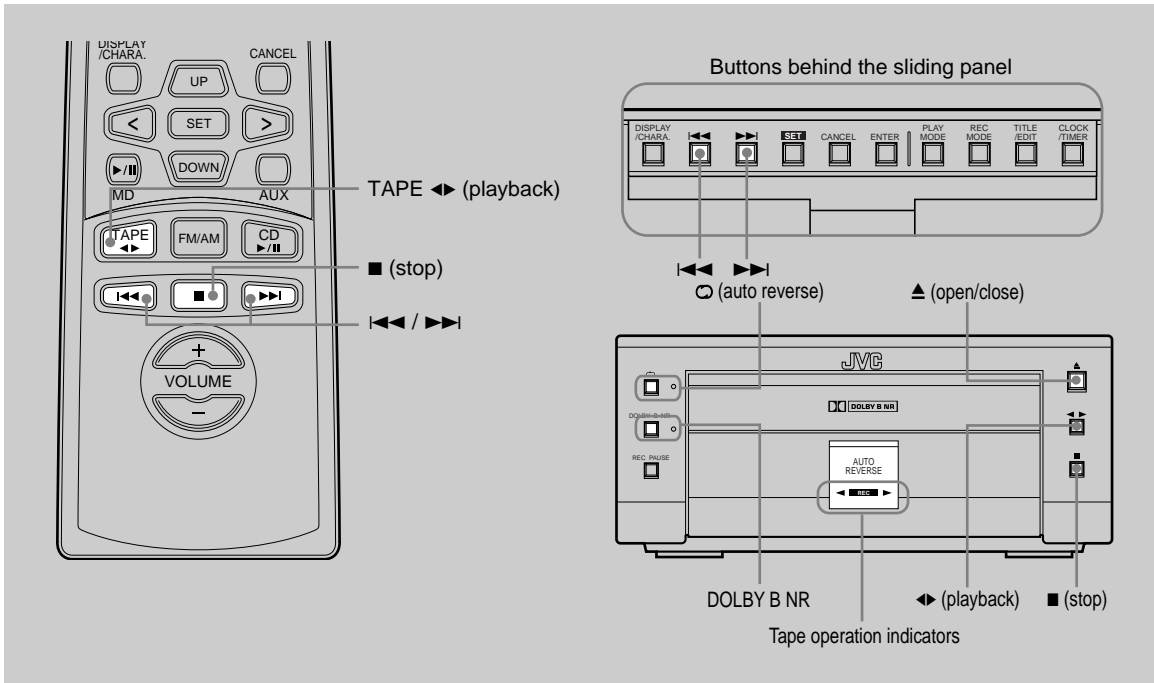

You can listen to Normal (Type I), High position (Type II), and Metal (Type IV) type tapes without further settings.

- When using the inner buttons, press OPEN/CLOSE button on AX-UXG6 unit to open the sliding panel first.
- When using the remote control, press TAPE ◀▶ (playback) button first and ■ (stop) button successively.



**DO NOT use tapes longer than 120 minutes.**  
The characteristic deterioration may occur and these tapes easily jam in the tape transport mechanism.




- DO NOT try to open or close the tape tray by hands as it will be damaged.
- DO NOT place any foreign matters.
- DO NOT prevent the tray from opening and closing, because it may results damages on the unit.

## Playing Back a Tape — Basic Operation

**1 Press ▲ (open/close) button on the cassette deck unit.**

The system automatically turns on and the tape tray comes out.

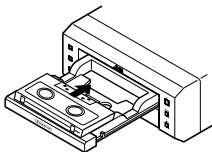


**2 Place a tape on the tray with the side you want to listen to facing up (forward side).**

Tape fits in the caved-in area so that an exposed edge of the tape faces toward the inside of the unit.

**3 Press ▲ (open/close) button again to close the tray.**

**4 Press ◀▶ (playback) button on the unit or TAPE ◀▶ (playback) button on the remote control.**

 The tape playback starts and the tape direction indicator blinks slowly in orange to show the tape running direction.



- Each time you press ◀▶ (playback) on the cassette deck unit or TAPE ◀▶ (playback) button on the remote control, you can change the tape sides to be played back currently.

- ▶ : plays the forward side.
- ◀ : plays the reverse side.



**Playback comes to an end (Auto Reverse)**

The cassette deck unit automatically changes the tape direction to the reverse side, and continue playback both sides. Each time to press the button, Auto Reverse feature is set to on/off alternately.

Continued

5 Press ■ (stop) button to stop playback the tape.

6 Press ▲ (open/close) button directly to stop and remove the tape.



**While the system is turned off (standby mode)**  
Pressing ◀▶ (playback) or TAPE ▶▶ (playback) button automatically switches the system turned on and starts playback if a tape is already loaded.

## Fast-Winding a Tape

While stopping the tape, press ◀◀ / ▶▶ button to fast-wind the tape.

 
To fast-forward, if the current tape direction is:

- ▶ ⇨ Press ▶▶ button.
- ◀ ⇨ Press ◀◀ button.

To fast-rewind, if the current tape direction is:

- ▶ ⇨ Press ◀◀ button.
- ◀ ⇨ Press ▶▶ button.

During fast-winding, the tape direction indicator starts blinking quickly.



**When the tape comes to an end**  
The deck unit automatically stops.

## Searching and Skipping to Each Program — Music Scan

While playing the tape, you can search and skip to the beginning of the current and next program on a tape.



Music scan searches for blank portions that usually separate programs recorded onto the tape, then automatically plays the program beginning after that blank portion.

To skip backward to the current music

Press the button opposite to the tape direction indicator as follows:

 
- ▶ ⇨ Press ◀◀ button.
- ◀ ⇨ Press ▶▶ button.

To skip forward to the next music

Press the button same as the tape direction indicator as follows:

- ▶ ⇨ Press ▶▶ button.
- ◀ ⇨ Press ◀◀ button.

During Music Scan progressed, the tape direction indicator starts blinking rhythmically.



**Repeating Music Scan feature made easy**  
searching a desired program on a tape one after another.



**The beginning of the desired program may not be located properly**

If blanks between music are too short, the blanks contain too much noise or the program itself contains very low-level or silent part.

## Playing Back Dolby-Recorded Tape

You can play back the tape recorded with Dolby B NR system. The Dolby NR system allows to reduce hiss noise in playback.

Press DOLBY B NR button on the cassette deck before playback. Each time you press the button, the Dolby NR lamp on the unit lights up orange or turns off.




**A tape recorded using Dolby NR**  
Should be played back using the Dolby NR of the same type as that used in recording. The audio quality will be affected if a different type is used in playback.

Dolby Noise Reduction manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.



# Recording onto a Tape

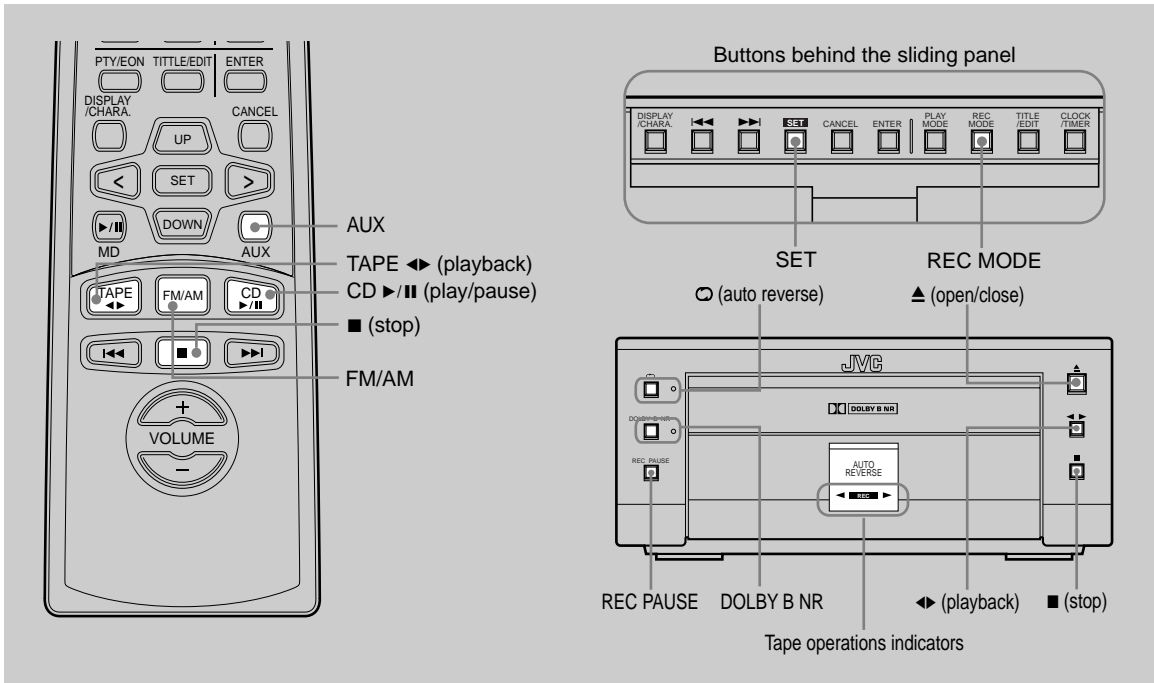

Two types of cassette tapes can be recorded onto, including normal (Type I), and High position (Type II) tapes. These types are identified automatically by the cassette deck unit and the recording level is also corrected automatically. Neither volume level nor sound effects during playback does affect to the recording.


**IMPORTANT:**

- It may be unlawful to record or play back copyrighted material without the consent of the copy right owner.

## Manual Recording onto a Tape


### 1 Select one of the recording sources — FM/AM broadcasts, CD, or other external equipment.

- To record FM/AM broadcasts, receive a station with Tuner unit.
- To record a CD or its tracks programed, set the play-pause mode for CD unit.
- To record from an external equipment connected to ANALOG IN jacks, prepare it as required.


 **Make sure to select a source first, otherwise you cannot use recording function.**

### 2 Place a recordable tape with the side you want to record facing up.


Press ▲ (open/close) button on the cassette deck unit to open the tape tray; place a tape on it; and press ▲ (open/close) button again to close it.

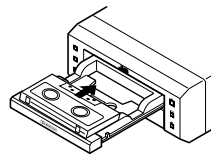

 - You cannot record onto the tape without a protect tab. When using that tape, cover the hole for desired side with adhesive tape.



### 3 Press REC PAUSE button on the cassette deck unit.

 

REC indicator lights red to show the recording pause mode, and "TAPE REC" appears in the display window as follows,

```

FM 87.50MHz
TAPE REC
or
CD 8 58:34
TAPE REC
  
```



#### To change the recording source

You cannot change the selected source during the recording pause mode. To exit from the recording pause mode, press **■** (stop) button on the cassette deck unit.

 


#### To make the blank tape

Press AUX button to start recording without connecting nor playing back the external equipment.

### 4 Press Tape ◀▶ (playback) button for FM/AM broadcasts or ▶/|| (play/pause) button on the CD unit to start recording.

Tape direction indicator starts blinking slowly in the display window.



Tape direction indicator

- To stop recording for a moment, press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
- To resume recording, press ◀▶ (playback) button again. Recording continues from the point where it was stopped for a while.

### 5 Press ■ (stop) button on the cassette deck unit for FM/AM broadcasts recording, or ■ (stop) button on the CD unit for the CD recording.

Recording stops and REC indicator goes off in the display window.



On CD recording, cassette deck unit will stop after leaving a non-recorded portion of 4 seconds. If you want to quit recording immediately, press **■** (stop) button on the cassette deck unit.

### 6 Press ▲ (open/close) button on the cassette deck unit to remove the tape.

- Pressing ▲ (open/close) button directly during recording, the cassette deck unit stops recording and opens the tape tray.



#### • Dolby B NR

Press DOLBY B NR button before recording to reduce frequency response noise.

When the tape is played back later, also press the button with its lamp lit.

#### • BEAT CUT on AM (MW/LW)

 
When recording AM broadcast, beats noise may be heard.

Set the BEAT CUT selector to either position 1 or 2 on the rear panel of the cassette deck unit to reduce the noise.

## Recording in Auto Reverse

### 1 Select one of the recording sources — FM/AM broadcasts, CD, or other external equipments.

### 2 Make sure the tape side for recording meets the tape direction indicator ▶ (forward).



- Each time to press ◀▶ (playback) button or TAPE ◀▶ (playback) button on the remote control, you can change the tape direction to be recorded onto.
  - ▶ : Good, records onto the forward side.
  - ◀ : No good, records onto the reverse side.



- The recording in the auto reverse mode stops automatically after completing recording onto the ◀ (reverse) direction side. Be sure to start recording from the ▶ (forward) direction side.
- When the auto reverse mode is set to off, recording stops after having recorded onto one side of the tape.

### 3 Press ⏮ (auto reverse) button on the cassette deck unit to set the reverse mode on.

The auto reverse lamp lights orange on the front panel.

### 4 Press REC PAUSE button on the cassette deck unit.

### 5 Repeat the steps 4 to 5 of "Manual Recording onto a Tape" mentioned in the left column.

## Synchronized Recording from a CD

CD application on UX-G6R system can be recorded with a simple, one-touch operation.

- 1 Place a recordable tape and a source CD into each tray.
  - To record using Dolby B NR, press the DOLBY B NR button before recording so that its lamp near the button lights orange.
- 2 Press ►/|| (play/pause) button on the CD unit, then ■ (stop) button to set the system to CD operation mode.
- 3 Press REC MODE button behind the sliding panel. The display window shows information as follows:

```

SYNC REC
  >TAPE
  
```

- 4 Press SET button. Display window shows as follows:

```

SYNC REC
TAPE REC

then

CD 1  --- # ---
TAPE REC
  
```

UX-G6R starts playback on the CD unit as well as recording on the cassette deck unit simultaneously. You can get an entire copy of the source CD.

To select a particular track or program, use REC PAUSE button on the cassette deck unit. During SYNC REC mode, you cannot operate CD unit except ■ (stop) button.

- To make recording pause temporarily, press REC PAUSE button on the cassette deck unit.
- To resume recording, press ◀▶ (playback) button on the cassette deck unit.



### Using Program play for CD recording

To edit CD's tracks to be recorded, it is useful to set the desired tracks to be played back into a program in advance.

When CD playback finished, the CD unit first, then the cassette deck stops recording automatically.



Cassette deck unit will stop after leaving a non-recorded portion of 4 seconds.

If you want to quit recording immediately, press ■ (stop) button on the cassette deck unit.

- 5 Press ▲ (open/close) button on each unit to remove the CD and the tape.

## Recording from the External Equipment

You can record audio sources played-back on the external equipment onto a tape manually. First of all, make sure to connect the external equipment properly (see also page 9).

 
### Recording an external audio source manually

- 1 Press AUX button to show "AUX" in the display window. The external audio source is selected.
- 2 Repeat the steps 2 and 3 on page 26 to prepare a tape to record. Information appears as follows:

```

AUX
TAPE REC
  
```


- 3 Press ◀▶ (playback) button on the cassette deck unit or TAPE ◀▶ (playback) button on the remote control to start recording. Tape direction indicator starts blinking slowly in the display window.



Tape direction indicator

- 4 Start playing back the external equipment.
  - To stop recording for a moment, press REC PAUSE button on the cassette deck unit. Tape direction indicator stops blinking in the display window.
  - To resume recording, press ◀▶ (playback) button again.
  - To end the recording, press ■ (stop) button on the cassette deck unit. Recording stops and REC indicator goes off in the display window.

# Using the Timers

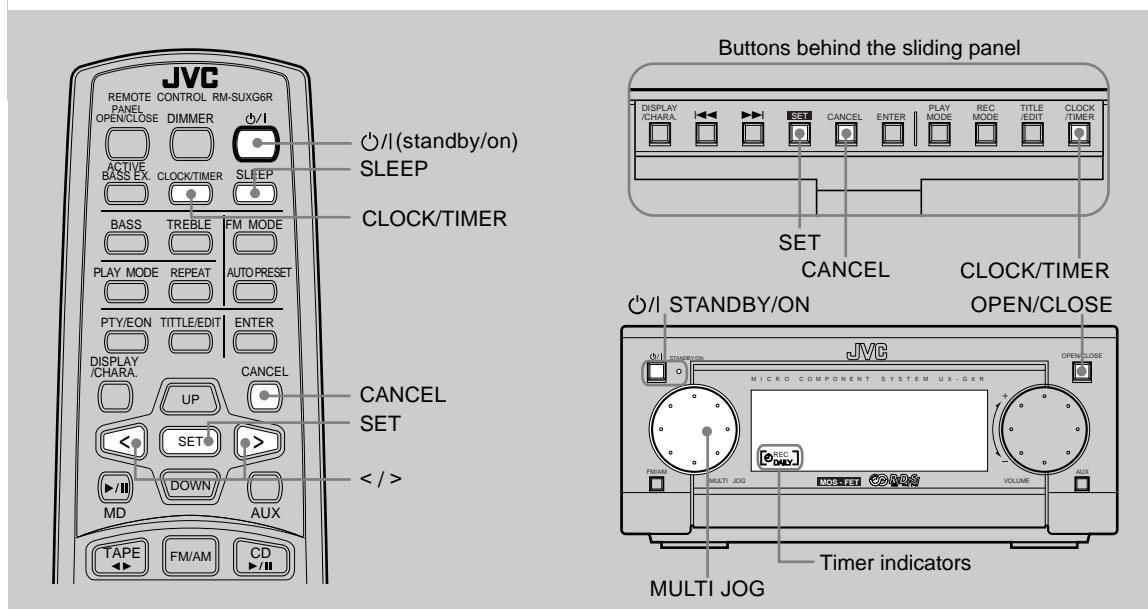

On UX-G6R system, three timer features are available — Recording Timer, Daily Timer, and Sleep Timer. Before using these timers, you need to set the clock built in the system (see page 10).

## Using Recording Timer

With Recording Timer, you can make a tape of a radio broadcast automatically.

- You can set Recording Timer whether the system is turned on or off.
- To correct a mis-entry any time during the setting process, press CANCEL button.

### How Recording Timer actually works

The system automatically turns on, tunes into the specified station, turns off the volume, and starts recording when the timer-on time comes.

Then, when the timer-off time comes, the system automatically turns off (standby).

 
The timer settings remain stored in memory until you reset them or unplug the AC power cord.

- 1 Press CLOCK/TIMER button repeatedly until "REC TIMER" and its timer-on time appear in the display window.**

You can select the timer-on/off time, a tuner preset channel to record, and recording media.

- If MD recorder XM-G6 (not supplied) connected, you can select MD as recording media (see page 7).

- Each time you press the button, the timer mode changes as follows:



- 2 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-on time, then press SET button.**

REC TIMER  
ON 21:30

- 3 Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-on time, then press SET button.**

REC TIMER  
ON 21:30

- 4 Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-off time, then press SET button.**

REC TIMER  
OFF 22:30

**5** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-off time, then press SET button.



**6** Rotate MULTI JOG dial (</> button on the remote control also available) to select either "TUNER FM" or "TUNER AM," then press SET button.

**7** Rotate MULTI JOG dial (</> button on the remote control also available) to select a preset channel, then press SET button.



"TAPE REC" follows in the display window as selected recording media, unless any MD recorder connected.


- If XM-G6 MD recorder connected, you can select either a tape or an MD as recording media.

**8** Press SET button to select recording media, and turn off the system.

**After completing the settings...**  
The REC timer indicator lights and the setting items appear one after another in the display window. Thus the Recording Timer is ready for unattended recording.



**After a timer recording is complete...**  
Set the volume to an appropriate listening level.



**If you press a certain button while Recording Timer is operating**  
Recording will stop.

**To use the same Recording Timer settings repeatedly**

Once you have set the recording timer, it remains stored in memory until you change it.  
To activate the recording timer with the previous settings, follow the procedure below:

**1** Press CLOCK/TIMER button repeatedly until "REC TIMER" appears in the display window.



**2** Press SET button to call the previous settings for next timer recording.

The REC timer indicator lights, and the setting items appear one after another in the display window.

- To erase the recording timer, press CANCEL button in this step.

## Using Daily Timer

With Daily Timer, you can wake up on your favorite music or radio program.

- You can set the daily timer whether the system is turned on or off.

 
### How Daily Timer actually works

The system automatically turns on, and starts playing the specified source when the timer-on time comes. Then, when the timer-off time comes, the system automatically turns off (standby).

The timer settings remain stored in memory until you reset them or disconnect the AC power cord.

**1** Press CLOCK/TIMER button repeatedly until "DAILY TIMER" and its timer-on time appear.

- Each time you press the button, the timer mode changes as follows:



**2** Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-on time, then press SET button.



**3** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-on time, then press SET button.




**4** Rotate MULTI JOG dial (</> button on the remote control also available) to select the hour of the timer-off time, then press SET button.



- 5** Rotate MULTI JOG dial (</> button on the remote control also available) to select the minute of the timer-off time, then press SET button.

DAILY TIMER  
OFF 7:00

- 6** Rotate MULTI JOG dial (</> button on the remote control also available) to select the source, then press SET button.

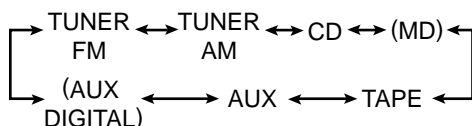

**TUNER FM:** Tunes into a preset FM station. Go to step 7.

**TUNER AM:** Tunes into a preset AM station. Go to step 7.

**CD:** Plays a CD. Prepare a CD, then go to step 7.

**(MD):** Plays a MD, only when XM-G6 MD recorder connected. Then go to step 7.

**TAPE:** Plays a tape. Prepare a tape, then go to step 8.

**AUX\*:** Selects "AUX" as the source. Make the external equipment ready for playback.

**(AUX DIGITAL):**  
Selects an external digital audio equipment as the source if connected.

\* To use the external equipment with the Daily Timer, it also has the timer function.

- 7** If you have selected FM/AM as the source in the above step, select a preset channel.

- 1) Rotate MULTI JOG dial (</> button on the remote control also available) to select a preset channel.
- 2) Press SET button.

FM 87.50MHz  
P 02

**If you have selected CD as the source in the above step, select a track.**

- 1) Rotate MULTI JOG dial (</> button on the remote control also available) to select a track.
- 2) Press SET button.

CD 1

- 8** Rotate MULTI JOG dial (</> button on the remote control also available) to adjust the volume level, then press SET button.

- You can adjust the volume within the range of "0" to "50." If you select "–," the volume is set to the previous level when the unit is turned off.

VOLUME -----

**After completing the settings...**

The daily timer indicator lights, and the setting items appear one after another in the display window.

Turns off the unit (standby) if you have set the daily timer with the unit turned on.



**notes** If you press a certain button while Daily Timer is operating  
The unit will not turn off automatically.

**To use the same Daily Timer settings repeatedly**

Once you have set Daily Timer, it remains stored in memory until you change it.

To activate the daily timer with the previous settings, follow the procedure below:

- 1** Press CLOCK/TIMER button repeatedly until "DAILY TIMER" appears in the display window.

DAILY TIMER

- 2** Press SET button to activate Daily timer.

The daily timer indicator lights, and the setting items appear one after another in the display window.

- To deactivate the daily timer, press CANCEL button in this step.

## Using Sleep Timer

With Sleep Timer, you can fall asleep to your favorite music or radio program.

 
### How Sleep Timer actually works

The system automatically turns off after the selected time length passes while playing any source.

**On the remote control only:**

#### 1 Press SLEEP button on the remote control repeatedly to select the sleep timer.

- Each time you press the button, the time length changes as follows:



#### 2 Wait for about 5 seconds after selecting the time length.

When the sleep timer setting is completed, the display window dims and just shows the remaining time until the shut-off time minute by minute like "SLEEP 30" then "SLEEP 29".


- To change the shut-off time, press SLEEP button repeatedly until the desired time length appears.
- To cancel the setting, press SLEEP button repeatedly until the sleep timer indication disappears.

## Timer Priority


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are the priorities for each timer.

- Recording Timer has priority over Daily Timer and Sleep Timer.**

If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

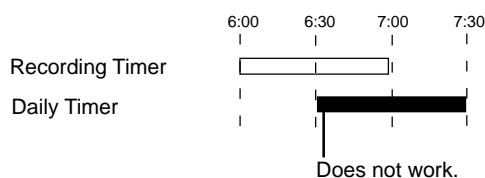


If Recording Timer is set to come on while Sleep Timer is operating, Sleep Timer will be canceled several seconds before Recording Timer comes on.

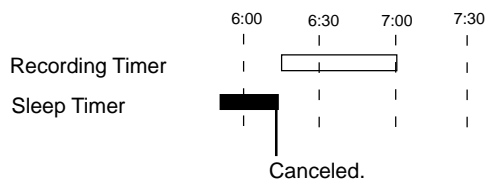

- Sleep Timer has priority over Daily Timer.**

If Daily Timer is set to come on while Sleep Timer is operating, Daily Timer will not come on at all.

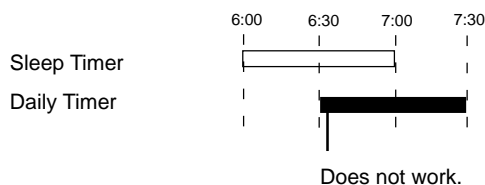

Therefore, the equation is like this (high > low):

**Recording Timer > Sleep Timer > Daily Timer**

# Maintenance and Additional Information

## General Notes

 
 
In general, you will have the best performance by keeping your CDs, cassette tapes and the mechanism clean.

- Store CDs and cassette tapes in their cases, and keep them in cabinets or on shelves.
- Keep the CD disc tray, and the cassette tapes tray closed when not in use.


## Handling CDs



- Only CDs bearing this mark can be used with this system. However, continued use of irregular shape CDs (e.g. heart shape, octagonal) can damage the system.



- Remove the CD from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the CD.
- Put the CD back in its case after use to prevent warping.

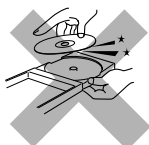

- Be careful not to scratch the surface of the CD when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



- To clean the CD  
Wipe the CD with a soft cloth in a straight line from center to edge.




DO NOT use any solvent — such as conventional record cleaner, spray, thinner, or benzine — to clean the CD.



## Handling Cassette Tapes

### Cautions regarding handling

- Do not touch the surface of the tape or pull the tape out of the cassette.
- Tape spooled loosely around the hubs is likely to jam in the pinch rollers and capstans. Before loading the tape into the cassette tray, take up the slack in the tape as shown below.

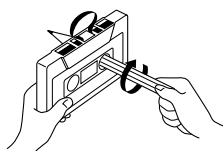


### Tape storage

- Place tapes in their cases for storage.
- Avoid storing tapes on top of TVs or speakers, in sunlight or places of high temperature, or in humid or dusty areas.

### To prevent accidental erasure


- Cassette tapes have tabs to prevent accidental erasure.
- If you remove the tabs after making a recording, the cassette deck cannot be set to record when that tape is loaded. Remove the tabs so that valuable recordings will not be accidentally erased.

Recording (erasure) is not possible when the tabs are removed.

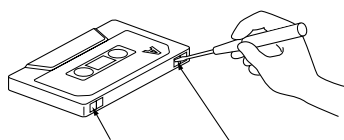

For reverse side (B) For front side (A)

- To make another recording on a tape whose tabs have been removed, cover the tab holes with adhesive tape.

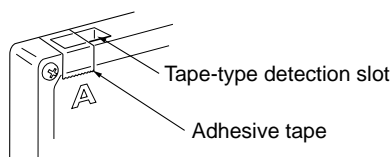

**DO NOT cover the tape-type detection slots.**

## Types of Cassette Tapes

This cassette deck unit incorporates an Automatic Tape Detection function. This mechanism uses the tape-type detection holes to distinguish which type of tape was inserted, and sets the bias and equalizer to the optimum settings for that tape automatically.

 
The following types of tapes may be used with this cassette deck unit.

### Normal tape

#### TYPE I

BIAS: NORMAL

EQ: 120 $\mu$ s




Normal (No detection slots) Tab  
(to prevent accidental erasure)

### High position (CrO<sub>2</sub>) tape
 
#### TYPE II

BIAS: HIGH

EQ: 70 $\mu$ s




High position  
detection slots

### Metal tape (only for playback)
 
#### TYPE IV

BIAS: METAL

EQ: 70 $\mu$ s



Metal detection slots



- Certain early period Metal and High position (CrO<sub>2</sub>) tapes may not have tape-type detection slots. The cassette deck unit cannot obtain the correct characteristics for these tapes.
- Ferromagnetic (FeCr) TYPE III tapes cannot be used with this cassette deck unit.

# Troubleshooting

If you are having a problem with your system, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the units has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
No sound is heard.	<ul style="list-style-type: none"> <li>• Connections are incorrect, or loose.</li> <li>• Headphones are connected.</li> <li>• Volume level is set to “–”.</li> </ul>	<ul style="list-style-type: none"> <li>• Check all connections and make corrections (see pages 6 – 9).</li> <li>• Disconnect the headphones (see page 12).</li> <li>• Adjust the volume again (see page 11).</li> </ul>
Poor radio reception.	<ul style="list-style-type: none"> <li>• The antenna is not connected correctly.</li> <li>• The AM loop antenna is too close to the units.</li> <li>• The FM antenna is not properly extended and positioned.</li> <li>• The AM radio noise interferes with tape recording.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect the antenna securely.</li> <li>• Change the position and direction of the AM loop antenna.</li> <li>• Extend FM antenna to the best reception position (see page 7).</li> <li>• Set the BEAT CUT selector again (see page 27).</li> </ul>
Unable to record onto a tape.	<ul style="list-style-type: none"> <li>• You are using a tape without a protect tab.</li> <li>• Tape-type detection slots are covered by foreign matters.</li> </ul>	<ul style="list-style-type: none"> <li>• Cover the hole with adhesive tape (see page 34).</li> <li>• Remove the foreign matters.</li> </ul>
The CD skips.	<ul style="list-style-type: none"> <li>• The CD is dirty or scratched.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean or replace the CD (see page 33).</li> </ul>
Unable to operate using the remote control.	<ul style="list-style-type: none"> <li>• The path between the remote control and the remote sensor on the front panel is blocked.</li> <li>• The batteries have lost their charge.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the obstruction.</li> <li>• Replace the batteries (see page 6).</li> </ul>
Loaded CD and tape cannot be ejected.	<ul style="list-style-type: none"> <li>• The main AC power cord is not plugged in.</li> <li>• The system is under the recording operations.</li> </ul>	<ul style="list-style-type: none"> <li>• Plug in the AC power plug.</li> <li>• Stop the recording if required (see pages 27).</li> </ul>
The CD does not play.	<ul style="list-style-type: none"> <li>• The CD is upside down.</li> </ul>	<ul style="list-style-type: none"> <li>• Put in the CD with the label side up.</li> </ul>
Operations are disabled.	<ul style="list-style-type: none"> <li>• The built-in microprocessor has malfunctioned due to external electrical interference.</li> </ul>	<ul style="list-style-type: none"> <li>• Unplug the system then plug it back in.</li> </ul>

# Specifications

<b>Stereo Amplifier</b>	<b>AX-UXG6</b>
Output power:	48 W (24 W + 24 W) at 6 Ω (Max.) 42 W (21 W + 21 W) at 6 Ω (10% THD)
Load impedance:	6 Ω (6 Ω to 16 Ω allowance)
Audio output level/Impedance (at 1 kHz):	Sub Woofer 800 mV/440 Ω
Power requirement:	AC 230 V $\sim$ , 50 Hz
Power consumption:	63 W (at operation) 2.0 W (on standby: with Dimmer)
Dimensions (approx.):	182 mm x 81 mm x 313 mm (W/H/D) (7 <sup>3</sup> / <sub>16</sub> in. x 3 <sup>1</sup> / <sub>4</sub> in. x 12 <sup>3</sup> / <sub>8</sub> in.)
Mass (approx.):	3.8 kg (8.4 lbs)

<b>Compact Disc/Tuner</b>	<b>XT-UXG6R</b>
Audio input sensitivity/Impedance (at 1 kHz):	AUX: 400 mV/47 kΩ
[CD section]	
Digital output:	OPTICAL DIGITAL OUT
Wow and flutter:	Immeasurable
[Tuner section]	
FM tuning range:	87.50 MHz – 108.00 MHz
AM tuning range:	MW 522 kHz – 1,629 kHz LW 144 kHz – 288 kHz
Dimensions (approx.):	181 mm x 81 mm x 313 mm (W/H/D) (7 <sup>3</sup> / <sub>16</sub> in. x 3 <sup>1</sup> / <sub>4</sub> in. x 12 <sup>3</sup> / <sub>8</sub> in.)
Mass (approx.):	1.9 kg (4.2 lbs)

<b>Cassette Deck</b>	<b>TD-UXG6</b>
Frequency response :	
Normal	30 Hz – 15,000 Hz
High position	30 Hz – 16,000 Hz
Wow and flutter:	0.1 % WRMS
Dimensions (approx.):	181 mm x 81 mm x 304 mm (W/H/D) (7 <sup>3</sup> / <sub>16</sub> in. x 3 <sup>1</sup> / <sub>4</sub> in. x 12 in.)
Mass (approx.):	1.9 kg (4.2 lbs)

<b>Speaker System</b>	<b>SP-UXG6</b>
Type:	2-way Bass-Reflex Type
Speaker unit:	Woofer 11.5 cm (4 <sup>9</sup> / <sub>16</sub> in.) Cone x 1 Tweeter 3.0 cm (1 <sup>3</sup> / <sub>16</sub> in.) Balanced Dome x 1
Power handling capacity:	24 W
Impedance:	6 Ω
Frequency range:	40 Hz – 20,000 Hz
Sound Pressure Level:	85.5 dB/W•m
Dimensions (approx.):	157 mm x 295 mm x 232 mm (W/H/D) (6 <sup>3</sup> / <sub>16</sub> in. x 11 <sup>5</sup> / <sub>8</sub> in. x 9 <sup>3</sup> / <sub>16</sub> in.)
Mass (approx.):	3.3 kg (7.3 lbs) each

## Supplied Accessories

See page 6.

Design and specifications are subject to change without notice.

US and foreign patents licensed from Dolby Laboratories Licensing Corporation.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>