 
Concerning Compact Discs

Only compact discs bearing this mark can be used w	rith this unit.	
However, continued use of irregular shape CDs (he the unit.	eart-shape, octagonal,	etc.) can damage
CD-R and CD-RW discs recorded with the audio CD format can be played back, though some may not be played back because of the disc character- istics or recording condition.	X	X
How to remove a disc from its case	How to store	e the disc in
	Label side up	
How to hold a disc		
	\sim	



If moisture has formed on a disc When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe off the moisture using a soft dry cloth When storing discs Avoid locations which are • Exposed to direct sunlight. • Susceptible to high levels of humidity or

 Directly exposed to heat from a heating appliance.On top of a car dashboard or near the rear window.

Handling precautions On the label side (the side with writing)
Do not write anything using a pencil,
ball-point pen, etc. Do not use adhesive paper or labels.
On the disc (shiny) side Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc. Do not attach labels or stickers to CDs. Do not use CDs with exposed adhesive from tape or left over peeled off stickers.

• Do not use scratch-proof protectors or covers other than those specified for use with this unit.

Specifications

Portable CD player

Туре	:	Compact disc player		
Signal detection system	:	Non-contact optical pickup (semiconductor laser)		
Pickup system	:	3 beam laser		
Number of channels:	:	2 channels (stereo)		
Frequency response	:	20 Hz to 20 kHz		
Wow & flutter	:	Unmeasurable		
Output	:	Headphones (3.5 mm dia. stereo \times 1)		
		9 mW/ch at 10 % THD/16 Ω matching impedance (16 Ω to 1 k Ω)		
FM tuning range	:	87.5 MHz - 108.0 MHz		
Duration of battery	:	Approx. 20 hours when using two alkaline batteries (LR6)		
(with Anti-Shock				
Protection EX OFF)				
Power requirements	:	DC 3 V ("AA" or "LR6" size battery × 2)		
		DC 2.4V (rechargeable battery \times 2)		
		DC IN 4.5 V		
Dimensions (W \times H \times D)	:	145.5 mm × 32.1 mm × 145.5 mm (5-3/4" × 1-5/16" × 5-3/4")		
		(Excluding buttons and controls)		
Mass	:	300 g (0.67 lbs)		
		(with grip band, without batteries)		


AC adaptor (not supplied)

Input power source	: AC 120 V, 60 Hz (for the U.S.A. and Canada)
Output voltage	AC 110V - 127V/220 V - 240V, 50/60 Hz (for multi voltage area) : DC 4.5 V, 600 mA

 \bigstar Design and specifications are subject to change without notice



PORTABLE CD PLAYER XL-PR3B

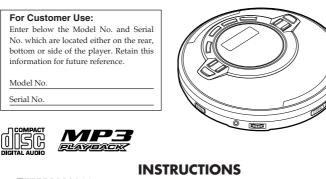

Supplied Accessories Stereo headphones Remote control


Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit

LVT1181-001A [J,C,UJ] 0604SKMCREORI EN ©2004 VICTOR COMPANY OF JAPAN, LIMITED

Power Supply Preparations

The illustration of the grip band is omitted

 Using dry-cell batteries (not supplied)



Do not forcibly open the battery lid too wide

Battery indicator

. 1 pc

.. 1 pc

Battery indicator

10 44:48

This indicator appears when the batteries are almost out of power. Power will be cut off a short while later.


Note:

Turning off the Anti-Shock Protection EX will save the battery power more or less. For details, see "Anti-shock Protection EX" on page 7. (Available for an Audio CD only)

Put the grip band on your hand

Notes:


Adjust the grip band to your hand size.

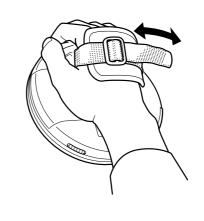


Using the AC adaptor (not supplied) AC adaptor (for multi voltage area only) (not supplied)

Before use

 Make sure the present voltage of your AC adaptor fits to your local voltage before plugging it into the AC power outlet. If it doesn't, shift the AC line-voltage selector with a screwdriver so that it corresponds to your local voltage.



 If the power plug will not fit your socket, use the AC plug adaptor. How to use the AC plug adaptor (not supplied)



Note:

When you want to purchase the AC adaptor and the AC plug · Even if the unit is turned off, small power is consumed as long adaptor, see page 4.

Maintenance

Unit

as the AC adaptor is connected to the AC power outlet.

• When you want to purchase the AC adaptor, see page 4.

AC po


ver outle

⇔• DC IN 4.5V

AC adaptor

Wipe the unit with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry. • If you intend to use a chemically treated cleaning cloth, read its directions first. · Do not use alcohol or paint thinners

Lens

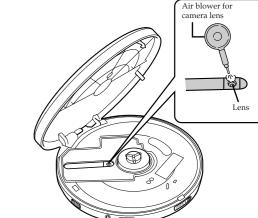

Cautions

2

Listening precautions

Rechargeable batteries

Unit

No altering or remodeling This can cause malfunctioning. No dropping or strong impacts

Locations to be avoided

cause malfunctioning.

1. Care of AC adaptor - The cord of the AC adaptor should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution.
 Chart of AC adaptor if your hand is wet, and always grasp the plug
 Chart of adaptor if your hand is wet, and always grasp the plug

THE FOLLOWING NOTICES ARE APPLIED ONLY FOR THE U.S.A.:

CAUTION!

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection



ŁS

assemble or subject them to excessive heat

• Do not attempt to recharge dry cell batteries.

- To use the rechargeable batteries, follow the instruction manual attached to the rechargeable batteries and charger (not sup-

To prevent damage to the batteries and electrolyte leakage, heed

• Align the \oplus and \ominus polarities properly when inserting the bat-

• Remove the batteries if you do not plan to use the unit for a

· Do not throw batteries into a fire, and do not short-circuit, dis-

Carrying dry cell batteries around

When putting dry cell batteries in a pocket or bag, ensure that no

other metal objects such as a necklace are placed together with

them. Contact with metal may cause short-circuiting which, in

- · Rechargeable batteries (not supplied) can be used.

Precautions

2. Disconnect when not in use - When not in use, be sure to disconnect the AC adaptor from the AC power outlet

3. Batteries - If the unit is not used for a long period of time or is used only from an AC power source, remove all the batteries to prevent potential damage due to battery leakage. Do not mix (old and new) batteries or different types of batteries.

Installation

Safety

Environment

1. Condensation - Moisture may form on the lens in the follow ing conditions.

- immediately after a heater has been turned on.
- in a steamy or very humid room. when the unit is suddenly moved from a cold environment to a warm one. If moisture forms inside this unit, it may not
- operate properly. To correct this problem wait about one hour for the moisture to evaporate.

Placement

1. Foreign Material - Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock

2. Magnetism - The unit should be situated away from equipment or devices that generate strong magnetic fields.

3. Stacking - Do not place any objects on top of the unit.

Service

Maintenance

1. Damage Requiring Service - The unit should be serviced by qualified service personnel when:(a) The AC adaptor is damaged; or(b) Objects have fallen or liquid has been spilled into the unit; or (c) The unit has been exposed to rain; or
 (d) The unit does not appear to operate normally or exhibits a marked change in performance; or (e) The unit has been dropped, or the enclosure damaged.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF REFER SERVICING TO QUALIFIED PERSONNEL

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

INFORMATION (For Canada)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Department of Communications.

CAUTION

- Do not block the ventilation opening or holes. (If the venti-lation openings of holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.) Do not place any naked flame sources, such as lighted
- When discarding batteries, environmental problems must
- be considered and local rules or laws governing the disposal of these batteries must be followed strictly.Do not expose this apparatus to rain, moisture, dripping or
- splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

IMPORTANT FOR LASER PRODUCTS

- CLASS 1 LASER PRODUCT
- 2. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- 3. CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- 4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

CAUTION: Visible and invisible	VARNING: Synlig Och
laser radiation when open and	osynlig laserstrålning när
interlock failed or defeated.	den öppnas och spärren är
AVOID DIRECT EXPOSURE TO	urkopplad. Betrakta ej
BEAM. (e)	strålen. (s)
ADVARSEL: Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejle. Undgå direkte eksponering til stråling. (d)	VARO: Avattaessa ja Suojalukitus ohitettunatai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio com-munications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or televi-sion reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measu Reorient or relocate the receiving antenna. · Increase the separation between the equipment and re-

ceiver · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician

for help.

Any unauthorized changes or modifications to this equipnent would void the user's authority to operate this device

Do not play your headphones or earphones at a high volume.

Hearing experts advise against continuous extended play.

tinue use Do not use while operating a motorized vehicle. It may create a • Do not mix different types or makers of batteries or old and traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use

Even if your headphones or earphones are an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BE-FORE your hearing adapts.

To establish a safe level:

• Start your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and

clearly, and without distortion. Once you have established a comfortable sound level:

- Do not forcibly bend it.

 - not going to be used for a long time.

Troubleshooting

Problem	Check this
Poor tuner reception	Extend the headphone cord (antenna) to improve reception.
Does not turn on.	 Is the AC adaptor securely connected? Is the HOLD switch set to OFF position?
Cannot close the lid.	Is the disc properly secured in place?
Cannot play discs.	 Is the disc properly secured in place? Is there moisture condensation on the lens? (Wait for about an hour and then try again.) Are MP3 files recorded on the disc? Do MP3 files have the extension code—.mp3? Are MP3 files recorded in the format compliant with ISC 9660?
Cannot hear music—too noisy.	 Is the headphone plug inserted all the way? Is the plug dirty? (Wipe away dirt on the plug.) Are you playing a compatible disc? While playing a non-MP3 file, you will hear a noise. (Note it may not be an MP3 file although it has the extension code—mp3.)
TV picture is distorted. Other radio reception is noisy.	Are you using the unit too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)
"dISC" or "Er" is displayed when a disc is in the player.	 Is the disc damaged? Is the disc playable on this player? Has the disc been inserted upside down?

If the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult vour dealer for instructions.

AC adaptor

• Handle the AC adaptor carefully. Improper handling is dan-

- Do not touch it with wet hands.
- Do not place heavy objects on top of it.
- Be sure to connect only the specified AC adaptor with the unit. · Disconnect the AC adaptor from the power outlet if the unit is
- 3. Very hot places near heating appliances, etc Do not leave the unit exposed to direct sunlight for long periods of time This may deform or discolor the cabinet and may also cause malfunctioning. When purchasing AC adaptor /

. Bathrooms and other moisture-prone places.

2. Warehouses and other dusty places

Avoid using the unit in the following locations since they can

AC plug adaptor

Be absolutely sure to purchase the AC adaptor designed especially for this unit.

AC adaptor: AA-R4513 (for the U.S.A. and Canada) AA-R4516 (for multi voltage area) AC plug adaptor: QAM0060-001 (for multi voltage area) For details, check with your dealer.

• Set the dial and leave it there.

in potentially hazardous situations

If you experience a ringing in your ears, reduce volume or discon-

LISTENING Dry cell batteries

the following poi


new batteries.

long period of time.

turn, may cause a fire.

Basic Play

The illustration of the grip band is omitted

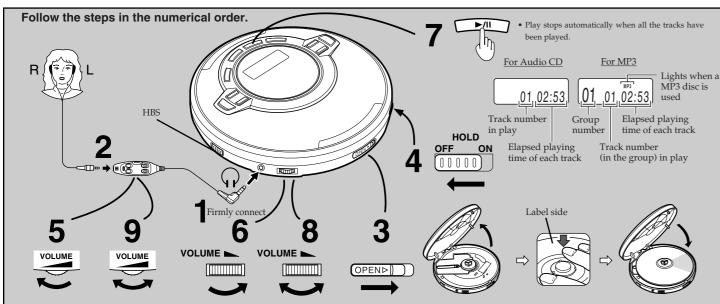

Operation	Button	Display/	reference
-		Audio CD	MP3
To pause	During play,	0700:18-	01 0400:07-
To stop	During play,	Total number of tracks 1044:48 Total playing time	Total number of groups 10 35 Total number of tracks
To turn off the unit	While stopped,	No indication	
Fast forward/ reverse	Skip function During play, Reverse Search function Keep depressed during play.	 twice. During Program play, the ward or back through th tracks. During Random play, the 	bus track, quickly press I
Group skip (MP3 only)	During play or while stopped, PRESET UP GROUP Reverse PRESET DOV. ();;;;		Group number

or your reference:

dISC" his indication appears if \blacktriangleright/II is pressed when no disc is loaded r if the disc is not properly seated. . _"

reparation period before playing the track ashes for several seconds after pressing ▶/II to play.

OPEN" his indication appears when the lid is open.

emoving discs urn off the unit and, after the disc has stopped rotating, remove e disc as shown below:



Auto power off If the unit is left in stop mode for 30 seconds, the unit turns itself off automatically to prevent the batteries from running down.

Auto power off function does not work when the source is FM.

 
Disc rotation noise The portable CD player uses a power-saving operation method

so that disc rotation noise will intermittently be emitted. But, it is not a failure.


Using the Remote Control

Preparation:

Release the remote control from the Hold mode



How to use the remote control

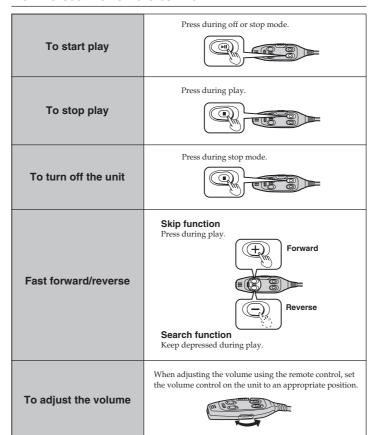


About MP3 files

MP3 File Compatibility

• This player can read MP3 files that are recorded in the format that is compliant with ISO 9660. The player can read or play an MP3 file with the extension code —".mp3

Playing order of MP3 files

The illustration below shows the normal playing order of the MP3 files. You will see that the MP3 files are played back in the order from the higher hierarchy to the lower one.

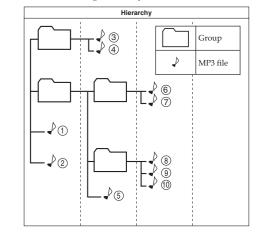

Other Play Methods

Intro play	Program play		
You can successively play the first 10 seconds of every track.	You can program up to 64 tra the same tracks.		
1 While stopped,	For Audio CD, go to step 3.		

Anti-Shock Protection EX

racks in any desired order including This function achieves excellent performance against sound interruption caused by vibrations. You will be able to enjoy listening to music during (not vigorous) jogging. the high-per stored in the memory ahead of time. For Audio CD: Up to 175 seconds worth (Anti-Shock Protection on/off selectable) For MP3: Up to 426 seconds worth at 128 kbps (Anti-Shock

Tuner Operation

You can listen to FM stations by tuning in manually, automatically, or using preset memory. For best reception, extend the headphone cord (antenna).

107.0

Manual/Auto tuning

/ኩ

2 Select a station.

I4

Press ►► or I◄ repeatedly to select a station you want.

Hold down ►► or I for a while and then release it. The fre-

quency automatically changes up or down to find the next station.

Manual tuning

Auto tuning

Manuals Search And Download.

1

You can preset up to 20 stations (frequencies)

Presetting stations

Select the station you want to pres 1

Changing the FM reception mode

tion improves, but you lose the stereo effect

To select the monaural mode

To cancel the monaural mode

ΙM

Turning off the unit

Press MODE once again. "MONO" will go out.

The monaural mode is cancelled also by changing the frequency

 
MODE

When a broadcast is in stereo, "ST." lights up and you can hear stereo effects. However, if an FM stereo broadcast is hard to receive or noisy, you can select monaural (MONO) mode. Recep-

"MONO" appears.

MONO

107.0



To cancel Press MODE repeatedly until "INTRO" goes out.

Notes:

5

• You can also select Intro play during playback. In this case, Intro play will start from the next track after the current track has finished. You can also select Intro play during Program play mode.

Random play

During playback,





After playing all tracks, the unit stops

 
To cancel

Press MODE until "RND" goes out, or press ■ to stop the disc.

Notes:


• You can also select Random play in stop mode. • During Program play, you can not select Random play.

Repeat play



During playback,



 

ALL

All track repeat

To cancel Press MODE repeatedly until the repeat indicator goes out.



• You can also select Repeat play during Program play. You can also select Repeat play while stopped.

GROUF

• To confirm the program While stopped, press PROGRAM repeatedly. At this time, you can add and change the program, if required.

• To delete the entire program

►/II

• While stopped, press STOP. Turn off the unit. • Change the source to FM.

Hyper-Bass Sound effect

You can enjoy powerful bass sound



Protection is fixed to on.) Normally, this function is in effect.



As the audio data is gradually stored, the indicator changes as follows:

${f 2}$ (MP3 only) Select the desired group number. (e.g.02)

00 00 P-01

Program sequence numbe

02 01 P-01

02 =01: P-01

02 03 P-01

Track number

00 00 P-02

6 For MP3, repeat steps 2-5 to select other

When you program exceeding 64 tracks, the program se-quence number returns to "01" and will overwrite the previ-

For Audio CD, repeat steps 4 and 5.

Though the display differs a little, operation is the same

1 While stopped,

(MP3 only)

_ /h

PRESET UP

GROUP

-The

4 Select the desired track.

-Jm

The track is registered

tracks.

ous setting.

7

曲

3

- 5

PRESET DON 11

 




The "ANTI SHOCK" indicator goes out To activate again (Audio CD only)

Press A.S.P.

Notes:




However, this may cause a slight interruption in the sound because the disc's rotational speed changes.

Preventing Accidental Operation (Hold mode)


This function causes the unit to ignore, accidental button presses.

Hold mode prevents the following:

  · Powering on the unit accidentally (which can cause the batter ies to go dead). • Play being cut off unexpectedly.









- · To prevent the unit from powering on accidentally, set the HOLD switch to the ON position while the unit is turned off. To prevent the unit from unexpected operation during play, set the HOLD switch to the ON position after you starts playing the disc.
- When the unit is in Hold mode, "HOLD" lights as follows. Power on : "HOLD" stays lit. Power off : "HOLD" lights up for a few seconds when ▶/II or
- FM is pressed.

 
Notes: Before turning on the unit, be sure that HOLD is OFF. Otherwise, you cannot turn on the unit. • The HOLD switch on the unit is effective for the unit only. While, that on the remote control is effective for the remote control only.

Download from Www.Somanuals.com.

Use Manual or Auto tuning mentioned earlier. 2




3 Select the preset number (01~20) you want.




4 Press PROGRAM

Preset tuning

 
1




2 Select the preset number you want.

 

 • When the unit malfunctions or freezes during use, disconnect the power source (the AC adaptor and batteries) once. Then, re-connect the power source and continue operation. If tuner operation is abnormal, press the RESET switch to reset the unit

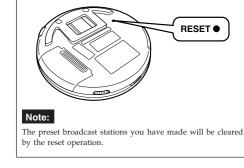





Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com