



GENERAL CONTROLS

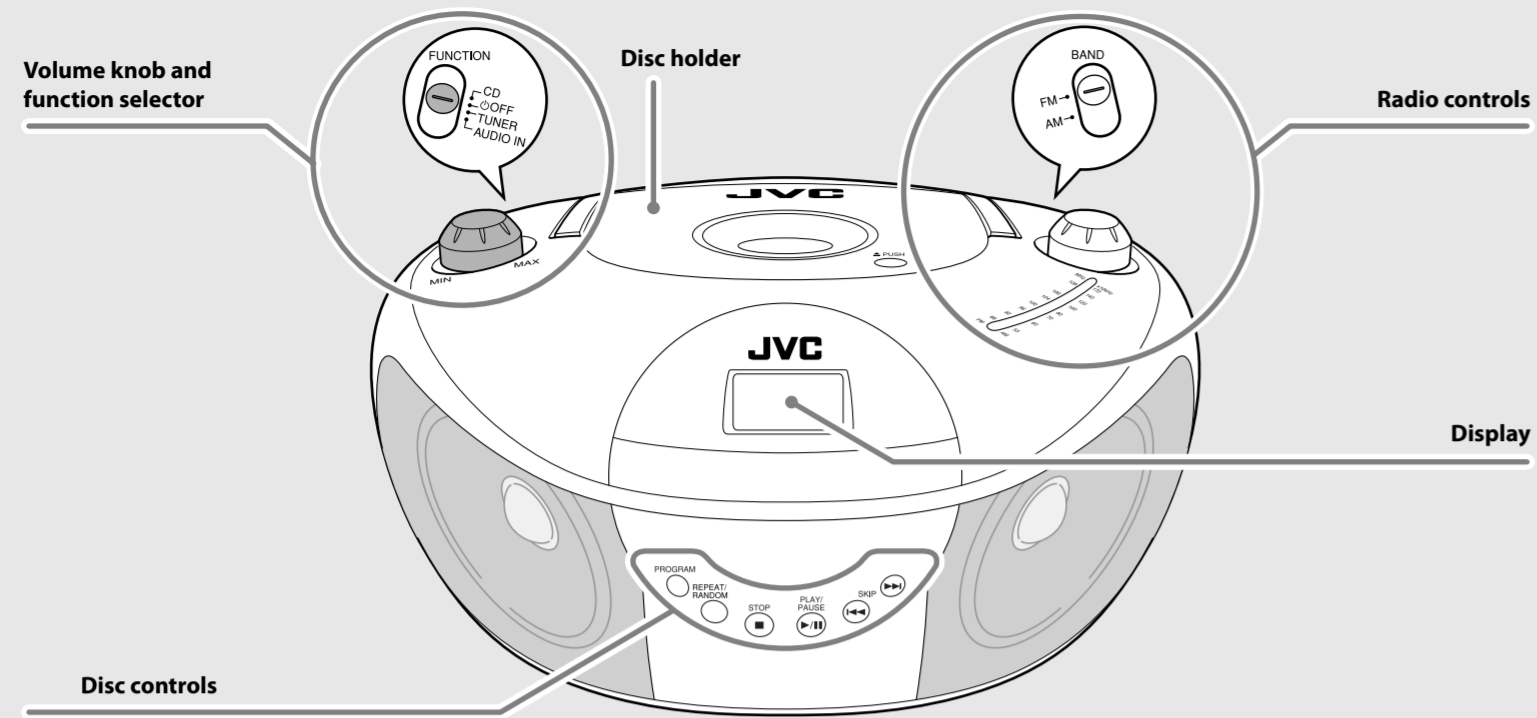

Selecting the source to play

Slide the FUNCTION selector to select CD, TUNER or AUDIO IN.

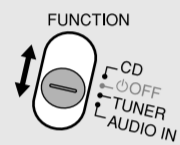


CD:
To play back a disc. (See "DISC OPERATIONS.")

TUNER:
To listen to the radio broadcast. (See "TUNER OPERATIONS.")

AUDIO IN:
To listen to the other equipment connected to the AUDIO IN jack. (See "LISTENING TO OTHER EQUIPMENT.")


Adjusting the volume

Turn the VOLUME knob to increase or decrease the volume.
• Set the volume to minimum when you turn on the unit.

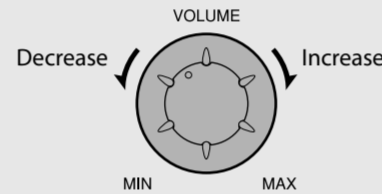


Turning the unit off

Slide the FUNCTION selector to OFF.

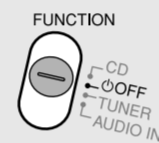


TUNER OPERATIONS

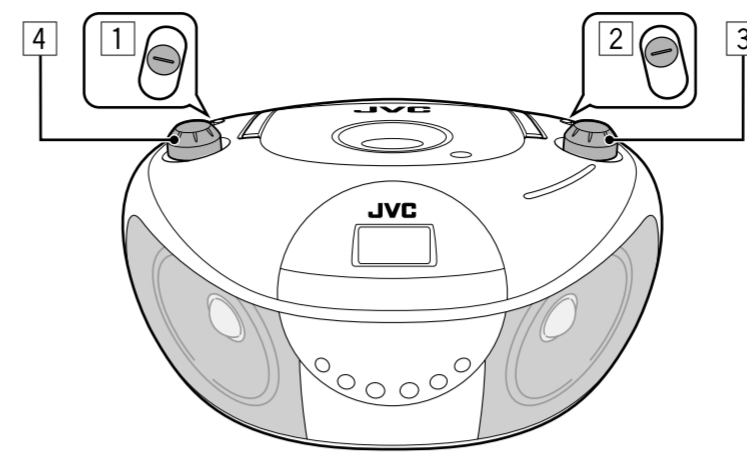


Basic procedure


1 Set the source to TUNER.

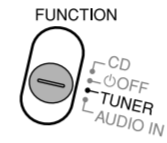


2 Select the band—FM or AM.

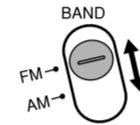


3 Select a station.

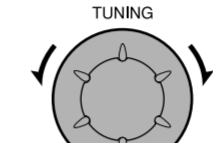

Moves to indicate the current frequency

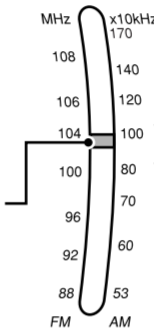


4 Adjust the volume.

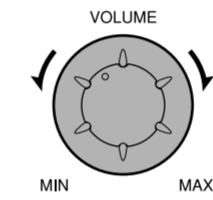

Improving the FM reception


When an FM stereo (FM ST) broadcast is hard to receive or noisy, select the monaural reception (MONO).

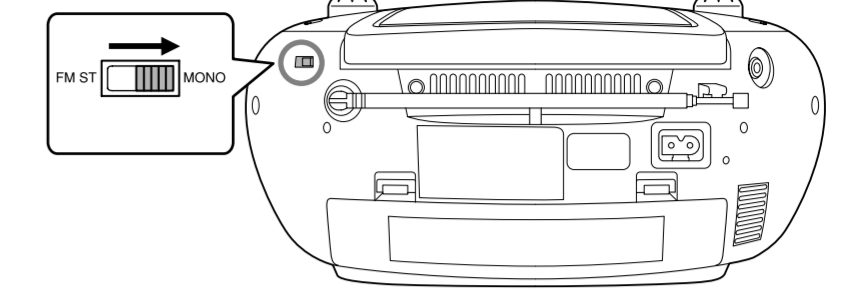

• To restore stereo reception, switch to FM ST.


Adjusting the antenna

FM

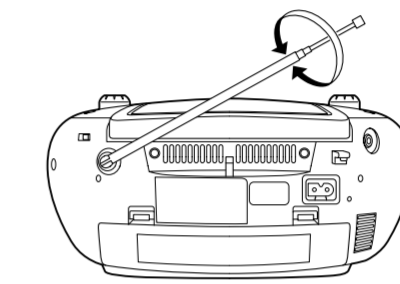


AM

The AM antenna is built in, so adjusting the position of the unit may help AM reception.

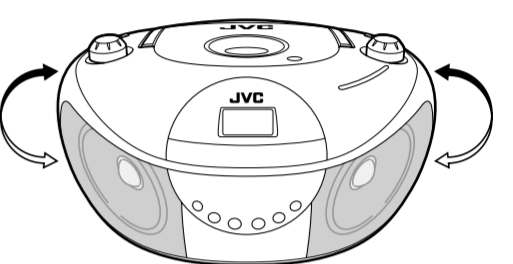


DISC OPERATIONS

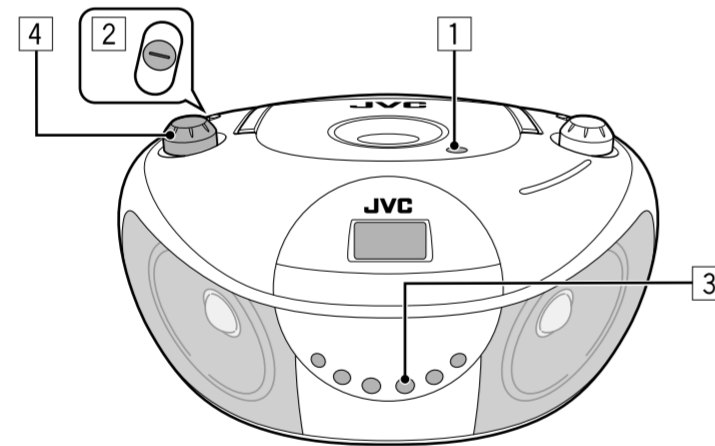


Basic procedure


1 Load a disc.

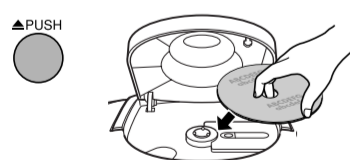

4 Adjust the volume.

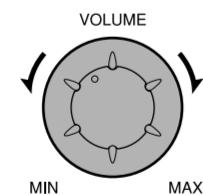

2 Set the source to CD.

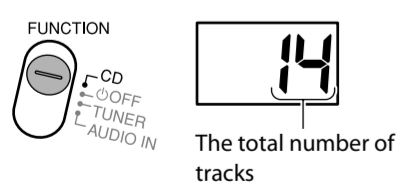

The total number of tracks

3 Start playback.



The current track number

To stop playback



To pause playback



• To resume, press the same button again.

To select a track



To locate a desired position on the disc
During playback...




Press and hold

Program playback

Up to 20 tracks can be programmed to play in a desired order.

To program the playing order
While playback is stopped...

1 Show the program creation display.

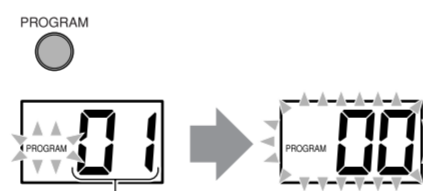

Program number

• Now you can select the first track of the program.


2 Select a desired track.



3 Add the track to the program.



• The next program number appears on the display, then track selection display is shown.

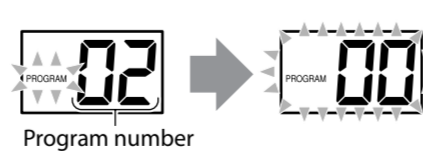

Program number

4 Repeat steps 2 and 3.

• When the 20th track is programmed, "..." flashes on the display and the 21st track cannot be programmed.

5 Start playback.



• After program playback ended or stopped, the program playback mode is automatically canceled. (The PROGRAM indicator disappears from the display.)

To play back the program again, press PROGRAM, then PLAY/PAUSE.

To edit the program

1 While playback is stopped, press PROGRAM repeatedly to select the program number of the track you want to replace.

• To add a track at the end of the program, select the last program number.
2 Perform steps 2 and 3 on the left column to select a new track.

To erase the entire program

While playback is stopped...

1 Press PROGRAM.
• PROGRAM indicator lights up on the display.
2 Press ■.

• The entire program is also erased in the following cases:
– when you open the disc holder.
– when the unit is turned off.
– when you select another source.

Repeat/Random playback

Select the desired playback mode.



Playback mode indicator (See below.)


Each time you press the button, the playback mode changes as follows:

Indicator	Playback mode
REPEAT	Repeats the current track.
REPEAT ALL	Repeats all tracks.
RANDOM	Plays tracks at random.

To cancel, press the same button repeatedly until the indicator above disappears from the display.


• Repeat playback is also canceled if the playback is stopped.
• Random playback cannot be used during program playback. If you program the playing order during random playback, random playback is canceled.

LISTENING TO OTHER EQUIPMENT

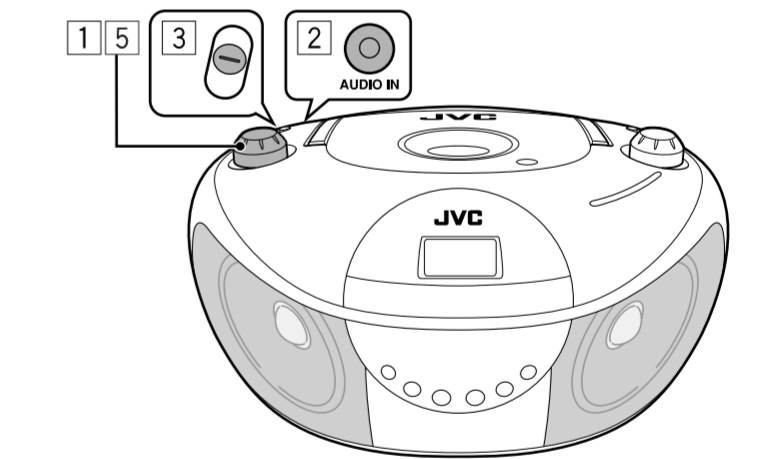


Basic procedure

1 Turn the volume to minimum.

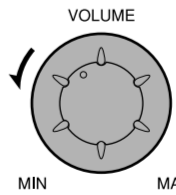


3 Set the source to AUDIO IN.

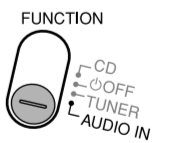


2 Connect the equipment.

• Connect the equipment with the stereo mini plug (3.5 mm (3/16 in) diameter) to the AUDIO IN jack on the rear.

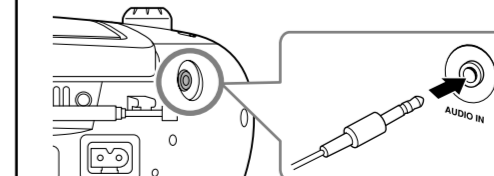

4 Start playing the equipment.

5 Adjust the volume.

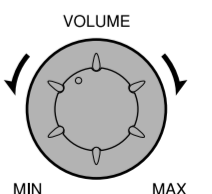

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>