 


JVC

CD PORTABLE SYSTEM RC-BX75VSL/RC-BX75VWT

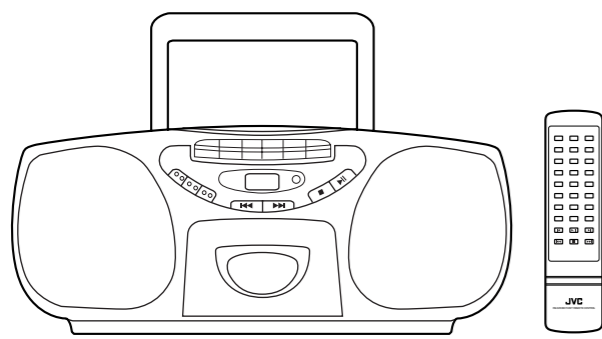

For Customer Use :
Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the player. Retain this information for future reference.

Model No. _____
Serial No. _____

LVT0933-001B [U]
88-00075-00



INSTRUCTIONS

CAUTION!
THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**CLASS 1
LASER PRODUCT**

- CLASS 1 LASER PRODUCT
- DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

DANGER: Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (a)

 
ADVARSEL: Usynlig laser-stråling ved åbning, når sikkerhedsudrustningen er ude af funktion. Undgå udsættelse for stråling. (d)

WARNING LABEL,
PLACED INSIDE
THE UNIT

PRECAUTIONS

- Never open the cabinet under any circumstances. Never operate this product with the cabinet removed. Any repairs of internal adjustments should be made only by a trained service technician.
- Do not touch the system with wet hands. If any liquid enters the cabinet, take the system to a trained service technician for inspection.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

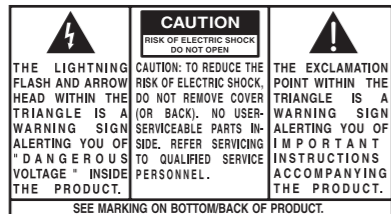

SUPPLIED ACCESSORIES

- Remote control unit 1 pc.
- Power cord* 1 pc.
- Audio/Video cord* 1 pc.
- * Accommodated in the battery compartment.

 
Thank you for purchasing this JVC product. Please read the instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the system.

FIRST THINGS

This portable system operates on battery or AC power.

SETTING THE VOLTAGE SELECTOR

To avoid damaging the unit, select the voltage range before plugging the power cord into the unit. Open the battery compartment cover on the back of the unit by pressing down the two tabs and pulling out the cover. Select the voltage range for your area with the VOLTAGE SELECTOR inside the battery compartment by using a screwdriver or similar.

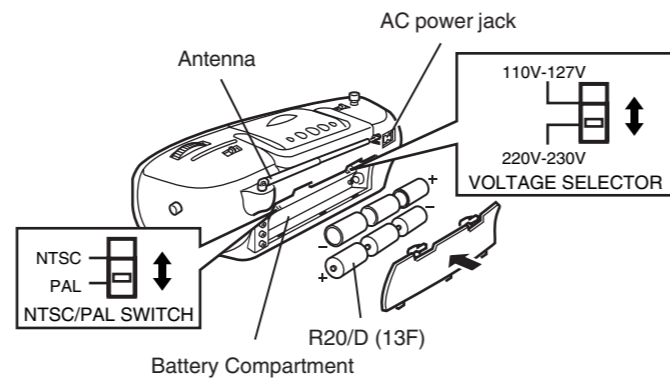

SETTING THE TV SYSTEM SELECTOR

 
Open the battery compartment cover and set the TV system selector to PAL or NTSC according to the TV system you use.

INSERTING BATTERIES (NOT SUPPLIED)

Insert 6 batteries R20/D (13F) and you can take your system just about anywhere. Open the battery compartment cover and insert batteries as shown.

Note: The battery power will be switched off when you plugged the power cord into the AC power jack on the unit.

Inserting Batteries into the Remote Control Unit:
Match the polarity (+ and -) of the batteries.

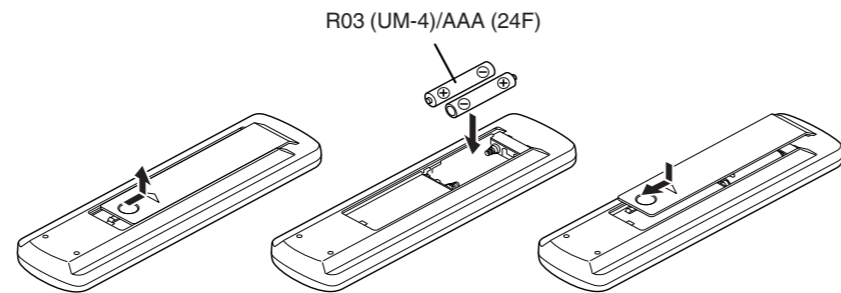


CAUTION:
To avoid battery leakage or explosion, handle batteries properly.

- If you're not going to use your system for a month or more, remove the batteries from the battery compartment.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Do not mix with different battery types or with new and old ones, or do not attempt to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

SUPPLYING AC POWER


Plug the power cord into the AC power jack on the back of the unit, and into an AC power outlet.

 Note: To switch off the system completely, unplug the power cord.

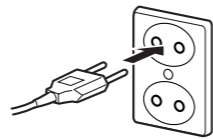

CONNECTING TO TV

 Connect the system to your TV or VCR's video/audio inputs to enjoy video images recorded on a VCD.

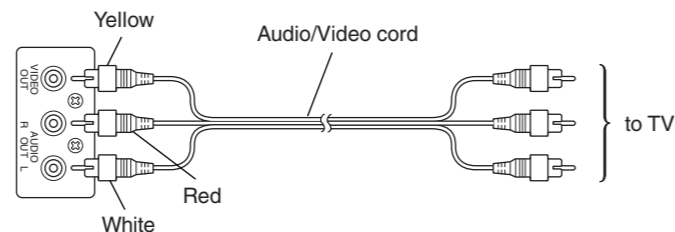

CONNECTING HEADPHONES (NOT SUPPLIED)

Connect headphones to the 3.5mm stereo headphone socket at the left side of the unit.



GENERAL CONTROLS

FUNCTION Switch – Move the switch to select the system function - RADIO, TAPE or CD/VCD.
VOLUME – Turn the volume knob to increase or decrease the volume level.
S-BASS – Turn on S-BASS by pressing button down for enhanced bass effect. Turn off S-BASS (up position) for normal bass sound.
POWER OFF (standby) – Move the FUNCTION switch to TAPE position. Be sure no cassette buttons are pressed down.

USING THE RADIO

TUNING IN RADIO STATIONS

 
Move the FUNCTION switch to RADIO to turn the radio on.

- Set BAND to FM, SW or MW.
- Tune in desired station by turning the TUNING dial.
- In SW reception, you can finely tune in desired station by turning the FINE TUNE knob on the right side of the unit.
- To turn off the radio, move FUNCTION switch to TAPE.

HANDLING ANTENNAS FOR BETTER RECEPTION

The MW antenna is built in, so adjusting the position of the unit may help MW reception. The FM/SW rod antenna on the back of the unit can be extended and rotated for better FM/SW reception.

USING THE TAPE DECK

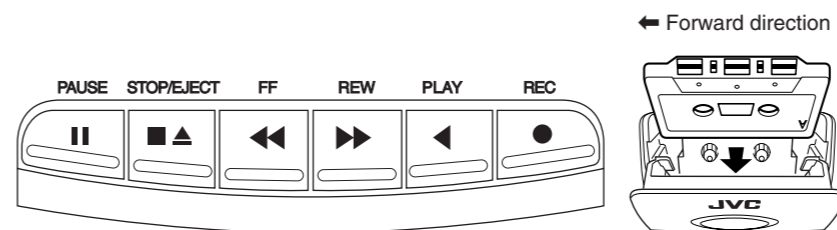

- REC** – Press to record from the radio or CD/VCD player.
- PLAY** – Press to play the cassette tape.
- REW** – From stop or play mode, press to rewind the tape toward the beginning.
- FF** – From stop or play mode, press to advance the tape toward the end.
- STOP/EJECT** – Press to stop the cassette tape, or to open the cassette compartment door when no buttons are pressed down.
- PAUSE** – Press to interrupt playback or recording. Pressing it again will resume playback or recording.

PLAYING A CASSETTE TAPE

- Move the FUNCTION switch to TAPE.
- Press STOP/EJECT to open the cassette compartment door.
- Insert a cassette tape into the compartment with the open edge facing up. Tape travels from the right to the left.
- Close the door securely.
- Press REW or FF to move the tape to the desired starting point, if necessary.
- Press PLAY to start playing the tape. The cassette tape plays until it reaches the end of the side, then it automatically stops.

 
RECORDING ON A CASSETTE TAPE

You can record from the radio or the CD/VCD player. For best recording, use the type I tape (normal bias tape).

- It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

ERASE PROTECTION

When you record on new material, the cassette deck records over whatever is on a tape. To protect a tape from accidental erasure, break off one or both plastic tabs (one for each tape side) on the top of the cassette tape. If you decide later to record on the tape, seal the hole with a piece of cellophane tape.

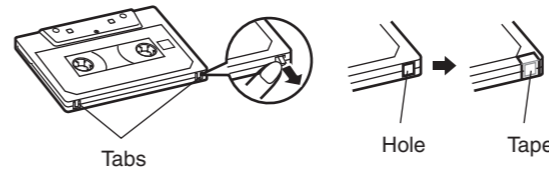

CAUTION:
A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape use a pencil to tighten it up before you insert in.

RECORDING FROM THE RADIO

- Insert a blank cassette tape.
- Move the FUNCTION switch to RADIO and tune in desired station.
- Press REC to start recording. REC and PLAY lock down.
- Press STOP/EJECT to end recording.
- To turn off the radio, slide the FUNCTION switch to TAPE.

SYNCHRO RECORDING FROM CDs

- Move the FUNCTION switch to CD/VCD.
- Insert a blank cassette tape.
- Insert the CD you want to record. If you need, program the CD tracks.
 - When you record from video CD with PBC, press PBC on the remote control unit to turn off "PBC" indicator on the display (PBC OFF). Then, press STOP to stop the video CD.
- Press REC.
- The CD is automatically played and recorded onto the tape.
- To stop at any position during recording, press STOP/EJECT.

To Record from the Desired Track:
In step 4 above, skip the CD track with the SKIP/SEARCH on the unit, or the on the remote control unit, and then immediately press REC.

 
Note: About 5 seconds after the TRACK selection, the display returns to the TOC display.

TIPS:
To temporarily pause the recording, press PAUSE on the cassette deck. Press PAUSE again to resume recording. Note that using STOP/EJECT instead of PAUSE for this purpose is not recommended as the recorded sound may be distorted.


BEFORE USING THE CD/VCD PLAYER

The display and the remote control unit are effective only for the CD/VCD player. The detailed operations for the normal CDs (audio CDs and MP3 CDs) and the video CDs are separately explained in "USING THE CD PLAYER" and "USING THE VCD PLAYER".

UNIT'S BUTTONS

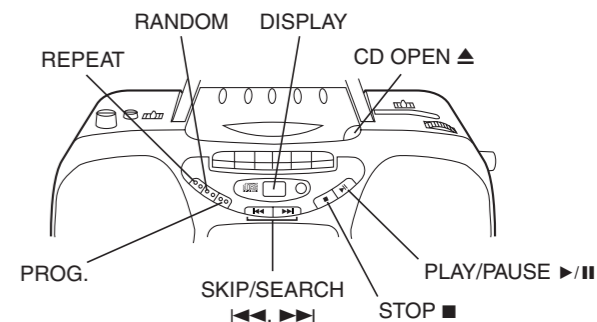

REMOTE CONTROL'S BUTTONS

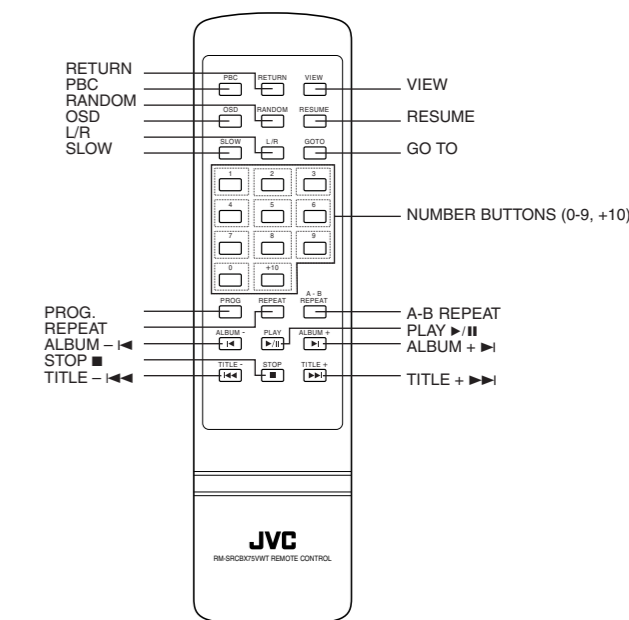 

THINGS TO KNOW BEFORE PLAYING CDs

Playable CDs:
Only CDs bearing these marks can be used with this system.



 
- On MP3 CD Format:**
- Disc format should be set to ISO 9660.
 - Multisession recording is not supported.
 - The disc must be finalized.
 - Files other than MP3 (.MP3) are ignored.

Button Expression:
Description of the unit's buttons is omitted since it is the same as that of the remote control unit's buttons except the following buttons:
Track selection:
Remote control – I on the unit – SKIP/SEARCH I on the remote control
Search Play:
Remote control – I on the unit – Pressing & holding SKIP/SEARCH I on the remote control
• When any unacceptable button operation is made, "Err (Error)" will appear on the display.

Using the Number Buttons:
To specify the track number, press the number buttons as follows:
For track number 5, press 5.
For track number 10, press +10 and then 0.
For track number 25, press +10 twice and then 5.

LOADING A CD

- Move the FUNCTION switch to CD/VCD. "NO DISC" appears if no CD is loaded.
- Press CD OPEN to open the CD door.
- Place a CD into the tray with the label facing up.
- Close the CD door. "READING" appears for a few seconds.
For audio CD/VCD: The total number of tracks and the playing time of the disc appear. For video CD, "VCD" and VCD version ("2.0") indicators will light on the display.

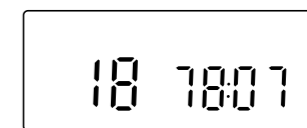


For MP3 CD: The total album number and the total track number of the disc briefly appears, and then changes to the first album and track numbers. Also, the "MP3" indicator appears on the display.

Note: When operating an MP3 CD, it may take time until the CD responds to the button command. When the unit is connected to the TV, the disc information on MP3 appears on the TV.

USING THE CD PLAYER (FOR AUDIO CD/MP3 CD)

PLAYING AN AUDIO CD/MP3 CD

 Press ►/II to play all the tracks in order starting with Track 1. The current track number and elapsed playing time appear on the display.

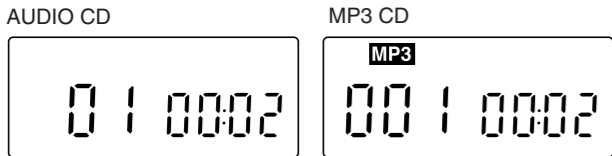

To stop playing the CD, press STOP ■. To pause, press ►/II. The playing time blinks. To cancel pause, press ►/II again.

SELECTING A TRACK (AUDIO CD ONLY)

During playback, press ◀◀/▶▶ on the unit or ◀/▶ on the remote control, to skip to the previous/next track or press the number button to specify the track number. Then the selected track starts playing.

- You can also select a track in stop mode.

SEARCH PLAY (AUDIO CD ONLY)

During playback, press and hold ◀◀/▶▶ to move backwards/forward through a track at high speed. You can quickly find a particular passage in the current track.

SELECTING AN ALBUM AND TRACK (MP3 ONLY)

When the TV is connected the disc information is displayed on the TV. While viewing this, you can select an album or a track.

Selecting an Album (MP3 Only):

- In stop mode or during playback, press ALBUM →/+ to select a desired album number. (e.g. "A02 (album number 2) T001" on the display)
- Press ►/II to start playback the track number 1 of selected album.

Selecting a Track (MP3 Only):

- After selecting the album, press TITLE →/+ to skip to the previous/next track in the current album. (e.g. "A02 T015 (track number 15 in the album number 2)" on the display)
 - You can select a desired track with the number button. In this case, playback automatically starts.
- Press ►/II to start playback the selected track.

RESUME PLAY (AUDIO CD ONLY)

Press RESUME. Then playback starts from the position where you have stopped.

RANDOM PLAY

In stop mode, press RANDOM. The "RANDOM" indicator lights on the display and playback starts in random order. Random play continues until you stop the CD. You can also enter the random play mode during playback. To exit the random play mode, press RANDOM once again or press ■. Note that the RANDOM operation is ignored in program play mode.

REPEAT PLAY

During playback, press REPEAT. Each time you press it, the display changes as follows and each repeat play takes place.

"REPEAT (for 1 track repeat)" → "REPEAT GROUP (for all tracks in the current album: MP3 only)" → "REPEAT ALL (for all tracks)" → (back to the beginning)

(On the TV, "REPEAT ALB" is displayed instead of "REPEAT GROUP".)

The repeat mode can be mixed with the other modes as follows:

Mode	REPEAT	REPEAT ALL	REPEAT GROUP (MP3 only)
Play	Current 1 track	All tracks	All tracks in the current album
Program	Current 1 track	All programmed tracks	—

PROGRAM PLAY

You can program the playing order of the tracks up to 20 for an audio CD/video CD and 99 for a MP3 CD.

For Audio CD (and VCD):

- In stop mode, press PROG. The "PROG." indicator blinks on the display.
- Select a desired track with ◀/▶ or number button, and then press PROG. again. "P01 (program number 1)" and "Txx (programmed track number)" appear. The "PROG." indicator stays lit.
- Repeat 1 and 2 to program other tracks, the number of programs increases. Then press ►/II to start program play.

To confirm the program, press ■ to return to stop mode and then press ◀/▶.

To clear the program, press ■ in stop mode. "CLr PrOG" appears and the "PROG." indicator goes out. Opening the CD door also clears the program.

To skip to the track during playback, press ◀/▶.

- When you program the VCD with PBC, be sure that "PBC" indicator goes out on the display (PBC OFF).

For MP3 CD:

- In stop mode, press PROG. The "PROG." indicator blinks on the display.
- Select a desired album with ALBUM +/-. (e.g. "A02 T001")
- Select a desired track in the selected album with TITLE →/+ or number button. (e.g. "A02 T015")
- Press PROG. again. The "PROG." indicator stays lit.
- Repeat 1 to 4 to program other tracks, the number of programs increases. Then press ►/II to start program play.

How to confirm and clear the program is the same as for the audio CD.

OTHER OPERATIONS FOR AUDIO CD/MP3 CD

Refer to "VARIOUS FUNCTIONS".

USING THE VCD PLAYER

Be sure that the system is connected to the TV.

PLAYING A VIDEO CD

Playing a Video CD with PBC (For VCD Version 2.0 Only):

The system provides a PBC (Playback Control) function which utilizes a procedure (menu selection) programmed in the video CD.

- Insert a video CD with PBC. The "PBC" indicator lights on the display. The menu screen appears on the TV.
- Press ◀/▶ to move through the previous/next menu page, and specify the item (track) in the menu with the number button. Then, the selected track is played.
 - Once the video CD with PBC has stopped, the "PBC" indicator goes out. (Pressing PBC replays the video CD.)

To stop playing the video CD, press ■.

To pause the picture, press ►/II. To cancel pause, press ►/II again.

To return to the menu page at any time, press RETURN.

To select the desired track, press the number button.

To select the previous/next track, press ◀/▶.

To search-play at high speed during playback, press ◀◀/▶▶. Each time you press it, the playback speed changes. During search play, no sound comes out.

Playing a Video CD without using PBC (PBC OFF):

- Insert a video CD with PBC. The menu screen appears on the TV.
- Press PBC to turn off PBC. After a while, the "PBC" indicator goes out and the video CD is played sequentially from the first track. During playback, you can stop, pause, skip, or search-play in the same manner as for the audio CD.

Playing a Video CD without PBC:

You can play the video CD in the same manner as for the audio CD.

RESUME PLAY

Press RESUME. Then playback starts from the position where you have stopped. When a video CD with the PBC function is used with the PBC ON, the resume play does not work.

VARIOUS FUNCTIONS (USE REMOTE CONTROL)

OSD (On screen display): [VCD/Audio CD]

You can view operational information on TV. Each time you press OSD, OSD function turns on and off.

VIEW (Viewing up to 9 pictures): [VCD]

 
Press VIEW. The picture page showing up to 9 tracks is displayed on the TV, and the first 20 seconds of each track is played sequentially. To view the previous/next picture page, press ◀/▶. To normally play the track being briefly played, press ►/II. To normally play a desired track in the picture page, select the track number with the number button.

SLOW (Playback speed reduction): [VCD]

During playback, press SLOW. Each time you press it, playback speed changes to 1/2, 1/4, 1/8 and "PLAY (normal speed)". During slow playback, no sound comes out.

L/R (Channel selection): [VCD]

Each time you press L/R, the channel output changes in the order of "MONO Left", "MONO Right" and "STEREO".



GO TO (Starting playback from the designated time): [VCD/Audio CD]

- Press GO TO. Then "-:--" (- min. -- sec.) appears on the display and on the TV.
- Enter the time you want to start playback with the number button. Then playback automatically starts from that position. When a video CD with the PBC function is used with the PBC ON, this function does not work.

A-B REPEAT (Repeating section A-B): [VCD/Audio CD]

You can repeatedly play a certain passage or scene by specifying the points A and B.

- During playback, press A-B REPEAT at the start point you want to repeat. "A→" appears on the display.
- Press A-B REPEAT at the end point. "A→B" appears on the display and the section A-B is repeatedly played. To exit A-B repeat playback, press A-B REPEAT once again. "A→B" disappears and normal playback takes place. A-B repeat playback also exits if the track selection operation is made.
 - You may use A-B repeat playback over 2 or more tracks.

Note: For the button operations of RESUME, PROGRAM, REPEAT and RANDOM, see "USING THE CD PLAYER (FOR AUDIO CD/MP3 CD)".

CARE AND MAINTENANCE

CLEANING THE EXTERIOR

- Disconnect the system from AC power before cleaning the exterior of the unit with a soft dust cloth.

HANDLING CDs

- Do not touch the signal surfaces. Hold by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

CLEANING CDs

- Dirty discs can cause poor sound quality. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

TAPE CARE

- Don't expose cassette tapes to sunlight or store in hot places. High temperatures may warp the shell or damage the tape itself.
- Keep cassette tapes in their boxes when not in use.
- Cassette tapes can be erased by magnetic fields produced by magnets, electric motors, electrical transformers, and other devices. Keep tapes away from magnets and magnetic fields.

CLEANING THE TAPE HEADS

Iron oxide particles from the magnetic tape can build up on the parts that come in contact with the tape. These deposits can cause incomplete erasure, muffled playback sound, and might prevent automatic stop.

To clean a cassette deck, open the compartment door, push the PLAY button and gently clean the heads, capstan, and pinch wheel with a head cleaner.

Always unplug the power cord before cleaning, and allow 30 minutes drying time when using a liquid cleaner.

Clean heads after every 25 hours of use.

- Demagnetize the head occasionally with a head demagnetizing cassette (available from many audio equipment stores).
- Never use any metal objects on or near the tape heads.
- Do not allow any cleaning material to fall into the tape assembly.

TROUBLESHOOTING TIPS

Problem	Solution
System doesn't turn on.	<ul style="list-style-type: none">Make sure power cord is securely plugged into the AC power outlet (or that the batteries are fresh).Unplug the unit for a moment, and then plug it back in.Check the outlet by plugging in another device.
No sound	<ul style="list-style-type: none">Adjust volume setting.Make sure you've selected the correct function: CD/VCD, TAPE, or RADIO.
Poor radio reception	<ul style="list-style-type: none">Adjust the FM/SW rod antenna for better FM/SW reception.Adjust the FINE TUNE knob for SW reception.Rotate the unit to achieve better MW reception.Try turning off electrical appliances near the unit, such as hair dryers, vacuum cleaners, or fluorescent lights.
CD doesn't play	<ul style="list-style-type: none">Make sure the tray contains a CD.Make sure the CD's label is facing up.Make sure that Pause mode is not activated.Make sure CD function is selected.
CD sound skips	<ul style="list-style-type: none">Clean the CD (as explained in "Care and Maintenance").Check CD for warping, scratches, or other damage.Check for vibration or shock that may affect the unit; move system if necessary.
Distorted or noisy recordings	<ul style="list-style-type: none">Inspect the recording head and clean it if necessary.Demagnetize recording head (as explained in "Care and Maintenance").
No video or video image distorted on TV	<ul style="list-style-type: none">Audio/video cord is not connected to TV.Select the correct TV system.
Remote control does not work.	<ul style="list-style-type: none">Replace the batteries.

SPECIFICATIONS

Amplifier :	Output Power	1 W x 2 (at 10 % THD)
	Speaker Impedance	8 ohm (8.5 cm x 2)
CD :	Phones	15 mW/ch output into 32 ohms
	Sampling Frequency	44.1 kHz
	D/A Converter	1 bit linear
	Frequency Response	100 Hz - 20 kHz
	Dynamic Range	70 dB (min)
	Harmonic Distortion	1.5 % (max)
	Channel Separation	40 dB (min)
	Signal-to-Noise ratio	50 dB (min)
	Number of programmable tracks	20 (audio CD/VCD), 99 (MP3 CD)
	Radio :	MPEG 1
MPEG 1 layer 3 (MP3-CD)		MPEG AUDIO
MP3-CD bit rate		32 - 256 kbps
Tuning Range		FM 88 MHz - 108 MHz, MW 530 kHz - 1600 kHz, SW 6 MHz-17 MHz
Cassette :	Antenna	FM/SW Rod Antenna, MW Ferrite Bar Antenna
	Tape Speed	4.75 cm/sec
	Wow & Flutter	0.35 % WTD
	Recording System	AC Bias
	Erase System	Magnetic Erase
General :	S/N	35 dB (min)
	Track System	4 track, 2 channel, stereo
	Frequency Range (Normal)	125 Hz - 6300 Hz
	Power Supply	110V-127V/220V-230V, 50 Hz/60 Hz DC 9 V, R20/D (13F) or equivalent size battery x 6 15 W (power on), 3W (Standby) 403(W) x 169(H) x 237(D) mm 3.3 kg (without batteries)
Power Consumption		
Unit Dimension		
Mass		

JVC
VICTOR COMPANY OF JAPAN LIMITED



Printed in China
0902HMOCREORI

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>