



# JVC

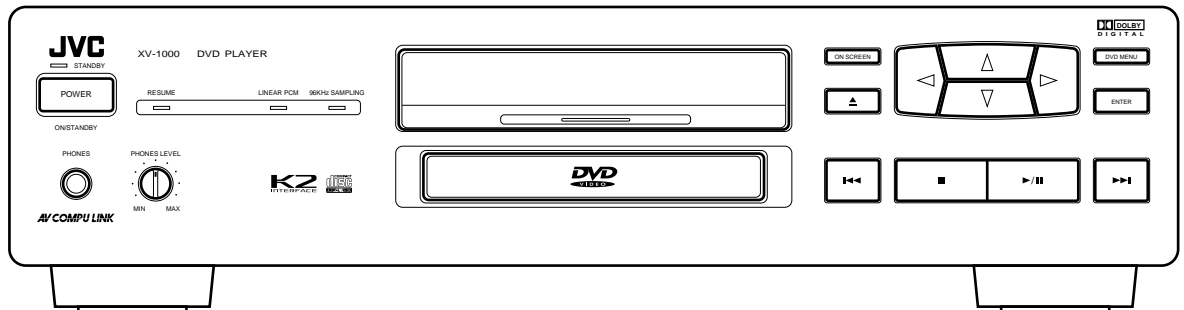

## DVD PLAYER

# XV-1000BK

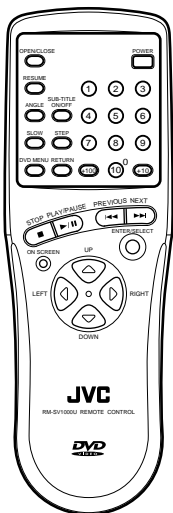

Video CD

PlayBack  
Control



## INSTRUCTIONS


### For Customer Use:

Enter below the Model No. and Serial No. which are located on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Warnings, Cautions and Others

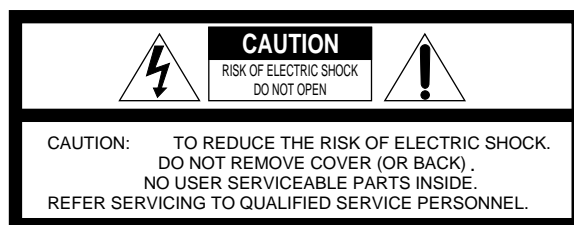

The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that could cause electric shock.



The exclamation mark within an equilateral triangle alerts the user to important operating and maintenance (servicing) instructions in the manual for the appliance.

### For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### Caution — POWER switch!

Disconnect the mains plug to shut the power off completely. The POWER switch in any position does not disconnect the mains line. The power can be remote controlled.

### IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or bypassed. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the player; leave all servicing to qualified service personnel.

### CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

# Table of Contents

<b>General Information .....</b>	<b>2</b>	<b>Video CD Operations .....</b>	<b>37</b>
Important cautions .....	2	Playing back a track .....	37
Safety precautions .....	2	Advancing a picture frame-by-frame .....	37
<b>Introduction .....</b>	<b>3</b>	Playing in slow-motion .....	37
Introducing the XV-1000BK .....	3	Resuming playback .....	38
Controls and functions .....	4	Playing back in a desired order .....	38
Supplied accessories .....	8	Repeating all tracks .....	39
<b>Before Using for the First Time .....</b>	<b>9</b>	Repeating a single track .....	40
Before making any connections .....	9	Repeating a part .....	40
Basic connections .....	9	Starting playback from a specified time .....	41
Connecting via DIGITAL OUT .....	11	Playing back only the beginning of each track .....	42
Connecting the power cord .....	13	Playing back tracks in random order .....	42
Installing batteries in the remote control unit .....	13	Selecting audio channels .....	43
<b>Preliminary Knowledge .....</b>	<b>15</b>	Selecting picture character .....	43
Playable discs by XV-1000BK .....	15	Checking total disc time .....	44
What are title, chapter and track? .....	15	Accessing the PBC function .....	44
How to use numeric keys .....	16	<b>Selecting Preferences .....</b>	<b>46</b>
On-screen guide and invalid operation icons .....	17	Preferences via "PREFERENCE" on-screen display .....	46
On-screen displays .....	17	Setting Parental Lock .....	49
Screen saver function .....	18	<b>Other Information .....</b>	<b>52</b>
<b>Basic Operations .....</b>	<b>19</b>	Care and handling of discs .....	52
Playing back .....	19	Table of languages and their abbreviations .....	53
Selecting an item from a menu .....	20	AV COMPULINK remote control system .....	54
<b>DVD Video Operations .....</b>	<b>21</b>	Troubleshooting .....	56
Displaying DVD menus .....	21	Specifications .....	57
Locating a title .....	22		
Selecting a chapter .....	22		
Starting playback from a specific time .....	23		
Advancing a picture frame-by-frame .....	23		
Playing in slow-motion .....	24		
Resuming playback .....	24		
Repeating a title .....	24		
Repeating a chapter .....	25		
Repeating a part .....	26		
Changing the angle .....	27		
Subtitle on/off .....	27		
Changing the subtitle language .....	27		
Changing the audio .....	28		
Selecting picture character .....	29		
<b>Audio CD Operations .....</b>	<b>30</b>		
Playing back a track .....	30		
Resuming playback .....	30		
Playing back in a desired order .....	31		
Repeating all tracks .....	31		
Repeating a single track .....	32		
Repeating a part .....	33		
Starting playback from a specified time .....	33		
Playing back only the beginning of each track .....	34		
Playing back tracks in random order .....	35		
Selecting the displayed time mode .....	35		

# General Information

## Important cautions

### Installation of the player

- Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C or 41°F-95°F).
- Leave sufficient distance between the player and a TV.
- Do not use the player in a place subject to vibrations.

### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power (6 watts) is always consumed while the power cord is connected to the wall outlet.
- When unplugging the player from the wall outlet, always pull the plug, not the power cord.

### Malfunctions, etc.

- There are no user serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the player.

## Safety precautions

### Avoid moisture, water and dust

Do not place your player in moist or dusty places.

### Avoid high temperatures

Do not expose your player to direct sunlight or place it near a heating device.

### When you're away

When away on travel or otherwise for an extended period of time, pull the plug from the outlet.

### Do not insert foreign objects into the player

Do not insert wires, hairpins, coins, etc. into your player.

### Do not block the vents

Blocking the vents may damage your player.

### Care of the cabinet

When cleaning your player, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

### If water gets inside the player

Turn off the power switch and pull the plug from the electrical socket, then call the store where you made your purchase. Using the player in this state may cause a fire or electrical shock.

# Introduction

## Introducing the XV-1000BK

DVD is the most innovative creation of audio and video technology. With the same physical size as the CD, DVD has much more storage capacity and can play back the finest images and sound. It also realizes revolutionary features such as multi-language capability, multi-angle function, etc.

The XV-1000BK DVD player delivers the outstanding performance of DVD, thanks to JVC's advanced technology and sophisticated graphical user navigation system. The XV-1000BK can also play back CDs and video CDs.

### High quality video images

- Amazing color purity and sharpness with extremely low video distortion.
- Greater horizontal resolution than S-VHS or Laser disc.

### High quality sound

- The newly developed K2 interface LSI delivers pure sound with no digital distortion.
- 1-bit DD converter that handles 20-bit, 96-kHz Fs audio signals and JVC's original PEM (Pulse Edge Modulation) circuit achieve more than double the resolution of conventional converters.
- By separating and isolating the power supplies for the analog and digital circuitry, the interference which causes digital noise to enter the analog system is eliminated.
- Separation of the circuits, PLL clock generators and power supplies for the audio unit and video unit improve sound quality.


### Support for various DVD functions

**Note:** Each function below is available only if the DVD disc to be played back supports it.

- **Multi-language function**  
Multi-language function for audio and subtitles. You can choose any combinations of audio and subtitle languages, such as English audio with subtitles, or audio with no subtitles.
- **Multi-angle function**  
You can select from multiple camera angles of the same scene.
- **Parental lock**  
You can restrict the playback of discs with scenes which you do not wish your child to see, such as adult or violent films.
- **Multi aspects**  
Images can be viewed normally on a 4:3 (normal) television from a disc made for 16:9-screen (wide) televisions.
- **AC-3 bitstream output**  
XV-1000BK have facility for output of AC-3 bitstream signal.

## Controls and functions

### ■ Front panel

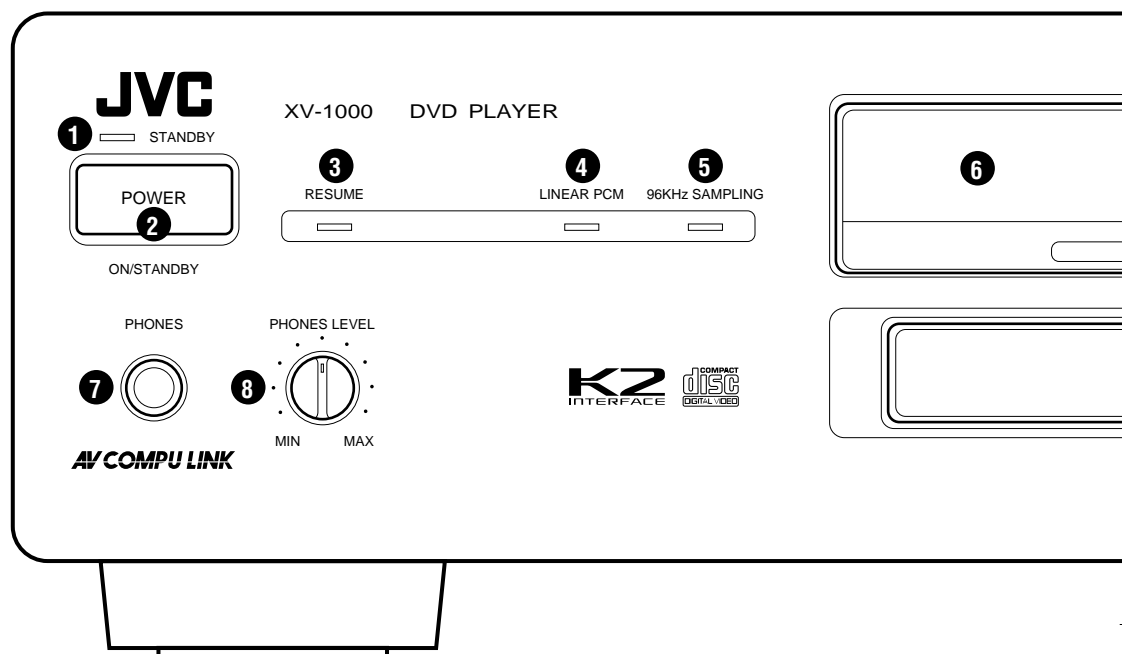

#### ❶ STANDBY indicator

Lights when the power cord is connected and the XV-1000BK is at standby. When the XV-1000BK turns on, the STANDBY indicator goes off.

#### ❷ POWER

Switches the power on and the player to standby.

#### ❸ RESUME indicator

Lights when a point to be resumed is stored.

#### ❹ LINEAR PCM indicator

Lights when linear PCM audio is played back by DVD or CD.

#### ❺ 96kHz SAMPLING indicator

Lights when the sampling frequency of linear PCM audio played back by DVD is 96kHz.

#### ❻ Remote sensor

#### ❼ PHONES

Connection terminal for headphones.

#### ❽ PHONES LEVEL

Adjusts the listening level of headphones connected to the PHONES jack.

#### ❾ Display


Indicates the current status of the XV-1000BK.

#### ❿ DVD indicator

Lights when a DVD disc is inserted. It blinks just after a disc is inserted.

#### ⓫ Disc tray

Used to load discs.

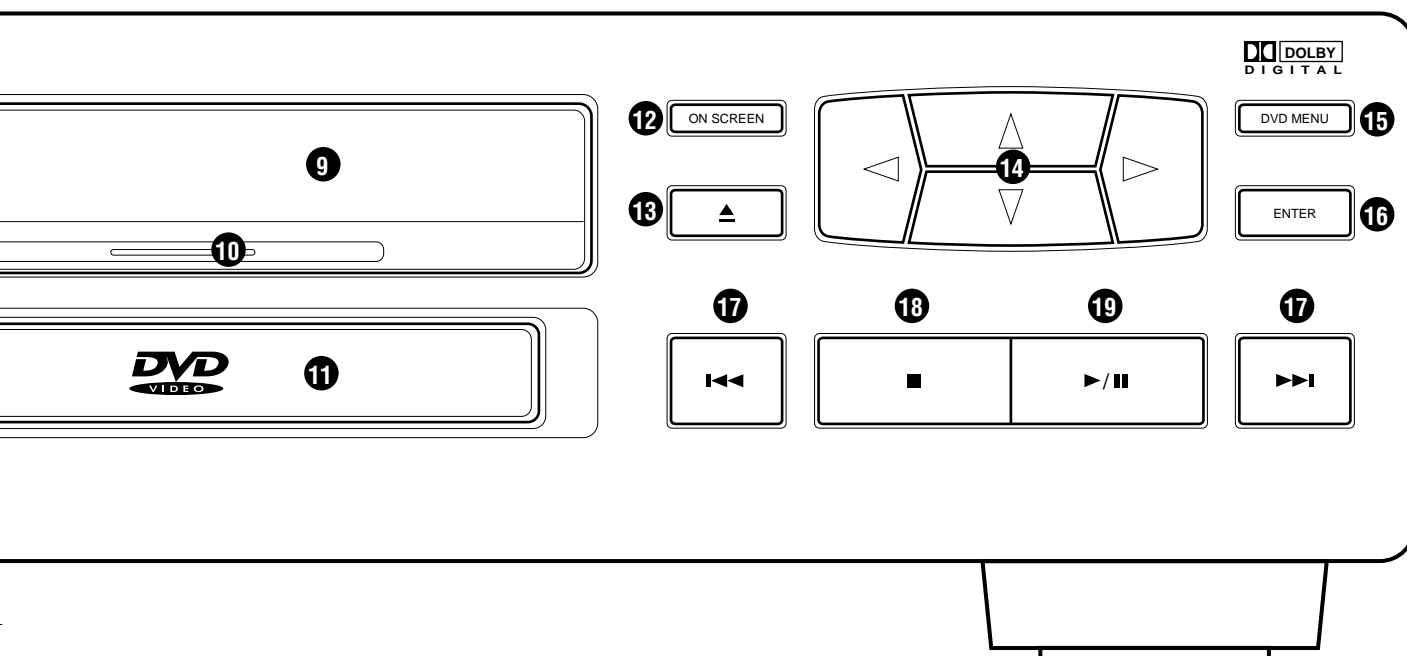**12 ON SCREEN**

Displays an on-screen display of the XV-1000BK on the television screen or monitor. (See "On-screen displays" on page 17.)

**13 ▲ (Open/Close)**

Opens and closes the disc tray.

**14 ▲/▼/▶/◀ (Cursor buttons)**

Selects an item in on-screen displays or DVD menus.

**15 DVD MENU**

Displays a DVD menu on the television screen or monitor.

**16 ENTER**

Executes a selected item in a DVD menu or on-screen display.

**17 ◀◀, ▶▶ (Skip/Search)**

Performs skip, fast forward/backward, or previous/next.

**18 ■ (STOP)**


Stops playback.

**19 ▶/|| (Play/Pause)**

Starts playback. Also, pauses playback.

# Introduction

## ■ Remote control unit

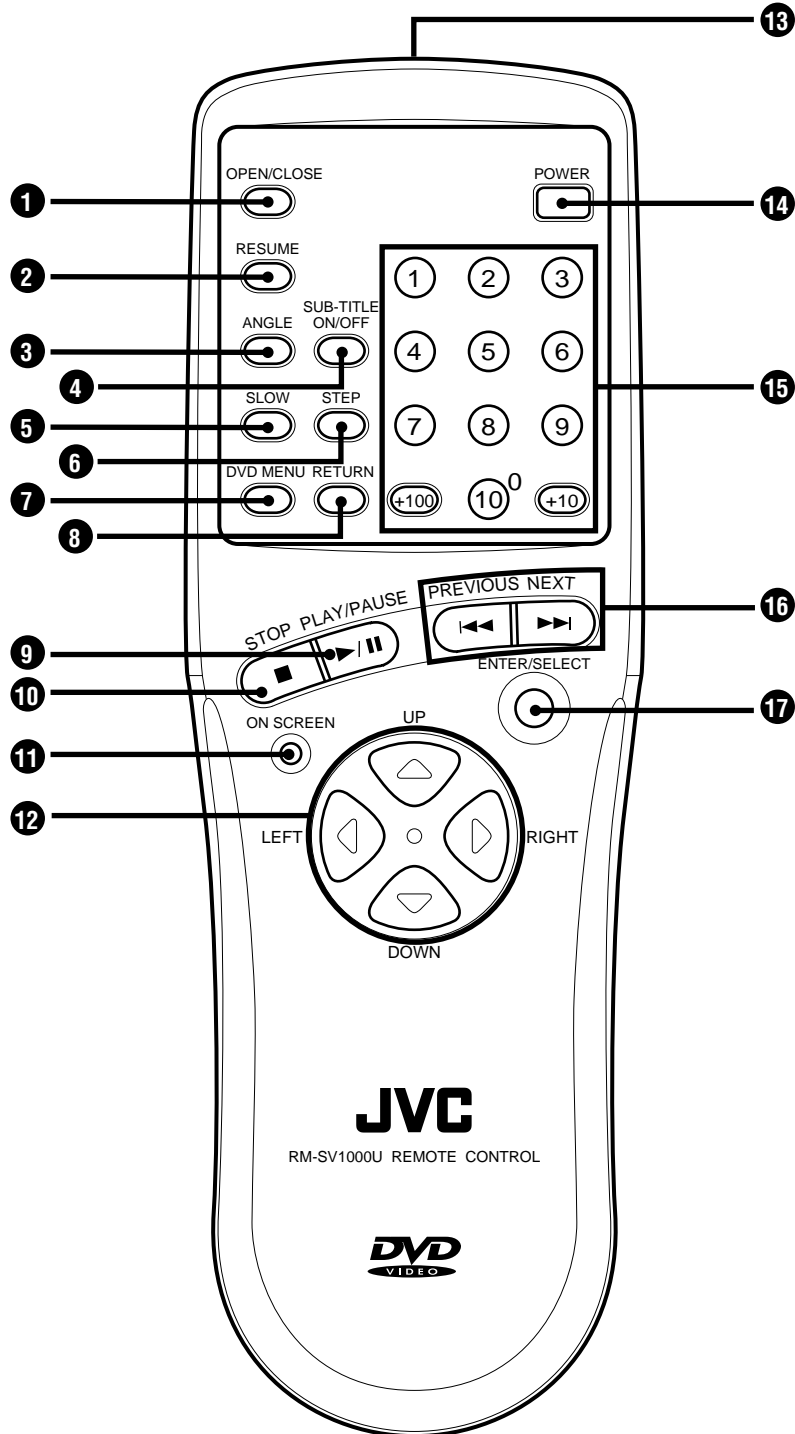



**1 OPEN/CLOSE**

Opens and closes the disc tray.

**2 RESUME**

Stores the location to be resumed later.  
(See "Resuming Playback" on pages 24, 30 and 38.)

**3 ANGLE (for DVD)**

Changes camera angles during playback of a DVD shooting by multiple cameras.  
(See "Changing the Angle" on page 27.)

**4 SUB-TITLE ON/OFF (for DVD)**

Turns on or off subtitles.  
(See "Subtitle on/off" on page 27.)

**5 SLOW (for DVD/video CD)**

Starts slowmotion playback.  
(See "Playing in slow-motion" on pages 24 and 37.)

**6 STEP (for DVD/video CD)**

Advances pictures frame by frame.  
(See "Advancing a picture frame-by-frame" on pages 23 and 37.)

**7 DVD MENU**

Displays a DVD menu on the television screen or monitor.  
(See "Displaying DVD menus" on page 21.)

**8 RETURN (for DVD/video CD)**

Returns to the previous menu.

**9 ► PLAY/⏸ PAUSE**

Starts playback. Also, pauses during playback.

**10 ■ STOP**

Stops playback.

**11 ON SCREEN**

Displays an on-screen display of the XV-1000BK on the television screen or monitor.  
(See "On-screen displays" on page 17.)

**12 △/▽/▷/◁ (Cursor buttons)**

Selects an item in on-screen displays or DVD menus.

**13 Infrared light-emitting window**

Point this window toward the remote sensor on the front panel when pressing buttons.

**14 POWER**

Switches the power on and the player to standby.

**15 Numeric keys**

Inputs title/track/chapter numbers and disc time.  
(See "How to use numeric keys" on page 16.)

**16 ⏮, ⏭ (Skip/Search)**


Performs skip, fast forward/backward, or previous/next.

**17 ENTER/SELECT**

Executes a selected item in a menu or on-screen display.

# Introduction

## ■ Rear panel

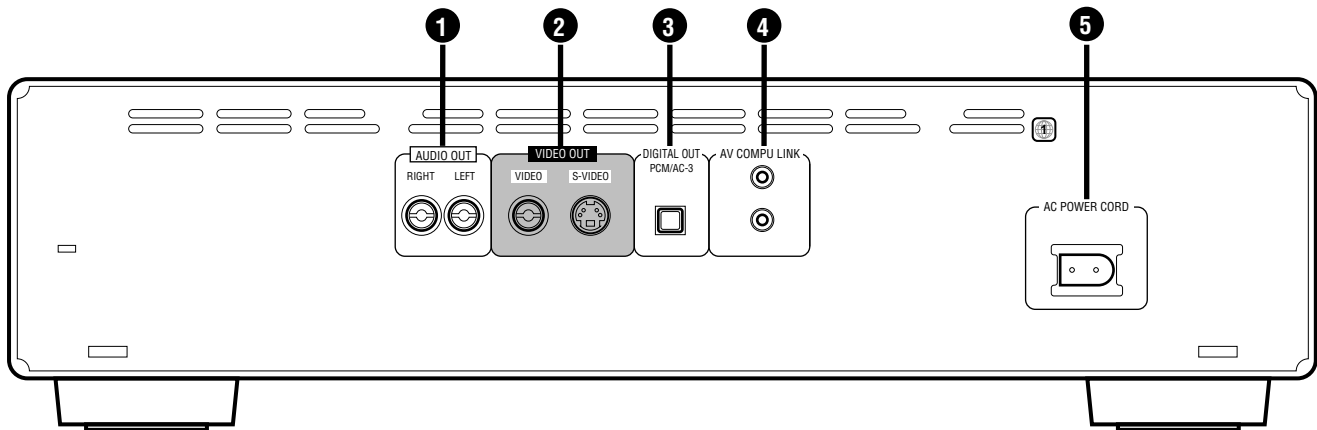

### ❶ AUDIO OUT

Outputs stereo analog audio signals.

### ❷ VIDEO OUT

VIDEO outputs composite video signals, while S-VIDEO outputs S-video signals.

### ❸ DIGITAL OUT

Outputs digital audio signals.

 
### ❹ AV COMPU LINK

Connects with another JVC equipment supporting the AV Compulink to facilitate operations. (See "AV COMPULINK Remote Control System" on page 54.)


### ❺ AC POWER CORD

Connects to the wall outlet.


## Supplied accessories




Audio/video cable (x 1)

 


S-video cable (x 1)

 

Power cord (x 1)

 

R03 (UM-4)/AAA (24F) batteries (x 2) for RM-SV1000U

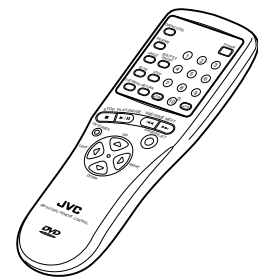

RM-SV1000U Remote Control Unit (x 1)



AV compulink cord (x 1)

# Before Using for the First Time

## Before making any connections

- Since different components often have different terminal names, carefully read the instruction manual supplied with the component you wish to connect.
- Do not connect the AC power cord until all other connections have been made.

## Basic connections

### ■ Connecting the XV-1000BK to a TV

You can enjoy the XV-1000BK by simply connecting it with a television set. To hear audio sound with better quality, connect the audio outputs with your audio equipment. (See the next page.)


**Note:** Be sure not to plug in the power cord until all other connections have been made.

The XV-1000BK can be connected directly to a television set equipped with stereo audio input and video input jacks using the supplied audio/video cables.


If your television set has a monaural audio input instead of stereo, you need to use an optional audio cable which converts stereo audio output to monaural.

If your television set has an S-video input, we recommend you to connect it with S-VIDEO of the XV-1000BK using the supplied S-video cable, in addition to the (standard) video connection, to get a better picture quality.

Connect VIDEO OUT of the XV-1000BK with the video input of a television set. Connecting VIDEO OUT of the XV-1000BK to a VCR may cause a monitor problem when playing back a copy-protected disc.

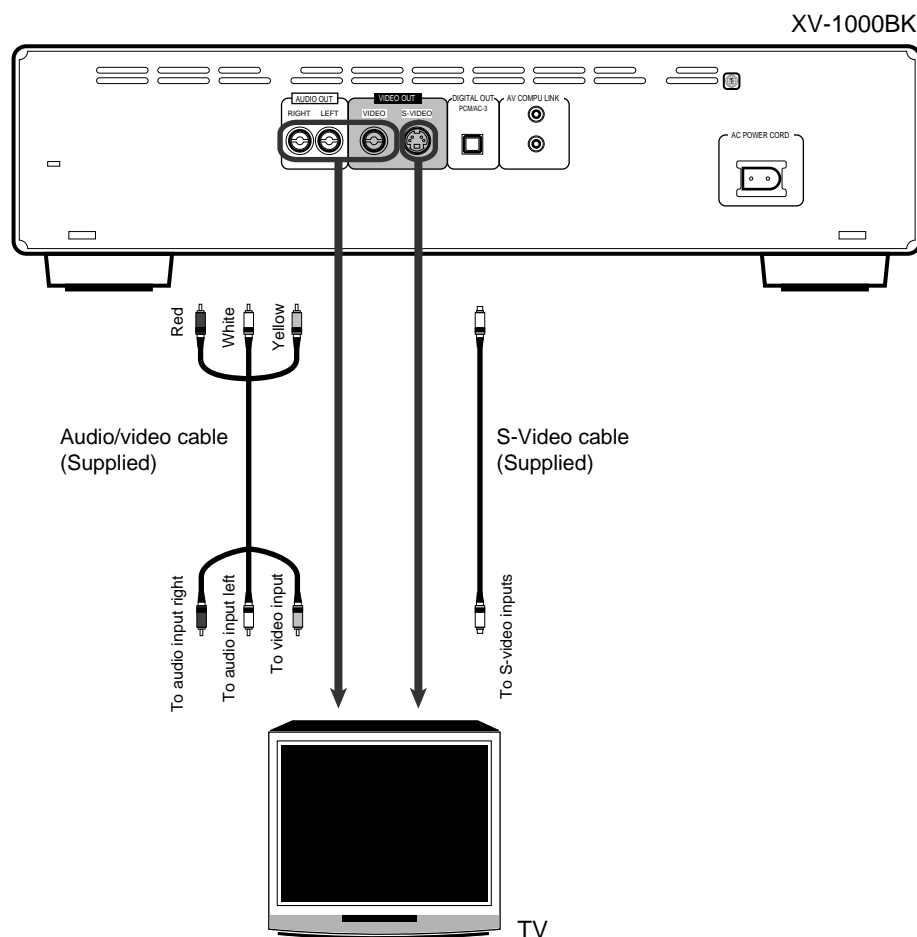

# Before Using for the First Time

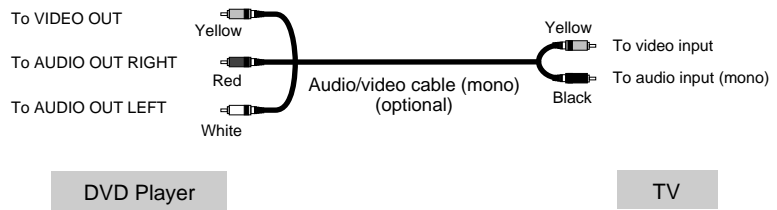


## ■ Connecting with an audio amplifier or receiver

You can enjoy high-quality audio by connecting the XV-1000BK's audio outputs to your amplifier or receiver.

**Note:** Be sure not to plug in the power cord until all other connections have been made.

Connect the XV-1000BK's AUDIO OUT to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier or receiver.

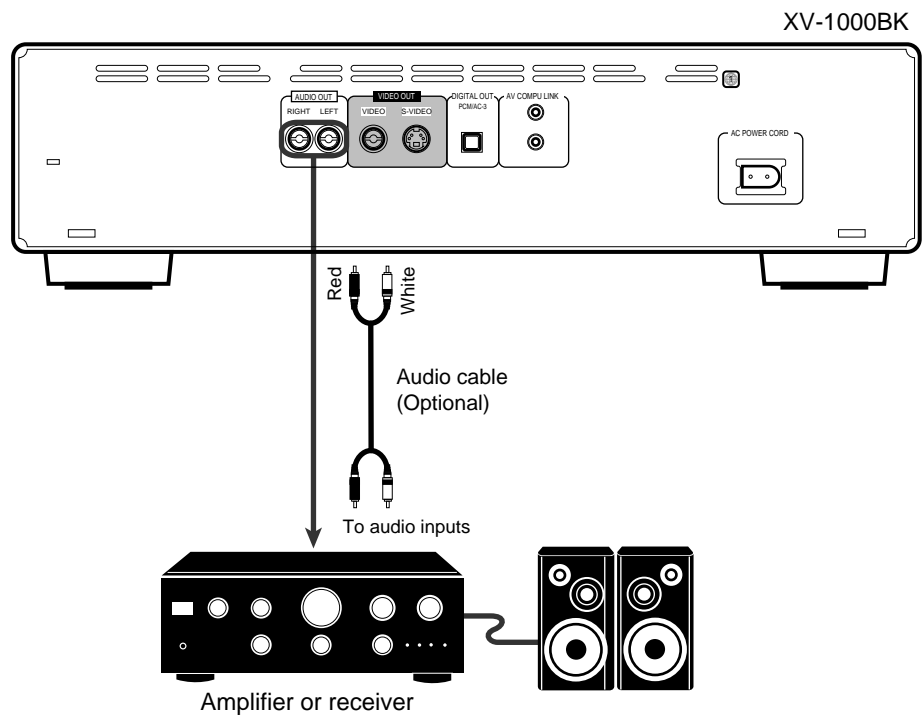


## Connecting via DIGITAL OUT


To build an audio system that supports Dolby Digital (AC-3), or to use an other DA converter or to copy audio digitally to a DAT or MD, DIGITAL OUT can be used.

### ■ Connecting with a Dolby digital (AC-3) decoder


By connecting the XV-1000BK with an AC-3 decoder or an amplifier with a built-in AC-3 decoder, you can enjoy full audio sound from a DVD disc encoded with Dolby Digital (AC-3).

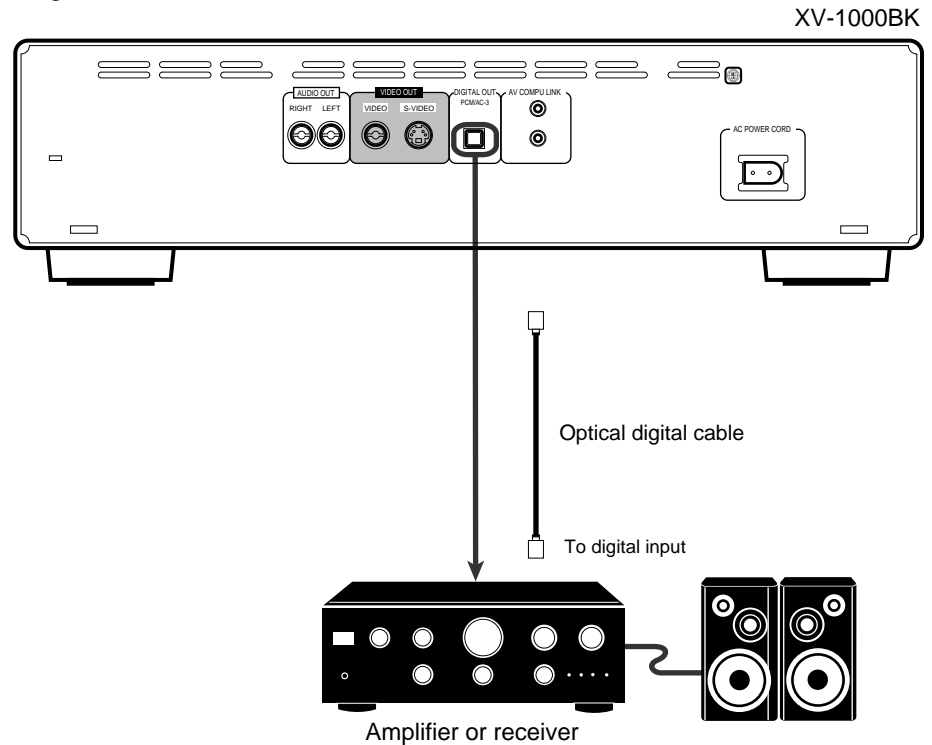

Connect the XV-1000BK's DIGITAL OUT with the AC-3 digital input of an AC-3 decoder or an amplifier with a built-in AC-3 decoder using an optional digital cable.

A disc encoded with Dolby Digital (AC-3) indicates the symbol .


**Note:** Before actual usage, set "DIGITAL AUDIO OUTPUT" in the "PREFERENCE" display to "PCM/AC-3." See "Preference via "PREFERENCE" on-screen display" on pages 46, 47 and 48.

\* Manufactured under license from Dolby Laboratories Licensing Corporation. DOLBY, the double-D symbol  and "AC-3" are trademarks of Dolby Laboratories Licensing Corporation.

## Before Using for the First Time

### ■ Connecting with an audio equipment with PCM digital optical input

By connecting the XV-1000BK's DIGITAL OUT with the digital optical input of an amplifier, DAT or MD using a digital cable, the digital stereo audio signal in a disc is directly transferred.

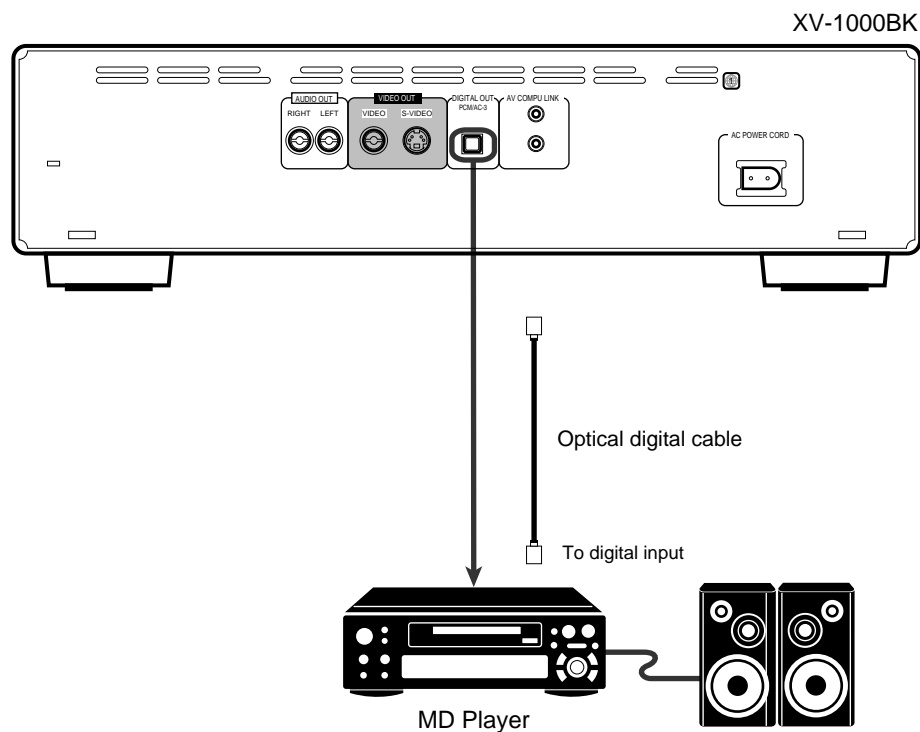

**Note:** Before actual usage, set "DIGITAL AUDIO OUTPUT" in the "PREFERENCE" display to "PCM ONLY," otherwise, playing back a Dolby AC-3 encoded DVD may generate noise and, in the worse case, damage your speakers. See "Preference via "PREFERENCE" on-screen display" on pages 46, 47 and 48.

### Supplying the AC power

Only when all the connections have been made, insert the power plug into the wall outlet. The STANDBY indicator lights and the setup is complete.

## Connecting the power cord

Connect the power cord after all the connections have been made. Be sure to insert the power cord firmly.

### Warning

- Disconnect the power cord if you are not going to use the player for a long time.
- Disconnect the power cord before cleaning the player.
- Unplug and remove the power cord from the player and the wall outlet before moving it.
- Do not connect or disconnect the power cord with wet hands.
- Do not pull the power cord when disconnecting it, as this may damage the cord and cause fire, electric shock, or other accidents.


### Caution

- Do not damage, remodel, twist, or pull the power cord, as this may cause fire, electric shock, or other accidents.
- Contact a dealer and get a new power cord if the cord is damaged. A damaged cord may cause fire, electric shock, or other accidents.
- Do not put anything heavy or this player on the power cord, as this may cause fire, electric shock, or other accidents.


## Installing batteries in the remote control unit

The battery compartment is located on the back of the remote control unit.


1. Press down on the triangular mark of the compartment cover, and slide the cover off to open the compartment.

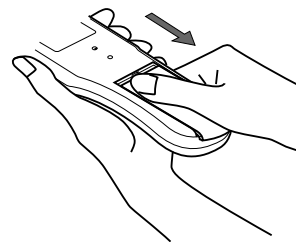

2. Place the two accessory R03 (UM-4)/AAA (24F) batteries in the remote control according to the polarity markings ("+" and "-") inside the compartment and on the batteries.

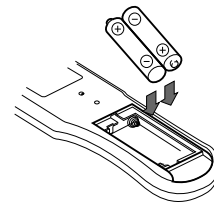

3. Place the cover over the compartment, press down lightly, and push it upward until it snaps on.

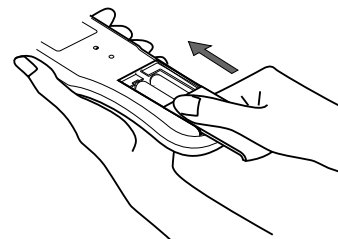

## Before Using for the First Time

The batteries will last about one year with normal use. If the functions of the remote control become erratic, replace the batteries. See "Precautions for the safe use of batteries" below for more information.

### **Precautions for the safe use of batteries**

Observe the following precautions for the safe use of batteries. If they are used improperly, their life will be shortened, they may burst or their contents may leak.

- Remove the batteries from the remote control if it is not going to be used for a long period of time.
- Remove dead batteries and dispose of them properly.
- Never leave dead batteries lying around, take them apart, mix them with other refuse, or throw them into an incinerator.
- Never touch liquid that has leaked out of a battery.
- Do not mix new and old batteries, or batteries of different types, when replacing them.



# Preliminary Knowledge

## Playable discs by XV-1000BK

The XV-1000BK can play back DVD video, video CD and audio CD discs.



- DVD players and DVD discs have their own numbers describing the region(s) where they can be played by retail areas. These numbers are called "Region Codes." The Region Code for this unit is "1", so any discs whose Region Codes is not "1" cannot be played.


Examples of playable DVD discs




- This unit is designed to use the NTSC system.
- Any other discs than listed above (CD-ROM, Photo CD, etc.) cannot be played. Playing back such discs may generate noise and damage speakers.
- Sound of CD-G discs are playable but pictures are unplayable.
- Do not play back CD-R discs. Playing back a CD-R disc may damage the contents of the disc.

## What are title, chapter and track?

A DVD disc comprises "titles," while an audio CD or video CD comprises "tracks." Each title may be divided into some "chapters." For example, if a disc contains some movies, each movie may have its own title number, and each movie may be divided into some chapters. In a karaoke disc, each song usually has its own title number and does not have chapters. In general, each title has an independent content, while each chapter in the same title has continuity.

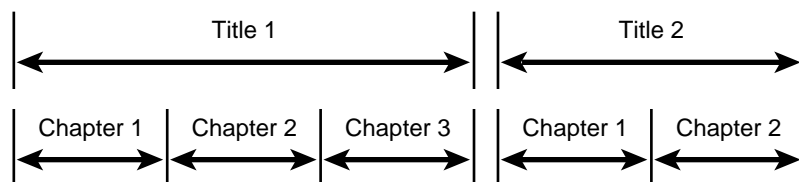


*For a DVD*

 

*For an audio CD*

## How to use numeric keys

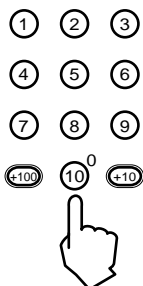

### ■ To select a track or title number directly using numeric keys

- **To select a number between 1 and 10 ...**  
Press the corresponding key(s) for the number.
- **To select a number higher than 10 ...**  
Use the +10 or/and +100.

Example 1: To select 13

+10 → 3

Example 2: To select 35

+10 → +10 → +10 → 5

Example 3: To select 40

+10 → +10 → +10 → 10

Example 4: To select 123

+100 → +10 → +10 → 3

### ■ To enter a specific time or chapter number via on-screen displays

Press the corresponding numeric keys for a desired time or number from left to right digits, then ENTER/SELECT.

To enter a zero, use the "10" button.

Example 1: To enter 10:52

1 → 10 → 5 → 2 → ENTER/SELECT

Example 2: To enter chapter number 14

1 → 4 → ENTER/SELECT

- If you enter a wrong number, enter zeros until the wrong number disappears, then reenter the correct numbers.

## On-screen guide and invalid operation icons

### ■ On-screen icons

During DVD playback, you may see icons displayed over the picture. These have the following meanings.



: Displayed at the beginning of a scene recorded from multiple angles. (See "Changing the angle" on page 27.)





: Displayed at the beginning of a scene recorded with multiple audio languages. (See "Changing the audio" on page 28.)



: Displayed at the beginning of a scene recorded with multiple subtitles. (See "Changing the subtitle language" on page 27.)

You can set not to display on-screen icons above via the preference settings described on pages 46, 47 and 48.

### ■ Invalid operation icon

When you press a button, if the XV-1000BK does not accept its operation,  appears on your television screen. Operations are occasionally unacceptable even if  is not displayed.

Note that some operation may not be accepted. For example, some discs may not allow fast forward, fast backward or slow-motion playback.

## On-screen displays

The XV-1000BK provides several On-Screen Displays shown below for choosing preferences for initial settings and functions which are not frequently used in most cases.



Opening display



DVD during playback



For preferences



CD (For CD during playback or stop and for video CD during stop)



For video CD (during playback)





For DVD parental lock settings






## Preliminary Knowledge

To access on-screen displays, press ON SCREEN (except for Parental lock). Depending on the type of disc inserted (or "no disc") and the XV-1000BK's mode, a proper on-screen display is accessed.


See "Setting Parental Lock" on pages 49, 50 and 51.

 appears at the on-screen display. You can move  using  $\Delta/\nabla/\triangleright/\triangleleft$ . You can select preferences you want to change and functions you want to be worked with this on an item.

Basic operations at the on-screen display are as follows.

- In the message box like  , change the setting by moving  with  $\triangleleft/\triangleright$  buttons.
-  - type item works when you place  on the item and press ENTER/SELECT.
- In the message box,  points to the operation to be done.
- Numbers are entered using numeric keys.
- Some functions become effective by pressing the ENTER/SELECT button after specifying necessary entries.
- Press on-screen button to disappear on-screen displays except Parental Lock on-screen display.


In the displays for playback mode of DVD and video CD, the following information is displayed under the image screen.

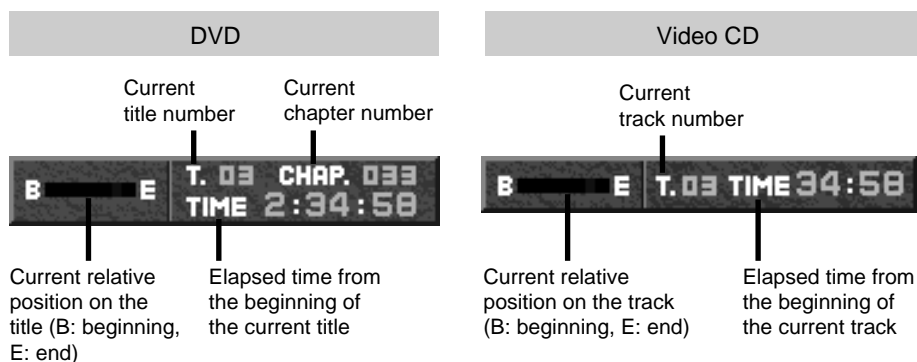

Refer to the corresponding paragraphs for detailed information.

## Screen saver function

A television monitor screen may be burned out if a static picture is displayed for a long time. To prevent this, the XV-1000BK automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for 5 minutes.

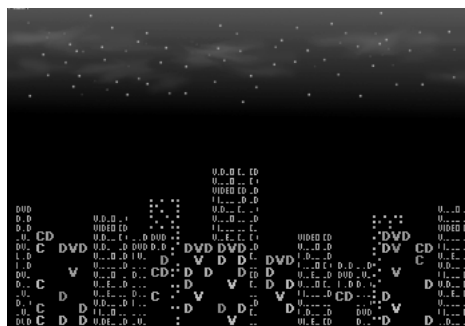

Pressing any button of the XV-1000BK or the remote control unit will release the screen saver function and go back to the previous display.

# Basic Operations


This chapter explains the basic playback common for DVD, audio CD and video CD. The illustrations in the left column here show the buttons of the remote control unit to be operated, however, you may use the corresponding buttons on the front panel of the XV-1000BK.

## Playing back


OPEN/CLOSE



1. Press OPEN/CLOSE to open the disc tray.
2. Place the disc in the tray with the label side up.

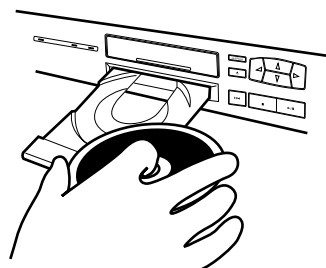

**Notes:** When loading a disc in the tray, be sure to position the disc inside the recess. Otherwise, the disc may be damaged when the tray is closed, and the disc may not be removed from the player.

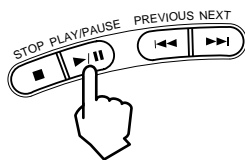

3. Press ►/|| to close the tray.

The XV-1000 starts playback from the beginning of the disc.

### If a menu button appears:

Refer to "Selecting from menu items" on the next page.

### To stop playback:

Press ■.

### To pause playback:

Press ►/||. Pressing it again resumes playback.

### To move fast forward or fast backward:

Hold down ◀◀ or ▶▶. Releasing the button returns the XV-1000BK to the normal playback mode.

\*Both fast forward and fast backward move slowly for a while and then quickly thereafter.

\*During fast forward or fast backward with a DVD disc or video CD, no audio is output.

Some functions like fast forward or fast backward are disabled because of the recording method of DVD discs. In this case, the functions do not work even if the operations are done.


### Selecting an item from a menu

With some DVD and video CD discs, a menu may appear during playback.



Example of menu

To select an item in the menu:

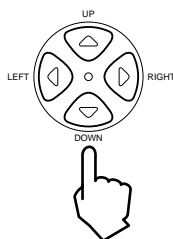

1. Select a desired item using  $\Delta/\nabla/\triangleright/\triangleleft$ , then press ENTER/SELECT.  
The XV-1000BK starts playback of the selected item.

With some discs, you can select the item by entering the corresponding number using the numeric keys, causing the XV-1000BK to automatically start playback. You cannot use  $\Delta/\nabla/\triangleright/\triangleleft$  with video CDs.

- \* If you can see "NEXT" or "PREVIOUS," or equivalents in the menu, pressing  $\blacktriangleleft$  or  $\blacktriangleright$  usually turns the menu pages.
- \* Pressing "RETURN" returns to the previous menu.

The operation procedure may be different depending on discs. Read the manual for the discs and follow the procedure indicated in the menu.

# DVD Video Operations

This chapter explains all the functions of the XV-1000BK for playing back DVD discs. You can enjoy DVD in various ways, some of which only DVD can offer. Read "Basic Operations" on pages 19 and 20 before reading this chapter.

## Displaying DVD menus

Most DVD discs have their own menus for selecting an item (title or chapter) to be played. A menu may be displayed automatically after inserting a disc or manually during playback or stop.

### ■ Basic operation

1. Press DVD MENU.

The menu appears. The format and appearance of menus are different between discs. Also, a disc may contain more than one menu.

See "Selecting an item from a menu" on page 20 for details of operations in a menu.

#### If appears when pressing DVD MENU:

The disc does not contain any menu.

DVD MENU



### ■ To access a title menu


If a disc contains more than one menu, you can access the most basic menu (in most cases) via the on-screen menu.

1. Press ON SCREEN during playback.

ON SCREEN



2. Move  to "TITLE MENU" using  $\Delta/\nabla$ .

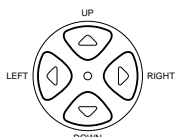

3. Press ENTER/SELECT.

A DVD title menu appears.

See "Selecting an item from a menu" on page 20 for details of operations in a menu.

#### If appears when pressing ENTER/SELECT:



The disc does not contain title menu.

ENTER/SELECT



## Locating a title

You can locate a title you want to see by selecting a title number.

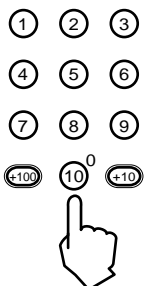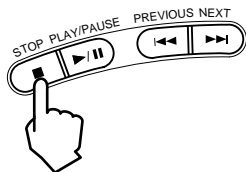


1. Press **■** to stop the disc.
2. Press the corresponding numeric keys for a desired title.  
The XV-1000BK starts playback of the title.

If appears when pressing numeric key(s):  
The disc does not contain the corresponding title.



## Selecting a chapter

You can specify a chapter to be played back using the on-screen display.

ON SCREEN

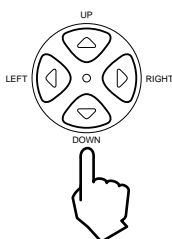

1. Press ON SCREEN during playback.  
The on-screen display appears.
2. Move to "CHAP. SEARCH" using the  $\Delta/\nabla$ .  
The message box indicates "GO TO CHAPTER: ".

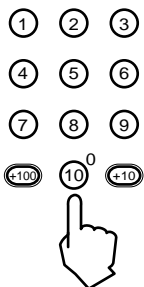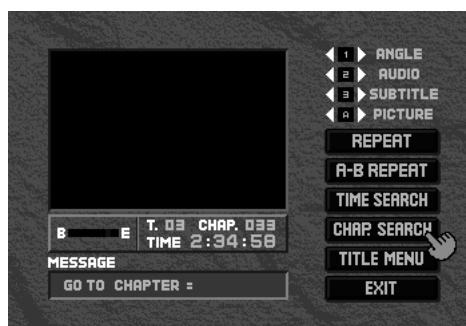

3. Enter a desired chapter number using the numeric keys.  
See page 16 for details about how to use the numeric keys.

ENTER/SELECT



4. Press ENTER/SELECT.  
The XV-1000BK starts playback from the selected chapter.

If appears when pressing ENTER/SELECT:  
The disc does not contain chapters, or prohibits the chapter search function.

**To turn off the on-screen display:**  
Press ON SCREEN.




## Starting playback from a specific time


If a DVD disc has time information (such a disc indicates the time in the display on the front panel), you can specify the time to start playback.


ON SCREEN



1. Press ON SCREEN during playback.  
The on-screen display appears.

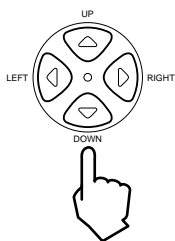

2. Move  to the "TIME SEARCH" using  $\Delta/\nabla$ .  
The message box indicates "GO TO : :".

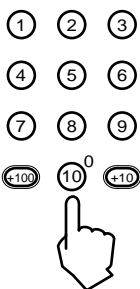

3. Enter a desired time using the numeric keys.  
See page 16 for details about how to use the numeric keys.

ENTER/SELECT



4. Press ENTER/SELECT.  
The XV-1000BK starts playback from the specified time.

**If  appears when pressing ENTER/SELECT:**

The disc does not contain time code, or prohibits the time search function.

**To turn off the on-screen display:**

Press ON SCREEN.

## Advancing a picture frame-by-frame

You can advance a still picture frame-by-frame.



1. Press STEP during playback.  
The XV-1000BK pauses.  
Each time you press STEP, the picture advances one frame.

Pressing  $\blacktriangleright/\parallel$  returns the XV-1000BK to normal playback.

- \* The audio is muted during frame-by-frame playback.
- \* You cannot backward a picture frame-by-frame.

## Playing in slow-motion



You can playback a disc in slow-motion.

1. Press SLOW during playback.  
The playback speed slows down to half the normal speed.

Thereafter, each press of SLOW slows the speed down to 1/3, 1/4, 1/8, 1/16 and 1/32 of the normal speed.

Pressing ►/■ returns the XV-1000BK to normal playback.

- \* Audio is muted during slow-motion playback.
- \* When the picture is being played back at 1/32 of the normal speed (which is the slowest) after pressing SLOW six times, the SLOW button is not effective.
- \* Pressing STEP in slow-motion mode freezes the motion.

## Resuming playback



The XV-1000BK can memorize a position on a disc you specify and resume playback from that position later.

### ■ Memorizing a position

1. Press RESUME during playback to memorize the current playback position.  
When memorized, the RESUME indicator on the front panel lights.

- \* Switching the power to STANDBY during playback clears the current memory.  
The STANDBY memory settings then become valid.

#### To clear the memory:

Take out the disc from the disc tray.

- \* The memory is not cleared by switching the power to STANDBY.
- \* The last memory overrides the previous memory.

### ■ Resuming playback

1. Press the RESUME button when the power is in the standby mode.

The player will locate the memory position and start playback.




## Repeating a title



You can repeat playback of the current title.


1. Press ON SCREEN during playback.  
The on-screen display appears.

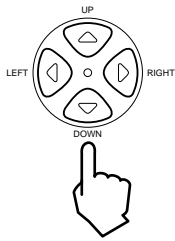

2. Move  to "REPEAT" using  $\Delta/\nabla$ .




3. Press ENTER/SELECT once.  
The message box indicates "TITLE REPEAT".  
The current title will be repeated.

**If  appears when pressing ENTER/SELECT:**  
You cannot repeat the title because of the disc contents.

### To turn off the on-screen display:

Press ON SCREEN.  
Pressing it again turns on the on-screen display again.

### To quit Title Repeat:


Move  to "REPEAT" in the on-screen display and press ENTER/SELECT twice. The REPEAT button returns to its original color.

## Repeating a chapter

You can repeat a current chapter.



1. Press ON SCREEN during playback.  
The on-screen display appears.

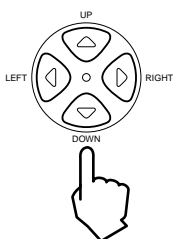

2. Move  to "REPEAT" using  $\Delta/\nabla$ .



# DVD Video Operations



3. Press ENTER/SELECT twice.  
The current chapter will be repeated.  
The message box indicates "CHAPTER REPEAT".

If appears when pressing ENTER/SELECT:  
You cannot repeat the chapter because of the disc contents.

### To turn off the on-screen display:

Press ON SCREEN.  
Pressing it again turns on the on-screen display again.

### To quit Chapter Repeat:


Move to "REPEAT" in the on-screen display and press ENTER/SELECT once. The REPEAT button returns to its original color.

## Repeating a part

You can repeat a part in the current title.



1. Press ON SCREEN during playback.  
The on-screen display appears.

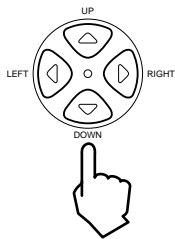

2. Move to "A-B REPEAT" using  $\Delta/\nabla$ .



3. At the beginning of the desired part (point A), press ENTER/SELECT.



4. At the end of the desired part (point B), press ENTER/SELECT.  
The XV-1000BK locates "A" and starts playback between "A" and "B" repeatedly.



### To quit A-B Repeat:

Move to "A-B REPEAT" in the on-screen display and press ENTER/SELECT.

If appears when pressing ENTER/SELECT:  
You cannot execute the A-B Repeat because of the disc contents.

### To turn off the on-screen display:

Press ON SCREEN.  
Pressing it again turns on the on-screen display again.

## Changing the angle



Some DVD discs may have “multi-angle” parts, in which multiple cameras were used to shoot the same scene from different angles. You can select one of these angles during playback.


1. Press ANGLE on the remote control unit.  
Each time you press the button, the angle changes in numerical order.  
The ANGLE function is effective only when the current playback scene is recorded from multiple angles.

Example: Selecting from three different angles

Initial setting: angle 1 → Press ANGLE once: angle 2 → Press it again: angle 3 → Press it again: angle 1

### If ~~⊗~~ appears when pressing ANGLE:

The current scene is not recorded from multiple angles.

- \* You can also select the angle via the “ANGLE” in the on-screen display.
  1. Press ON SCREEN during playback.
  2. Move  to “ANGLE” using  $\Delta/\nabla$ .
  3. Change the angle number using  $\triangleleft/\triangleright$ .

## Subtitle on/off



You can select whether or not subtitles are displayed.

1. Press SUBTITLE ON/OFF on the remote control unit.  
The ON/OFF status is switched.
- \* Subtitles cannot be displayed unless a DVD includes subtitles.
  - \* With some discs, subtitles are always displayed and SUBTITLE ON/OFF does not work.


## Changing the subtitle language




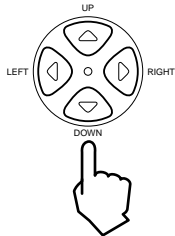
You can choose the subtitle language from among the languages included on a disc during playback.

1. Press ON SCREEN during playback.  
The on-screen display appears.

# DVD Video Operations

 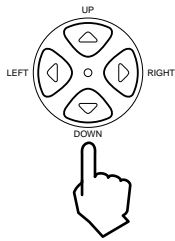


2. Move  to "SUBTITLE" using  $\Delta/\nabla$ .



3. Change the subtitle number using  $\triangleleft/\triangleright$ .  
The subtitle language changes in numerical order.

Example: Selecting from three subtitle languages




If you cannot change the number, the disc contains only one subtitle language or does not contain any subtitles.

## Changing the audio


You can change the audio language or sound during playback.



1. Press ON SCREEN during playback.  
The on-screen display appears.

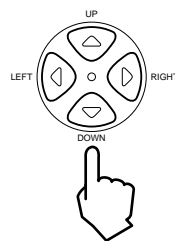


2. Move  to "AUDIO" using  $\Delta/\nabla$ .

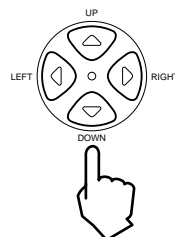

3. Change the audio number using  $\triangleleft/\triangleright$ .  
The audio changes in numerical order.

 Example: Selecting from three audio languages



If you cannot change the number, the disc contains only one audio channel.


## Selecting picture character

You can select from two picture characters; soft or sharp.

ON SCREEN



1. Press the ON SCREEN button during playback.  
The on-screen display appears.

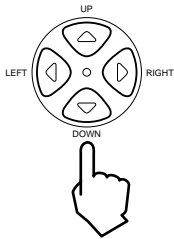


2. Move  to "PICTURE" using  $\Delta/\nabla$ .



3. Select A or B using  $\triangle/\triangleright$ .

A: sharp  
B: soft

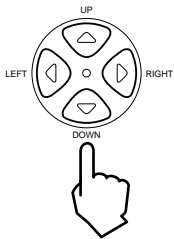


When a DVD disc is inserted, the default setting is "A".

# Audio CD Operations

This chapter explains all the functions of the XV-1000BK for playing back audio CDs. Read "Basic Operations" on pages 19 and 20 before reading this chapter.


## Playing back a track

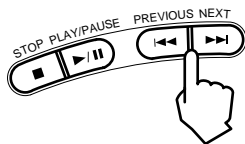

### ■ Using ◀◀ / ▶▶ buttons during playback

Pressing ▶▶ causes the XV-1000BK to jump to the next track and start playback. Therefore, press ▶▶ as many times as required to jump to the desired track and start playback.

Similarly, pressing ◀◀ causes the XV-1000BK to jump to the beginning of the current track and start playback. By pressing it again, the XV-1000BK jumps to the previous track and starts playback.

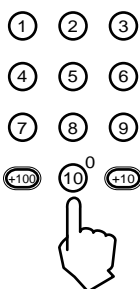

### ■ Using numeric keys

You can also use the numeric keys on the remote control unit to select a track number. The XV-1000BK automatically starts playback from the selected track regardless of the player's mode.

See page 16 for details about how to use the numeric keys.

## Resuming playback



The XV-1000BK can memorize a position on a disc you specify and resume playback from that position later.

### ■ Memorizing a position

1. Press RESUME during playback to memorize the current playback position. When memorized, the RESUME indicator on the front panel lights.

\* Switching the power to STANDBY during playback current memory. The STANDBY memory settings then become valid.

#### To clear the memory:

Take out the disc from the disc tray.

\* The memory is not cleared by switching the power to STANDBY.

\* The last memory overrides the previous memory.

### ■ Resuming playback

1. Press the RESUME button when the power is in the standby mode.




The player will locate the memory position and start playback.






## Playing back in a desired order

ON SCREEN

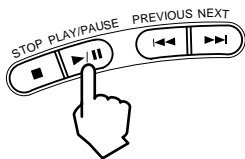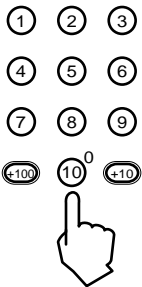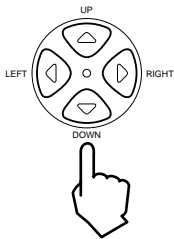

You can listen to the tracks on a CD in the order you want.

1. Press ON SCREEN while the disc is stopped.  
The on-screen display appears.


2. Move  to "PROGRAM" using  $\Delta/\nabla$  and press ENTER/SELECT.



3. Select the tracks in the desired order using the numeric keys.

- \* See page 16 for details about how to use the numeric keys. The entered numbers are displayed on the screen.
- \* Up to 16 tracks can be programmed. You may select the same track more than once.


### If you make a mistake:

Move  to CLEAR in the display using  $\Delta/\nabla/\triangleright/\triangleleft$  and press ENTER/SELECT.  
The last programmed track is deleted.

4. Press  $\blacktriangleright/\parallel$  to start the program playback.

- \* When all of the programmed tracks have finished playback, the XV-1000BK stops but the program remains.

### To quit the program mode:

Move  to PROGRAM in the display using  $\Delta/\nabla/\triangleright/\triangleleft$  and press ENTER/SELECT.  
The color of the PROGRAM button returns to its original color.


## Repeating all tracks

ON SCREEN



1. Press ON SCREEN during playback.  
The on-screen display appears.

# Audio CD Operations

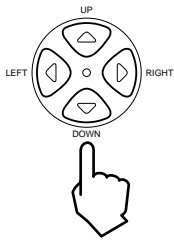


2. Move  to "REPEAT" using  $\Delta/\nabla$ .



3. Press ENTER/SELECT once.  
"REPEAT ALL" is displayed and all tracks are played back repeatedly.

### To quit All-track Repeat:

Move  to "REPEAT" in the on-screen display and press ENTER/SELECT twice. The REPEAT button returns to its original color.


---

## Repeating a single track

ON SCREEN



1. Press ON SCREEN during playback.  
The on-screen display appears.

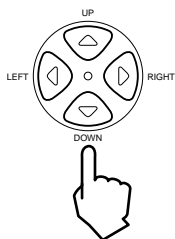

2. Move  to "REPEAT" using  $\Delta/\nabla$ .




ENTER/SELECT



3. Press ENTER/SELECT twice.  
"REPEAT1" is displayed and the current track is played back repeatedly.

### To quit Single Repeat:

Move  to "REPEAT" in the on-screen display and press ENTER/SELECT. The REPEAT button returns to its original color.


## Repeating a part


You can repeat a part in the current track.

ON SCREEN



1. Press ON SCREEN during playback.  
The on-screen display appears.

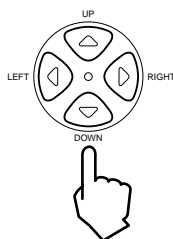

2. Move  to "A-B REPEAT" using  $\Delta/\nabla$ .



3. At the beginning of the desired part (point A), press ENTER/SELECT.

ENTER/SELECT




4. At the end of the desired part (point B), press ENTER/SELECT.  
The XV-1000BK locates "A" and starts playback between "A" and "B" repeatedly.

ENTER/SELECT



### To quit A-B Repeat:

Move  to "A-B REPEAT" in the on-screen display and press ENTER/SELECT. The A-B REPEAT button returns to its original color.


## Starting playback from a specified time

You can specify the elapsed time from the beginning of the disc of which to start playback.

ON SCREEN




1. Press ON SCREEN.  
The on-screen display appears.

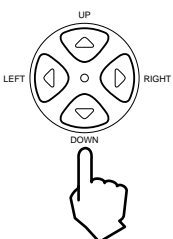

2. Move  to the "TIME SEARCH" using  $\Delta/\nabla$ .




# Audio CD Operations

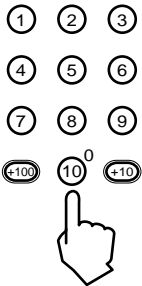


3. Press ENTER/SELECT.

4. Enter a desired time using the numeric keys on the remote control unit. See page 16 for details about how to use the numeric keys.

5. Move  to "TIME SEARCH" using  $\Delta/\nabla$  and press ENTER/SELECT. The XV-1000BK starts playback from the specified time.


If the specified time does not exist, the entered number disappears so that you can reenter the time.

### To quit this function


Move  to "TIME SEARCH" in the on-screen display and press ENTER/SELECT.

## Playing back only the beginning of each track

You can check the first 10 seconds of each track on a disc.

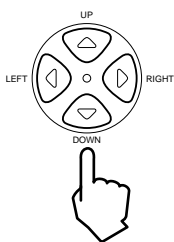

1. Press ON SCREEN during stop. The on-screen display appears.

2. Move  to "INTRO" using  $\Delta/\nabla$ .



3. Press ENTER/SELECT.

The first 10 seconds of each track on a disc are played back from the first track in numerical order. When all the tracks are played, Intro playback stops.


## Playing back tracks in random order

The XV-1000BK can play tracks in random order.

ON SCREEN



1. Press ON SCREEN while the disc is stopped.  
The on-screen display appears.

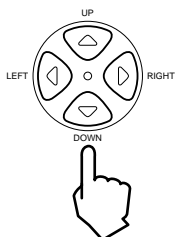

2. Move  to "RANDOM" using  $\Delta/\nabla$ .



ENTER/SELECT



3. Press ENTER/SELECT.  
The Random play begins.  
When all tracks have been played once, the Random play quits.

\* The same track will not be played multiple times during the Random play.


## Selecting the displayed time mode

You can choose the time mode in the display on the front panel and in the on-screen display.

ON SCREEN



1. Press ON SCREEN during playback.  
The on-screen display appears.

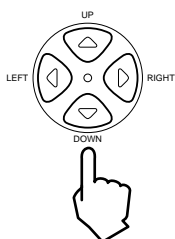


2. Move  to "TIME SELECT" using  $\Delta/\nabla$ .



# Audio CD Operations



3. Each time you press ENTER/SELECT, the time mode changes in the following order.

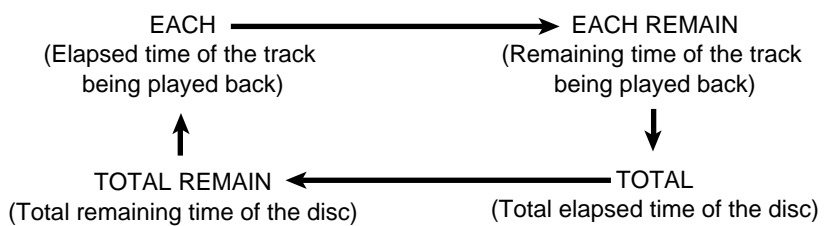


- \* While the disc is stopped, the total disc time is displayed when "TOTAL REMAIN" is selected.

# Video CD Operations

This chapter explains all the functions of the XV-1000BK for playing back video CDs. Read "Basic Operations" on pages 19 and 20 before reading this chapter.

## Playing back a track

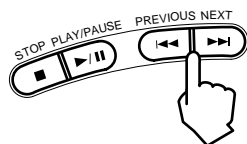


### ■ Using ◀◀ / ▶▶ buttons during playback

Pressing ▶▶ causes the XV-1000BK to jump to the next track and start playback. Therefore, press ▶▶ as many times as required to jump to the desired track and start playback.

Similarly, pressing ◀◀ causes the XV-1000BK to jump to the beginning of the current track and start playback. By pressing it again, the XV-1000BK jumps to the previous track and starts playback.

\* Note that this operation is disabled during playback with PBC.

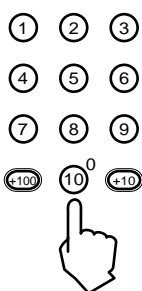

### ■ Using numeric keys

You can also use the numeric keys on the remote control unit to select a track number. The XV-1000BK automatically starts playback from the selected track regardless of the player's mode.

See page 16 for details about how to use the numeric keys.

\* Note that this operation is disabled during playback with PBC.

## Advancing a picture frame-by-frame



You can advance a still picture frame-by-frame.

1. Press STEP during playback.  
The XV-1000BK pauses.  
Each time you press STEP, the picture advances one frame.

Pressing ▶/■ returns the XV-1000BK to normal playback.

\* The audio is muted during frame-by-frame playback.

\* You cannot backward a picture frame-by-frame.

## Playing in slow-motion



You can playback a disc in slow-motion.

1. Press SLOW during playback.  
The playback speed slows down to half the normal speed.

Thereafter, each press of SLOW slows the speed down to 1/3, 1/4, 1/8, 1/16 and 1/32 of the normal speed.

Pressing ▶/■ returns the XV-1000BK to normal playback.

\* Audio is muted during slow-motion playback.

\* When the picture is being played back of 1/32 of the normal speed (which is the slowest) after pressing SLOW six times, the SLOW button is not effective.

\* Pressing STEP in slow-motion mode freezes the motion.

## Resuming playback

The XV-1000BK can memorize a position on a disc you specify and resume playback from that position later.

### ■ Memorizing a position

1. Press RESUME during playback to memorize the current playback position. When memorized, the RESUME indicator on the front panel lights.

\* Switching the power to STANDBY during playback clears the current memory. The STANDBY memory settings then become valid.

#### To clear the memory:

Take out the disc from the disc tray.

- \* The memory is not cleared by switching the power to STANDBY.
- \* The last memory overrides the previous memory.

### ■ Resuming playback

1. Press the RESUME button when the power is in the standby mode.

The player will locate the memory position and start playback.

\* The XV-1000BK may resume playback from slightly before the memorized position if you operate when "PBC" is indicated in the front panel display.




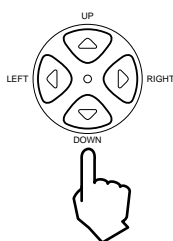
## Playing back in a desired order

You can enjoy the tracks on a video CD in the order you want.


1. Press ON SCREEN while the disc is stopped. The on-screen display appears.



2. Move  to "PROGRAM" using  $\Delta/\nabla$  and press ENTER/SELECT.





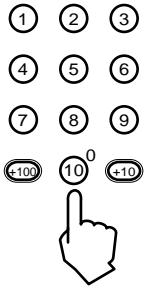


3. Select the tracks in the desired order using the numeric keys.

\* See page 16 for details about how to use the numeric keys. The entered numbers are displayed on the screen.

\* Up to 16 tracks can be programmed. You may select the same track more than once.

**If you make a mistake:**

Move to CLEAR in the display using  $\Delta/\nabla/\triangleright/\triangleleft$  and press ENTER/SELECT. The last programmed track is deleted.

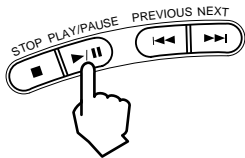

4. Press  $\blacktriangleright/\parallel$  to start the program playback.

\* When all of the programmed tracks have finished playback, the XV-1000BK stops but the program remains.

**To quit the program mode:**


Press  $\blacksquare$ . Move to PROGRAM in the display using  $\Delta/\nabla/\triangleright/\triangleleft$  and press ENTER/SELECT.

## Repeating all tracks

ON SCREEN



1. Press ON SCREEN during playback. The on-screen display appears.

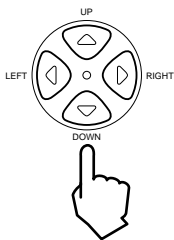

2. Move to "REPEAT" using  $\Delta/\nabla$ .



3. Press ENTER/SELECT once. "REPEAT ALL" is displayed and all tracks are played back repeatedly.

**To quit All-track Repeat:**

Move to "REPEAT" in the on-screen display and press ENTER/SELECT twice. The REPEAT button returns to its original color.

You cannot use this function during playback with PBC.


To enable this function, press  $\blacksquare$  and start playback by specifying a track number using the numeric keys.

ENTER/SELECT



## Repeating a single track

ON SCREEN

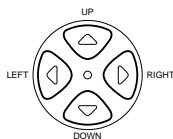

ENTER/SELECT




1. Press ON SCREEN during playback.  
The on-screen display appears.

2. Move  to "REPEAT" using  $\Delta/\nabla$ .




3. Press ENTER/SELECT twice.  
"REPEAT1" is displayed and the current track is played back repeatedly.

### To quit Single Repeat:


Move  to "REPEAT" in the on-screen display and press ENTER/SELECT. The REPEAT button returns to its original color.

You cannot use this function during playback with PBC.

To enable this function, press  and start playback by specifying a track number using the numeric keys.


## Repeating a part

ON SCREEN

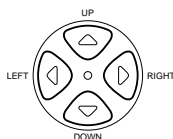

You can repeat a part in the current track.

1. Press ON SCREEN during playback.  
The on-screen display appears.

2. Move  to "A-B REPEAT" using  $\Delta/\nabla$ .






3. At the beginning of the desired part (point A), press ENTER/SELECT.



4. At the end of the desired part (point B), press ENTER/SELECT.  
The XV-1000BK locates "A" and starts playback between "A" and "B" repeatedly.

**To quit A-B Repeat:**


Move  to "A-B REPEAT" in the on-screen display and press ENTER/SELECT. The A-B REPEAT button returns to its original color.


## Starting playback from a specified time


You can specify the elapsed time from the beginning of the disc at which to start playback.



1. Press ON SCREEN.  
The on-screen display appears.

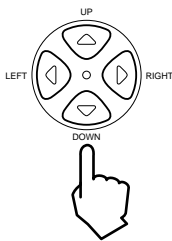

2. Move  to the "TIME SEARCH" using  $\Delta/\nabla$ .  
The message box indicates "GO TO : :".

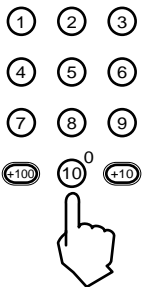

3. Enter a desired time using the numeric keys on the remote control unit.  
See page 16 for details about how to use the numeric keys.



4. Press ENTER/SELECT.  
The XV-1000BK starts playback from the specified time.

**To use this function during stop**

This function can be used during stop. See "Starting playback from a specified time" on page 33.

# Video CD Operations

## When "PBC" is indicated in the front panel display:

You cannot use this function during playback with PBC.

To enable this function, press ■ and start playback by specifying a track number using the numeric buttons.


## Playing back only the beginning of each track

You can check the first 10 seconds of each track on a disc.


ON SCREEN



1. Press ON SCREEN during stop.  
The on-screen display appears.

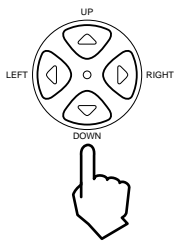

2. Move to "INTRO" using  $\Delta/\nabla$ .

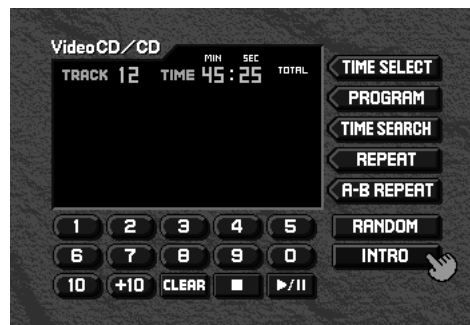

3. Press ENTER/SELECT.  
The first 10 seconds of each track on a disc are played back from the first track in numerical order. When all the tracks are played, Intro playback stops.

ENTER/SELECT




## Playing back tracks in random order

The XV-100BK can play tracks in random order.

ON SCREEN



1. Press ON SCREEN while the disc is stopped.  
The on-screen display appears.

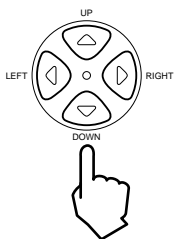

2. Move to "RANDOM" using  $\Delta/\nabla$ .





3. Press ENTER/SELECT.  
The Random play begins.  
When all tracks have been played once, the Random play quits.

\* The same track will not be played multiple times during the Random play.


## Selecting audio channels

In some karaoke discs, one of the audio channels includes vocal while the other does not. With such discs, you can choose to enjoy karaoke without vocal or with vocal by selecting the audio channel to be played back.


ON SCREEN




1. Press ON SCREEN during playback.  
The on-screen display appears.

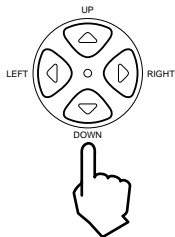

2. Move  to AUDIO using  $\Delta/\nabla$ .

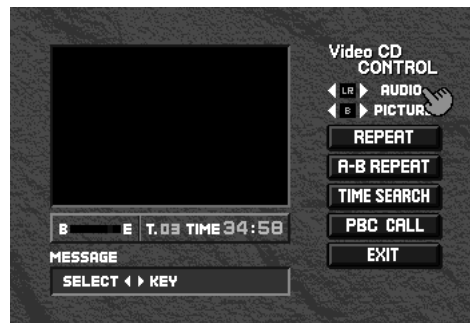

3. Select the audio to be played back using  $\triangle/\triangleright$ .

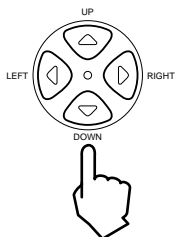


## Selecting picture character

You can select from two picture characters; soft or sharp.

ON SCREEN




1. Press the ON SCREEN button during playback.  
The on-screen display appears.

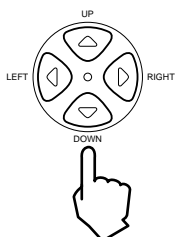

2. Move  to "PICTURE" using  $\Delta/\nabla$ .



# Video CD Operations

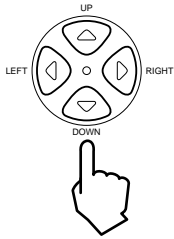

3. Select A or B using  $\triangle/\nabla$ .

- A: sharp
- B: soft

When a video CD is inserted, the default setting is "B".


## Checking total disc time

You can see the total disc time in the on-screen display and the front panel display while the disc is stopped.

ON SCREEN



1. Press ON SCREEN while the disc is stopped.  
The on-screen display appears.

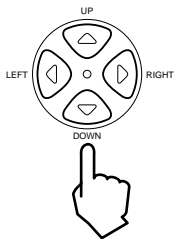

2. Move to "TIME SELECT" using  $\triangle/\nabla$ .



3. Press ENTER/SELECT until "TOTAL REMAIN" is selected as the display time mode.

\* During playback, the elapsed time of the current track is displayed regardless of the setting above.

ENTER/SELECT




## Accessing the PBC function

When the XV-1000BK is playing back a video CD without using the PBC (Playback Control) function (such cases include playback of the track specified with the numeric keys), you can go into the PBC mode by two methods.

### Method 1:

1. Press  $\blacksquare$ .
2. Press  $\blacktriangleright/\parallel$ .  
The XV-1000BK starts the PBC function.

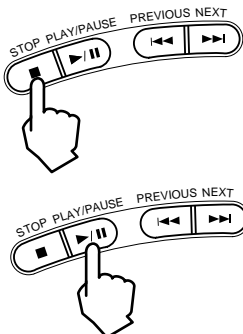



## Method 2:

ON SCREEN



1. Press ON SCREEN during playback.  
The on-screen display appears.

2. Move  to "PBC CALL" using  $\Delta/\nabla$ .

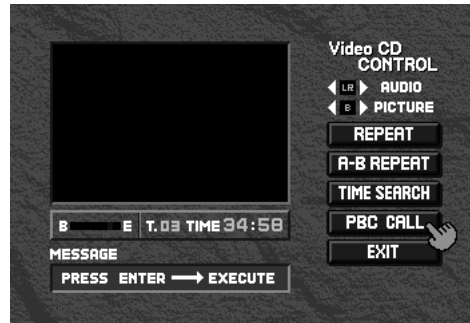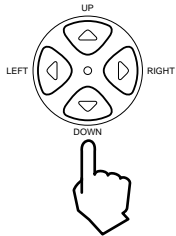

3. Press ENTER/SELECT.  
The XV-1000BK starts the PBC function.

ENTER/SELECT



If  appears:

The disc does not support PBC.

# Selecting Preferences


You can set various preferences mainly related with DVD playback via the "PREFERENCE" and "PARENTAL LOCK" on-screen displays.

## Preferences via "PREFERENCE" on-screen display



### How to set up

1. Take out the disc from the disc tray.  
You do not have to take out the disc if it is a DVD disc, but press ■ to make it stop.  
Close the disc tray before setting up.
2. Press ON SCREEN.  
The "PREFERENCE" on-screen display appears on the television screen.

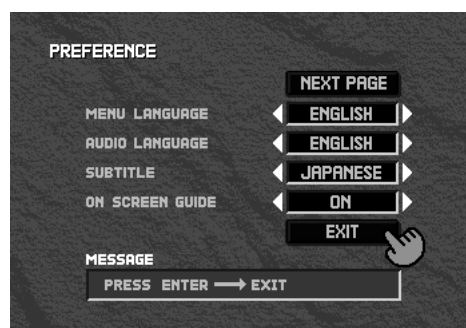



\* The "PREFERENCE" consists of two pages.



### To turn the page of the on-screen display:

Move to "NEXT PAGE" or "PREV PAGE" using  $\Delta/\nabla$  and press ENTER/SELECT.

3. Move to the item to be set using  $\Delta/\nabla$ .

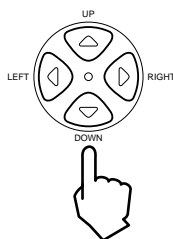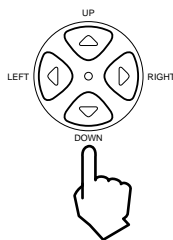

4. Select the setting you prefer using  $\triangle/\triangleright$ .

### To turn off the on-screen display:

Press ON SCREEN.



## ■ Items

The following preferences can be set.

### MENU LANGUAGE

You can select the default "DVD menu" language to be displayed if the disc contains it.

Each time you press  $\triangleright$ , the setting language changes as follows.

ENGLISH → SPANISH → FRENCH → CHINESE → GERMAN → ITALIAN → JAPANESE → language code from AA to ZU (see the appendix "Language Code Chart")

Pressing  $\triangleleft$  changes the setting language in the reverse order of the above.

\* If the selected language is not played, the disc's default menu language is displayed.

### AUDIO LANGUAGE

Up to eight audio languages can be recorded in a DVD disc. You can select the default audio language to be played if the disc contains it.

Each time you press  $\triangleright$ , the setting language changes as follows.

ENGLISH → SPANISH → FRENCH → CHINESE → GERMAN → ITALIAN → JAPANESE → language code from AA to ZU (see the appendix "Language Code Chart")

Pressing  $\triangleleft$  changes the setting language in the reverse order of the above.

\* If the selected language is not recorded, the disc's default audio language is reproduced.

### SUBTITLE

Up to 32 subtitle languages can be recorded in a DVD disc. You can select the default subtitle language to be displayed if the disc contains it.

Each time you press  $\triangleright$ , the setting language changes as follows.

ENGLISH → SPANISH → FRENCH → CHINESE → GERMAN → ITALIAN → JAPANESE → language code from AA to ZU (see the appendix "Language Code Chart")

Pressing  $\triangleleft$  changes the setting language in the reverse order of the above.

\* If the selected language is not recorded, the disc's default subtitle language is displayed.

### ON SCREEN GUIDE

The XV-1000BK can display "on screen guide" icons or characters on the picture, which show what is happening to the disc or the XV-1000BK.


You can turn the guide display on or off.

# Selecting Preferences

## MONITOR TYPE

You can select a monitor type when you playback DVD discs recorded for wide screen televisions.

If your television has a normal (4:3) screen, select "4:3 PS " (cuts both sides of the "wide" picture) or "4:3 LB " (with masking bars to maintain the "wide" aspect ratio).

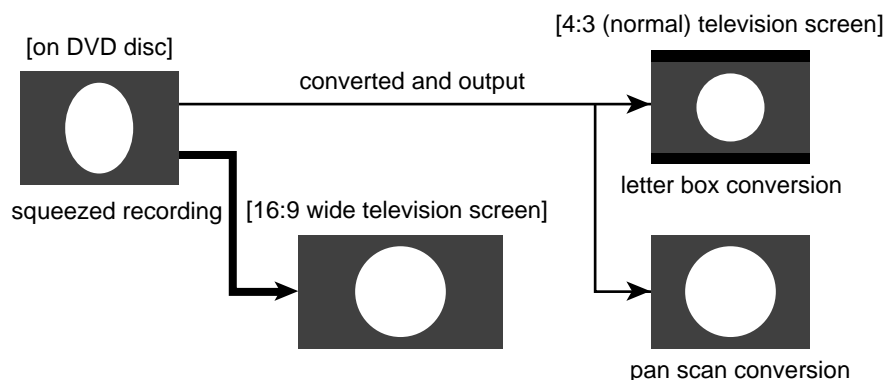

If your television has a wide (16:9) screen, you have to select "16:9 WIDE".

## DIGITAL AUDIO OUTPUT

To connect the XV-1000BK digital output with an external amplifier or receiver equipped with an optical digital input, this item must be set correctly.

- PCM ONLY: to connect to an optical input of an audio equipment.
- PCM/AC-3: to connect to a Dolby AC-3 optical digital input of a Dolby Digital AC-3 decoder.

The following chart shows the relationship between kinds of playback discs and output signals.

Playback discs	Output (PCM/AC-3 mode)	Output (PCM ONLY mode)
DVD with 48-kHz, 16-bit linear PCM	48-kHz, 16-bit linear PCM	←
DVD with 48-kHz, 20/24-bit linear PCM	48-kHz, 20-bit linear PCM	←
DVD with 96-kHz, linear PCM	no output	←
DVD with Dolby AC-3	AC-3 bitstream	48-kHz, 16-bit linear PCM
DVD with MPEG audio	48-kHz, 16-bit linear PCM	←
CD	44.1-kHz, 16-bit linear PCM	←
Video CD	44.1-kHz, 16-bit linear PCM	←

## AV COMPULINK MODE

If you use the AV Compulink system, you must set this item correctly. Select from the three options: DVD1, DVD2 and DVD3 according to the equipment to be connected. See "AV Compulink system" on pages 54 and 55.


## Setting Parental Lock

The Parental Lock is one of the special features of DVD. It restricts playback of DVD discs which contains violent (and other) scenes according to the level set by the user. For example, by setting the Parental level strictly, when a movie which includes violent scenes is played back, the scenes are cut or replayed with other scenes in order not to be seen by children.


With the XV-1000BK, you can set or modify its level and password via the Parental Lock on-screen display.

### Setting for the first time

1. While holding down **STOP**, press **ENTER/SELECT** on the remote control unit.  
The Parental Lock on-screen display appears.

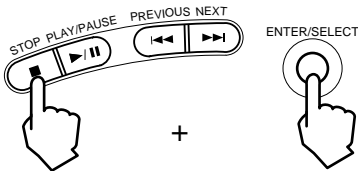

2. Select the parental level using **LEFT/RIGHT**.  
You can select the level from among NONE, NC17, R, RG13, PG, and G.  
You cannot playback DVD discs rated higher than the selected level.

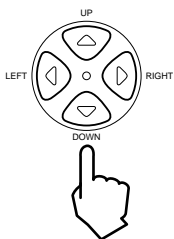


NONE means no restriction. NC17 is the strictest.

3. Press **ENTER/SELECT**.



4. Enter your 4-digit password using the numeric keys.

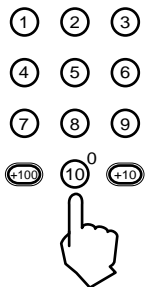


5. Press **ENTER/SELECT**.



The parental level and your password are set.

# Selecting Preferences

## Changing the settings

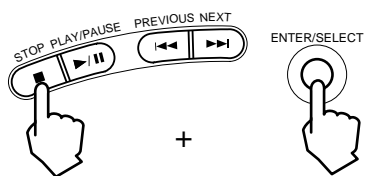

1. While holding down ■, press ENTER/SELECT on the remote control unit. The Parental Lock on-screen display appears.




2. Enter your 4-digit password using the numeric keys and press ENTER/SELECT. If you enter a wrong password, the following message appears in the message box. "WRONG! RETRY....."

### If you forget your password:

Enter "8888".


After entering the correct password, proceed to the following steps.

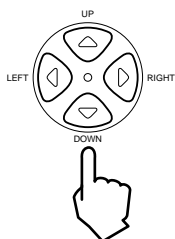

3. Select the parental level using </> .



4. Press ENTER/SELECT. The level is changed.

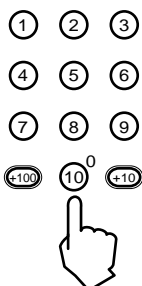

5. Enter a new password using numeric keys.



6. Press ENTER/SELECT. The new setting is effective.

### Temporary release of the Parental lock

When the parental level is set strictly, some discs may not be played back at all. When you insert such a disc and try to play it, the XV-1000BK will ask you whether you want the parental lock to be released temporarily or not.



If you select "YES", then enter your password, the disc will start playback.

If you enter a wrong password, the following message appears.  
"WRONG! RETRY....."

If you select "NO", the parental lock on-screen display disappears.


# Other Information

## Care and handling of discs

### How to handle discs

When handling a disc, do not touch the surface of the disc (reflective silver side — the side without the label).

Since discs are made of plastic, they are easily damaged. If a disc gets dirty, dusty, scratched or warped, the images and sound will not be picked up correctly, and such a disc may cause the player to malfunction.

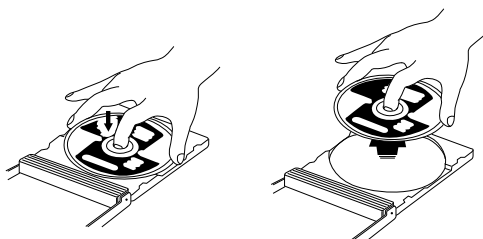

### Even on label side

Do not damage the label side, stick paper to or use any adhesive on its surface.

### Storage

Make sure that discs are kept in their cases. If discs are piled on top of one another without their protective cases, they can be damaged. Do not put discs in a location where they may be exposed to direct sunlight, or in a place where the humidity or temperature is high. Avoid leaving discs in your car!

### Maintenance of discs

If there are fingerprints or other dirt adhering to a disc, wipe with a soft dry cloth, moving from the center outwards.

If a disc is difficult to clean, wipe with a cloth moistened with water. Never use record cleaners, petrol, alcohol or any anti-static agents.



### CAUTION

Sometimes during play noise or images may be garbled. This is sometimes due to the disc. (It may not be up to industry standards.)

These symptoms are caused by the discs, not by the malfunction of the player.

## Table of languages and their abbreviations

AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Amharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Byelorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scots Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlinque

IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish
JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KO	Korean (KOR)
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laotian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MS	Malay (MAY)
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NL	Dutch
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance

RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sango
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak
SL	Slovenian
SM	Samoan
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tongan
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapuk
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu


### AV COMPULINK remote control system

When you buy a separate TV, VCR DVD player, receiver or other components and connect them to each other, you have to operate each component individually. JVC's AV COMPULINK remote control system meets the demand for a system made up of single components and has the ease of operation of a single unit.

#### ■ Operation

You can enjoy pictures and/or sound by just putting a source component (which plays back the pictures and/or sound such as a DVD player or VCR) into play mode. You do not have to operate the TV and receiver including power switching.

1. Turn on the main power of the television.
2. Insert a disc into the source component.
3. Press ►/|| of the source component.

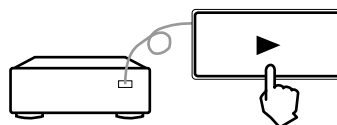


The following actions are performed automatically:

- Turning on the power of the television.
- Setting the source of the television to the external input (VIDEO 1 or VIDEO 2).
- Turning on the power of the receiver.
- Setting the source of the receiver to the component which has just started playback.


#### ■ Connection and Setup

Using the AV COMPULINK cable, connect the AV COMPULINK terminals of each component to one another.

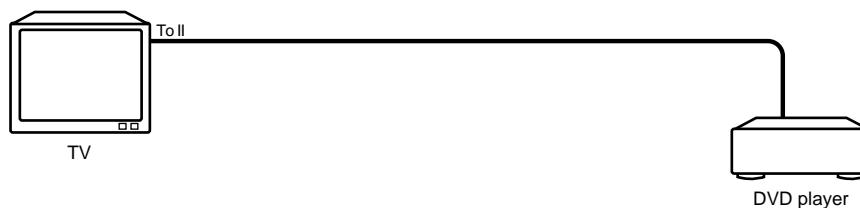

If you connect a DVD player with a television via AV COMPULINK, set the DVD player's AV COMPULINK setting as follows.


- When connecting with VIDEO 1 input terminal of the television: DVD2
- When connecting with VIDEO 2 input terminal of the television: DVD3

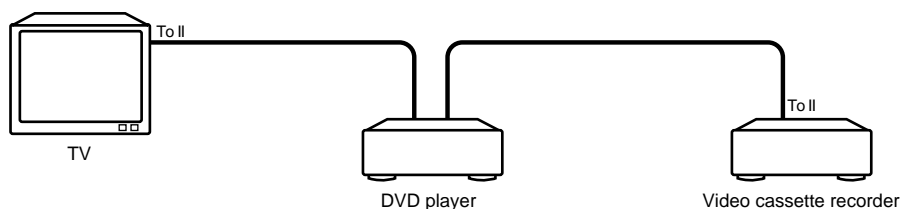



If you connect a DVD player with a television and VCR via AV COMPULINK, set the VCR's Remote Control Code and DVD player's AV COMPULINK setting as follows.

- When connecting with VIDEO 1 input terminal of the television:  
DVD player's AV COMPULINK setting: DVD2  
VCR's Remote Control Code: B
- When connecting with VIDEO 2 input terminal of the television:  
DVD player's AV COMPULINK setting: DVD3  
VCR's Remote Control Code: A

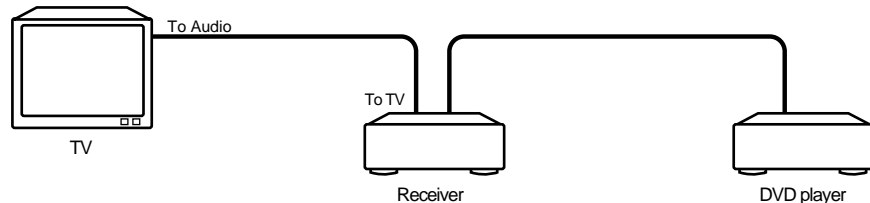

If you connect a DVD player with a television and receiver via AV COMPULINK, set the DVD player's AV COMPULINK setting to DVD1.

The DVD player's AV COMPULINK setting is operated in the "PEFERENCE" on-screen display. See "Preferences via "PEFERENCE" on-screen display" on pages 46, 47 and 48 for operation.

### Notes for connection

- If you connect a DVD player with a receiver via AV COMPULINK in a system including a Dolby digital (AC-3) decoder, some functions may not be done automatically.
- The AV COMPULINK terminal on some televisions indicates "II". Do not connect the terminal indicating "II" with the AV COMPULINK terminal on a receiver. If connected, the system will not work correctly.
- Connect the AUDIO OUT jacks of the DVD player to the audio input jacks of a receiver indicating "DVD". Otherwise, the system will not work correctly.

There is no description about connections to a DVD player in the instruction manual of a television or VCR. But a television or VCR with AV COMPULINK terminals indicating II can be connected to a DVD player.

## Troubleshooting

What appears to be a malfunction may not always be serious. Please go through the following list before requesting service.

Symptom	Possible cause	Remedy
Power does not come on.	Power plug is not inserted securely.	Plug in securely.
Remote control does not work.	Too far from the XV-1000BK.	Come closer to the XV-1000BK.
	The tip of the remote unit is not pointed in the right direction.	Point the infrared light-emitting window toward the remote sensor on the front panel.
	Batteries are exhausted.	Replace the batteries with new ones.
	Battery polarity is incorrect.	Take out the batteries and insert them again in the correct direction.
No picture is displayed on the monitor.	Connection of video cable is incorrect.	Connect the cable correctly (see pages 9 and 10).
	Input selection of TV is incorrect.	Select correctly.
	Disc is not playable.	(See pages 15.)
No audio is reproduced.	Connection to stereo system is incorrect.	Check connections (see Page 9 to 12).
	Input selection of amplifier is incorrect.	Select correctly.
No sound from headphones.	PHONES LEVEL is too low.	Adjust the PHONE LEVEL.
Sound is distorted or noise is generated. Picture is garbled.	Disc is dirty.	Wipe the disc surface (see page 52).
	XV-1000BK is connected to a VCR.	Connect XV-1000BK with the TV directly.
Picture does not fit with the television screen.	MONITOR TYPE is not correctly set.	See "MONITOR TYPE" on page 48.
	Television is not correctly set.	Set the television correctly.
Operation is not possible.	Microcomputer malfunctions due to lightning or static electricity.	Turn off the power, then connect the power cord again.
	Moisture condensation occurs by sudden change of temperature or humidity.	Turn off the power, then turn it on a few hours later.

There may be causes other than the XV-1000BK. Check the other devices connected to the XV-1000BK.

## Specifications

### General

Readable discs: DVD video, CD, Video CD  
 Video format: NTSC color

### Other

Power requirements: AC 120V  $\sim$  , 60Hz  
 Power consumption: 25 W (POWER ON), 6 W (STANDBY mode)  
 Mass: 4.7 kg (10.37 lbs)  
 Dimensions (W x H x D): 435 x 112 x 327.5 mm  
 17-3/16 x 4-7/16 x 12-15/16 inch

### Video output

VIDEO OUT (pin jack): 1.0 Vp-p (75 ohms)  
 S-VIDEO OUT (S jack): Y Output: 1.0 Vp-p (75 ohms),  
 C Output: 286 mVp-p (75 ohms)

### Audio output

ANALOG OUT (pin jack x 2): 2.0 Vrms (10 k ohms)  
 OPTICAL DIGITAL OUT: -21 to -15 dBm (PEAK)

### Audio characteristics (DVD at Fs=48 kHz)

Frequency response: CD (sampling frequency 44.1 kHz): 2 Hz to 20 kHz  
 DVD (sampling frequency 48 kHz): 2 Hz to 22 kHz  
 DVD (sampling frequency 96 kHz): 2 Hz to 44 kHz  
 Dynamic range: 16 bit: More than 99 dB  
 20 bit: More than 108 dB  
 24 bit: More than 108 dB  
 Wow and flutter: Unmeasurable (less than  $\pm$  0.002%)  
 Total harmonic distortion: Less than 0.002%



VICTOR COMPANY OF JAPAN, LIMITED

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>