


# JVC

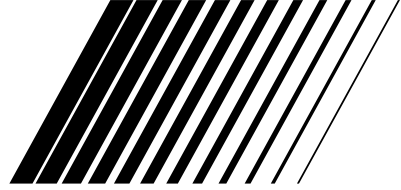


English


中文

## COMPACT COMPONENT SYSTEM 组合音响系统


# CA-MXJD5 CA-MXJD8

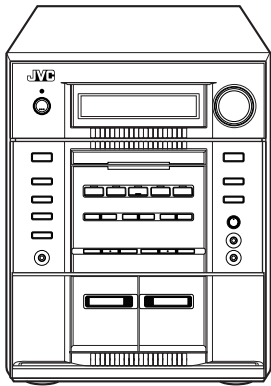

CA-MXJD5

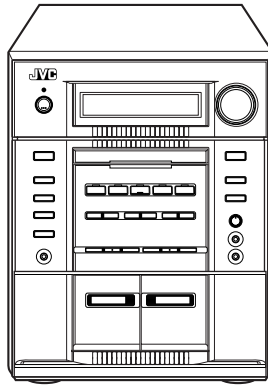

CA-MXJD8

 

**AV COMPU LINK EXTENDED SUPER BASS**


## INSTRUCTIONS

使用说明书

# Warnings, Cautions and Others

## 警告，注意及其他须知事项

### Caution— (STANDBY/ON) button!

Disconnect the mains plug to shut the power off completely. The  (STANDBY/ON) button in any position does not disconnect the mains line. The power can be remote controlled.

### CAUTION


To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### 注意— 开关！

无论  开关在任何位置，电源线的电源还是没有被切断，若要将电源完全关闭，应把电源插头脱离插座。电源可用遥控器控制。

### 注意

为了减少触电，火灾等危险：

1. 请勿擅自卸下螺丝钉，盖子或机壳。
2. 请勿让本机受雨淋或置潮湿环境中。

### 注意

- 请勿堵塞通风口或通风孔。  
(如果通风口或通风孔被报纸或布等堵塞，热量将无法散出。)
- 请勿在本设备上放置任何裸露的火源，如点燃的蜡烛。
- 处理废弃电池时，必须考虑环境问题，并严格遵守当地关于处理废弃电池的有关法律或规定。
- 切勿将本装置暴露于雨水所及、潮湿、滴水或易于溅起水花的地方，亦不要将任何装满液体的物件（如花瓶）放置在本装置上。

### Caution: Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows

1. Front: No obstructions and open spacing.
2. Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

### 注意：正确通风

为免发生触电和火警的危险，及防止本机受损，请将本机如下放置：

1. 前面：没有障碍物及地方开阔。
2. 侧面 / 顶面 / 背面：在图中所示范围中，不应放置任何障碍物。
3. 底部：放置在水平面上。放置在一个高 10 厘米或以上的台上，以保持足够的通风道。

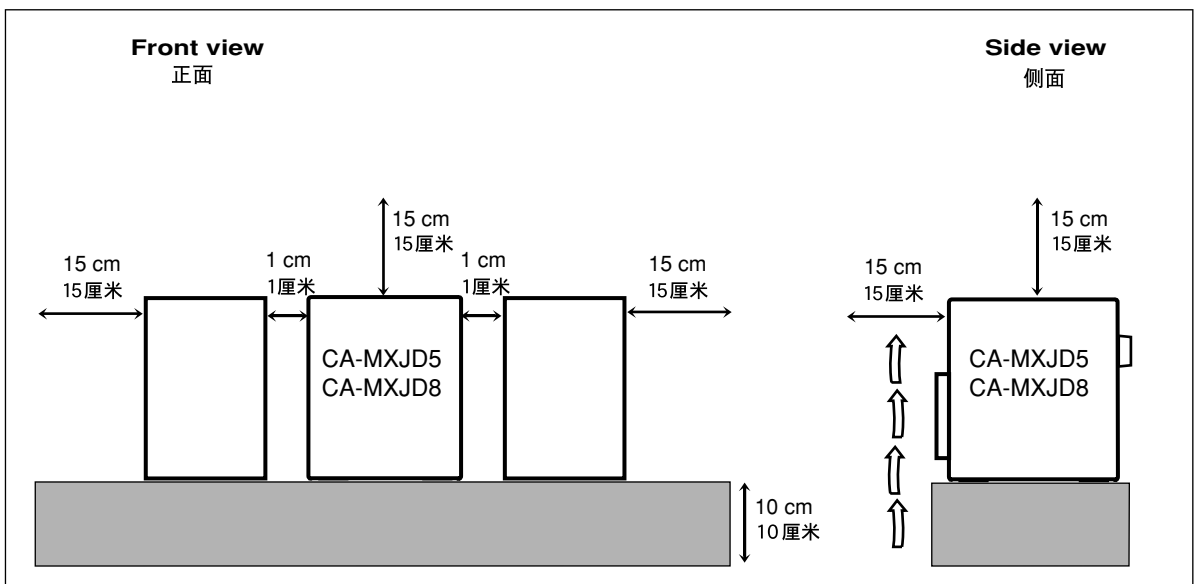

---

## IMPORTANT FOR LASER PRODUCTS

---

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

### 镭射产品的重要说明

---

1. 一级镭射产品。
2. **注意:** 请勿打开顶盖板, 本机内部没有用户可自行维修的部件; 所有维修工作应由有资格的人员完成。
3. **注意:** 当内部锁定装置失效或者损坏后, 打开盖板 可能会产生可见或不可见的镭射辐射。应避免受到镭射光束的直接照射。
4. 标签的复制标示: 注意标签位于机内。

<b>CAUTION :</b> Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	<b>ADVARSEL :</b> Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)	<b>WARNING :</b> Synlig och osynlig laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)	<b>VARO :</b> Avattaessa ja suojalukitus ohitettuna tai viallisena olet alttina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
---	--	--	--

# Contents

<b>Introduction .....</b>	<b>2</b>	<b>Advanced Tape Operations .....</b>	<b>35</b>
Precautions .....	2	Recording on a Tape .....	35
How to Read This Manual .....	2	Dubbing Tapes .....	36
<b>Getting Started .....</b>	<b>3</b>	Synchronized Disc Recording .....	36
Step 1: Unpack .....	3	<b>Enjoying Karaoke .....</b>	<b>37</b>
Step 2: Prepare the Remote Control .....	3	Microphone Mixing.....	37
Step 3: Hook Up.....	4	Singing Along (Karaoke) .....	38
Setting the Speakers .....	8	Reserving Karaoke Songs—Karaoke Program Play .....	39
<b>Before Operating the System .....</b>	<b>10</b>	<b>Timer Operations .....</b>	<b>40</b>
Playable Disc Types .....	10	Setting the Timer.....	40
Parts Index.....	11	Timer Priority.....	41
About the Display Indication .....	12	<b>Set up Menu Operations .....</b>	<b>42</b>
<b>Daily Operations—Playback .....</b>	<b>14</b>	Operating Procedure.....	42
Canceling the Demonstration .....	14	■LANGUAGE Set up Menu .....	43
Listening to the Radio .....	15	■PICTURE Set up Menu.....	43
Playing Back a Disc .....	16	■AUDIO Set up Menu .....	44
Playing Back a Tape.....	18	■SPK. SETTING Set up Menu .....	45
<b>Daily Operations—Sound&amp;Other Adjustments .....</b>	<b>19</b>	■OTHERS Set up Menu.....	46
Adjusting the Volume .....	19	Restricting the Review—Parental Lock.....	47
Reinforcing the Bass Sound .....	19	<b>Operating the TV .....</b>	<b>49</b>
Adjusting the Front Speaker Output Balance.....	20	Operating TV.....	49
Selecting the Sound Modes .....	20	<b>Additional Information .....</b>	<b>50</b>
Creating Your Own Sound Modes—User Mode .....	20	Learning More about This System.....	50
Using Surround Mode .....	21	Maintenance .....	52
Presetting Automatic DVD Video		Troubleshooting .....	53
Sound Increase Level .....	21	Language Code List .....	54
Changing the Scanning Mode .....	21	Country/Area codes list for Parental Lock .....	55
Changing the Picture Tone .....	22	OPTICAL DIGITAL OUTPUT Signals .....	56
Changing the Display Brightness.....	22	Specifications .....	57
Setting the Clock .....	23		
Turning Off the Power Automatically .....	23		
<b>Unique DVD/VCD Operations .....</b>	<b>24</b>		
Selecting the Sound Track.....	24		
Selecting the Subtitle Language .....	25		
Selecting a View Angle.....	25		
Selecting a Still Pictures on a DVD Audio .....	25		
Playing Back a Bonus Group on a DVD Audio.....	26		
Special Picture Playback .....	26		
<b>Advanced Disc Operations .....</b>	<b>27</b>		
Programming the Playing Order—Program Play.....	27		
Playing at Random—Random Play.....	28		
Playing Repeatedly.....	29		
Prohibiting Disc Ejection—Child Lock .....	29		
<b>On-Screen Disc Operations .....</b>	<b>30</b>		
About the On-screen Bar .....	30		
Operations Using the On-screen Bar.....	31		
Operations on the CONTROL Screen.....	33		

# Introduction

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the System in a location with adequate ventilation to prevent internal heat buildup in the System.



DO NOT install the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

- Leave sufficient distance between the System and the TV.
- Keep the speakers away from the TV to avoid interference with TV.

### Power sources

- When unplugging the System from the wall outlet, always pull on the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lenses inside the System in the following cases:

- After starting to heat the room
- In a damp room
- If the System is brought directly from a cold to a warm place. Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, then plug it in again.

### Internal heat

- A cooling fan is inside the unit to prevent heat buildup.



**For safety, observe the following carefully:**

- Make sure there is good ventilation around the unit. Poor ventilation could overheat and damage the unit.
- DO NOT block the ventilation openings or holes. If they are blocked by a newspaper or cloth, etc., the heat may not be able to get out.

### Others

- Should any metallic object or liquid fall into the System, unplug the AC power cord and consult your dealer before operating any further.



DO NOT disassemble the System since there are no user serviceable parts inside.

- If you are not going to operate the System for an extended period of time, unplug the AC power cord from the wall outlet.

If anything goes wrong, unplug the AC power cord and consult your dealer.

## How to Read This Manual

To make the explanations in this manual as simple and easy-to-understand as possible, we have adapted the following methods:

- Button and control operations are explained as listed in the table below. In this manual, the operations using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.
- **Some related tips and notes are explained later in the sections “Learning More about This System” and “Troubleshooting,” but not in the same section explaining the operations ( INFO indicates that the content has some informations).** If you want to know more about the functions, or if you have a doubt about the function, go to these sections and you will find your answer there.


	Indicates that you press the button <b>briefly</b> .
	Indicates that you press the button <b>briefly and repeatedly</b> until an option you want is selected.
	Indicates that you press one of the buttons.
	Indicates that you <b>press and hold</b> the button for a specified period. <ul style="list-style-type: none"> <li>• The number inside the arrow indicates the period of press (in this example, 2 seconds).</li> <li>• If no number is inside the arrow, press and hold until the entire procedure is complete or until you get a result you want.</li> </ul>
	Indicates that you turn the control toward the specified direction(s).
	Indicates that this operation is only possible using the remote control.
	Indicates that this operation is only possible using the buttons and controls on the main unit.

# Getting Started


## Step 1: Unpack the package and check the accessories.



## Step 2: Prepare the remote control.

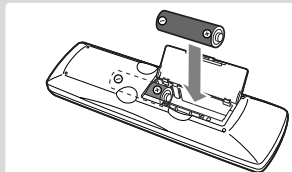

## Step 3: Hook up the components such as AM/FM antennas, speakers, etc. (see pages 4 to 7).

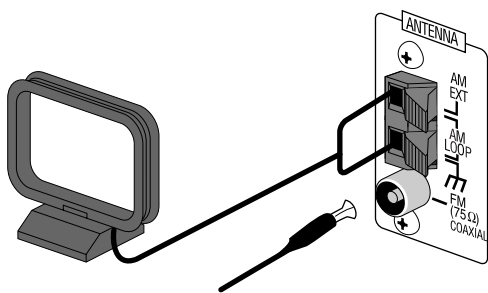

Finally plug the AC power cord.  
Now you can operate this System.

## Step 1: Unpack

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.


- FM antenna (1)
- AM loop antenna (1)
- Composite video cord (1)
- Remote control (1)
- Batteries (2)
- AC plug adaptor (1)
- Core filter (1)

If any item is missing, consult your dealer immediately.


## Step 2: Prepare the Remote Control

Insert the batteries into the remote control by matching the polarity (+ and -) correctly.


1

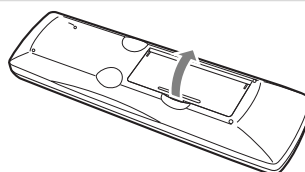

2

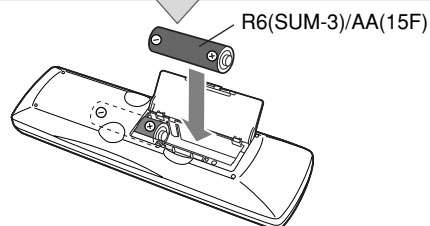

3

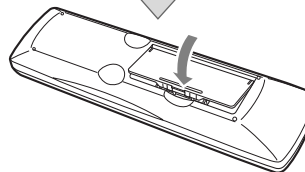

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, the remote control will be damaged from battery leakage.



### Step 3: Hook Up

If you need more detailed information, see pages 6 and 7.

**Turn the power off to all components before connections.**

Illustrations of the input/output terminals below are typical examples.  
When you connect other components, refer also to their manuals since the terminal names actually printed on the rear may vary.

**AM loop antenna (supplied)**  
Turn it until the best reception is obtained.

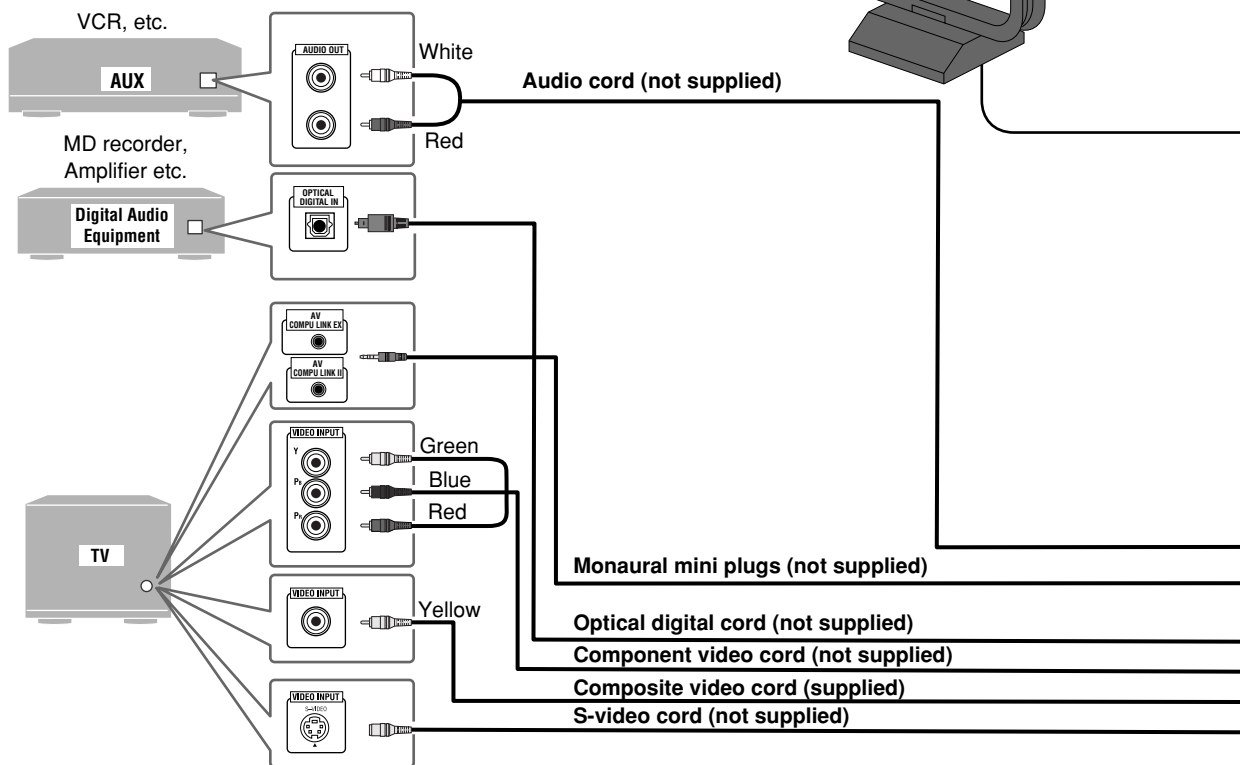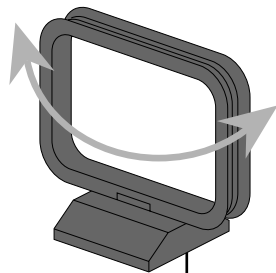


**To center speaker/Surround speaker**  
• See "To connect the speakers" on page 6 and "Setting the Speakers" on page 8.

**To a wall outlet**  
**Plug the AC power cord only after all connections are complete.**  
• If the wall outlet does not match the AC plug, use the supplied AC plug adaptor.



### For better FM/AM reception

 Outdoor FM antenna  
(not supplied)




**AM loop antenna**  
Keep it connected.



**Vinyl-covered wire (not supplied)**

Extend it horizontally.

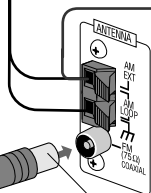


Disconnect the supplied FM antenna, and connect to an outdoor FM antenna using a 75 Ω wire with coaxial type connector (IEC or DIN45325).

\* This illustration uses SP-MXJD8 as speakers.

**FM antenna (supplied)**

Extend it so that you can obtain the best reception.

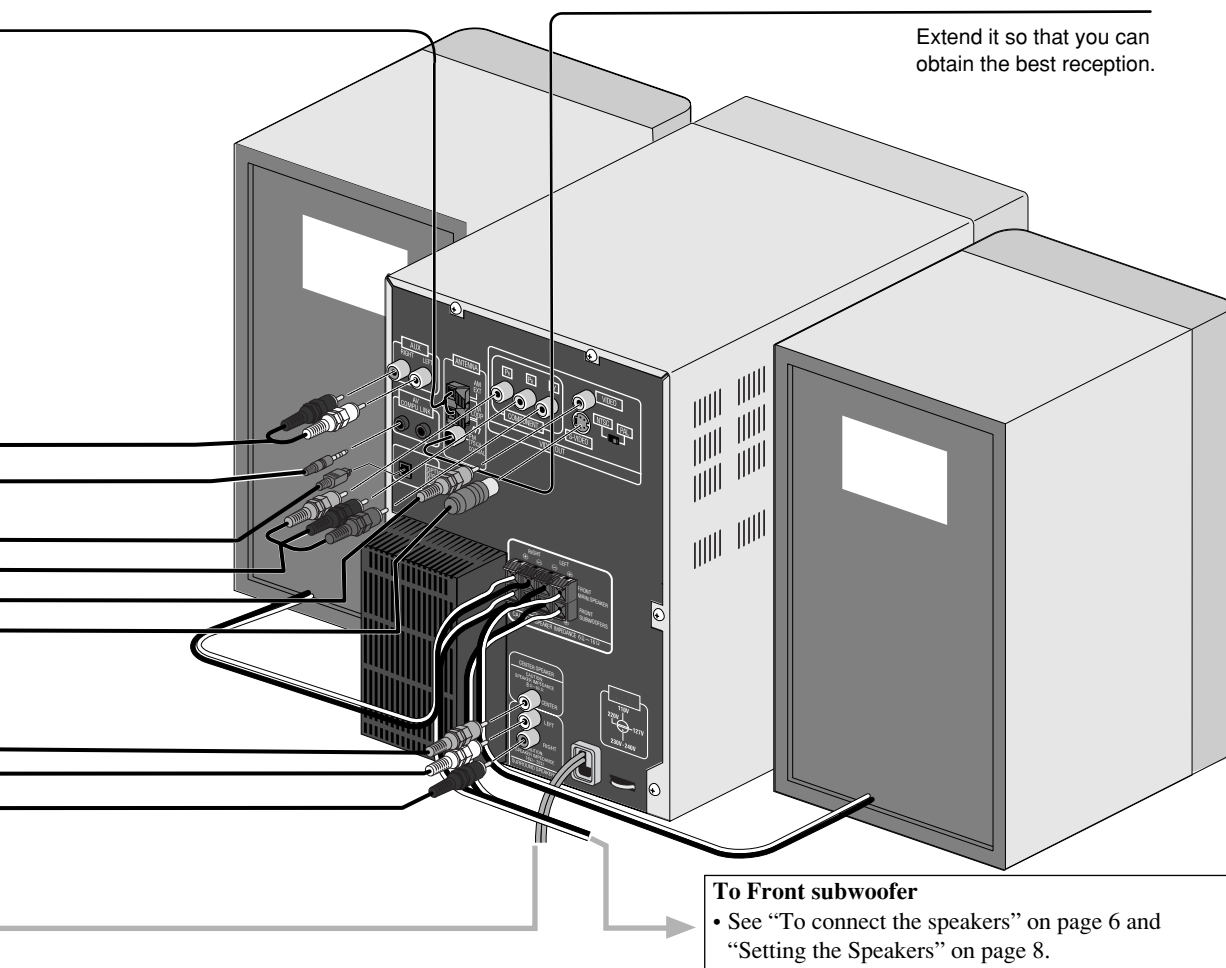


#### To Front subwoofer


- See “To connect the speakers” on page 6 and “Setting the Speakers” on page 8.

## To assemble and connect the AM loop antenna

To assemble the AM loop antenna

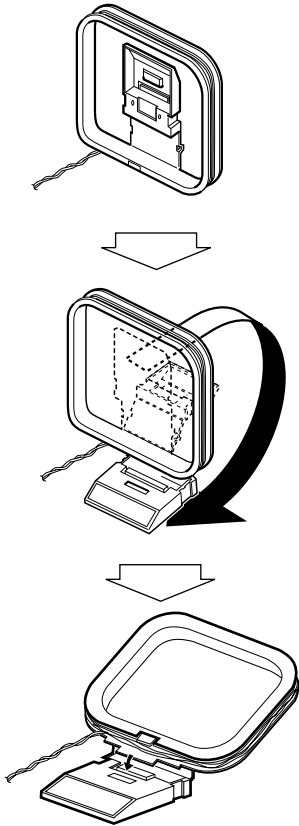


## To connect the AM loop antenna and speaker cords

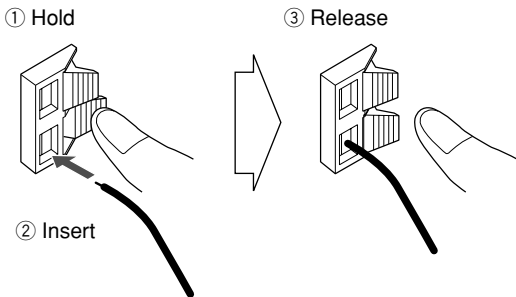

- If the AM loop antenna wire or speaker cords are covered with vinyl, remove the vinyl to expose the tip of the antenna by twisting the vinyl.
- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. This could cause poor reception.

## To connect the speakers


To connect the speaker cords

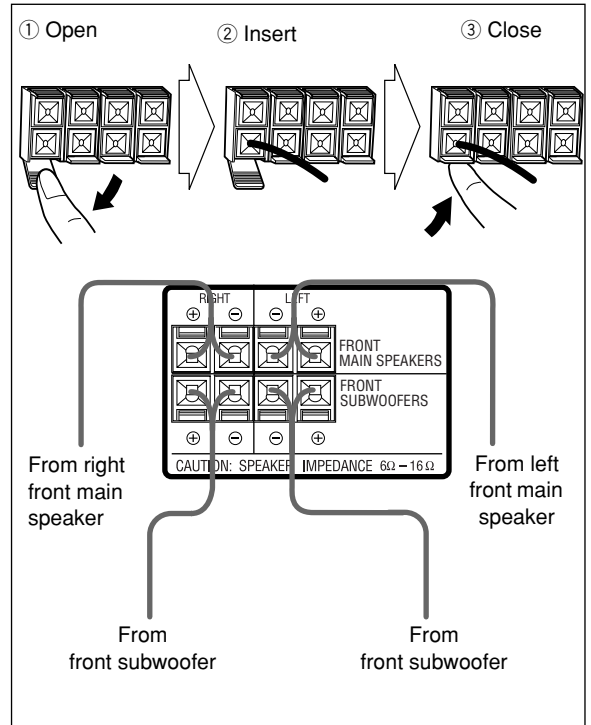

- When connecting the speaker cords, match the polarity of the speaker terminals: (+) to (+) and (-) to (-).


Speaker	Terminal color	
	(+)	(-)
Front main speakers	<b>Blue</b>	<b>Black</b>
Front subwoofer	<b>Red</b>	<b>Black</b>

- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.




- DO NOT connect more than one speaker to each terminal.
- DO NOT push or pull the speakers as this will damage the foot spacers at the bottom of the speakers.

### To connect a center speaker and surround speakers

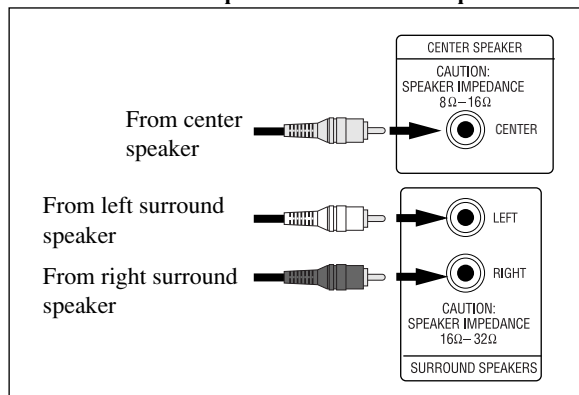

- Connect the center speaker to the CENTER jack.
- Connect the left surround speaker to the LEFT jack.
- Connect the right surround speaker to the RIGHT jack.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

### To connect digital audio

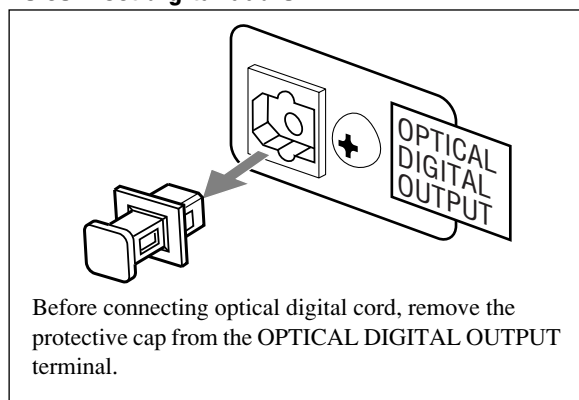


### To connect the AV COMPU LINK cords

The AV COMPU LINK control system allows you to use JVC's TV with simple operations; by starting playing back a disc, the TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

To use AV COMPU LINK, you need to connect the unit and the TV by using a cord with monaural mini-plugs (not supplied) in addition to the connection with a video cord (see page 4).


### To set the video output selector

You can select the video output to match it to the color system of your TV.

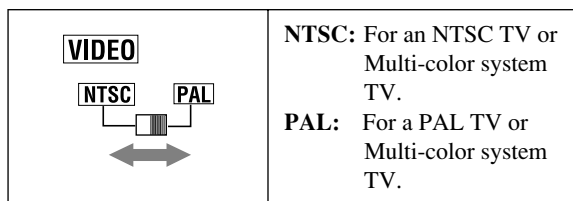

### Adjusting the Voltage Selector

Use a screwdriver to rotate the voltage selector so that the voltage marker is pointing at the same voltage as where you are plugging in the unit. (See also the back cover page.)

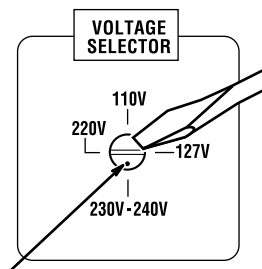

Voltage marker




**DO NOT** plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.

## Setting the Speakers

### Speaker layout

To enjoy multi-channel sound, locate speakers as follows. If you cannot locate them like this, adjust the speaker setting by using the Set up menu. (See right column.)

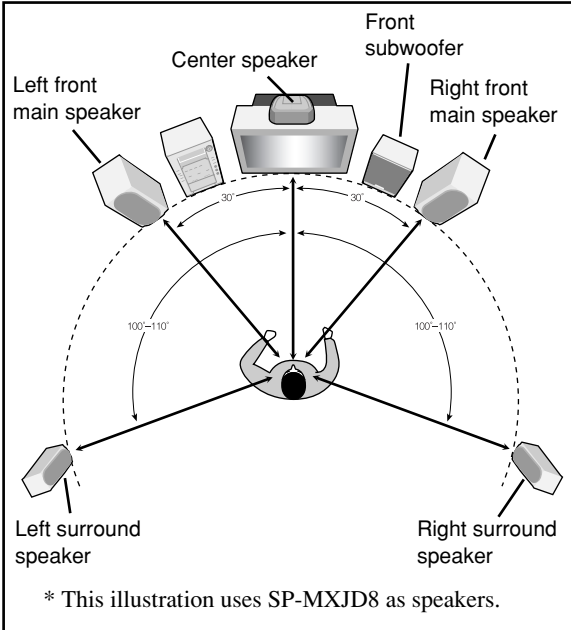


- You can place the front subwoofer wherever you like since bass sound is non-directional. However, it is recommended to place it in front of you.

**STOP!** • DO NOT place a center speaker and surround speakers on the front main speakers or the front subwoofer.


### To adjust the speaker distance

You need to adjust the each speaker's distance from where you usually take seat (listening position) to get the best surround effect.



- Turn off the TV and select the correct input mode on the TV.
- Turn on the System and change the source to "DVD/CD."

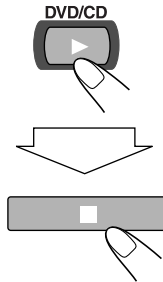



- Display the Set up Menu.

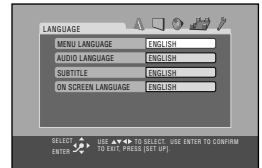


- Select the SPK. SETTING Set up Menus.

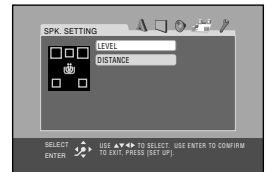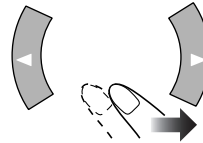



- Select "DISTANCE."

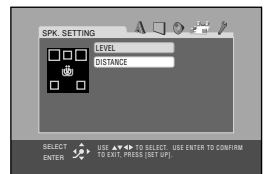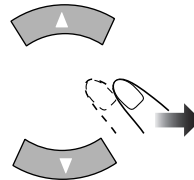

- Enter the DISTANCE submenu.

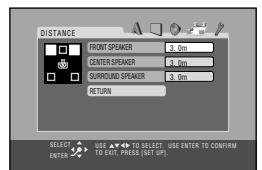


**7 Select the speaker to adjust the distance, then display the pop-up window.**

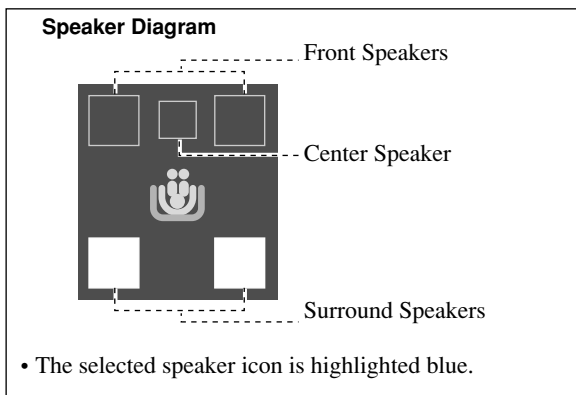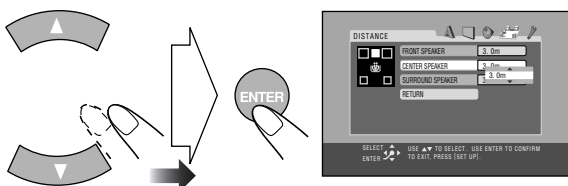

**8 Adjust the desired speaker distance.**

- For each speaker (FRONT SPEAKER, CENTER SPEAKER, SURROUND SPEAKER), set the distance from the listening point within the range of 0.3 m to 9.0 m in 0.3 m intervals.

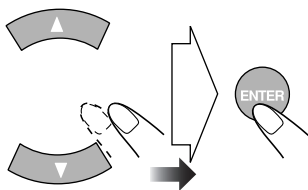

**9 Repeat steps 7 to 8 to adjust other speakers' distance if necessary.**

**To finish the setting**

SET UP



# Before Operating the System

## Playable Disc Types

This unit has been designed to play back the following discs:

Disc Type	Mark (Logo)
DVD Video	
DVD Audio	
Video CD (VCD)	 Video CD
Super Video CD (SVCD)	 
Audio CD	
CD-R	The System can play back CD-R or CD-RW recorded in the Audio CD, Video CD, SVCD, MP3, WMA, JPEG, MPEG-4 formats.
CD-RW	
DVD-R	The System can play back DVD-R or DVD-RW recorded in the DVD Video format.
DVD-RW	

In addition to the above discs, this system can play back audio data recorded on CD Text, CD-G (CD Graphics), and CD-Extra.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD+R, DVD+RW, CD-I (CD-I Ready), CD-ROM, Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
- In this manual, “file” and “track” are interchangeably used for MP3/WMA/JPEG/MPEG-4 operations.

### About color system

This System accommodates both NTSC and PAL system and can playback discs recorded with either system. To change the color system, see page 7.

### Note on Region Code

DVD players and DVDs have their own Region Code numbers. This System can play back only DVDs recorded with the NTSC or PAL color system whose Region Code numbers including “3.”


EX.:



If a DVD with the improper Region Code numbers is loaded, “REGION ERR” appears on the display and playback will not start.

 
## Audio formats

The System can play back the following digital audio formats.

- LPCM (Linear PCM)
-  DIGITAL (Dolby Digital)
- DTS (Digital Theater Systems)
- MPEG (MPEG Multichannel)
- MLP (Meridian Lossless Packing)

### IMPORTANT: Before playing a disc, make sure of the following...

- Turn on the TV and select an appropriate input mode on the TV to view the pictures or on-screen displays on the TV screen.
- For disc playback, you can change the initial setting to your preference. See “Set up Menu Operations” on page 42.

If “” appears on the TV screen when you press a button, the disc cannot accept the operation you have tried to do, or data required for that operation is not recorded on the disc.


- Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, “MLP Lossless”, and the double-D symbol are trademarks of Dolby Laboratories.
- “DTS” and “DTS Digital Surround” are trademarks of Digital Theater Systems, Inc.
- USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE BY A CONSUMER ENGAGING IN PERSONAL AND NON-COMMERCIAL ACTIVITIES.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

“CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE ‘STANDARD DEFINITION’ OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.”


# Parts Index

Refer to the pages to see how to use the buttons and controls.

## Remote control

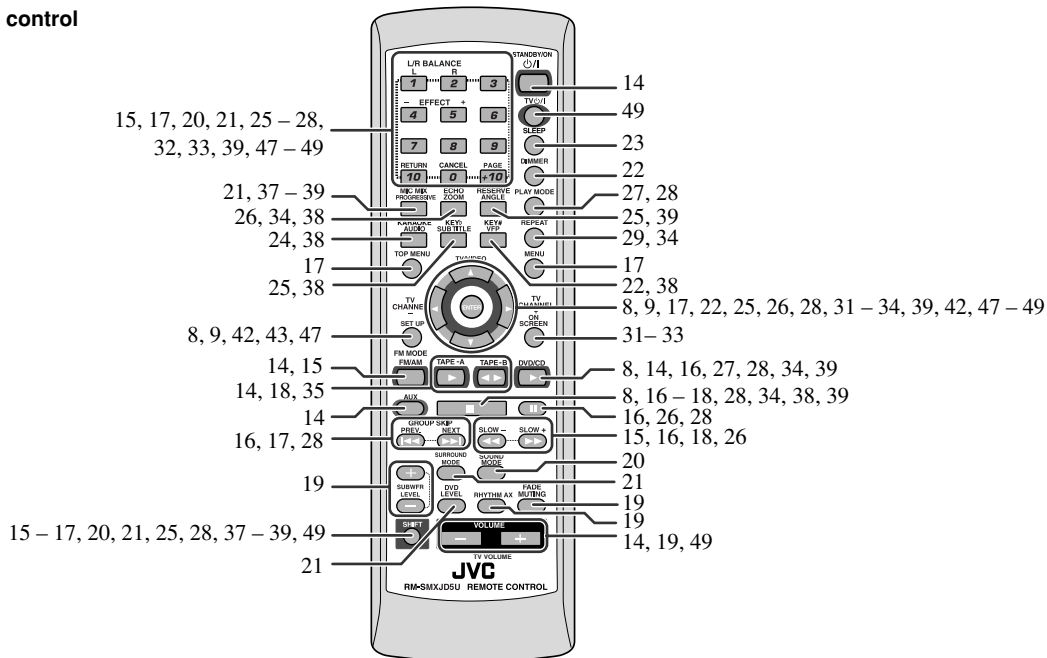


## Main unit

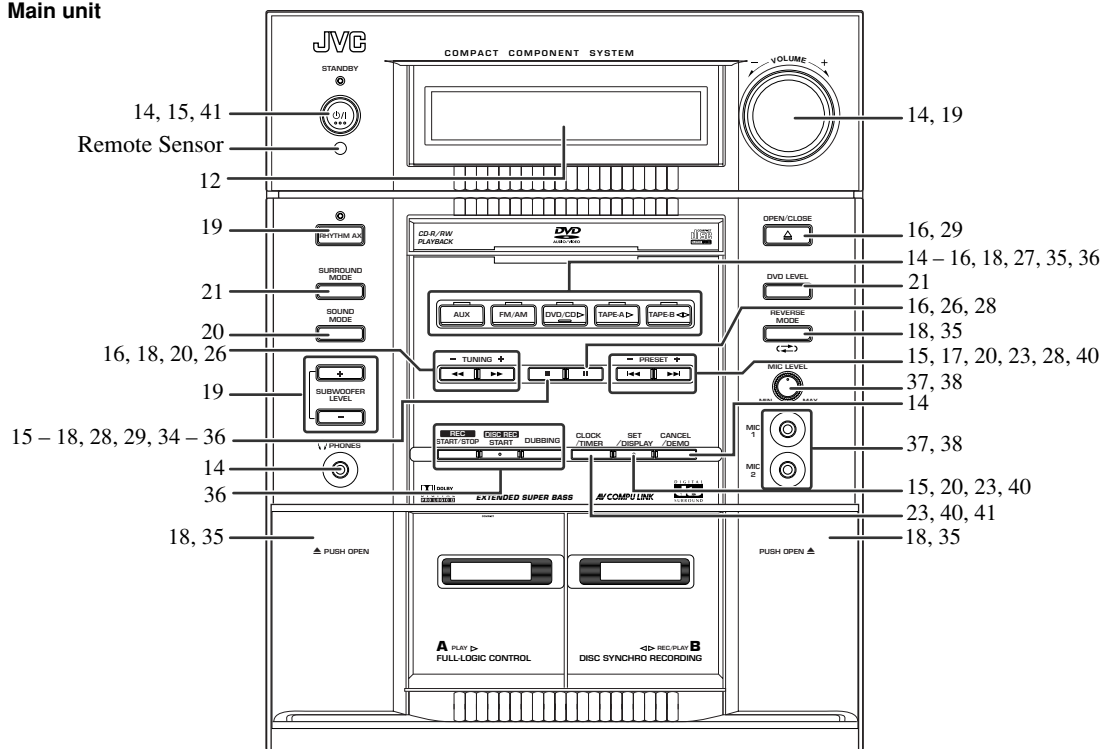

## About the Display Indication

The indications on the display teach you a lot of things while you are operating the System.

Before operating the System, be familiar with when and how the indicator illuminates on the display.

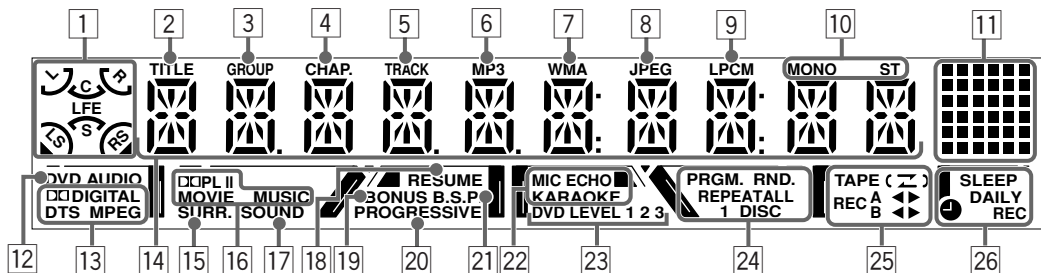

### Indications on the main display

 
- While listening to radio:

Band Preset number Frequency



- While selecting "TAPE" or "AUX IN":


Source name



- While playing a disc:

#### DVD Video:

 Title number Elapsed playing time




Chapter number

- While disc play is stopped:


#### DVD Video:

 Total title number



#### DVD Audio:

 Group number Elapsed playing time




Track number

#### DVD Audio:


 
#### SVCD/VCD/CD:


Disc type\*1 Elapsed playing time\*2



Track number

#### SVCD/VCD/CD:

 
Disc type\*1 Total playing time\*2



Total track number

#### MP3\*3/WMA\*3/JPEG/MPEG-4\*5:

 Group number Elapsed playing time\*4



Track number

#### MP3/WMA/JPEG/MPEG-4:

Current group number



Current track number

\*1 Disc type is displayed with the following abbreviation: "SV (SVCD)", "VD (VCD)", "CD (CD)".



 
 
 
 


\*2 While activating PBC function, "PBC" appears on the display instead of the playing time.

\*3 When you start playing an MP3/WMA track, the track name (and Tag information) will be shown before the elapsed playing time appears.

\*4 While playing back a JPEG disc, "JPEG" appears on the display instead of the elapsed playing time.



\*5 When you start playing an MPEG-4 file, the file name will be shown before the elapsed playing time appears.



- 1 Surround Mode/Source signal indicators
- Surround Mode indicators: light to indicate the current activated speaker.
  - L/C/R/LFE/LS/S/RS: light to indicate the current source signal.
- 2 TITLE indicator
- Lights to indicate the title number when the source is DVD Video.
  - Lights to indicate the group title or track title when MP3/WMA/JPEG/MPEG-4 title is shown on the main display.
- 3 GROUP indicator
- Lights to indicate the group number when the source is DVD Audio or MP3/WMA/JPEG/MPEG-4 disc.
- 4 CHAP. indicator
- Lights to indicate the chapter number when the source is DVD Video.
- 5 TRACK indicator
- Lights to indicate the track number when the source is a disc (except for DVD Video).
- 6 MP3 indicator
- Lights while playing back an MP3 track.
- 7 WMA indicator
- Lights while playing back a WMA track.
- 8 JPEG indicator
- Lights while playing back a JPEG file.
- 9 LPCM indicator
- Lights when a source signal is linear PCM.
- 10 FM reception indicators
- MONO: lights while receiving an FM stereo station in monaural.
  - ST (stereo): lights while an FM stereo station with sufficient signal strength is tuned in.
- 11 Animation indicator
- 12 DVD AUDIO indicator
- DVD: lights when DVD Video is detected.
  - DVD AUDIO: lights when DVD Audio is detected.
- 13 Source signal indicators
-  DIGITAL: lights when a source signal is Dolby Digital.
  - DTS: lights when a source signal is DTS Surround.
  - MPEG: lights when a source signal is MPEG multichannel.
- 14 Main display
- 15 SURR. indicators
- Lights when Surround mode is activated.
- 16 Dolby Pro Logic II indicator
-  PL II: lights when Dolby Pro Logic II mode is activated.
  - MOVIE: lights when Dolby Pro Logic II Movie is activated.
  - MUSIC: lights when Dolby Pro Logic II Music is activated.
- 17 SOUND indicators
- Lights when SEA mode or USER mode is activated.
- 18 RESUME indicator
- Lights when the Resume function is activated (see page 16).
- 19 BONUS indicator
- Lights when DVD Audio with bonus group is detected (see page 26).
- 20 PROGRESSIVE indicator
- Lights when the progressive scanning mode is selected.
- 21 B.S.P. indicator
- Lights when browsable still picture on DVD Audio is available (see page 25).
- 22 Karaoke operation indicators
- MIC: lights when the mic mixing mode is activated (see page 37).
  - ECHO: lights when the echo effect is activated (see page 38).
  - KARAOKE: lights when the Karaoke mode is activated (see page 38).
- 23 DVD LEVEL 1/2/3 indicators
- Lights when the DVD Video is detected.
- 24 Disc operation indicators
- PRGM.: lights when Program Play mode is activated.
  - RND.: lights when Random Play is activated.
  - REPEAT: lights when Repeat Play mode is activated.
  - ALL: lights when All Disc Repeat is activated.
  - 1: lights when One Track/Chapter/Step Repeat is activated.
- 25 Tape operation indicators
- TAPE: lights when a tape is loaded in either A or B.
  -  (reverse mode):
    - : tape play continues endlessly.
    - : tape automatically reverses once.
    - : tape play stops at the end of one side.
  - A: lights when a tape is loaded in the deck A.
  - B: lights when a tape is loaded in the deck B.
  - REC: lights while recording.
  -  (tape direction):
    - Lights to indicate the current tape running direction.
    - Flashes slowly during playback and recording.
    - Flashes quickly while rewinding a tape.
- 26 Timer indicators
- : lights when Sleep Timer is working or Daily Timer or Recording Timer stands by or is working or setting.
  - SLEEP: flashes when the Sleep Timer is activated.
  - DAILY: lights when the Daily Timer stands by; flashes while working or setting.
  - REC: lights when the Recording Timer stands by; flashes while working or setting.

# Daily Operations—Playback

In this manual, the operation using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.

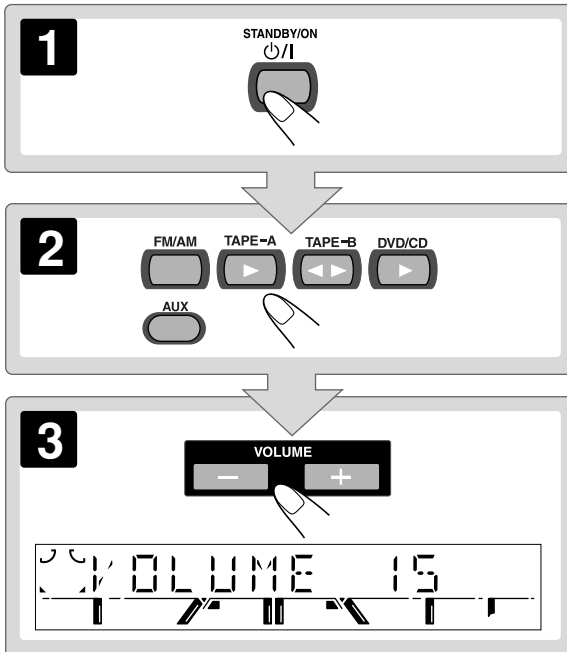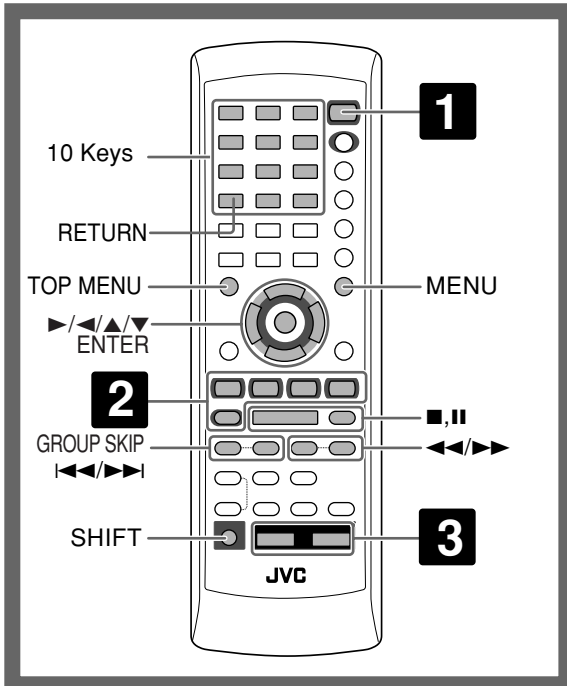

## 1 Turn on the power.

The STANDBY lamp on the main unit goes off.

- Without pressing  $\odot/I$  (STANDBY/ON), the System also turns on by pressing one of the source select buttons in the next step.

## 2 Select the source.

Playback automatically starts if the selected source is ready to start playback.

- If you press AUX, start playback source on the external component.

## 3 Adjust the volume.

## 4 Operate the target source as explained later.

### To turn off (stand by) the system



The STANDBY lamp on the main unit lights in red.

- A small amount of power is always consumed even while on standby.

### For private listening


Connect a pair of headphones to the PHONES jack on the main unit. The sound will no longer come out of the speakers. Be sure to turn down the volume before connecting or putting the headphones.

- Disconnecting the headphones will activate the speakers again.



DO NOT turn off (standby) the System with the volume set to an extremely high level; Otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the System or start playback.

### Canceling the Demonstration

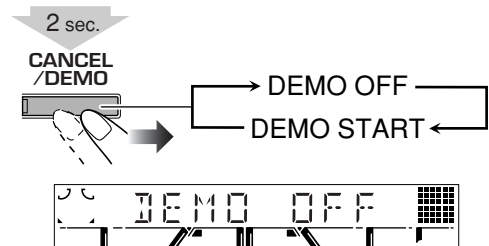

## Listening to the Radio


INFO

### To select the AM tuner interval spacing

Some countries space AM stations 9 kHz apart, and other countries use 10 kHz spacing.


You can change the AM tuner intervals during the unit is turned on.

While AM is selected...

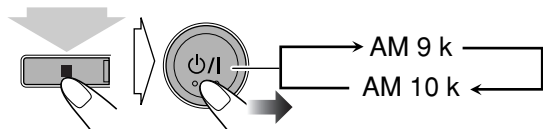


(holding then...)

### To select the band (FM/AM)

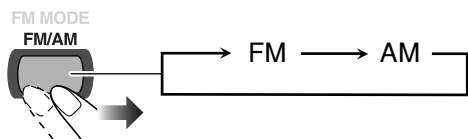

### To tune in to a station

While FM or AM is selected...

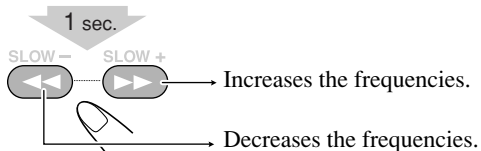


When a station (frequency) with sufficient signal strength is tuned in, the frequency search stops.

To stop searching manually, press either button.

- When you repeatedly press the button, the frequency changes step by step.

### If the received FM station is hard to listen

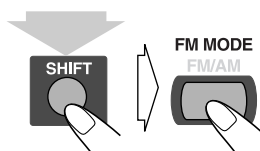

(holding then...)

The MONO indicator lights on the display. Reception will improve though stereo effect is lost—monaural reception mode.


To restore the stereo effect, press the button again (the MONO indicator goes off).

### To preset Stations



You can preset 30 FM and 15 AM stations.


- 1 Tune in to a station you want to preset, then enter into the presetting mode.

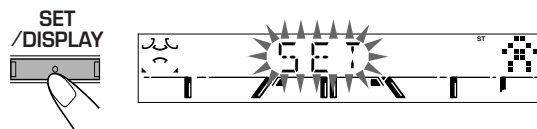

- 2 Select a preset number for the station you store.




- 3 Store the station.

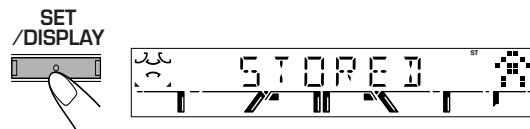


### To turn in to a Preset Station

- 1 Select the band (FM or AM).

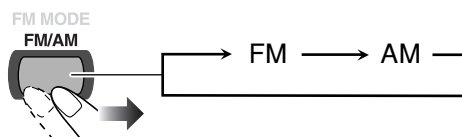

- 2 Select a preset number for the station you store.

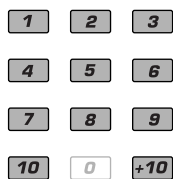

#### Examples:

- To select preset number 5, press 5.
- To select preset number 15, press +10, then 5.
- To select preset number 30, press +10, +10, then 10.

- You can also use buttons on the remote control or the PRESET +/- buttons on the main unit.


## Playing Back a Disc INFO

Before operating a disc, be familiar how a disc is recorded.

- DVD Video comprises of “Titles” which includes “Chapters,” DVD Audio/MP3/WMA/JPEG/MPEG-4 comprise of “Groups” which includes “Tracks,” and CD/SVCD/VCD comprise of only “Tracks.”

For JPEG/MPEG-4 playback, see “Operations on the CONTROL Screen” on page 33.

### To insert discs

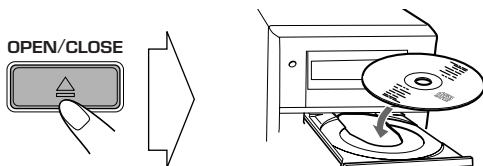

- When using an 8 cm disc, place it on the inner circle of the disc tray.

**To close the disc tray,** press OPEN/CLOSE again.

If you press DVD/CD , disc tray closes automatically and playback starts.

To start:	To pause:	To stop:
	<p>To release it, press DVD/CD .</p>	

**While playing DVD/SVCD/VCD:** This System can store the stop point, and when you start playback again by pressing DVD/CD , it starts from the position where you have stopped—Resume Play. (RESUME indicator lights up when you stop playback.)

**To stop completely while Resume is activated,** press twice. (To cancel Resume, see “RESUME” on page 46.)

### On-screen guide icons

- During disc playback, the following icons may appear for a while on the TV screen:

Appears at the beginning of a scene containing multi-angle views.

Appears at the beginning of a scene containing multi-audio languages.


Appears at the beginning of a scene containing multi-subtitle languages.

- The following icons will be also shown on the TV screen to indicate your current operation.

- To deactivate the on-screen guide icons, see “ON SCREEN GUIDE” on page 46.


### To select a title/group

While playing a disc...

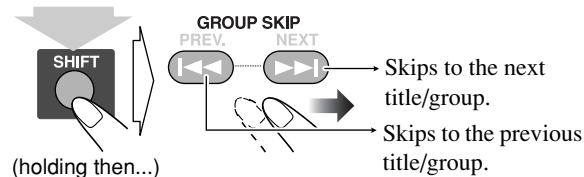


### To select a chapter/track

While playing a disc...

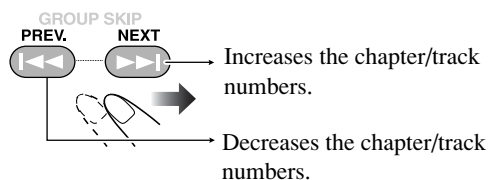

### To locate a particular portion

While playing a disc except WMA/MP3...

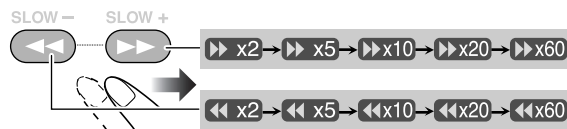

- No sound comes out while searching on DVD/SVCD/VCD.


**To return to normal playback,** press DVD/CD .

## To select an item directly



You can select a title/chapter/track directly and start playback.

For DVD Video, you can select a **title before starting playback**, while you can select a **chapter after starting playback**.

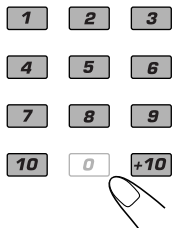

### Examples:

To select number 5, press 5.

To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.

## Playing Back by Using the Disc Menu




You can operate the disc play—DVD and SVCD/VCD with Playback Control (PBC)—using the disc menu shown on the TV screen.


- When an SVCD or VCD with PBC is detected, “PBC” appears on the display instead of the playing time.

### ■ For DVD Video/DVD Audio:

#### 1 Show the disc menu.

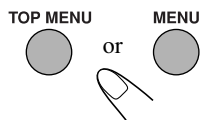

#### 2 Select an item on the disc menu.

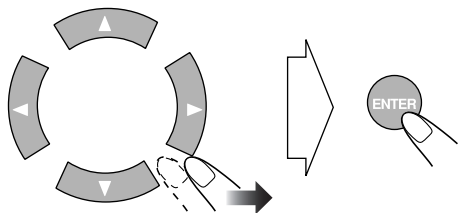


- With some discs, you can also select items by entering the number using the 10 keys.

### ■ For SVCD/VCD with PBC:

While playing a disc with PBC, “PBC” appears on the display.

When disc menu appears on the TV screen, select an item on the menu. Playback of the selected item starts.

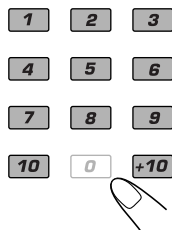


### Examples:

To select number 5, press 5.


To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.


### To move to the next or previous page of the current menu:

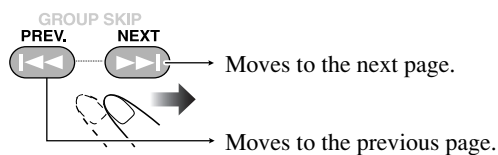

### To return to the previous menu:

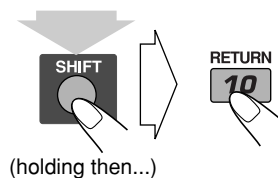

### To cancel PBC

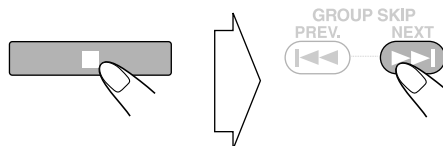

You can also cancel PBC function by pressing the number button to select a track.

To reactivate PBC, press ■, then press ◀◀◀.




## Playing Back a Tape

INFO


### To insert a tape

You can play back type I tapes.


- The use of C-120 or longer tape is not recommended.

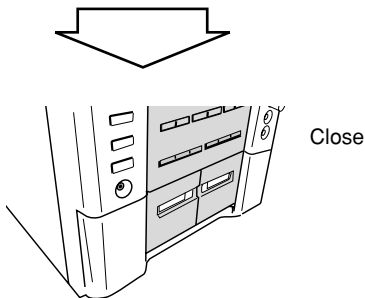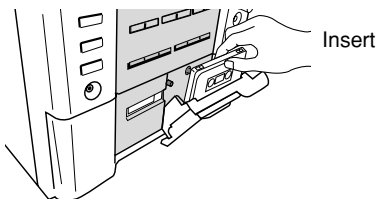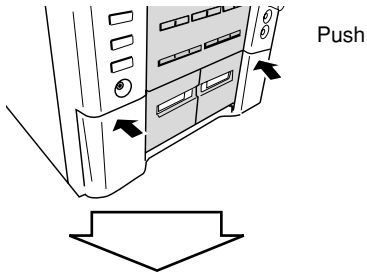

### To change the tape running direction (deck B only)

 


### To reverse the tape automatically (deck B only)

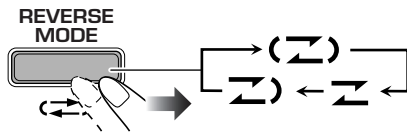


- (↺) Tape is automatically reversed, and playback repeats until you stop it.
- ⌊ Tape will not be reversed. When the current side of the tape reaches its end, playback stops.
- ↻ Tape is automatically reversed once.

### To playback the both decks A and B continuously —Relay Play


When the cassettes are set in the both decks...

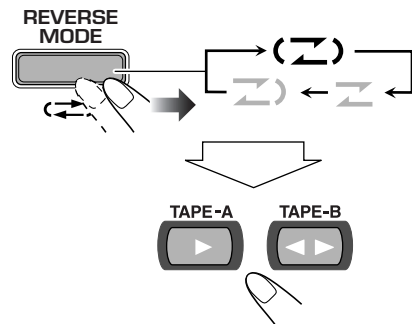

To start:

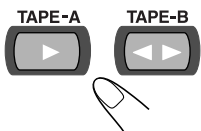


To stop:

 

To rewind tape:

Before or after play...

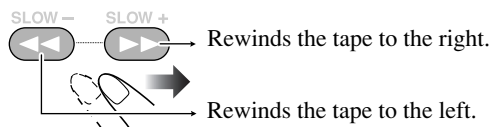


After the tape in deck A finishes playing, the tape in deck B starts playing.


After the reverse (◀) side of the tape in deck B finishes playing, the tape in the deck A rewinds and then starts playing.

# Daily Operations—Sound&Other Adjustments

## Remote Control

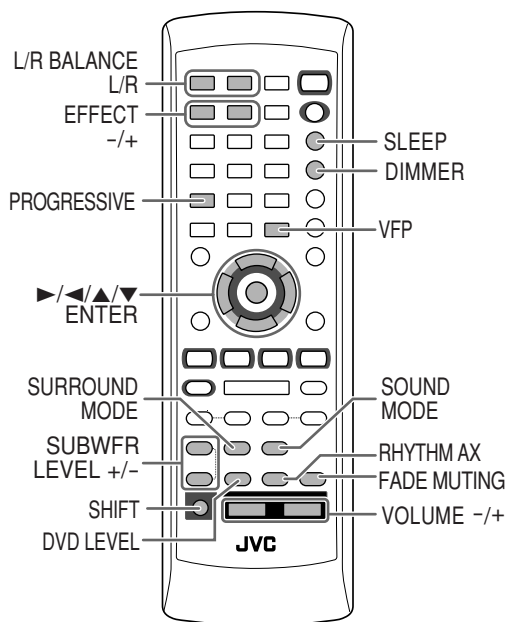


## Main unit

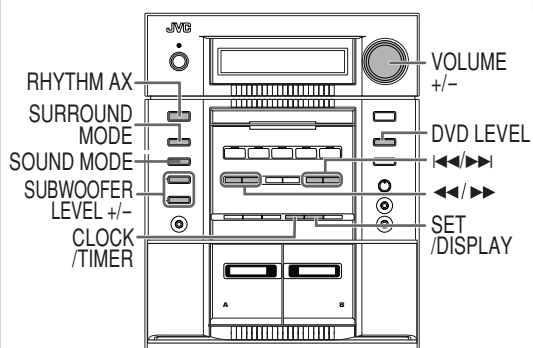

## Adjusting the Volume

INFO

The volume level can be adjusted in 32 steps (VOLUME MIN, VOLUME 1 – VOLUME 30, VOLUME MAX).

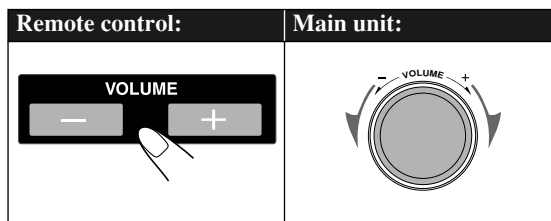

To drop the volume in a moment




To restore the volume, press again, or adjust the volume level.

## Reinforcing the Bass Sound

 
To adjust the bass level gradually

You can select the subwoofer level from level 0 (minimum) to level 4 (maximum).



To emphasize rhythm feeling—RHYTHM AX


This function emphasizes bass attack feeling, and also changes the subwoofer level.

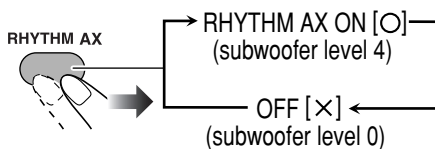

## Adjusting the Front Speaker


### Output Balance

You can adjust the output balance of left front speaker and right front speaker within the range of R (right) -6 (minimum sound level from the right speaker) to L (left) -6.

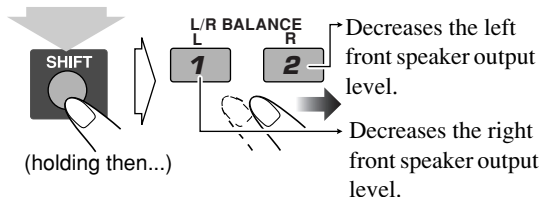

## Selecting the Sound Modes

You can select one of the preset Sound Modes.

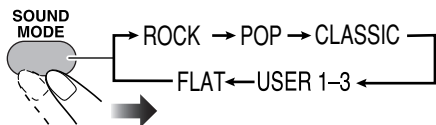


SEA (Sound Effect Amplifier) modes	
<b>ROCK</b>	Boosts low and high frequency. Good for acoustic music.
<b>POP</b>	Good for vocal music.
<b>CLASSIC</b>	Good for classical music.
User modes	
<b>USER 1/2/3</b>	Your individual mode stored in memory. See the next column "Creating Your Own Sound Modes—User Mode."
<b>FLAT</b>	No Sound Mode effect.

## Creating Your Own Sound Modes—User Mode


You can create your own Sound Modes to make sounds suit your taste. The changed settings can be stored as the USER 1, USER 2 and USER 3 modes.

### 1 Select one of the preset Sound Modes.

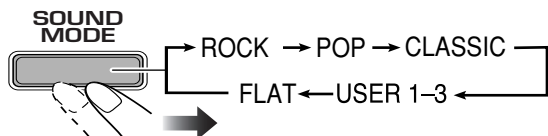


### 2 Enter into the SEA Control Mode.

- You can enter the SEA Control Mode only while the Sound Mode appears on the display.

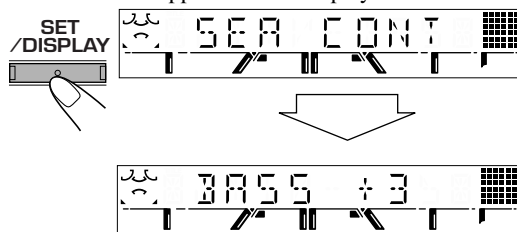


### 3 Adjust the SEA pattern.

- Select one of the tone—BASS or TRE (treble).

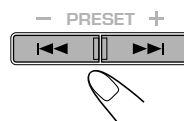


- Adjust the level of the selected tone.

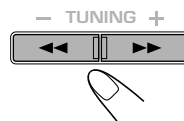


- You can adjust the bass and treble level from -3 to +3.

- Repeat steps ① and ② to adjust the level of the other tone.

 - Finish the SEA pattern setting.



### 4 Select one of the User Modes.

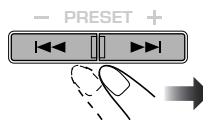

### 5 Finish the setting.






## Using Surround Mode


INFO

### To activate Surround Mode

#### • For DVD/CD

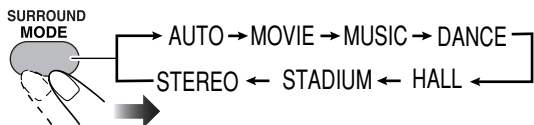

#### • For AUX/FM/AM/TAPE-A/TAPE-B

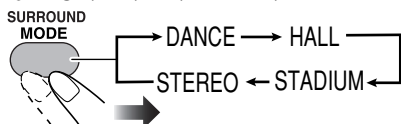

### Auto Surround Mode\*

#### AUTO

- If Multi-channel surround signal comes in, Multi-channel Surround Mode will be selected.
- If Dolby Surround signal comes in, Dolby Pro Logic II MOVIE mode will be selected automatically.
- If 2-channel signal comes in, STEREO mode will be selected.

### Dolby Pro Logic II modes\*

#### MOVIE

Creates 5.1-channel sound field from 2ch source.  
This mode is suitable for movie source.

#### MUSIC

Creates 5.1-channel sound field from 2ch source.  
This mode is suitable for music source.

### DSP modes\*

#### DANCE

Increases resonance and bass.

#### HALL

Adds depth and brilliance to the sound.

#### STADIUM

Adds clarity and spreads the sound, as in an outdoor stadium.

### Stereo mode

#### STEREO


Cancels the Surround Mode.

\* If Multi-channel surround signal comes in, Multi-channel Surround Mode will be selected automatically.

## To adjust the DSP effect level




When one of the DSP modes is selected...

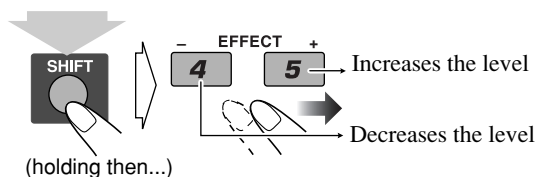

## Presetting Automatic DVD Video Sound

### Increase Level

The DVD Video sound is sometimes recorded at a lower level than for other discs and sources. You can set the increase level for the currently loaded DVD Video, so you do not have to adjust the volume every time you change the source.

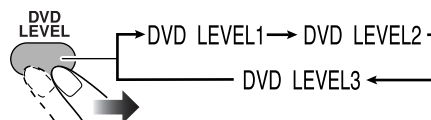

As the number increases, sound level also increases.


## Changing the Scanning Mode



 INFO

This System supports progressive scanning.

If you connect a progressive TV through the COMPONENT jacks, you can enjoy a high quality picture from the built-in DVD player by selecting "PROGRESSIV."



**PROGRESSIV** Progressive scanning. For a progressive TV.

**INTERLACE** Interlaced scanning. For a conventional TV.


- PROGRESSIVE indicator lights on when progressive mode is selected.

## Changing the Picture Tone

While showing a playback picture on the TV, you can select the preset picture tone, or adjust it and store your own likeliness.


### To select a preset picture tone

#### 1 Activate VFP.

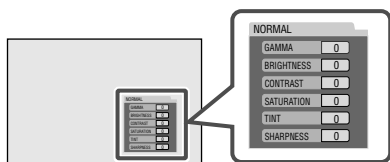

On the TV screen

#### 2 Select a preset picture tone.

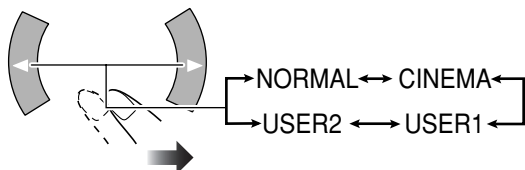


<b>NORMAL</b>	Normally select this.
<b>CINEMA</b>	Suitable for a movie source.
<b>USER1/USER2</b>	You can adjust parameters and can store the settings (see below).

### To adjust the picture tone

#### 1 Select "USER1" or "USER2."


- Follow steps 1 and 2 explained above.

#### 2 Select a parameter you want to adjust.

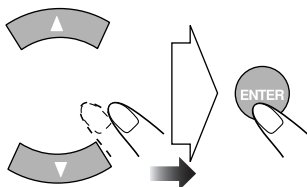

<b>GAMMA</b>	Adjust if the neutral color is bright or dark. The brightness of dark and bright portions is maintained (-3 to +3).
<b>BRIGHTNESS</b>	Adjust if the picture is bright or dark as a whole (-8 to +8).
<b>CONTRAST</b>	Adjust if the far and near position is unnatural (-7 to +7).
<b>SATURATION</b>	Adjust if the picture is whitish or blackish (-7 to +7).
<b>TINT</b>	Adjust if the human skin color is unnatural (-7 to +7).
<b>SHARPNESS</b>	Adjust if the picture is indistinct (-8 to +8).

#### 3 Adjust the parameter.

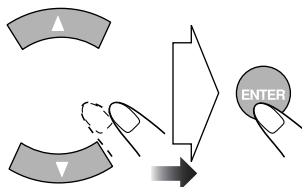


#### 4 Repeat steps 2 to 3 to adjust other parameters.

#### 5 Finish setting.



## Changing the Display Brightness

You can dim the display window.

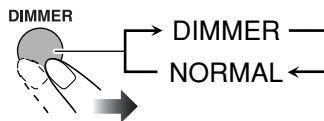

## Setting the Clock




INFO

Without setting the built-in clock, you cannot use Daily/Recording Timers (see page 40) and Sleep Timer (see next column).


- To exit from the clock setting, press CLOCK/TIMER as required.
- To go back to the previous step, press CANCEL/DEMO.

### 1 Activate clock setting mode.

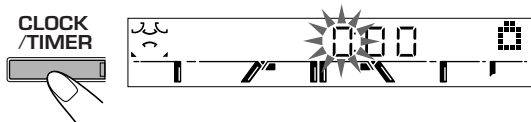


- If you have already adjusted the clock before, press the button repeatedly until the clock setting mode is selected.

### 2 Adjust the hour.

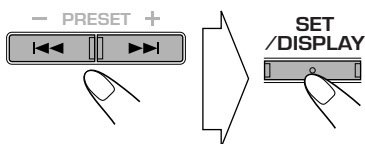


### 3 Adjust the minute.

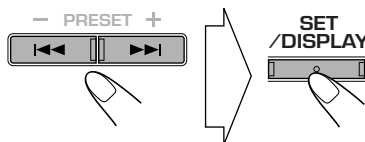

Now the built-in clock starts working.

### To check the current time during play


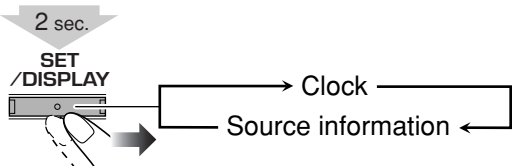


## Turning Off the Power Automatically

Remote ONLY

With Sleep Timer, you can fall asleep listening to music.
  
### 1 Specify the time (in minutes).



### 2 Wait until the set time goes off.


#### To check the time remaining until the shut-off time



- If you press repeatedly, you can change the shut-off time.

# Unique DVD/VCD Operations

## Remote Control

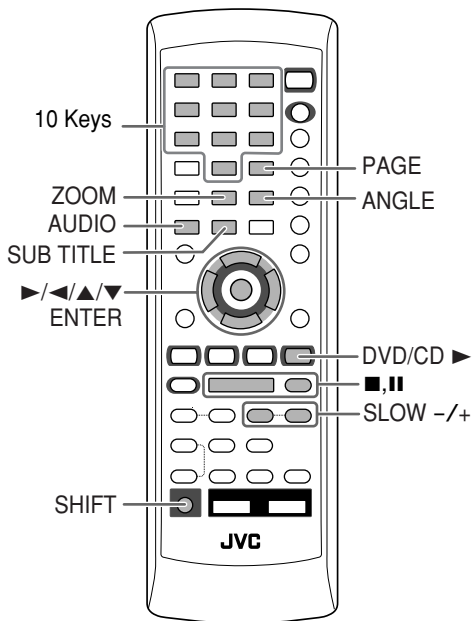

## Selecting the Sound Track Remote ONLY INFO

**For DVD Video:** While playing back a chapter containing audio languages, you can select the language to listen to.

**For DVD Audio:** While playing back a track containing audio channels, you can select the audio channel to listen to.


**For SVCD/VCD:** When playing back a track, you can select the audio channel to play.

- You can also select the audio track using the on-screen bar (see page 31).


### While playing a DVD Video...



Ex.:

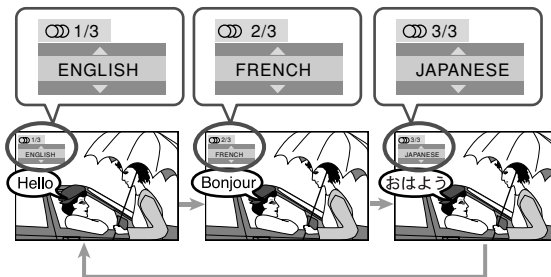

### While playing an SVCD or VCD...

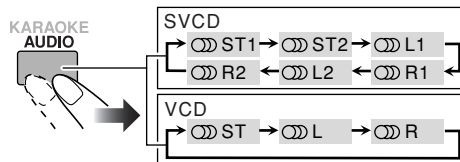

**ST1/ST2/ST** To listen to normal stereo (2 channel) playback.

**L1/L2/L** To listen to the left audio channel.

**R1/R2/R** To listen to the right audio channel.

- SVCD can have 4 audio channels. SVCD usually uses these 4 channels to record two 2-channel recordings (ST1/ST2).

## Selecting the Subtitle Language

 
**For DVD Video:** While playing back a chapter containing subtitles in different languages, you can select the subtitle language to display on the TV screen.

**For SVCD:** While playing, you can select the subtitles even if no subtitles are recorded on the disc.


- You can also select the subtitle language using the on-screen bar (see page 31).

**While playing a DVD Video...**


### 1 Display the subtitle selection window.




### 2 Select the subtitle language.

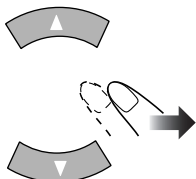

**Ex.:**

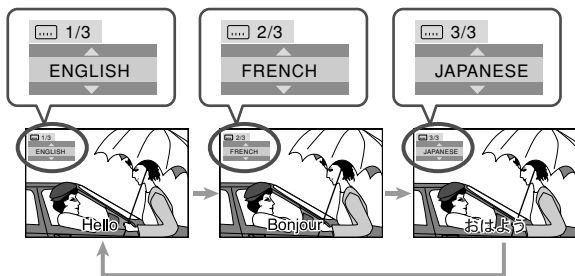

**While playing an SVCD...**

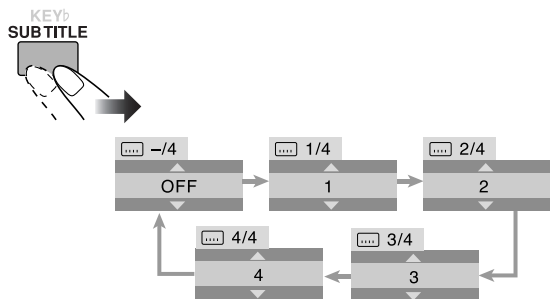


## Selecting a View Angle


While playing back a chapter (of DVD Video) containing multi-view angles, you can view the same scene from different angles.

- You can also select the view angle using the on-screen bar (see page 31).

 **While playing back or paused...**




**Ex.:**

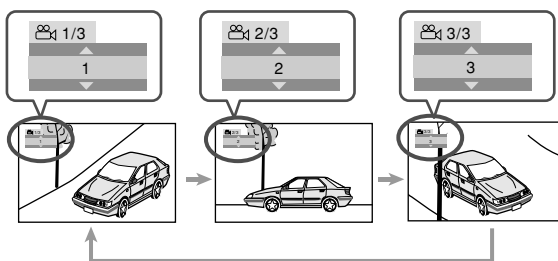

## Selecting a Still Pictures on a DVD Audio

While playing back a track (of DVD Audio) linked to browsable still pictures (B.S.P.), you can select the still picture (turn the page) to be shown on the TV screen.

- If a track is linked to browsable still pictures (B.S.P.), they are usually shown in turn automatically during playback.
- You can also select the page using the on-screen bar (see page 31).

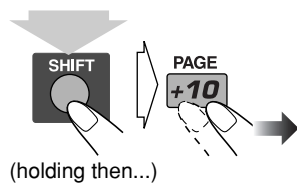

(holding then...)

Each time you press the button, the still picture changes one after another (if available).

## Playing Back a Bonus Group

### on a DVD Audio


Some DVD Audios have a special group called “bonus group” whose contents are not open to the public.

- To play back a bonus group, you have to enter the specific “key number” (a kind of password) for the bonus group. The way of getting the key number depends on the disc.


#### 1 Select the bonus group.

- The bonus group is usually recorded as the last group (for example, if a disc contains 4 groups including a bonus group, “group 4” is the bonus group).
- For how to select the group, see “To select a title/group” on page 16.

#### 2 Enter the key number.

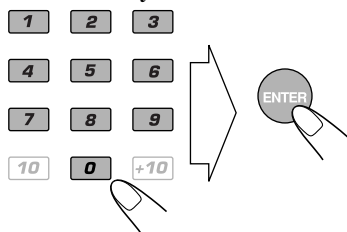



#### 3 Follow the interactive instruction shown on the TV screen.

To cancel the key number entry, press  or change to another source.

## Special Picture Playback
 
### Still picture playback

To start still picture playback:	To resume normal playback:
While playing... 	

### Frame-by-frame playback


#### 1 While playing...



Still picture playback starts.

#### 2 Advance the still picture frame by frame.



To resume normal playback, press DVD/CD .



## Slow-motion playback

#### 1 While playing...




Still picture playback starts.

#### 2 Select slow motion speed.

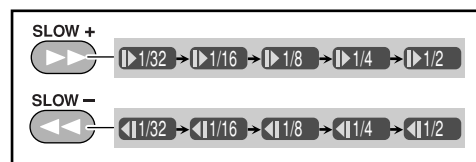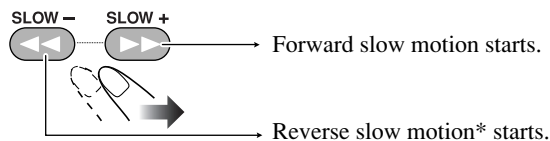


\*Only for DVD Video.

To resume normal playback, press DVD/CD .


## Zoom

#### 1 While playing back...

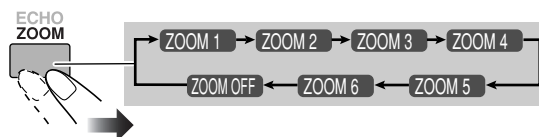

As the number increases, magnification also increases.


#### 2 Move the zoomed-in position.

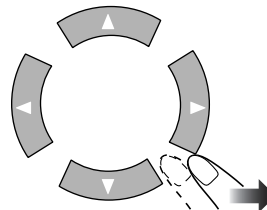


To resume normal playback, press ZOOM repeatedly until “ZOOM OFF” appears on the TV screen.

# Advanced Disc Operations

## Remote Control

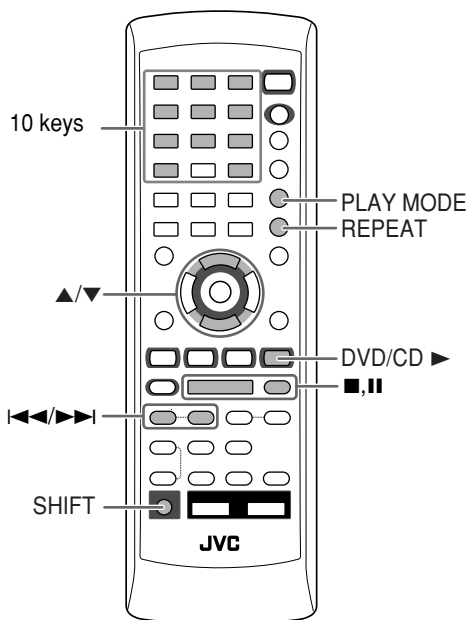

## Main unit


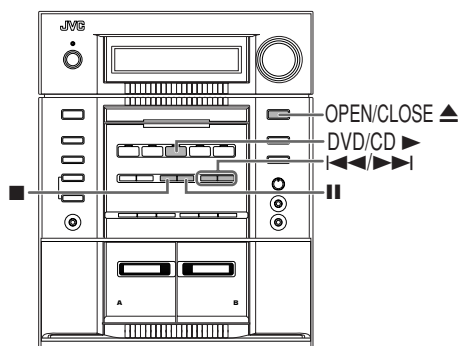


## Programming the Playing Order Remote ONLY

### —Program Play INFO

You can arrange the playing order of the tracks (up to 99) before you start playback.

#### 1 Before starting playback, activate Program Play.

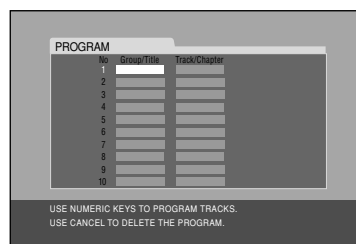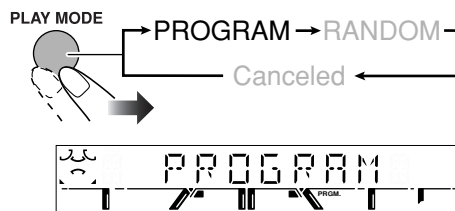

On the TV screen

#### 2 Select chapters or tracks you want for Program Play.


##### • For DVD/MP3/WMA:

- ① Select a title or group number.
- ② Select a chapter or track number.

##### • For SVCD/VCD/CD:

- ① Select a track number.

#### To enter the numbers:

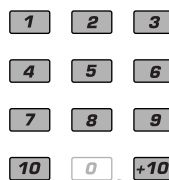

#### Examples:

To enter number 5, press 5.  
To enter number 15, press +10, then 5.  
To enter number 30, press +10, +10, then 10.

#### 3 Repeat the above step 2 until you finish what you want to program.

#### 4 Start playback.




Playback starts in the order you have programmed.

To skip a track:	To pause:	To stop:
<p>GROUP SKIP</p> <p>PREV. NEXT</p>	<p>To release, press DVD/CD ►.</p>	

**To check the programmed contents** 

Before or after playback...

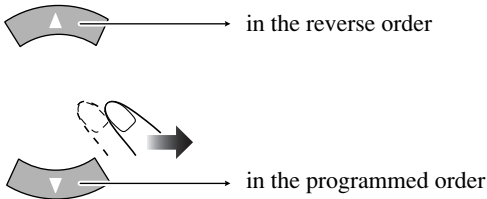

**To modify the program** 

Before or after playback...

To erase the last step:	To erase the entire program:
<p>(holding then...)</p>	<p>You can also use ■ button on the unit.</p>
<p><b>To add steps in the program:</b></p> <p>Repeat step 2 on page 27.</p>	

**To exit from Program Play**


Before or after playback...



**Playing at Random—Random Play** 

You can play the contents of all tracks at random.

**1 Before starting playback, activate Random Play.**

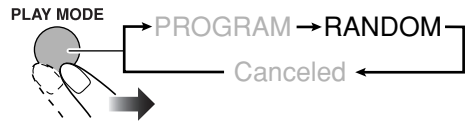

**2 Start playback.**



Playback starts in a random order. Random Play ends when all chapters/tracks are played.

To skip:	To pause:	To stop:
<p>To go to the beginning of the current track, press ◀◀.</p>	<p>To release, press DVD/CD ►.</p>	

**To exit from Random Play**

Before or after playback...





## Playing Repeatedly

 
- You can also select the repeat mode using the on-screen bar (see page 31).

### Repeat Play

You can repeat playback.


#### • For DVD Video:

While playing...




#### • For DVD Audio:

 While playing or before playback...




#### • For CD/SVCD/VCD:

 While playing (without PBC for SVCD/VCD) or before playback...




#### • For MP3/WMA:

 While playing or before playback...




#### • For MPEG-4:

 While playing or before playback...



#### • For Program Play/Random Play mode:

 While playing or before playback...



<b>CHAP</b>	Repeats the current chapter.
<b>TITLE</b>	Repeats the current title.
<b>TRACK</b>	Repeats the current track.
<b>GROUP</b>	Repeats the current group.
<b>ALL</b>	Repeats all tracks or all programmed tracks.
<b>STEP</b>	Repeats the current track.
<b>OFF</b>	Selects to cancel Repeat Play mode.


## Prohibiting Disc Ejection

### —Child Lock

You can lock the disc tray so that no one can eject the loaded disc.

- This operation is possible only when the source is the disc player.


While the disc tray is closed...

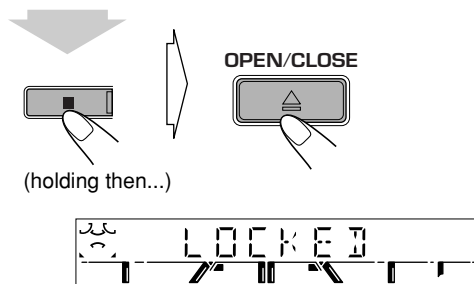

To cancel the prohibition, repeat the same procedure. "UNLOCKED" appears on the display.


# On-Screen Disc Operations

## Remote control

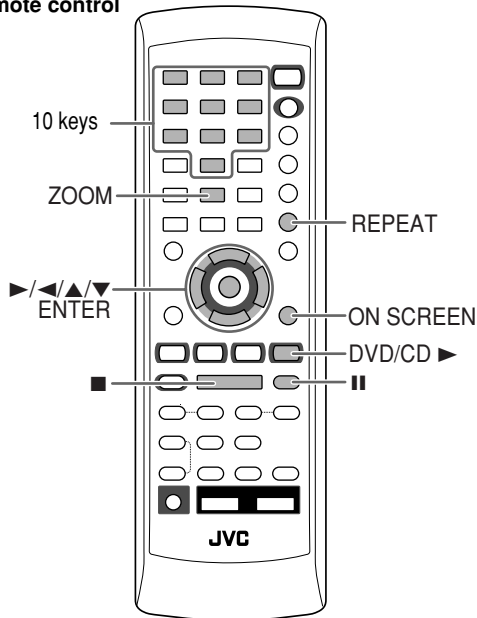


## On-screen bars
 
### DVD Video



### DVD Audio

 

### SVCD



### VCD



### CD



## About the On-screen Bar

You can check the information on disc (except for MP3/WMA/JPEG/MPEG-4 disc) and use some functions through the on-screen bar.

### 1 Disc type

### 2 Playback information

#### Indication Meanings

Mbps Current transfer rate (Megabits per second)

TITLE 2 Current title

CHAP 3 Current chapter

GROUP 1 Current group

TRACK 14 Current track

TOTAL 1:25:58 Time indications

### 3 Playback conditions

#### Indication Meanings

- Playback
- Forward/Reverse search
- Forward/Reverse slow-motion
- Pause
- Stop

### 4 Operation icons (on the pull-down menu)

#### Indication Meanings

- Select to change the time indication (see also page 31).
- Select to repeat playback (see also pages 29, 31, and 32).
- Select for time search (see also page 32).
- Select for chapter search (see also page 33).
- Select for track search (see also page 33).
- Select to change the audio language or channel (see also page 24).
- Select to change subtitle language (see also page 25).
- Select to change the view angle (see also page 25).
- Select to change the page (see also page 25).

## Operations Using the On-screen Bar




INFO

Basic operation procedure through the on-screen bar is as follows:


**While a disc is selected as the source...**

Ex.: Selecting a subtitle (French) for DVD Video:

### 1 Display the on-screen bar with the pull-down menu.

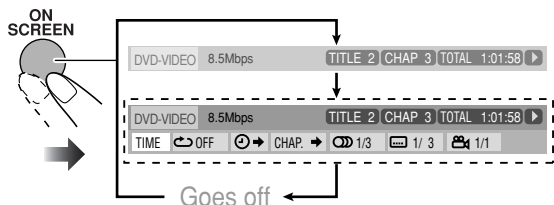



### 2 Select (highlight) the item you want.

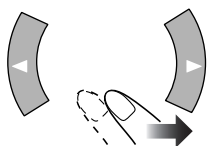

### 3 Display the pop-up window.


 
### 4 Select the desired option in the pop-up window.

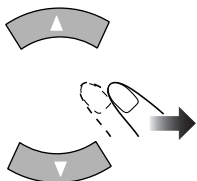

### 5 Finish the setting.



Pop-up window goes off.

### To erase the on-screen bar



## Changing the time information

 
You can change the time information in the on-screen bar and the display window on the main unit.

### 1 Display the on-screen bar with the pull-down menu.



### 2 Make sure [TIME] is selected (highlighted).

### 3 Change the time indication.



<b>TOTAL</b>	Elapsed disc time.
<b>T.REM</b>	Remaining disc time.
<b>TIME</b>	Elapsed playing time of the current chapter/track.
<b>REM</b>	Remaining time of the current chapter/track.

### To erase the on-screen bar



## Repeat Play

• See also page 29.

### 1 While playing a disc (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.

### 2 Select [OFF].

### 3 Display the pop-up window.



### 4 Select the repeat mode you want.

<b>ALL</b>	Repeats the disc (except for DVD).
<b>A-B</b>	Repeats a desired portion (see page 32).
<b>TITLE</b>	Repeats the current title.
<b>GROUP</b>	Repeats the current group.
<b>CHAPTER</b>	Repeats the current chapter.
<b>TRACK*</b>	Repeats the current track.
<b>OFF</b>	Cancels Repeat Play.

\* During Program Play or Random Play, "STEP" appears.

5 Finish the setting.



Pop-up window goes off.

To cancel Repeat Play, select "OFF" in step 4.

A-B Repeat

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select [OFF].
- 3 Display the pop-up window.



4 Select "A-B".



5 Select the start point (A).



 
- Before pressing ENTER, you can search for the end point using ►►.

6 Select the end point (B).



A-B Repeat starts. The selected portion plays repeatedly.

To erase the on-screen bar



Time Search


You can move to a particular point by specifying the elapsed playing time from the beginning.

- 1 While playing (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.
  - Except for DVD: Time Search can be used before starting playback.
- 2 Select [Time Search icon].
- 3 Display the pop-up window.



4 Enter the time.

You can specify the time in hours/minutes/seconds.

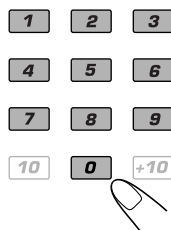

Examples:

To move to a point of 1 (hours): 02 (minutes): 00 (seconds), press 1, 0, 2, 0, then 0.

To move to a point of 54 (minutes): 00 (seconds), press 0, 5, 4, 0, then 0.

- It is always required to enter the hour digit (even "0" hour), but it is not required to enter trailing zeros (the last two digits in the examples above).
- To correct a misentry, press cursor ◀ to erase the last entry.

5 Finish the setting.



The System starts playing from the specified time.

To erase the on-screen bar




## Chapter/Track Search

You can search for the chapter (DVD Video) or track (DVD Audio) number to play.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **CHAP. →** or **TRACK →**.
- 3 Display the pop-up window.



- 4 Enter the desired chapter/track number.

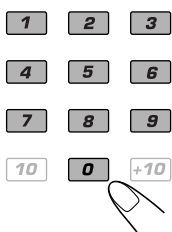

### Examples:

To select chapter/track 5, press 5.

To select chapter/track 15, press 1, then 5.

To select chapter/track 30, press 3, then 0.

 
- To correct a misentry, press the 10 keys until the desired number shown in the pop-up window.

- 5 Finish the setting.



The System starts playing the searched chapter or track.

To erase the on-screen bar



## Operations on the CONTROL



### Screen

INFO

The CONTROL screen automatically appears on the TV screen when you load an MP3, WMA, JPEG, or MPEG-4 disc.

You can search for and play the desired tracks through the CONTROL screen.

- If more than two types of files (MP3/WMA files, JPEG files, and MPEG-4 files) are recorded on a disc, select the file type to play (see page 44).


**CONTROL screen**

Ex.: When the MP3 disc is loaded.


Group	Track
Blue	Cloudy.mp3
Red	Fair.mp3
Green	Fog.mp3
	Hail.mp3
	Indian summer.mp3
	Rain.mp3
	Shower.mp3
	Snow.mp3
	Thunder.mp3
	Typhoon.mp3
	Wind.mp3
	Winter sky.mp3

- 1 Current group number/total group number
- 2 Current group
- 3 Group list
- 4 Current track
- 5 Track information (Tag information: only for MP3/WMA)
- 6 Repeat Play setting
- 7 Elapsed playing time of the current track (only for MP3/WMA)
- 8 Operation mode icon
- 9 Current track number/total number of tracks in the current group (total number of tracks on the loaded disc)
- 10 Highlight bar
- 11 Track list

## To move the highlight bar between group list and track list

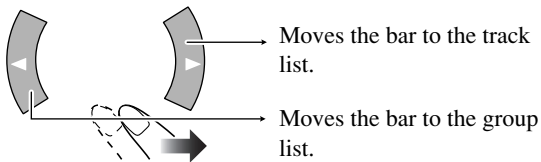

## To select a group/track in the list

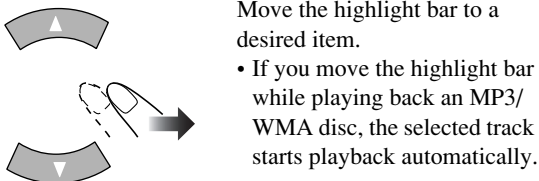


## To start playback

For MP3/WMA/MPEG-4:	
	Playback starts with the selected track. • Pressing DVD/CD ► also starts playback.
For JPEG:	
	The selected track (still picture) is displayed until you change it.
	Slide-show playback starts. Each track (still picture) is shown on the screen for a few seconds, then changes one after another.


- Once you start playing back a JPEG/MPEG-4 track, the CONTROL screen goes off.
- While playing back an MPEG-4 track, you can use ON SCREEN button to show the following information on the display:
  - Repeat Play setting
  - Elapsed playing time of the current track
  - Operation mode icon
- To cancel slide-show, and display the current still picture, press **II**.
 
## To stop playback



## To repeat slide-show for JPEG

 While playing or before starting playback or...




<b>GROUP</b>	Repeats the current group.
<b>ALL</b>	Repeats all disc.

- For Repeat Play of MP3/WMA/MPEG-4, see page 29.

## To zoom in the still picture


For JPEG: While playback is paused...

For MPEG-4: While playing back...

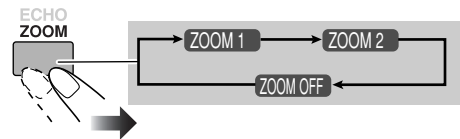

As the number increases, magnification also increases.


## To move the zoomed-in position

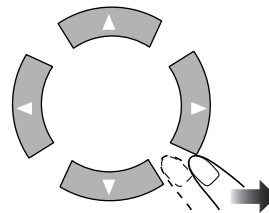

To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

# Advanced Tape Operations

## Main unit

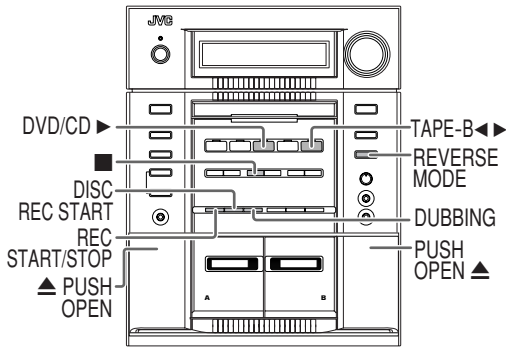

### IMPORTANT

It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

## Recording on a Tape




INFO


You can use type I tapes for recording.

- To play a tape, see page 18.


### 1 Insert a recordable cassette in deck B.

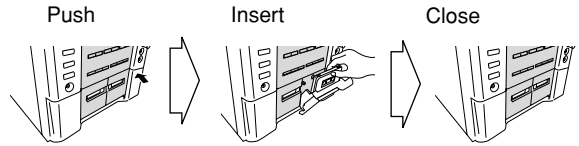


### 2 Check the tape running direction and Reverse Mode settings on the display.

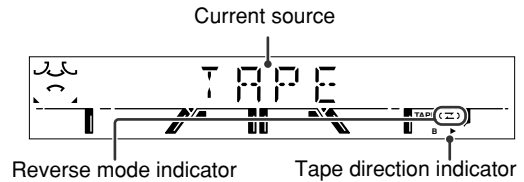

### To change the direction

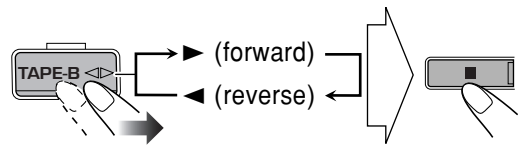

### Change the Reverse mode if necessary

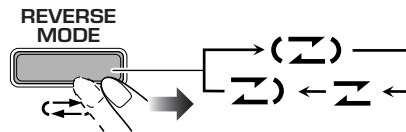

 	To record on both sides. • When using Reverse Mode, start recording in the forward (▶) direction.
	To record on only one side.


### 3 Start playing the source—"FM," "AM," "DVD/CD," "TAPE-A" or "AUX."

- When recording a disc, you can also use "Synchronized Disc Recording" (see the right column).

### 4 Start recording.




### To stop recording

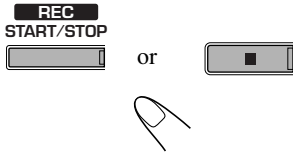

## Dubbing Tapes



### 1 Change the source to TAPE.

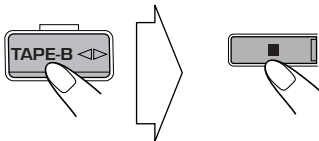

### 2 Insert the source cassette in deck A, and a recordable cassette in deck B.

### 3 Check the tape running direction and Reverse Mode settings on the display.

 
See step 2 of "Recording on a Tape" on page 35.

### 4 Start dubbing.



- When either tape playback or recording ends, both cassette decks stop at the same time.

### To stop dubbing



## Synchronized Disc Recording



INFO

You can start and stop both disc play and tape recording at the same time.

### 1 Load a disc and insert a recordable cassette.

- If the current playing source is not the disc player, press DVD/CD ►, then ■.

### 2 Check the tape running direction and Reverse Mode settings on the display.

- See step 2 of "Recording on a Tape" on page 35.

### For recording desired tracks on discs:

You can program tracks to record with your preferred order.

- Select Program Play (and make a program (see page 27)) without starting playback.

### 3 Start recording.



The System automatically creates 4-second blanks between the tunes recorded on the tapes.

- When either disc play or recording ends, both disc player and the cassette deck stop at the same time.

## To record without creating a 4-second blank

### 1 Press DVD/CD ►, then press II.

### 2 Press ◀◀ to go back to the beginning of the track.

### 3 Start recording.

 
### To protect your recording

Cassettes have two small tabs on the back to protect from unexpected erasure or re-recording.

To protect your recording, remove these tabs.




To re-record on a protected tape, cover the holes with adhesive tape.






# Enjoying Karaoke

## Remote control

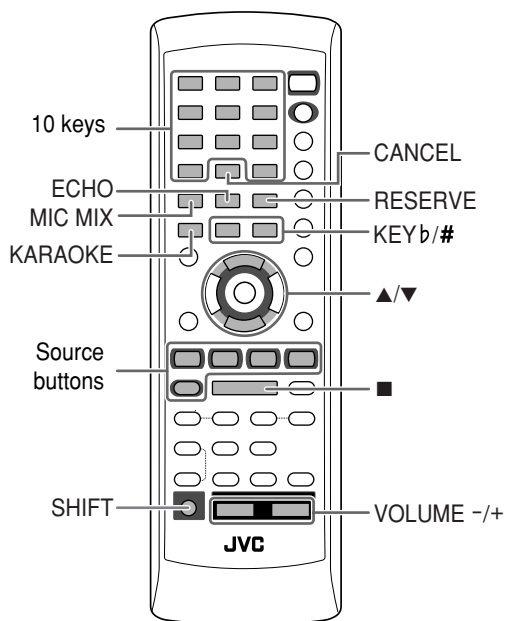

## Main unit

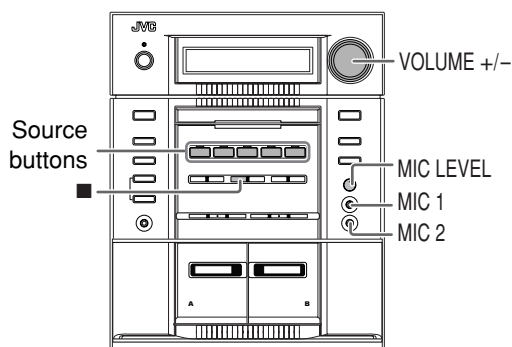

### IMPORTANT

- Always set MIC LEVEL to MIN when connecting or disconnecting the microphone.
- MIC LEVEL adjustment is valid for both microphones connected to the MIC 1 and MIC 2 jacks.



DO NOT keep the microphones connected while they are not in use.

## Microphone Mixing

INFO

You can enjoy microphone mixing while playing any source.

When Mic mixing mode is activated, you can use two microphones connected the MIC jack.


### 1 Turn MIC LEVEL to MIN.




### 2 Connect the microphone(s) (not supplied) to the MIC 1 and/or MIC 2 jack.

### 3 Start playing the source—FM, AM, disc player, tape, or auxiliary equipment connected to the AUX IN jacks.

### 4 Activate the Mic mixing mode.

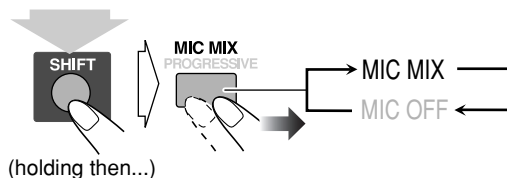


### 5 Adjust the MIC LEVEL and VOLUME.

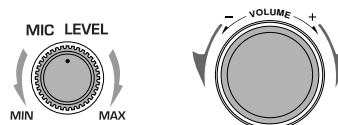

To cancel from the Mic mixing mode, select "MIC OFF" in step 4.


## To use microphone only
 
### 1 Turn MIC LEVEL to MIN.




### 2 Connect the microphone(s) (not supplied) to the MIC 1 and/or MIC 2 jack.


### 3 Select disc player, then stop playback.

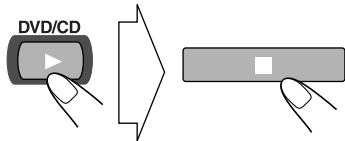

### 4 Activate the Mic mixing mode.

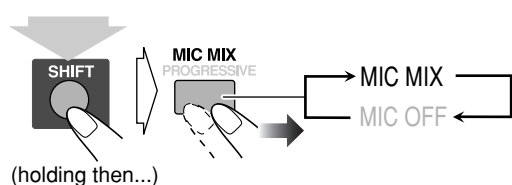


### 5 Adjust the MIC LEVEL and VOLUME.

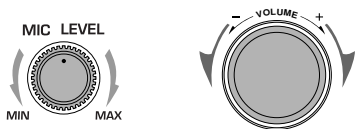

To cancel from the Mic mixing mode, select "MIC OFF" in step 4.

## To apply an echo to your voice

During Mic mixing mode is activated...

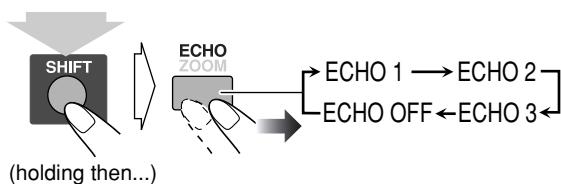


- As the number increases, echo level also increases.

## Singing Along (Karaoke) INFO

 You can enjoy singing along (Karaoke) and microphone mixing by using two microphones. Karaoke mode is vocal masking mode. The vocal masking reduces the lead vocal of any disc (except for DVD Audio/MPEG-4) source, and allows you to replace it by singing into the microphones as the music plays. If the playing disc is a multiplex Karaoke disc, you can enjoy multiplex sound by press AUDIO (see page 24).

### 1 Turn MIC LEVEL to MIN.




### 2 Connect the microphone(s) (not supplied) to the MIC 1 and/or MIC 2 jack.


### 3 Start playback.




### 4 Activate the Mic mixing mode.

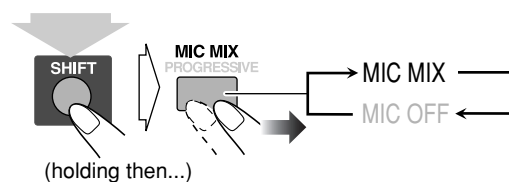

### 5 Activate the Karaoke mode.

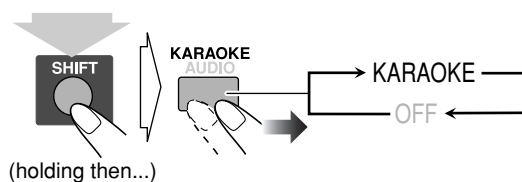


### 6 Adjust the MIC LEVEL and VOLUME.

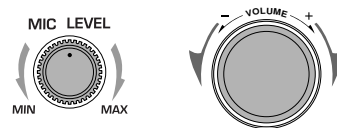

To cancel from the Karaoke mode, select "OFF" in step 4 or change the source to play.

## To adjust the Key (disc playback only)

While playing back a disc...

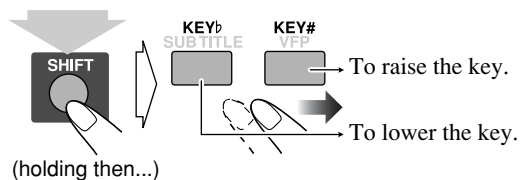


## Reserving Karaoke Songs

### —Karaoke Program Play




You can determine the playback order of the titles or tracks on the disc player. You can program up to 12 steps.

#### 1 Change the source to the “DVD/CD.”

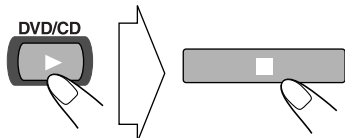

#### 2 Activate Karaoke Program mode.

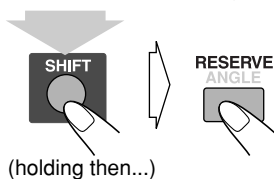

No	Gr/Tt	Tr/Chap
1		
2		
3		
4		
5		

On the TV screen

- PRGM. indicator flashes during this mode.

#### 3 Select songs you want for Karaoke program play.

For DVD Video/MP3/WMA:

- Press the number buttons to select a title (DVD Video) or group (MP3/WMA).
- Repeat step ① to select a chapter (DVD Video) or track (MP3/WMA).

For SVCD/VCD/CD:

Press the number buttons to select a track.

1 2 3

**Examples:**

4 5 6

To select number 5, press 5.


7 8 9

To select number 15, press +10, then 5.

10 0 +10

To select number 30, press +10, +10, then 10.


#### 4 Activate the Mic mixing mode.

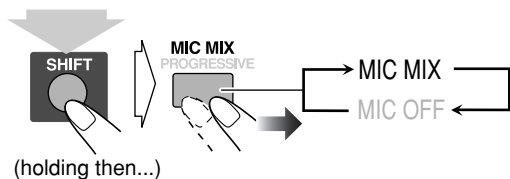

#### 5 Start playback.



#### To check the programmed contents

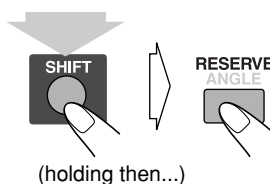


The Karaoke reserve screen appears.


#### To modify the program

While the Karaoke reserve screen is shown on the TV...

##### To erase the unwanted step:

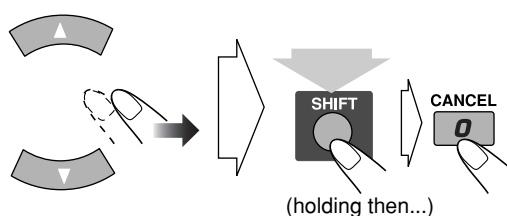

##### To erase the entire program:

 


##### To add steps in the program:

Repeat step 3.

# Timer Operations

Main unit

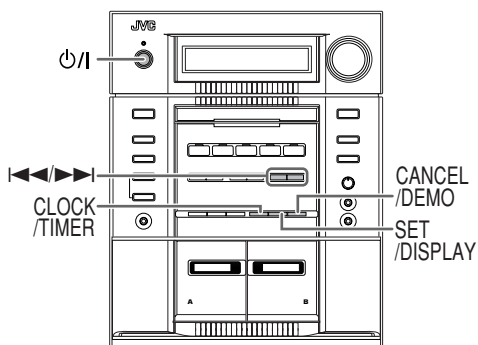

## Setting the Timer

 



INFO


Using Daily Timer, you can wake up with your favorite song. On the other hand, with Recording Timer, you can make a tape of a radio broadcast automatically.

- To correct a misentry during the process, press CANCEL/DEMO. You can return to the previous step.

**1** Select one of the timer setting modes (TIMER(ON)) you want to set—Daily Timer or Recording Timer.

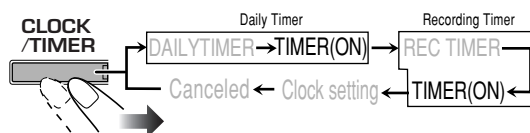

**2** Make the timer setting as you want.

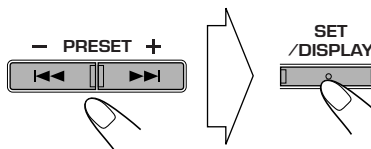

Repeat the procedure until you finish setting in the following order:

- Set the hour then minute for on-time.
- Set the hour then minute for off-time.
- For Daily Timers: Select the playback source—“TUNER FM,” “TUNER AM,” “DISC,” “TAPE-A,” “TAPE-B” or “AUX IN.”

For Recording Timer: Select the playback source—“TUNER FM” or “TUNER AM.”



EX.: When “TUNER FM” is selected.

- Select a preset station for “TUNER FM” and “TUNER AM,” or select a group and track number for “DISC.”
- For Daily Timers: Select the volume level.
  - You can select the volume level (“VOLUME 5,” “VOLUME 10,” “VOLUME 15” and “VOLUME --”). If you select “VOLUME --,” the volume is set to the last level when the system has been turned off.

- 3 Turn off the System (on standby) if you have set the timer with the System turned on.**



### How Daily Timer actually works

Once the Daily Timer has been set, the timer (🕒) indicator and DAILY indicator are lit on the display. Daily Timer is activated at the same time everyday until the timer is turned off manually (see the next column).

#### When the on-time comes

The System turns on, tunes in to the specified station or starts playing the specified source, and sets the volume level to the preset level.

#### When the off-time comes

The System stops playback, and turns off (standby).  
 • The timer setting remains in memory until you change it.

### How Recording Timer actually works

When Recording Timer has been set, Timer (🕒) indicator and the REC indicator are lit on the display. Recording Timer works only once.

#### When the on-time comes

The System turns on, tunes in to the specified station, sets the volume level to "VOLUME MIN," and starts recording.

#### When the off-time comes

The System stops recording, and turns off (standby).  
 • The timer setting remains in memory until you change it.


Even if the System is power on condition and selected other source, Recording Timer will be activated.

## To turn off the Timer after its setting is done


You can turn off the timer after it has been set.

- Since Daily Timer is activated at the same time everyday, you may need to cancel it on some particular days.

- 1 Select the timer you want to cancel (DAILYTIMER or REC TIMER) you want to cancel.**

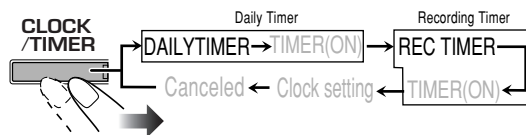


- 2 Turn off the selected timer.**

 

- The timer (🕒) indicator goes off.


**To turn on the timer again, repeat the step 1 and press SET/DISPLAY.**

 

## Timer Priority INFO


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps.

- Recording Timer has priority over the Daily Timer and Sleep Timer (see page 23).

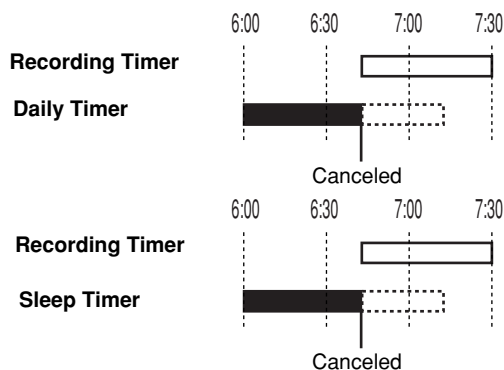

# Set up Menu Operations


## Remote control

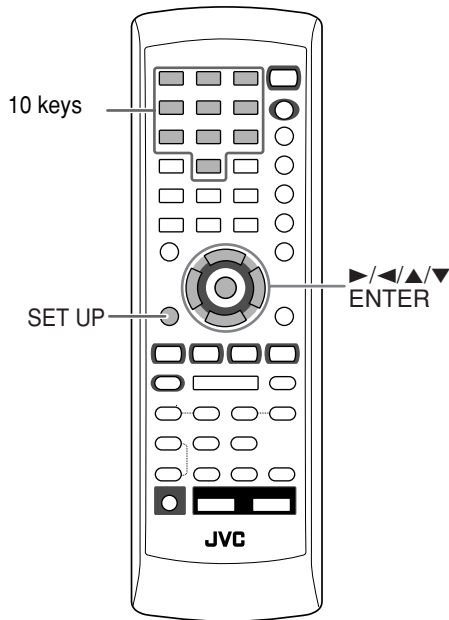

## Set up Menu Icons

The icon for the selected Set up Menu will be highlighted.

Ex.: LANGUAGE Set up Menu is selected.

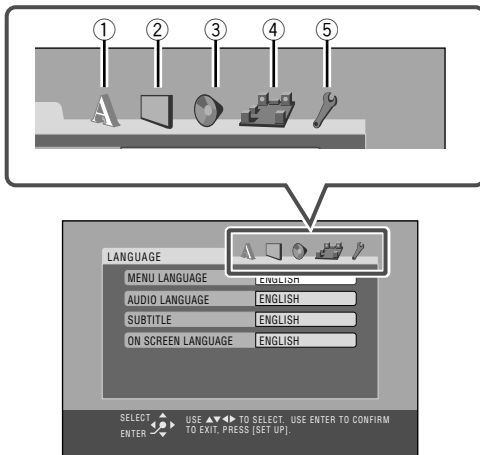

- ① LANGUAGE Set up Menu
- ② PICTURE Set up Menu
- ③ AUDIO Set up Menu
- ④ SPK. SETTING Set up Menu
- ⑤ OTHERS Set up Menu

## Operating Procedure

Remote ONLY



You can use the Set up Menus only when a disc is selected as the source and its playback is not yet started.

Ex.: Selecting "STILL PICTURE" for "FILE TYPE":



### 1 Show the set up menu.




### 2 Select one of the set up menus.

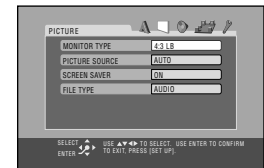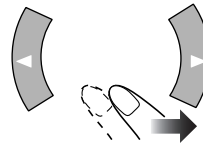



### 3 Select the item you want to adjust.

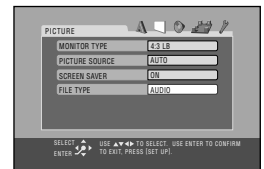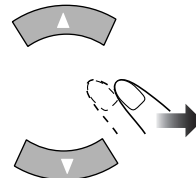

### 4 Display the pop-up window.

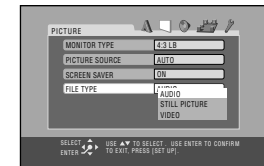

### 5 Select the desired option in the pop-up window.

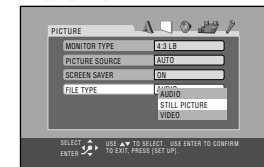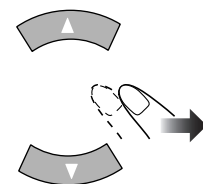

### 6 Finish the setting.



- 7** Repeat steps 3 to 4 to set other items on the same Setup Menu.  
Repeat steps 2 to 4 to set other items on another Setup Menu.

### To finish the Set up Menu


SET UP



## ■ LANGUAGE Set up Menu

INFO

You can select the initial languages for disc playback. You can also select the language shown on the TV screen while operating this System.

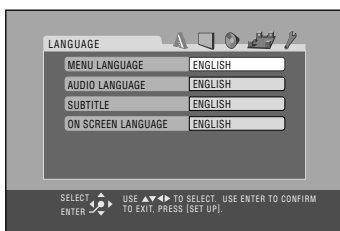

### MENU LANGUAGE

Some discs have multiple menu languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 54).

### AUDIO LANGUAGE

Some discs have multiple audio languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 54).

### SUBTITLE

Some discs have multiple subtitle languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 54) or “OFF (no subtitle).”


### ON SCREEN LANGUAGE

Select one of the languages shown on the TV from—ENGLISH, CHINESE, and SPANISH.

## ■ PICTURE Set up Menu

INFO

You can select the desired options concerning a picture or monitor screen.

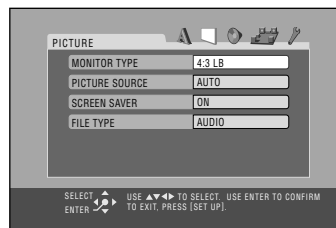

### MONITOR TYPE

You can select the monitor type of your TV when you play DVD Video recorded with aspect ratio of 16:9.

#### For the multi-color system TV

When you use a multi-color system TV, you can change the color system of the System automatically by selecting “MULTI” options as the monitor type. In this case, the color system of the System is changed to match the color system of the loaded disc regardless the VIDEO OUT SELECT setting for better picture quality.

#### Select one of the following

##### 16:9 / 16:9 MULTI (Wide television conversion):

 
Select when the aspect ratio of your TV is 16:9 (wide TV) and when the TV has the screen size adjustment function.

##### 4:3 LB (Letter Box) / 4:3 MULTI LB:

Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

##### 4:3 PS (Pan Scan) / 4:3 MULTI PS:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9



 Ex.: 4:3 LB



Ex: 4:3 PS

## PICTURE SOURCE

You can obtain optimal picture quality by selecting an appropriate option—picture source type (either video source or film source).

### Select one of the following:

**AUTO:** Normally select this.  
When playing back a disc containing both video and film sources, the System automatically changes the processing to match it to the picture type (film or video source) of the current chapter.

**FILM:** To play a film source disc.

**VIDEO:** To play a video source disc.

## SCREEN SAVER

You can activate or deactivate screen saver while operating the built-in disc player.

### Select one of the following:

**ON:** The on-screen display on the TV becomes dark when no operation is done for about 5 minutes.

**OFF:** To cancel the screen saver.

## FILE TYPE

If both audio tracks (MP3 or WMA files), still picture (JPEG files), and video (MPEG-4 files) are recorded on a disc, you can select which to play.

### Select one of the following:

**AUDIO:** To play MP3/WMA files.

**STILL PICTURE:** To play JPEG files.

**VIDEO:** To play MPEG-4 files.

## AUDIO Set up Menu

INFO

You can adjust the sound settings of the System.



## DIGITAL AUDIO OUTPUT

When using the digital output terminal on the rear, set this correctly according to the connected component.

### Select one of the following:

**PCM ONLY:** To connect to a linear PCM digital equipment such as an MD recorder.

**DOLBY DIGITAL /PCM:** To connect to a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

**STREAM/PCM:** To connect to a DTS decoder or an amplifier with a built-in DTS decoder.

- See also “OPTICAL DIGITAL OUTPUT Signals” on page 56.

## D. RANGE COMPRESSION

You can compress the dynamic range (the difference between the loudest sound and the softest sound) to enjoy a powerful sound even at a low volume level when listening to Dolby Digital software. This is useful at night.

- The effectiveness varies depends on a software.

### Select one of the following:


**AUTO:** To enjoy powerful sounds with full dynamic range.

**ON:** Best for watching a movie at a low volume level.




## ■ SPK. SETTING Set up Menu

You can adjust the sound settings of the System

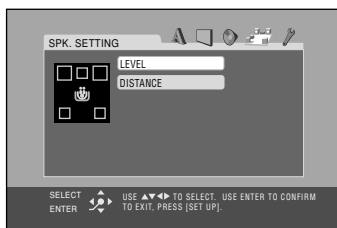

### Speaker Diagram

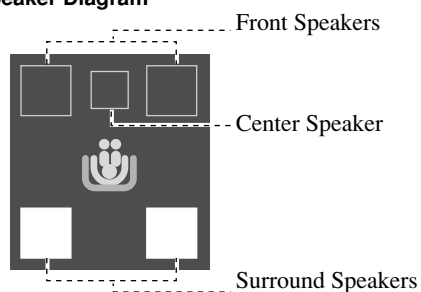


- The selected speaker icon is highlighted blue.

## LEVEL

Select this to enter the LEVEL submenu.

If the output sound of center speaker or surround speakers from the listening position are not equal to that of the front speakers, use test tone to adjust the output level to get the best possible surround effect.

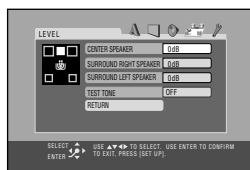


- 1 Select "ON" of the item TEST TONE.
- 2 Select the speaker—CENTER SPEAKER, SURROUND RIGHT SPEAKER, SURROUND LEFT SPEAKER.
- 3 Adjust the speaker output level for the selected speaker.  
You can adjust the output level within the range of  $-6$  dB to  $+6$  dB in 1 dB interval.
- 4 Repeat steps 2 and 3 to adjust the other speakers.
  - To stop test tone, select "OFF" of the item TEST TONE.
- 5 Select "RETURN" then press ENTER to return to the SPK. SETTING Set up menu.

## DISTANCE

Select this to enter the DISTANCE submenu.

See also "Setting the Speakers" on page 8.

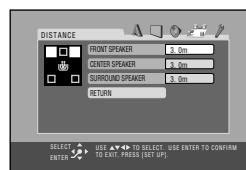

### FRONT SPEAKER, CENTER SPEAKER, SURROUND SPEAKER:

For each speaker, set the distance from the listening point within the range of 0.3 m to 9.0 m in 0.3 m intervals.

### RETURN:

Select this then press ENTER to return to the SPK. SETTING menu.

## ■ OTHERS Set up Menu

You can change some other convenient functions.



### RESUME

You can activate or deactivate Resume for disc playback (see page 16).

Select one of the following:

---

**ON:** To activate Resume.

---

**OFF:** To cancel Resume.

---

### ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons (see page 16).

- When recording the picture on a VCR, select “OFF” to avoid recording the guide icons on your video tape.

Select one of the following:

---

**ON:** To activate the on-screen guide icons.

---

**OFF:** To cancel the on-screen guide icons.

---



## AV COMPULINK MODE

When connecting the System to a JVC's TV with the AV COMPU LINK remote control system, select the proper setting.

Select one of the following:

---

**DVD1:** To connect to the COMPONENT Video (or VIDEO-3 Input) jacks on the TV using a component video cord.

---

**DVD2:** To connect to the VIDEO-1 Input jack on the TV using an S-video cord.

---

**DVD3:** To connect to the VIDEO-2 Input jack on the TV using a composite video cord.

---

- For details, see “To connect the AV COMPU LINK cords” on page 7.

### PARENTAL LOCK

Select this to enter the PARENTAL LOCK submenu. See the section that follows.

## Restricting the Review

### —Parental Lock


You can restrict playback of DVD Video containing violent scenes and those unsuitable for your family members. Once you have set the rating level, such violent scenes (for which a higher level than you set is assigned) may be skipped or changed to another scene (depending on how the disc is programmed).

### To set Parental Lock



Set the rating level—Level 1 (most restrictive) to Level 8 (least restrictive).

#### 1 Display the Setup Menu.



SET UP

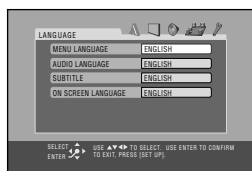

#### 2 Select the OTHERS Setup Menus.

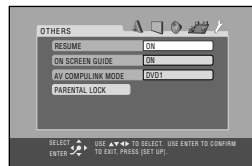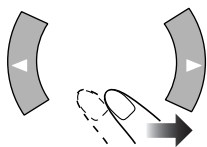



#### 3 Select "PARENTAL LOCK."

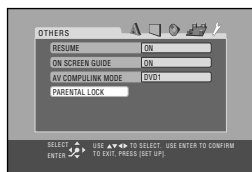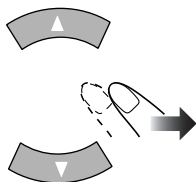

#### 4 Enter the PARENTAL LOCK submenu.




#### 5 Select "COUNTRY CODE," then display the pop-up window.

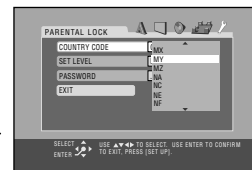
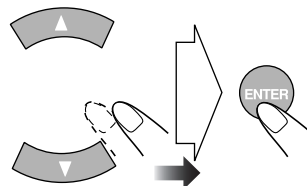


#### 6 Select the country code of your area.


- See also "Country/Area codes list for Parental Lock" on page 55 to find your country code.

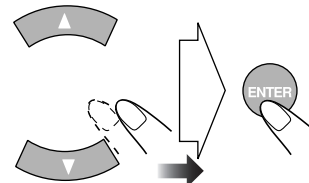

#### 7 Select "SET LEVEL," then display the pop-up window.

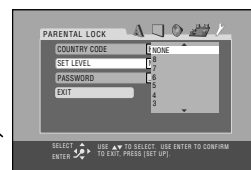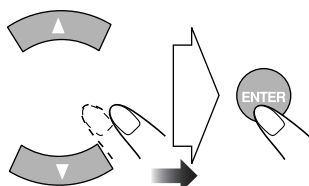


#### 8 Set the rating level (NONE, 8 – 1).

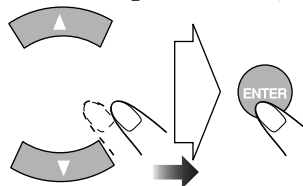

The System automatically enters password entry mode.

#### 9 Enter any 4-digit number for your password.

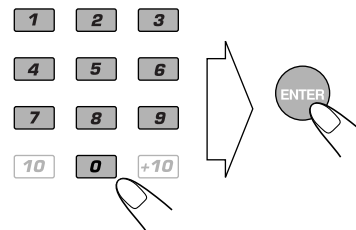

#### 10 Finish the setting.


SET UP



## To change the setting

### 1 Display the PARENTAL LOCK sub menu.


- Follow steps **1** to **4** of “To set Parental Lock”.

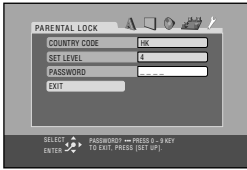

“PASSWORD” is automatically selected.

- You cannot select any item other than “EXIT” until you enter the correct password.

### 2 Enter your password.

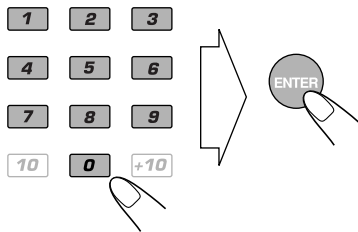


- If you enter a wrong password, “----” appears again.
- If you enter a wrong password three times, “EXIT” is automatically selected. In this case, press ENTER to exit from the PARENTAL LOCK sub menu.
- If you forget your password, enter “8888.”

### 3 Change the settings.

- Follow steps **5** to **8** of “To set Parental Lock”.


### 4 Enter your password again.

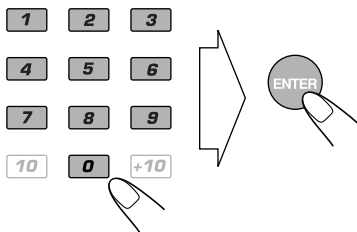


- If you want to change a password, enter a new four digit number in this step.

## To release Parental Lock temporarily

When you set a strict rating level, some discs may not be played back at all. When you try to play such a disc, the following screen appears on the TV screen.

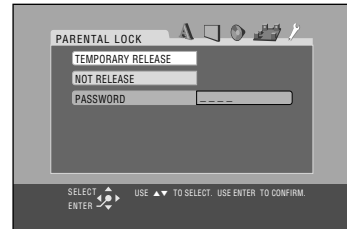


### 1 Select “TEMPORARY RELEASE,” then ENTER.

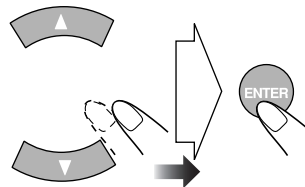

“PASSWORD” is automatically selected.

- If you do not play back such a disc, select “NOT RELEASE,” then ENTER. Then eject the disc.


### 2 Enter your password.

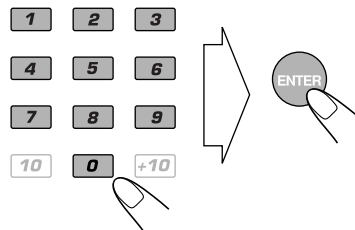

- If you enter a wrong password three times, “NOT RELEASE” is automatically selected. In this case, press ENTER. Then eject the disc.

# Operating the TV


## Remote control

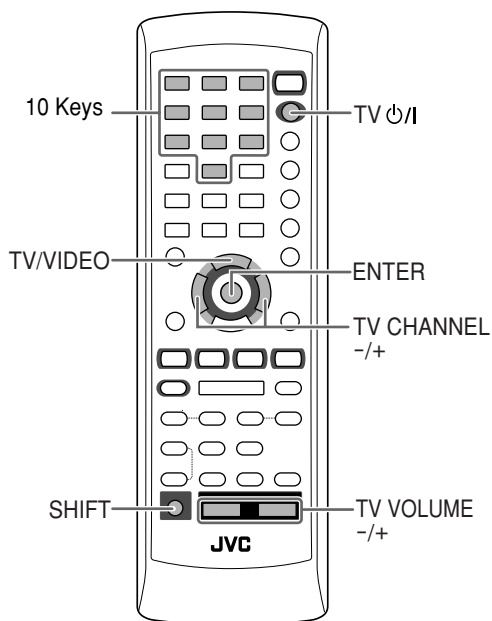

## Operating TV

You can operate the JVC's or other manufacturers' TV using this remote control.


**1** Keep pressed until the following steps are complete.

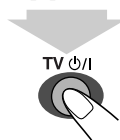

**2** Enter the code setting mode.



**3** Enter the 2-digit manufacture's code number.

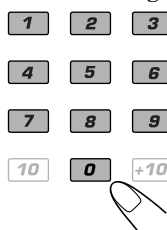

**4** Release TV  $\phi$ /I.


## To operate the TV

Manufacture's code	
Manufacture	Code number
JVC	01
Hitachi	10
Magnavox	02
Mitsubishi	03
Panasonic	04,11
RCA	05
Samsung	12
Sanyo	13
Sharp	06
Sony	07
Toshiba	08
Zenith	09


To turn on or off the TV:




To select the input mode (either TV or VIDEO):

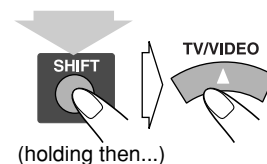

To adjust TV volume:

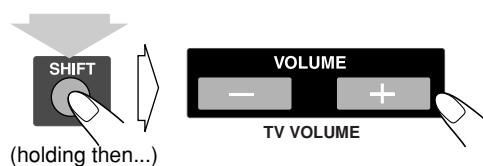

To select the TV channel:

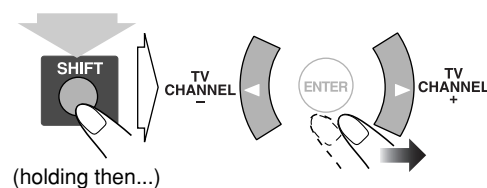

# Additional Information

## Learning More about This System ● ● ●

### Before Operating the System (see pages 10 to 13)

#### Playable Disc Types:

- If you play back an NTSC disc with this setting set to “PAL,” you can watch the playback pictures (the disc will be reproduced using “PAL 60” format), but the TV screen may roll over upward and downward rapidly.
- If you play back a PAL disc with this setting set to “NTSC,” you can watch the playback pictures, but the following symptoms may occur:
  - The items on the disc menu will be blurred, and be shown slightly shifted when highlighted.
  - The aspect ratio of the picture may differ from the original aspect ratio.
  - The picture movement is not smooth.
- **Notes on MP3/WMA/JPEG/MPEG-4 discs**
  - MP3/WMA/JPEG/MPEG-4 discs are required a longer readout time than regular CDs. (It depends on the complexity of the group/file configuration.)
  - Some MP3/WMA/JPEG/MPEG-4 files cannot be played back and will be skipped. This results from their recording processes and conditions.
  - This system can play back MP3/WMA/JPEG/MPEG-4 files with the extension code <.mp3>, <.wma>, <.jpg>, or <.asf> (regardless of the letter case—upper/lower).

#### • About audio format

- **Linear PCM:** Uncompressed digital audio, the same format used for CDs and most studio masters.
- **Dolby Digital:** Compressed digital audio, developed by Dolby Laboratories, which enables multi-channel encode to create the realistic surround sound.
- **DTS (Digital Theater Systems):** Compressed digital audio, developed by Digital Theater Systems, Inc., which enables multi-channel like Dolby Digital. As the compression ratio is lower than for Dolby Digital, it provides wider dynamic range and better separation.
- When playing back a DVD Audio disc recorded by MLP (Meridian Lossless Packing; a lossless audio compression system that can completely recreate the PCM signal), the signals recognized as the linear PCM signal, however, no indicator lights up in the display window.

### Daily Operations—Playback (see pages 14 to 18)

#### Listening to the Radio:

- If you store a new station into an occupied preset number, the previously stored station in that number will be erased.
- When you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

#### Playing Back a Disc:

- On some DVD, SVCD, or VCD discs, the actual operations may be different from what is explained in this manual, due to the programming and disc structure; such differences are not a malfunction of this System.

- For MP3/WMA playback...

- When making MP3/WMA discs, use ISO 9660 Level 1 or Level 2 for the disc format.
- It is recommended that you make each MP3/WMA file at a sampling rate of 44.1 kHz and at bit rate of 128 kbps. This System cannot play back files made at bit rate of less than 64 kbps.

#### Playing Back a Tape:

- In Relay Play, the reverse side of the tape in deck A does not playback. If the playing time of the tape in deck A is less than 12 seconds, the System rewind the tape and playback again.

### Daily Operations—Sound&Other Adjustments (see pages 19 to 23)

#### Adjusting the Volume:

- Be sure to turn down the volume before connecting or putting the headphones.

#### Creating Your Own Sound Modes—User Mode:

- When you unplug the AC power cord or if a power failure occurs, the USER mode settings will be erased in a few days. If this happens, set the USER Modes again.

#### Using Surround Mode:

##### • Dolby Pro Logic II modes:

- Dolby Pro Logic II has developed multichannel playback format to decode the 2 channel sources—Linear PCM digital source, MP3 source, WMA source, Dolby Digital 2ch, DTS 2ch, and Dolby Surround encoded source—into 5.1 channel. Dolby Pro Logic II enables to reproduce spacious sound from original sound without adding any new sounds and tonal colorations.
- While you use the headphones, the Surround Mode will canceled temporarily (“STEREO” will appear on the display).
- Some DVD Audios prohibit downmix.
  - When you change the Surround Mode while playing back such a disc, “MULTI CH” appears on the display and you cannot change the Surround Mode.
  - When you select the Surround Mode to “STEREO” and start playback such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
  - When you use the headphones while playing back such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
- During MPEG-4 playback, Dolby Pro Logic II modes will be canceled temporarily.

#### Changing the Scanning Mode:

- Do not change the progressive scanning mode in the following cases:
  - When your TV does not support the progressive video input.
  - When you have not connected your TV to the unit using a component video cord.
- When you play back an NTSC disc in progressive scanning mode, the System output the NTSC signal though color system settings.

**Changing the Picture Tone:**

- If no operation is done for about 10 seconds, the VFP setting screen disappears.

**Setting the Clock:**

- “0:00” will flash on the display until you set the clock.
- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

**Unique DVD/VCD Operations (see pages 24 to 26)****Selecting the Sound Track:**

- On some DVD Videos, you cannot change audio languages while playing back.

**Playing Back a Bonus Group on a DVD Audio:**

- You cannot select a track in the bonus group for Program Play.

**Special Picture Playback:**

- During slow-motion playback, no sound will be reproduced.
- While zoomed in, the picture may look coarse.

**Advanced Disc Operations (see pages 27 to 29)****Programming the Playing Order—Program Play:**

- While programming steps...  
Your entry will be ignored if you have tried to program an item number that does not exist on the disc (for example, selecting track 14 on a disc that only has 12 tracks). Such entries are ignored, and are erased from the program.
- You cannot use Program Play and Random Play for JPEG/MPEG-4 discs.

**Prohibiting Disc Ejection—Child Lock:**

- If you try to eject discs while Child Lock is in use, “LOCKED” appears to inform you that the disc tray is locked.

**On-Screen Disc Operations (see pages 30 to 34)****Operations Using the On-screen Bar:****• A-B Repeat:**

- A-B Repeat cannot be used on some DVDs.
- For DVD Video, A-B Repeat is possible only within the same title.
- For DVD Audio/SVCD/VCD/CD, A-B Repeat is possible only within the same track.

**Operations on the CONTROL Screen:**

- For JPEG files playback...
  - It is recommended that you record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a long time to be shown.)
  - This System can play only baseline JPEG files\*. Progressive JPEG files\* or lossless JPEG files\* cannot be played.
    - \* Baseline JPEG format: Used for digital cameras, web, etc.
    - Progressive JPEG format: Used for web.
    - Lossless JPEG format: An old type and rarely used now.
- This unit may not play back JPEG files properly which are recorded by the devices other than digital still camera.
- During JPEG Slide-show playback, zoom cannot be operated.

- For MPEG-4 files playback...

- The System can play back the MPEG-4 files followed the conditions below:

File format: ASF  
 Visual profile MPEG-4 SP (Simple Profile)  
 Audio CODEC: G.726  
 Max. picture size: 352 x 288  
 Max. bit rate: 384 kbps

- The size of playback screen will be the same size as it is recorded.
- Some recorded files may not be able to be played back.
- Some MPEG-4 files created on a personal computer may not be played back.

**Advanced Tape Operations (see pages 35 and 36)****Recording on a Tape:**

- The recording level is automatically set correctly. Thus, you can adjust the sound you are actually listening to without affecting the recording level.
- There is leader tape which cannot be recorded onto at the start and the end of cassette tapes. Thus, when recording discs or radio broadcasts, wind the leader tape first to ensure that the recording will be made without any music part lost.
- If no cassette is inserted, “NO TAPE” appears on the display. If a protected tape has been inserted, “NO REC” appears on the display.
- When using Reverse Mode for recording, start recording in the forward (▶) direction first; otherwise, recording will stop when only one side (reverse) of the tape is recorded.
- You cannot change the source during recording.

**Synchronized Disc Recording:**

- While recording, you cannot use ▶▶/◀◀, ▶▶/◀◀, DVD LEVEL, Surround Mode and source buttons.
- You can adjust volume control and sound setting (Subwoofer, RHYTHM AX, Sound Mode) but the settings do not affect the recording sound.
- Everything on the disc goes onto the tape in the order on the disc, or according to the order you have made for Program Play.
- You cannot use Synchronized Recording with Repeat Play (Repeat Play will be canceled).
- When recording starts, “DISC REC” appears on the display and the REC (recording) lamp flashes.
- When the tape reaches its end in the forward direction (▶) during recording, the last song will be re-recorded at the beginning of the reverse side (◀).
- When the tape reaches its end in the reverse side (◀) during recording, recording stops even though the entire disc is not entirely recorded.
- During Recording, Multi-channel source will be downmixed into 2 channels, and AUTO or Dolby Pro Logic II modes are temporarily canceled.
- You cannot use Synchronized Recording with JPEG or MPEG-4 disc.

## Enjoying Karaoke (see pages 37 to 39)

### Microphone Mixing:

- When Mic mixing mode is activated, Multi-channel source will be downmixed into 2 channel temporarily.
- When Mic mixing mode is activated, Dolby Pro Logic II mode will be canceled temporarily.
- By pressing REC START/STOP, you can record your singing along if you want.

### Singing Along (Karaoke):

- When Karaoke mode is activated, Multi-channel source will be downmixed into 2 channel temporarily.
- When Karaoke mode is activated, Dolby Pro Logic II mode will be canceled temporarily.
- Karaoke mode cannot be activated while DVD Audio or MPEG-4 is played.
- Karaoke mode setting is also applied to the optical digital output signals through the OPTICAL DIGITAL OUTPUT terminal.
- On some music, Karaoke mode does not provide the correct effect.

### Reserving Karaoke Songs—Karaoke Program Play

- You cannot use Karaoke Program Play for DVD Audio and MPEG-4 discs.

## Timer Operations (see pages 40 and 41)

### Setting the Timer:

- If you do not specify the preset station or track number correctly while setting a timer, the currently selected station or the first track will be played when timer is activated.
- When you unplug the AC power cord or if a power failure occurs, the timer will be canceled. You need to set the clock first, then the timer again.
- Without stopping the recording, you cannot change the source after Recording Timer starts recording.
- If you set DVD Video as the source, Daily Timer will not work correctly.

### Timer Priority:

- If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.
- If you set the Sleep Timer after Recording Timer starts recording, Recording Timer is canceled, but recording continues until Sleep Timer shuts off the power.

## Set up Menu Operations (see pages 42 to 48)

### LANGUAGE Set up Menu:

- When the language you have selected for MENU LANGUAGE, AUDIO LANGUAGE, or SUBTITLE is not recorded on a disc, the original language is used as the initial language.

### PICTURE Set up Menu—MONITOR TYPE:

- Even if “4:3 PS” is selected, the screen size may become 4:3 letter box with some DVD Videos. This depends on how the discs are recorded.
- When you select “16:9” for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

### OTHERS Set up Menu—ON SCREEN GUIDE:

- The set up menu and on-screen bar will be displayed (and recorded) even though this function is set to “OFF.” Subtitles and the information for zooming in always appear on the display regardless of this setting.

## Maintenance

To get the best performance of the System, keep your discs, tapes, and mechanism clean.

### Handling discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

### To clean the disc:

- Wipe the disc with a soft cloth in a straight line from center to edge.

### Handling cassette tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotate it.
  - If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid the following places to store the tape—in dusty places, in direct sunlight or heat, in moist areas, on a TV or speaker, or near a magnet.

### To keep the best recording and playback sound quality:

- Use a cotton swab moistened with alcohol to clean the heads, capstans, and pinch rollers.
- Use a head demagnetizer (available at electronics and audio shops) to demagnetize the heads (when the System turned off).

### Cleaning the System

- Stains should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
  - DO NOT wipe it with a hard cloth.
  - DO NOT wipe it strong.
  - DO NOT wipe it with thinner or benzine.
  - DO NOT apply any volatile substance such as insecticides to it.
  - DO NOT allow any rubber or plastic to remain in contact for a long time.



## Troubleshooting

If you are having a problem with your System, check this list for a possible solution before calling for service.

### General:

#### Adjustments or settings are suddenly canceled before you finish.

⇒ There is a time limit. Repeat procedure again.

#### Operations are disabled.

⇒ The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

#### Unable to operate the System from the remote control.

⇒ The path between the remote control and the remote sensor on the System is blocked.

⇒ The batteries are exhausted.

#### No sound is heard.

⇒ Speaker connections are incorrect or loose.

⇒ Headphones are connected.

#### No picture appears on the screen.

⇒ The video cord connections are incorrect or loose.

#### No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.

⇒ The System is connected to a TV which does not support progressive video input.

⇒ Incorrect color system is selected (see “To set the video output selector” on page 7).

#### The left and right edges of the picture are missing on the screen.

⇒ Select “4:3 LB /4:3 MULTI LB” for “MONITOR TYPE” (see page 43).

### Radio Operations:

#### Hard to listen to broadcasts because of noise.

⇒ Antennas connections are incorrect or loose.

⇒ The AM loop antenna is too close to the System.

⇒ The FM antenna is not properly extended and positioned.

### Disc Operations:

#### The disc does not play.

⇒ The disc is placed upside down. Place the disc with the label side up.

⇒ Parental Lock is in use (see page 48).

#### ID3 Tag on an MP3 disc cannot be shown.

⇒ There are two types of ID3 Tag—Version 1 and Version 2. This System can only show ID3 Tag Version 1.

#### MP3 groups and tracks are not played back as you expect.

⇒ The playing order is determined when the disc was recorded. It depends on the writing application.

#### MP3/WMA, JPEG, or MPEG-4 files are not played back.

⇒ The inserted disc may include more than two types of tracks (MP3/WMA files, JPEG files, and MPEG-4 files). In this case, you can only play back the files selected by the “FILE TYPE” setting (see page 44).

⇒ You have changed the “FILE TYPE” setting after you inserted a disc. In this case, reload the disc.

#### The disc sound is discontinuous.

⇒ The disc is scratched or dirty.

#### The disc playback sounds strange.

⇒ Cancel Key Control (see page 38).

#### The sound through OPTICAL DIGITAL OUTPUT is strange.

⇒ Cancel Karaoke mode (see page 38).

#### No subtitle appears on the display though you have selected the initial subtitle language.

⇒ Some DVDs are programmed to always display no subtitle initially. If this happens, press SUB TITLE after starting play (see page 25).

#### Audio language is different from the one you have selected as the initial audio language.

⇒ Some DVDs are programmed to always use the original language initially. If this happens, press AUDIO after starting play (see page 24).

#### The disc tray does not open or close.

⇒ The AC power cord is not plugged in.

⇒ Child Lock is in use (see page 29).

### Tape Operations:

#### The cassette holder cannot be opened.

⇒ Power supply from the AC power cord has been cut off while the tape was running. Turn on the System.

### Recordings:

#### Impossible to record.

⇒ Small tabs on the back of the cassette are removed. Cover the holes with adhesive tape.

### Timer operations:

#### Daily Timer does not work.

⇒ The System has been turned on when the on-time comes. Timer starts working only when the System is turned off.

## Language Code List

AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Ameharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Byelorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scots Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlingue
IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish

JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KO	Korean (KOR)
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laothian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MS	Malay (MAY)
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NL	Dutch
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance
RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sangho
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak

SL	Slovenian
SM	Samoan
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tonga
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapuk
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu

## Country/Area codes list for Parental Lock

<b>AD</b>	Andorra
<b>AE</b>	United Arab Emirates
<b>AF</b>	Afghanistan
<b>AG</b>	Antigua and Barbuda
<b>AI</b>	Anguilla
<b>AL</b>	Albania
<b>AM</b>	Armenia
<b>AN</b>	Netherlands Antilles
<b>AO</b>	Angola
<b>AQ</b>	Antarctica
<b>AR</b>	Argentina
<b>AS</b>	American Samoa
<b>AT</b>	Austria
<b>AU</b>	Australia
<b>AW</b>	Aruba
<b>AZ</b>	Azerbaijan
<b>BA</b>	Bosnia and Herzegovina
<b>BB</b>	Barbados
<b>BD</b>	Bangladesh
<b>BE</b>	Belgium
<b>BF</b>	Burkina Faso
<b>BG</b>	Bulgaria
<b>BH</b>	Bahrain
<b>BI</b>	Burundi
<b>BJ</b>	Benin
<b>BM</b>	Bermuda
<b>BN</b>	Brunei Darussalam
<b>BO</b>	Bolivia
<b>BR</b>	Brazil
<b>BS</b>	Bahamas
<b>BT</b>	Bhutan
<b>BV</b>	Bouvet Island
<b>BW</b>	Botswana
<b>BY</b>	Belarus
<b>BZ</b>	Belize
<b>CA</b>	Canada
<b>CC</b>	Cocos (Keeling) Islands
<b>CF</b>	Central African Republic
<b>CG</b>	Congo
<b>CH</b>	Switzerland
<b>CI</b>	Côte d'Ivoire
<b>CK</b>	Cook Islands
<b>CL</b>	Chile
<b>CM</b>	Cameroon
<b>CN</b>	China
<b>CO</b>	Colombia
<b>CR</b>	Costa Rica
<b>CU</b>	Cuba
<b>CV</b>	Cape Verde
<b>CX</b>	Christmas Island
<b>CY</b>	Cyprus
<b>CZ</b>	Czech Republic
<b>DE</b>	Germany
<b>DJ</b>	Djibouti

<b>DK</b>	Denmark
<b>DM</b>	Dominica
<b>DO</b>	Dominican Republic
<b>DZ</b>	Algeria
<b>EC</b>	Ecuador
<b>EE</b>	Estonia
<b>EG</b>	Egypt
<b>EH</b>	Western Sahara
<b>ER</b>	Eritrea
<b>ES</b>	Spain
<b>ET</b>	Ethiopia
<b>FI</b>	Finland
<b>FJ</b>	Fiji
<b>FK</b>	Falkland Islands (Malvinas)
<b>FM</b>	Micronesia (Federated States of)
<b>FO</b>	Faroe Islands
<b>FR</b>	France
<b>FX</b>	France, Metropolitan
<b>GA</b>	Gabon
<b>GB</b>	United Kingdom
<b>GD</b>	Grenada
<b>GE</b>	Georgia
<b>GF</b>	French Guiana
<b>GH</b>	Ghana
<b>GI</b>	Gibraltar
<b>GL</b>	Greenland
<b>GM</b>	Gambia
<b>GN</b>	Guinea
<b>GP</b>	Guadeloupe
<b>GQ</b>	Equatorial Guinea
<b>GR</b>	Greece
<b>GS</b>	South Georgia and the South Sandwich
<b>GT</b>	Guatemala
<b>GU</b>	Guam
<b>GW</b>	Guinea-Bissau
<b>GY</b>	Guyana
<b>HK</b>	Hong Kong
<b>HM</b>	Heard Island and McDonald Islands
<b>HN</b>	Honduras
<b>HR</b>	Croatia
<b>HT</b>	Haiti
<b>HU</b>	Hungary
<b>ID</b>	Indonesia
<b>IE</b>	Ireland
<b>IL</b>	Israel
<b>IN</b>	India
<b>IO</b>	British Indian Ocean Territory
<b>IQ</b>	Iraq
<b>IR</b>	Iran (Islamic Republic of)
<b>IS</b>	Iceland
<b>IT</b>	Italy
<b>JM</b>	Jamaica

<b>JO</b>	Jordan
<b>JP</b>	Japan
<b>KE</b>	Kenya
<b>KG</b>	Kyrgyzstan
<b>KH</b>	Cambodia
<b>KI</b>	Kiribati
<b>KM</b>	Comoros
<b>KN</b>	Saint Kitts and Nevis
<b>KP</b>	Korea, Democratic People's Republic of
<b>KR</b>	Korea, Republic of
<b>KW</b>	Kuwait
<b>KY</b>	Cayman Islands
<b>KZ</b>	Kazakhstan
<b>LA</b>	Lao People's Democratic Republic
<b>LB</b>	Lebanon
<b>LC</b>	Saint Lucia
<b>LI</b>	Liechtenstein
<b>LK</b>	Sri Lanka
<b>LR</b>	Liberia
<b>LS</b>	Lesotho
<b>LT</b>	Lithuania
<b>LU</b>	Luxembourg
<b>LV</b>	Latvia
<b>LY</b>	Libyan Arab Jamahiriya
<b>MA</b>	Morocco
<b>MC</b>	Monaco
<b>MD</b>	Moldova, Republic of
<b>MG</b>	Madagascar
<b>MH</b>	Marshall Islands
<b>ML</b>	Mali
<b>MM</b>	Myanmar
<b>MN</b>	Mongolia
<b>MO</b>	Macau
<b>MP</b>	Northern Mariana Islands
<b>MQ</b>	Martinique
<b>MR</b>	Mauritania
<b>MS</b>	Montserrat
<b>MT</b>	Malta
<b>MU</b>	Mauritius
<b>MV</b>	Maldives
<b>MW</b>	Malawi
<b>MX</b>	Mexico
<b>MY</b>	Malaysia
<b>MZ</b>	Mozambique
<b>NA</b>	Namibia
<b>NC</b>	New Caledonia
<b>NE</b>	Niger
<b>NF</b>	Norfolk Island
<b>NG</b>	Nigeria
<b>NI</b>	Nicaragua
<b>NL</b>	Netherlands
<b>NO</b>	Norway

<b>NP</b>	Nepal
<b>NR</b>	Nauru
<b>NU</b>	Niue
<b>NZ</b>	New Zealand
<b>OM</b>	Oman
<b>PA</b>	Panama
<b>PE</b>	Peru
<b>PF</b>	French Polynesia
<b>PG</b>	Papua New Guinea
<b>PH</b>	Philippines
<b>PK</b>	Pakistan
<b>PL</b>	Poland
<b>PM</b>	Saint Pierre and Miquelon
<b>PN</b>	Pitcairn
<b>PR</b>	Puerto Rico
<b>PT</b>	Portugal
<b>PW</b>	Palau
<b>PY</b>	Paraguay
<b>QA</b>	Qatar
<b>RE</b>	Réunion
<b>RO</b>	Romania
<b>RU</b>	Russian Federation
<b>RW</b>	Rwanda
<b>SA</b>	Saudi Arabia
<b>SB</b>	Solomon Islands
<b>SC</b>	Seychelles
<b>SD</b>	Sudan

<b>SE</b>	Sweden
<b>SG</b>	Singapore
<b>SH</b>	Saint Helena
<b>SI</b>	Slovenia
<b>SJ</b>	Svalbard and Jan Mayen
<b>SK</b>	Slovakia
<b>SL</b>	Sierra Leone
<b>SM</b>	San Marino
<b>SN</b>	Senegal
<b>SO</b>	Somalia
<b>SR</b>	Suriname
<b>ST</b>	Sao Tome and Principe
<b>SV</b>	El Salvador
<b>SY</b>	Syrian Arab Republic
<b>SZ</b>	Swaziland
<b>TC</b>	Turks and Caicos Islands
<b>TD</b>	Chad
<b>TF</b>	French Southern Territories
<b>TG</b>	Togo
<b>TH</b>	Thailand
<b>TJ</b>	Tajikistan
<b>TK</b>	Tokelau
<b>TM</b>	Turkmenistan
<b>TN</b>	Tunisia
<b>TO</b>	Tonga
<b>TP</b>	East Timor
<b>TR</b>	Turkey

<b>TT</b>	Trinidad and Tobago
<b>TV</b>	Tuvalu
<b>TW</b>	Taiwan
<b>TZ</b>	Tanzania, United Republic of
<b>UA</b>	Ukraine
<b>UG</b>	Uganda
<b>UM</b>	United States Minor Outlying Islands
<b>US</b>	United States
<b>UY</b>	Uruguay
<b>UZ</b>	Uzbekistan
<b>VA</b>	Vatican City State (Holy See)
<b>VC</b>	Saint Vincent and the Grenadines
<b>VE</b>	Venezuela
<b>VG</b>	Virgin Islands (British)
<b>VI</b>	Virgin Islands (U.S.)
<b>VN</b>	Vietnam
<b>VU</b>	Vanuatu
<b>WF</b>	Wallis and Futuna Islands
<b>WS</b>	Samoa
<b>YE</b>	Yemen
<b>YT</b>	Mayotte
<b>YU</b>	Yugoslavia
<b>ZA</b>	South Africa
<b>ZM</b>	Zambia
<b>ZR</b>	Zaire
<b>ZW</b>	Zimbabwe

## OPTICAL DIGITAL OUTPUT Signals

DIGITAL AUDIO OUTPUT	Output Signals		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
<b>Playback disc</b>			
<b>DVD Video</b>			
with 48 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM*		
with 96 kHz, Linear PCM	48 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS Digital Surround	DTS bitstream	48 kHz, 16 bit Linear PCM	
<b>DVD Audio</b>			
with 48/96/192 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM		
with 44.1/88.2/176.4 kHz, 16/20/24 bit Linear PCM	44.1 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS Digital Surround	DTS bitstream	48 kHz, 16 bit Linear PCM	
<b>SVCD, VCD, CD</b>	44.1 kHz, 16 bit Linear PCM*/48 kHz, 16 bit Linear PCM*		
<b>CD with DTS Digital Surround</b>	DTS bitstream	44.1 kHz, 16 bit Linear PCM	
<b>MP3/WMA disc</b>	32/44.1/48 kHz, 16 bit Linear PCM		
<b>MPEG-4 disc</b>	32 kHz, 16 bit Linear PCM		

\* While playing some DVDs, digital signals may be emitted at 20 bits or 24 bits (at their original bit rate) through the OPTICAL DIGITAL OUTPUT terminal if the discs are not copy-protected.

## Specifications

### CA-MXJD5

#### Amplifier section

Output Power:

FRONT MAIN SPEAKERS: 40 W per channel, min. RMS, driven into  $6 \Omega$  at 1 kHz with no more than 10% total harmonic distortion.

FRONT SUBWOOFERS: 80 W per channel, min. RMS, driven into  $6 \Omega$  at 63 Hz with no more than 10% total harmonic distortion.

CENTER SPEAKER: 40 W, min. RMS, driven into  $8 \Omega$  at 1 kHz with no more than 10% total harmonic distortion.

SURROUND SPEAKERS: 25 W per channel, min. RMS, driven into  $16 \Omega$  at 1 kHz with no more than 10% total harmonic distortion.

Digital output:

OPTICAL DIGITAL OUTPUT:  
-21 dBm to -15 dBm (660 nm  $\pm$ 30 nm)

Audio input sensitivity/Impedance

(Measured at 1 kHz, with tape recording signal 300 mV)

AUX IN: 300 mV/47 k $\Omega$

MIC 1/2: 3.0 mV/50 k $\Omega$

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite): 1 V(p-p)/75  $\Omega$

S-VIDEO: Y (luminance) 1 V(p-p)/75  $\Omega$

C (chrominance, burst)  
0.286 V(p-p)/75  $\Omega$

COMPONENT (Interlace/Progressive):

(Y) 1 V(p-p)/75  $\Omega$

(P<sub>B</sub>/P<sub>R</sub>) 0.7 V(p-p)/75  $\Omega$

Speaker Terminals:  $6 \Omega$  –  $16 \Omega$  (Front main speakers)

$8 \Omega$  –  $16 \Omega$  (Center speakers)

$16 \Omega$  –  $32 \Omega$  (Surround speakers)

$6 \Omega$  –  $16 \Omega$  (Front subwoofers)

Others:

AV COMPU LINKx2 ( $\phi$  3.5)

#### Tuner section

FM tuning range: 87.50 MHz – 108.00 MHz

AM (MW) tuning range:  
531 kHz – 1 710 kHz (at 9 kHz)  
530 kHz – 1 710 kHz (at 10 kHz)

#### Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD  
CD-R/CD-RW (recorded in Audio CD/  
Video CD/ Super Video CD/ MP3/ WMA/  
JPEG/MPEG-4 format)  
DVD-R/DVD-RW (recorded in video  
format)

Dynamic range: 90 dB

Horizontal resolution: 500 lines

Wow and flutter: Immeasurable

#### Cassette deck section

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

#### General

Power requirement: AC 110 V / AC 127 V / AC 220 V /  
AC 230 V – AC 240 V  $\sim$  ,  
(adjustable with the voltage selector),  
50 Hz / 60 Hz

Power consumption: 220 W (at operation)

20 W (on standby)

Dimensions (approx.): 265 mm x 335 mm x 352 mm  
(W/H/D)

Mass (approx.): 8.7 kg

#### Supplied Accessories

See page 3.

*Design and specifications are subject to change without notice.*

**CA-MXJD8****Amplifier section**

Output Power:

FRONT MAIN SPEAKERS: 55 W per channel, min. RMS, driven into 6  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

FRONT SUBWOOFERS: 140 W per channel, min. RMS, driven into 6  $\Omega$  at 63 Hz with no more than 10% total harmonic distortion.

CENTER SPEAKER: 50 W, min. RMS, driven into 8  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

SURROUND SPEAKERS: 30 W per channel, min. RMS, driven into 16  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

Digital output:

OPTICAL DIGITAL OUTPUT:

-21 dBm to -15 dBm (660 nm  $\pm$ 30 nm)

Audio input sensitivity/Impedance

(Measured at 1 kHz, with tape recording signal 300 mV)

AUX IN: 300 mV/47 k $\Omega$ MIC 1/2: 3.0 mV/50 k $\Omega$ 

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite): 1 V(p-p)/75  $\Omega$ S-VIDEO: Y (luminance) 1 V(p-p)/75  $\Omega$ 

C (chrominance, burst)

0.286 V(p-p)/75  $\Omega$ 

COMPONENT (Interlace/Progressive):

(Y) 1 V(p-p)/75  $\Omega$ (P<sub>B</sub>/P<sub>R</sub>) 0.7 V(p-p)/75  $\Omega$ Speaker Terminals: 6  $\Omega$  – 16  $\Omega$  (Front main speakers)8  $\Omega$  – 16  $\Omega$  (Center speakers)16  $\Omega$  – 32  $\Omega$  (Surround speakers)6  $\Omega$  – 16  $\Omega$  (Front subwoofers)

Others:

AV COMPU LINKx2 ( $\phi$  3.5)**Tuner section**

FM tuning range: 87.50 MHz – 108.00 MHz

AM (MW) tuning range:  
531 kHz – 1 710 kHz (at 9 kHz)  
530 kHz – 1 710 kHz (at 10 kHz)

**Disc player section**

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD  
CD-R/CD-RW (recorded in Audio CD/  
Video CD/ Super Video CD/ MP3/ WMA/  
JPEG/MPEG-4 format)  
DVD-R/DVD-RW (recorded in video  
format)

Dynamic range: 90 dB

Horizontal resolution: 500 lines

Wow and flutter: Immeasurable

**Cassette deck section**

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

**General**

Power requirement: AC 110 V / AC 127 V / AC 220 V /  
AC 230 V – AC 240 V  $\sim$  ,  
(adjustable with the voltage selector),  
50 Hz / 60 Hz

Power consumption: 325 W (at operation)  
22 W (on standby)

Dimensions (approx.): 265 mm x 335 mm x 352 mm  
(W/H/D)

Mass (approx.): 9.1 kg


**Supplied Accessories**

See page 3.

*Design and specifications are subject to change without notice.*

## Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia, and U.K.)

主 (AC) 电源线路说明 (不适用于香港、欧洲、美国、加拿大、澳大利亚及英国型号)

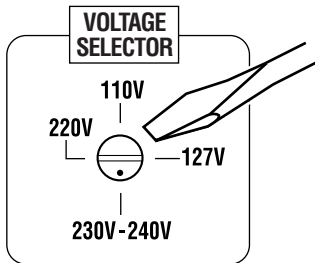


### CAUTION for mains (AC) line

BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/electric shock.


### 有关主 (AC) 电源线路的重要事项

接插电源以前，请务必检查当地的主 (AC) 电源线路电压是否和位于本机外面的电压选择开关设定的位置一致。如果不一致，请重新设定电压选择开关使其符合当地电压，以免损坏机器或引起火灾/触电的危险。

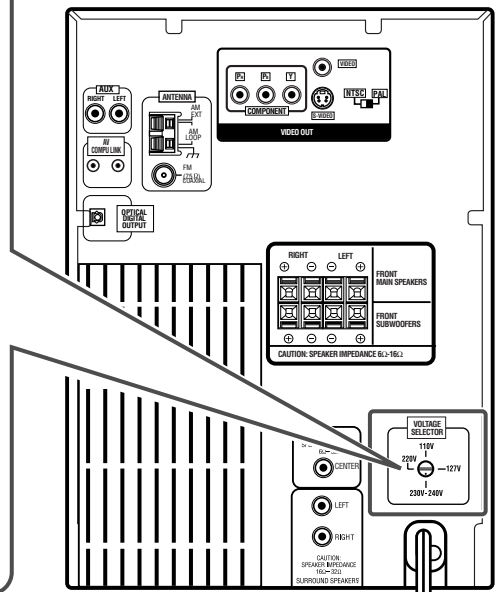


**JVC**  
VICTOR COMPANY OF JAPAN, LIMITED

# JVC


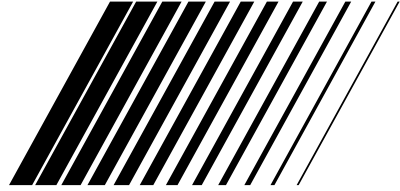


## COMPACT COMPONENT SYSTEM


# CA-MXJD5 CA-MXJD8

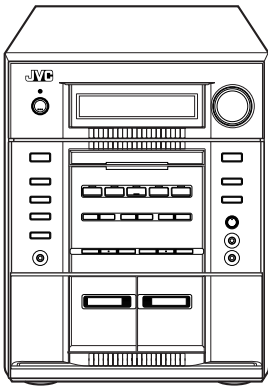

CA-MXJD5

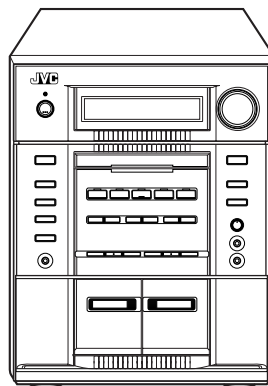 

CA-MXJD8

 

**AV COMPU LINK EXTENDED SUPER BASS**


# INSTRUCTIONS



## Warnings, Cautions and Others

### **Caution— (STANDBY/ON) button!**

Disconnect the mains plug to shut the power off completely.

The  (STANDBY/ON) button in any position does not disconnect the mains line.

The power can be remote controlled.

### **CAUTION**

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.


### **CAUTION**

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**CAUTION: Proper Ventilation**

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

1. Front: No obstructions and open spacing.
2. Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on a level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

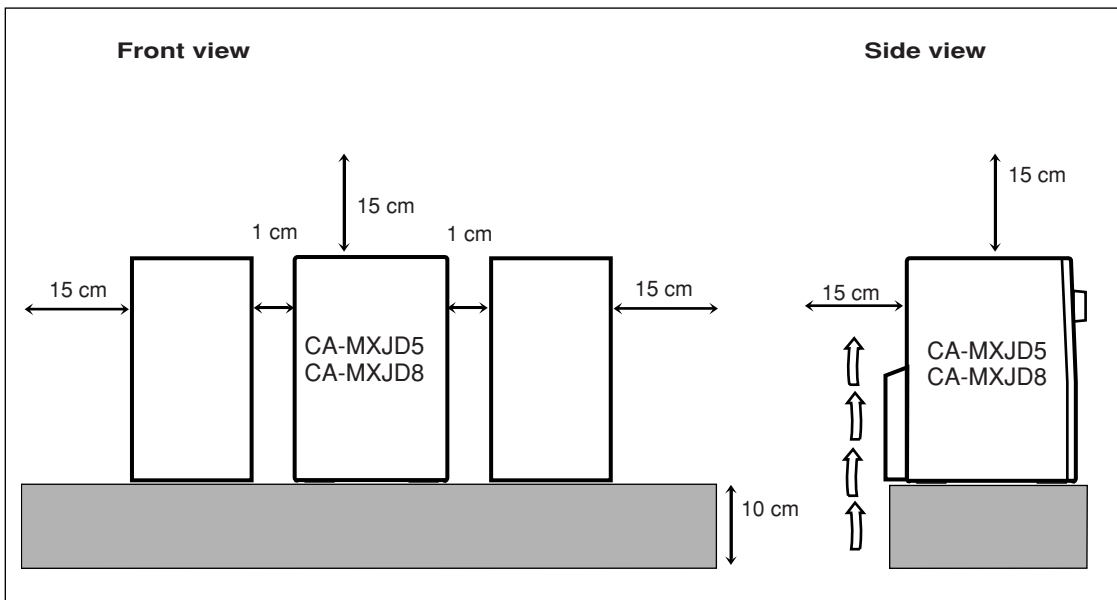

---

### IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

<b>CAUTION :</b> Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	<b>ADVARSEL :</b> Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)	<b>WARNING :</b> Synlig och osynlig laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)	<b>VARO :</b> Avattaessa ja suojalukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
--	---	---	---

# Contents

<b>Introduction .....</b>	<b>2</b>	<b>Advanced Tape Operations .....</b>	<b>35</b>
Precautions .....	2	Recording on a Tape .....	35
How to Read This Manual .....	2	Dubbing Tapes .....	36
<b>Getting Started .....</b>	<b>3</b>	Synchronized Disc Recording .....	36
Step 1: Unpack .....	3	<b>Enjoying Karaoke .....</b>	<b>37</b>
Step 2: Prepare the Remote Control .....	3	Microphone Mixing.....	37
Step 3: Hook Up.....	4	Singing Along (Karaoke) .....	38
Setting the Speakers .....	8	Reserving Karaoke Songs—Karaoke Program Play .....	39
<b>Before Operating the System .....</b>	<b>10</b>	<b>Timer Operations .....</b>	<b>40</b>
Playable Disc Types .....	10	Setting the Timer.....	40
Parts Index.....	11	Timer Priority.....	41
About the Display Indication .....	12	<b>Set up Menu Operations .....</b>	<b>42</b>
<b>Daily Operations—Playback .....</b>	<b>14</b>	Operating Procedure.....	42
Canceling the Demonstration .....	14	■ LANGUAGE Set up Menu .....	43
Listening to the Radio .....	15	■ PICTURE Set up Menu.....	43
Playing Back a Disc .....	16	■ AUDIO Set up Menu .....	44
Playing Back a Tape.....	18	■ SPK. SETTING Set up Menu .....	45
<b>Daily Operations—Sound&amp;Other Adjustments .....</b>	<b>19</b>	■ OTHERS Set up Menu.....	46
Adjusting the Volume .....	19	Restricting the Review—Parental Lock .....	47
Reinforcing the Bass Sound .....	19	<b>Operating the TV .....</b>	<b>49</b>
Adjusting the Front Speaker Output Balance.....	20	Operating TV.....	49
Selecting the Sound Modes .....	20	<b>Additional Information .....</b>	<b>50</b>
Creating Your Own Sound Modes—User Mode .....	20	Learning More about This System .....	50
Using Surround Mode .....	21	Maintenance .....	52
Presetting Automatic DVD Video		Troubleshooting .....	53
Sound Increase Level .....	21	Language Code List .....	54
Changing the Scanning Mode .....	21	Country/Area codes list for Parental Lock .....	55
Changing the Picture Tone .....	22	OPTICAL DIGITAL OUTPUT Signals .....	56
Changing the Display Brightness.....	22	Specifications .....	57
Setting the Clock .....	23		
Turning Off the Power Automatically .....	23		
<b>Unique DVD/VCD Operations .....</b>	<b>24</b>		
Selecting the Sound Track.....	24		
Selecting the Subtitle Language.....	25		
Selecting a View Angle.....	25		
Selecting a Still Pictures on a DVD Audio .....	25		
Playing Back a Bonus Group on a DVD Audio.....	26		
Special Picture Playback .....	26		
<b>Advanced Disc Operations .....</b>	<b>27</b>		
Programming the Playing Order—Program Play.....	27		
Playing at Random—Random Play.....	28		
Playing Repeatedly.....	29		
Prohibiting Disc Ejection—Child Lock .....	29		
<b>On-Screen Disc Operations .....</b>	<b>30</b>		
About the On-screen Bar.....	30		
Operations Using the On-screen Bar.....	31		
Operations on the CONTROL Screen.....	33		

# Introduction

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the System in a location with adequate ventilation to prevent internal heat buildup in the System.



DO NOT install the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

- Leave sufficient distance between the System and the TV.
- Keep the speakers away from the TV to avoid interference with TV.

### Power sources

- When unplugging the System from the wall outlet, always pull on the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lenses inside the System in the following cases:

- After starting to heat the room
- In a damp room
- If the System is brought directly from a cold to a warm place. Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, then plug it in again.

### Internal heat

- A cooling fan is inside the unit to prevent heat buildup.



**For safety, observe the following carefully:**

- Make sure there is good ventilation around the unit. Poor ventilation could overheat and damage the unit.
- DO NOT block the ventilation openings or holes. If they are blocked by a newspaper or cloth, etc., the heat may not be able to get out.

### Others

- Should any metallic object or liquid fall into the System, unplug the AC power cord and consult your dealer before operating any further.



DO NOT disassemble the System since there are no user serviceable parts inside.

- If you are not going to operate the System for an extended period of time, unplug the AC power cord from the wall outlet.

If anything goes wrong, unplug the AC power cord and consult your dealer.

## How to Read This Manual

To make the explanations in this manual as simple and easy-to-understand as possible, we have adapted the following methods:

- Button and control operations are explained as listed in the table below. In this manual, the operations using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.
- **Some related tips and notes are explained later in the sections “Learning More about This System” and “Troubleshooting,” but not in the same section explaining the operations ( INFO indicates that the content has some informations).** If you want to know more about the functions, or if you have a doubt about the function, go to these sections and you will find your answer there.

	Indicates that you press the button <b>briefly</b> .
	Indicates that you press the button <b>briefly and repeatedly</b> until an option you want is selected.
	Indicates that you press one of the buttons.
	Indicates that you <b>press and hold</b> the button for a specified period. <ul style="list-style-type: none"> <li>• The number inside the arrow indicates the period of press (in this example, 2 seconds).</li> <li>• If no number is inside the arrow, press and hold until the entire procedure is complete or until you get a result you want.</li> </ul>
	Indicates that you turn the control toward the specified direction(s).
	Indicates that this operation is only possible using the remote control.
	Indicates that this operation is only possible using the buttons and controls on the main unit.

# Getting Started

## Step 1: Unpack the package and check the accessories.



## Step 1: Unpack

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.


- FM antenna (1)
- AM loop antenna (1)
- Composite video cord (1)
- Remote control (1)
- Batteries (2)
- AC plug adaptor (1)
- Core filter (1)

If any item is missing, consult your dealer immediately.


## Step 2: Prepare the Remote Control

Insert the batteries into the remote control by matching the polarity (+ and -) correctly.


## Step 2: Prepare the remote control.

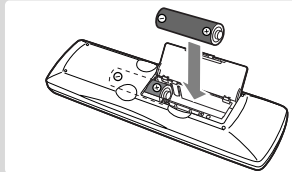


1

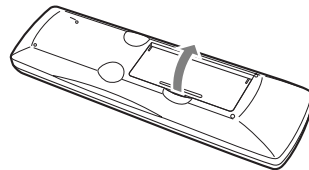


2

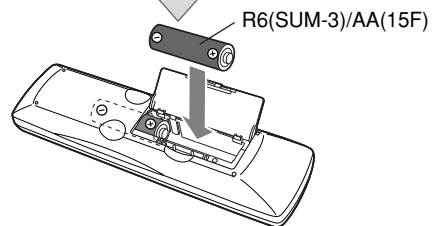

3

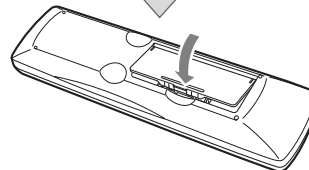

## Step 3: Hook up the components such as AM/FM antennas, speakers, etc. (see pages 4 to 7).

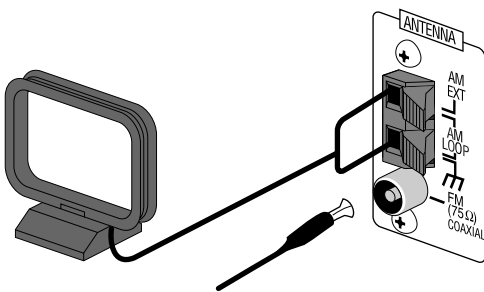

Finally plug the AC power cord.  
Now you can operate this System.

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, the remote control will be damaged from battery leakage.





### Step 3: Hook Up

If you need more detailed information, see pages 6 and 7.

**Turn the power off to all components before connections.**

Illustrations of the input/output terminals below are typical examples.  
When you connect other components, refer also to their manuals since the terminal names actually printed on the rear may vary.

**AM loop antenna (supplied)**  
Turn it until the best reception is obtained.

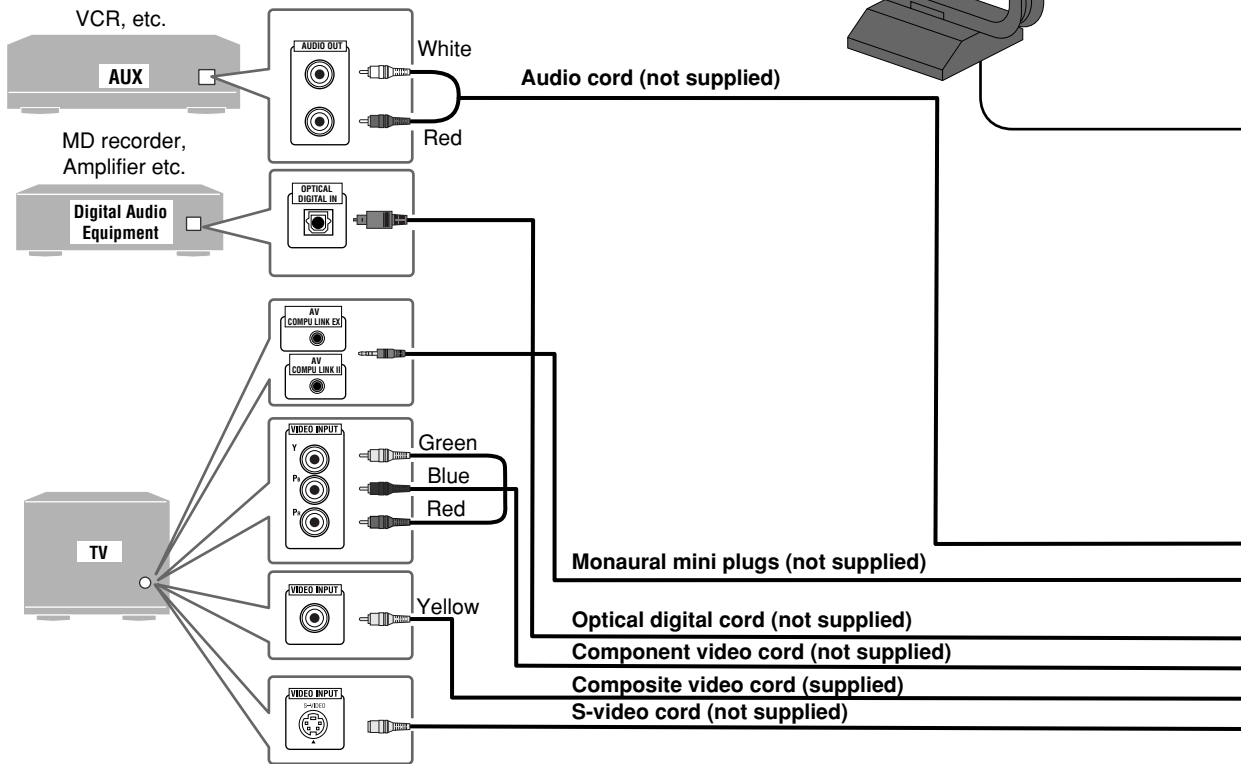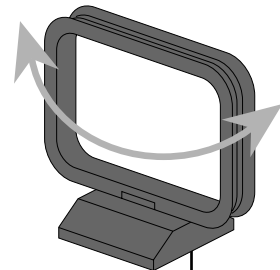

**To center speaker/Surround speaker**  
• See “To connect the speakers” on page 6 and “Setting the Speakers” on page 8.


**To a wall outlet**  
**Plug the AC power cord only after all connections are complete.**  
• If the wall outlet does not match the AC plug, use the supplied AC plug adaptor.






## To assemble and connect the AM loop antenna

### To assemble the AM loop antenna

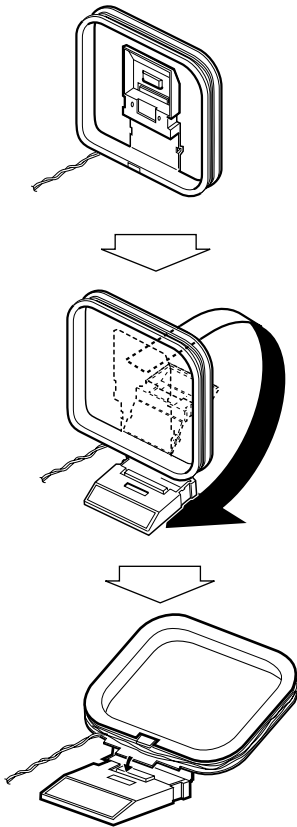


### To connect the AM loop antenna and speaker cords

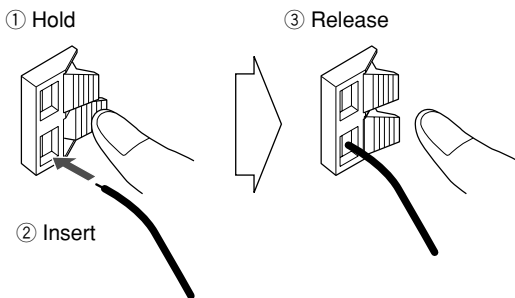

- If the AM loop antenna wire or speaker cords are covered with vinyl, remove the vinyl to expose the tip of the antenna by twisting the vinyl.
- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. This could cause poor reception.

## To connect the speakers

### To connect the speaker cords

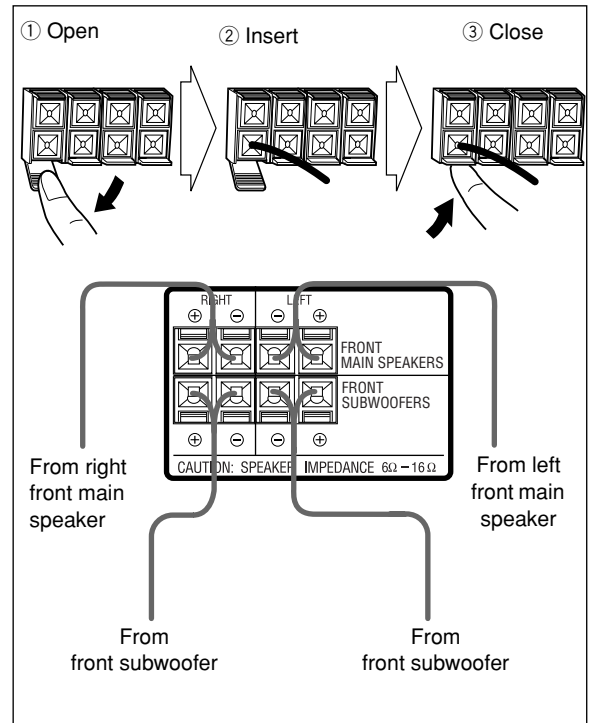

- When connecting the speaker cords, match the polarity of the speaker terminals: (+) to (+) and (-) to (-).


Speaker	Terminal color	
	(+)	(-)
Front main speakers	<b>Blue</b>	<b>Black</b>
Front subwoofers	<b>Red</b>	<b>Black</b>

- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.




- DO NOT connect more than one speaker to each terminal.
- DO NOT push or pull the speakers as this will damage the foot spacers at the bottom of the speakers.

### To connect a center speaker and surround speakers

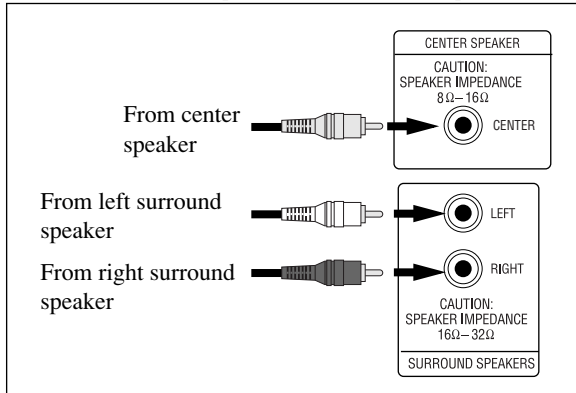

- Connect the center speaker to the CENTER jack.
- Connect the left surround speaker to the LEFT jack.
- Connect the right surround speaker to the RIGHT jack.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

### To connect digital audio

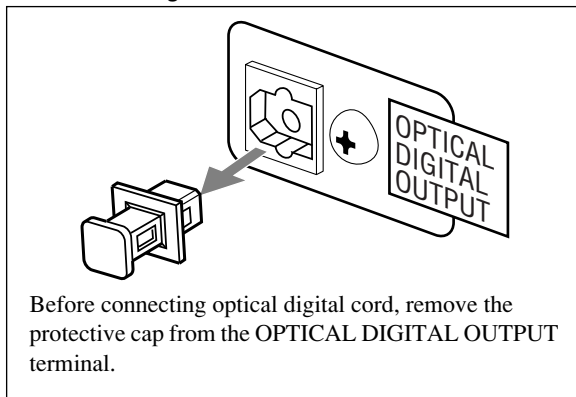


### To connect the AV COMPU LINK cords

The AV COMPU LINK control system allows you to use JVC's TV with simple operations; by starting playing back a disc, the TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

To use AV COMPU LINK, you need to connect the unit and the TV by using a cord with monaural mini-plugs (not supplied) in addition to the connection with a video cord (see page 4).


### To set the video output selector

You can select the video output to match it to the color system of your TV.

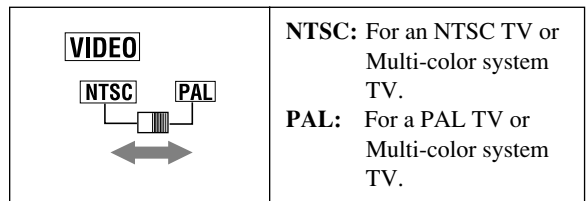

### Adjusting the Voltage Selector

Use a screwdriver to rotate the voltage selector so that the voltage marker is pointing at the same voltage as where you are plugging in the unit. (See also the back cover page.)

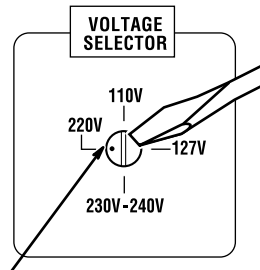

Voltage marker




**DO NOT** plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.

## Setting the Speakers

### Speaker layout

To enjoy multi-channel sound, locate speakers as follows. If you cannot locate them like this, adjust the speaker setting by using the Set up menu. (See right column.)

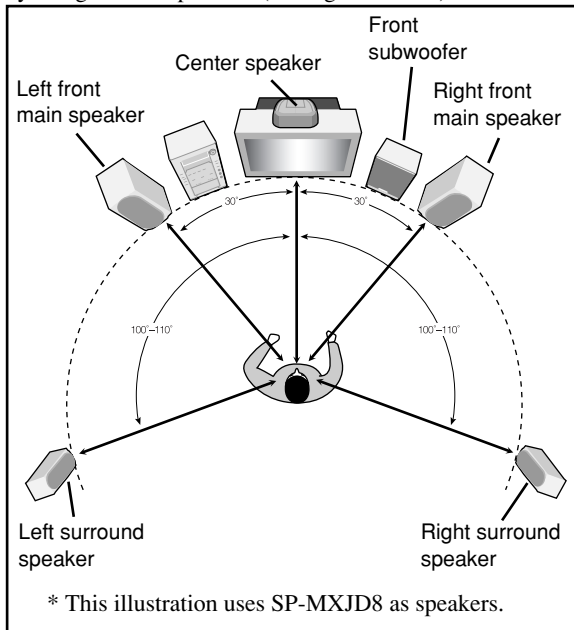

- You can place the front subwoofer wherever you like since bass sound is non-directional. However, it is recommended to place it in front of you.




- DO NOT** place a center speaker and surround speakers on the front main speakers or the front subwoofer.


### To adjust the speaker distance

You need to adjust the each speaker's distance from where you usually take seat (listening position) to get the best surround effect.



- Turn off the TV and select the correct input mode on the TV.
- Turn on the System and change the source to "DVD/CD."

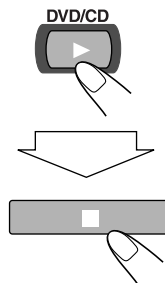



- Display the Set up Menu.

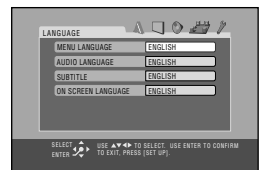


- Select the SPK. SETTING Set up Menus.

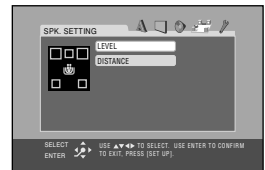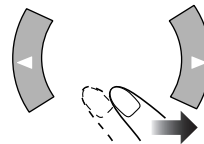



- Select "DISTANCE."

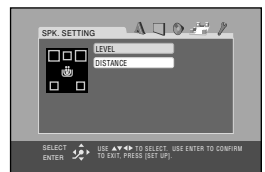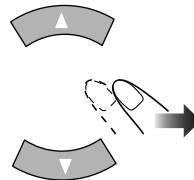

- Enter the DISTANCE submenu.

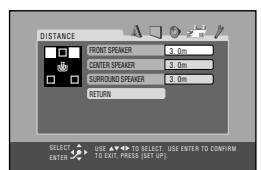


**7 Select the speaker to adjust the distance, then display the pop-up window.**

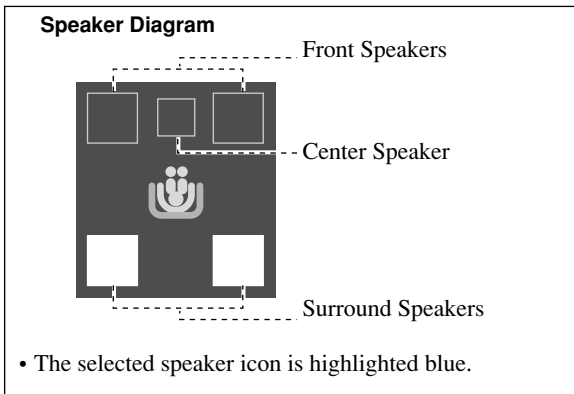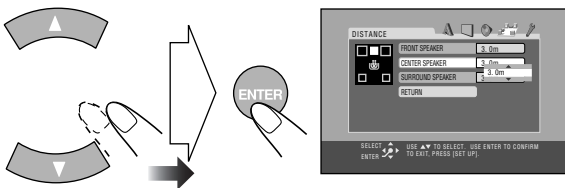

**8 Adjust the desired speaker distance.**

- For each speaker (FRONT SPEAKER, CENTER SPEAKER, SURROUND SPEAKER), set the distance from the listening point within the range of 0.3 m to 9.0 m in 0.3 m intervals.

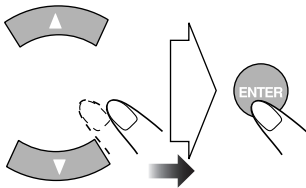

**9 Repeat steps 7 to 8 to adjust other speakers' distance if necessary.**

**To finish the setting**





SET UP



# Before Operating the System

## Playable Disc Types

This unit has been designed to play back the following discs:

Disc Type	Mark (Logo)
DVD Video	
DVD Audio	
Video CD (VCD)	 Video CD
Super Video CD (SVCD)	 
Audio CD	
CD-R	The System can play back CD-R or CD-RW recorded in the Audio CD, Video CD, SVCD, MP3, WMA, JPEG, MPEG-4 formats.
CD-RW	
DVD-R	The System can play back DVD-R or DVD-RW recorded in the DVD Video format.
DVD-RW	

In addition to the above discs, this system can play back audio data recorded on CD Text, CD-G (CD Graphics), and CD-Extra.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD+R, DVD+RW, CD-I (CD-I Ready), CD-ROM, Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
- In this manual, “file” and “track” are interchangeably used for MP3/WMA/JPEG/MPEG-4 operations.

### About color system

This System accommodates both NTSC and PAL system and can playback discs recorded with either system. To change the color system, see page 7.

### Note on Region Code

DVD players and DVDs have their own Region Code numbers. This System can play back only DVDs recorded with the NTSC or PAL color system whose Region Code numbers including “2.”


EX.:



If a DVD with the improper Region Code numbers is loaded, “REGION ERR” appears on the display and playback will not start.

 
## Audio formats

The System can play back the following digital audio formats.

- LPCM (Linear PCM)
-  DIGITAL (Dolby Digital)
- DTS (Digital Theater Systems)
- MPEG (MPEG Multichannel)
- MLP (Meridian Lossless Packing)

### IMPORTANT: Before playing a disc, make sure of the following...

- Turn on the TV and select an appropriate input mode on the TV to view the pictures or on-screen displays on the TV screen.
- For disc playback, you can change the initial setting to your preference. See “Set up Menu Operations” on page 42.

If “” appears on the TV screen when you press a button, the disc cannot accept the operation you have tried to do, or data required for that operation is not recorded on the disc.


- Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, “MLP Lossless”, and the double-D symbol are trademarks of Dolby Laboratories.
- “DTS” and “DTS Digital Surround” are trademarks of Digital Theater Systems, Inc.
- USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE BY A CONSUMER ENGAGING IN PERSONAL AND NON-COMMERCIAL ACTIVITIES.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

“CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE ‘STANDARD DEFINITION’ OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.”


# Parts Index

Refer to the pages to see how to use the buttons and controls.

## Remote control

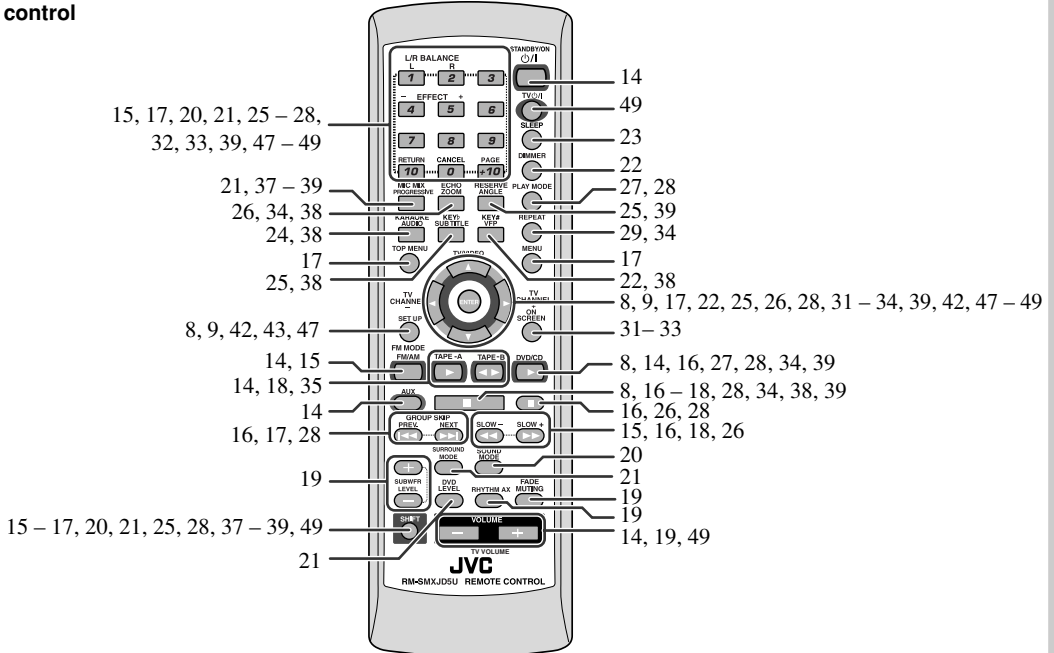


## Main unit

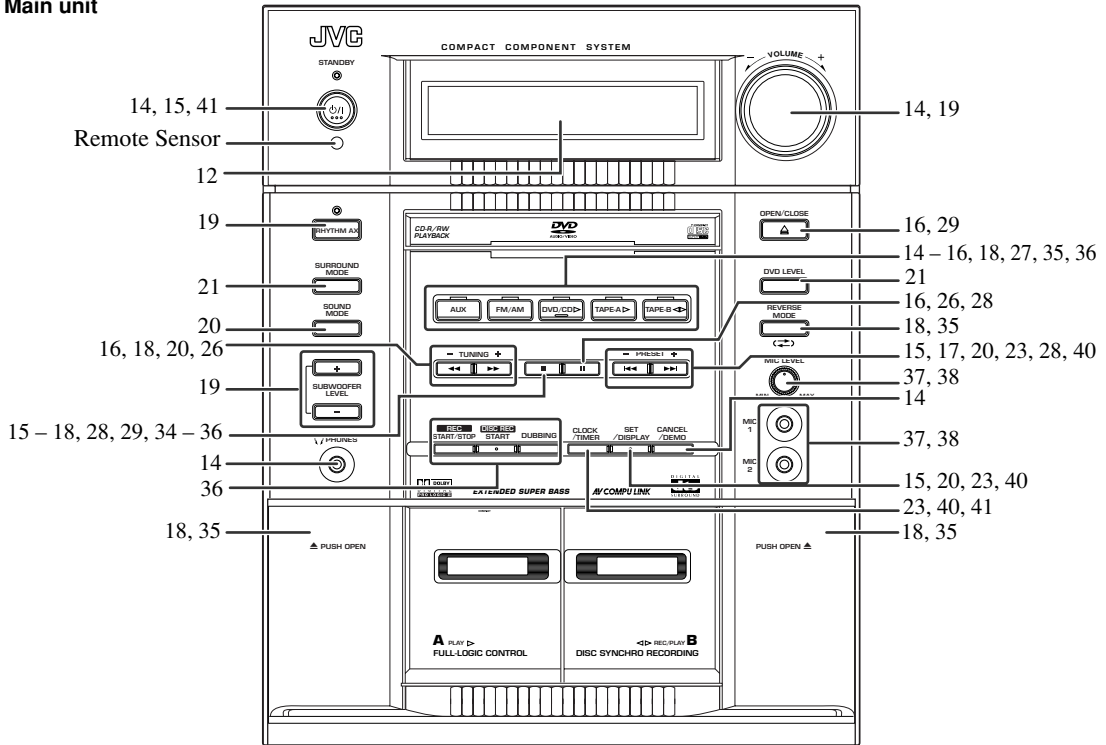

## About the Display Indication

The indications on the display teach you a lot of things while you are operating the System.


Before operating the System, be familiar with when and how the indicator illuminates on the display.

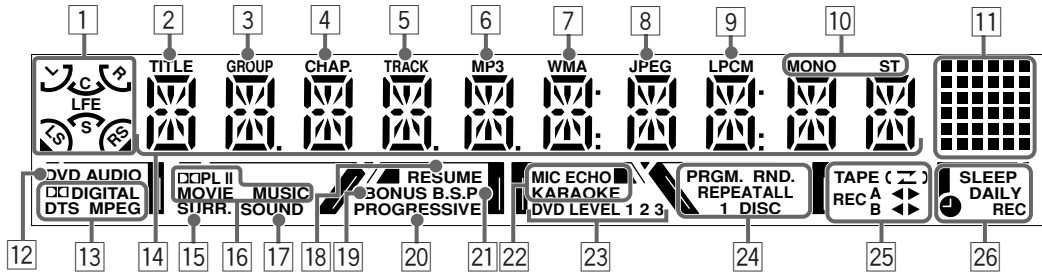

### Indications on the main display

- While listening to radio:

 Band    Preset number    Frequency



- While selecting "TAPE" or "AUX IN":

Source name



- While playing a disc:

#### DVD Video:

Title number                      Elapsed playing time



Chapter number

- While disc play is stopped:

#### DVD Video:

Total title number



#### DVD Audio:

Group number                      Elapsed playing time



 
Track number

#### DVD Audio:



#### SVCD/VCD/CD:


Disc type\*1                      Elapsed playing time\*2



Track number

#### SVCD/VCD/CD:

 
Disc type\*1                      Total playing time\*2



Total track number

#### MP3\*3/WMA\*3/JPEG/MPEG-4\*5:

 Group number                      Elapsed playing time\*4



Track number

#### MP3/WMA/JPEG/MPEG-4:

Current group number



Current track number




 
 



\*1 Disc type is displayed with the following abbreviation: "SV (SVCD)", "VD (VCD)", "CD (CD)".

\*2 While activating PBC function, "PBC" appears on the display instead of the playing time.

\*3 When you start playing an MP3/WMA track, the track name (and Tag information) will be shown before the elapsed playing time appears.

\*4 While playing back a JPEG disc, "JPEG" appears on the display instead of the elapsed playing time.



\*5 When you start playing an MPEG-4 file, the file name will be shown before the elapsed playing time appears.

- 1** Surround Mode/Source signal indicators
- Surround Mode indicators: light to indicate the current activated speaker.
  - L/C/R/LFE/LS/S/RS: light to indicate the current source signal.
- 2** TITLE indicator
- Lights to indicate the title number when the source is DVD Video.
  - Lights to indicate the group title or track title when MP3/WMA/JPEG/MPEG-4 title is shown on the main display.
- 3** GROUP indicator
- Lights to indicate the group number when the source is DVD Audio or MP3/WMA/JPEG/MPEG-4 disc.
- 4** CHAP. indicator
- Lights to indicate the chapter number when the source is DVD Video.
- 5** TRACK indicator
- Lights to indicate the track number when the source is a disc (except for DVD Video).
- 6** MP3 indicator
- Lights while playing back an MP3 track.
- 7** WMA indicator
- Lights while playing back a WMA track.
- 8** JPEG indicator
- Lights while playing back a JPEG file.
- 9** LPCM indicator
- Lights when a source signal is linear PCM.
- 10** FM reception indicators
- MONO: lights while receiving an FM stereo station in monaural.
  - ST (stereo): lights while an FM stereo station with sufficient signal strength is tuned in.
- 11** Animation indicator
- 12** DVD AUDIO indicator
- DVD: lights when DVD Video is detected.
  - DVD AUDIO: lights when DVD Audio is detected.
- 13** Source signal indicators
-  DIGITAL: lights when a source signal is Dolby Digital.
  - DTS: lights when a source signal is DTS Surround.
  - MPEG: lights when a source signal is MPEG multichannel.
- 14** Main display
- 15** SURR. indicators
- Lights when Surround mode is activated.
- 16** Dolby Pro Logic II indicator
-  PL II: lights when Dolby Pro Logic II mode is activated.
  - MOVIE: lights when Dolby Pro Logic II Movie is activated.
  - MUSIC: lights when Dolby Pro Logic II Music is activated.
- 17** SOUND indicators
- Lights when SEA mode or USER mode is activated.
- 18** RESUME indicator
- Lights when the Resume function is activated (see page 16).
- 19** BONUS indicator
- Lights when DVD Audio with bonus group is detected (see page 26).
- 20** PROGRESSIVE indicator
- Lights when the progressive scanning mode is selected.
- 21** B.S.P. indicator
- Lights when browsable still picture on DVD Audio is available (see page 25).
- 22** Karaoke operation indicators
- MIC: lights when the mic mixing mode is activated (see page 37).
  - ECHO: lights when the echo effect is activated (see page 38).
  - KARAOKE: lights when the Karaoke mode is activated (see page 38).
- 23** DVD LEVEL 1/2/3 indicators
- Lights when the DVD Video is detected.
- 24** Disc operation indicators
- PRGM.: lights when Program Play mode is activated.
  - RND.: lights when Random Play is activated.
  - REPEAT: lights when Repeat Play mode is activated.
  - ALL: lights when All Disc Repeat is activated.
  - 1: lights when One Track/Chapter/Step Repeat is activated.
- 25** Tape operation indicators
- TAPE: lights when a tape is loaded in either A or B.
  -  (reverse mode):
    - : tape play continues endlessly.
    - : tape automatically reverses once.
    - : tape play stops at the end of one side.
  - A: lights when a tape is loaded in the deck A.
  - B: lights when a tape is loaded in the deck B.
  - REC: lights while recording.
  -  (tape direction):
    - Lights to indicate the current tape running direction.
    - Flashes slowly during playback and recording.
    - Flashes quickly while rewinding a tape.
- 26** Timer indicators
- : lights when Sleep Timer is working or Daily Timer or Recording Timer stands by or is working or setting.
  - SLEEP: flashes when the Sleep Timer is activated.
  - DAILY: lights when the Daily Timer stands by; flashes while working or setting.
  - REC: lights when the Recording Timer stands by; flashes while working or setting.



# Daily Operations—Playback

In this manual, the operation using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.

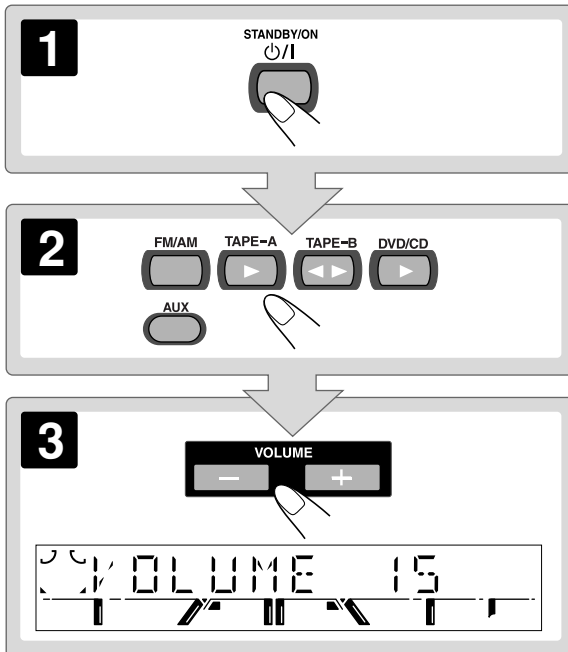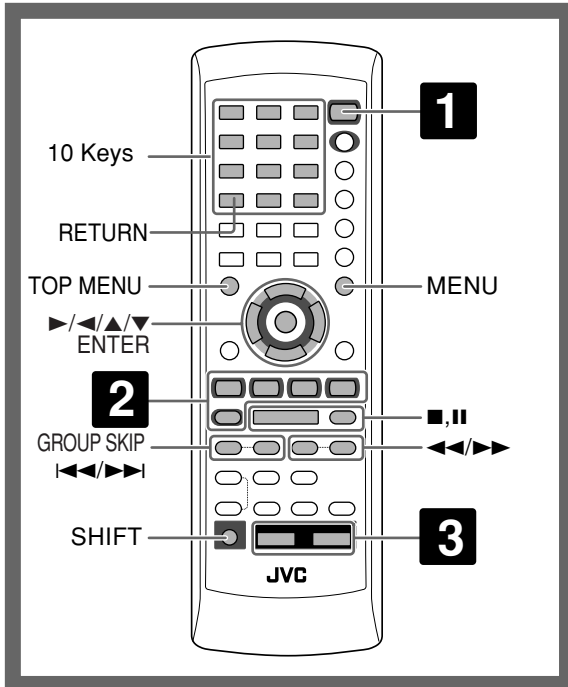

## 1 Turn on the power.

The STANDBY lamp on the main unit goes off.

- Without pressing  $\mathcal{O}/I$  (STANDBY/ON), the System also turns on by pressing one of the source select buttons in the next step.

## 2 Select the source.

Playback automatically starts if the selected source is ready to start playback.

- If you press AUX, start playback source on the external component.

## 3 Adjust the volume.

## 4 Operate the target source as explained later.

### To turn off (stand by) the system

The STANDBY lamp on the main unit lights in red.



- A small amount of power is always consumed even while on standby.


### For private listening

Connect a pair of headphones to the PHONES jack on the main unit. The sound will no longer come out of the speakers. Be sure to turn down the volume before connecting or putting the headphones.

- Disconnecting the headphones will activate the speakers again.

DO NOT turn off (standby) the System with the volume set to an extremely high level; Otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the System or start playback.

### Canceling the Demonstration

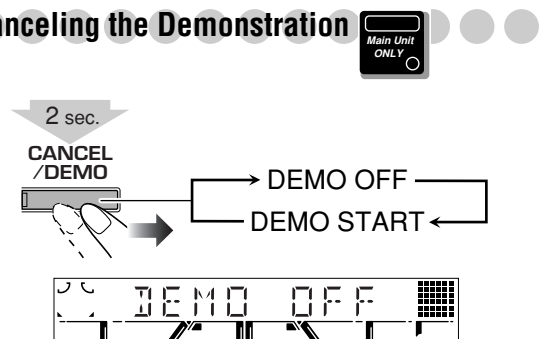

## Listening to the Radio


INFO

### To select the AM tuner interval spacing

Some countries space AM stations 9 kHz apart, and other countries use 10 kHz spacing.

You can change the AM tuner intervals during the unit is turned on.

While AM is selected...

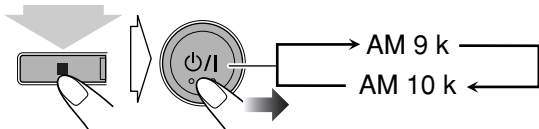


(holding then...)

### To select the band (FM/AM)



### To tune in to a station

While FM or AM is selected...

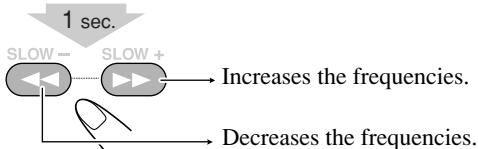


When a station (frequency) with sufficient signal strength is tuned in, the frequency search stops.

To stop searching manually, press either button.

- When you repeatedly press the button, the frequency changes step by step.

### If the received FM station is hard to listen

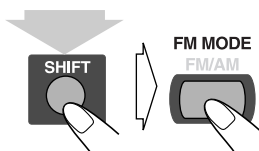

(holding then...)

The MONO indicator lights on the display. Reception will improve though stereo effect is lost—monaural reception mode.

To restore the stereo effect, press the button again (the MONO indicator goes off).

### To preset Stations



You can preset 30 FM and 15 AM stations.


- 1 Tune in to a station you want to preset, then enter into the presetting mode.



- 2 Select a preset number for the station you store.




- 3 Store the station.

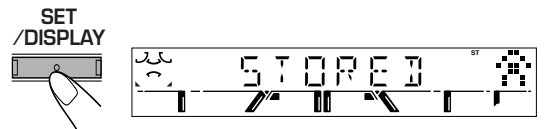


### To turn in to a Preset Station

- 1 Select the band (FM or AM).

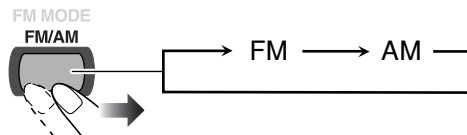

- 2 Select a preset number for the station you store.

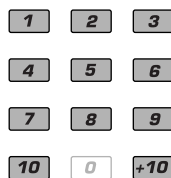

#### Examples:

To select preset number 5, press 5.

To select preset number 15, press +10, then 5.

To select preset number 30, press +10, +10, then 10.

- You can also use buttons on the remote control or the PRESET +/- buttons on the main unit.


## Playing Back a Disc ●●●●●●●●●● INFO

Before operating a disc, be familiar how a disc is recorded.

- DVD Video comprises of “Titles” which includes “Chapters,” DVD Audio/MP3/WMA/JPEG/MPEG-4 comprise of “Groups” which includes “Tracks,” and CD/SVCD/VCD comprise of only “Tracks.”

For JPEG/MPEG-4 playback, see “Operations on the CONTROL Screen” on page 33.

### To insert discs

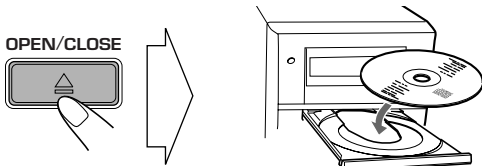

- When using an 8 cm disc, place it on the inner circle of the disc tray.

To close the disc tray, press OPEN/CLOSE ▲ again.

If you press DVD/CD ►, disc tray closes automatically and playback starts.

To start:	To pause:	To stop:
	To release it, press DVD/CD ►.	

**While playing DVD/SVCD/VCD:** This System can store the stop point, and when you start playback again by pressing DVD/CD ►, it starts from the position where you have stopped—Resume Play. (RESUME indicator lights up when you stop playback.)

To stop completely while Resume is activated, press ■ twice. (To cancel Resume, see “RESUME” on page 46.)

### On-screen guide icons

- During disc playback, the following icons may appear for a while on the TV screen:

Appears at the beginning of a scene containing multi-angle views.

Appears at the beginning of a scene containing multi-audio languages.


Appears at the beginning of a scene containing multi-subtitle languages.

- The following icons will be also shown on the TV screen to indicate your current operation.

- To deactivate the on-screen guide icons, see “ON SCREEN GUIDE” on page 46.


### To select a title/group Remote ONLY >>>

While playing a disc...

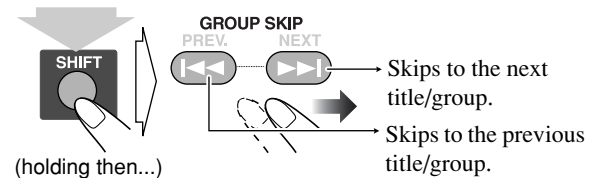


### To select a chapter/track

While playing a disc...

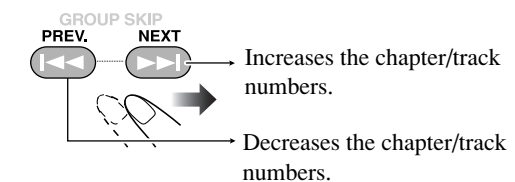

### To locate a particular portion

While playing a disc except WMA/MP3...

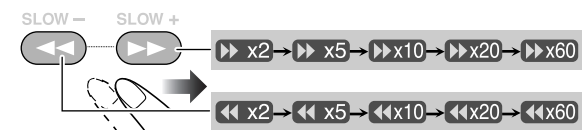

- No sound comes out while searching on DVD/SVCD/VCD.


To return to normal playback, press DVD/CD ►.

## To select an item directly



You can select a title/chapter/track directly and start playback.

For DVD Video, you can select a **title before starting playback**, while you can select a **chapter after starting playback**.

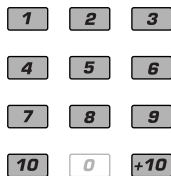

### Examples:

To select number 5, press 5.

To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.

## Playing Back by Using the Disc Menu

 


You can operate the disc play—DVD and SVCD/VCD with Playback Control (PBC)—using the disc menu shown on the TV screen.


- When an SVCD or VCD with PBC is detected, “PBC” appears on the display instead of the playing time.

### ■ For DVD Video/DVD Audio:

#### 1 Show the disc menu.



#### 2 Select an item on the disc menu.

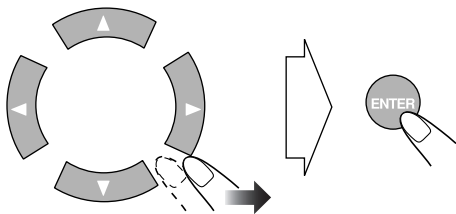


- With some discs, you can also select items by entering the number using the 10 keys.

### ■ For SVCD/VCD with PBC:

While playing a disc with PBC, “PBC” appears on the display.

When disc menu appears on the TV screen, select an item on the menu. Playback of the selected item starts.

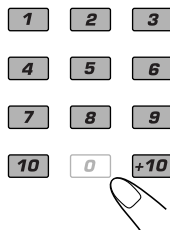


### Examples:

To select number 5, press 5.


To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.


### To move to the next or previous page of the current menu:

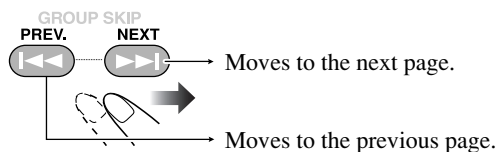

### To return to the previous menu:

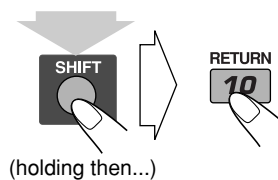

### To cancel PBC

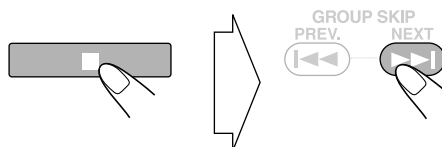

You can also cancel PBC function by pressing the number button to select a track.

To reactivate PBC, press ■, then press ◀◀◀.





## Playing Back a Tape

 INFO


### To insert a tape

You can play back type I tapes.


- The use of C-120 or longer tape is not recommended.

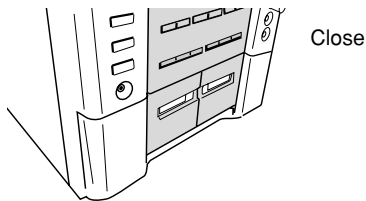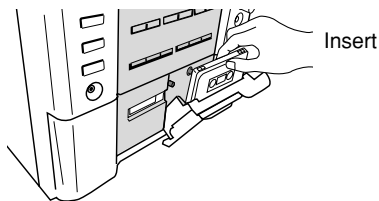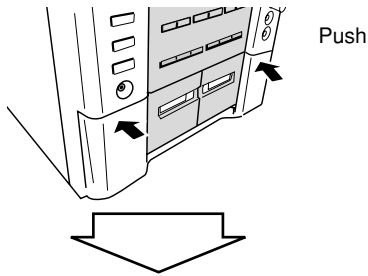

### To change the tape running direction (deck B only)

 



### To reverse the tape automatically (deck B only)

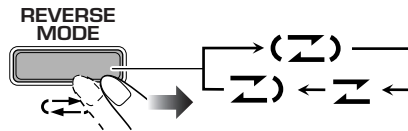


- (Z) Tape is automatically reversed, and playback repeats until you stop it.
- H Tape will not be reversed. When the current side of the tape reaches its end, playback stops.
- Z) Tape is automatically reversed once.

### To playback the both decks A and B continuously —Relay Play


When the cassettes are set in the both decks...

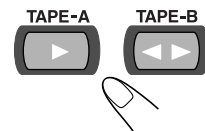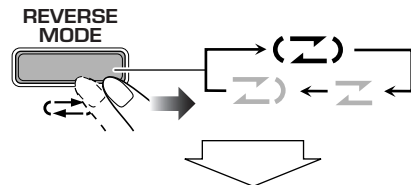

#### To start:

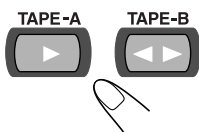


#### To stop:

 

#### To rewind tape:

Before or after play...

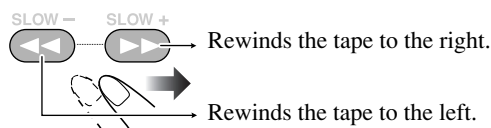


After the tape in deck A finishes playing, the tape in deck B starts playing.


After the reverse (◀) side of the tape in deck B finishes playing, the tape in the deck A rewinds and then starts playing.

# Daily Operations—Sound&Other Adjustments

## Remote Control

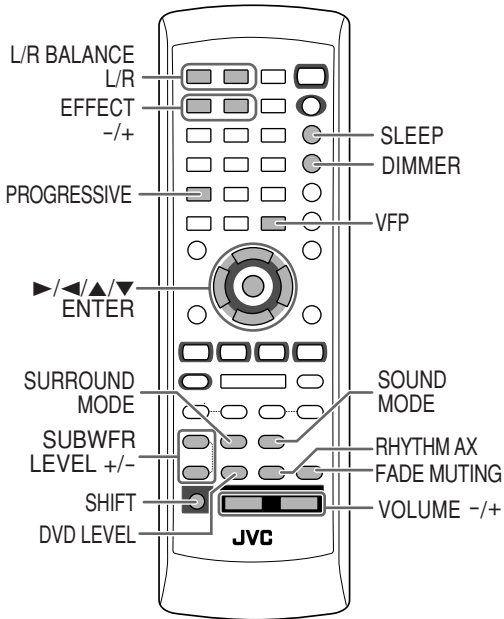


## Main unit

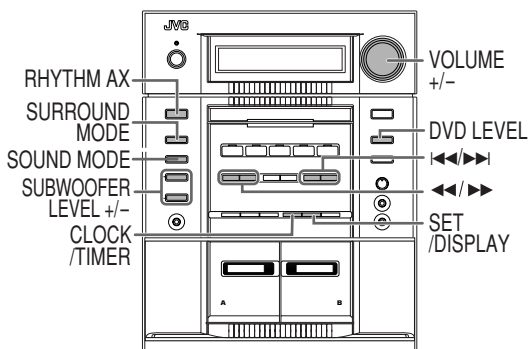

## Adjusting the Volume

INFO

The volume level can be adjusted in 32 steps (VOLUME MIN, VOLUME 1 – VOLUME 30, VOLUME MAX).

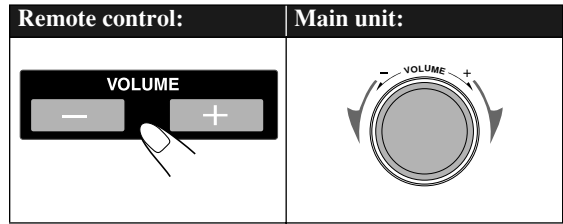

To drop the volume in a moment



To restore the volume, press again, or adjust the volume level.

## Reinforcing the Bass Sound


To adjust the bass level gradually

You can select the subwoofer level from level 0 (minimum) to level 4 (maximum).




To emphasize rhythm feeling—RHYTHM AX

This function emphasizes bass attack feeling, and also changes the subwoofer level.

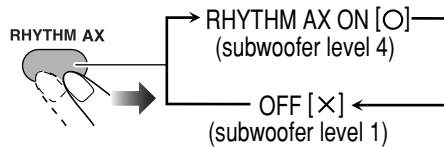


## Adjusting the Front Speaker Output Balance

You can adjust the output balance of left front speaker and right front speaker within the range of R (right) –6 (minimum sound level from the right speaker) to L (left) –6.

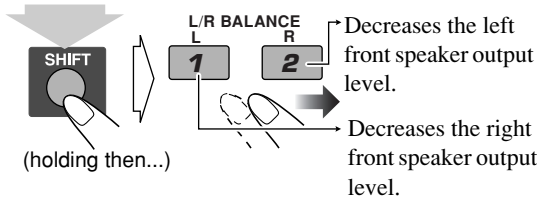

## Selecting the Sound Modes

You can select one of the preset Sound Modes.

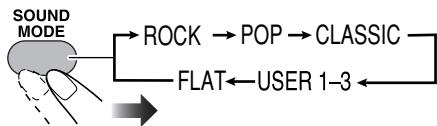


SEA (Sound Effect Amplifier) modes	
<b>ROCK</b>	Boosts low and high frequency. Good for acoustic music.
<b>POP</b>	Good for vocal music.
<b>CLASSIC</b>	Good for classical music.
User modes	
<b>USER 1/2/3</b>	Your individual mode stored in memory. See the next column "Creating Your Own Sound Modes—User Mode."
<b>FLAT</b>	No Sound Mode effect.

## Creating Your Own Sound Modes—User Mode


You can create your own Sound Modes to make sounds suit your taste. The changed settings can be stored as the USER 1, USER 2 and USER 3 modes.

### 1 Select one of the preset Sound Modes.

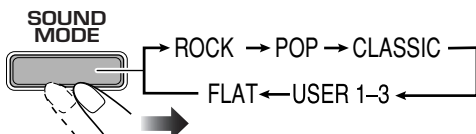


### 2 Enter into the SEA Control Mode.

- You can enter the SEA Control Mode only while the Sound Mode appears on the display.

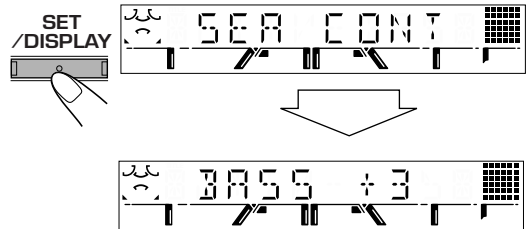


### 3 Adjust the SEA pattern.

- Select one of the tone—BASS or TRE (treble).

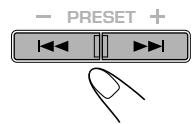


- Adjust the level of the selected tone.

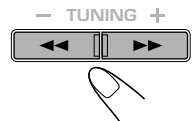



- You can adjust the bass and treble level from –3 to +3.

- Repeat steps ① and ② to adjust the level of the other tone.

- Finish the SEA pattern setting.

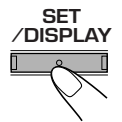

### 4 Select one of the User Modes.

 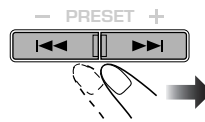

### 5 Finish the setting.




## Using Surround Mode

INFO

### To activate Surround Mode

#### • For DVD/CD source

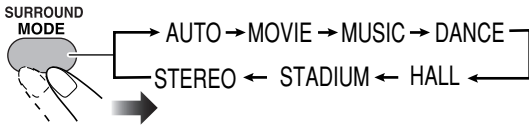

#### • For AUX/FM/AM/TAPE-A/TAPE-B




Auto Surround Mode*	
<b>AUTO</b>	<ul style="list-style-type: none"> <li>• If Multi-channel surround signal comes in, Multi-channel Surround Mode will be selected.</li> <li>• If Dolby Surround signal comes in, Dolby Pro Logic II MOVIE mode will be selected automatically.</li> <li>• If 2-channel signal comes in, STEREO mode will be selected.</li> </ul>
Dolby Pro Logic II modes*	
<b>MOVIE</b>	Creates 5.1-channel sound field from 2ch source. This mode is suitable for movie source.
<b>MUSIC</b>	Creates 5.1-channel sound field from 2ch source. This mode is suitable for music source.
DSP modes*	
<b>DANCE</b>	Increases resonance and bass.
<b>HALL</b>	Adds depth and brilliance to the sound.
<b>STADIUM</b>	Adds clarity and spreads the sound, as in an outdoor stadium.
Stereo mode	
<b>STEREO</b>	Cancels the Surround Mode.

\* If Multi-channel surround signal comes in, Multi-channel Surround Mode will be selected automatically.

## To adjust the DSP effect level

Remote ONLY


When one of the DSP modes is selected...

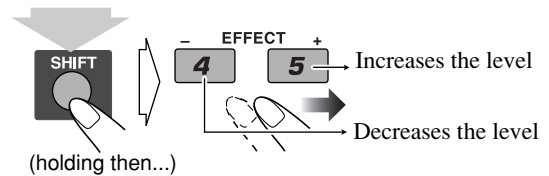

## Presetting Automatic DVD Video Sound

### Increase Level

The DVD Video sound is sometimes recorded at a lower level than for other discs and sources. You can set the increase level for the currently loaded DVD Video, so you do not have to adjust the volume every time you change the source.

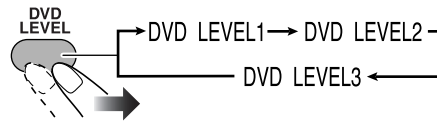

As the number increases, sound level also increases.


## Changing the Scanning Mode

 Remote ONLY

INFO

This System supports progressive scanning.

If you connect a progressive TV through the COMPONENT jacks, you can enjoy a high quality picture from the built-in DVD player by selecting "PROGRESSIV."



**PROGRESSIV** Progressive scanning. For a progressive TV.

**INTERLACE** Interlaced scanning. For a conventional TV.

• PROGRESSIVE indicator lights on when progressive mode is selected.




## Changing the Picture Tone Remote ONLY INFO

While showing a playback picture on the TV, you can select the preset picture tone, or adjust it and store your own likeliness.


### To select a preset picture tone

#### 1 Activate VFP.

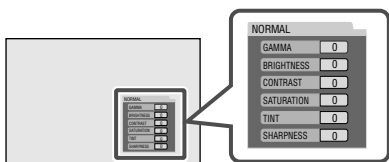

On the TV screen

#### 2 Select a preset picture tone.

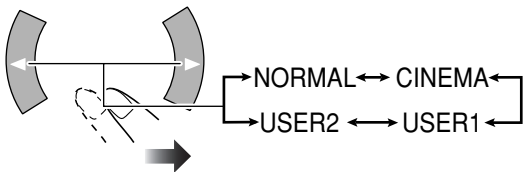


<b>NORMAL</b>	Normally select this.
<b>CINEMA</b>	Suitable for a movie source.
<b>USER1/USER2</b>	You can adjust parameters and can store the settings (see below).

### To adjust the picture tone

#### 1 Select "USER1" or "USER2."


- Follow steps 1 and 2 explained above.

#### 2 Select a parameter you want to adjust.

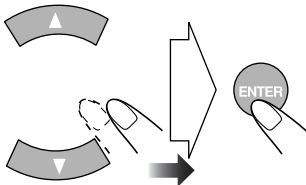

<b>GAMMA</b>	Adjust if the neutral color is bright or dark. The brightness of dark and bright portions is maintained (-3 to +3).
<b>BRIGHTNESS</b>	Adjust if the picture is bright or dark as a whole (-8 to +8).
<b>CONTRAST</b>	Adjust if the far and near position is unnatural (-7 to +7).
<b>SATURATION</b>	Adjust if the picture is whitish or blackish (-7 to +7).
<b>TINT</b>	Adjust if the human skin color is unnatural (-7 to +7).
<b>SHARPNESS</b>	Adjust if the picture is indistinct (-8 to +8).

#### 3 Adjust the parameter.

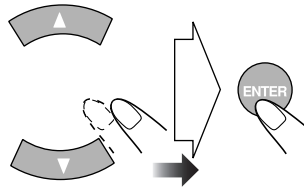


#### 4 Repeat steps 2 to 3 to adjust other parameters.

#### 5 Finish setting.



## Changing the Display Brightness Remote ONLY

You can dim the display window.

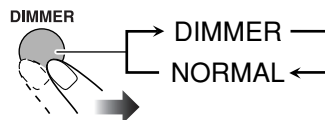

## Setting the Clock




INFO

Without setting the built-in clock, you cannot use Daily/Recording Timers (see page 40) and Sleep Timer (see next column).


- To exit from the clock setting, press CLOCK/TIMER as required.
- To go back to the previous step, press CANCEL/DEMO.

### 1 Activate clock setting mode.

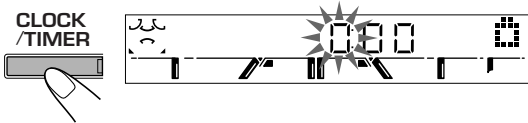


- If you have already adjusted the clock before, press the button repeatedly until the clock setting mode is selected.

### 2 Adjust the hour.

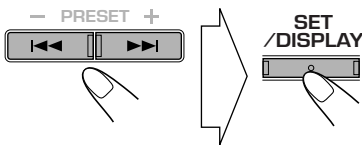


### 3 Adjust the minute.

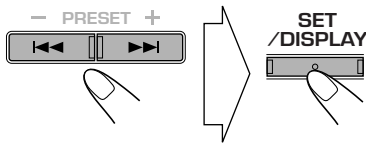

Now the built-in clock starts working.

### To check the current time during play

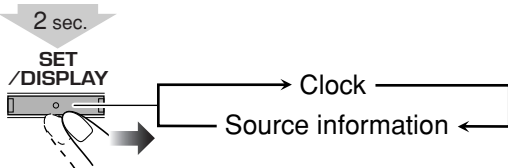


## Turning Off the Power Automatically

Remote ONLY

With Sleep Timer, you can fall asleep listening to music.
 
### 1 Specify the time (in minutes).



### 2 Wait until the set time goes off.


#### To check the time remaining until the shut-off time



- If you press repeatedly, you can change the shut-off time.

# Unique DVD/VCD Operations

## Remote Control

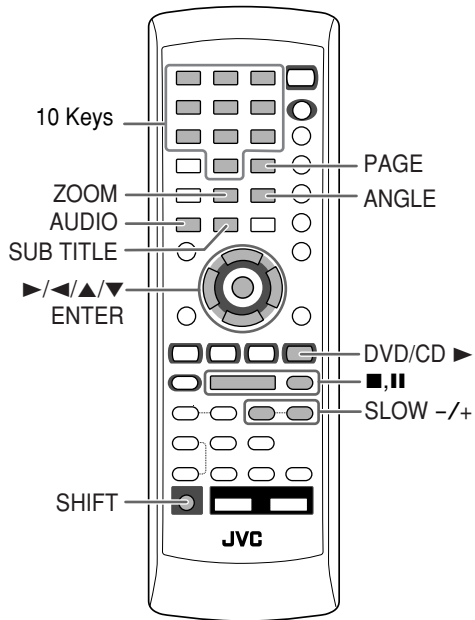

## Selecting the Sound Track Remote ONLY »»» INFO

**For DVD Video:** While playing back a chapter containing audio languages, you can select the language to listen to.

**For DVD Audio:** While playing back a track containing audio channels, you can select the audio channel to listen to.


**For SVCD/VCD:** When playing back a track, you can select the audio channel to play.

- You can also select the audio track using the on-screen bar (see page 31).


### While playing a DVD Video...



Ex.:

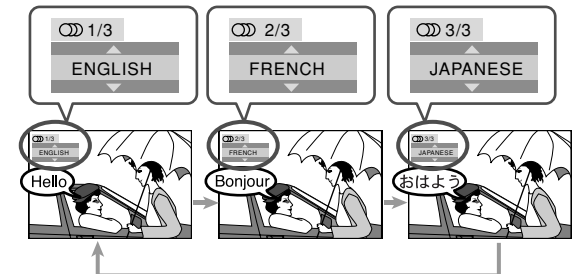

### While playing an SVCD or VCD...

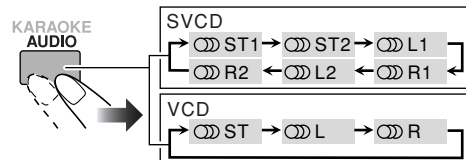

**ST1/ST2/ST** To listen to normal stereo (2 channel) playback.

**L1/L2/L** To listen to the left audio channel.

**R1/R2/R** To listen to the right audio channel.

- SVCD can have 4 audio channels. SVCD usually uses these 4 channels to record two 2-channel recordings (ST1/ST2).

## Selecting the Subtitle Language

 
**For DVD Video:** While playing back a chapter containing subtitles in different languages, you can select the subtitle language to display on the TV screen.

**For SVCD:** While playing, you can select the subtitles even if no subtitles are recorded on the disc.


- You can also select the subtitle language using the on-screen bar (see page 31).

**While playing a DVD Video...**


### 1 Display the subtitle selection window.




### 2 Select the subtitle language.

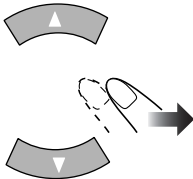

Ex.:

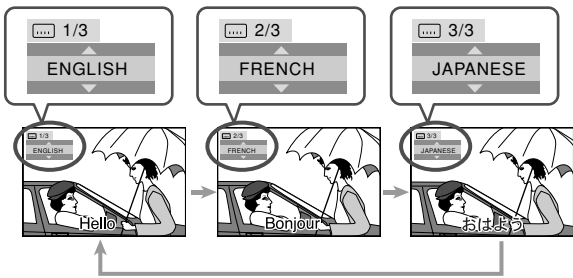

**While playing an SVCD...**

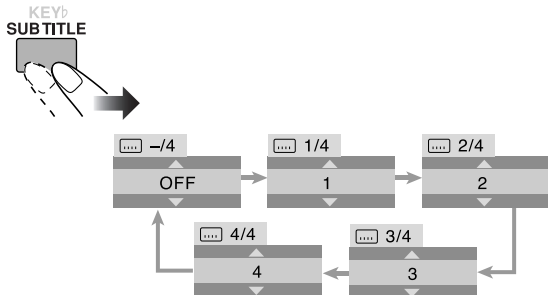

## Selecting a View Angle


While playing back a chapter (of DVD Video) containing multi-view angles, you can view the same scene from different angles.

- You can also select the view angle using the on-screen bar (see page 31).

**While playing back or paused...**




Ex.:

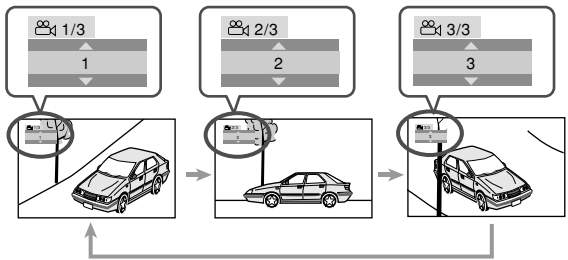

## Selecting a Still Pictures on a DVD Audio

While playing back a track (of DVD Audio) linked to browsable still pictures (B.S.P.), you can select the still picture (turn the page) to be shown on the TV screen.

- If a track is linked to browsable still pictures (B.S.P.), they are usually shown in turn automatically during playback.
- You can also select the page using the on-screen bar (see page 31).

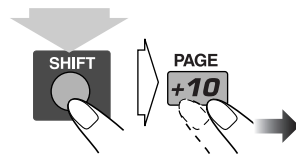

(holding then...)

Each time you press the button, the still picture changes one after another (if available).

## Playing Back a Bonus Group on a DVD Audio



INFO


Some DVD Audios have a special group called “bonus group” whose contents are not open to the public.

- To play back a bonus group, you have to enter the specific “key number” (a kind of password) for the bonus group. The way of getting the key number depends on the disc.

### 1 Select the bonus group.

- The bonus group is usually recorded as the last group (for example, if a disc contains 4 groups including a bonus group, “group 4” is the bonus group).
- For how to select the group, see “To select a title/group” on page 16.

### 2 Enter the key number.

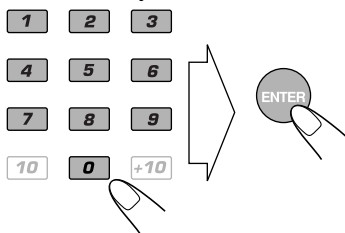

### 3 Follow the interactive instruction shown on the TV screen.

To cancel the key number entry, press ■ or change to another source.

## Special Picture Playback

INFO

### Still picture playback

To start still picture playback:	To resume normal playback:
While playing... 	

 
### Frame-by-frame playback

#### 1 While playing...



Still picture playback starts.

#### 2 Advance the still picture frame by frame.



To resume normal playback, press DVD/CD ►.



## Slow-motion playback

### 1 While playing...



Still picture playback starts.

### 2 Select slow motion speed.

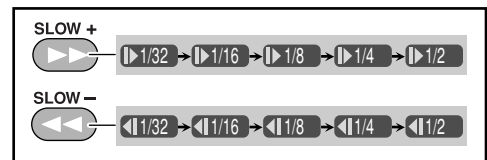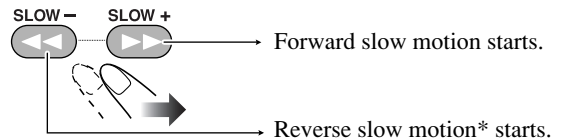


\*Only for DVD Video.

To resume normal playback, press DVD/CD ►.

## Zoom




### 1 While playing back...

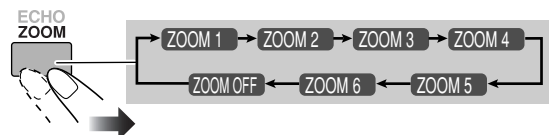

As the number increases, magnification also increases.


### 2 Move the zoomed-in position.

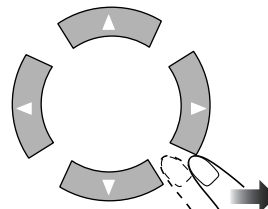


To resume normal playback, press ZOOM repeatedly until “ZOOM OFF” appears on the TV screen.

# Advanced Disc Operations

## Remote Control

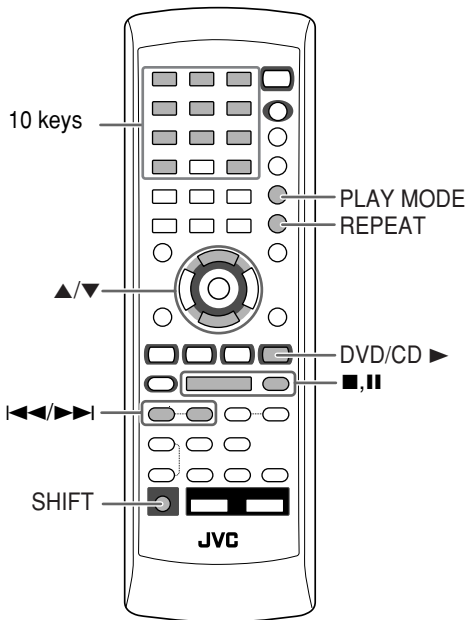

## Main unit

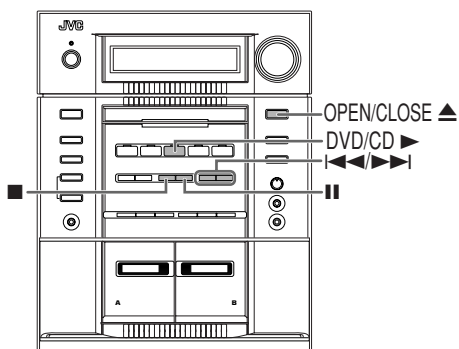

## Programming the Playing Order





### —Program Play



You can arrange the playing order of the tracks (up to 99) before you start playback.

#### 1 Before starting playback, activate Program Play.

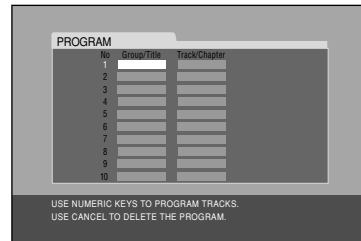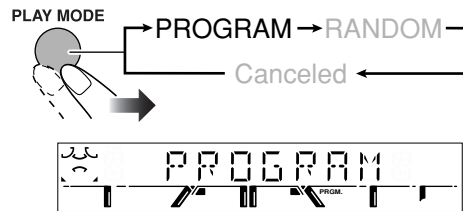

On the TV screen

#### 2 Select chapters or tracks you want for Program Play.


##### • For DVD/MP3/WMA:

- ① Select a title or group number.
- ② Select a chapter or track number.

##### • For SVCD/VCD/CD:

- ① Select a track number.

#### To enter the numbers:

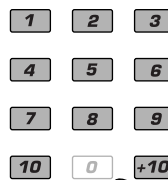

#### Examples:

To enter number 5, press 5.

To enter number 15, press +10, then 5.

To enter number 30, press +10, +10, then 10.

#### 3 Repeat the above step 2 until you finish what you want to program.

#### 4 Start playback.

 
 


Playback starts in the order you have programmed.

To skip a track:	To pause:	To stop:
<p>GROUP SKIP</p> <p>PREV.    NEXT</p>	<p>To release, press DVD/CD ►.</p>	

## To check the programmed contents

Before or after playback...



## To modify the program

Before or after playback...

To erase the last step:	To erase the entire program:
<p>SHIFT    CANCEL</p> <p>(holding then...)</p>	<p>You can also use ■ button on the unit.</p>

### To add steps in the program:

Repeat step 2 on page 27.

## To exit from Program Play

Before or after playback...




## Playing at Random—Random Play



You can play the contents of all tracks at random.

### 1 Before starting playback, activate Random Play.

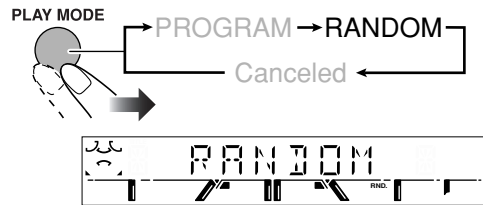

### 2 Start playback.



Playback starts in a random order. Random Play ends when all chapters/tracks are played.

To skip:	To pause:	To stop:
<p>To go to the beginning of the current track, press ◀◀.</p>	<p>To release, press DVD/CD ►.</p>	

## To exit from Random Play

Before or after playback...



## Playing Repeatedly



 
- You can also select the repeat mode using the on-screen bar (see page 31).

### Repeat Play

You can repeat playback.


#### • For DVD Video:

While playing...




#### • For DVD Audio:

 While playing or before playback...




#### • For CD/SVCD/VCD:

 While playing (without PBC for SVCD/VCD) or before playback...




#### • For MP3/WMA:

 While playing or before playback...




#### • For MPEG-4:

 While playing or before playback...



#### • For Program Play/Random Play mode:

 While playing or before playback...



<b>CHAP</b>	Repeats the current chapter.
<b>TITLE</b>	Repeats the current title.
<b>TRACK</b>	Repeats the current track.
<b>GROUP</b>	Repeats the current group.
<b>ALL</b>	Repeats all tracks or all programmed tracks.
<b>STEP</b>	Repeats the current track.
<b>OFF</b>	Selects to cancel Repeat Play mode.

## Prohibiting Disc Ejection




### —Child Lock



You can lock the disc tray so that no one can eject the loaded disc.

- This operation is possible only when the source is the disc player.

While the disc tray is closed...

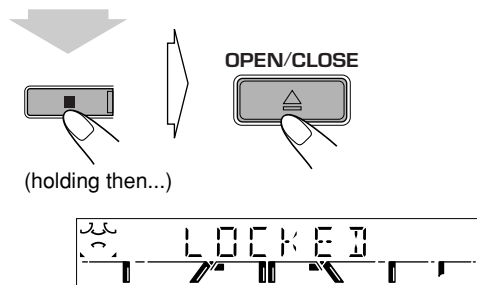


To cancel the prohibition, repeat the same procedure. "UNLOCKED" appears on the display.




# On-Screen Disc Operations

## Remote control

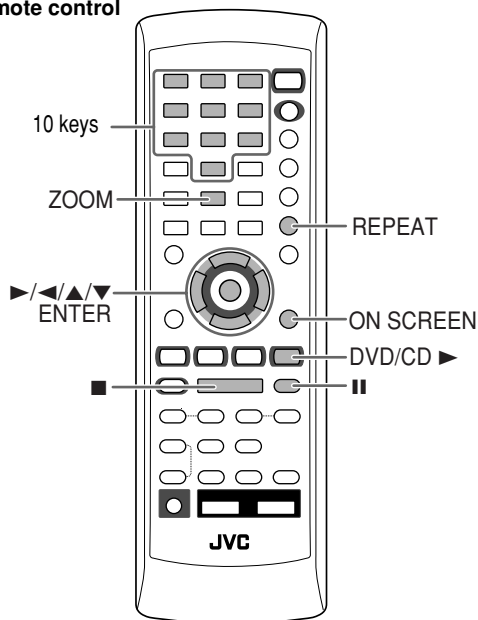


## On-screen bars
 
### DVD Video



### DVD Audio

 

### SVCD



### VCD



### CD



## About the On-screen Bar

You can check the information on disc (except for MP3/WMA/JPEG/MPEG-4 disc) and use some functions through the on-screen bar.

### 1 Disc type

### 2 Playback information

Indication	Meanings
Mbps	Current transfer rate (Megabits per second)
TITLE 2	Current title
CHAP 3	Current chapter
GROUP 1	Current group
TRACK 14	Current track
TOTAL 1:25:58	Time indications

### 3 Playback conditions

Indication	Meanings
▶	Playback
▶▶ / ◀◀	Forward/Reverse search
▶▶ / ◀◀	Forward/Reverse slow-motion
⏸	Pause
■	Stop

### 4 Operation icons (on the pull-down menu)

Indication	Meanings
TIME	Select to change the time indication (see also page 31).
↺	Select to repeat playback (see also pages 29, 31, and 32).
⌚	Select for time search (see also page 32).
CHAP. ▶	Select for chapter search (see also page 33).
TRACK ▶	Select for track search (see also page 33).
Ⓛ 1/3	Select to change the audio language or channel (see also page 24).
☰ 1/3	Select to change subtitle language (see also page 25).
📺 1/3	Select to change the view angle (see also page 25).
PAGE 1/15	Select to change the page (see also page 25).

## Operations Using the On-screen Bar




INFO

Basic operation procedure through the on-screen bar is as follows:


**While a disc is selected as the source...**

Ex.: Selecting a subtitle (French) for DVD Video:

### 1 Display the on-screen bar with the pull-down menu.

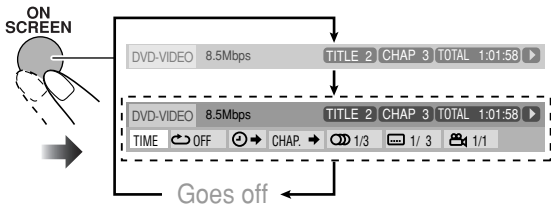


### 2 Select (highlight) the item you want.

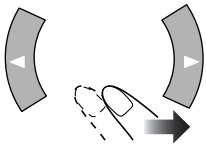

### 3 Display the pop-up window.



### 4 Select the desired option in the pop-up window.

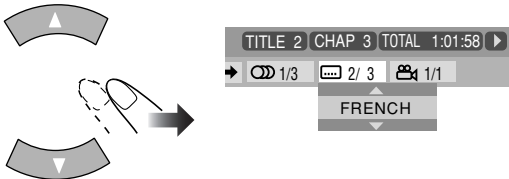


### 5 Finish the setting.



Pop-up window goes off.
 
### To erase the on-screen bar



## Changing the time information

 
You can change the time information in the on-screen bar and the display window on the main unit.

### 1 Display the on-screen bar with the pull-down menu.



### 2 Make sure [TIME] is selected (highlighted).

### 3 Change the time indication.



<b>TOTAL</b>	Elapsed disc time.
<b>T.REM</b>	Remaining disc time.
<b>TIME</b>	Elapsed playing time of the current chapter/track.
<b>REM</b>	Remaining time of the current chapter/track.

### To erase the on-screen bar



## Repeat Play

• See also page 29.

### 1 While playing a disc (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.

### 2 Select [OFF].

### 3 Display the pop-up window.



### 4 Select the repeat mode you want.

<b>ALL</b>	Repeats the disc (except for DVD).
<b>A-B</b>	Repeats a desired portion (see page 32).
<b>TITLE</b>	Repeats the current title.
<b>GROUP</b>	Repeats the current group.
<b>CHAPTER</b>	Repeats the current chapter.
<b>TRACK*</b>	Repeats the current track.
<b>OFF</b>	Cancels Repeat Play.

\* During Program Play or Random Play, "STEP" appears.

## 5 Finish the setting.



To cancel Repeat Play, select "OFF" in step 4.

To erase the on-screen bar



## A-B Repeat

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select OFF.
- 3 Display the pop-up window.



### 4 Select "A-B".



### 5 Select the start point (A).



 
- Before pressing ENTER, you can search for the end point using .

### 6 Select the end point (B).



A-B Repeat starts. The selected portion plays repeatedly.

To erase the on-screen bar



## Time Search


You can move to a particular point by specifying the elapsed playing time from the beginning.

- 1 While playing (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.
  - Except for DVD: Time Search can be used before starting playback.
- 2 Select .
- 3 Display the pop-up window.



### 4 Enter the time.

You can specify the time in hours/minutes/seconds.

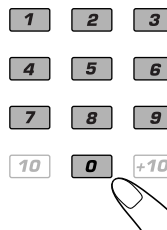

#### Examples:

To move to a point of 1 (hours): 02 (minutes): 00 (seconds), press 1, 0, 2, 0, then 0.

To move to a point of 54 (minutes): 00 (seconds), press 0, 5, 4, 0, then 0.

- It is always required to enter the hour digit (even "0" hour), but it is not required to enter trailing zeros (the last two digits in the examples above).
- To correct a misentry, press cursor to erase the last entry.

### 5 Finish the setting.



The System starts playing from the specified time.

To erase the on-screen bar




## Chapter/Track Search

You can search for the chapter (DVD Video) or track (DVD Audio) number to play.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **CHAP. →** or **TRACK →** .
- 3 Display the pop-up window.



- 4 Enter the desired chapter/track number.

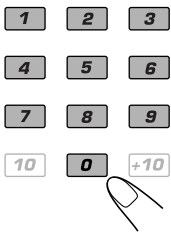

### Examples:

To select chapter/track 5, press 5.

To select chapter/track 15, press 1, then 5.

To select chapter/track 30, press 3, then 0.

- To correct a misentry, press the 10 keys until the desired number shown in the pop-up window.

- 5 Finish the setting.



The System starts playing the searched chapter or track.

To erase the on-screen bar



## Operations on the CONTROL



## Screen

INFO

The CONTROL screen automatically appears on the TV screen when you load an MP3, WMA, JPEG, or MPEG-4 disc.

You can search for and play the desired tracks through the CONTROL screen.

- If more than two types of files (MP3/WMA files, JPEG files, and MPEG-4 files) are recorded on a disc, select the file type to play (see page 44).

**CONTROL screen**


Ex.: When the MP3 disc is loaded.

The screenshot shows the CONTROL screen interface with the following elements:


- 1: Group number/total group number (2 / 3)
- 2: Current group (Red)
- 3: Group list (Blue, Red, Green)
- 4: Current track (Rain.mp3)
- 5: Track information (Title, Rain, Artist, Album)
- 6: Repeat Play setting (REPEAT TRACK)
- 7: Elapsed playing time of the current track (Time: 00:00:14)
- 8: Operation mode icon (playhead)
- 9: Current track number/total number of tracks in the current group (5 / 14 (Total 41))
- 10: Highlight bar
- 11: Track list (Cloudy.mp3, Fair.mp3, Fog.mp3, Hail.mp3, Indian summer.mp3, Shower.mp3, Snow.mp3, Thunder.mp3, Typhoon.mp3, Wind.mp3, Winter sky.mp3)

- 1 Current group number/total group number
- 2 Current group
- 3 Group list
- 4 Current track
- 5 Track information (Tag information: only for MP3/WMA)
- 6 Repeat Play setting
- 7 Elapsed playing time of the current track (only for MP3/WMA)
- 8 Operation mode icon
- 9 Current track number/total number of tracks in the current group (total number of tracks on the loaded disc)
- 10 Highlight bar
- 11 Track list

## To move the highlight bar between group list and track list

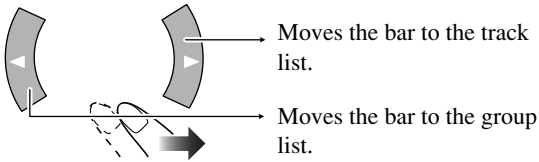

## To select a group/track in the list

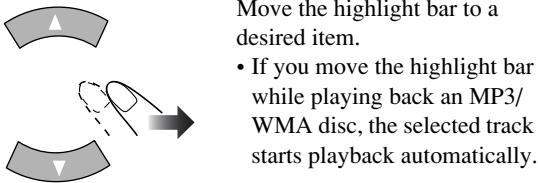


## To start playback

For MP3/WMA/MPEG-4:	
	Playback starts with the selected track. • Pressing DVD/CD ► also starts playback.
For JPEG:	
	The selected track (still picture) is displayed until you change it.
	Slide-show playback starts. Each track (still picture) is shown on the screen for a few seconds, then changes one after another.


- Once you start playing back a JPEG/MPEG-4 track, the CONTROL screen goes off.
- While playing back an MPEG-4 track, you can use ON SCREEN button to show the following information on the display:
  - Repeat Play setting
  - Elapsed playing time of the current track
  - Operation mode icon
- To cancel slide-show, and display the current still picture, press **II**.
 
## To stop playback



## To repeat slide-show for JPEG

 While playing or before starting playback...




<b>GROUP</b>	Repeats the current group.
<b>ALL</b>	Repeats all disc.

- For Repeat Play of MP3/WMA/MPEG-4, see page 29.

## To zoom in the still picture


For JPEG: While playback is paused...

For MPEG-4: While playing back...

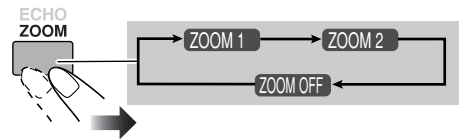

As the number increases, magnification also increases.


## To move the zoomed-in position

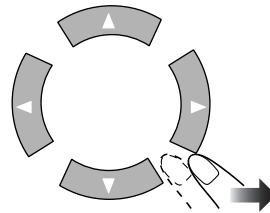

To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

# Advanced Tape Operations

## Main unit

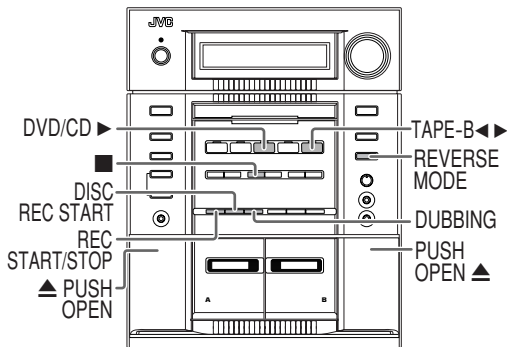

## IMPORTANT

It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

## Recording on a Tape




INFO


You can use type I tapes for recording.

- To play a tape, see page 18.


### 1 Insert a recordable cassette in deck B.

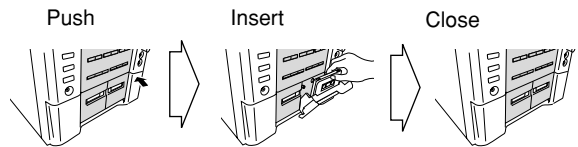


### 2 Check the tape running direction and Reverse Mode settings on the display.

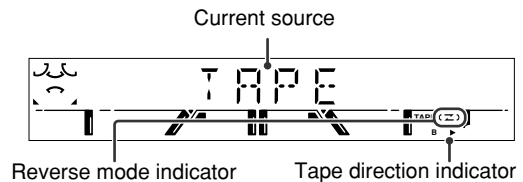

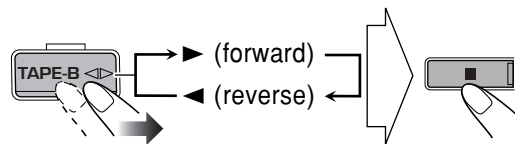


### To change the direction

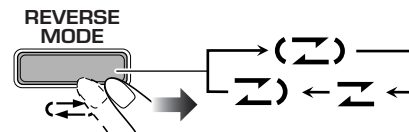

### Change the Reverse mode if necessary

 


<p>     </p>	<p>To record on both sides.</p> <ul style="list-style-type: none"> <li>• When using Reverse Mode, start recording in the forward (▶) direction.</li> </ul>
<p>  </p>	<p>To record on only one side.</p>


### 3 Start playing the source—"FM," "AM," "DVD/CD," "TAPE-A" or "AUX."

- When recording a disc, you can also use "Synchronized Disc Recording" (see the right column).

### 4 Start recording.




### To stop recording

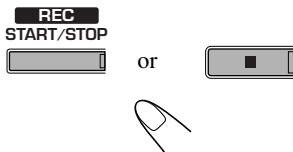

## Dubbing Tapes



### 1 Change the source to TAPE.

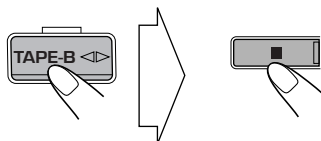

### 2 Insert the source cassette in deck A, and a recordable cassette in deck B.

### 3 Check the tape running direction and Reverse Mode settings on the display.

 
See step 2 of "Recording on a Tape" on page 35.

### 4 Start dubbing.



- When either tape playback or recording ends, both cassette decks stop at the same time.

### To stop dubbing



## Synchronized Disc Recording



INFO

You can start and stop both disc play and tape recording at the same time.

### 1 Load a disc and insert a recordable cassette.

- If the current playing source is not the disc player, press DVD/CD ►, then ■.

### 2 Check the tape running direction and Reverse Mode settings on the display.

- See step 2 of "Recording on a Tape" on page 35.

### For recording desired tracks on discs:

You can program tracks to record with your preferred order.

- Select Program Play (and make a program (see page 27)) without starting playback.

### 3 Start recording.



The System automatically creates 4-second blanks between the tunes recorded on the tapes.

- When either disc play or recording ends, both disc player and the cassette deck stop at the same time.

## To record without creating a 4-second blank

- 1 Press DVD/CD ►, then press II.
- 2 Press ◀◀ to go back to the beginning of the track.
- 3 Start recording.

 
### To protect your recording

Cassettes have two small tabs on the back to protect from unexpected erasure or re-recording.

To protect your recording, remove these tabs.




To re-record on a protected tape, cover the holes with adhesive tape.




# Enjoying Karaoke

## Remote control

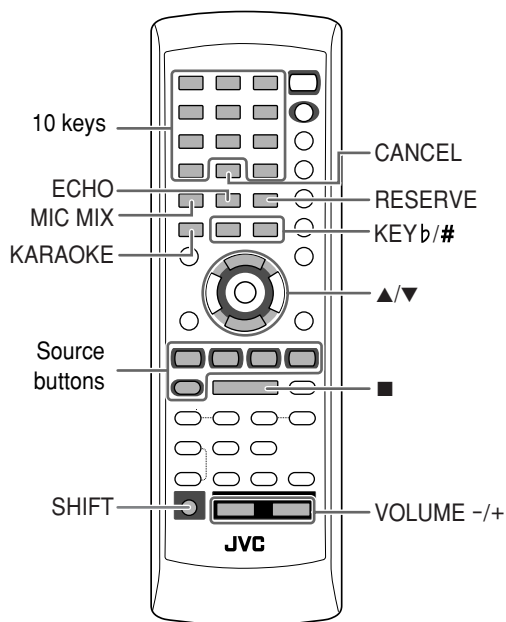

## Main unit

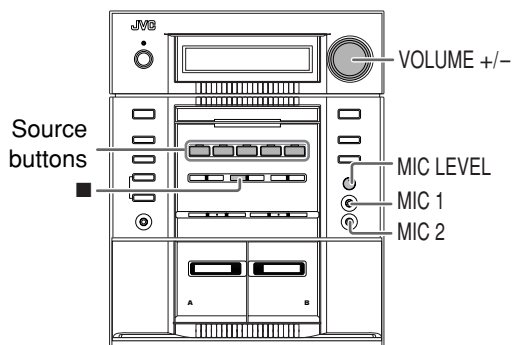

### IMPORTANT

- Always set MIC LEVEL to MIN when connecting or disconnecting the microphone.
- MIC LEVEL adjustment is valid for both microphones connected to the MIC 1 and MIC 2 jacks.



DO NOT keep the microphones connected while they are not in use.

## Microphone Mixing

INFO

You can enjoy microphone mixing while playing any source.

When Mic mixing mode is activated, you can use two microphones connected the MIC jack.


### 1 Turn MIC LEVEL to MIN.




### 2 Connect the microphone(s) (not supplied) to the MIC 1 and/or MIC 2 jack.

### 3 Start playing the source—FM, AM, disc player, tape, or auxiliary equipment connected to the AUX IN jacks.

### 4 Activate the Mic mixing mode.

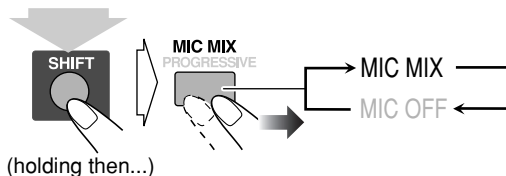

### 5 Adjust the MIC LEVEL and VOLUME.

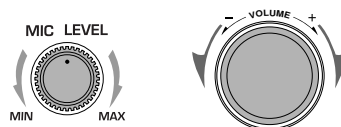


To cancel from the Mic mixing mode, select “MIC OFF” in step 4.




## To use microphone only
 
### 1 Turn MIC LEVEL to MIN.




### 2 Connect the microphone(s) (not supplied) to the MIC 1 and/or MIC 2 jack.

### 3 Select disc player, then stop playback.

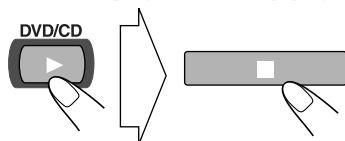


### 4 Activate the Mic mixing mode.

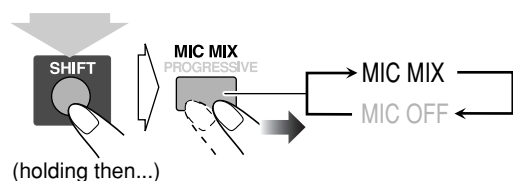

(holding then...)


### 5 Adjust the MIC LEVEL and VOLUME.

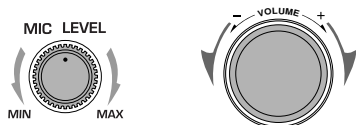

To cancel from the Mic mixing mode, select "MIC OFF" in step 4.

## To apply an echo to your voice

During Mic mixing mode is activated...

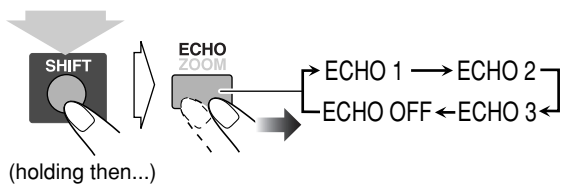

(holding then...)

- As the number increases, echo level also increases.

## Singing Along (Karaoke) INFO

You can enjoy singing along (Karaoke) and microphone mixing by using two microphones. Karaoke mode is vocal masking mode. The vocal masking reduces the lead vocal of any disc (except for DVD Audio/MPEG-4) source, and allows you to replace it by singing into the microphones as the music plays. If the playing disc is a multiplex Karaoke disc, you can enjoy multiplex sound by press AUDIO (see page 24).

### 1 Turn MIC LEVEL to MIN.




### 2 Connect the microphone(s) (not supplied) to the MIC 1 and/or MIC 2 jack.

### 3 Start playback.




### 4 Activate the Mic mixing mode.

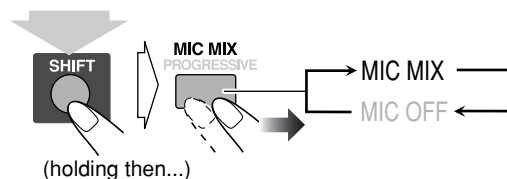


(holding then...)

### 5 Activate the Karaoke mode.

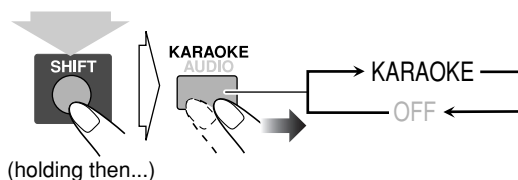

(holding then...)


### 6 Adjust the MIC LEVEL and VOLUME.

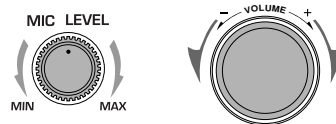

To cancel from the Karaoke mode, select "OFF" in step 4 or change the source to play.

## To adjust the Key (disc playback only)

While playing back a disc...

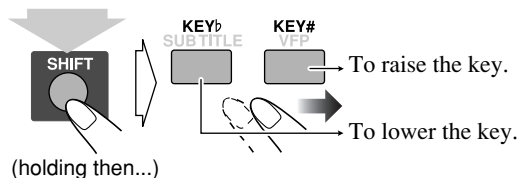

(holding then...)


## Reserving Karaoke Songs

### —Karaoke Program Play




You can determine the playback order of the titles or tracks on the disc player. You can program up to 12 steps.

#### 1 Change the source to the “DVD/CD.”

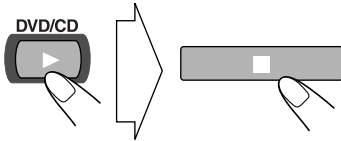

#### 2 Activate Karaoke Program mode.

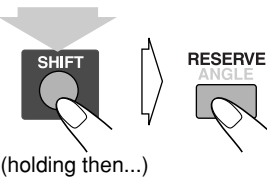

No	Gr/Tt	Tr/Chap
1		
2		
3		
4		
5		

On the TV screen

• PRGM. indicator flashes during this mode.

#### 3 Select songs you want for Karaoke program play.

**For DVD Video/MP3/WMA:**

- Press the number buttons to select a title (DVD Video) or group (MP3/WMA).
- Repeat step ① to select a chapter (DVD Video) or track (MP3/WMA).

**For SVCD/VCD/CD:**

Press the number buttons to select a track.

1 2 3

**Examples:**

To select number 5, press 5.

4 5 6

To select number 15, press

+10, then 5.


7 8 9

To select number 30, press

+10, +10, then 10.

10 0 +10


#### 4 Activate the Mic mixing mode.

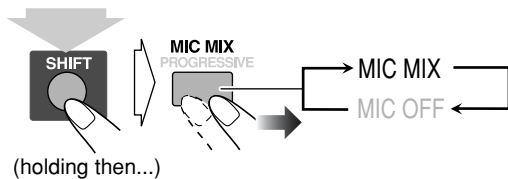

#### 5 Start playback.



#### To check the programmed contents

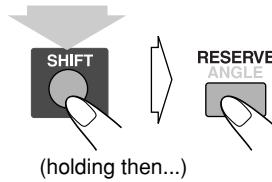


The Karaoke reserve screen appears.


#### To modify the program

While the Karaoke reserve screen is shown on the TV...

##### To erase the unwanted step:

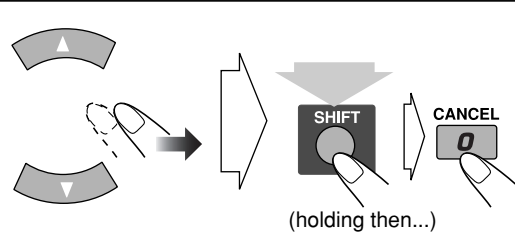

##### To erase the entire program:

 


##### To add steps in the program:

Repeat step 3.

# Timer Operations

## Main unit

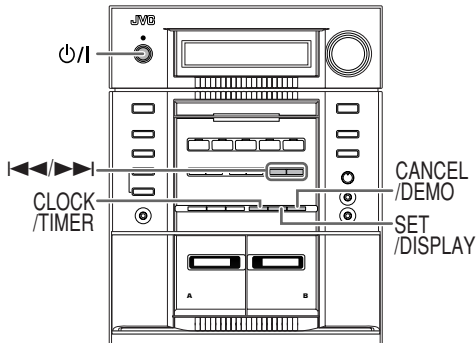

## Setting the Timer




INFO


Using Daily Timer, you can wake up with your favorite song. On the other hand, with Recording Timer, you can make a tape of a radio broadcast automatically.

- To correct a misentry during the process, press CANCEL/DEMO. You can return to the previous step.

### 1 Select one of the timer setting modes (TIMER(ON)) you want to set—Daily Timer or Recording Timer.

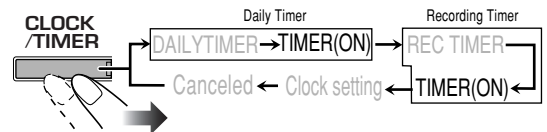

### 2 Make the timer setting as you want.

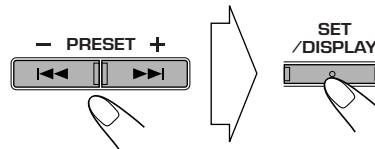

Repeat the procedure until you finish setting in the following order:

- ① Set the hour then minute for on-time.
- ② Set the hour then minute for off-time.
- ③ For Daily Timers: Select the playback source—“TUNER FM,” “TUNER AM,” “DISC,” “TAPE-A,” “TAPE-B” or “AUX IN.”

For Recording Timer: Select the playback source—“TUNER FM” or “TUNER AM.”



EX.: When “TUNER FM” is selected.

- ④ Select a preset station for “TUNER FM” and “TUNER AM,” or select a group and track number for “DISC.”
- ⑤ For Daily Timers: Select the volume level.
  - You can select the volume level (“VOLUME 5,” “VOLUME 10,” “VOLUME 15” and “VOLUME --”). If you select “VOLUME --,” the volume is set to the last level when the system has been turned off.

**3 Turn off the System (on standby) if you have set the timer with the System turned on.**



**How Daily Timer actually works**

Once the Daily Timer has been set, the timer (⏰) indicator and DAILY indicator are lit on the display. Daily Timer is activated at the same time everyday until the timer is turned off manually (see the next column).

**When the on-time comes**

The System turns on, tunes in to the specified station or starts playing the specified source, and sets the volume level to the preset level.

**When the off-time comes**

The System stops playback, and turns off (standby).  
 • The timer setting remains in memory until you change it.

**How Recording Timer actually works**

When Recording Timer has been set, Timer (⏰) indicator and the REC indicator are lit on the display. Recording Timer works only once.

**When the on-time comes**

The System turns on, tunes in to the specified station, sets the volume level to “VOLUME MIN,” and starts recording.

**When the off-time comes**

The System stops recording, and turns off (standby).  
 • The timer setting remains in memory until you change it.


Even if the System is power on condition and selected other source, Recording Timer will be activated.

**To turn off the Timer after its setting is done**

You can turn off the timer after it has been set.

- Since Daily Timer is activated at the same time everyday, you may need to cancel it on some particular days.

**1 Select the timer you want to cancel (DAILYTIMER or REC TIMER) you want to cancel.**

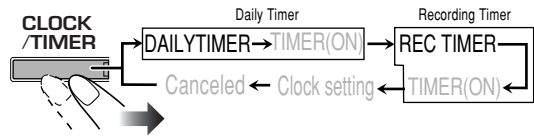


**2 Turn off the selected timer.**



- The timer (⏰) indicator goes off.

 
To turn on the timer again, repeat the step 1 and press SET/DISPLAY.



**Timer Priority** INFO


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps.

- Recording Timer has priority over the Daily Timer and Sleep Timer (see page 23).

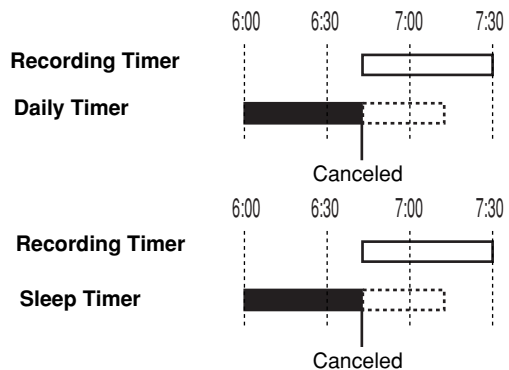

# Set up Menu Operations


## Remote control

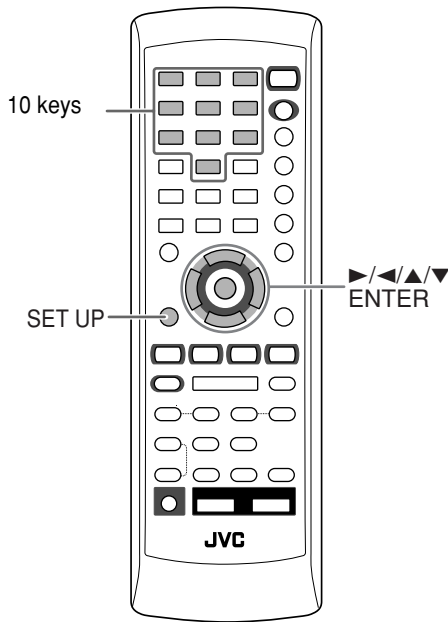

## Set up Menu Icons

The icon for the selected Set up Menu will be highlighted.

Ex.: LANGUAGE Set up Menu is selected.

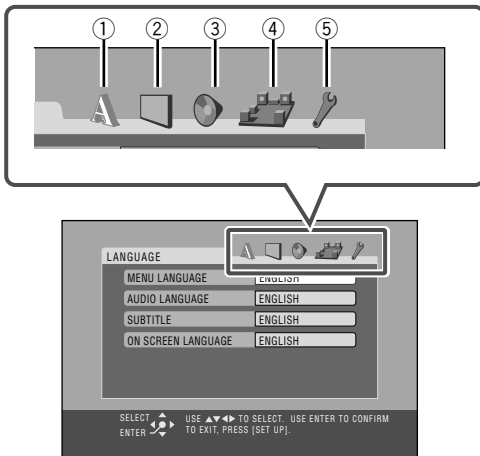

- ① LANGUAGE Set up Menu
- ② PICTURE Set up Menu
- ③ AUDIO Set up Menu
- ④ SPK. SETTING Set up Menu
- ⑤ OTHERS Set up Menu

## Operating Procedure




You can use the Set up Menus only when a disc is selected as the source and its playback is not yet started.

Ex.: Selecting "STILL PICTURE" for "FILE TYPE":


### 1 Show the set up menu.




### 2 Select one of the set up menus.

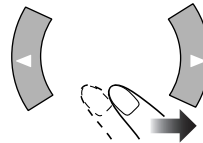



### 3 Select the item you want to adjust.

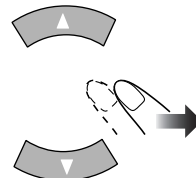

### 4 Display the pop-up window.

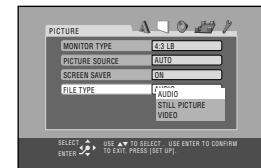

### 5 Select the desired option in the pop-up window.

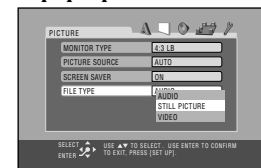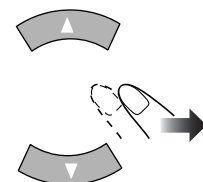

### 6 Finish the setting.



- 7 Repeat steps 3 to 4 to set other items on the same Setup Menu.  
Repeat steps 2 to 4 to set other items on another Setup Menu.

## To finish the Set up Menu


SET UP



## LANGUAGE Set up Menu

INFO

You can select the initial languages for disc playback. You can also select the language shown on the TV screen while operating this System.

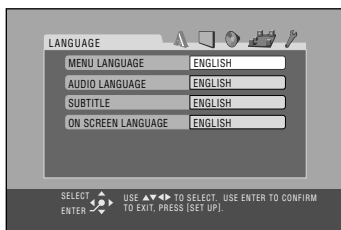

### MENU LANGUAGE

Some discs have multiple menu languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 54).

### AUDIO LANGUAGE

Some discs have multiple audio languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 54).

### SUBTITLE

Some discs have multiple subtitle languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 54) or “OFF (no subtitle).”


### ON SCREEN LANGUAGE

Select one of the languages shown on the TV from—ENGLISH, CHINESE, and SPANISH.

## PICTURE Set up Menu

INFO

You can select the desired options concerning a picture or monitor screen.

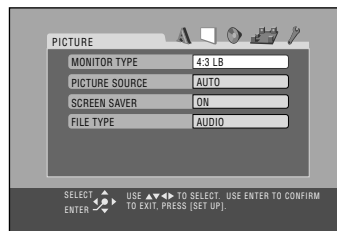

### MONITOR TYPE

You can select the monitor type of your TV when you play DVD Video recorded with aspect ratio of 16:9.

#### For the multi-color system TV

When you use a multi-color system TV, you can change the color system of the System automatically by selecting “MULTI” options as the monitor type. In this case, the color system of the System is changed to match the color system of the loaded disc regardless the VIDEO OUT SELECT setting for better picture quality.

#### Select one of the following

##### 16:9 / 16:9 MULTI (Wide television conversion):

 
Select when the aspect ratio of your TV is 16:9 (wide TV) and when the TV has the screen size adjustment function.

##### 4:3 LB (Letter Box) / 4:3 MULTI LB:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

##### 4:3 PS (Pan Scan) / 4:3 MULTI PS:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9

 

Ex.: 4:3 LB

 

Ex.: 4:3 PS

## PICTURE SOURCE

You can obtain optimal picture quality by selecting an appropriate option—picture source type (either video source or film source).

### Select one of the following:

---

**AUTO:** Normally select this.  
When playing back a disc containing both video and film sources, the System automatically changes the processing to match it to the picture type (film or video source) of the current chapter.

---

**FILM:** To play a film source disc.

---

**VIDEO:** To play a video source disc.

## SCREEN SAVER

You can activate or deactivate screen saver while operating the built-in disc player.

### Select one of the following:

---

**ON:** The on-screen display on the TV becomes dark when no operation is done for about 5 minutes.

---

**OFF:** To cancel the screen saver.

## FILE TYPE

If both audio tracks (MP3 or WMA files), still picture (JPEG files), and video (MPEG-4 files) are recorded on a disc, you can select which to play.

### Select one of the following:

---

**AUDIO:** To play MP3/WMA files.

---

**STILL PICTURE:** To play JPEG files.


---

**VIDEO:** To play MPEG-4 files.

## AUDIO Set up Menu

INFO

You can adjust the sound settings of the System.

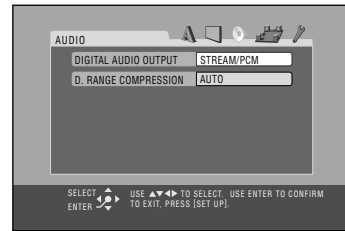

## DIGITAL AUDIO OUTPUT

When using the digital output terminal on the rear, set this correctly according to the connected component.

### Select one of the following:

---

**PCM ONLY:** To connect to a linear PCM digital equipment such as an MD recorder.

---

**DOLBY DIGITAL /PCM:** To connect to a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

---

**STREAM/PCM:** To connect to a DTS decoder or an amplifier with a built-in DTS decoder.

- See also "OPTICAL DIGITAL OUTPUT Signals" on page 56.

## D. RANGE COMPRESSION

You can compress the dynamic range (the difference between the loudest sound and the softest sound) to enjoy a powerful sound even at a low volume level when listening to Dolby Digital software. This is useful at night.

- The effectiveness varies depends on a software.

### Select one of the following:

---


**AUTO:** To enjoy powerful sounds with full dynamic range.

---


**ON:** Best for watching a movie at a low volume level.

## ■ SPK. SETTING Set up Menu

You can adjust the sound settings of the System

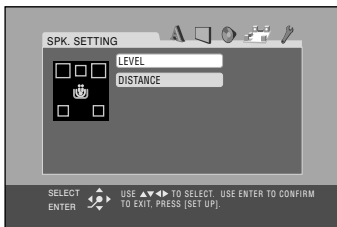

### Speaker Diagram

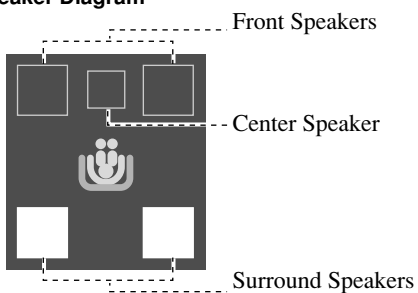


- The selected speaker icon is highlighted blue.

## LEVEL

Select this to enter the LEVEL submenu.

If the output sound of center speaker or surround speakers from the listening position are not equal to that of the front speakers, use test tone to adjust the output level to get the best possible surround effect.

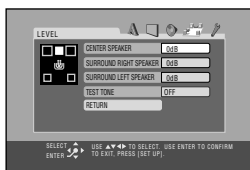


- 1 Select “ON” of the item TEST TONE.
- 2 Select the speaker—CENTER SPEAKER, SURROUND RIGHT SPEAKER, SURROUND LEFT SPEAKER.
- 3 Adjust the speaker output level for the selected speaker.  
You can adjust the output level within the range of -6 dB to +6 dB in 1 dB interval.
- 4 Repeat steps 2 and 3 to adjust the other speakers.
  - To stop test tone, select “OFF” of the item TEST TONE.
- 5 Select “RETURN” then press ENTER to return to the SPK. SETTING Set up menu.

## DISTANCE

Select this to enter the DISTANCE submenu.

See also “Setting the Speakers” on page 8.

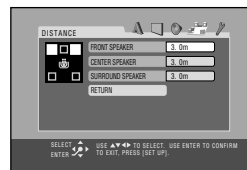

### FRONT SPEAKER, CENTER SPEAKER, SURROUND SPEAKER:

For each speaker, set the distance from the listening point within the range of 0.3 m to 9.0 m in 0.3 m intervals.


### RETURN:

Select this then press ENTER to return to the SPK. SETTING menu.



## ■ OTHERS Set up Menu

You can change some other convenient functions.

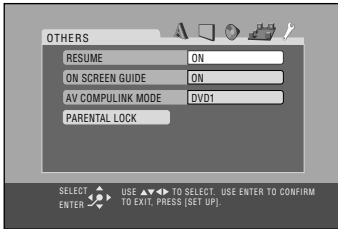

### RESUME

You can activate or deactivate Resume for disc playback (see page 16).

#### Select one of the following:

---

**ON:** To activate Resume.

---

**OFF:** To cancel Resume.

---

### ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons (see page 16).

- When recording the picture on a VCR, select “OFF” to avoid recording the guide icons on your video tape.

#### Select one of the following:

---

**ON:** To activate the on-screen guide icons.

---

**OFF:** To cancel the on-screen guide icons.

---



## AV COMPU LINK MODE

When connecting the System to a JVC's TV with the AV COMPU LINK remote control system, select the proper setting.

#### Select one of the following:

---

**DVD1:** To connect to the COMPONENT Video (or VIDEO-3 Input) jacks on the TV using a component video cord.

---

**DVD2:** To connect to the VIDEO-1 Input jack on the TV using an S-video cord.

---

**DVD3:** To connect to the VIDEO-2 Input jack on the TV using a composite video cord.

---

- For details, see “To connect the AV COMPU LINK cords” on page 7.

### PARENTAL LOCK

Select this to enter the PARENTAL LOCK submenu. See the section that follows.

## Restricting the Review

### —Parental Lock


You can restrict playback of DVD Video containing violent scenes and those unsuitable for your family members. Once you have set the rating level, such violent scenes (for which a higher level than you set is assigned) may be skipped or changed to another scene (depending on how the disc is programmed).

### To set Parental Lock



Set the rating level—Level 1 (most restrictive) to Level 8 (least restrictive).

#### 1 Display the Setup Menu.


SET UP

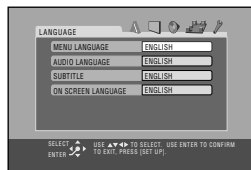

#### 2 Select the OTHERS Setup Menus.

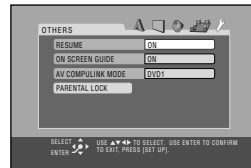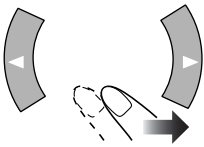


#### 3 Select “PARENTAL LOCK.”

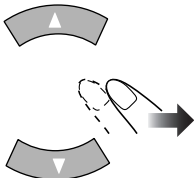

#### 4 Enter the PARENTAL LOCK submenu.




#### 5 Select “COUNTRY CODE,” then display the pop-up window.


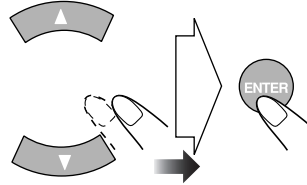


#### 6 Select the country code of your area.


- See also “Country/Area codes list for Parental Lock” on page 55 to find your country code.

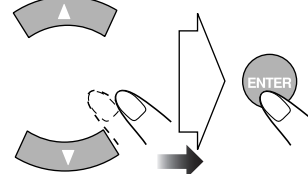

#### 7 Select “SET LEVEL,” then display the pop-up window.

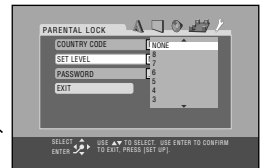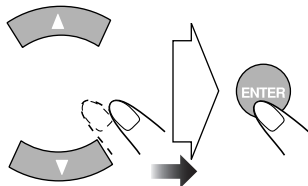


#### 8 Set the rating level (NONE, 8 – 1).

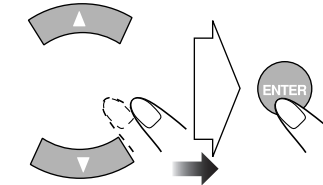

The System automatically enters password entry mode.

#### 9 Enter any 4-digit number for your password.

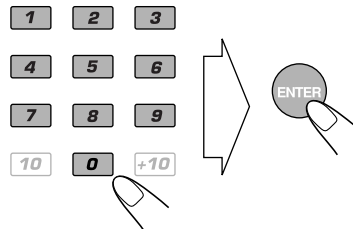

#### 10 Finish the setting.

SET UP



## To change the setting

### 1 Display the PARENTAL LOCK sub menu.


- Follow steps **1** to **4** of “To set Parental Lock”.



“PASSWORD” is automatically selected.

- You cannot select any item other than “EXIT” until you enter the correct password.

### 2 Enter your password.

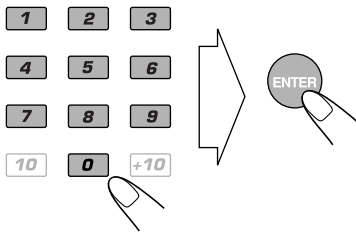


- If you enter a wrong password, “----” appears again.
- If you enter a wrong password three times, “EXIT” is automatically selected. In this case, press ENTER to exit from the PARENTAL LOCK submenu.
- If you forget your password, enter “8888.”

### 3 Change the settings.

- Follow steps **5** to **8** of “To set Parental Lock”.


### 4 Enter your password again.

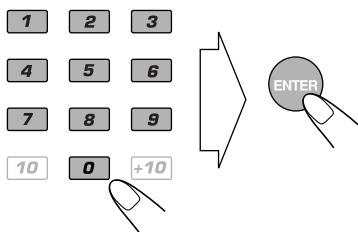


- If you want to change a password, enter a new four digit number in this step.

## To release Parental Lock temporarily

When you set a strict rating level, some discs may not be played back at all. When you try to play such a disc, the following screen appears on the TV screen.

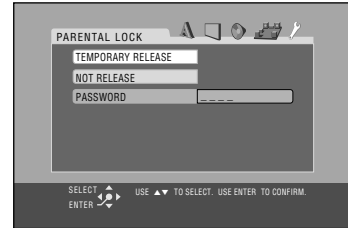


### 1 Select “TEMPORARY RELEASE,” then ENTER.

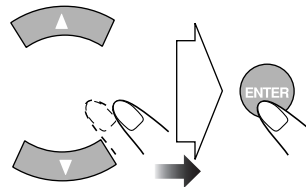

“PASSWORD” is automatically selected.

- If you do not play back such a disc, select “NOT RELEASE,” then ENTER. Then eject the disc.


### 2 Enter your password.

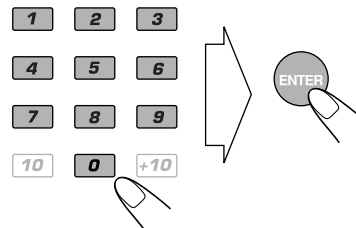

- If you enter a wrong password three times, “NOT RELEASE” is automatically selected. In this case, press ENTER. Then eject the disc.

# Operating the TV

## Remote control

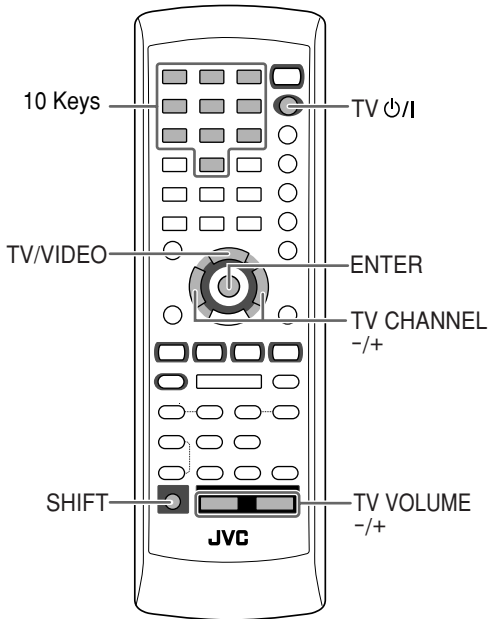


Manufacture's code	
Manufacture	Code number
JVC	01
Hitachi	10
Magnavox	02
Mitsubishi	03
Panasonic	04,11
RCA	05
Samsung	12
Sanyo	13
Sharp	06
Sony	07
Toshiba	08
Zenith	09

## Operating TV

 You can operate the JVC's or other manufacturers' TV using this remote control.


**1** Keep pressed until the following steps are complete.



**2** Enter the code setting mode.



**3** Enter the 2-digit manufacture's code number.

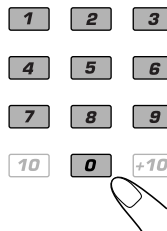


**4** Release TV ON/OFF.

## To operate the TV


**To turn on or off the TV:**




**To select the input mode (either TV or VIDEO):**

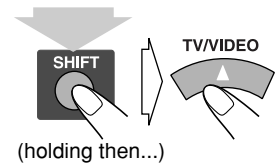

**To adjust TV volume:**

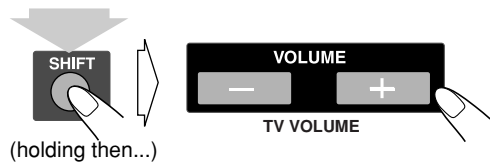

**To select the TV channel:**

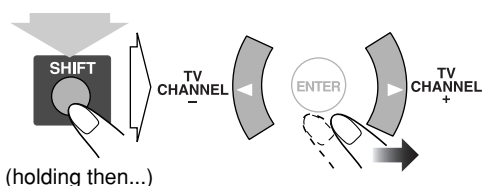

# Additional Information

## Learning More about This System ● ● ●

### Before Operating the System (see pages 10 to 13)

#### Playable Disc Types:

- If you play back an NTSC disc with this setting set to “PAL,” you can watch the playback pictures (the disc will be reproduced using “PAL 60” format), but the TV screen may roll over upward and downward rapidly.
- If you play back a PAL disc with this setting set to “NTSC,” you can watch the playback pictures, but the following symptoms may occur:
  - The items on the disc menu will be blurred, and be shown slightly shifted when highlighted.
  - The aspect ratio of the picture may differ from the original aspect ratio.
  - The picture movement is not smooth.
- **Notes on MP3/WMA/JPEG/MPEG-4 discs**
  - MP3/WMA/JPEG/MPEG-4 discs are required a longer readout time than regular CDs. (It depends on the complexity of the group/file configuration.)
  - Some MP3/WMA/JPEG/MPEG-4 files cannot be played back and will be skipped. This results from their recording processes and conditions.
  - This system can play back MP3/WMA/JPEG/MPEG-4 files with the extension code <.mp3>, <.wma>, <.jpg>, or <.asf> (regardless of the letter case—upper/lower).

#### • About audio format

- **Linear PCM:** Uncompressed digital audio, the same format used for CDs and most studio masters.
- **Dolby Digital:** Compressed digital audio, developed by Dolby Laboratories, which enables multi-channel encode to create the realistic surround sound.
- **DTS (Digital Theater Systems):** Compressed digital audio, developed by Digital Theater Systems, Inc., which enables multi-channel like Dolby Digital. As the compression ratio is lower than for Dolby Digital, it provides wider dynamic range and better separation.
- When playing back a DVD Audio disc recorded by MLP (Meridian Lossless Packing; a lossless audio compression system that can completely recreate the PCM signal), the signals recognized as the linear PCM signal, however, no indicator lights up in the display window.

### Daily Operations—Playback (see pages 14 to 18)

#### Listening to the Radio:

- If you store a new station into an occupied preset number, the previously stored station in that number will be erased.
- When you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

#### Playing Back a Disc:

- On some DVD, SVCD, or VCD discs, the actual operations may be different from what is explained in this manual, due to the programming and disc structure; such differences are not a malfunction of this System.

- For MP3/WMA playback...

- When making MP3/WMA discs, use ISO 9660 Level 1 or Level 2 for the disc format.
- It is recommended that you make each MP3/WMA file at a sampling rate of 44.1 kHz and at bit rate of 128 kbps. This System cannot play back files made at bit rate of less than 64 kbps.

#### Playing Back a Tape:

- In Relay Play, the reverse side of the tape in deck A does not playback. If the playing time of the tape in deck A is less than 12 seconds, the System rewind the tape and playback again.

### Daily Operations—Sound&Other Adjustments (see pages 19 to 23)

#### Adjusting the Volume:

- Be sure to turn down the volume before connecting or putting the headphones.

#### Creating Your Own Sound Modes—User Mode:

- When you unplug the AC power cord or if a power failure occurs, the USER mode settings will be erased in a few days. If this happens, set the USER Modes again.

#### Using Surround Mode:

##### • Dolby Pro Logic II modes:

Dolby Pro Logic II has developed multichannel playback format to decode the 2 channel sources—Linear PCM digital source, MP3 source, WMA source, Dolby Digital 2ch, DTS 2ch, and Dolby Surround encoded source—into 5.1 channel. Dolby Pro Logic II enables to reproduce spacious sound from original sound without adding any new sounds and tonal colorations.

- While you use the headphones, the Surround Mode will canceled temporarily (“STEREO” will appear on the display).
- Some DVD Audios prohibit downmix.
  - When you change the Surround Mode while playing back such a disc, “MULTI CH” appears on the display and you cannot change the Surround Mode.
  - When you select the Surround Mode to “STEREO” and start playback such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
  - When you use the headphones while playing back such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
- During MPEG-4 playback, Dolby Pro Logic II modes will be canceled temporarily.

#### Changing the Scanning Mode:

- Do not change the progressive scanning mode in the following cases:
  - When your TV does not support the progressive video input.
  - When you have not connected your TV to the unit using a component video cord.
- When you play back an NTSC disc in progressive scanning mode, the System output the NTSC signal though color system settings.

### Changing the Picture Tone:

- If no operation is done for about 10 seconds, the VFP setting screen disappears.

### Setting the Clock:

- “0:00” will flash on the display until you set the clock.
- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

## Unique DVD/VCD Operations (see pages 24 to 26)

### Selecting the Sound Track:

- On some DVD Videos, you cannot change audio languages while playing back.

### Playing Back a Bonus Group on a DVD Audio:

- You cannot select a track in the bonus group for Program Play.

### Special Picture Playback:

- During slow-motion playback, no sound will be reproduced.
- While zoomed in, the picture may look coarse.

## Advanced Disc Operations (see pages 27 to 29)

### Programming the Playing Order—Program Play:

- While programming steps...
  - Your entry will be ignored if you have tried to program an item number that does not exist on the disc (for example, selecting track 14 on a disc that only has 12 tracks). Such entries are ignored, and are erased from the program.
- You cannot use Program Play and Random Play for JPEG/MPEG-4 discs.

### Prohibiting Disc Ejection—Child Lock:

- If you try to eject discs while Child Lock is in use, “LOCKED” appears to inform you that the disc tray is locked.

## On-Screen Disc Operations (see pages 30 to 34)

### Operations Using the On-screen Bar:

#### A-B Repeat:

- A-B Repeat cannot be used on some DVDs.
- For DVD Video, A-B Repeat is possible only within the same title.
- For DVD Audio/SVCD/VCD/CD, A-B Repeat is possible only within the same track.

### Operations on the CONTROL Screen:

- For JPEG files playback...
  - It is recommended that you record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a long time to be shown.)
  - This System can play only baseline JPEG files\*. Progressive JPEG files\* or lossless JPEG files\* cannot be played.
    - \* Baseline JPEG format: Used for digital cameras, web, etc.
    - Progressive JPEG format: Used for web.
    - Lossless JPEG format: An old type and rarely used now.
- This unit may not play back JPEG files properly which are recorded by the devices other than digital still camera.
- During JPEG Slide-show playback, zoom cannot be operated.

- For MPEG-4 files playback...

- The System can play back the MPEG-4 files followed the conditions below:

File format: ASF

Visual profile MPEG-4 SP (Simple Profile)

Audio CODEC: G.726

Max. picture size: 352 x 288

Max. bit rate: 384 kbps

- The size of playback screen will be the same size as it is recorded.
- Some recorded files may not be able to be played back.
- Some MPEG-4 files created on a personal computer may not be played back.

## Advanced Tape Operations (see pages 35 and 36)

### Recording on a Tape:

- The recording level is automatically set correctly. Thus, you can adjust the sound you are actually listening to without affecting the recording level.
- There is leader tape which cannot be recorded onto at the start and the end of cassette tapes. Thus, when recording discs or radio broadcasts, wind the leader tape first to ensure that the recording will be made without any music part lost.
- If no cassette is inserted, “NO TAPE” appears on the display. If a protected tape has been inserted, “NO REC” appears on the display.
- When using Reverse Mode for recording, start recording in the forward (▶) direction first; otherwise, recording will stop when only one side (reverse) of the tape is recorded.
- You cannot change the source during recording.

### Synchronized Disc Recording:

- While recording, you cannot use ▶▶/◀◀, ▶▶/◀◀, DVD LEVEL, Surround Mode and source buttons.
- You can adjust volume control and sound setting (Subwoofer, RHYTHM AX, Sound Mode) but the settings do not affect the recording sound.
- Everything on the disc goes onto the tape in the order on the disc, or according to the order you have made for Program Play.
- You cannot use Synchronized Recording with Repeat Play (Repeat Play will be canceled).
- When recording starts, “DISC REC” appears on the display and the REC (recording) lamp flashes.
- When the tape reaches its end in the forward direction (▶) during recording, the last song will be re-recorded at the beginning of the reverse side (◀).
- When the tape reaches its end in the reverse side (◀) during recording, recording stops even though the entire disc is not entirely recorded.
- During Recording, Multi-channel source will be downmixed into 2 channels, and AUTO or Dolby Pro Logic II modes are temporarily canceled.
- You cannot use Synchronized Recording with JPEG or MPEG-4 disc.

## Enjoying Karaoke (see pages 37 to 39)

### Microphone Mixing:

- When Mic mixing mode is activated, Multi-channel source will be downmixed into 2 channel temporarily.
- When Mic mixing mode is activated, Dolby Pro Logic II mode will be canceled temporarily.
- By pressing REC START/STOP, you can record your singing along if you want.

### Singing Along (Karaoke):

- When Karaoke mode is activated, Multi-channel source will be downmixed into 2 channel temporarily.
- When Karaoke mode is activated, Dolby Pro Logic II mode will be canceled temporarily.
- Karaoke mode cannot be activated while DVD Audio or MPEG-4 is played.
- Karaoke mode setting is also applied to the optical digital output signals through the OPTICAL DIGITAL OUTPUT terminal.
- On some music, Karaoke mode does not provide the correct effect.

### Reserving Karaoke Songs—Karaoke Program Play

- You cannot use Karaoke Program Play for DVD Audio and MPEG-4 discs.

## Timer Operations (see pages 40 and 41)

### Setting the Timer:

- If you do not specify the preset station or track number correctly while setting a timer, the currently selected station or the first track will be played when timer is activated.
- When you unplug the AC power cord or if a power failure occurs, the timer will be canceled. You need to set the clock first, then the timer again.
- Without stopping the recording, you cannot change the source after Recording Timer starts recording.
- If you set DVD Video as the source, Daily Timer will not work correctly.

### Timer Priority:

- If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.
- If you set the Sleep Timer after Recording Timer starts recording, Recording Timer is canceled, but recording continues until Sleep Timer shuts off the power.

## Set up Menu Operations (see pages 42 to 48)

### LANGUAGE Set up Menu:

- When the language you have selected for MENU LANGUAGE, AUDIO LANGUAGE, or SUBTITLE is not recorded on a disc, the original language is used as the initial language.

### PICTURE Set up Menu—MONITOR TYPE:

- Even if “4:3 PS” is selected, the screen size may become 4:3 letter box with some DVD Videos. This depends on how the discs are recorded.
- When you select “16:9” for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

### OTHERS Set up Menu—ON SCREEN GUIDE:

- The set up menu and on-screen bar will be displayed (and recorded) even though this function is set to “OFF.” Subtitles and the information for zooming in always appear on the display regardless of this setting.

## Maintenance

To get the best performance of the System, keep your discs, tapes, and mechanism clean.

### Handling discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

### To clean the disc:

- Wipe the disc with a soft cloth in a straight line from center to edge.

### Handling cassette tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotate it.
  - If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid the following places to store the tape—in dusty places, in direct sunlight or heat, in moist areas, on a TV or speaker, or near a magnet.

### To keep the best recording and playback sound quality:

- Use a cotton swab moistened with alcohol to clean the heads, capstans, and pinch rollers.
- Use a head demagnetizer (available at electronics and audio shops) to demagnetize the heads (when the System turned off).

### Cleaning the System

- Stains should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
  - DO NOT wipe it with a hard cloth.
  - DO NOT wipe it strong.
  - DO NOT wipe it with thinner or benzine.
  - DO NOT apply any volatile substance such as insecticides to it.
  - DO NOT allow any rubber or plastic to remain in contact for a long time.

## Troubleshooting

If you are having a problem with your System, check this list for a possible solution before calling for service.

### General:

#### Adjustments or settings are suddenly canceled before you finish.

⇒ There is a time limit. Repeat procedure again.

#### Operations are disabled.

⇒ The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

#### Unable to operate the System from the remote control.

⇒ The path between the remote control and the remote sensor on the System is blocked.

⇒ The batteries are exhausted.

#### No sound is heard.

⇒ Speaker connections are incorrect or loose.

⇒ Headphones are connected.

#### No picture appears on the screen.

⇒ The video cord connections are incorrect or loose.

#### No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.

⇒ The System is connected to a TV which does not support progressive video input.

⇒ Incorrect color system is selected (see “To set the video output selector” on page 7).

#### The left and right edges of the picture are missing on the screen.

⇒ Select “4:3 LB /4:3 MULTI LB” for “MONITOR TYPE” (see page 43).

### Radio Operations:

#### Hard to listen to broadcasts because of noise.

⇒ Antennas connections are incorrect or loose.

⇒ The AM loop antenna is too close to the System.

⇒ The FM antenna is not properly extended and positioned.

### Disc Operations:

#### The disc does not play.

⇒ The disc is placed upside down. Place the disc with the label side up.

⇒ Parental Lock is in use (see page 48).

#### ID3 Tag on an MP3 disc cannot be shown.

⇒ There are two types of ID3 Tag—Version 1 and Version 2. This System can only show ID3 Tag Version 1.

#### MP3 groups and tracks are not played back as you expect.

⇒ The playing order is determined when the disc was recorded. It depends on the writing application.

#### MP3/WMA, JPEG, or MPEG-4 files are not played back.

⇒ The inserted disc may include more than two types of tracks (MP3/WMA files, JPEG files, and MPEG-4 files). In this case, you can only play back the files selected by the “FILE TYPE” setting (see page 44).

⇒ You have changed the “FILE TYPE” setting after you inserted a disc. In this case, reload the disc.

#### The disc sound is discontinuous.

⇒ The disc is scratched or dirty.

#### The disc playback sounds strange.

⇒ Cancel Key Control (see page 38).

#### The sound through OPTICAL DIGITAL OUTPUT is strange.

⇒ Cancel Karaoke mode (see page 38).

#### No subtitle appears on the display though you have selected the initial subtitle language.

⇒ Some DVDs are programmed to always display no subtitle initially. If this happens, press SUB TITLE after starting play (see page 25).

#### Audio language is different from the one you have selected as the initial audio language.

⇒ Some DVDs are programmed to always use the original language initially. If this happens, press AUDIO after starting play (see page 24).

#### The disc tray does not open or close.

⇒ The AC power cord is not plugged in.

⇒ Child Lock is in use (see page 29).

### Tape Operations:

#### The cassette holder cannot be opened.

⇒ Power supply from the AC power cord has been cut off while the tape was running. Turn on the System.

### Recordings:

#### Impossible to record.

⇒ Small tabs on the back of the cassette are removed. Cover the holes with adhesive tape.

### Timer operations:

#### Daily Timer does not work.

⇒ The System has been turned on when the on-time comes. Timer starts working only when the System is turned off.



## Language Code List

<b>AA</b>	Afar
<b>AB</b>	Abkhazian
<b>AF</b>	Afrikaans
<b>AM</b>	Ameharic
<b>AR</b>	Arabic
<b>AS</b>	Assamese
<b>AY</b>	Aymara
<b>AZ</b>	Azerbaijani
<b>BA</b>	Bashkir
<b>BE</b>	Byelorussian
<b>BG</b>	Bulgarian
<b>BH</b>	Bihari
<b>BI</b>	Bislama
<b>BN</b>	Bengali, Bangla
<b>BO</b>	Tibetan
<b>BR</b>	Breton
<b>CA</b>	Catalan
<b>CO</b>	Corsican
<b>CS</b>	Czech
<b>CY</b>	Welsh
<b>DA</b>	Danish
<b>DZ</b>	Bhutani
<b>EL</b>	Greek
<b>EO</b>	Esperanto
<b>ET</b>	Estonian
<b>EU</b>	Basque
<b>FA</b>	Persian
<b>FI</b>	Finnish
<b>FJ</b>	Fiji
<b>FO</b>	Faroese
<b>FY</b>	Frisian
<b>GA</b>	Irish
<b>GD</b>	Scots Gaelic
<b>GL</b>	Galician
<b>GN</b>	Guarani
<b>GU</b>	Gujarati
<b>HA</b>	Hausa
<b>HI</b>	Hindi
<b>HR</b>	Croatian
<b>HU</b>	Hungarian
<b>HY</b>	Armenian
<b>IA</b>	Interlingua
<b>IE</b>	Interlingue
<b>IK</b>	Inupiak
<b>IN</b>	Indonesian
<b>IS</b>	Icelandic
<b>IW</b>	Hebrew
<b>JI</b>	Yiddish

<b>JW</b>	Javanese
<b>KA</b>	Georgian
<b>KK</b>	Kazakh
<b>KL</b>	Greenlandic
<b>KM</b>	Cambodian
<b>KN</b>	Kannada
<b>KO</b>	Korean (KOR)
<b>KS</b>	Kashmiri
<b>KU</b>	Kurdish
<b>KY</b>	Kirghiz
<b>LA</b>	Latin
<b>LN</b>	Lingala
<b>LO</b>	Laothian
<b>LT</b>	Lithuanian
<b>LV</b>	Latvian, Lettish
<b>MG</b>	Malagasy
<b>MI</b>	Maori
<b>MK</b>	Macedonian
<b>ML</b>	Malayalam
<b>MN</b>	Mongolian
<b>MO</b>	Moldavian
<b>MR</b>	Marathi
<b>MS</b>	Malay (MAY)
<b>MT</b>	Maltese
<b>MY</b>	Burmese
<b>NA</b>	Nauru
<b>NE</b>	Nepali
<b>NL</b>	Dutch
<b>NO</b>	Norwegian
<b>OC</b>	Occitan
<b>OM</b>	(Afan) Oromo
<b>OR</b>	Oriya
<b>PA</b>	Panjabi
<b>PL</b>	Polish
<b>PS</b>	Pashto, Pushto
<b>PT</b>	Portuguese
<b>QU</b>	Quechua
<b>RM</b>	Rhaeto-Romance
<b>RN</b>	Kirundi
<b>RO</b>	Rumanian
<b>RU</b>	Russian
<b>RW</b>	Kinyarwanda
<b>SA</b>	Sanskrit
<b>SD</b>	Sindhi
<b>SG</b>	Sangho
<b>SH</b>	Serbo-Croatian
<b>SI</b>	Singhalese
<b>SK</b>	Slovak

<b>SL</b>	Slovenian
<b>SM</b>	Samoan
<b>SN</b>	Shona
<b>SO</b>	Somali
<b>SQ</b>	Albanian
<b>SR</b>	Serbian
<b>SS</b>	Siswati
<b>ST</b>	Sesotho
<b>SU</b>	Sundanese
<b>SV</b>	Swedish
<b>SW</b>	Swahili
<b>TA</b>	Tamil
<b>TE</b>	Telugu
<b>TG</b>	Tajik
<b>TH</b>	Thai
<b>TI</b>	Tigrinya
<b>TK</b>	Turkmen
<b>TL</b>	Tagalog
<b>TN</b>	Setswana
<b>TO</b>	Tonga
<b>TR</b>	Turkish
<b>TS</b>	Tsonga
<b>TT</b>	Tatar
<b>TW</b>	Twi
<b>UK</b>	Ukrainian
<b>UR</b>	Urdu
<b>UZ</b>	Uzbek
<b>VI</b>	Vietnamese
<b>VO</b>	Volapuk
<b>WO</b>	Wolof
<b>XH</b>	Xhosa
<b>YO</b>	Yoruba
<b>ZU</b>	Zulu

## Country/Area codes list for Parental Lock

<b>AD</b>	Andorra
<b>AE</b>	United Arab Emirates
<b>AF</b>	Afghanistan
<b>AG</b>	Antigua and Barbuda
<b>AI</b>	Anguilla
<b>AL</b>	Albania
<b>AM</b>	Armenia
<b>AN</b>	Netherlands Antilles
<b>AO</b>	Angola
<b>AQ</b>	Antarctica
<b>AR</b>	Argentina
<b>AS</b>	American Samoa
<b>AT</b>	Austria
<b>AU</b>	Australia
<b>AW</b>	Aruba
<b>AZ</b>	Azerbaijan
<b>BA</b>	Bosnia and Herzegovina
<b>BB</b>	Barbados
<b>BD</b>	Bangladesh
<b>BE</b>	Belgium
<b>BF</b>	Burkina Faso
<b>BG</b>	Bulgaria
<b>BH</b>	Bahrain
<b>BI</b>	Burundi
<b>BJ</b>	Benin
<b>BM</b>	Bermuda
<b>BN</b>	Brunei Darussalam
<b>BO</b>	Bolivia
<b>BR</b>	Brazil
<b>BS</b>	Bahamas
<b>BT</b>	Bhutan
<b>BV</b>	Bouvet Island
<b>BW</b>	Botswana
<b>BY</b>	Belarus
<b>BZ</b>	Belize
<b>CA</b>	Canada
<b>CC</b>	Cocos (Keeling) Islands
<b>CF</b>	Central African Republic
<b>CG</b>	Congo
<b>CH</b>	Switzerland
<b>CI</b>	Côte d'Ivoire
<b>CK</b>	Cook Islands
<b>CL</b>	Chile
<b>CM</b>	Cameroon
<b>CN</b>	China
<b>CO</b>	Colombia
<b>CR</b>	Costa Rica
<b>CU</b>	Cuba
<b>CV</b>	Cape Verde
<b>CX</b>	Christmas Island
<b>CY</b>	Cyprus
<b>CZ</b>	Czech Republic
<b>DE</b>	Germany
<b>DJ</b>	Djibouti

<b>DK</b>	Denmark
<b>DM</b>	Dominica
<b>DO</b>	Dominican Republic
<b>DZ</b>	Algeria
<b>EC</b>	Ecuador
<b>EE</b>	Estonia
<b>EG</b>	Egypt
<b>EH</b>	Western Sahara
<b>ER</b>	Eritrea
<b>ES</b>	Spain
<b>ET</b>	Ethiopia
<b>FI</b>	Finland
<b>FJ</b>	Fiji
<b>FK</b>	Falkland Islands (Malvinas)
<b>FM</b>	Micronesia (Federated States of)
<b>FO</b>	Faroe Islands
<b>FR</b>	France
<b>FX</b>	France, Metropolitan
<b>GA</b>	Gabon
<b>GB</b>	United Kingdom
<b>GD</b>	Grenada
<b>GE</b>	Georgia
<b>GF</b>	French Guiana
<b>GH</b>	Ghana
<b>GI</b>	Gibraltar
<b>GL</b>	Greenland
<b>GM</b>	Gambia
<b>GN</b>	Guinea
<b>GP</b>	Guadeloupe
<b>GQ</b>	Equatorial Guinea
<b>GR</b>	Greece
<b>GS</b>	South Georgia and the South Sandwich
<b>GT</b>	Guatemala
<b>GU</b>	Guam
<b>GW</b>	Guinea-Bissau
<b>GY</b>	Guyana
<b>HK</b>	Hong Kong
<b>HM</b>	Heard Island and McDonald Islands
<b>HN</b>	Honduras
<b>HR</b>	Croatia
<b>HT</b>	Haiti
<b>HU</b>	Hungary
<b>ID</b>	Indonesia
<b>IE</b>	Ireland
<b>IL</b>	Israel
<b>IN</b>	India
<b>IO</b>	British Indian Ocean Territory
<b>IQ</b>	Iraq
<b>IR</b>	Iran (Islamic Republic of)
<b>IS</b>	Iceland
<b>IT</b>	Italy
<b>JM</b>	Jamaica

<b>JO</b>	Jordan
<b>JP</b>	Japan
<b>KE</b>	Kenya
<b>KG</b>	Kyrgyzstan
<b>KH</b>	Cambodia
<b>KI</b>	Kiribati
<b>KM</b>	Comoros
<b>KN</b>	Saint Kitts and Nevis
<b>KP</b>	Korea, Democratic People's Republic of
<b>KR</b>	Korea, Republic of
<b>KW</b>	Kuwait
<b>KY</b>	Cayman Islands
<b>KZ</b>	Kazakhstan
<b>LA</b>	Lao People's Democratic Republic
<b>LB</b>	Lebanon
<b>LC</b>	Saint Lucia
<b>LI</b>	Liechtenstein
<b>LK</b>	Sri Lanka
<b>LR</b>	Liberia
<b>LS</b>	Lesotho
<b>LT</b>	Lithuania
<b>LU</b>	Luxembourg
<b>LV</b>	Latvia
<b>LY</b>	Libyan Arab Jamahiriya
<b>MA</b>	Morocco
<b>MC</b>	Monaco
<b>MD</b>	Moldova, Republic of
<b>MG</b>	Madagascar
<b>MH</b>	Marshall Islands
<b>ML</b>	Mali
<b>MM</b>	Myanmar
<b>MN</b>	Mongolia
<b>MO</b>	Macau
<b>MP</b>	Northern Mariana Islands
<b>MQ</b>	Martinique
<b>MR</b>	Mauritania
<b>MS</b>	Montserrat
<b>MT</b>	Malta
<b>MU</b>	Mauritius
<b>MV</b>	Maldives
<b>MW</b>	Malawi
<b>MX</b>	Mexico
<b>MY</b>	Malaysia
<b>MZ</b>	Mozambique
<b>NA</b>	Namibia
<b>NC</b>	New Caledonia
<b>NE</b>	Niger
<b>NF</b>	Norfolk Island
<b>NG</b>	Nigeria
<b>NI</b>	Nicaragua
<b>NL</b>	Netherlands
<b>NO</b>	Norway

<b>NP</b>	Nepal
<b>NR</b>	Nauru
<b>NU</b>	Niue
<b>NZ</b>	New Zealand
<b>OM</b>	Oman
<b>PA</b>	Panama
<b>PE</b>	Peru
<b>PF</b>	French Polynesia
<b>PG</b>	Papua New Guinea
<b>PH</b>	Philippines
<b>PK</b>	Pakistan
<b>PL</b>	Poland
<b>PM</b>	Saint Pierre and Miquelon
<b>PN</b>	Pitcairn
<b>PR</b>	Puerto Rico
<b>PT</b>	Portugal
<b>PW</b>	Palau
<b>PY</b>	Paraguay
<b>QA</b>	Qatar
<b>RE</b>	Réunion
<b>RO</b>	Romania
<b>RU</b>	Russian Federation
<b>RW</b>	Rwanda
<b>SA</b>	Saudi Arabia
<b>SB</b>	Solomon Islands
<b>SC</b>	Seychelles
<b>SD</b>	Sudan

<b>SE</b>	Sweden
<b>SG</b>	Singapore
<b>SH</b>	Saint Helena
<b>SI</b>	Slovenia
<b>SJ</b>	Svalbard and Jan Mayen
<b>SK</b>	Slovakia
<b>SL</b>	Sierra Leone
<b>SM</b>	San Marino
<b>SN</b>	Senegal
<b>SO</b>	Somalia
<b>SR</b>	Suriname
<b>ST</b>	Sao Tome and Principe
<b>SV</b>	El Salvador
<b>SY</b>	Syrian Arab Republic
<b>SZ</b>	Swaziland
<b>TC</b>	Turks and Caicos Islands
<b>TD</b>	Chad
<b>TF</b>	French Southern Territories
<b>TG</b>	Togo
<b>TH</b>	Thailand
<b>TJ</b>	Tajikistan
<b>TK</b>	Tokelau
<b>TM</b>	Turkmenistan
<b>TN</b>	Tunisia
<b>TO</b>	Tonga
<b>TP</b>	East Timor
<b>TR</b>	Turkey

<b>TT</b>	Trinidad and Tobago
<b>TV</b>	Tuvalu
<b>TW</b>	Taiwan
<b>TZ</b>	Tanzania, United Republic of
<b>UA</b>	Ukraine
<b>UG</b>	Uganda
<b>UM</b>	United States Minor Outlying Islands
<b>US</b>	United States
<b>UY</b>	Uruguay
<b>UZ</b>	Uzbekistan
<b>VA</b>	Vatican City State (Holy See)
<b>VC</b>	Saint Vincent and the Grenadines
<b>VE</b>	Venezuela
<b>VG</b>	Virgin Islands (British)
<b>VI</b>	Virgin Islands (U.S.)
<b>VN</b>	Vietnam
<b>VU</b>	Vanuatu
<b>WF</b>	Wallis and Futuna Islands
<b>WS</b>	Samoa
<b>YE</b>	Yemen
<b>YT</b>	Mayotte
<b>YU</b>	Yugoslavia
<b>ZA</b>	South Africa
<b>ZM</b>	Zambia
<b>ZR</b>	Zaire
<b>ZW</b>	Zimbabwe

## OPTICAL DIGITAL OUTPUT Signals

DIGITAL AUDIO OUTPUT Playback disc	Output Signals		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
<b>DVD Video</b>			
with 48 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM*		
with 96 kHz, Linear PCM	48 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS Digital Surround	DTS bitstream	48 kHz, 16 bit Linear PCM	
<b>DVD Audio</b>			
with 48/96/192 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM		
with 44.1/88.2/176.4 kHz, 16/20/24 bit Linear PCM	44.1 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS Digital Surround	DTS bitstream	48 kHz, 16 bit Linear PCM	
<b>SVCD, VCD, CD</b>	44.1 kHz, 16 bit Linear PCM*/48 kHz, 16 bit Linear PCM*		
<b>CD with DTS Digital Surround</b>	DTS bitstream	44.1 kHz, 16 bit Linear PCM	
<b>MP3/WMA disc</b>	32/44.1/48 kHz, 16 bit Linear PCM		
<b>MPEG-4 disc</b>	32 kHz, 16 bit Linear PCM		

\* While playing some DVDs, digital signals may be emitted at 20 bits or 24 bits (at their original bit rate) through the OPTICAL DIGITAL OUTPUT terminal if the discs are not copy-protected.

## Specifications

### CA-MXJD5

#### Amplifier section

Output Power:

FRONT MAIN SPEAKERS: 40 W per channel, min. RMS, driven into 6  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

FRONT SUBWOOFERS: 80 W per channel, min. RMS, driven into 6  $\Omega$  at 63 Hz with no more than 10% total harmonic distortion.

CENTER SPEAKER: 40 W, min. RMS, driven into 8  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

SURROUND SPEAKERS: 25 W per channel, min. RMS, driven into 16  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

Digital output:

OPTICAL DIGITAL OUTPUT:  
-21 dBm to -15 dBm (660 nm  $\pm$ 30 nm)

Audio input sensitivity/Impedance  
(Measured at 1 kHz, with tape recording signal 300 mV)

AUX IN: 300 mV/47 k $\Omega$

MIC 1/2: 3.0 mV/50 k $\Omega$

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite): 1 V(p-p)/75  $\Omega$

S-VIDEO: Y (luminance) 1 V(p-p)/75  $\Omega$   
C (chrominance, burst) 0.286 V(p-p)/75  $\Omega$

COMPONENT (Interlace/Progressive):

(Y) 1 V(p-p)/75  $\Omega$

(P<sub>B</sub>/P<sub>R</sub>) 0.7 V(p-p)/75  $\Omega$

Speaker Terminals: 6  $\Omega$  – 16  $\Omega$  (Front main speakers)

8  $\Omega$  – 16  $\Omega$  (Center speakers)

16  $\Omega$  – 32  $\Omega$  (Surround speakers)

6  $\Omega$  – 16  $\Omega$  (Front subwoofers)

Others:

AV COMPU LINKx2 ( $\phi$  3.5)

#### Tuner section

FM tuning range: 87.50 MHz – 108.00 MHz

AM (MW) tuning range:  
531 kHz – 1 602 kHz (at 9 kHz)  
530 kHz – 1 600 kHz (at 10 kHz)

#### Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD  
CD-R/CD-RW (recorded in Audio CD/  
Video CD/ Super Video CD/ MP3/ WMA/  
JPEG/MPEG-4 format)  
DVD-R/DVD-RW (recorded in video  
format)

Dynamic range: 90 dB

Horizontal resolution: 500 lines

Wow and flutter: Immeasurable

#### Cassette deck section

Frequency response  
Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

#### General

Power requirement: AC 110 V / AC 127 V / AC 220 V /  
AC 230 V – AC 240 V  $\sim$  ,  
(adjustable with the voltage selector),  
50 Hz / 60 Hz

Power consumption: 220 W (at operation)  
20 W (on standby)

Dimensions (approx.): 265 mm x 335 mm x 352 mm  
(W/H/D)

Mass (approx.): 8.7 kg

#### Supplied Accessories

See page 3.

*Design and specifications are subject to change without notice.*

## CA-MXJD8

### Amplifier section

Output Power:

FRONT MAIN SPEAKERS: 55 W per channel, min. RMS, driven into 6  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

FRONT SUBWOOFERS: 140 W per channel, min. RMS, driven into 6  $\Omega$  at 63 Hz with no more than 10% total harmonic distortion.

CENTER SPEAKER: 50 W, min. RMS, driven into 8  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

SURROUND SPEAKERS: 30 W per channel, min. RMS, driven into 16  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

Digital output:

OPTICAL DIGITAL OUTPUT:

-21 dBm to -15 dBm (660 nm  $\pm$ 30 nm)

Audio input sensitivity/Impedance

(Measured at 1 kHz, with tape recording signal 300 mV)

AUX IN: 300 mV/47 k $\Omega$

MIC 1/2: 3.0 mV/50 k $\Omega$

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite): 1 V(p-p)/75  $\Omega$

S-VIDEO: Y (luminance) 1 V(p-p)/75  $\Omega$

C (chrominance, burst)  
0.286 V(p-p)/75  $\Omega$

COMPONENT (Interlace/Progressive):

(Y) 1 V(p-p)/75  $\Omega$

(Pb/Pk) 0.7 V(p-p)/75  $\Omega$

Speaker Terminals: 6  $\Omega$  – 16  $\Omega$  (Front main speakers)

8  $\Omega$  – 16  $\Omega$  (Center speakers)

16  $\Omega$  – 32  $\Omega$  (Surround speakers)

6  $\Omega$  – 16  $\Omega$  (Front subwoofers)

Others:

AV COMPU LINKx2 ( $\phi$  3.5)

### Tuner section

FM tuning range: 87.50 MHz – 108.00 MHz

AM (MW) tuning range:  
531 kHz – 1 602 kHz (at 9 kHz)  
530 kHz – 1 600 kHz (at 10 kHz)

### Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD  
CD-R/CD-RW (recorded in Audio CD/  
Video CD/ Super Video CD/ MP3/ WMA/  
JPEG/MPEG-4 format)  
DVD-R/DVD-RW (recorded in video  
format)

Dynamic range: 90 dB

Horizontal resolution: 500 lines

Wow and flutter: Immeasurable

### Cassette deck section

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

### General

Power requirement: AC 110 V / AC 127 V / AC 220 V /  
AC 230 V – AC 240 V ~ ,  
(adjustable with the voltage selector),  
50 Hz / 60 Hz

Power consumption: 325 W (at operation)  
22 W (on standby)

Dimensions (approx.): 265 mm x 335 mm x 352 mm  
(W/H/D)


Mass (approx.): 9.1 kg

### Supplied Accessories

See page 3.


*Design and specifications are subject to change without notice.*

# Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia, and U.K.)

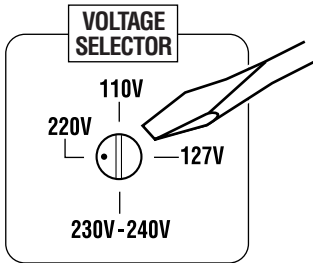

**CAUTION for mains (AC) line**

BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/electric shock.

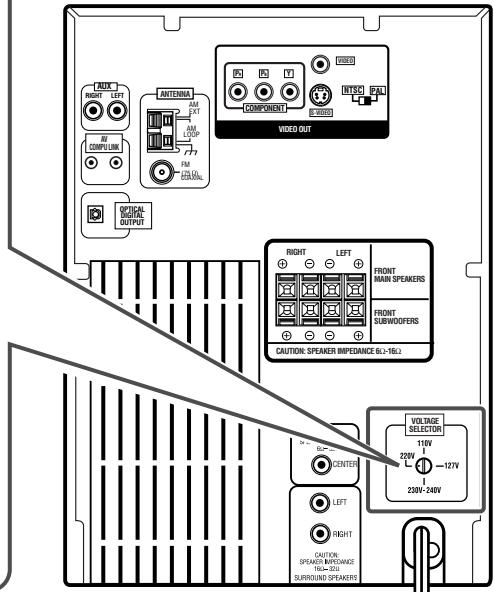

# JVC



English


Español

Português



## COMPACT COMPONENT SYSTEM

SISTEMAS DE COMPONENTES COMPACTOS  
SISTEMA DE COMPONENTE COMPACTO


# CA-MXJD5 CA-MXJD8

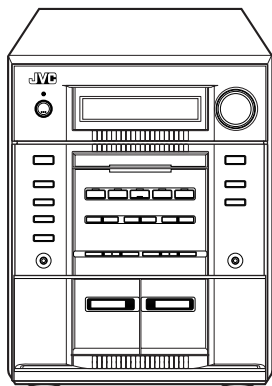

CA-MXJD5

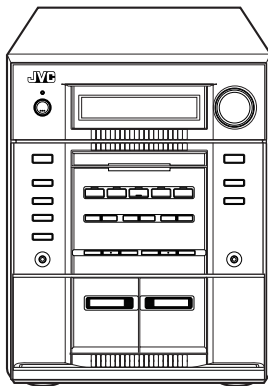 

CA-MXJD8

 

**AV COMPU LINK EXTENDED SUPER BASS**

## INSTRUCTIONS

MANUAL DE INSTRUCCIONES  
INSTRUÇÕES

# Warnings, Cautions and Others

## Avisos, precauciones y otras notas

## Advertências, precauções e outras notas

### CAUTION—STANDBY/ON $\phi/1$ button!

Disconnect the mains plug to shut the power off completely. The STANDBY/ON  $\phi/1$  button in any position does not disconnect the mains line. The power can be remote controlled.

### CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### PRECAUCIÓN—botón STANDBY/ON $\phi/1$ !

Desconecte el enchufe tomacorriente para desconectar la alimentación completamente. Ninguna posición del botón STANDBY/ON  $\phi/1$  conseguirá desconectar la red de alimentación eléctrica. La alimentación puede controlarse mediante control remoto.

### PRECAUCIÓN

Para reducir riesgos de choques eléctricos, incendio, etc.:

1. No extraiga los tornillos, los cubiertas ni la caja.
2. No exponga este aparato a la lluvia o a la humedad.

### PRECAUCIÓN

- No obstruya las rendijas o los orificios de ventilación. (Si las rendijas o los orificios de ventilación quedan tapados con un periódico, un trozo de tela, etc., no se podrá disipar el calor).
- No ponga sobre el aparato ninguna llama al descubierto, como velas encendidas.
- Cuando tenga que descartar las pilas, tenga en cuenta los problemas ambientales y observe estrictamente los reglamentos o las leyes locales sobre disposición de las pilas.
- No exponga este aparato a la lluvia, humedad, goteos o salpicaduras. Tampoco ponga recipientes conteniendo líquidos, como floreros, encima del aparato.

### PRECAUÇÃO—botão STANDBY/ON $\phi/1$ !

Desligue a ficha da tomada da parede para desligar completamente a alimentação. O botão STANDBY/ON  $\phi/1$  , quer esteja premido ou solto, não desliga a alimentação principal. A alimentação pode ser controlada à distância.

### PRECAUÇÃO

Para reduzir riscos de choques elétricos, incêndio, etc.:

1. Não remova parafusos e tampas ou desmonte a caixa.
2. Não exponha este aparelho à chuva nem à umidade.

### PRECAUÇÃO

- Não obstrua as aberturas e orifícios de ventilação. (Se os orifícios ou aberturas de ventilação estiverem obstruídos por qualquer papel ou tecido, não haverá circulação do ar quente.)
- Não coloque nenhum objeto com chamas, como velas acesas, sobre o aparelho.
- Ao descartar as baterias, leve em consideração os problemas que possam ser causados ao meio ambiente e os regulamentos e leis locais e governamentais sobre recolhimento dessas baterias devem ser rigorosamente seguidos.
- Não exponha este aparelho à chuva, umidade, pingos ou esguichos de água, nem coloque em cima do mesmo qualquer tipo de recipiente que contenha líquidos, como por exemplo vasos.



**Caution: Proper Ventilation**

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows

1. Front: No obstructions and open spacing.
2. Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

**Precaución: Ventilación correcta**


Para evitar el riesgo de descargas eléctricas e incendio y prevenir posibles daños, instale el equipo en un lugar que cumpla los siguientes requisitos:

1. Parte frontal: Sin obstrucciones, espacio abierto.
2. Lados/parte superior/parte posterior: No debe haber ninguna obstrucción en las áreas mostradas por las dimensiones de la siguiente figura.
3. Parte inferior: Sitúe el equipo sobre una superficie nivelada. Mantenga un espacio adecuado para permitir el paso del aire y una correcta ventilación, situando el equipo sobre un soporte de 10 o más cm de altura.

**Precaução: Ventilação adequada**

Para evitar riscos de choques elétricos e incêndios, e prevenir avarias, instale o aparelho como segue:

1. Parte frontal: Sem obstruções e espaços abertos.
2. Partes laterais/ Tampa/ Posterior: Nenhuma obstrução deverá ser colocada entre as áreas cujas dimensões são indicadas abaixo.
3. Parte inferior: Instale-o sobre uma superfície plana. Deverá ser mantido espaço suficiente para a ventilação se este for instalado numa posição que tenha uma altura de 10 cm ou mais.

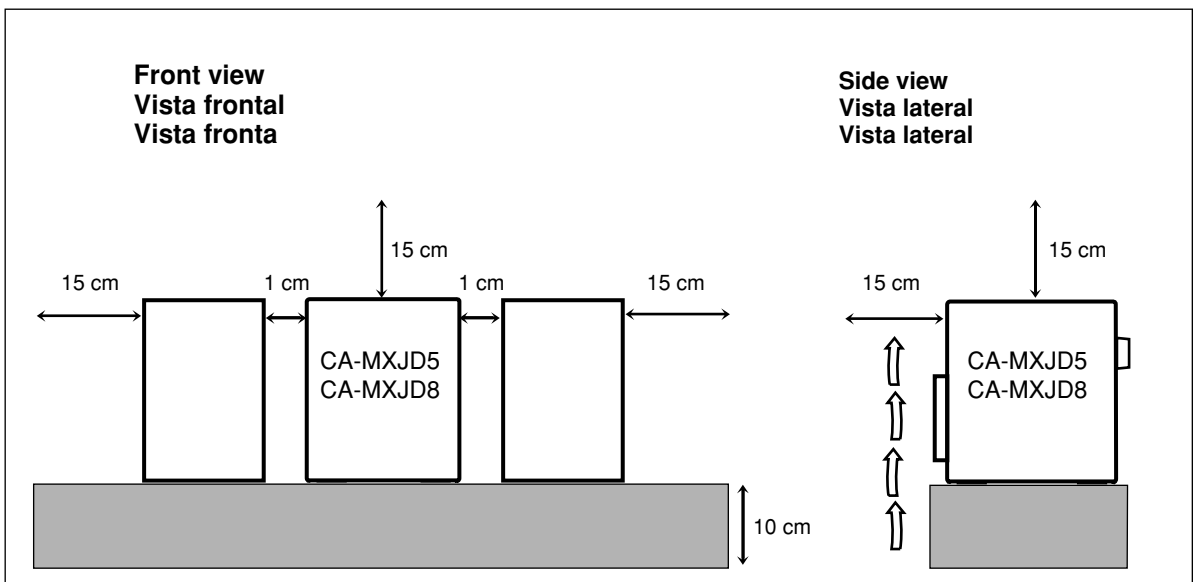

---

## IMPORTANT FOR LASER PRODUCTS

---

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

## IMPORTANTE PARA PRODUCTOS LÁSER

---

1. PRODUCTO LÁSER CLASE 1
2. **PRECAUCIÓN:** No abra la tapa superior. En el interior de la unidad no hay piezas que pueda reparar el usuario; encargue el servicio a personal técnico cualificado.
3. **PRECAUCIÓN:** Radiación láser visible e invisible en caso de apertura o con interbloqueo averiado o defectuoso. Evite la exposición directa a los haces.
4. REPRODUCCIÓN DE LA ETIQUETA: ETIQUETA DE PRECAUCIÓN, COLOCADA EN EL INTERIOR DE LA UNIDAD.

## PARA PRODUTOS LASER, IMPORTANTE

---

1. PRODUTO LASER DE CLASSE 1
2. **PRECAUÇÃO:** não abrir a cobertura superior. Dentro da unidade não existem partes cuja manutenção tenha de ser feita pelo usuário; deixe qualquer manutenção a cargo do pessoal de serviço qualificado.
3. **PRECAUÇÃO:** radiação laser visível e invisível quando se abre e com a conexão interna em falha ou frustrada. Evite a exposição direta ao raio.
4. REPRODUÇÃO DE ETIQUETA: ETIQUETA DE AVISO SITUADA NO INTERIOR DA UNIDADE.

<b>CAUTION :</b> Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.	<b>ADVARSEL :</b> Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling.	<b>WARNING :</b> Synlig och osynlig laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen.	<b>VARO :</b> Avattaessa ja suojalukitus ohitettuna tai viällisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi.
(e)	(d)	(s)	(f)

# Contents

<b>Introduction .....</b>	<b>2</b>	<b>On-Screen Disc Operations .....</b>	<b>30</b>
Precautions .....	2	About the On-screen Bar .....	30
How to Read This Manual .....	2	Operations Using the On-screen Bar .....	31
<b>Getting Started .....</b>	<b>3</b>	Operations on the CONTROL Screen .....	33
Step 1: Unpack .....	3	<b>Advanced Tape Operations .....</b>	<b>35</b>
Step 2: Prepare the Remote Control .....	3	Recording on a Tape .....	35
Step 3: Hook Up .....	4	Dubbing Tapes .....	36
Setting the Speakers .....	8	Synchronized Disc Recording .....	36
<b>Before Operating the System .....</b>	<b>10</b>	<b>Timer Operations .....</b>	<b>37</b>
Playable Disc Types .....	10	Setting the Timer .....	37
Parts Index .....	11	Timer Priority .....	38
About the Display Indication .....	12	<b>Set up Menu Operations .....</b>	<b>39</b>
<b>Daily Operations—Playback .....</b>	<b>14</b>	Operating Procedure .....	39
Canceling the Demonstration .....	14	■ LANGUAGE Set up Menu .....	40
Listening to the Radio .....	15	■ PICTURE Set up Menu .....	40
Playing Back a Disc .....	16	■ AUDIO Set up Menu .....	41
Playing Back a Tape .....	18	■ SPK. SETTING Set up Menu .....	42
<b>Daily Operations—Sound&amp;Other Adjustments ....</b>	<b>19</b>	■ OTHERS Set up Menu .....	43
Adjusting the Volume .....	19	Restricting the Review—Parental Lock .....	44
Reinforcing the Bass Sound .....	19	<b>Operating the TV .....</b>	<b>46</b>
Adjusting the Front Speaker Output Balance .....	20	Operating TV .....	46
Selecting the Sound Modes .....	20	<b>Additional Information .....</b>	<b>47</b>
Creating Your Own Sound Modes—User Mode .....	20	Learning More about This System .....	47
Using Surround Mode .....	21	Maintenance .....	49
Presetting Automatic DVD Video		Troubleshooting .....	50
Sound Increase Level .....	21	Language Code List .....	51
Changing the Scanning Mode .....	21	Country/Area codes list for Parental Lock .....	52
Changing the Picture Tone .....	22	OPTICAL DIGITAL OUTPUT Signals .....	53
Changing the Display Brightness .....	22	Specifications .....	54
Setting the Clock .....	23		
Turning Off the Power Automatically .....	23		
<b>Unique DVD/VCD Operations .....</b>	<b>24</b>		
Selecting the Sound Track .....	24		
Selecting the Subtitle Language .....	25		
Selecting a View Angle .....	25		
Selecting a Still Pictures on a DVD Audio .....	25		
Playing Back a Bonus Group on a DVD Audio .....	26		
Special Picture Playback .....	26		
<b>Advanced Disc Operations .....</b>	<b>27</b>		
Programming the Playing Order—Program Play .....	27		
Playing at Random—Random Play .....	28		
Playing Repeatedly .....	29		
Prohibiting Disc Ejection—Child Lock .....	29		

# Introduction

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the System in a location with adequate ventilation to prevent internal heat buildup in the System.



DO NOT install the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

- Leave sufficient distance between the System and the TV.
- Keep the speakers away from the TV to avoid interference with TV.

### Power sources

- When unplugging the System from the wall outlet, always pull on the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lenses inside the System in the following cases:

- After starting to heat the room
  - In a damp room
  - If the System is brought directly from a cold to a warm place
- Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, then plug it in again.

### Internal heat

- A cooling fan is inside the unit to prevent heat buildup.



**For safety, observe the following carefully:**

- Make sure there is good ventilation around the unit. Poor ventilation could overheat and damage the unit.
- DO NOT block the ventilation openings or holes. If they are blocked by a newspaper or cloth, etc., the heat may not be able to get out.

### Others

- Should any metallic object or liquid fall into the System, unplug the AC power cord and consult your dealer before operating any further.



DO NOT disassemble the System since there are no user serviceable parts inside.

- If you are not going to operate the System for an extended period of time, unplug the AC power cord from the wall outlet.

If anything goes wrong, unplug the AC power cord and consult your dealer.

## How to Read This Manual

To make the explanations in this manual as simple and easy-to-understand as possible, we have adapted the following methods:

- Button and control operations are explained as listed in the table below. In this manual, the operations using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.
- **Some related tips and notes are explained later in the sections “Learning More about This System” and “Troubleshooting,” but not in the same section explaining the operations ( INFO indicates that the content has some informations).** If you want to know more about the functions, or if you have a doubt about the function, go to these sections and you will find your answer there.

	Indicates that you press the button <b>briefly</b> .
	Indicates that you press the button <b>briefly and repeatedly</b> until an option you want is selected.
	Indicates that you press one of the buttons.
	Indicates that you <b>press and hold</b> the button for a specified period. <ul style="list-style-type: none"> <li>• The number inside the arrow indicates the period of press (in this example, 2 seconds).</li> <li>• If no number is inside the arrow, press and hold until the entire procedure is complete or until you get a result you want.</li> </ul>
	Indicates that you turn the control toward the specified direction(s).
	Indicates that this operation is only possible using the remote control.
	Indicates that this operation is only possible using the buttons and controls on the main unit.

# Getting Started

## Step 1: Unpack the package and check the accessories.




## Step 1: Unpack

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.

- FM antenna (1)
- AM loop antenna (1)
- Composite video cord (1)
- Remote control (1)
- Batteries (2)
- AC plug adaptor (1)
- Core filter (1)

If any item is missing, consult your dealer immediately.


## Step 2: Prepare the remote control.

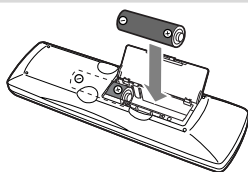


## Step 2: Prepare the Remote Control

Insert the batteries into the remote control by matching the polarity (+ and -) correctly.


1

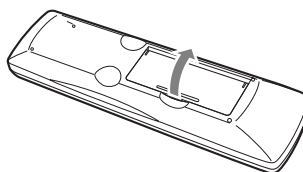


2

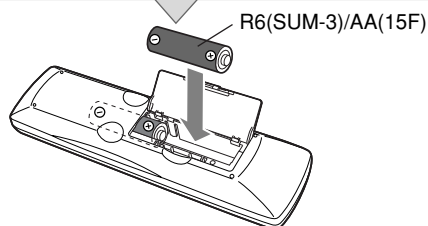

3

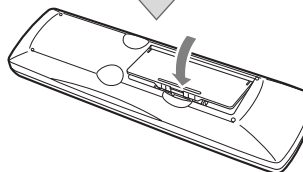

## Step 3: Hook up the components such as AM/FM antennas, speakers, etc. (see pages 4 to 7).

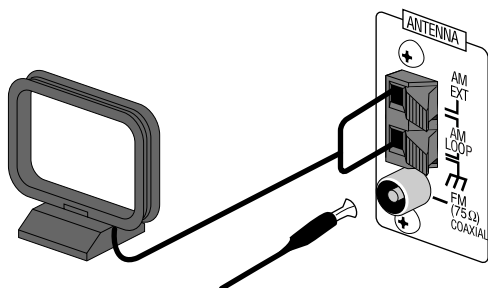

Finally plug the AC power cord.  
Now you can operate this System.

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, the remote control will be damaged from battery leakage.





### Step 3: Hook Up

If you need more detailed information, see pages 6 and 7.

**Turn the power off to all components before connections.**

Illustrations of the input/output terminals below are typical examples.  
 When you connect other components, refer also to their manuals since the terminal names actually printed on the rear may vary.

**AM loop antenna (supplied)**  
 Turn it until the best reception is obtained.

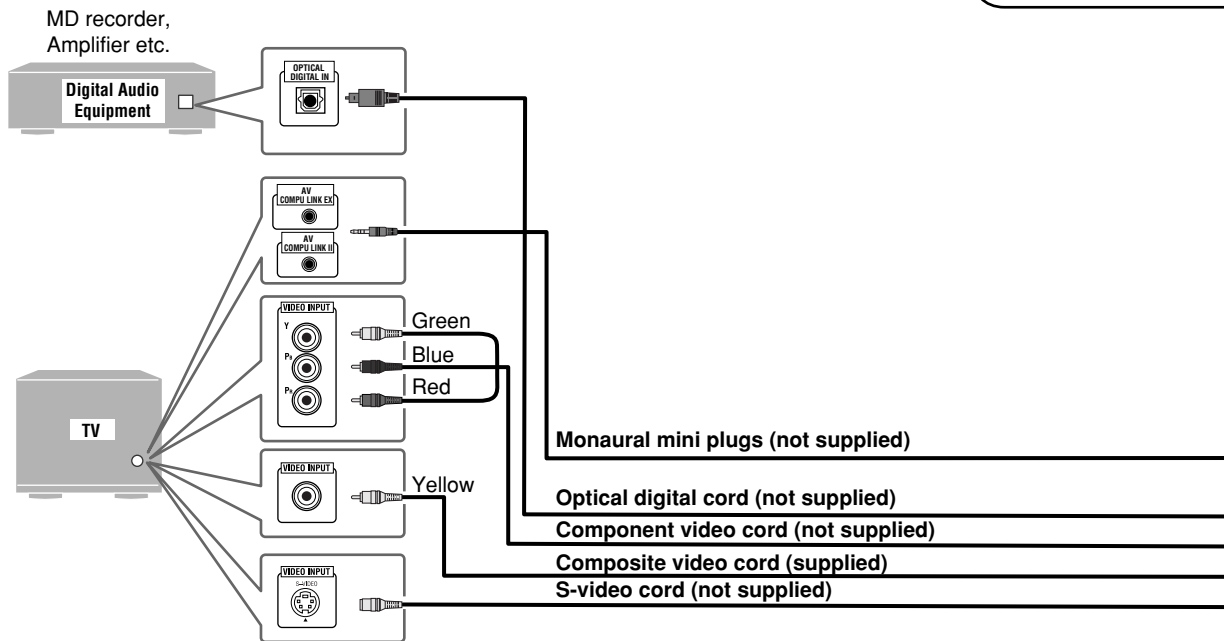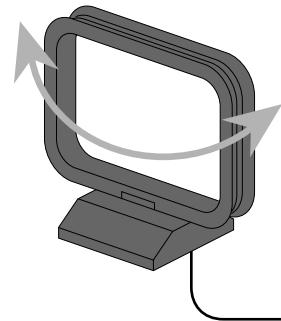


**To center speaker/Surround speaker**  
 • See “To connect the speakers” on page 6 and  
 “Setting the Speakers” on page 8.

**To a wall outlet**  
**Plug the AC power cord only after all connections are complete.**  
 • If the wall outlet does not match the AC plug, use the supplied AC plug adaptor.

### For better FM/AM reception

 Outdoor FM antenna  
(not supplied)




**AM loop antenna**  
Keep it connected.



**Vinyl-covered wire (not supplied)**

Extend it horizontally.

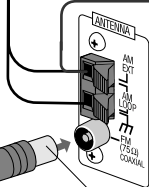


Disconnect the supplied FM antenna, and connect to an outdoor FM antenna using a 75  $\Omega$  wire with coaxial type connector (IEC or DIN45325).

\* This illustration uses SP-MXJD8 as speakers.

**FM antenna (supplied)**

Extend it so that you can obtain the best reception.

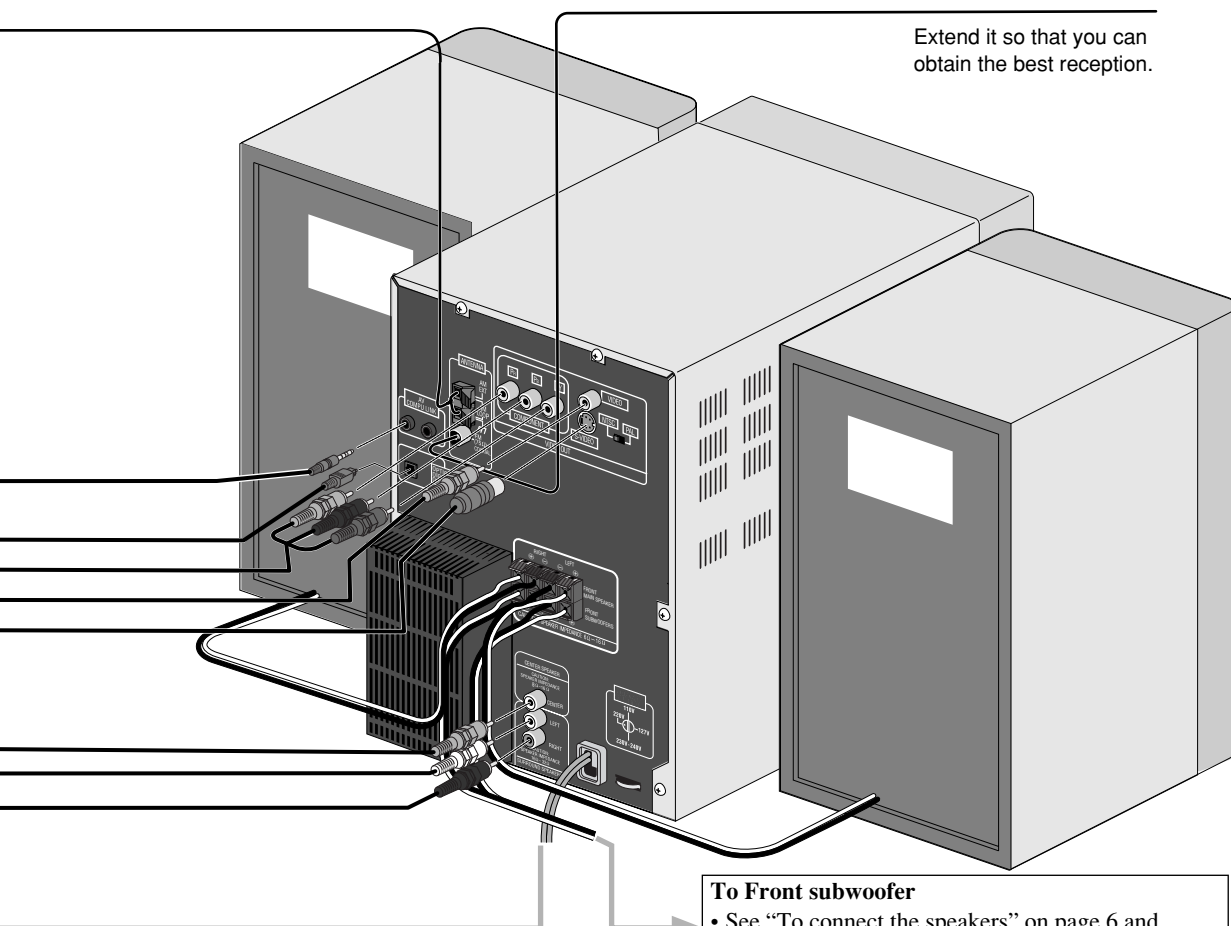


**To Front subwoofer**


- See “To connect the speakers” on page 6 and “Setting the Speakers” on page 8.

## To assemble and connect the AM loop antenna

### To assemble the AM loop antenna

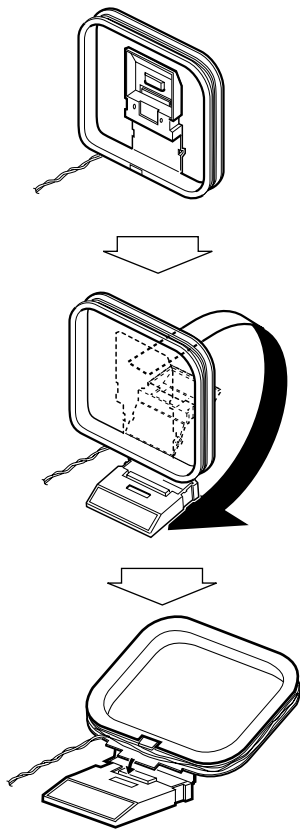


### To connect the AM loop antenna and speaker cords

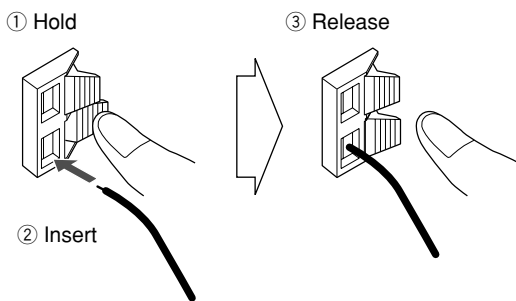

- If the AM loop antenna wire or speaker cords are covered with vinyl, remove the vinyl to expose the tip of the antenna by twisting the vinyl.
- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. This could cause poor reception.

## To connect the speakers

### To connect the speaker cords

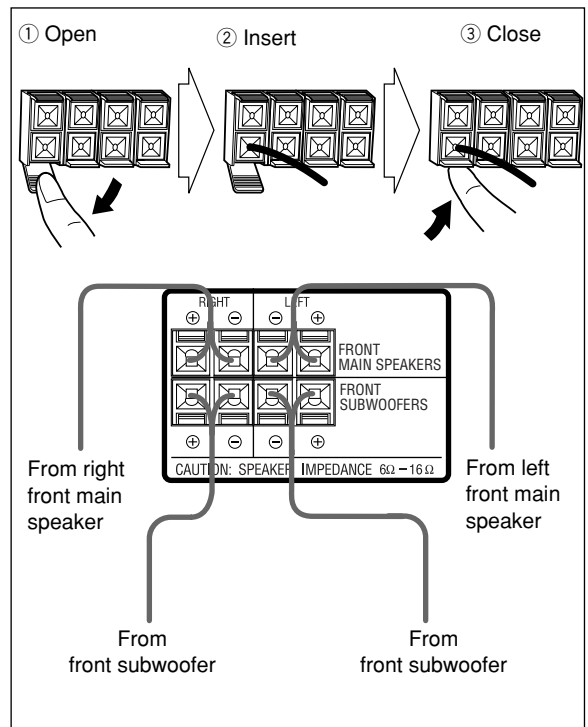

- When connecting the speaker cords, match the polarity of the speaker terminals: (+) to (+) and (-) to (-).

Speaker	Terminal color	
	(+)	(-)
Front main speakers	<b>Blue</b>	<b>Black</b>
Front subwoofers	<b>Red</b>	<b>Black</b>


- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.



- DO NOT connect more than one speaker to each terminal.
- DO NOT push or pull the speakers as this will damage the foot spacers at the bottom of the speakers.




### To connect a center speaker and surround speakers

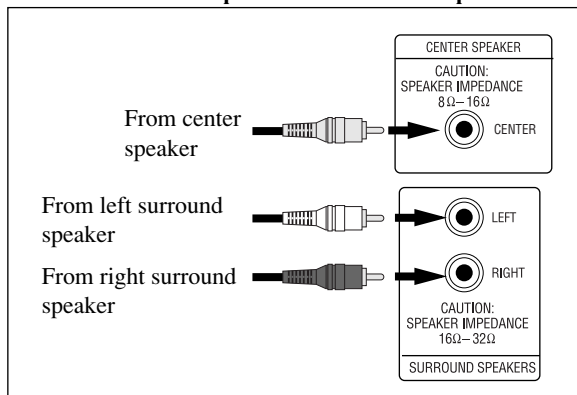


- Connect the center speaker to the CENTER jack.
- Connect the left surround speaker to the LEFT jack.
- Connect the right surround speaker to the RIGHT jack.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

### To connect digital audio

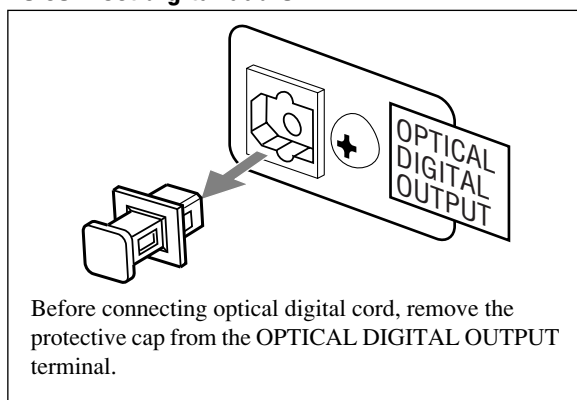

### To connect other equipment

By using a stereo mini plug cord (not supplied), you can connect equipment with analog audio output jacks such as an MD player, a TV, etc.

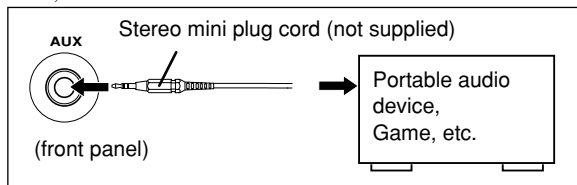

If the audio output on the other equipment is not stereo mini plug type, use a plug adapter to convert the stereo mini plug to the corresponding plug of the audio output.

#### IMPORTANT

Always set volume to MIN when connecting or disconnecting the other equipment.



DO NOT plug in any equipment until all connections are complete.


### To connect the AV COMPU LINK cords

The AV COMPU LINK control system allows you to use JVC's TV with simple operations; by starting playing back a disc, the TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

To use AV COMPU LINK, you need to connect the unit and the TV by using a cord with monaural mini-plugs (not supplied) in addition to the connection with a video cord (see page 4).


### To set the video output selector

You can select the video output to match it to the color system of your TV.

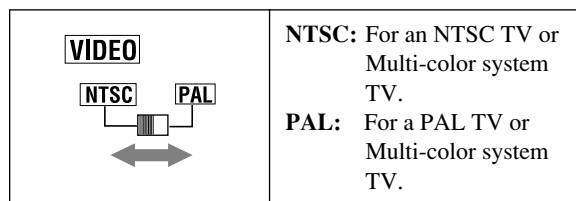

### Adjusting the Voltage Selector

Use a screwdriver to rotate the voltage selector so that the voltage marker is pointing at the same voltage as where you are plugging in the unit. (See also the back cover page.)

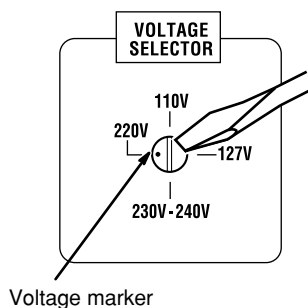


DO NOT plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.


## Setting the Speakers

### Speaker layout

To enjoy multi-channel sound, locate speakers as follows. If you cannot locate them like this, adjust the speaker setting by using the Set up menu. (See right column.)

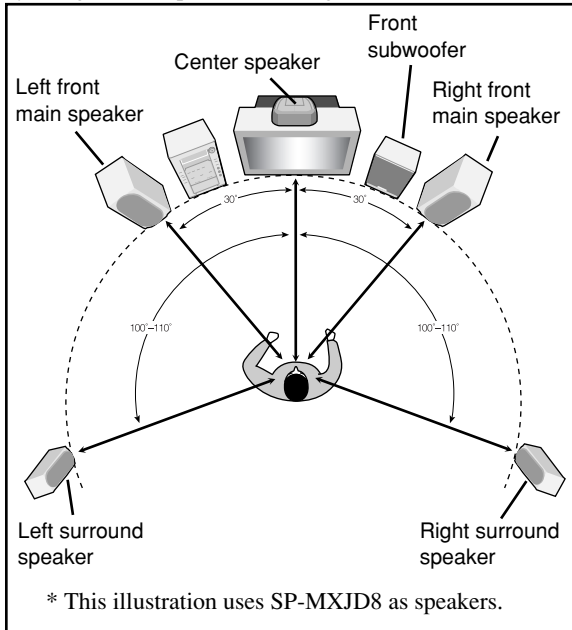

- You can place the front subwoofer wherever you like since bass sound is non-directional. However, it is recommended to place it in front of you.




- DO NOT place a center speaker and surround speakers on the front main speakers or the front subwoofer.

### To adjust the speaker distance

You need to adjust the each speaker's distance from where you usually take seat (listening position) to get the best surround effect.



- Turn off the TV and select the correct input mode on the TV.
- Turn on the System and change the source to "DVD/CD."

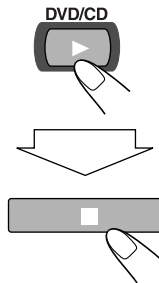



- Display the Set up Menu.




- Select the SPK. SETTING Set up Menus.

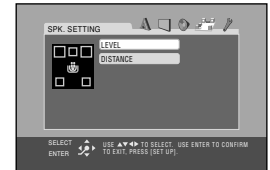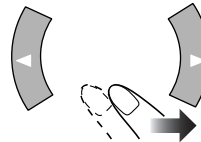


- Select "DISTANCE."

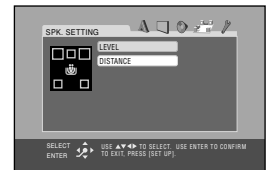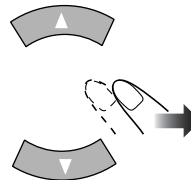


- Enter the DISTANCE submenu.

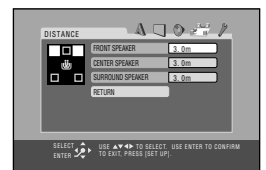

**7 Select the speaker to adjust the distance, then display the pop-up window.**

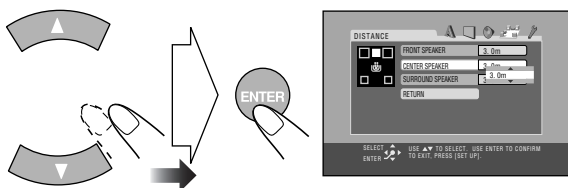


**Speaker Diagram**

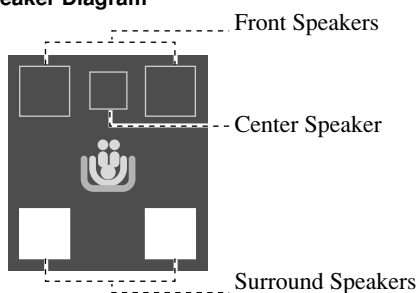

- The selected speaker icon is highlighted blue.

**8 Adjust the desired speaker distance.**

- For each speaker (FRONT SPEAKER, CENTER SPEAKER, SURROUND SPEAKER), set the distance from the listening point within the range of 0.3 m to 9.0 m in 0.3 m intervals.

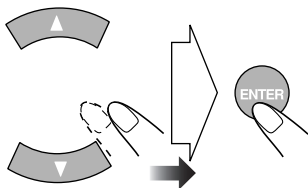

**9 Repeat steps 7 to 8 to adjust other speakers' distance if necessary.**

**To finish the setting**

SET UP



# Before Operating the System

## Playable Disc Types

This unit has been designed to play back the following discs:

Disc Type	Mark (Logo)
DVD Video	
DVD Audio	
Video CD (VCD)	 Video CD
Super Video CD (SVCD)	 
Audio CD	
CD-R	The System can play back CD-R or CD-RW recorded in the Audio CD, Video CD, SVCD, MP3, WMA, JPEG, MPEG-4 formats.
CD-RW	
DVD-R	The System can play back DVD-R or DVD-RW recorded in the DVD Video format.
DVD-RW	

In addition to the above discs, this system can play back audio data recorded on CD Text, CD-G (CD Graphics), and CD-Extra.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD+R, DVD+RW, CD-I (CD-I Ready), CD-ROM, Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
- In this manual, “file” and “track” are interchangeably used for MP3/WMA/JPEG/MPEG-4 operations.

### About color system

This System accommodates both NTSC and PAL system and can playback discs recorded with either system. To change the color system, see page 7.

### Note on Region Code

DVD players and DVDs have their own Region Code numbers. This System can play back only DVDs recorded with the NTSC or PAL color system whose Region Code numbers including “4.”


EX.:



If a DVD with the improper Region Code numbers is loaded, “REGION ERR” appears on the display and playback will not start.

 
## Audio formats

The System can play back the following digital audio formats.

- LPCM (Linear PCM)
-  DIGITAL (Dolby Digital)
- DTS (Digital Theater Systems)
- MPEG (MPEG Multichannel)
- MLP (Meridian Lossless Packing)

### IMPORTANT: Before playing a disc, make sure of the following...

- Turn on the TV and select an appropriate input mode on the TV to view the pictures or on-screen displays on the TV screen.
- For disc playback, you can change the initial setting to your preference. See “Set up Menu Operations” on page 39.

If “” appears on the TV screen when you press a **button**, the disc cannot accept the operation you have tried to do, or data required for that operation is not recorded on the disc.


- Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, “MLP Lossless”, and the double-D symbol are trademarks of Dolby Laboratories.
- “DTS” and “DTS Digital Surround” are trademarks of Digital Theater Systems, Inc.
- USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE BY A CONSUMER ENGAGING IN PERSONAL AND NON-COMMERCIAL ACTIVITIES.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

“CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE ‘STANDARD DEFINITION’ OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.”


# Parts Index

Refer to the pages to see how to use the buttons and controls.

## Remote control

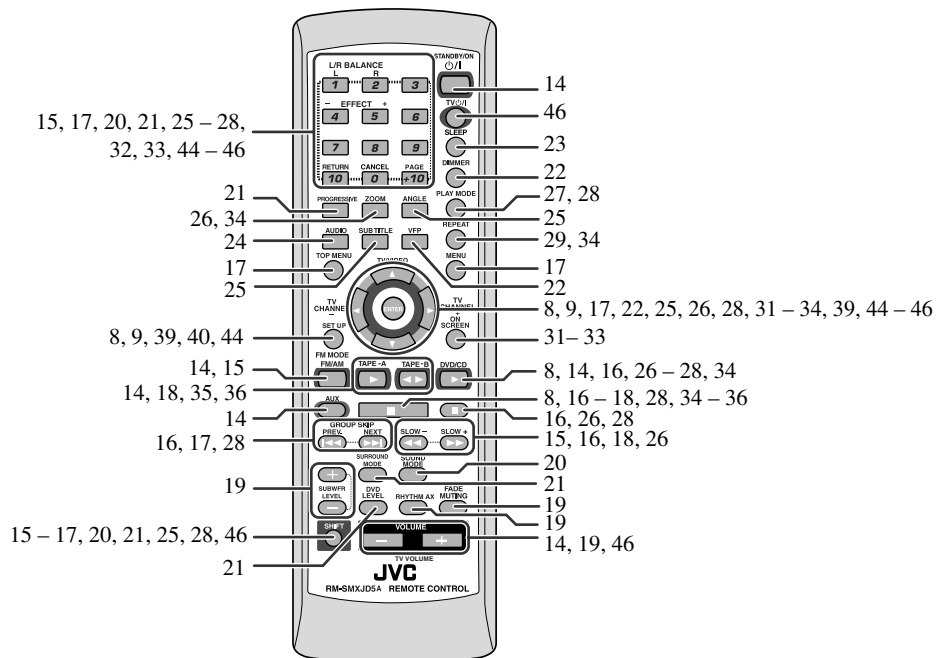


## Main unit

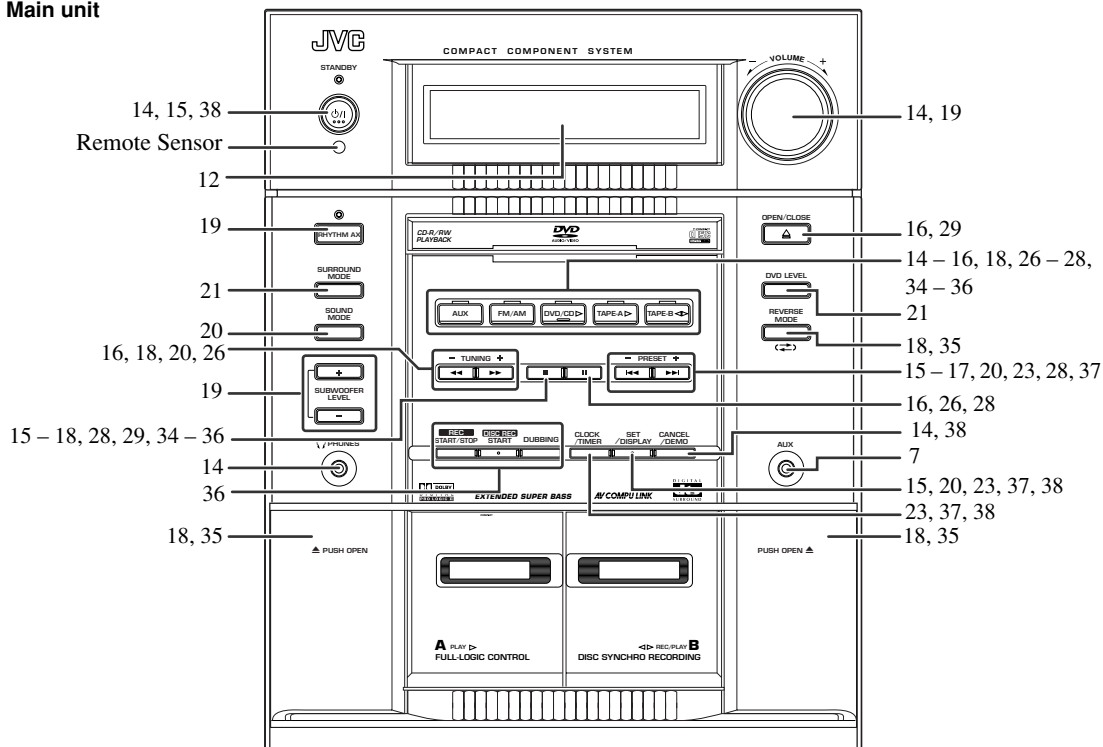

## About the Display Indication


The indications on the display teach you a lot of things while you are operating the System. Before operating the System, be familiar with when and how the indicator illuminates on the display.

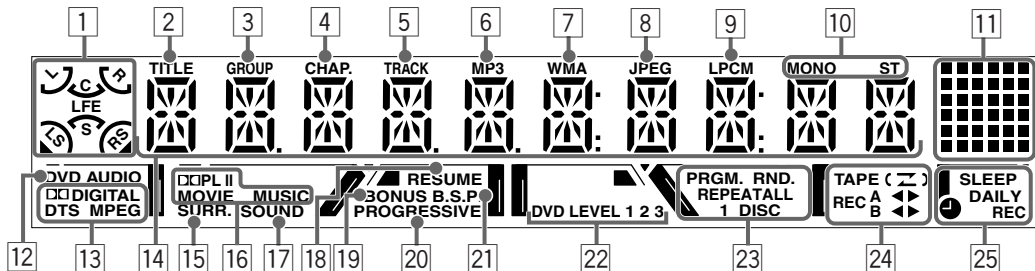

### Indications on the main display


- While listening to radio:

 Band    Preset number    Frequency



- While selecting "TAPE" or "AUX IN":

 
Source name



- While playing a disc:

#### DVD Video:

 
Title number                      Elapsed playing time



Chapter number

#### DVD Audio:

 
Group number                      Elapsed playing time



Track number

#### SVCD/VCD/CD:

 Disc type\*1                      Elapsed playing time\*2



Track number

#### MP3\*3/WMA\*3/JPEG/MPEG-4\*5:

Group number                      Elapsed playing time\*4

 


Track number


- While disc play is stopped:

#### DVD Video:

Total title number




#### DVD Audio:

 

#### SVCD/VCD/CD:

 Disc type\*1                      Total playing time\*2



Total track number

#### MP3\*3/WMA/JPEG/MPEG-4:

Current group number



Current track number



 
 
 
 

 
\*1 Disc type is displayed with the following abbreviation: "SV (SVCD)", "VD (VCD)", "CD (CD)".

\*2 While activating PBC function, "PBC" appears on the display instead of the playing time.

\*3 When you start playing an MP3/WMA track, the track name (and Tag information) will be shown before the elapsed playing time appears.



\*4 While playing back a JPEG disc, "JPEG" appears on the display instead of the elapsed playing time.

\*5 When you start playing an MPEG-4 file, the file name will be shown before the elapsed playing time appears.

- 1** Surround Mode/Source signal indicators
- Surround Mode indicators: light to indicate the current activated speaker.
  - L/C/R/LFE/LS/S/RS: light to indicate the current source signal.
- 2** TITLE indicator
- Lights to indicate the title number when the source is DVD Video.
  - Lights to indicate the group title or track title when MP3/WMA/JPEG/MPEG-4 title is shown on the main display.
- 3** GROUP indicator
- Lights to indicate the group number when the source is DVD Audio or MP3/WMA/JPEG/MPEG-4 disc.
- 4** CHAP. indicator
- Lights to indicate the chapter number when the source is DVD Video.
- 5** TRACK indicator
- Lights to indicate the track number when the source is a disc (except for DVD Video).
- 6** MP3 indicator
- Lights while playing back an MP3 track.
- 7** WMA indicator
- Lights while playing back a WMA track.
- 8** JPEG indicator
- Lights while playing back a JPEG file.
- 9** LPCM indicator
- Lights when a source signal is linear PCM.
- 10** FM reception indicators
- MONO: lights while receiving an FM stereo station in monaural.
  - ST (stereo): lights while an FM stereo station with sufficient signal strength is tuned in.
- 11** Animation indicator
- 12** DVD AUDIO indicator
- DVD: lights when DVD Video is detected.
  - DVD AUDIO: lights when DVD Audio is detected.
- 13** Source signal indicators
-  DIGITAL: lights when a source signal is Dolby Digital.
  - DTS: lights when a source signal is DTS Surround.
  - MPEG: lights when a source signal is MPEG multichannel.
- 14** Main display
- 15** SURR. indicator
- Lights when Surround mode is activated.
- 16** Dolby Pro Logic II indicators
-  PL II: lights when Dolby Pro Logic II mode is activated.
  - MOVIE: lights when Dolby Pro Logic II Movie is activated.
  - MUSIC: lights when Dolby Pro Logic II Music is activated.
- 17** SOUND indicator
- Lights when SEA mode or USER mode is activated.
- 18** RESUME indicator
- Lights when the Resume function is activated (see page 16).
- 19** BONUS indicator
- Lights when DVD Audio with bonus group is detected (see page 26).
- 20** PROGRESSIVE indicator
- Lights when the progressive scanning mode is selected.
- 21** B.S.P. indicator
- Lights when browsable still picture on DVD Audio is available (see page 25).
- 22** DVD LEVEL 1/2/3 indicators
- Lights when the DVD Video is detected.
- 23** Disc operation indicators
- PRGM.: lights when Program Play mode is activated.
  - RND.: lights when Random Play is activated.
  - REPEAT: lights when Repeat Play mode is activated.
  - ALL: lights when All Disc Repeat is activated.
  - 1: lights when One Track/Chapter/Step Repeat is activated.
- 24** Tape operation indicators
- TAPE: lights when a tape is loaded in either A or B.
  -  (reverse mode):
    - : tape play continues endlessly.
    - : tape automatically reverses once.
    - : tape play stops at the end of one side.
  - A: lights when a tape is loaded in the deck A.
  - B: lights when a tape is loaded in the deck B.
  - REC: lights while recording.
  -  (tape direction):
    - Lights to indicate the current tape running direction.
    - Flashes slowly during playback and recording.
    - Flashes quickly while rewinding a tape.
- 25** Timer indicators
- : lights when Sleep Timer is working or Daily Timer or Recording Timer stands by or is working or setting.
  - SLEEP: flashes when the Sleep Timer is activated.
  - DAILY: lights when the Daily Timer stands by; flashes while working or setting.
  - REC: lights when the Recording Timer stands by; flashes while working or setting.

# Daily Operations—Playback

In this manual, the operation using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.

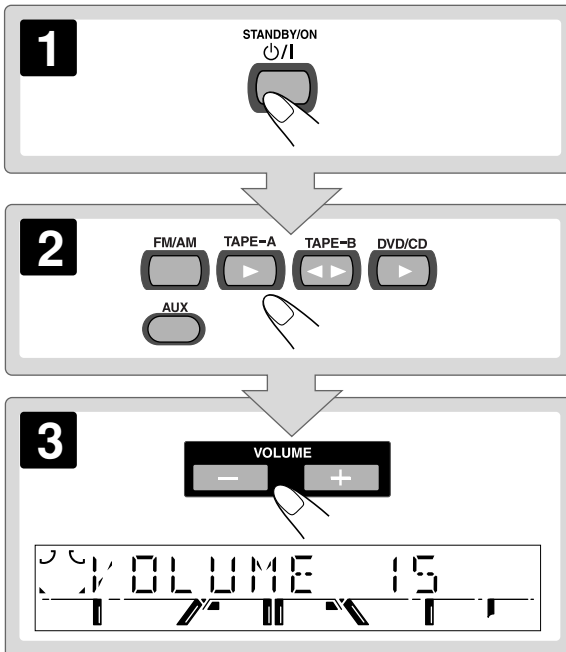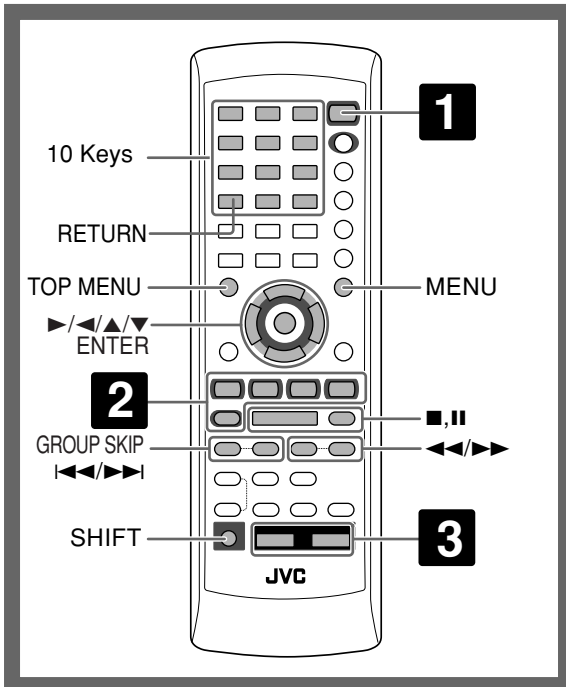

## 1 Turn on the power.

The STANDBY lamp on the main unit goes off.

- Without pressing  $\text{O/I}$  (STANDBY/ON), the System also turns on by pressing one of the source select buttons in the next step.

## 2 Select the source.

Playback automatically starts if the selected source is ready to start playback.

- If you press AUX, start playback source on the external component.

## 3 Adjust the volume.

## 4 Operate the target source as explained later.

### To turn off (stand by) the system

STANDBY/ON  
 $\text{O/I}$  The STANDBY lamp on the main unit lights in red.



- A small amount of power is always consumed even while on standby.

### For private listening


Connect a pair of headphones to the PHONES jack on the main unit. The sound will no longer come out of the speakers. Be sure to turn down the volume before connecting or putting the headphones.

- Disconnecting the headphones will activate the speakers again.



DO NOT turn off (standby) the System with the volume set to an extremely high level; Otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the System or start playback.

### Canceling the Demonstration

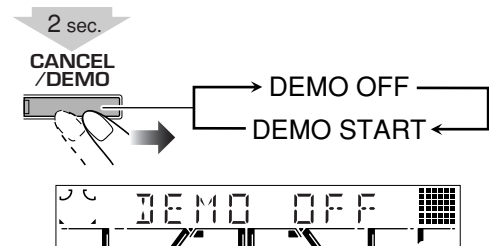




## Listening to the Radio INFO

### To select the AM tuner interval spacing

Some countries space AM stations 9 kHz apart, and other countries use 10 kHz spacing.


You can change the AM tuner intervals during the unit is turned on.

While AM is selected...

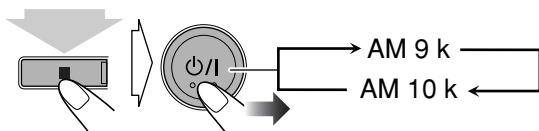


(holding then...)

### To select the band (FM/AM)

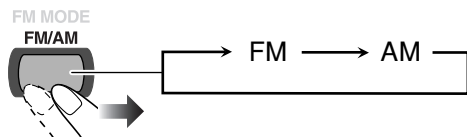

### To tune in to a station

While FM or AM is selected...

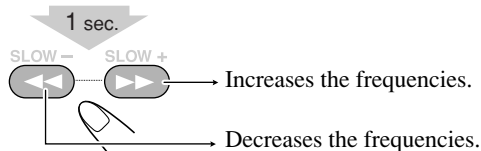


When a station (frequency) with sufficient signal strength is tuned in, the frequency search stops.

To stop searching manually, press either button.

- When you repeatedly press the button, the frequency changes step by step.

### If the received FM station is hard to listen

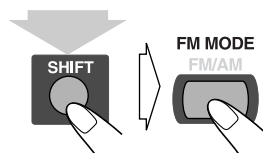

(holding then...)

The MONO indicator lights on the display. Reception will improve though stereo effect is lost—monaural reception mode.


To restore the stereo effect, press the button again (the MONO indicator goes off).

### To preset Stations



You can preset 30 FM and 15 AM stations.


- Tune in to a station you want to preset, then enter into the presetting mode.

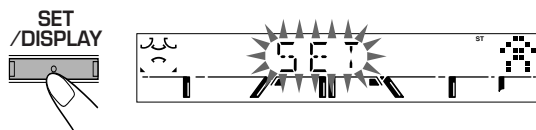

- Select a preset number for the station you store.




- Store the station.

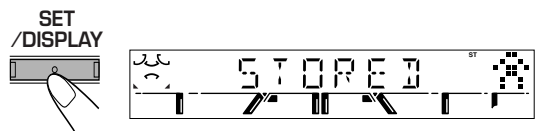


### To turn in to a Preset Station

- Select the band (FM or AM).

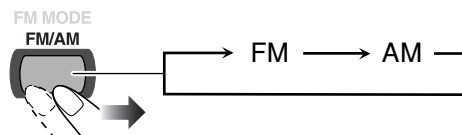

- Select a preset number for the station you store.

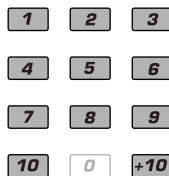

#### Examples:

To select preset number 5, press 5.

To select preset number 15, press +10, then 5.

To select preset number 30, press +10, +10, then 10.

- You can also use buttons on the remote control or the PRESET +/- buttons on the main unit.


## Playing Back a Disc INFO

Before operating a disc, be familiar how a disc is recorded.

- DVD Video comprises of “Titles” which includes “Chapters,” DVD Audio/MP3/WMA/JPEG/MPEG-4 comprise of “Groups” which includes “Tracks,” and CD/SVCD/VCD comprise of only “Tracks.”

For JPEG/MPEG-4 playback, see “Operations on the CONTROL Screen” on page 33.

### To insert discs

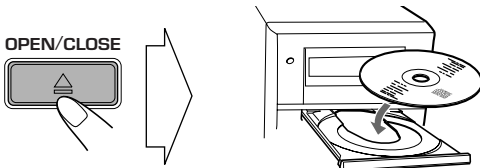

- When using an 8 cm disc, place it on the inner circle of the disc tray.

**To close the disc tray,** press OPEN/CLOSE ▲ again.

If you press DVD/CD ►, disc tray closes automatically and playback starts.

To start:	To pause:	To stop:
	To release it, press DVD/CD ►.	

**While playing DVD/SVCD/VCD:** This System can store the stop point, and when you start playback again by pressing DVD/CD ►, it starts from the position where you have stopped—Resume Play. (RESUME indicator lights up when you stop playback.)

**To stop completely while Resume is activated,** press ■ twice. (To cancel Resume, see “RESUME” on page 43.)

### On-screen guide icons

- During disc playback, the following icons may appear for a while on the TV screen:

Appears at the beginning of a scene containing multi-angle views.

Appears at the beginning of a scene containing multi-audio languages.

Appears at the beginning of a scene containing multi-subtitle languages.


- The following icons will be also shown on the TV screen to indicate your current operation.



- To deactivate the on-screen guide icons, see “ON SCREEN GUIDE” on page 43.


### To select a title/group Remote ONLY >>>

While playing a disc...

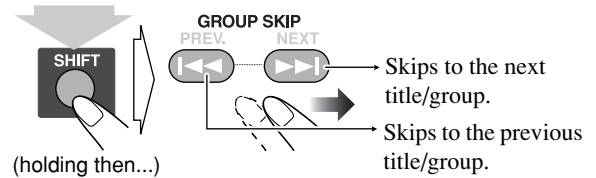


### To select a chapter/track

While playing a disc...

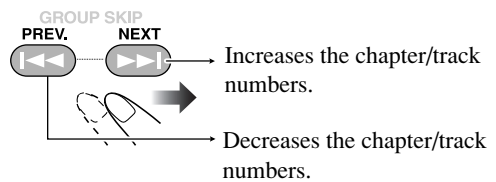

### To locate a particular portion

While playing a disc except WMA/MP3...

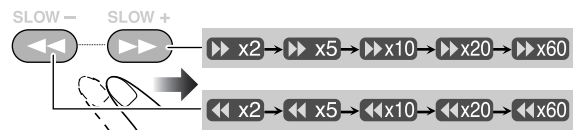

- No sound comes out while searching on DVD/SVCD/VCD.


**To return to normal playback,** press DVD/CD ►.

## To select an item directly



You can select a title/chapter/track directly and start playback.

For DVD Video, you can select a **title before starting playback**, while you can select a **chapter after starting playback**.

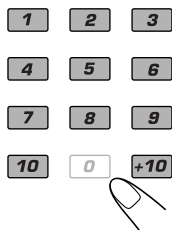

### Examples:

To select number 5, press 5.

To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.

## Playing Back by Using the Disc Menu




You can operate the disc play—DVD and SVCD/VCD with Playback Control (PBC)—using the disc menu shown on the TV screen.


- When an SVCD or VCD with PBC is detected, “PBC” appears on the display instead of the playing time.

### ■ For DVD Video/DVD Audio:

#### 1 Show the disc menu.

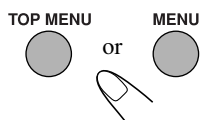

#### 2 Select an item on the disc menu.

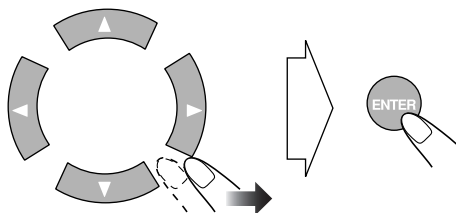


- With some discs, you can also select items by entering the number using the 10 keys.

### ■ For SVCD/VCD with PBC:

While playing a disc with PBC, “PBC” appears on the display.

When disc menu appears on the TV screen, select an item on the menu. Playback of the selected item starts.

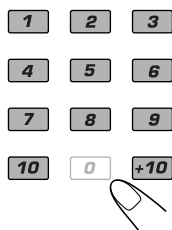


### Examples:

To select number 5, press 5.


To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.


### To move to the next or previous page of the current menu:

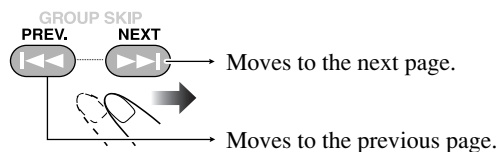

### To return to the previous menu:

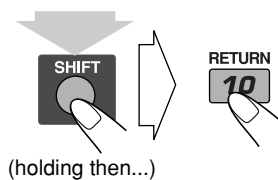

### To cancel PBC

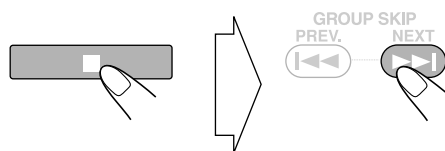

You can also cancel PBC function by pressing the number button to select a track.

To reactivate PBC, press ■, then press ◀◀.





## Playing Back a Tape

 INFO


### To insert a tape

You can play back type I tapes.


- The use of C-120 or longer tape is not recommended.

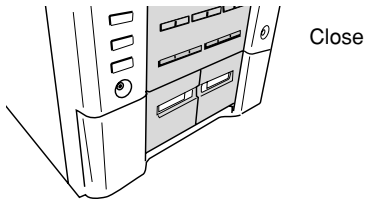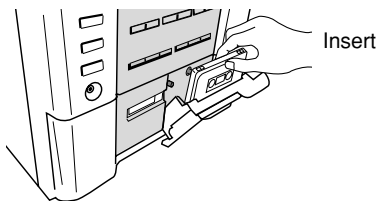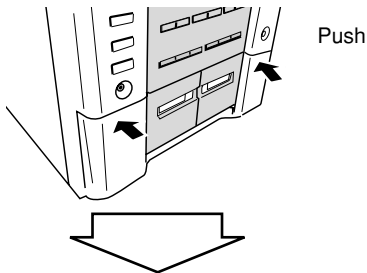

### To change the tape running direction (deck B only)

 

### To reverse the tape automatically (deck B only)

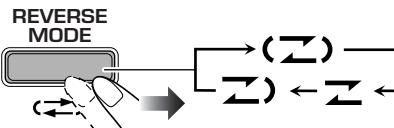


(↺) Tape is automatically reversed, and playback repeats until you stop it.

↺ Tape will not be reversed. When the current side of the tape reaches its end, playback stops.

↻) Tape is automatically reversed once.

### To playback the both decks A and B continuously —Relay Play


When the cassettes are set in the both decks...

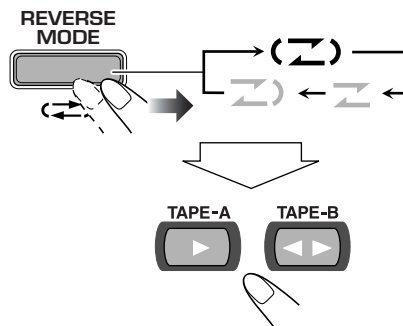


After the tape in deck A finishes playing, the tape in deck B starts playing.

After the reverse (◀) side of the tape in deck B finishes playing, the tape in the deck A rewinds and then starts playing.

To start:

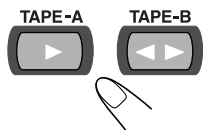


To stop:

 


To rewind tape:

Before or after play...

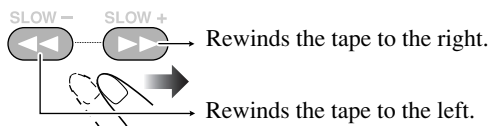


# Daily Operations—Sound&Other Adjustments

## Remote Control

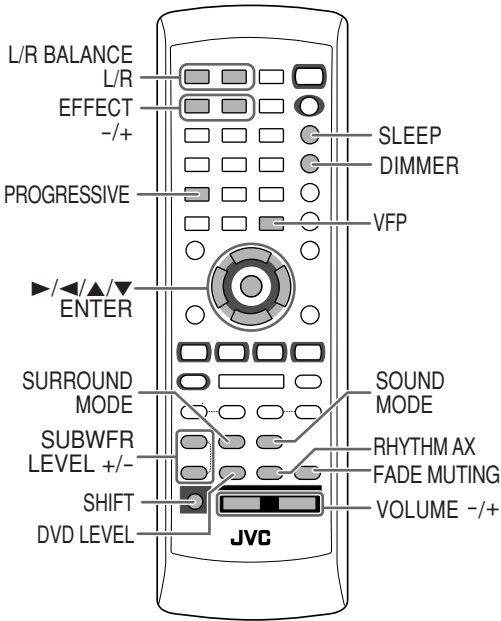


## Main unit

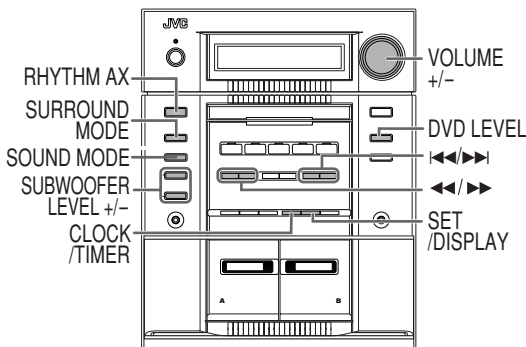

## Adjusting the Volume

INFO

The volume level can be adjusted in 32 steps (VOLUME MIN, VOLUME 1 – VOLUME 30, VOLUME MAX).

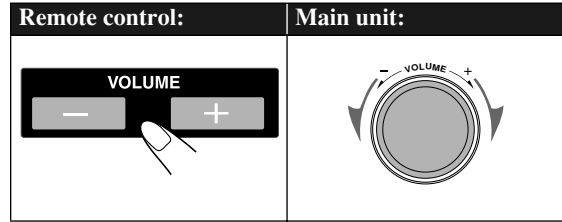

To drop the volume in a moment



To restore the volume, press again, or adjust the volume level.

## Reinforcing the Bass Sound


To adjust the bass level gradually

You can select the subwoofer level from level 0 (minimum) to level 4 (maximum).



To emphasize rhythm feeling—RHYTHM AX


This function emphasizes bass attack feeling, and also changes the subwoofer level.

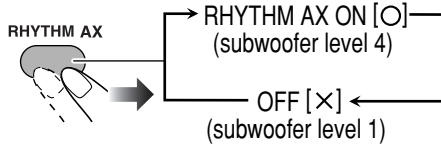

## Adjusting the Front Speaker Remote ONLY »»»


### Output Balance

You can adjust the output balance of left front speaker and right front speaker within the range of R (right) -6 (minimum sound level from the right speaker) to L (left) -6.

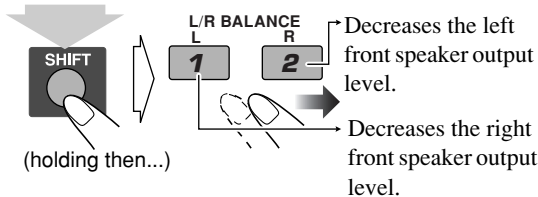

## Selecting the Sound Modes

You can select one of the preset Sound Modes.

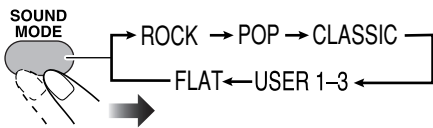


SEA (Sound Effect Amplifier) modes	
<b>ROCK</b>	Boosts low and high frequency. Good for acoustic music.
<b>POP</b>	Good for vocal music.
<b>CLASSIC</b>	Good for classical music.
User modes	
<b>USER 1/2/3</b>	Your individual mode stored in memory. See the next column "Creating Your Own Sound Modes—User Mode."
<b>FLAT</b>	No Sound Mode effect.

## Creating Your Own Sound Modes—User Mode Main Unit ONLY INFO


You can create your own Sound Modes to make sounds suit your taste. The changed settings can be stored as the USER 1, USER 2 and USER 3 modes.

### 1 Select one of the preset Sound Modes.

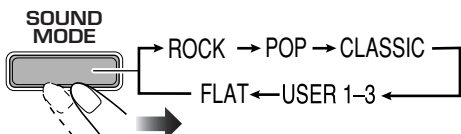


### 2 Enter into the SEA Control Mode.

- You can enter the SEA Control Mode only while the Sound Mode appears on the display.

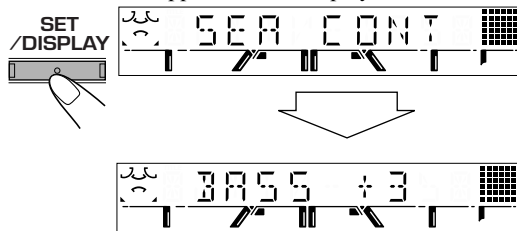


### 3 Adjust the SEA pattern.

- Select one of the tone—BASS or TRE (treble).

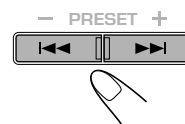


- Adjust the level of the selected tone.

- You can adjust the bass and treble level from -3 to +3.

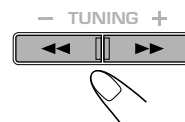


- Repeat steps ① and ② to adjust the level of the other tone.

 - Finish the SEA pattern setting.



### 4 Select one of the User Modes.

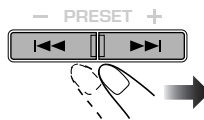


### 5 Finish the setting.




## Using Surround Mode INFO

### To activate Surround Mode

#### • For DVD/CD source

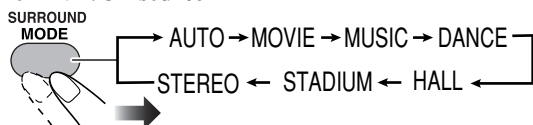

#### • For AUX/FM/AM/TAPE-A/TAPE-B

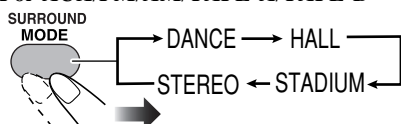


Auto Surround Mode*	
<b>AUTO</b>	<ul style="list-style-type: none"> <li>• If Multi-channel surround signal comes in, Multi-channel Surround Mode will be selected.</li> <li>• If Dolby Surround signal comes in, Dolby Pro Logic II MOVIE mode will be selected automatically.</li> <li>• If 2-channel signal comes in, STEREO mode will be selected.</li> </ul>
Dolby Pro Logic II modes*	
<b>MOVIE</b>	Creates 5.1-channel sound field from 2ch source. This mode is suitable for movie source.
<b>MUSIC</b>	Creates 5.1-channel sound field from 2ch source. This mode is suitable for music source.
DSP modes*	
<b>DANCE</b>	Increases resonance and bass.
<b>HALL</b>	Adds depth and brilliance to the sound.
<b>STADIUM</b>	Adds clarity and spreads the sound, as in an outdoor stadium.
Stereo mode	
<b>STEREO</b>	Cancels the Surround Mode.

\* If Multi-channel surround signal comes in, Multi-channel Surround Mode will be selected automatically.

## To adjust the DSP effect level Remote ONLY


When one of the DSP modes is selected...

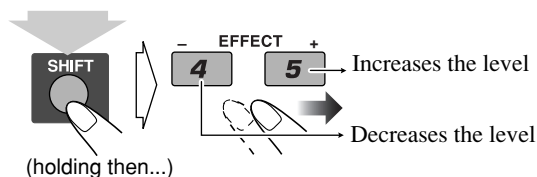

## Presetting Automatic DVD Video Sound

### Increase Level

The DVD Video sound is sometimes recorded at a lower level than for other discs and sources. You can set the increase level for the currently loaded DVD Video, so you do not have to adjust the volume every time you change the source.

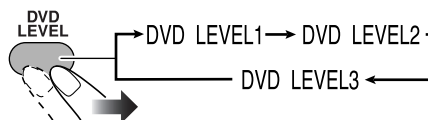


As the number increases, sound level also increases.

## Changing the Scanning Mode Remote ONLY INFO

 This System supports progressive scanning.

If you connect a progressive TV through the COMPONENT jacks, you can enjoy a high quality picture from the built-in DVD player by selecting "PROGRESSIV."



**PROGRESSIV** Progressive scanning. For a progressive TV.

**INTERLACE** Interlaced scanning. For a conventional TV.



• PROGRESSIVE indicator lights on when progressive mode is selected.

## Changing the Picture Tone Remote ONLY >>> INFO

 While showing a playback picture on the TV, you can select the preset picture tone, or adjust it and store your own likeliness.


### To select a preset picture tone

**1 Activate VFP.**

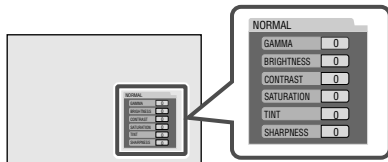

On the TV screen

**2 Select a preset picture tone.**

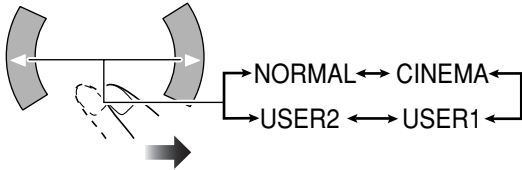


<b>NORMAL</b>	Normally select this.
<b>CINEMA</b>	Suitable for a movie source.
<b>USER1/USER2</b>	You can adjust parameters and can store the settings (see below).

### To adjust the picture tone

**1 Select "USER1" or "USER2."**

- Follow steps 1 and 2 explained above.

**2 Select a parameter you want to adjust.**

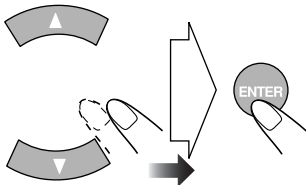

**GAMMA** Adjust if the neutral color is bright or dark. The brightness of dark and bright portions is maintained (-3 to +3).

**BRIGHTNESS** Adjust if the picture is bright or dark as a whole (-8 to +8).


**CONTRAST** Adjust if the far and near position is unnatural (-7 to +7).

**SATURATION** Adjust if the picture is whitish or blackish (-7 to +7).

**TINT** Adjust if the human skin color is unnatural (-7 to +7).


**SHARPNESS** Adjust if the picture is indistinct (-8 to +8).

**3 Adjust the parameter.**

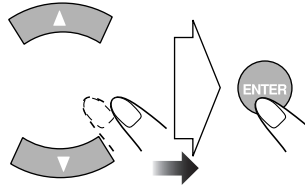


**4 Repeat steps 2 to 3 to adjust other parameters.**

 **5 Finish setting.**



## Changing the Display Brightness Remote ONLY >>>

You can dim the display window.

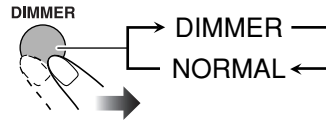



## Setting the Clock




INFO

Without setting the built-in clock, you cannot use Daily/Recording Timers (see page 37) and Sleep Timer (see next column).


- To exit from the clock setting, press CLOCK/TIMER as required.
- To go back to the previous step, press CANCEL/DEMO.

### 1 Activate clock setting mode.

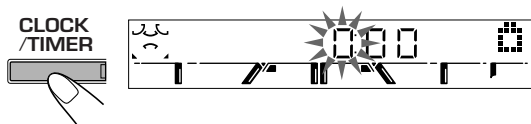


- If you have already adjusted the clock before, press the button repeatedly until the clock setting mode is selected.

### 2 Adjust the hour.

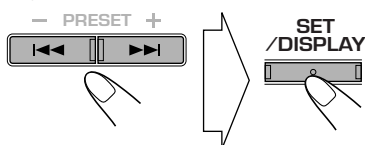


### 3 Adjust the minute.

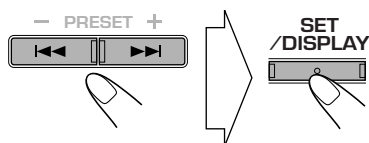

Now the built-in clock starts working.

### To check the current time during play


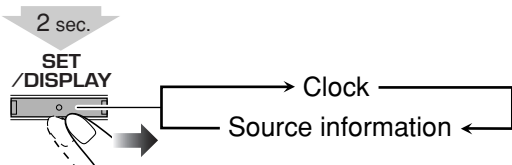


## Turning Off the Power Automatically

Remote ONLY

With Sleep Timer, you can fall asleep listening to music.
  
### 1 Specify the time (in minutes).



### 2 Wait until the set time goes off.


#### To check the time remaining until the shut-off time



- If you press repeatedly, you can change the shut-off time.

# Unique DVD/VCD Operations

## Remote Control

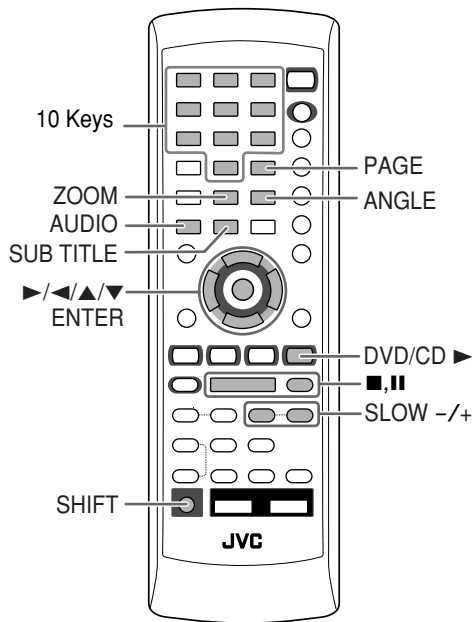

## Selecting the Sound Track

 
**For DVD Video:** While playing back a chapter containing audio languages, you can select the language to listen to.

**For DVD Audio:** While playing back a track containing audio channels, you can select the audio channel to listen to.


**For SVCD/VCD:** When playing back a track, you can select the audio channel to play.

- You can also select the audio track using the on-screen bar (see page 31).


### While playing a DVD Video...



Ex.:

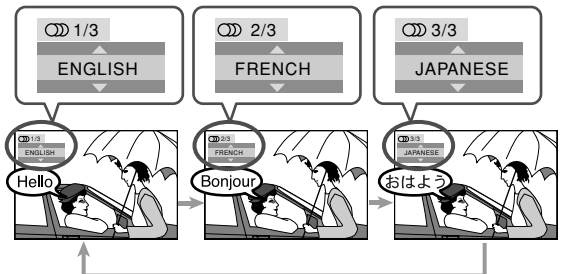

### While playing an SVCD or VCD...

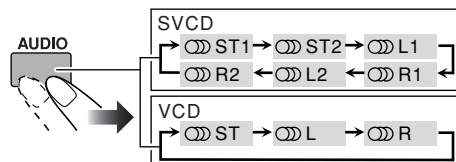

**ST1/ST2/ST** To listen to normal stereo (2 channel) playback.

**L1/L2/L** To listen to the left audio channel.

**R1/R2/R** To listen to the right audio channel.

- SVCD can have 4 audio channels. SVCD usually uses these 4 channels to record two 2-channel recordings (ST1/ST2).

## Selecting the Subtitle Language

 
**For DVD Video:** While playing back a chapter containing subtitles in different languages, you can select the subtitle language to display on the TV screen.

**For SVCD:** While playing, you can select the subtitles even if no subtitles are recorded on the disc.


- You can also select the subtitle language using the on-screen bar (see page 31).

**While playing a DVD Video...**


### 1 Display the subtitle selection window.




### 2 Select the subtitle language.

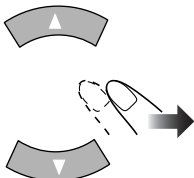

Ex.:

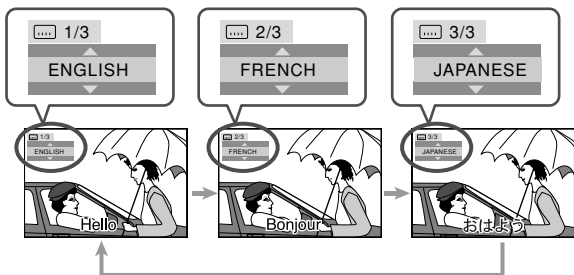

**While playing an SVCD...**

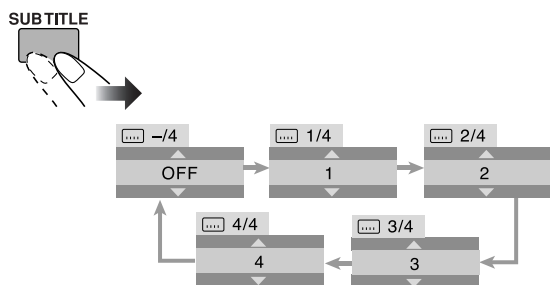


## Selecting a View Angle


While playing back a chapter (of DVD Video) containing multi-view angles, you can view the same scene from different angles.

- You can also select the view angle using the on-screen bar (see page 31).

 **While playing back or paused...**




Ex.:

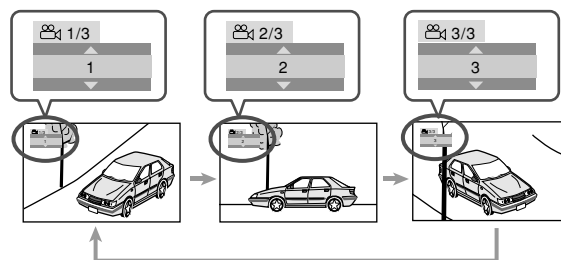

## Selecting a Still Pictures on a DVD Audio

While playing back a track (of DVD Audio) linked to browsable still pictures (B.S.P.), you can select the still picture (turn the page) to be shown on the TV screen.

- If a track is linked to browsable still pictures (B.S.P.), they are usually shown in turn automatically during playback.
- You can also select the page using the on-screen bar (see page 31).

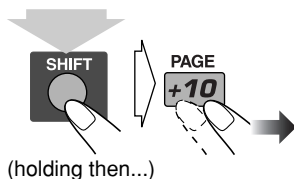

(holding then...)

Each time you press the button, the still picture changes one after another (if available).

## Playing Back a Bonus Group on a DVD Audio



INFO


Some DVD Audios have a special group called “bonus group” whose contents are not open to the public.

- To play back a bonus group, you have to enter the specific “key number” (a kind of password) for the bonus group. The way of getting the key number depends on the disc.

### 1 Select the bonus group.

- The bonus group is usually recorded as the last group (for example, if a disc contains 4 groups including a bonus group, “group 4” is the bonus group).
- For how to select the group, see “To select a title/group” on page 16.

### 2 Enter the key number.

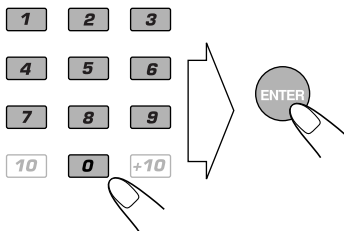

### 3 Follow the interactive instruction shown on the TV screen.

To cancel the key number entry, press ■ or change to another source.

## Special Picture Playback

INFO

### Still picture playback

To start still picture playback:	To resume normal playback:
While playing... 	

### Frame-by-frame playback

#### 1 While playing...



Still picture playback starts.

#### 2 Advance the still picture frame by frame.



To resume normal playback, press DVD/CD ►.



## Slow-motion playback

### 1 While playing...



Still picture playback starts.

### 2 Select slow motion speed.

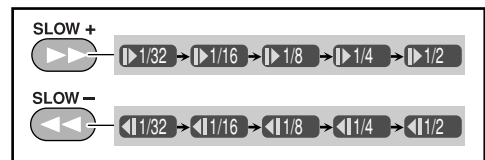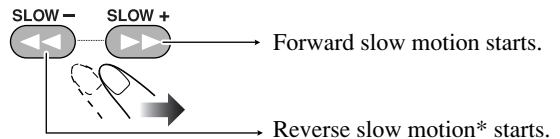


\*Only for DVD Video.

To resume normal playback, press DVD/CD ►.

## Zoom




### 1 While playing back...

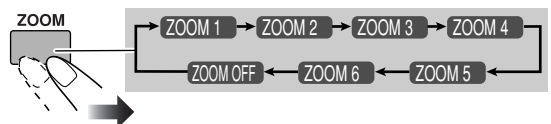

As the number increases, magnification also increases.


### 2 Move the zoomed-in position.

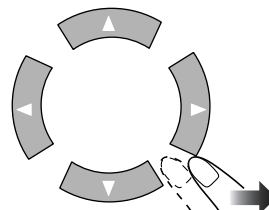


To resume normal playback, press ZOOM repeatedly until “ZOOM OFF” appears on the TV screen.

# Advanced Disc Operations

## Remote Control

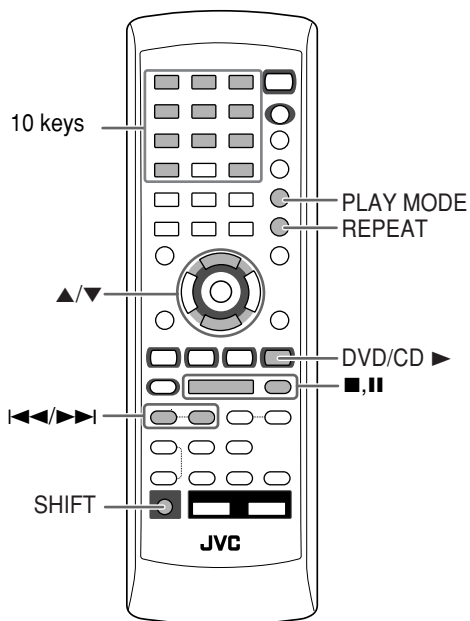

## Main unit


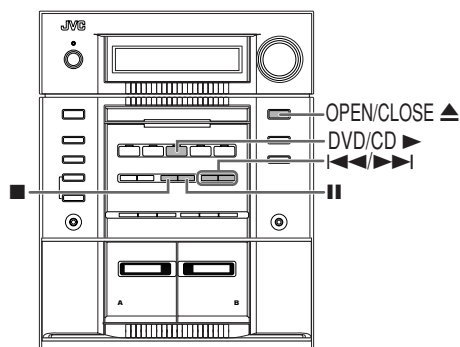


## Programming the Playing Order

### —Program Play

You can arrange the playing order of the tracks (up to 99) before you start playback.

#### 1 Before starting playback, activate Program Play.

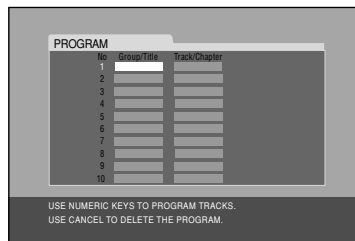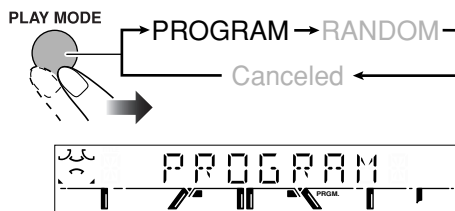

On the TV screen

#### 2 Select chapters or tracks you want for Program Play.


##### • For DVD/MP3/WMA:

- ① Select a title or group number.
- ② Select a chapter or track number.

##### • For SVCD/VCD/CD:

- ① Select a track number.

#### To enter the numbers:

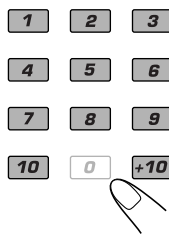

#### Examples:

To enter number 5, press 5.  
To enter number 15, press +10, then 5.  
To enter number 30, press +10, +10, then 10.

#### 3 Repeat the above step 2 until you finish what you want to program.

#### 4 Start playback.

 
 


Playback starts in the order you have programmed.

To skip a track:	To pause:	To stop:
<p>GROUP SKIP PREV. NEXT</p>	<p>To release, press DVD/CD ►.</p>	

### To check the programmed contents

Before or after playback...




### To modify the program

Before or after playback...

To erase the last step:	To erase the entire program:
<p>(holding then...)</p>	<p>You can also use ■ button on the unit.</p>
<p><b>To add steps in the program:</b> Repeat step 2 on page 27.</p>	

### To exit from Program Play

Before or after playback...

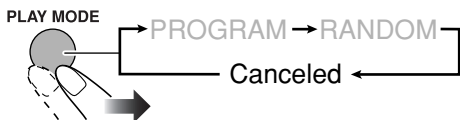


## Playing at Random—Random Play



You can play the contents of all tracks at random.

### 1 Before starting playback, activate Random Play.

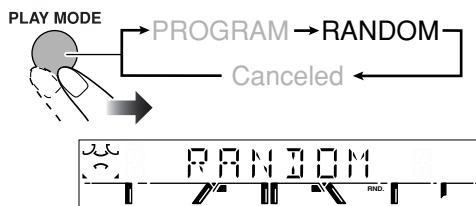

### 2 Start playback.



Playback starts in a random order. Random Play ends when all chapters/tracks are played.

To skip:	To pause:	To stop:
<p>To go to the beginning of the current track, press ◀◀.</p>	<p>To release, press DVD/CD ►.</p>	

### To exit from Random Play

Before or after playback...



## Playing Repeatedly



 
- You can also select the repeat mode using the on-screen bar (see page 31).

### Repeat Play

You can repeat playback.


#### • For DVD Video:

While playing...




#### • For DVD Audio:

 While playing or before playback...




#### • For CD/SVCD/VCD:

 While playing (without PBC for SVCD/VCD) or before playback...




#### • For MP3/WMA:

 While playing or before playback...




#### • For MPEG-4:

 While playing or before playback...



#### • For Program Play/Random Play mode:

 While playing or before playback...



<b>CHAP</b>	Repeats the current chapter.
<b>TITLE</b>	Repeats the current title.
<b>TRACK</b>	Repeats the current track.
<b>GROUP</b>	Repeats the current group.
<b>ALL</b>	Repeats all tracks or all programmed tracks.
<b>STEP</b>	Repeats the current track.
<b>OFF</b>	Selects to cancel Repeat Play mode.

## Prohibiting Disc Ejection



 

### —Child Lock



You can lock the disc tray so that no one can eject the loaded disc.

- This operation is possible only when the source is the disc player.


While the disc tray is closed...

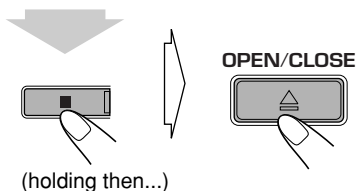

To cancel the prohibition, repeat the same procedure. "UNLOCKED" appears on the display.


# On-Screen Disc Operations

## Remote control

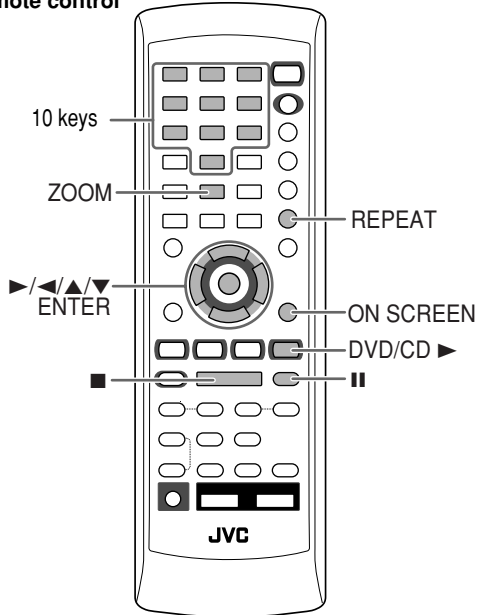


## On-screen bars

 
### DVD Video



### DVD Audio

 

### SVCD

 

### VCD



### CD



## About the On-screen Bar

You can check the information on disc (except for MP3/WMA/JPEG/MPEG-4 disc) and use some functions through the on-screen bar.

### 1 Disc type

### 2 Playback information

Indication	Meanings
Mbps	Current transfer rate (Megabits per second)
TITLE 2	Current title
CHAP 3	Current chapter
GROUP 1	Current group
TRACK 14	Current track
TOTAL 1:25:58	Time indications

### 3 Playback conditions

Indication	Meanings
▶	Playback
▶▶ / ◀◀	Forward/Reverse search
▶▶ / ◀◀	Forward/Reverse slow-motion
⏸	Pause
■	Stop

### 4 Operation icons (on the pull-down menu)

Indication	Meanings
TIME	Select to change the time indication (see also page 31).
↺	Select to repeat playback (see also pages 29, 31, and 32).
⌚	Select for time search (see also page 32).
CHAP. ▶	Select for chapter search (see also page 33).
TRACK ▶	Select for track search (see also page 33).
🗣 1/3	Select to change the audio language or channel (see also page 24).
📄 1/3	Select to change subtitle language (see also page 25).
👁 1/3	Select to change the view angle (see also page 25).
PAGE 1/15	Select to change the page (see also page 25).




## Operations Using the On-screen Bar

Basic operation procedure through the on-screen bar is as follows:


While a disc is selected as the source...

Ex.: Selecting a subtitle (French) for DVD Video:

### 1 Display the on-screen bar with the pull-down menu.

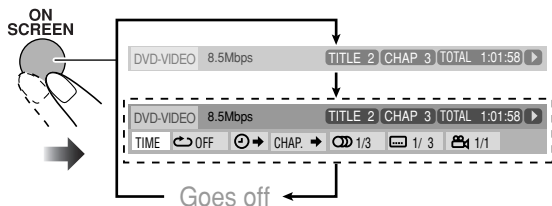


### 2 Select (highlight) the item you want.

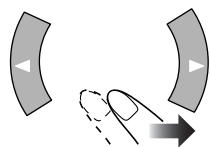

### 3 Display the pop-up window.



### 4 Select the desired option in the pop-up window.

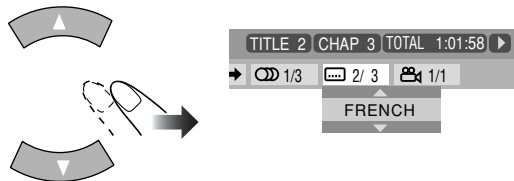

### 5 Finish the setting.



Pop-up window goes off.

### To erase the on-screen bar



## Changing the time information

 
You can change the time information in the on-screen bar and the display window on the main unit.

### 1 Display the on-screen bar with the pull-down menu.



### 2 Make sure [TIME] is selected (highlighted).

### 3 Change the time indication.



<b>TOTAL</b>	Elapsed disc time.
<b>T.REM</b>	Remaining disc time.
<b>TIME</b>	Elapsed playing time of the current chapter/track.
<b>REM</b>	Remaining time of the current chapter/track.

### To erase the on-screen bar



## Repeat Play

• See also page 29.

### 1 While playing a disc (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.

### 2 Select [OFF].

### 3 Display the pop-up window.



### 4 Select the repeat mode you want.

<b>ALL</b>	Repeats the disc (except for DVD).
<b>A-B</b>	Repeats a desired portion (see page 32).
<b>TITLE</b>	Repeats the current title.
<b>GROUP</b>	Repeats the current group.
<b>CHAPTER</b>	Repeats the current chapter.
<b>TRACK*</b>	Repeats the current track.
<b>OFF</b>	Cancels Repeat Play.

\* During Program Play or Random Play, "STEP" appears.

## 5 Finish the setting.



To cancel Repeat Play, select "OFF" in step 4.

To erase the on-screen bar



## A-B Repeat

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select OFF.
- 3 Display the pop-up window.



### 4 Select "A-B".



### 5 Select the start point (A).



 
- Before pressing ENTER, you can search for the end point using .

### 6 Select the end point (B).



A-B Repeat starts. The selected portion plays repeatedly.

To erase the on-screen bar



## Time Search


You can move to a particular point by specifying the elapsed playing time from the beginning.

- 1 While playing (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.
  - Except for DVD: Time Search can be used before starting playback.
- 2 Select .
- 3 Display the pop-up window.



### 4 Enter the time.

You can specify the time in hours/minutes/seconds.

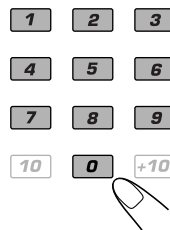

#### Examples:

To move to a point of 1 (hours): 02 (minutes): 00 (seconds), press 1, 0, 2, 0, then 0.

To move to a point of 54 (minutes): 00 (seconds), press 0, 5, 4, 0, then 0.

- It is always required to enter the hour digit (even "0" hour), but it is not required to enter trailing zeros (the last two digits in the examples above).
- To correct a misentry, press cursor to erase the last entry.

### 5 Finish the setting.



The System starts playing from the specified time.

To erase the on-screen bar




## Chapter/Track Search

You can search for the chapter (DVD Video) or track (DVD Audio) number to play.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **CHAP. →** or **TRACK →**.
- 3 Display the pop-up window.



- 4 Enter the desired chapter/track number.

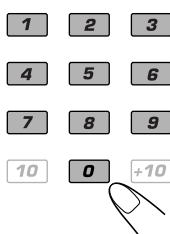

### Examples:

To select chapter/track 5, press 5.

To select chapter/track 15, press 1, then 5.

To select chapter/track 30, press 3, then 0.

 
- To correct a misentry, press the 10 keys until the desired number shown in the pop-up window.

- 5 Finish the setting.



The System starts playing the searched chapter or track.

To erase the on-screen bar



## Operations on the CONTROL Screen



INFO


The CONTROL screen automatically appears on the TV screen when you load an MP3, WMA, JPEG, or MPEG-4 disc.

You can search for and play the desired tracks through the CONTROL screen.

- If more than two types of files (MP3/WMA files, JPEG files, and MPEG-4 files) are recorded on a disc, select the file type to play (see page 41).


### CONTROL screen

Ex.: When the MP3 disc is loaded.

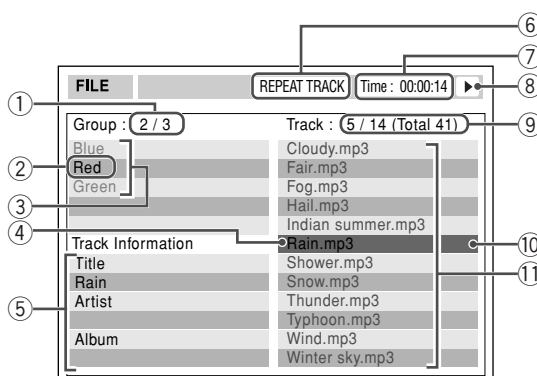


- 1 Current group number/total group number
- 2 Current group
- 3 Group list
- 4 Current track
- 5 Track information (Tag information: only for MP3/WMA)
- 6 Repeat Play setting
- 7 Elapsed playing time of the current track (only for MP3/WMA)
- 8 Operation mode icon
- 9 Current track number/total number of tracks in the current group (total number of tracks on the loaded disc)
- 10 Highlight bar
- 11 Track list

## To move the highlight bar between group list and track list

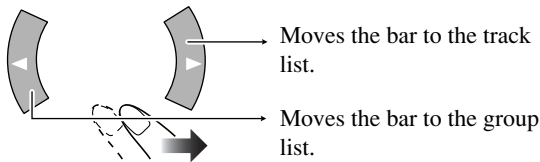

## To select a group/track in the list

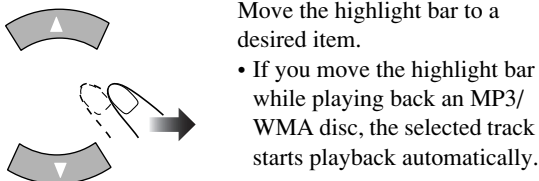


## To start playback

For MP3/WMA/MPEG-4:	
	Playback starts with the selected track. • Pressing DVD/CD ► also starts playback.
For JPEG:	
	The selected track (still picture) is displayed until you change it.
	Slide-show playback starts. Each track (still picture) is shown on the screen for a few seconds, then changes one after another.


- Once you start playing back a JPEG/MPEG-4 track, the CONTROL screen goes off.
- While playing back an MPEG-4 track, you can use ON SCREEN button to show the following information on the display:
  - Repeat Play setting
  - Elapsed playing time of the current track
  - Operation mode icon
- To cancel slide-show, and display the current still picture, press **II**.
 
## To stop playback



## To repeat slide-show for JPEG

 While playing or before starting playback...




<b>GROUP</b>	Repeats the current group.
<b>ALL</b>	Repeats all disc.

- For Repeat Play of MP3/WMA/MPEG-4, see page 29.

## To zoom in the still picture


For JPEG: While playback is paused...

For MPEG-4: While playing back...

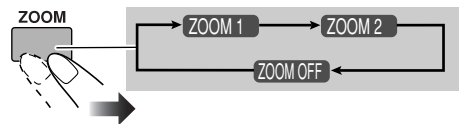

As the number increases, magnification also increases.


## To move the zoomed-in position

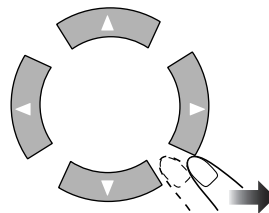

To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

# Advanced Tape Operations

## Main unit

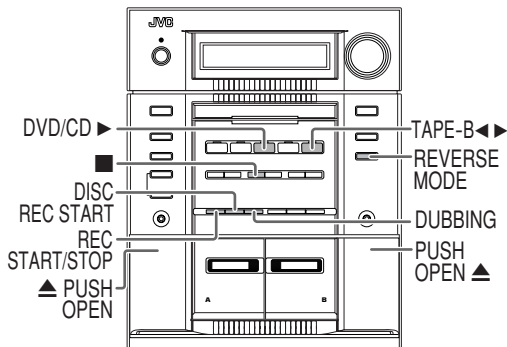

### IMPORTANT

It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

## Recording on a Tape




INFO


You can use type I tapes for recording.

- To play a tape, see page 18.


### 1 Insert a recordable cassette in deck B.

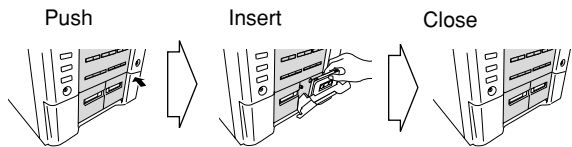


### 2 Check the tape running direction and Reverse Mode settings on the display.

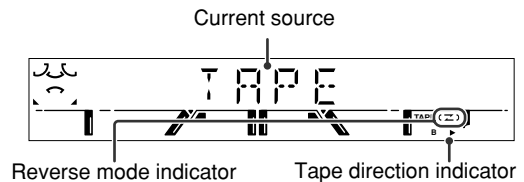

### To change the direction

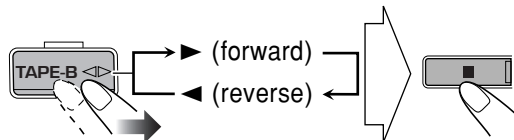

### Change the Reverse mode if necessary

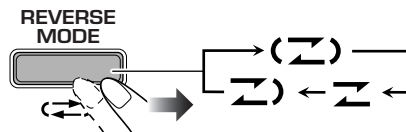

<p>(Z)</p> <p>(Z)</p>	<p>To record on both sides.</p> <ul style="list-style-type: none"> <li>• When using Reverse Mode, start recording in the forward (▶) direction.</li> </ul>
<p>Z</p>	<p>To record on only one side.</p>


### 3 Start playing the source—"FM," "AM," "DVD/CD," "TAPE-A" or "AUX."

- When recording a disc, you can also use "Synchronized Disc Recording" (see the right column).

### 4 Start recording.




### To stop recording

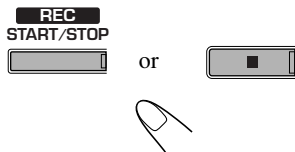

## Dubbing Tapes



### 1 Change the source to TAPE.

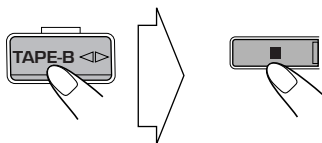


### 2 Insert the source cassette in deck A, and a recordable cassette in deck B.

### 3 Check the tape running direction and Reverse Mode settings on the display.


- See step 2 of "Recording on a Tape" on page 35.
 
### 4 Start dubbing.



- When either tape playback or recording ends, both cassette decks stop at the same time.

### To stop dubbing

 

## Synchronized Disc Recording



INFO

You can start and stop both disc play and tape recording at the same time.

### 1 Load a disc and insert a recordable cassette.

- If the current playing source is not the disc player, press DVD/CD ►, then ■.

### 2 Check the tape running direction and Reverse Mode settings on the display.

- See step 2 of "Recording on a Tape" on page 35.

### For recording desired tracks on discs:

You can program tracks to record with your preferred order.

- Select Program Play (and make a program (see page 27)) without starting playback.

### 3 Start recording.



The System automatically creates 4-second blanks between the tunes recorded on the tapes.

- When either disc play or recording ends, both disc player and the cassette deck stop at the same time.

## To record without creating a 4-second blank

- 1 Press DVD/CD ►, then press II.
- 2 Press ◀◀ to go back to the beginning of the track.
- 3 Start recording.

 
### To protect your recording

Cassettes have two small tabs on the back to protect from unexpected erasure or re-recording.

To protect your recording, remove these tabs.




To re-record on a protected tape, cover the holes with adhesive tape.



# Timer Operations

Main unit

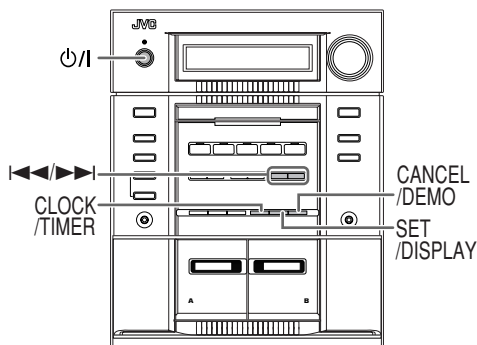


## Setting the Timer




Using Daily Timer, you can wake up with your favorite song. On the other hand, with Recording Timer, you can make a tape of a radio broadcast automatically.

- To correct a misentry during the process, press CANCEL/DEMO. You can return to the previous step.

### 1 Select one of the timer setting modes (TIMER(ON)) you want to set—Daily Timer or Recording Timer.

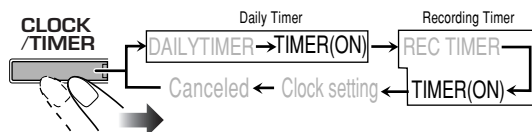

### 2 Make the timer setting as you want.

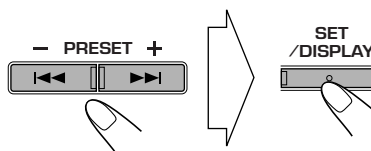

Repeat the procedure until you finish setting in the following order:

- ① Set the hour then minute for on-time.
- ② Set the hour then minute for off-time.
- ③ For Daily Timers: Select the playback source—“TUNER FM,” “TUNER AM,” “DISC,” “TAPE-A,” “TAPE-B” or “AUX IN.”

For Recording Timer: Select the playback source—“TUNER FM” or “TUNER AM.”



EX.: When “TUNER FM” is selected.

- ④ Select a preset station for “TUNER FM” and “TUNER AM,” or select a group and track number for “DISC.”
- ⑤ For Daily Timers: Select the volume level.
  - You can select the volume level (“VOLUME 5,” “VOLUME 10,” “VOLUME 15” and “VOLUME --”). If you select “VOLUME --,” the volume is set to the last level when the system has been turned off.

- 3 Turn off the System (on standby) if you have set the timer with the System turned on.**



### How Daily Timer actually works

Once the Daily Timer has been set, the timer (⏰) indicator and DAILY indicator are lit on the display. Daily Timer is activated at the same time everyday until the timer is turned off manually (see the next column).

#### When the on-time comes

The System turns on, tunes in to the specified station or starts playing the specified source, and sets the volume level to the preset level.

#### When the off-time comes

The System stops playback, and turns off (standby).  
 • The timer setting remains in memory until you change it.

### How Recording Timer actually works

When Recording Timer has been set, Timer (⏰) indicator and the REC indicator are lit on the display. Recording Timer works only once.

#### When the on-time comes

The System turns on, tunes in to the specified station, sets the volume level to "VOLUME MIN," and starts recording.

#### When the off-time comes

The System stops recording, and turns off (standby).  
 • The timer setting remains in memory until you change it.


Even if the System is power on condition and selected other source, Recording Timer will be activated.

## To turn off the Timer after its setting is done


You can turn off the timer after it has been set.

- Since Daily Timer is activated at the same time everyday, you may need to cancel it on some particular days.

- 1 Select the timer you want to cancel (DAILYTIMER or REC TIMER) you want to cancel.**

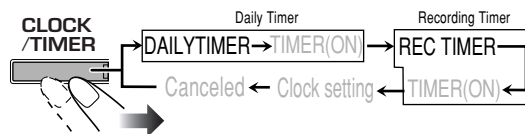


- 2 Turn off the selected timer.**

 

- The timer (⏰) indicator goes off.


**To turn on the timer again, repeat the step 1 and press SET/DISPLAY.**

 

## Timer Priority INFO

Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps.


- Recording Timer has priority over the Daily Timer and Sleep Timer (see page 23).

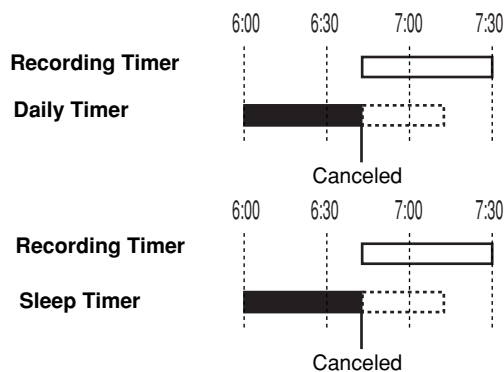



# Set up Menu Operations


## Remote control

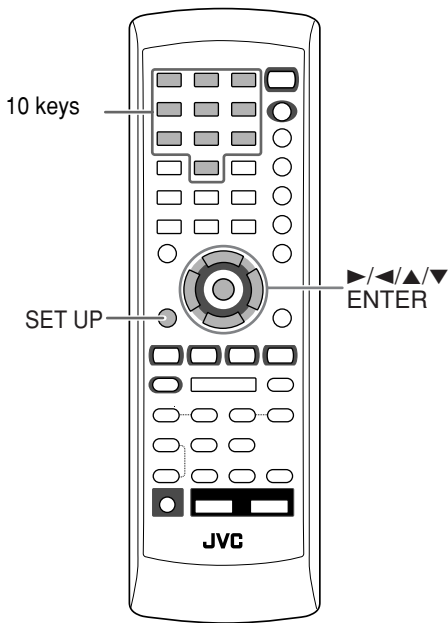

## Set up Menu Icons

The icon for the selected Set up Menu will be highlighted.

Ex.: LANGUAGE Set up Menu is selected.

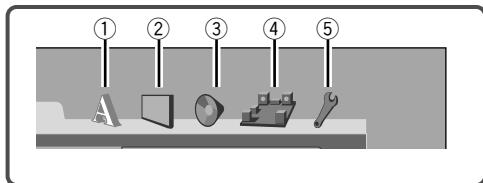

- ① LANGUAGE Set up Menu
- ② PICTURE Set up Menu
- ③ AUDIO Set up Menu
- ④ SPK. SETTING Set up Menu
- ⑤ OTHERS Set up Menu

## Operating Procedure




You can use the Set up Menus only when a disc is selected as the source and its playback is not yet started.

Ex.: Selecting "STILL PICTURE" for "FILE TYPE":



### 1 Show the set up menu.




### 2 Select one of the set up menus.

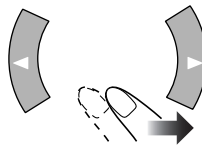


### 3 Select the item you want to adjust.

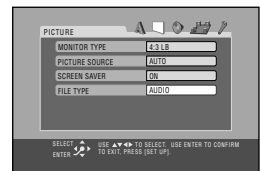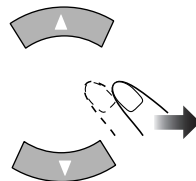

### 4 Display the pop-up window.

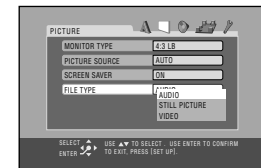

### 5 Select the desired option in the pop-up window.

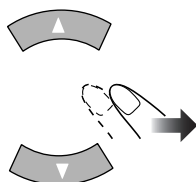

### 6 Finish the setting.



- 7 Repeat steps 3 to 4 to set other items on the same Setup Menu.  
Repeat steps 2 to 4 to set other items on another Setup Menu.

### To finish the Set up Menu

SET UP



## ■ LANGUAGE Set up Menu

INFO

You can select the initial languages for disc playback. You can also select the language shown on the TV screen while operating this System.



### MENU LANGUAGE

Some discs have multiple menu languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 51).

### AUDIO LANGUAGE

Some discs have multiple audio languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 51).

### SUBTITLE

Some discs have multiple subtitle languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 51) or “OFF (no subtitle).”

### ON SCREEN LANGUAGE

Select one of the languages shown on the TV from—ENGLISH, CHINESE, and SPANISH.

## ■ PICTURE Set up Menu

INFO

You can select the desired options concerning a picture or monitor screen.



### MONITOR TYPE

You can select the monitor type of your TV when you play DVD Video recorded with aspect ratio of 16:9.

#### For the multi-color system TV

When you use a multi-color system TV, you can change the color system of the System automatically by selecting “MULTI” options as the monitor type. In this case, the color system of the System is changed to match the color system of the loaded disc regardless the VIDEO OUT SELECT setting for better picture quality.

Select one of the following:

#### 16:9 / 16:9 MULTI (Wide television conversion):

 
Select when the aspect ratio of your TV is 16:9 (wide TV) and when the TV has the screen size adjustment function.

#### 4:3 LB (Letter Box) / 4:3 MULTI LB:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

#### 4:3 PS (Pan Scan) / 4:3 MULTI PS:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9

 

Ex.: 4:3 LB

 

Ex.: 4:3 PS

## PICTURE SOURCE

You can obtain optimal picture quality by selecting an appropriate option—picture source type (either video source or film source).

### Select one of the following:

**AUTO:** Normally select this.  
When playing back a disc containing both video and film sources, the System automatically changes the processing to match it to the picture type (film or video source) of the current chapter.

**FILM:** To play a film source disc.

**VIDEO:** To play a video source disc.

## SCREEN SAVER

You can activate or deactivate screen saver while operating the built-in disc player.

### Select one of the following:

**ON:** The on-screen display on the TV becomes dark when no operation is done for about 5 minutes.

**OFF:** To cancel the screen saver.

## FILE TYPE

If both audio tracks (MP3 or WMA files), still picture (JPEG files), and video (MPEG-4 files) are recorded on a disc, you can select which to play.

### Select one of the following:

**AUDIO:** To play MP3/WMA files.

**STILL PICTURE:** To play JPEG files.

**VIDEO:** To play MPEG-4 files.

## ■ AUDIO Set up Menu

INFO

You can adjust the sound settings of the System.



## DIGITAL AUDIO OUTPUT

When using the digital output terminal on the rear, set this correctly according to the connected component.

### Select one of the following:

**PCM ONLY:** To connect to a linear PCM digital equipment such as an MD recorder.

**DOLBY DIGITAL /PCM:** To connect to a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

**STREAM/PCM:** To connect to a DTS decoder or an amplifier with a built-in DTS decoder.

- See also “OPTICAL DIGITAL OUTPUT Signals” on page 53.

## D. RANGE COMPRESSION

You can compress the dynamic range (the difference between the loudest sound and the softest sound) to enjoy a powerful sound even at a low volume level when listening to Dolby Digital software. This is useful at night.

- The effectiveness varies depends on a software.



### Select one of the following:

**AUTO:** To enjoy powerful sounds with full dynamic range.

**ON:** Best for watching a movie at a low volume level.

## ■ SPK. SETTING Set up Menu


You can adjust the sound settings of the System.

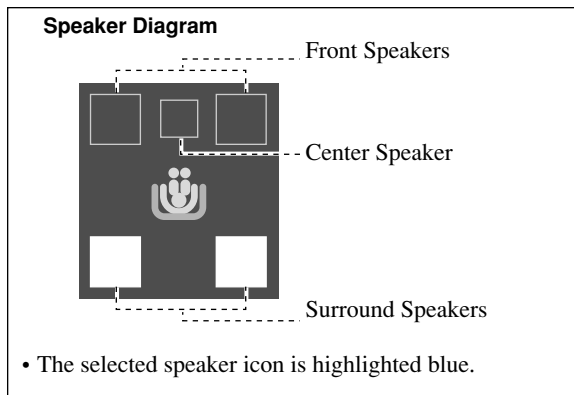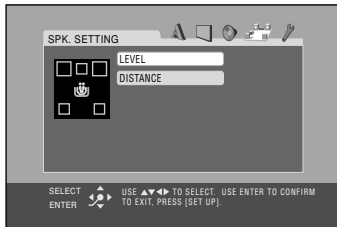

- 5 Select “RETURN” then press ENTER to return to the SPK. SETTING Set up menu.

### DISTANCE

Select this to enter the DISTANCE submenu.  
See also “Setting the Speakers” on page 8.

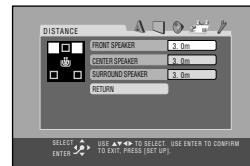


<b>FRONT SPEAKER, CENTER SPEAKER, SURROUND SPEAKER:</b>	For each speaker, set the distance from the listening point within the range of 0.3 m to 9.0 m in 0.3 m intervals.
<b>RETURN:</b>	Select this then press ENTER to return to the SPK. SETTING menu.

### LEVEL

Select this to enter the LEVEL submenu.

If the output sound of center speaker or surround speakers from the listening position are not equal to that of the front speakers, use test tone to adjust the output level to get the best possible surround effect.


- When adjusting the output level by using the test tone, take the disc out from the disc tray.

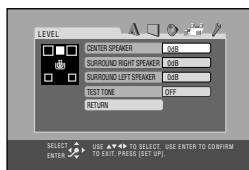

- 1 Select “ON” of the item TEST TONE.
- 2 Select the speaker—CENTER SPEAKER, SURROUND RIGHT SPEAKER, SURROUND LEFT SPEAKER.
- 3 Adjust the speaker output level for the selected speaker.  
You can adjust the output level within the range of -6 dB to +6 dB in 1 dB interval.
- 4 Repeat steps 2 and 3 to adjust the other speakers.
  - To stop test tone, select “OFF” of the item TEST TONE.

## ■ OTHERS Set up Menu

You can change some other convenient functions.

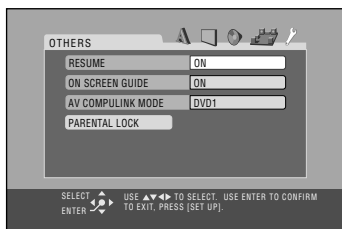

### RESUME

You can activate or deactivate Resume for disc playback (see page 16).

#### Select one of the following:

**ON:** To activate Resume.

**OFF:** To cancel Resume.

### ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons (see page 16).

- When recording the picture on a VCR, select "OFF" to avoid recording the guide icons on your video tape.

#### Select one of the following:

**ON:** To activate the on-screen guide icons.

**OFF:** To cancel the on-screen guide icons.

### INFO

## AV COMPULINK MODE

When connecting the System to a JVC's TV with the AV COMPU LINK remote control system, select the proper setting.

#### Select one of the following:

**DVD1:** To connect to the COMPONENT Video (or VIDEO-3 Input) jacks on the TV using a component video cord.

**DVD2:** To connect to the VIDEO-1 Input jack on the TV using an S-video cord.

**DVD3:** To connect to the VIDEO-2 Input jack on the TV using a composite video cord.

- For details, see "To connect the AV COMPU LINK cords" on page 7.

## PARENTAL LOCK

Select this to enter the PARENTAL LOCK submenu. See the section that follows.

## Restricting the Review

### —Parental Lock




You can restrict playback of DVD Video containing violent scenes and those unsuitable for your family members. Once you have set the rating level, such violent scenes (for which a higher level than you set is assigned) may be skipped or changed to another scene (depending on how the disc is programmed).

### To set Parental Lock


Set the rating level—Level 1 (most restrictive) to Level 8 (least restrictive).

#### 1 Display the Setup Menu.



SET UP

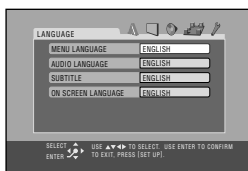


#### 2 Select the OTHERS Setup Menus.

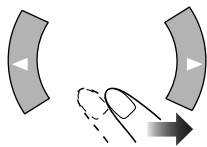



#### 3 Select “PARENTAL LOCK.”

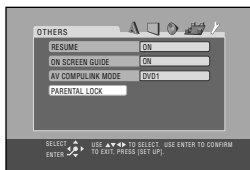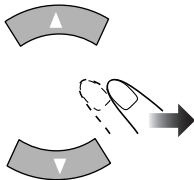

#### 4 Enter the PARENTAL LOCK submenu.

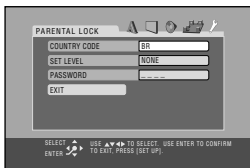


#### 5 Select “COUNTRY CODE,” then display the pop-up window.

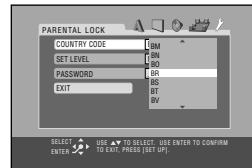
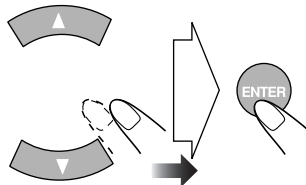


#### 6 Select the country code of your area.


- See also “Country/Area codes list for Parental Lock” on page 52 to find your country code.

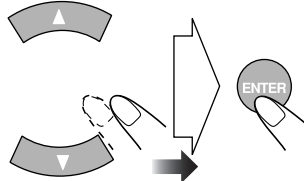

#### 7 Select “SET LEVEL,” then display the pop-up window.

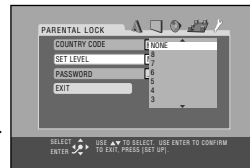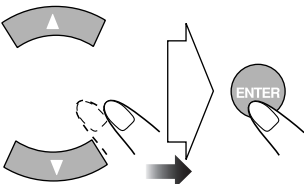


#### 8 Set the rating level (NONE, 8 – 1).

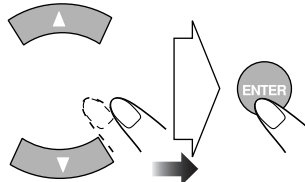

The System automatically enters password entry mode.

#### 9 Enter any 4-digit number for your password.

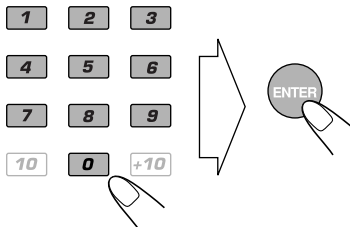

#### 10 Finish the setting.

SET UP



## To change the setting

### 1 Display the PARENTAL LOCK sub menu.


- Follow steps 1 to 4 of “To set Parental Lock”.



“PASSWORD” is automatically selected.

- You cannot select any item other than “EXIT” until you enter the correct password.

### 2 Enter your password.

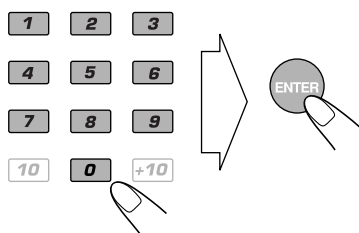


- If you enter a wrong password, “-----” appears again.
- If you enter a wrong password three times, “EXIT” is automatically selected. In this case, press ENTER to exit from the PARENTAL LOCK submenu.
- If you forget your password, enter “8888.”

### 3 Change the settings.

- Follow steps 5 to 8 of “To set Parental Lock”.


### 4 Enter your password again.

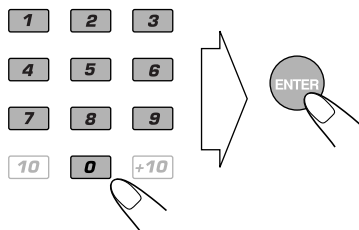


- If you want to change a password, enter a new four digit number in this step.

## To release Parental Lock temporarily

When you set a strict rating level, some discs may not be played back at all. When you try to play such a disc, the following screen appears on the TV screen.

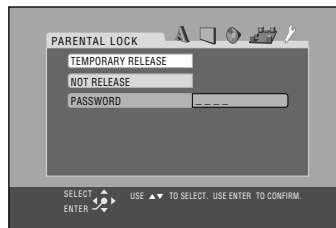


### 1 Select “TEMPORARY RELEASE,” then ENTER.

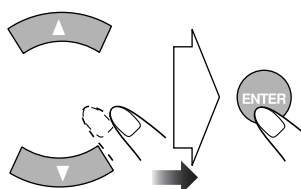

“PASSWORD” is automatically selected.

- If you do not play back such a disc, select “NOT RELEASE,” then ENTER. Then eject the disc.


### 2 Enter your password.

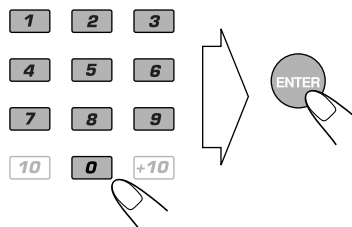

- If you enter a wrong password three times, “NOT RELEASE” is automatically selected. In this case, press ENTER. Then eject the disc.

# Operating the TV

## Remote control

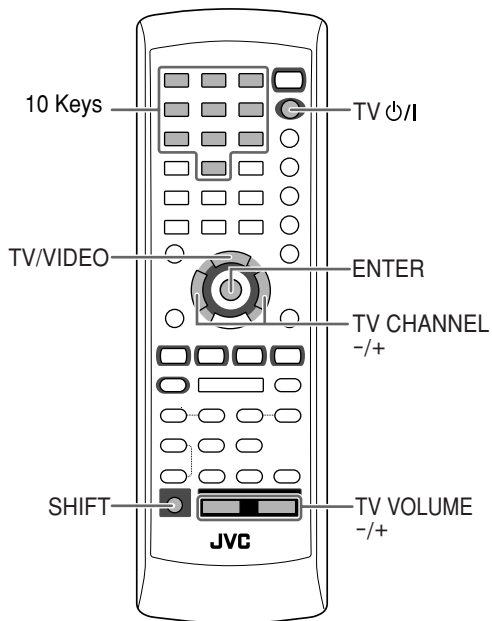


Manufacture's code	
Manufacture	Code number
JVC	01
Hitachi	10
Magnavox	02
Mitsubishi	03
Panasonic	04,11
RCA	05
Samsung	12
Sanyo	13
Sharp	06
Sony	07
Toshiba	08
Zenith	09

## Operating TV

 You can operate the JVC's or other manufacturers' TV using this remote control.


**1** Keep pressed until the following steps are complete.



**2** Enter the code setting mode.




**3** Enter the 2-digit manufacture's code number.

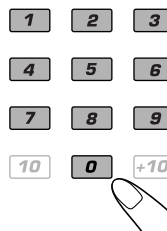


**4** Release TV ϕ/I.

## To operate the TV

 **To turn on or off the TV:**




**To select the input mode (either TV or VIDEO):**

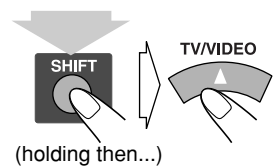

**To adjust TV volume:**



**To select the TV channel:**

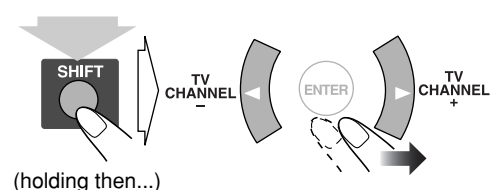



## Learning More about This System ● ● ●

### Before Operating the System (see pages 10 to 13)

#### Playable Disc Types:

- If you play back an NTSC disc with this setting set to “PAL,” you can watch the playback pictures (the disc will be reproduced using “PAL 60” format), but the TV screen may roll over upward and downward rapidly.
- If you play back a PAL disc with this setting set to “NTSC,” you can watch the playback pictures, but the following symptoms may occur:
  - The items on the disc menu will be blurred, and be shown slightly shifted when highlighted.
  - The aspect ratio of the picture may differ from the original aspect ratio.
  - The picture movement is not smooth.

#### Notes on MP3/WMA/JPEG/MPEG-4 discs

- MP3/WMA/JPEG/MPEG-4 discs are required a longer readout time than regular CDs. (It depends on the complexity of the group/file configuration.)
- Some MP3/WMA/JPEG/MPEG-4 files cannot be played back and will be skipped. This results from their recording processes and conditions.
- This system can play back MP3/WMA/JPEG/MPEG-4 files with the extension code <.mp3>, <.wma>, <.jpg>, or <.asf> (regardless of the letter case—upper/lower).

#### About audio format

- **Linear PCM:** Uncompressed digital audio, the same format used for CDs and most studio masters.
- **Dolby Digital:** Compressed digital audio, developed by Dolby Laboratories, which enables multi-channel encode to create the realistic surround sound.
- **DTS (Digital Theater Systems):** Compressed digital audio, developed by Digital Theater Systems, Inc., which enables multi-channel like Dolby Digital. As the compression ratio is lower than for Dolby Digital, it provides wider dynamic range and better separation.
- When playing back a DVD Audio disc recorded by MLP (Meridian Lossless Packing; a lossless audio compression system that can completely recreate the PCM signal), the signals recognized as the linear PCM signal, however, no indicator lights up in the display window.

### Daily Operations—Playback (see pages 14 to 18)

#### Listening to the Radio:

- If you store a new station into an occupied preset number, the previously stored station in that number will be erased.
- When you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

#### Playing Back a Disc:

- On some DVD, SVCD, or VCD discs, the actual operations may be different from what is explained in this manual, due to the programming and disc structure; such differences are not a malfunction of this System.
- For MP3/WMA playback...
  - When making MP3/WMA discs, use ISO 9660 Level 1 or Level 2 for the disc format.
  - It is recommended that you make each MP3/WMA file at a sampling rate of 44.1 kHz and at bit rate of 128 kbps. This System cannot play back files made at bit rate of less than 64 kbps.

#### Playing Back a Tape:

- In Relay Play, the reverse side of the tape in deck A does not playback. If the playing time of the tape in deck A is less than 12 seconds, the System rewind the tape and playback again.

### Daily Operations—Sound&Other Adjustments

#### (see pages 19 to 23)

#### Adjusting the Volume:

- Be sure to turn down the volume before connecting or putting the headphones.

#### Creating Your Own Sound Modes—User Mode:

- When you unplug the AC power cord or if a power failure occurs, the USER mode settings will be erased in a few days. If this happens, set the USER Modes again.

#### Using Surround Mode:

##### • Dolby Pro Logic II modes:

Dolby Pro Logic II has developed multichannel playback format to decode the 2 channel sources—Linear PCM digital source, MP3 source, WMA source, Dolby Digital 2ch, DTS 2ch, and Dolby Surround encoded source—into 5.1 channel.

Dolby Pro Logic II enables to reproduce spacious sound from original sound without adding any new sounds and tonal colorations.

- While you use the headphones, the Surround Mode will canceled temporarily (“STEREO” will appear on the display).
- Some DVD Audios prohibit downmix.
  - When you change the Surround Mode while playing back such a disc, “MULTI CH” appears on the display and you cannot change the Surround Mode.
  - When you select the Surround Mode to “STEREO” and start playback such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
  - When you use the headphones while playing back such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
- During MPEG-4 playback, Dolby Pro Logic II modes will be canceled temporarily.

**Changing the Scanning Mode:**

- Do not change the progressive scanning mode in the following cases:
  - When your TV does not support the progressive video input.
  - When you have not connected your TV to the unit using a component video cord.
- When you play back an NTSC disc in progressive scanning mode, the System outputs the NTSC signal though color system settings.

**Changing the Picture Tone:**

- If no operation is done for about 10 seconds, the VFP setting screen disappears.

**Setting the Clock:**

- “0:00” will flash on the display until you set the clock.
- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

**Unique DVD/VCD Operations (see pages 24 to 26)****Selecting the Sound Track:**

- On some DVD Videos, you cannot change audio languages while playing back.

**Playing Back a Bonus Group on a DVD Audio:**

- You cannot select a track in the bonus group for Program Play.

**Special Picture Playback:**

- During slow-motion playback, no sound will be reproduced.
- While zoomed in, the picture may look coarse.

**Advanced Disc Operations (see pages 27 to 29)****Programming the Playing Order—Program Play:**

- While programming steps...
  - Your entry will be ignored if you have tried to program an item number that does not exist on the disc (for example, selecting track 14 on a disc that only has 12 tracks). Such entries are ignored, and are erased from the program.
- You cannot use Program Play and Random Play for JPEG/MPEG-4 discs.

**Prohibiting Disc Ejection—Child Lock:**

- If you try to eject discs while Child Lock is in use, “LOCKED” appears to inform you that the disc tray is locked.

**On-Screen Disc Operations (see pages 30 to 34)****Operations Using the On-screen Bar:**

- **A-B Repeat:**
  - A-B Repeat cannot be used on some DVDs.
  - For DVD Video, A-B Repeat is possible only within the same title.
  - For DVD Audio/SVCD/VCD/CD, A-B Repeat is possible only within the same track.

**Operations on the CONTROL Screen:**

- For JPEG files playback...
  - It is recommended that you record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a long time to be shown.)
  - This System can play only baseline JPEG files\*. Progressive JPEG files\* or lossless JPEG files\* cannot be played.
 

* Baseline JPEG format:	Used for digital cameras, web, etc.
Progressive JPEG format:	Used for web.
Lossless JPEG format:	An old type and rarely used now.

- This unit may not play back JPEG files properly which are recorded by the devices other than digital still camera.
- During JPEG Slide-show playback, zoom cannot be operated.
- For MPEG-4 files playback...
  - The System can play back the MPEG-4 files followed the conditions below:
 

File format:	ASF
Visual profile:	MPEG-4 SP (Simple Profile)
Audio CODEC:	G.726
Max. picture size:	352 x 288
Max. bit rate:	384 kbps
  - The size of playback screen will be the same size as it is recorded.
  - Some recorded files may not be able to be played back.
  - Some MPEG-4 files created on a personal computer may not be played back.

**Advanced Tape Operations (see pages 35 and 36)****Recording on a Tape:**

- The recording level is automatically set correctly. Thus, you can adjust the sound you are actually listening to without affecting the recording level.
- There is leader tape which cannot be recorded onto at the start and the end of cassette tapes. Thus, when recording discs or radio broadcasts, wind the leader tape first to ensure that the recording will be made without any music part lost.
- If no cassette is inserted, “NO TAPE” appears on the display. If a protected tape has been inserted, “NO REC” appears on the display.
- When using Reverse Mode for recording, start recording in the forward (▶) direction first; otherwise, recording will stop when only one side (reverse) of the tape is recorded.
- You cannot change the source during recording.

**Synchronized Disc Recording:**

- While recording, you cannot use ►►/◄◄, ►►/◄◄, DVD LEVEL, Surround Mode and source buttons.
- You can adjust volume control and sound setting (Subwoofer, RHYTHM AX, Sound Mode) but the settings do not affect the recording sound.

- Everything on the disc goes onto the tape in the order on the disc, or according to the order you have made for Program Play.
- You cannot use Synchronized Recording with Repeat Play (Repeat Play will be canceled).
- When recording starts, “DISC REC” appears on the display and the REC (recording) lamp flashes.
- When the tape reaches its end in the forward direction (▶) during recording, the last song will be re-recorded at the beginning of the reverse side (◀).
- When the tape reaches its end in the reverse side (◀) during recording, recording stops even though the entire disc is not entirely recorded.
- During Recording, Multi-channel source will be downmixed into 2 channels, and AUTO or Dolby Pro Logic II modes are temporarily canceled.
- You cannot use Synchronized Recording with JPEG or MPEG-4 disc.

## Timer Operations (see pages 37 and 38)

### Setting the Timer:

- If you do not specify the preset station or track number correctly while setting a timer, the currently selected station or the first track will be played when timer is activated.
- When you unplug the AC power cord or if a power failure occurs, the timer will be canceled. You need to set the clock first, then the timer again.
- Without stopping the recording, you cannot change the source after Recording Timer starts recording.
- If you set DVD Video as the source, Daily Timer will not work correctly.

### Timer Priority:

- If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.
- If you set the Sleep Timer after Recording Timer starts recording, Recording Timer is canceled, but recording continues until Sleep Timer shuts off the power.

## Set up Menu Operations (see pages 39 to 45)

### LANGUAGE Set up Menu:

- When the language you have selected for MENU LANGUAGE, AUDIO LANGUAGE, or SUBTITLE is not recorded on a disc, the original language is used as the initial language.

### PICTURE Set up Menu—MONITOR TYPE:

- Even if “4:3 PS” is selected, the screen size may become 4:3 letter box with some DVD Videos. This depends on how the discs are recorded.
- When you select “16:9” for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

### OTHERS Set up Menu—ON SCREEN GUIDE:

- The set up menu and on-screen bar will be displayed (and recorded) even though this function is set to “OFF.”

Subtitles and the information for zooming in always appear on the display regardless of this setting.

## Maintenance

To get the best performance of the System, keep your discs, tapes, and mechanism clean.

### Handling discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

### To clean the disc:

- Wipe the disc with a soft cloth in a straight line from center to edge.

### Handling cassette tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotate it.
  - If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid the following places to store the tape—in dusty places, in direct sunlight or heat, in moist areas, on a TV or speaker, or near a magnet.

### To keep the best recording and playback sound quality:

- Use a cotton swab moistened with alcohol to clean the heads, capstans, and pinch rollers.
- Use a head demagnetizer (available at electronics and audio shops) to demagnetize the heads (when the System turned off).

### Cleaning the System

- Stains should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
  - DO NOT wipe it with a hard cloth.
  - DO NOT wipe it strong.
  - DO NOT wipe it with thinner or benzine.
  - DO NOT apply any volatile substance such as insecticides to it.
  - DO NOT allow any rubber or plastic to remain in contact for a long time.

## Troubleshooting

If you are having a problem with your System, check this list for a possible solution before calling for service.

### General:

#### Adjustments or settings are suddenly canceled before you finish.

⇒ There is a time limit. Repeat procedure again.

#### Operations are disabled.

⇒ The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

#### Unable to operate the System from the remote control.

⇒ The path between the remote control and the remote sensor on the System is blocked.

⇒ The batteries are exhausted.

#### No sound is heard.

⇒ Speaker connections are incorrect or loose.

⇒ Headphones are connected.

#### No picture appears on the screen.

⇒ The video cord connections are incorrect or loose.

#### No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.

⇒ The System is connected to a TV which does not support progressive video input.

⇒ Incorrect color system is selected (see “To set the video output selector” on page 7).

#### The left and right edges of the picture are missing on the screen.

⇒ Select “4:3 LB /4:3 MULTI LB” for “MONITOR TYPE” (see page 40).

### Radio Operations:

#### Hard to listen to broadcasts because of noise.

⇒ Antennas connections are incorrect or loose.

⇒ The AM loop antenna is too close to the System.

⇒ The FM antenna is not properly extended and positioned.

### Disc Operations:

#### The disc does not play.

⇒ The disc is placed upside down. Place the disc with the label side up.

⇒ Parental Lock is in use (see page 45).

#### ID3 Tag on an MP3 disc cannot be shown.

⇒ There are two types of ID3 Tag—Version 1 and Version 2. This System can only show ID3 Tag Version 1.

#### MP3 groups and tracks are not played back as you expect.

⇒ The playing order is determined when the disc was recorded. It depends on the writing application.

#### MP3/WMA, JPEG, or MPEG-4 files are not played back.

⇒ The inserted disc may include more than two types of tracks (MP3/WMA files, JPEG files, and MPEG-4 files).

In this case, you can only play back the files selected by the “FILE TYPE” setting (see page 41).

⇒ You have changed the “FILE TYPE” setting after you inserted a disc. In this case, reload the disc.

#### The disc sound is discontinuous.

⇒ The disc is scratched or dirty.

#### No subtitle appears on the display though you have selected the initial subtitle language.

⇒ Some DVDs are programmed to always display no subtitle initially. If this happens, press SUB TITLE after starting play (see page 25).

#### Audio language is different from the one you have selected as the initial audio language.

⇒ Some DVDs are programmed to always use the original language initially. If this happens, press AUDIO after starting play (see page 24).

#### The disc tray does not open or close.

⇒ The AC power cord is not plugged in.

⇒ Child Lock is in use (see page 29).

### Tape Operations:

#### The cassette holder cannot be opened.

⇒ Power supply from the AC power cord has been cut off while the tape was running. Turn on the System.

### Recordings:

#### Impossible to record.

⇒ Small tabs on the back of the cassette are removed. Cover the holes with adhesive tape.

### Timer operations:

#### Daily Timer does not work.

⇒ The System has been turned on when the on-time comes. Timer starts working only when the System is turned off.

## Language Code List

AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Ameharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Byelorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scots Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlingue
IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish

JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KO	Korean (KOR)
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laothian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MS	Malay (MAY)
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NL	Dutch
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance
RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sangho
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak

SL	Slovenian
SM	Samoaian
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tonga
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapuk
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu

## Country/Area codes list for Parental Lock

<b>AD</b>	Andorra
<b>AE</b>	United Arab Emirates
<b>AF</b>	Afghanistan
<b>AG</b>	Antigua and Barbuda
<b>AI</b>	Anguilla
<b>AL</b>	Albania
<b>AM</b>	Armenia
<b>AN</b>	Netherlands Antilles
<b>AO</b>	Angola
<b>AQ</b>	Antarctica
<b>AR</b>	Argentina
<b>AS</b>	American Samoa
<b>AT</b>	Austria
<b>AU</b>	Australia
<b>AW</b>	Aruba
<b>AZ</b>	Azerbaijan
<b>BA</b>	Bosnia and Herzegovina
<b>BB</b>	Barbados
<b>BD</b>	Bangladesh
<b>BE</b>	Belgium
<b>BF</b>	Burkina Faso
<b>BG</b>	Bulgaria
<b>BH</b>	Bahrain
<b>BI</b>	Burundi
<b>BJ</b>	Benin
<b>BM</b>	Bermuda
<b>BN</b>	Brunei Darussalam
<b>BO</b>	Bolivia
<b>BR</b>	Brazil
<b>BS</b>	Bahamas
<b>BT</b>	Bhutan
<b>BV</b>	Bouvet Island
<b>BW</b>	Botswana
<b>BY</b>	Belarus
<b>BZ</b>	Belize
<b>CA</b>	Canada
<b>CC</b>	Cocos (Keeling) Islands
<b>CF</b>	Central African Republic
<b>CG</b>	Congo
<b>CH</b>	Switzerland
<b>CI</b>	Côte d'Ivoire
<b>CK</b>	Cook Islands
<b>CL</b>	Chile
<b>CM</b>	Cameroon
<b>CN</b>	China
<b>CO</b>	Colombia
<b>CR</b>	Costa Rica
<b>CU</b>	Cuba
<b>CV</b>	Cape Verde
<b>CX</b>	Christmas Island
<b>CY</b>	Cyprus
<b>CZ</b>	Czech Republic
<b>DE</b>	Germany
<b>DJ</b>	Djibouti

<b>DK</b>	Denmark
<b>DM</b>	Dominica
<b>DO</b>	Dominican Republic
<b>DZ</b>	Algeria
<b>EC</b>	Ecuador
<b>EE</b>	Estonia
<b>EG</b>	Egypt
<b>EH</b>	Western Sahara
<b>ER</b>	Eritrea
<b>ES</b>	Spain
<b>ET</b>	Ethiopia
<b>FI</b>	Finland
<b>FJ</b>	Fiji
<b>FK</b>	Falkland Islands (Malvinas)
<b>FM</b>	Micronesia (Federated States of)
<b>FO</b>	Faroe Islands
<b>FR</b>	France
<b>FX</b>	France, Metropolitan
<b>GA</b>	Gabon
<b>GB</b>	United Kingdom
<b>GD</b>	Grenada
<b>GE</b>	Georgia
<b>GF</b>	French Guiana
<b>GH</b>	Ghana
<b>GI</b>	Gibraltar
<b>GL</b>	Greenland
<b>GM</b>	Gambia
<b>GN</b>	Guinea
<b>GP</b>	Guadeloupe
<b>GQ</b>	Equatorial Guinea
<b>GR</b>	Greece
<b>GS</b>	South Georgia and the South Sandwich
<b>GT</b>	Guatemala
<b>GU</b>	Guam
<b>GW</b>	Guinea-Bissau
<b>GY</b>	Guyana
<b>HK</b>	Hong Kong
<b>HM</b>	Heard Island and McDonald Islands
<b>HN</b>	Honduras
<b>HR</b>	Croatia
<b>HT</b>	Haiti
<b>HU</b>	Hungary
<b>ID</b>	Indonesia
<b>IE</b>	Ireland
<b>IL</b>	Israel
<b>IN</b>	India
<b>IO</b>	British Indian Ocean Territory
<b>IQ</b>	Iraq
<b>IR</b>	Iran (Islamic Republic of)
<b>IS</b>	Iceland
<b>IT</b>	Italy
<b>JM</b>	Jamaica

<b>JO</b>	Jordan
<b>JP</b>	Japan
<b>KE</b>	Kenya
<b>KG</b>	Kyrgyzstan
<b>KH</b>	Cambodia
<b>KI</b>	Kiribati
<b>KM</b>	Comoros
<b>KN</b>	Saint Kitts and Nevis
<b>KP</b>	Korea, Democratic People's Republic of
<b>KR</b>	Korea, Republic of
<b>KW</b>	Kuwait
<b>KY</b>	Cayman Islands
<b>KZ</b>	Kazakhstan
<b>LA</b>	Lao People's Democratic Republic
<b>LB</b>	Lebanon
<b>LC</b>	Saint Lucia
<b>LI</b>	Liechtenstein
<b>LK</b>	Sri Lanka
<b>LR</b>	Liberia
<b>LS</b>	Lesotho
<b>LT</b>	Lithuania
<b>LU</b>	Luxembourg
<b>LV</b>	Latvia
<b>LY</b>	Libyan Arab Jamahiriya
<b>MA</b>	Morocco
<b>MC</b>	Monaco
<b>MD</b>	Moldova, Republic of
<b>MG</b>	Madagascar
<b>MH</b>	Marshall Islands
<b>ML</b>	Mali
<b>MM</b>	Myanmar
<b>MN</b>	Mongolia
<b>MO</b>	Macau
<b>MP</b>	Northern Mariana Islands
<b>MQ</b>	Martinique
<b>MR</b>	Mauritania
<b>MS</b>	Montserrat
<b>MT</b>	Malta
<b>MU</b>	Mauritius
<b>MV</b>	Maldives
<b>MW</b>	Malawi
<b>MX</b>	Mexico
<b>MY</b>	Malaysia
<b>MZ</b>	Mozambique
<b>NA</b>	Namibia
<b>NC</b>	New Caledonia
<b>NE</b>	Niger
<b>NF</b>	Norfolk Island
<b>NG</b>	Nigeria
<b>NI</b>	Nicaragua
<b>NL</b>	Netherlands
<b>NO</b>	Norway

<b>NP</b>	Nepal
<b>NR</b>	Nauru
<b>NU</b>	Niue
<b>NZ</b>	New Zealand
<b>OM</b>	Oman
<b>PA</b>	Panama
<b>PE</b>	Peru
<b>PF</b>	French Polynesia
<b>PG</b>	Papua New Guinea
<b>PH</b>	Philippines
<b>PK</b>	Pakistan
<b>PL</b>	Poland
<b>PM</b>	Saint Pierre and Miquelon
<b>PN</b>	Pitcairn
<b>PR</b>	Puerto Rico
<b>PT</b>	Portugal
<b>PW</b>	Palau
<b>PY</b>	Paraguay
<b>QA</b>	Qatar
<b>RE</b>	Réunion
<b>RO</b>	Romania
<b>RU</b>	Russian Federation
<b>RW</b>	Rwanda
<b>SA</b>	Saudi Arabia
<b>SB</b>	Solomon Islands
<b>SC</b>	Seychelles
<b>SD</b>	Sudan

<b>SE</b>	Sweden
<b>SG</b>	Singapore
<b>SH</b>	Saint Helena
<b>SI</b>	Slovenia
<b>SJ</b>	Svalbard and Jan Mayen
<b>SK</b>	Slovakia
<b>SL</b>	Sierra Leone
<b>SM</b>	San Marino
<b>SN</b>	Senegal
<b>SO</b>	Somalia
<b>SR</b>	Suriname
<b>ST</b>	Sao Tome and Principe
<b>SV</b>	El Salvador
<b>SY</b>	Syrian Arab Republic
<b>SZ</b>	Swaziland
<b>TC</b>	Turks and Caicos Islands
<b>TD</b>	Chad
<b>TF</b>	French Southern Territories
<b>TG</b>	Togo
<b>TH</b>	Thailand
<b>TJ</b>	Tajikistan
<b>TK</b>	Tokelau
<b>TM</b>	Turkmenistan
<b>TN</b>	Tunisia
<b>TO</b>	Tonga
<b>TP</b>	East Timor
<b>TR</b>	Turkey

<b>TT</b>	Trinidad and Tobago
<b>TV</b>	Tuvalu
<b>TW</b>	Taiwan
<b>TZ</b>	Tanzania, United Republic of
<b>UA</b>	Ukraine
<b>UG</b>	Uganda
<b>UM</b>	United States Minor Outlying Islands
<b>US</b>	United States
<b>UY</b>	Uruguay
<b>UZ</b>	Uzbekistan
<b>VA</b>	Vatican City State (Holy See)
<b>VC</b>	Saint Vincent and the Grenadines
<b>VE</b>	Venezuela
<b>VG</b>	Virgin Islands (British)
<b>VI</b>	Virgin Islands (U.S.)
<b>VN</b>	Vietnam
<b>VU</b>	Vanuatu
<b>WF</b>	Wallis and Futuna Islands
<b>WS</b>	Samoa
<b>YE</b>	Yemen
<b>YT</b>	Mayotte
<b>YU</b>	Yugoslavia
<b>ZA</b>	South Africa
<b>ZM</b>	Zambia
<b>ZR</b>	Zaire
<b>ZW</b>	Zimbabwe

## OPTICAL DIGITAL OUTPUT Signals

DIGITAL AUDIO OUTPUT Playback disc	Output Signals		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
<b>DVD Video</b>			
with 48 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM*		
with 96 kHz, Linear PCM	48 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS Digital Surround	DTS bitstream	48 kHz, 16 bit Linear PCM	
<b>DVD Audio</b>			
with 48/96/192 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM		
with 44.1/88.2/176.4 kHz, 16/20/24 bit Linear PCM	44.1 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS Digital Surround	DTS bitstream	48 kHz, 16 bit Linear PCM	
<b>SVCD, VCD, CD</b>	44.1 kHz, 16 bit Linear PCM*/48 kHz, 16 bit Linear PCM*		
<b>CD with DTS Digital Surround</b>	DTS bitstream	44.1 kHz, 16 bit Linear PCM	
<b>MP3/WMA disc</b>	32/44.1/48 kHz, 16 bit Linear PCM		
<b>MPEG-4 disc</b>	32 kHz, 16 bit Linear PCM		

\* While playing some DVDs, digital signals may be emitted at 20 bits or 24 bits (at their original bit rate) through the OPTICAL DIGITAL OUTPUT terminal if the discs are not copy-protected.

## Specifications

### CA-MXJD5

#### Amplifier section

Output Power:

FRONT MAIN SPEAKERS: 40 W per channel, min. RMS, driven into 6  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

FRONT SUBWOOFERS: 80 W per channel, min. RMS, driven into 6  $\Omega$  at 63 Hz with no more than 10% total harmonic distortion.

CENTER SPEAKER: 40 W, min. RMS, driven into 8  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

SURROUND SPEAKERS: 25 W per channel, min. RMS, driven into 16  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

Digital output:

OPTICAL DIGITAL OUTPUT:

-21 dBm to -15 dBm (660 nm  $\pm$ 30 nm)

Audio input sensitivity/Impedance

(Measured at 1 kHz, with tape recording signal 300 mV)

AUX IN: 300 mV/47 k $\Omega$

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite): 1 V(p-p)/75  $\Omega$

S-VIDEO: Y (luminance) 1 V(p-p)/75  $\Omega$

C (chrominance, burst)

0.286 V(p-p)/75  $\Omega$

COMPONENT (Interlace/Progressive):

(Y) 1 V(p-p)/75  $\Omega$

(PB/PR) 0.7 V(p-p)/75  $\Omega$

Speaker Terminals: 6  $\Omega$  – 16  $\Omega$  (Front main speakers)

8  $\Omega$  – 16  $\Omega$  (Center speakers)

16  $\Omega$  – 32  $\Omega$  (Surround speakers)

6  $\Omega$  – 16  $\Omega$  (Front subwoofers)

Others:

AV COMPU LINKx2 ( $\phi$  3.5)

#### Tuner section

FM tuning range: 87.50 MHz – 108.00 MHz

AM (MW) tuning range:  
531 kHz – 1 710 kHz (at 9 kHz)  
530 kHz – 1 710 kHz (at 10 kHz)

#### Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD  
CD-R/CD-RW (recorded in Audio CD/  
Video CD/ Super Video CD/ MP3/ WMA/  
JPEG/MPEG-4 format)  
DVD-R/DVD-RW (recorded in video  
format)

Dynamic range: 90 dB

Horizontal resolution: 500 lines

Wow and flutter: Immeasurable

#### Cassette deck section

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

#### General

Power requirement: AC 110 V / AC 127 V / AC 220 V /  
AC 230 V – AC 240 V  $\sim$  ,  
(adjustable with the voltage selector),  
50 Hz / 60 Hz

Power consumption: 220 W (at operation)

20 W (on standby)

Dimensions (approx.): 265 mm x 335 mm x 352 mm

(W/H/D)

Mass (approx.): 8.7 kg

#### Supplied Accessories

See page 3.

*Design and specifications are subject to change without notice.*



## CA-MXJD8

### Amplifier section

Output Power:

FRONT MAIN SPEAKERS: 55 W per channel, min. RMS, driven into  $6\ \Omega$  at 1 kHz with no more than 10% total harmonic distortion.

FRONT SUBWOOFERS: 140 W per channel, min. RMS, driven into  $6\ \Omega$  at 63 Hz with no more than 10% total harmonic distortion.

CENTER SPEAKER: 50 W, min. RMS, driven into  $8\ \Omega$  at 1 kHz with no more than 10% total harmonic distortion.

SURROUND SPEAKERS: 30 W per channel, min. RMS, driven into  $16\ \Omega$  at 1 kHz with no more than 10% total harmonic distortion.

Digital output:

OPTICAL DIGITAL OUTPUT:  
-21 dBm to -15 dBm (660 nm  $\pm$ 30 nm)

Audio input sensitivity/Impedance  
(Measured at 1 kHz, with tape recording signal 300 mV)

AUX IN: 300 mV/47 k $\Omega$

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite): 1 V(p-p)/75  $\Omega$

S-VIDEO: Y (luminance) 1 V(p-p)/75  $\Omega$   
C (chrominance, burst) 0.286 V(p-p)/75  $\Omega$

COMPONENT (Interlace/Progressive):

(Y) 1 V(p-p)/75  $\Omega$   
(P<sub>B</sub>/P<sub>R</sub>) 0.7 V(p-p)/75  $\Omega$

Speaker Terminals: 6  $\Omega$  – 16  $\Omega$  (Front main speakers)

8  $\Omega$  – 16  $\Omega$  (Center speakers)

16  $\Omega$  – 32  $\Omega$  (Surround speakers)

6  $\Omega$  – 16  $\Omega$  (Front subwoofers)

Others:

AV COMPU LINKx2 ( $\phi$  3.5)

### Tuner section

FM tuning range: 87.50 MHz – 108.00 MHz

AM (MW) tuning range:  
531 kHz – 1 710 kHz (at 9 kHz)  
530 kHz – 1 710 kHz (at 10 kHz)

### Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD  
CD-R/CD-RW (recorded in Audio CD/  
Video CD/ Super Video CD/ MP3/ WMA/  
JPEG/MPEG-4 format)  
DVD-R/DVD-RW (recorded in video  
format)

Dynamic range: 90 dB

Horizontal resolution: 500 lines

Wow and flutter: Immeasurable

### Cassette deck section

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

### General

Power requirement: AC 110 V / AC 127 V / AC 220 V /  
AC 230 V – AC 240 V  $\sim$  ,  
(adjustable with the voltage selector),  
50 Hz / 60 Hz

Power consumption: 325 W (at operation)  
22 W (on standby)

Dimensions (approx.): 265 mm x 335 mm x 352 mm  
(W/H/D)

Mass (approx.): 9.1 kg

### Supplied Accessories


See page 3.

*Design and specifications are subject to change without notice.*

**Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia, and U.K.)**

**Instrucción sobre la línea de la red (CA) (no aplicable para Europa, EE.UU., Canadá, Australia, ni el Grã-Bretanha)**

**Instrução sobre a tensão da rede eléctrica (CA) (não aplicável para a Europa, os E.U.A., o Canadá, a Austrália e o Reino Unido)**

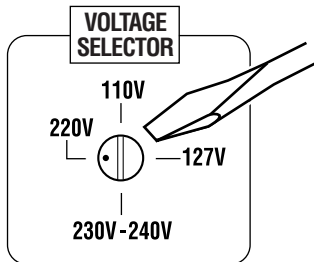

**CAUTION for mains (AC) line**


BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/electric shock.

**IMPORTANTE para la línea de la red (CA)**

ANTES DE ENCHUFAR EL EQUIPO, compruebe si la tensión de la línea de la red (CA) corresponde con la posición del selector de tensión situado en la parte exterior del equipo, y si es diferente, reajuste el selector de tensión para evitar el riesgo de incendios/descargas eléctricas.

**IMPORTANTE para a ligação à tensão da rede (CA)**

ANTES DE LIGAR O APARELHO A UMA TOMADA DA REDE, verifique se a tensão da rede CA corresponde à posição do seletor de voltagem localizado na parte externa deste equipamento. Caso não corresponda, reajuste o seletor de voltagem a fim de evitar avarias ou riscos de incêndio e choque elétrico.

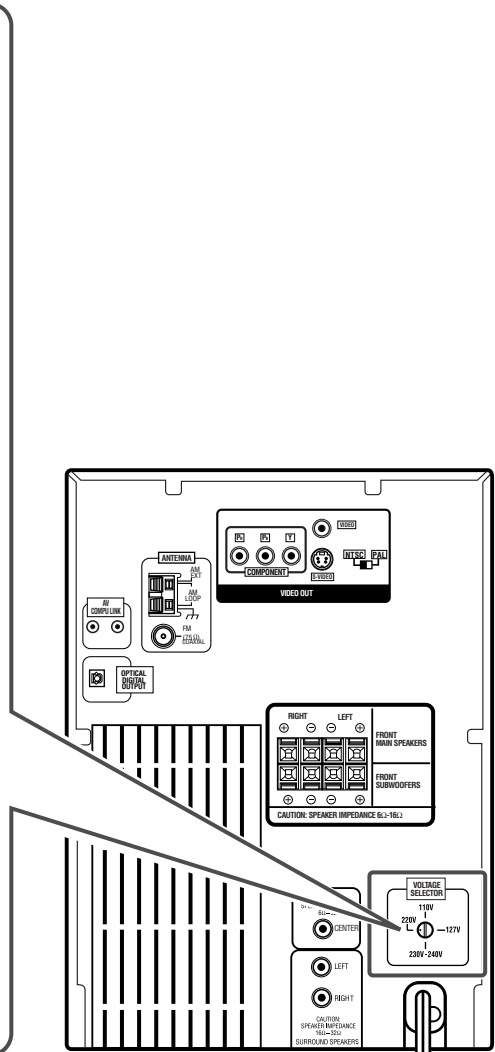

**JVC**  
VICTOR COMPANY OF JAPAN, LIMITED

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>