

MICRO COMPONENT SYSTEM


UX-N1S

-Consists of CA-UXN1S and SP-UXN1S

UX-N1W

-Consists of CA-UXN1W and SP-UXN1W

 MP3



INSTRUCTIONS GNT0065-018A[US/UB/A/UW/UI 0306MOCMDWISC

🖉 en ©2006 Victor Company of Japan, Limited

Warnings, Cautions and Others

Caution — 小 button!

Disconnect the mains plug to shut the power off completely. When installing the apparatus, ensure that the plug is easily accessible

The U/I button in any position does not disconnect the mains line. The power can be remote controlled. • When the unit is on standby, the STANDBY lamp lights red. • When the unit is turned on, the STANDBY lamp goes off.

CAUTION

To reduce the risk of electrical shocks, fire, etc.: 1. Do not remove screws, covers or cabinet. 2. Do not expose this appliance to rain or moisture.

CAUTION:

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspape
- or cloth, etc., the heat may not be able to get out.) • Do not place any naked flame sources, such as lighted
- candles, on the apparatus. When discarding batteries, environmental problems must be considered and local rules or laws governing the
- disposal of these batteries must be followed strictly. Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Getting Started

Supplied Accessories

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.

- Remote control (x 1)
- Lithium coin battery CR2025 (x 1) (The battery has been
- FM antenna (x 1)
- AC plug adapter (x 1) (except for Hong Kong and


Do not connect the AC power cord until all other connections have been made.

NOTES

Make sure the antenna conductors do not touch any other terminals,

metallic parts of the System, connecting cords, and the AC power cord. This could cause poor reception.

• If the cords are covered with vinyl, remove the vinyl to expose the tip of the cord by twisting the vinyl.

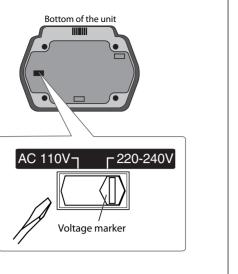

Caution for mains (AC) line BEFORE PLUGGING IN, check that your mains (AC) line

Mains (AC) Line Instruction

djusting the voltage selector

Australia, Hong Kong and U.K.)

(not applicable for Europe, U.S.A., Canada,

Jse a screwdriver to slide the voltage marker so that it is

set to the same voltage as where you are plugging in the

oltage corresponds with the position of the voltage selector switch on the bottom of the unit and, if different, set the voltage selector correctly to preven any damage or risk of fire/electric shock.


CAUTION: DO NOT plug in before setting the voltage selector and all onnection procedures are complete.

IMPORTANT FOR LASER PRODUCTS

. CLASS 1 LASER PRODUCT 2. CAUTION: Do not open the top cover. There are no user serviceable parts inside the System; leave all servicing to

- ualified service personnel. 3. CAUTION: Visible and/or invisible class 1M laser radiation
- when open. Do not view directly with optical instruments.



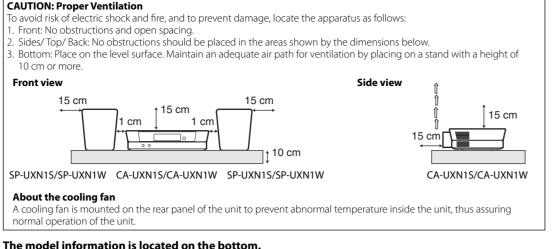

The model information is located on the bottom.

Precautions

Notes on the power cord

• When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet. A small amount of power (5.0 W) is always consumed while the power cord is connected to the wall outlet. • When unplugging the System from the wall outlet, always pull the plug, not the power cord.

• Do not handle the power cord with wet hands. • Disconnect the power cord before cleaning the System or moving the System.

• Do not alter, twist or pull the power cord, or put anything heavy on it, which may cause fire, electric shock, or other accidents. • If the cord is damaged, consult a dealer and have the power cord replaced with a new one.

Avoid moisture, water, dust, and high temperatures

- Do not place the System in moist or dusty places.
- If water gets inside the System, turn off the power and remove the plug from the wall outlet, then consult your dealer. Using the System in this state may cause a fire or electrical shock.
- Do not expose the System to direct sunlight or place it near a heating device.

Notes on installation

• Select a place which is level, dry and neither too hot nor too cold between 5°C and 35°C. • Do not install the System in a place subject to vibrations.

Do not put heavy objects on the System

To prevent malfunction or damage of the System • Do not insert any metallic objects, such as wires, hairpins, coins, etc. into the System.


Do not block the vents.

1

2

- To clean the cabinet • Use a soft cloth. Follow the relevant instructions on the use of chemically-coated cloths.
- Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring

There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult vour dealer.

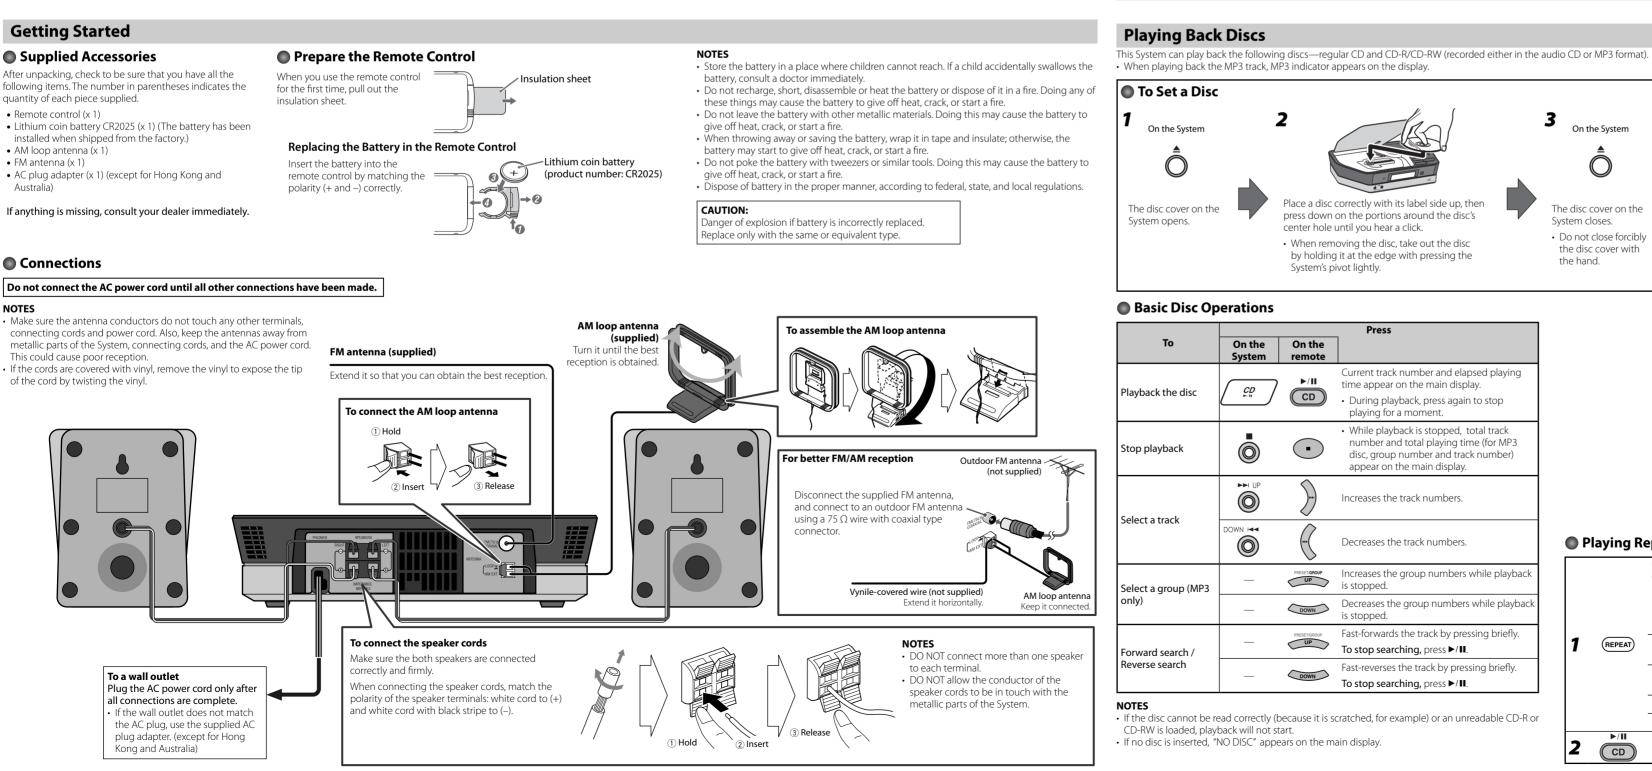

Download from Www.Somanuals.com. All Manuals Search And Download.


elect a source^{*}

djust the volume

'touch sensor panel."

NOTE

playback

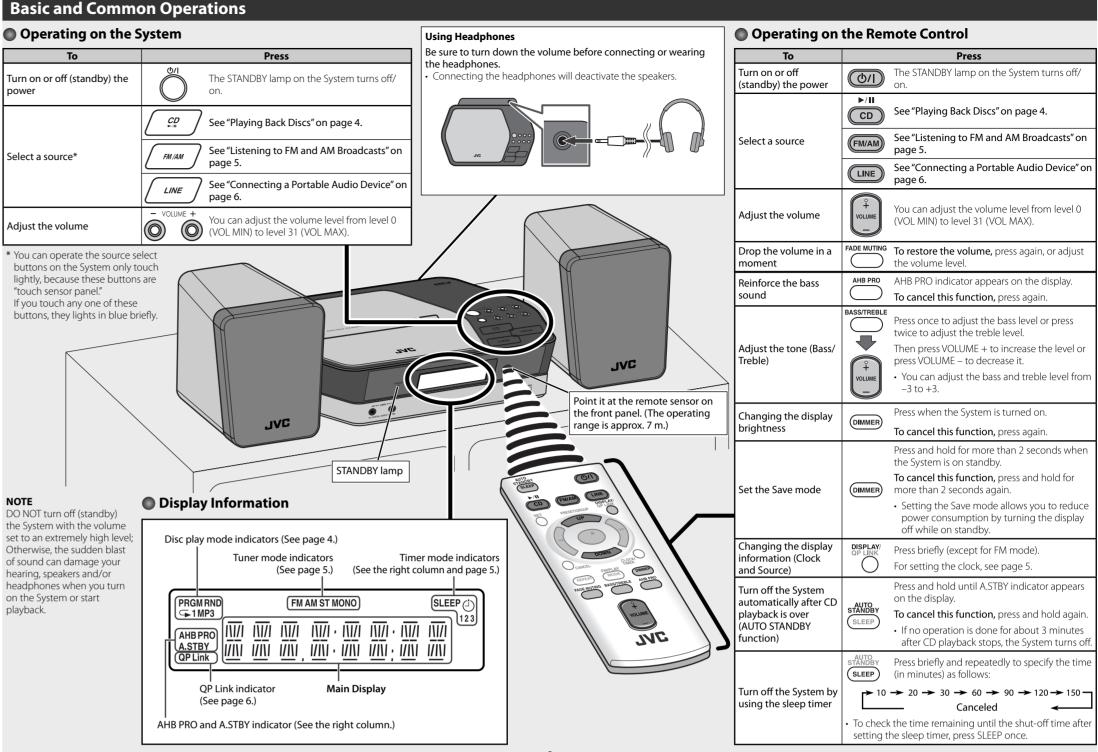

JC	ΟÞ	ei	au	5	

	Press		
	On the System	On the remote	
e disc	<u>CD</u> = n	►/II CD	Current track number and elapsed playing time appear on the main display.
			 During playback, press again to stop playing for a moment.
ck	0	•	 While playback is stopped, total track number and total playing time (for MP3 disc, group number and track number) appear on the main display.
k			Increases the track numbers.
		(**	Decreases the track numbers.
up (MP3	_	UP	Increases the group numbers while playback is stopped.
	_	DOWN	Decreases the group numbers while playback is stopped.
rch / ch		UP	Fast-forwards the track by pressing briefly.
			To stop searching, press ►/II.
		DOWN	Fast-reverses the track by pressing briefly.
		DOWN	To stop searching, press ►/II.

HANDBY HI CD F/II CD
(UP)
CANCEL FILER FILER REPEAT MODE AND
VOLUME
JVC

Playing Repeatedly—Repeat Play Press repeatedly before you start playback to specify the repeat mode as follows \rightarrow Generation of the second (MP3 only) REP OFF 🔶 🦐 REP ALL 🝝 Repeats the current (or specified) G 1 REP 1 track Repeats all tracks in the current 🗣 REP GRP group. (MP3 only) **FREP ALL** Repeats all tracks. REP OFF Normal playback

Pla	Programming the Playing Order—Program Play (except for MP3)				
(MODE	Press repeatedly until the PRGM (program) indicator appears on the display before you start playback.			
(4.	(or)	Select the track number to program.			
	SET	Press to program the selected track.			
display. The tracks are played in the order you have programmed.					
Operations on the Program Play Mode					
	peration	15 01	h the Prog	Iram Play Mode	
	То		n the Prog	ram Play Mode Press	
р				• •	
p co To	To heck the rogramm	ned		Press	
p co To la To th	To heck the rogramm ontents o erase th	ned		Press	

Playing at Random—Random Play

1		Press until the RND (random) indicator appears on the display before you start playback.			
2	Playback starts in random order.Random Play ends when all tracks are played.				
Operations on the Random Play Mode					
	То		Press		
	To skip a trac	.k	• I◀◀ does not work.		
	To exit from random play	, FM/PLAY MODE	Press once while playback is stopped to exit from the random play.		

Setting the Clock and Daily Timer Listening to FM and AM Broadcasts Setting the Clock Basic Tuner Operations (d/l Without setting the built-in clock, you cannot use Daily Timer and Sleep Timer. Press headphones. То (FM/AM) • Sound adjustments do not affect recording to the external On the System On the remote Press to activate the clock setting mode device. If you have already adjusted the clock before, press the Set the AM tuner intervals to Press and hold VOLUME +, then press الراب button repeatedly until the clock setting mode is selected. when the System is on standby 9 kHz spacing is turning on. UP DOWN Adjust the hour, then the minute. Press and hold **>>**۱ UP, then press الا or Set the AM tuner intervals to DOWN 10 kHz spacing when the System is on standby For MP3 playback... • To exit from the clock setting, press CLOCK/TIMER as required. Each time you press the button, the band To go back to the previous step, press CANCEL. alternates between FM and AM. configuration.) • "FM" or "AM" and selected frequency VOLUME FM/AM Select FM or AM (FM/AM) appear on the main display. If an FM program is broadcast in stereo, JVC the ST (stereo) indicator lights up on the Setting the Daily Timer for the disc format. display (only when the reception is good) Using Daily Timer, you can wake up with your favorite music. Press and hold for more than 2 seconds. You can store three Daily Timer settings; however, you can activate only one of Daily Timers at the same time. The System starts searching for stations and Press repeatedly to select one of the timer setting modes you want to set—DAILY 1 ON time, ►►I UP stops when a station of sufficient signal OWN I DAILY 2 ON time, or DAILY 3 ON time—as follows: Select a frequency strenath is tuned in. 64 kbps. • Press during searching to stop. Daily 1 Time Daily 2 Timer Press repeatedly to change the frequency DAILY 1 \rightarrow ON (Time) \rightarrow DAILY 2 \rightarrow ON (Time) \cdot step by step. Clock setting - ON (Time) - DAILY 3 -Canceled UP Press to select a preset number for the (See above.) Daily 3 Timer station you store. Tune in to a preset station DOWN • For presetting stations, see below. 1 Adjust the hour then the minute for on-time. 2 Adjust the hour then the minute for off-time Press to improve reception. ③ Select the playback source—"FM/AM,""CD," or "LINE." Change the FM reception mode The MONO indicator appears on the display UP When an FM stereo broadcast Reception will improve though the stereo ④ For "FM/AM": Select a preset channel. (MODE) or is hard to receive or noisy) effect is lost. For "LINE": Make the external device ready for playback. DOWN To restore the stereo effect, press again. (5) Select the volume level. • You can select the volume level ("VOLUME 0" to "VOLUME 31" and "VOLUME ---"). If you select Presetting Stations "VOLUME - -," the volume is set to the last level when the System is turned off. ٥/١ **@**-You can preset 30 FM and 15 AM stations manually. (U/I) Turn off the System (on standby). ROOT Tune in to a station you want to preset. • To exit from the timer setting, press CLOCK/TIMER as required. • You can also store the monaural reception mode for FM preset stations if • To correct a misentry during the process, press CANCEL. You can return to the previous step. selected. To turn off the Daily Timer Press to activate the preset number entry mode. • Finish the following process while the indication on the display ()01 Press repeatedly to select "DAILY 1," "DAILY 2," or "DAILY 3." is flashing. ₽1 MODE UP 2 Press to select a preset number for the station you store. To turn on the Daily Timer again, select one of the timer settings by pressing CLOCK/TIMER, then press SET. DOWN Press to store the station

NOTE

When you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in two days

Connecting a Portable Audio Device

This System has LINE IN/OUT jacks to connect a portable audio device.

If an external device is not equipped with a stereo mini plug audio output, use a plug adaptor to convert the stereo mini plug Connect between the device and the System by using the stereo mini plug cord (not supplied). and mechanism clean. to the corresponding plug of the audio output. Handling discs **IMPORTANT:** It may be unlawful to record or play back copyrighted material without the consent of the copyright owner. and moisture To clean the disc Playing back a portable audio device Recording to a portable audio device edge. rtable audio device Digital Audio Plaver, etc.) To audio output (or headphone out, etc.) Portable audio device equipped with the audio input To audio input (Digital Audio Player, etc.) To Play Back a Portable Audio Device "LINE" appears on the main display. Start recording or standby recording on the device. Easily ►/II By using QP Link (Quick Portable Link), you can easily start Start playing the CD or tune into the station you want to

6

changing the volume level).

OUTPLIT LEVEL

 \bigcirc

or (FM/AM) recording.

On the System Press to change the audio output level.

If the recorded sound on the device connected to the LINE OUT jack is too loud or

OUT_LVL1 ← → OUT_LVL2

too quiet, you can change the audio output level through the LINE OUT jack (without

You can select one of two levels alternately as follows:

To Select the Audio Output Level

5

 
NOTE

JVC

2 Start playing the device connected. Adjust the volume level to the level you want to listen to.

To Adjust the Audio Input Level

If the sound from the device connected to the LINE IN iack is too loud or too quiet, you can change the audio input level through the LINE IN jack (without changing the volume level).



LINE IN jack. On the remote Press and hold for more than 2 seconds to activate QP Link. QP Link indicator appears on the display. To cancel this function, press and hold ()for more than 2 seconds again. When QP Link is activated, connecting a portable device to the LINE IN jack and starting playback performs the

following: • While listening to another source...

Changes the source to "LINE" automatically. (If you change from "LINE" to another source, QP Link will be canceled.) • While the System is on standby...

playing back a portable audio device connected to the

Turns on the System and changes the source to "LINE" automatically (except when the display is turned off).

See "Learning More about This System" on page 7.

Learning More about This System


Basic and Common Operations (see page 3) Sound adjustments also affect the sound through the

• You can set the clock and daily timer while the Save mode is turned on. While setting the clock or daily timer, the display

Playing Back Discs (see pages 4)

• This System cannot play "packet write" discs.

- MP3 discs are required a longer readout time than regular CDs. (It depends on the complexity of the group/file
- Some MP3 files cannot be played back and will be skipped. This result from their recording processes and conditions. When making MP3 discs, use ISO 9660 Level 1 or Level 2
- This System can play back MP3 files with the extension code <.mp3> (regardless of the letter case—upper/lower). - It is recommended that you make each MP3 file at a sampling rate of 44.1 kHz and at bit rate of 128 kbps. This System cannot play back files made at bit rate of less than
- Playback order of MP3 tracks may be different from the one you have intended while recording. If a folder does not include MP3 tracks, they are ignored.
- This System can recognize up to 511 tracks in a disc. Also, the System can recognize up to 150 tracks per group and up
- to 99 groups in a disc. (for MP3) - If there are any unplayable files in a folder, those files are also counted in the total file number
- Playable files which do not belong to any groups are handled as Group 1.

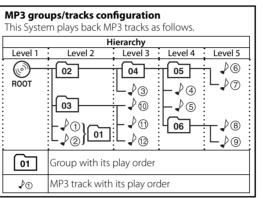

Connecting a Portable Audio Device (see page 6)

- Playing back a portable audio device: If a component connected to the LINE IN jack is not loud enough, QP Link may not work properly. In such cases, adjust the volume level of the component
- louder so that the System can detect the sound signal properly. Changing from "LINE" to another source while QP Link works will deactivate QP Link temporarily.
- In this case, the following reactivates QP Link: Pressing QP LINK on the remote control
- When no sound signal comes from the LINE IN jack for about 30 seconds after the System is turned off
- If you press ψ/I button to turn the System off or if preset Timer turns the System off while QP Link works, the System deactivates QP Link temporarily.
- In such cases, the following reactivates QP Link: - When no sound signal comes from the LINE IN jack for
- about 30 seconds after the System is turned off When you turn on the power again

Setting the Clock and Daily Timer (see page 5)

- "0:00" will flash on the display until you set the clock. The clock may gain or lose 1 to 2 minutes per month. If this happens, readjust the clock. • When you unplug the AC power cord or if a power failure
- occurs, the clock and the timer will be canceled. You need to set the clock first, then the timer again.
- If you do not specify the preset station correctly while setting a timer, the currently selected station will be played when the timer is activated.
- When the on-time of the daily timer comes, the System sets the volume level gradually to the preset level after about 5 seconds.

Timer Priority:

• If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.

Troubleshooting

If you are having a problem with your System, check this list for a possible solution before calling for service.

General

Power does not come on.

Power plug is not inserted securely. Plug in securely. Adjustments or settings are suddenly canceled before

you finish. ➡ There is a time limit. Repeat the procedure again.

Operations are disabled.

The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

Unable to operate the System from the remote control. ➡ The path between the remote control and the remote sensor on the System is blocked.

➡ The batteries are exhausted.

No sound is heard.

➡ Speaker connections are incorrect or loose. → Headphones are connected.

Radio Operations

- Hard to listen to broadcasts because of noise.
- Antennas connections are incorrect or loose ➡ The AM loop antenna is too close to the System
- → The FM antenna is not properly extended and positioned

Disc Operations

The disc does not play.

- → The disc is placed upside down. Place the disc with the label side up. ➡ MP3 disc is recorded with the "packet writing (UDF file)."
- It cannot be played. Check the files you want to play back.
- ID3 Tag on an MP3 disc cannot be shown.
- ➡ There are two types of ID3 Tag—Version 1 and Version 2. This System can only show ID3 Tag Version 1.
- MP3 groups and tracks are not played back as you expect. → The playing order is determined when the disc was
- recorded. It depends on the writing application.

The disc sound is discontinuous. The disc is scratched or dirty.

The disc trav does not open or close.

The AC power cord is not plugged in.

Timer Operations

Daily Timer does not work.

 \rightarrow The System has been turned on when the on-time comes. Timer starts working only when the System is turned off

Maintenance

To get the best performance of the System, keep your discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly
- Do not touch the shiny surface of the disc, or bend the disc. Put the disc back in its case after use.
- Be careful not to scratch the surface of the disc when placing it back in its case
- Avoid exposure to direct sunlight, temperature extremes,

Wipe the disc with a soft cloth in a straight line from center to

Cleaning the System • Stains should be wiped off with a soft cloth. If the System is

- heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following
- DO NOT wipe it with a hard cloth.
- DO NOT wipe it strong.
- DO NOT wipe it with thinner or benzine. - DO NOT apply any volatile substance such as insecticides
- DO NOT allow any rubber or plastic to remain in contact for a long time.

Specifications Specifications and appearance are subject to change without prior notice.

Amplifier section

7

8

OUTPUT POWER: 10 W (5 W + 5 W) at 4 Ω (10% THD) Speakers/Impedance: $4 \Omega - 16 \Omega$

Audio Input LINE IN: 500 mV/47 kΩ (at "LINE IN LVL1") 250 mV/47 kΩ (at "LINE IN LVL2")

125 mV/47 kΩ (at "LINE IN LVL3") Audio Output LINE OUT: 1.0 Vrms (47 kΩ) (at "LINE OUT LVL1")

FM Tuning range: 87.50 MHz - 108.00 MHz

531 kHz - 1 710 kHz (in 9 kHz spacing)

CD player section

Speakers Speaker units: 8 cm cone x 1

Impedance: 4Ω Dimensions (approx.): 130 mm x 171 mm x 136 mm (W/H/D) Mass (approx.): 0.75 kg each

Supplied Accessories

- Power reauirements: AC 110/220 - 240 V \sim (adjustable with the voltage selector except for Hong Kong and Australia), 50/60 Hz AC 240 V ~, 50 Hz (only Australia)
- AC 220 V ~, 50 Hz (only Hong Kong) Power consumption.
- 21.0 W (Power on), 5.0 W (Standby mode)

4.5 W or less (Save mode) Mass: 1.8 kg

Dimensions (W x H x D): 270 mm x 68.5 mm x 203 mm

2.0 Vrms (47 kΩ) (at "LINE OUT LVL2") General Tuner section

AM Tuning range: 530 kHz - 1 710 kHz (in 10 kHz spacing)

Dynamic range: 88 dB

Sianal-to-noise ratio: 93 dB Wow and flutter: Immeasurable Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com