


JVC


COMPACT COMPONENT SYSTEM

CA-MXDVA9R CA-MXDVA9

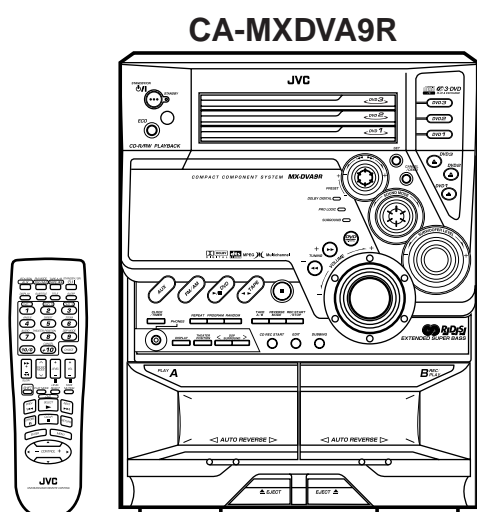


MPEG Multichannel

CA-MXDVA9 for Australia

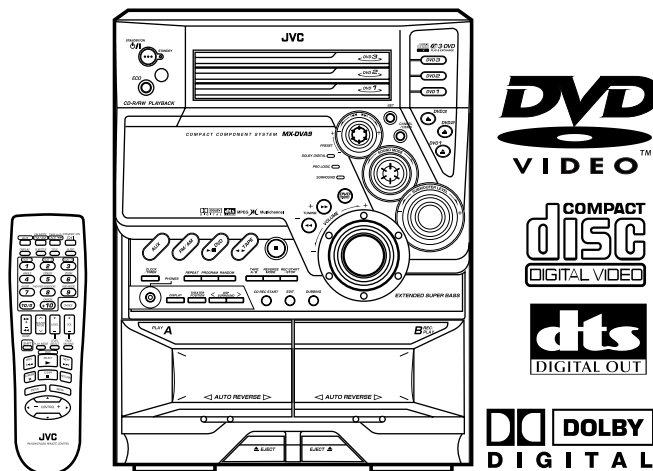

MPEG Multichannel

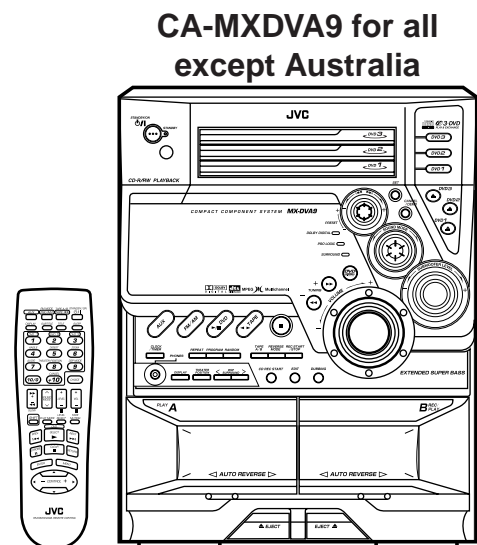

MPEG Multichannel

INSTRUCTIONS

For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

GVT0057-008A
[A, B, UJ]

Warnings, Cautions and Others

IMPORTANT for the U.K.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

BE SURE to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

IMPORTANT:

DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue : Neutral
Brown : Live


As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.

Caution — STANDBY/ON button!

Disconnect the mains plug to shut the power off completely. The STANDBY/ON  button in any position does not disconnect the mains line. The power can be remote controlled.

CAUTION


To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

IMPORTANT FOR LASER PRODUCTS

REPRODUCTION OF LABELS

- ① CLASSIFICATION LABEL, PLACED ON REAR ENCLOSURE

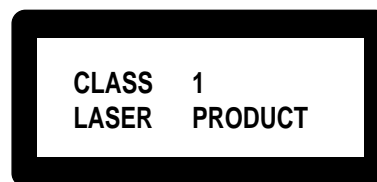

- ② WARNING LABEL, PLACED INSIDE THE UNIT

DANGER: Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	VARNING: Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)
ADVARSEL: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. (d)	VARO: Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not use this apparatus in a bathroom or places with water. Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups, etc.) on top of this apparatus.

Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

1 Front:


No obstructions and open spacing.

2 Sides/ Top/ Back:

No obstructions should be placed in the areas shown by the dimensions below.

3 Bottom:

Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

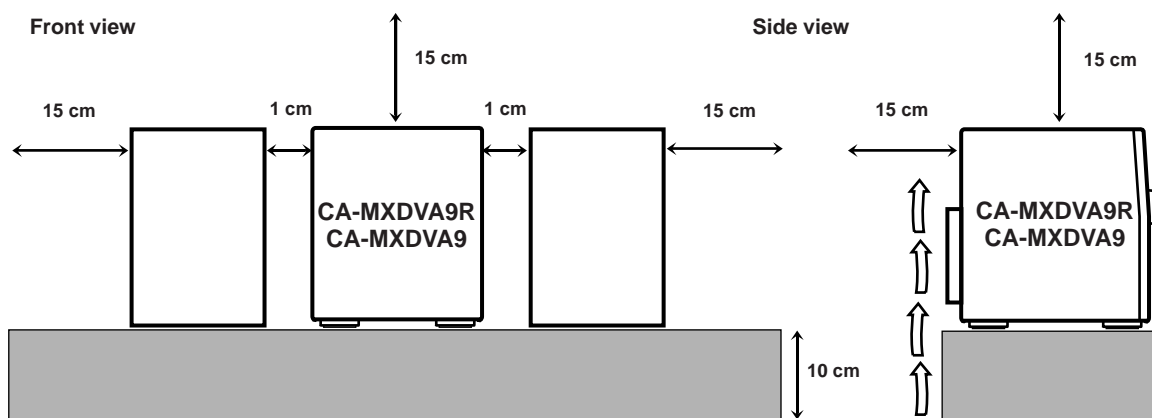

SAFETY INSTRUCTIONS

“SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way — switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.


DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

- NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case — this could result in a fatal electrical shock.
- NEVER guess or take chances with electrical equipment of any kind — it is better to be safe than sorry!

Introduction

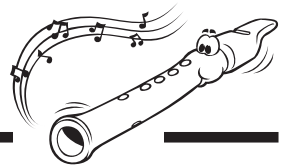

We would like to thank you for purchasing one of our JVC products. Before operating this unit, read this manual carefully and thoroughly to obtain the best possible performance from your unit, and retain this manual for future reference.

About This Manual

This manual is organized as follows:

- **The manual mainly explains operations using the buttons and controls on the unit. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the unit. If operation using the remote control is different from that using the unit, it is then explained.**
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the unit, setting the volume, changing the sound effects, and others, which are explained in the section “Common Operations” on pages 11 to 14.
- The following marks are used in this manual:



Gives you warnings and cautions to prevent from damage or risk of fire/electric shock. Also gives you information which is not good for obtaining the best possible performance from the unit.



Gives you information and hints you had better know.

Precautions

Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C (41°F) and 35°C (95°F).
- Install the unit in a location with adequate ventilation to prevent internal heat buildup in the unit.
- Leave sufficient distance between the unit and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting heating in the room
- In a damp room
- If the unit is brought directly from a cold to a warm place should this occur, the unit may malfunction. In this case, leave the unit turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

Others


- Should any metallic object or liquid fall into the unit, unplug the AC power cord and consult your dealer before operating any further.
- If you are not going to operate the unit for an extended period of time, unplug the AC power cord from the wall outlet.



DO NOT disassemble the unit since there are no user serviceable parts inside.

If anything goes wrong, unplug the AC power cord and consult your dealer.

Contents

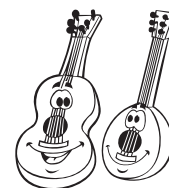



Location of the Buttons and Controls	3	Selecting Playback Modes	25
Front Panel	3	Programming the Playing Order of the Titles and Tracks—Program Play	25
Remote Control	5	Playing at Random—Random Play	27
Getting Started	6	Repeating Playback	27
Supplied Accessories	6	• Repeat Play	27
Putting the Batteries into the Remote Control	6	• A-B Repeat	28
Connecting Antennas	6	DVD/VCD Special Effect Playback	29
Connecting Speakers	7	Still Picture/Frame-by-Frame Playback	29
Connecting Other Equipment	8	Viewing Continuous Still Pictures—Strobe	29
Adjusting the Voltage Selector	10	Slow Motion Playback—Slow	29
Canceling the Display Demonstration	10	Zoom in the Picture—Zoom	29
Common Operations	11	Viewing the Desired Chapters/Tracks—Digest	30
Turning On or Off the Power	11	Selecting the Picture Brightness —Theater Position	30
Saving the Power Consumption While on Standby —Ecology Mode	11	Playing Back Tapes	31
Setting the Clock	11	Playing Back a Tape	31
Setting the AM Tuner Interval Spacing	12	Locating the Beginning of a Song—Music Scan	31
Selecting the Sources	12	Using DSP Surround Mode	32
Adjusting the Volume	12	Activating and Adjusting the DSP Surround Mode	32
Adjusting the Front Speaker Output Balance	12	Recording	33
Reinforcing the Bass Sound	13	Recording a Tape on Deck B	33
Selecting the Sound Modes	13	Dubbing Tapes	34
Creating Your Own Sound Modes —Manual Mode	14	VCD/CD Direct Recording	34
Listening to FM and AM Broadcasts	15	Auto Edit Recording	35
Tuning into a Station	15	Operating the On-Screen Menu	36
Presetting Stations	15	Basic Procedure	36
Tuning into a Preset Station	15	Changing the Initial Language Settings	37
Receiving FM Stations with RDS —Only for CA-MXDVA9R	16	Changing the Various Audio Settings	37
Changing the RDS Information	16	Changing the Display Settings	39
Searching for Programs by PTY Codes (PTY Search)	16	Changing the System Settings	40
Switching to a Program Type of Your Choice Temporarily	17	Using the Parental Lock	41
Playing Back Discs—Introduction	18	Setting the Parental Lock Level	41
Disc Structure	18	Unlocking the Parental Lock Temporarily	41
DVD Features	19	Using the Timers	42
• Selecting the Multi-Angle View	19	Using Daily Timer	42
• Selecting the Audio Language	19	Using Recording Timer	44
• Selecting the Subtitle	19	Using Sleep Timer	45
Basic Disc Playback	20	Timer Priority	45
Loading Discs	20	Using AV COMPU LINK Control System	46
Common Basic Disc Operations	20	Appendix A—Maintenance	47
DVD Playback	20	Appendix B—Troubleshooting	48
VCD/CD Playback	22	Appendix C—Description of the PTY Codes	49
Searching for a Particular Point	23	Appendix D—Output Signals Through the OPTICAL DIGITAL OUTPUT Terminal	49
Prohibiting Disc Ejection—Tray Lock	23	Appendix E—Channel Display	50
Menu Driven Playback—DVD/VCD with PBC Function	24	Appendix F—Language Code for On-Screen Menu	51
Menu Operations	24	Appendix G—Country Code for Parental Lock	52
		Specifications	54

Location of the Buttons and Controls

Become familiar with the buttons and controls on your unit.

Front Panel

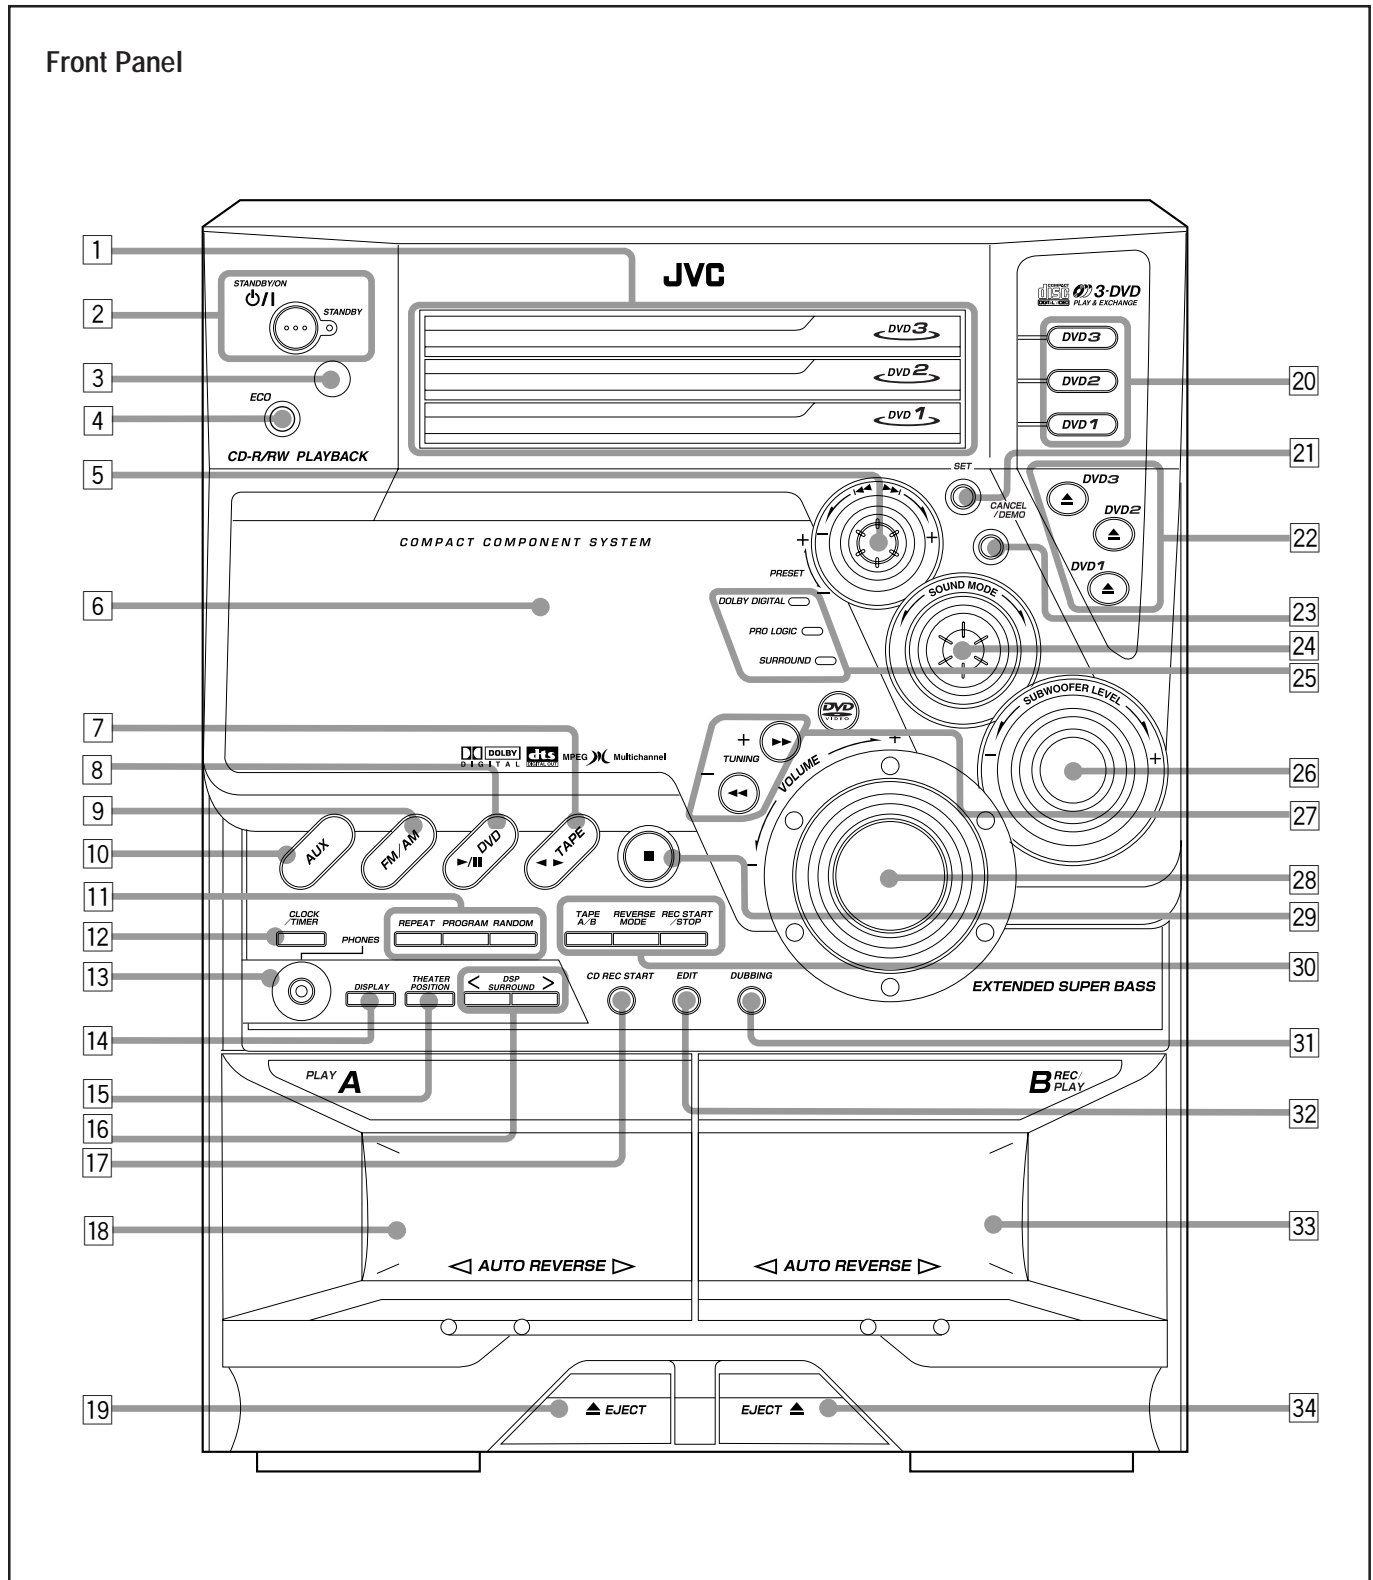

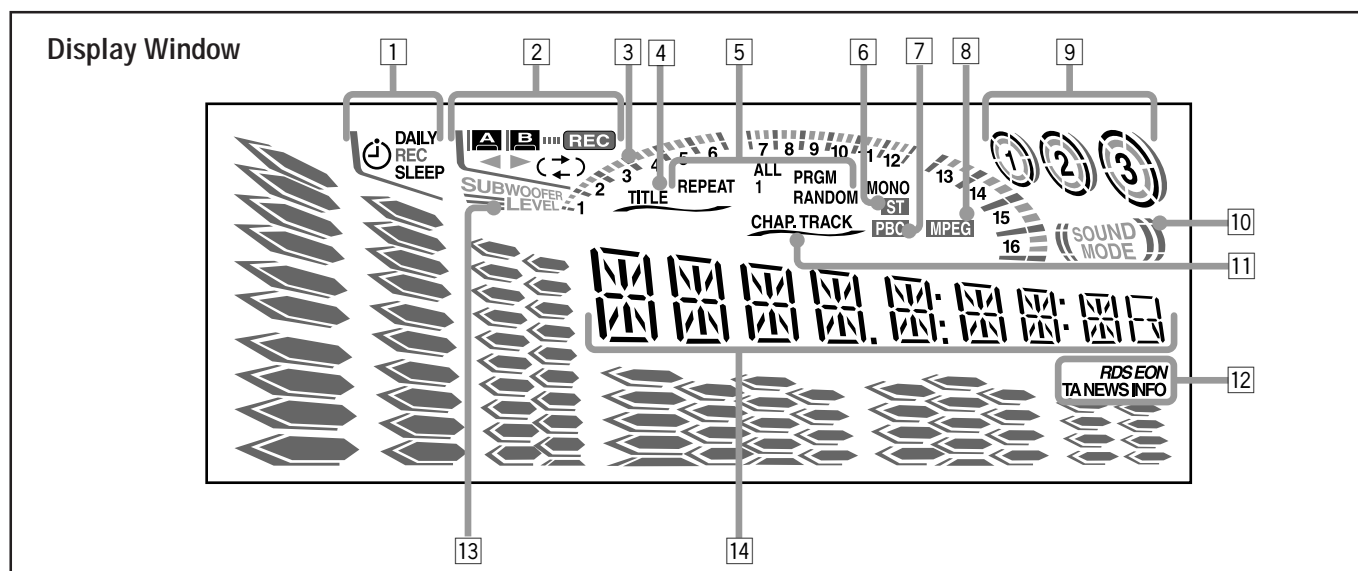

See pages in the parentheses for details.

Front Panel

- 1 Disc trays
- 2 STANDBY/ON O/I button and STANDBY lamp (11, 12, 43, 44)
- 3 Remote sensor
- 4 ECO button (11): Only for England and Australia
- 5 PRESET + / - control (15)
 $\text{I} \ll / \gg \text{I}$ (reverse search/forward search) control (11, 14, 21, 22, 25, 27, 35, 42 - 44)
- 6 Display window
- 7 TAPE $\blacktriangleleft \blacktriangleright$ button and lamp (12, 31, 33, 34)
Pressing this button also turns on the unit.
- 8 DVD $\blacktriangleright / \text{II}$ (play/pause) button and lamp (12, 20 - 25, 27)
Pressing this button also turns on the unit.
- 9 FM/AM button and lamp (12, 15)
Pressing this button also turns on the unit.
- 10 AUX button and lamp (12)
Pressing this button also turns on the unit.
- 11 Disc play mode buttons
 - REPEAT button (24, 28)
 - PROGRAM button (25, 26)
 - RANDOM button (27)
- 12 CLOCK/TIMER button (11, 42 - 45)
- 13 PHONES jack (12, 21, 37)
- 14 DISPLAY button (16, 19, 21, 23, 50)
- 15 THEATER POSITION button (30)
- 16 DSP SURROUND \langle / \rangle buttons (32)
- 17 CD REC START button (34, 35)
- 18 Deck A cassette holder (31)
- 19 \blacktriangle EJECT button for deck A (31)
- 20 Disc number buttons and lamps (DVD1, DVD2, and DVD3) (20, 22, 25, 27, 34, 35)
Pressing one of these buttons also turns on the unit.
- 21 SET button (11, 14, 15, 25, 35, 42 - 45)
- 22 \blacktriangle (Disc tray open/close) buttons (DVD1, DVD2, and DVD3) (20 - 23)
Pressing one of these buttons also turns on the unit.
- 23 CANCEL/DEMO button (10, 11, 25, 35, 42 - 45)



- 24 SOUND MODE control (13)
- 25 DOLBY DIGITAL lamp (18, 21)
 PRO LOGIC lamp (37)
 SURROUND lamp (32)
- 26 SUBWOOFER LEVEL + / - control (13)
- 27 TUNING + / - buttons (15)
 \ll / \gg (fast reverse/fast forward) buttons (14, 23, 31)
- 28 VOLUME + / - control (12)
- 29 \blacksquare (stop) button (9, 12, 21 - 27, 31, 33 - 35, 44)
- 30 Tape operation buttons
 - TAPE A/B button (31)
 - REVERSE MODE button (31, 33 - 35)
 - REC START/STOP button (33 - 35, 44)
- 31 DUBBING button (34)
- 32 EDIT button (35)
- 33 Deck B cassette holder (31, 33)
- 34 EJECT \blacktriangle button for deck B (31, 33)

Display Window

- 1 Timer indicators
 - O (Timer), DAILY (Daily Timer), REC (Recording Timer), and SLEEP (Sleep Timer) indicators
- 2 Tape operation indicators
 - A/B (operating deck), **REC** (recording), $\blacktriangleleft \blacktriangleright$ (tape direction), and $\text{C} \curvearrowright$ (reverse mode) indicators
- 3 Title and track number (1 - 16) indicators
- 4 TITLE indicator
- 5 Disc play mode indicators
 - REPEAT (ALL/1), PRGM (program), and RANDOM indicators
- 6 Tuner operation indicators
 - MONO and ST (stereo) indicators
- 7 PBC indicator
- 8 MPEG indicator
- 9 Disc indicators
- 10 SOUND MODE indicator
- 11 CHAP. (chapter) and TRACK indicators
- 12 RDS operation indicators: Only for CA-MXDVA9R
 - RDS, EON, and TA/NEWS/INFO indicators
- 13 SUBWOOFER LEVEL indicator
- 14 Main display
 - Shows the source name, frequency, etc.



Remote Control

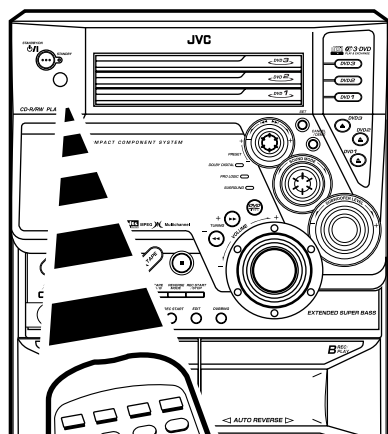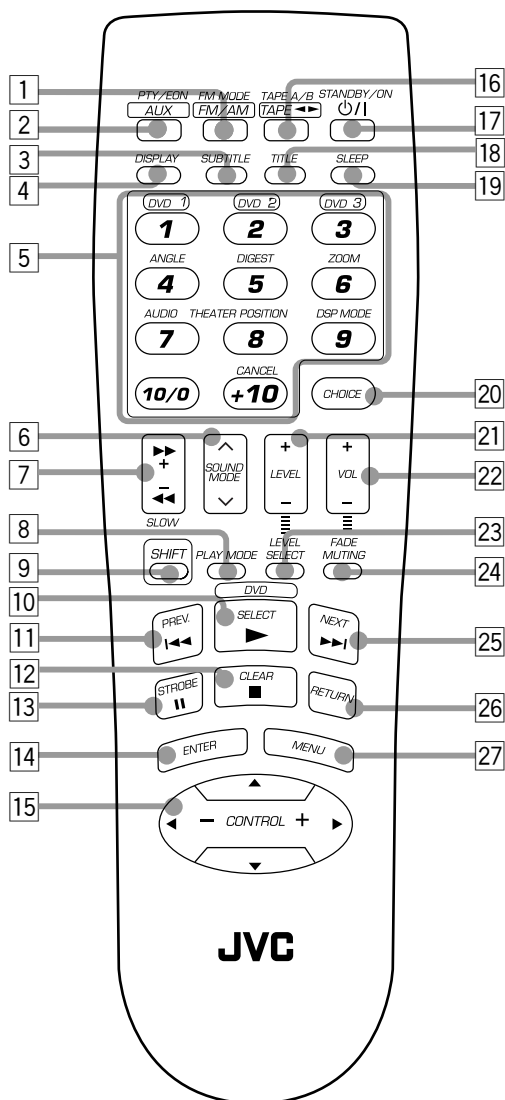

When using the remote control, point it at the remote sensor on the front panel.

Remote Control

- 1 FM/AM button (12, 15)
Pressing this button also turns on the unit.
FM MODE button* (15)
- 2 AUX button (12)
Pressing this button also turns on the unit.
PTY/EON button* (16, 17): Only for CA-MXDVA9R
- 3 SUBTITLE button (19)
- 4 DISPLAY button (16, 19, 21, 23, 50)
- 5 Number buttons (15, 21 – 23, 26, 41)
Disc number buttons* (DVD 1, DVD 2, and DVD 3)
ANGLE button* (19)
DIGEST button* (30)
ZOOM button* (29)
AUDIO button* (19)
THEATER POSITION button* (30)
DSP MODE button* (32)
CANCEL button* (26)
- 6 SOUND MODE \wedge / \vee button (13)
- 7 \lll / \ggg (fast reverse/fast forward) button (23, 31)
+ / - button (15)
SLOW + / - button (29)
- 8 PLAY MODE button (21 – 23, 26 – 28)
- 9 SHIFT button
- 10 DVD \blacktriangleright (play) button (12, 20 – 23, 26, 29)
Pressing this button also turns on the unit.
SELECT button (24, 30)
- 11 \lll (reverse search) button (21, 22)
PREV. (preview) button (30)
- 12 \blacksquare (stop) button (21, 22, 24, 26, 27, 31, 41)
CLEAR button (25, 26)
- 13 \parallel (pause) button (20, 29)
STROBE button (29)
- 14 ENTER button (21 – 23, 26 – 28, 30, 36 – 39, 41)
- 15 Cursor (\blacktriangle / \blacktriangledown / \blacktriangleright / \blacktriangleleft) button (24, 29, 30, 36 – 41)
CONTROL + / - button (16, 17, 19, 21 – 23, 26 – 28)
- 16 TAPE \blacktriangleleft / \blacktriangleright button (12, 31)
Pressing this button also turns on the unit.
TAPE A/B button* (31)
- 17 STANDBY/ON \odot / I button (11)
- 18 TITLE button (24)
- 19 SLEEP button (45)
- 20 CHOICE button (36)
- 21 LEVEL + / - button (12, 13, 32)
- 22 VOL (volume) + / - button (12)
- 23 LEVEL SELECT button (12, 13, 32)
- 24 FADE MUTING button (12)
- 25 \ggg (forward search) button (21, 22, 26, 27)
NEXT button (30)
- 26 RETURN button (24)
- 27 MENU button (24)

* These buttons function while pressing with SHIFT.

Supplied Accessories

Make sure that you have all the following items. The number in the parentheses indicates the quantity of the pieces supplied.


- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)
- Composite video cord (1): Only for CA-MXDVA9
- AC plug adaptor (1): Only for CA-MXDVA9 except Australia

If anything is missing, consult your dealer immediately.

Putting the Batteries into the Remote Control

Insert the batteries—R6(SUM-3)/AA(15F)—into the remote control, by matching the polarity (+ and –) on the batteries with the + and – markings on the battery compartment.


When the remote control can no longer operate the unit, replace both batteries at the same time.

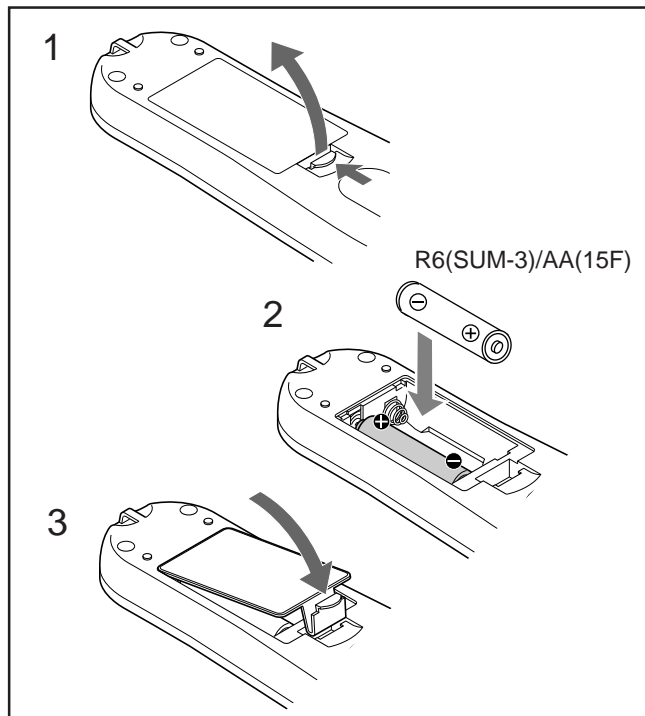

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, it will be damaged from battery leakage.

Connecting Antennas

FM antenna

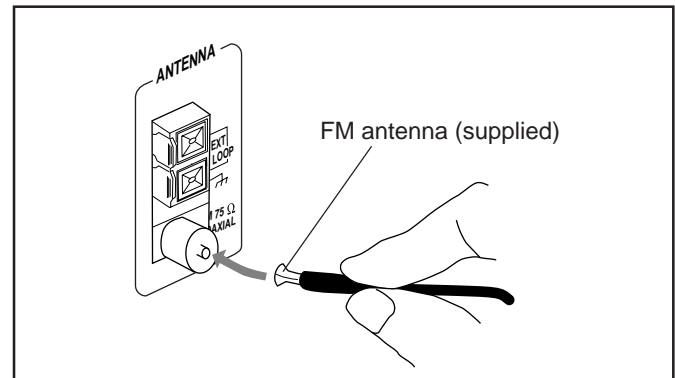

- 1 Attach the FM antenna to the FM 75 Ω COAXIAL terminal.
- 2 Extend the FM antenna.
- 3 Fasten it up in the position which gives you the best reception, then fix it on the wall, etc.




About the supplied FM antenna


The FM antenna supplied with this unit can be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.

To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

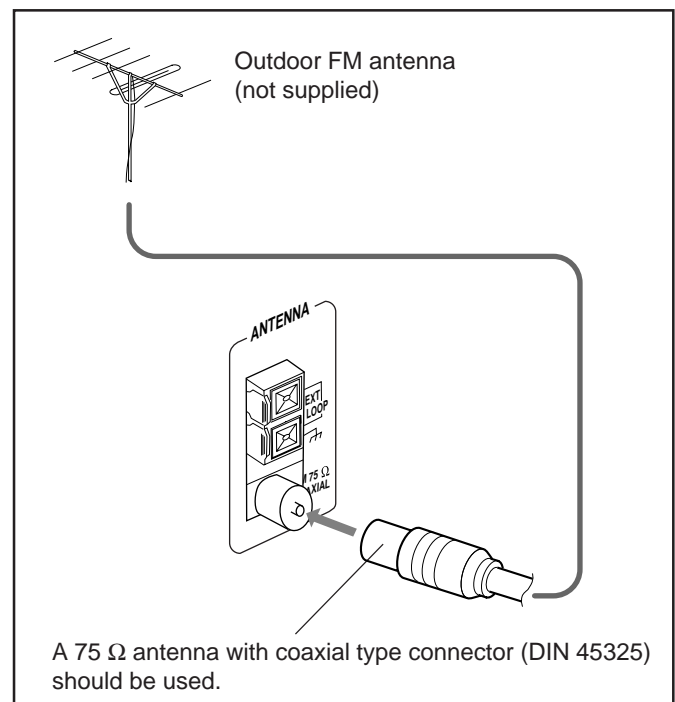

AM antenna

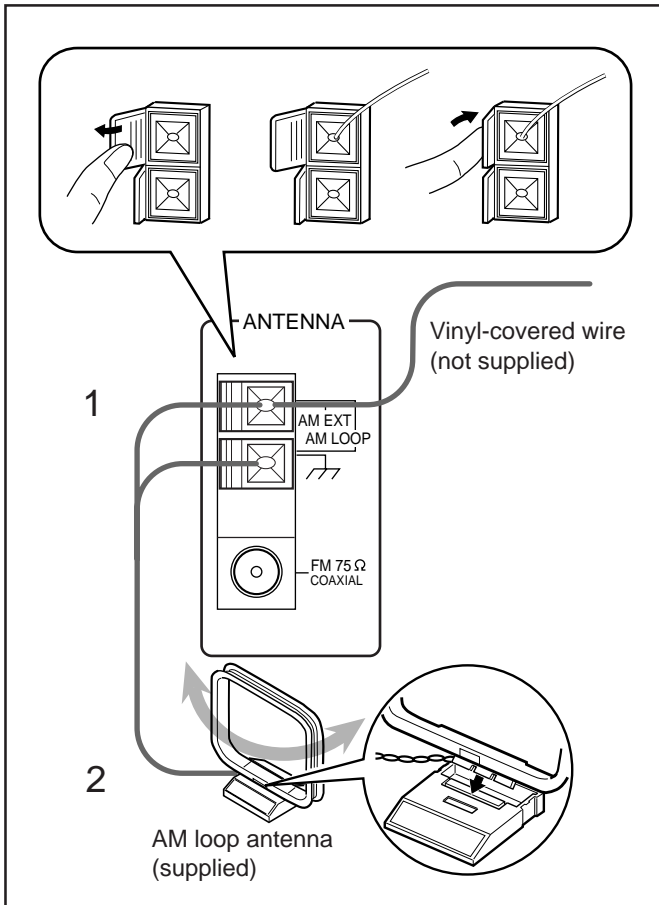

1 Connect the AM loop antenna to the AM LOOP terminals as illustrated.

- If the AM loop antenna wire is covered with vinyl, remove the vinyl by twisting it as shown in the diagram.



2 Turn the AM loop antenna until you have the best reception.

To connect an outdoor AM antenna

When reception is poor, connect a single vinyl-covered wire to the AM EXT terminal and extend it horizontally. The AM loop antenna must remain connected.




For better reception of both FM and AM

- Make sure the antenna conductors do not touch any other terminals and connecting cords.
- Keep the antennas away from metallic parts of the unit, connecting cords, and the AC power cord.

Connecting Speakers

IMPORTANT: Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.

To connect front speakers

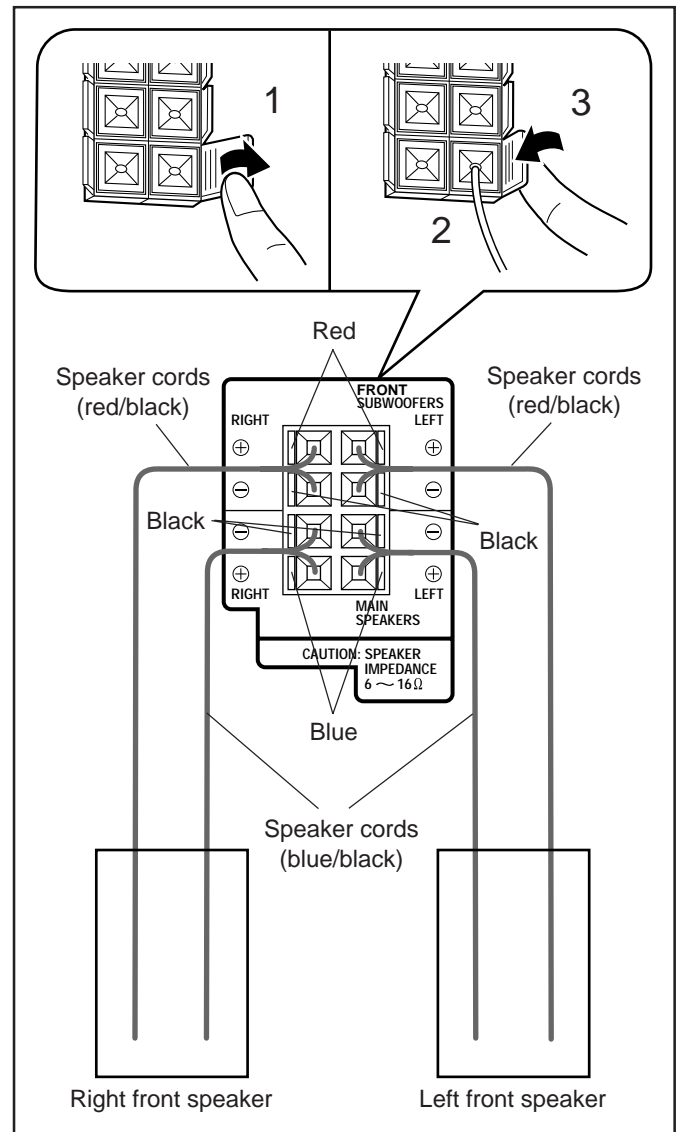

1 Open the speaker terminal.


2 Insert the end of the speaker cord into the terminal.

Match the polarity (colors) of the speaker terminals: Red (+) to red (+) and black (-) to black (-); Blue (+) to blue (+) and black (-) to black (-).

3 Close the speaker terminal.

To connect a center speaker and rear speakers


By connecting a center speaker and rear speakers to the SURROUND SPEAKERS jacks, you can enjoy Dolby Digital and MPEG multichannel sound, and the DSP Surround modes. (See page 32.)

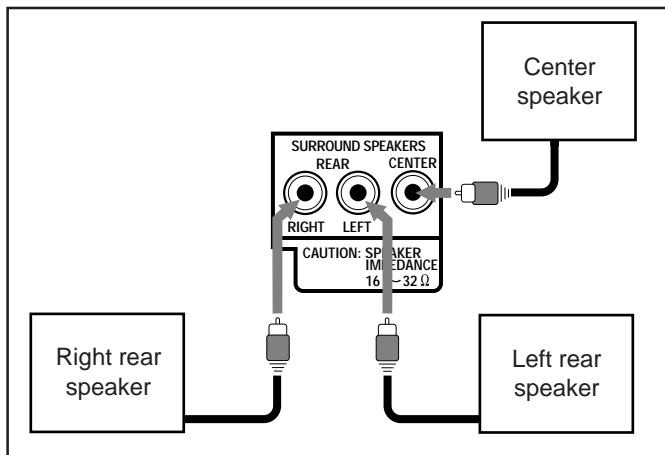

- Connect the right rear speaker to the REAR RIGHT jack.
- Connect the left rear speaker to the REAR LEFT jack.
- Connect the center speaker to the CENTER jack.

To connect a subwoofer

By connecting a subwoofer, you can reproduce the LFE signals recorded in multichannel software.

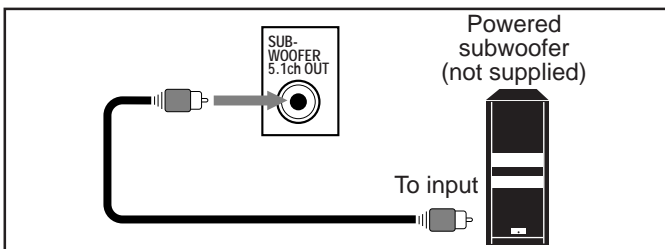

Connect the input jack of a powered subwoofer to the SUB-WOOFER 5.1ch OUT jack, using a monaural audio cord (not supplied).




To prevent powered subwoofer from damaging

Set the powered subwoofer (not supplied) volume level to the minimum before selecting disc as a playing source. When playing a disc that has software with the LFE signals, then adjust the powered subwoofer volume to the desired level.

Ideal speaker layout

To enjoy multichannel sound, locate speakers as follows. If you cannot locate them like this, adjust the speaker setting by using the on-screen menu. (See page 38.)

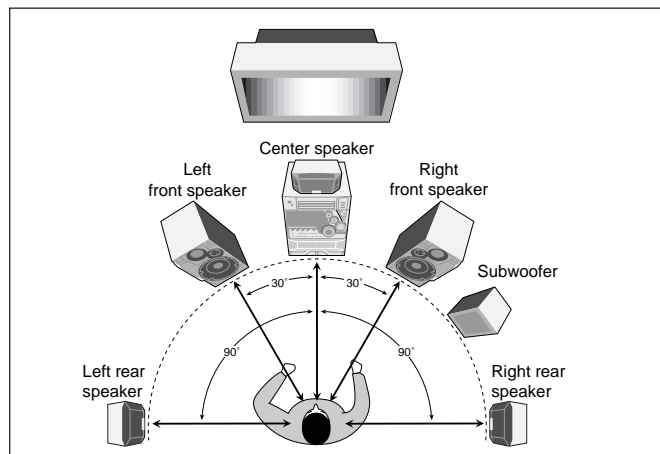

Connecting Other Equipment


You can connect both analog and digital equipment.



- DO NOT connect any equipment while the unit is on.
- DO NOT plug in any equipment until all connections are complete.


To connect an analog component

Be sure that the plugs of the audio cords are colored: White plugs and jacks are for left audio signals, and red ones for right audio signals.

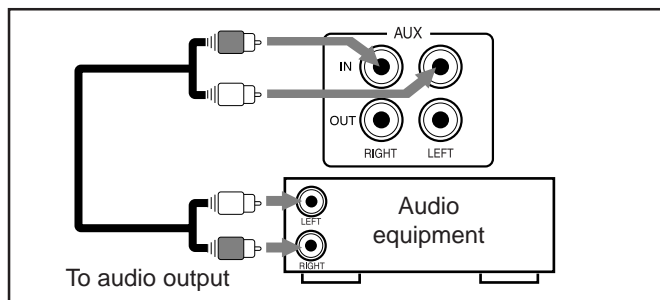

For playing the other equipment through this unit,

connect between the audio output jacks on the other equipment and the AUX IN jacks by using audio cords (not supplied).

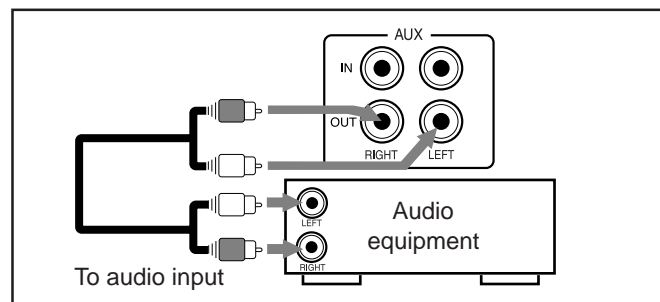

For recording sounds through this unit on the other


equipment, connect between the audio input jacks on the other equipment and the AUX OUT jacks by using an audio cord (not supplied).

- See “About sounds output through the rear terminals” on the next page.

To connect audio equipment with an optical digital input terminal—such as digital decoder

You can connect a digital decoder such as an MD recorder or a CD recorder by using an optical digital cord (not supplied).

- See also “About sounds output through the rear terminals.”

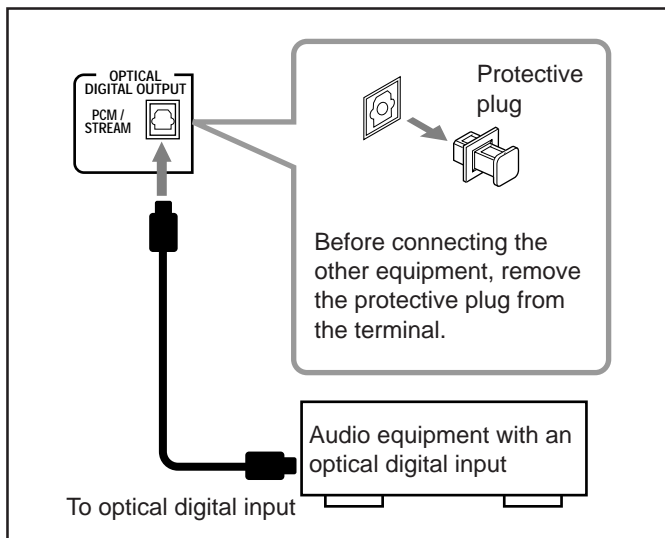

Connect an optical digital cord (not supplied) between the optical digital input terminal on the other equipment and the OPTICAL DIGITAL OUTPUT terminal.

About sounds output through the rear terminals

• Through the AUX OUT (RIGHT/LEFT) jacks:

Analog stereo signals are output.

When playing a source encoded with Dolby Digital* (DOLBY DIGITAL) or with MPEG Multichannel (MPEG Multichannel), multichannel signals are mixed to the right front and left front channels, then output. You also need to set “PRO LOGIC” setting correctly. (See page 37.)

– You cannot reproduce the sound encoded with DTS Digital Surround** (DTS).

• Through the OPTICAL DIGITAL OUTPUT terminal:

Digital signals (Linear PCM, Dolby Digital*, DTS Digital Surround**, MPEG Multichannel) are output. To reproduce the multichannel sounds such as Dolby Digital, DTS Digital Surround and MPEG Multichannel, connect an amplifier or a decoder compatible with these multichannel sources to this terminal, and set “DIGITAL AUDIO OUTPUT” setting correctly. (See page 37.)

* Manufactured under license from Dolby Laboratories. “Dolby,” “Pro Logic,” and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992–1997 Dolby Laboratories. All rights reserved.


** Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other world-wide patents issued and pending. “DTS” and “DTS Digital Surround” are trademarks of Digital Theater Systems, Inc. Copyright 1996 Digital Theater Systems, Inc. All Rights Reserved.

To connect a TV

For CA-MXDVA9R:

Connect your TV to the AV OUT terminal using a SCART cable (not supplied). Set the Y/C-COMP. switch and select the signal output mode correctly according to your TV.

- AV OUT terminal is only for video output. No sound comes out through this terminal.
- You can also use JVC’s AV COMPU LINK control system. (See page 46.)

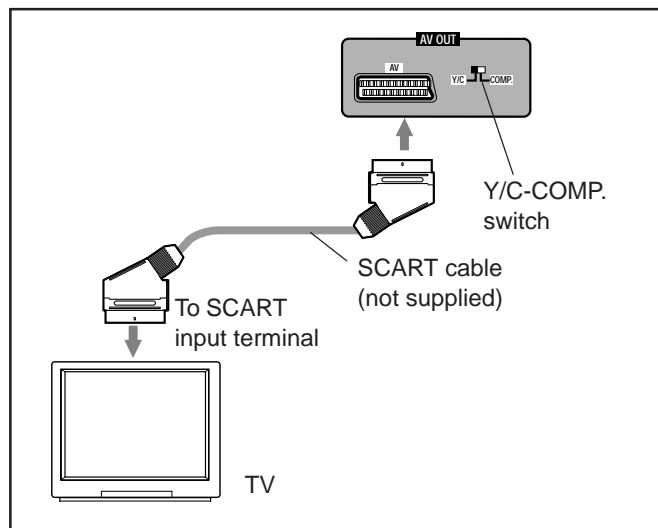

About video output signals

When shipped from the factory, the output signal is set to “S-VIDEO.”


- Set the Y/C-COMP. switch to “COMP.” if your TV accommodates the composite video signal.
- Set the Y/C-COMP. switch to “Y/C” if your TV accommodates the Y/C (S-video) signal.
- Set the Y/C-COMP. switch to “COMP.” and select “RGB” by pressing ■ on the unit for more than 5 seconds if your TV accommodates the RGB signal. When using a TV accommodating the composite video or Y/C signal, select “S-VIDEO” by pressing ■ on the unit for more than 5 seconds.



For CA-MXDVA9:

Connect your TV and this unit using the composite video cord (supplied) or an S-video cord (not supplied).

- You can also use JVC's AV COMPU LINK control system. (See page 46.)

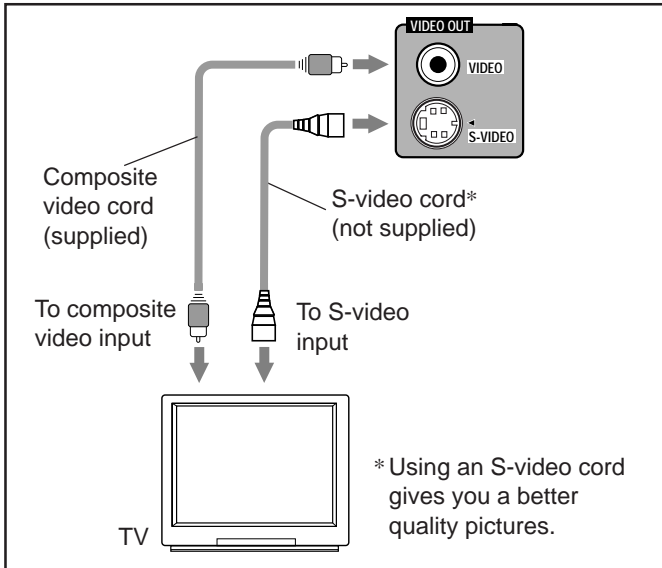


This unit is compatible with the color systems of PAL and NTSC. Check your TV's color system and select the correct one by pressing and holding SET while the unit is turned off (on standby). Each time you press and hold the button, "PAL" and "NTSC" appears alternately.

Adjusting the Voltage Selector

Only for CA-MXDVA9 except Australia:

Before plugging in the unit, set the correct voltage for your area with the voltage selector on the rear of the unit.

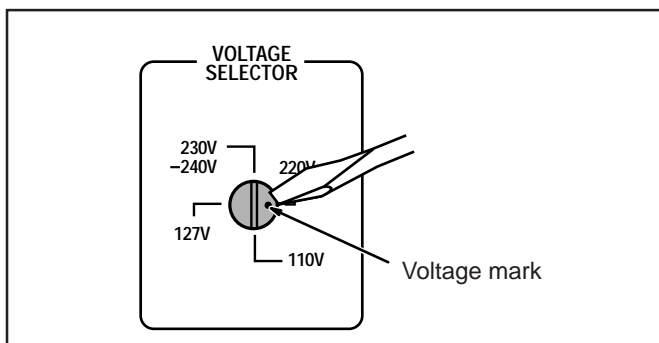

Use a screwdriver to rotate the voltage selector so the voltage number the voltage mark is pointing at is the same as the voltage where you are plugging in the unit. (See the back cover page.)



DO NOT plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.

Now, you can plug the AC power cord.

When connecting the AC power cord into a wall outlet, the unit automatically starts display demonstration.

- **Only for CA-MXDVA9 except Australia:**
If the wall outlet does not match the AC plug, use the supplied AC plug adaptor.

IMPORTANT: Be sure to check all connections to be done before plugging the AC power cord into a wall outlet.

Canceling the Display Demonstration

On the unit ONLY:

To cancel the display demonstration, press CANCEL/DEMO until "DEMO OFF" appears on the display.



When you press other buttons


The display demonstration stops temporarily. It will start automatically again (if no operation is done for 2 minutes) unless you cancel it by pressing CANCEL/DEMO.


To start the display demonstration manually

Press and hold CANCEL/DEMO for more than 1 second (while Ecology Mode is deactivated).


Common Operations


Turning On or Off the Power

To turn on the unit, press STANDBY/ON  so that the STANDBY lamp goes off.

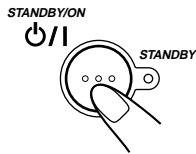

WELCOME

To turn off the unit (on standby), press STANDBY/ON  again so that the STANDBY lamp lights up.

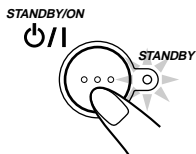

- The clock appears on the display (if Ecology Mode is not activated).

GOODBYE

- A little power is always consumed even while the unit is on standby.

To switch off the power supply completely, unplug the AC power cord from the AC outlet.



When you unplug the AC power cord or if a power failure occurs

The clock is reset to "0:00" right away, while the tuner preset stations (see page 15) will be erased in a few days.

Saving the Power Consumption While on Standby—Ecology Mode

Only for Europe and Australia:

You can save the power consumption only while the unit is turned off (on standby).

To activate the Ecology Mode, press ECO. "ECO" appears and the display illumination (including the display demonstration) disappears from the display.



- Each time you press the button, "ECO" and "NORMAL" appear alternately on the display.

To deactivate the Ecology Mode, press ECO again. "NORMAL" appears and the display illumination appears on the display.



About Ecology Mode

- You can also activate and deactivate Ecology Mode while the unit is on, but it takes effect only when the unit is on standby.
- While Ecology Mode is activated, the display demonstration is canceled temporarily.

Setting the Clock

Before operating the unit any further, first set the clock built in this unit. You can set the clock whether the unit is on or off.

On the unit ONLY:


1 Press CLOCK/TIMER.

The hour digits start flashing on the display.



2 Turn / to adjust the hour, then press SET.

The minute digits start flashing on the display.

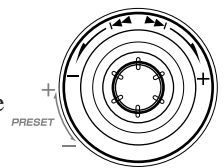

SET



- If you want to correct the hour after pressing SET, press CANCEL/DEMO.



The hour digits start flashing again.

3 Turn / to adjust the minute, then press SET.

CLOCK OK

To check the clock time


Press and hold SET while playing any source.

- Pressing SET, the source indication appears again.

To adjust the clock again

If you have adjusted the clock before, you need to press CLOCK/TIMER repeatedly until the clock setting mode is selected.

- Each time you press the button, the clock/timer setting modes change as follows:

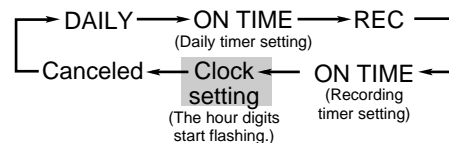

When you unplug the AC power cord or if a power failure occurs

The clock is reset to "0:00" right away. If this happens, set the clock again.

Setting the AM Tuner Interval Spacing

Only for CA-MXDVA9 except Australia:

Some countries space AM stations 9 kHz apart, and some countries use 10 kHz spacing.


- When shipped, the unit is set to 10 kHz interval.

On the unit ONLY:

You can only change the AM tuner interval spacing while tuning into an AM station. (See page 15.)

Press STANDBY/ON  while holding down .

- Each time you press these buttons, the AM tuner interval spacing alternates between 9 kHz and 10 kHz.

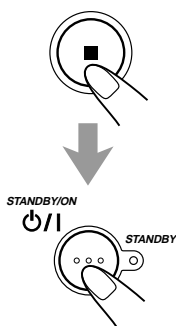


Adjusting the Volume

You can adjust the volume level only while the unit is turned on. The volume level can be adjusted in 32 steps (VOL MIN, VOL 01—VOL 30, and VOL MAX).

Turn **VOLUME +** – clockwise (+) to increase the volume or counterclockwise (–) to decrease it.

VOL 15

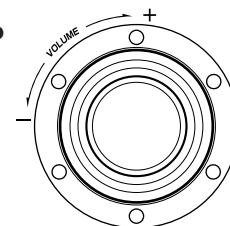

When using the remote control, press VOL + to increase the volume or press VOL – to decrease it.



For private listening

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume before connecting or putting on headphones.


Selecting the Sources




To listen to the FM/AM broadcasts, press FM/AM. (See pages 15 – 17.)

To playback discs, press DVD  (or DVD  on the remote control). (See pages 18 – 30.)

To playback tapes, press TAPE . (See page 31.)

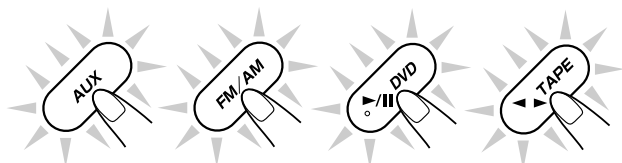To select the external equipment as the source, press AUX.



When you press the play button for a particular source (FM/AM, DVD  (or DVD  on the remote control), TAPE , and AUX), the unit turns on (and the unit starts playing the source if it is ready).



DO NOT turn off (on standby) the unit with the volume set to an extremely high level; otherwise, a sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the unit or start playing any source next time. REMEMBER you cannot adjust the volume level while the unit is off (on standby).

To turn down the volume level temporarily

Press FADE MUTING on the remote control. The volume level gradually decreases to “VOL MIN.”



To restore the sound, press the button again.

 
Adjusting the Front Speaker Output Balance

If the sounds you hear from the front right and left speakers are unequal, you can adjust the speaker output balance.

On the remote control ONLY:

- 1 Press **LEVEL SELECT** until “L” and “R” appear on the display.


Initially the front speakers output balance is set to the center.



L --- * --- R

- 2 Press **LEVEL +** or **–** to adjust the front speaker output balance.

 
- Press LEVEL + to increase the right channel output.
- Press LEVEL – to increase the left channel output.



Reinforcing the Bass Sound

You can select one of the 4 subwoofer levels. This function only affects the playback sound, but does not affect your recording. The subwoofer level can be adjusted in 4 steps—LEVEL 1, LEVEL 2, LEVEL 3, and LEVEL 4 (MAX LEVEL).


Turn **SUBWOOFER LEVEL** + / – clockwise (+) to increase the subwoofer level or counterclockwise (–) to decrease it.

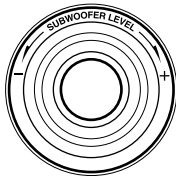

When using the remote control, press **LEVEL SELECT** until “LEVEL” appears.

- Press **LEVEL +** to increase the subwoofer level.
- Press **LEVEL –** to decrease the subwoofer level.

SUBWOOFER indicator flashes when adjusting subwoofer level.

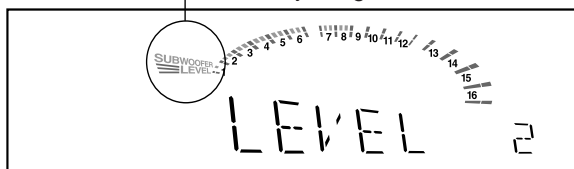


Selecting the Sound Modes


You can select one of the 6 preset sound modes. This function only affects the playback sound, but does not affect your recording.

To select the sound modes, turn **SOUND MODE** until the sound mode you want appears on the display.


When using the remote control, press **SOUND MODE** \wedge or \vee .

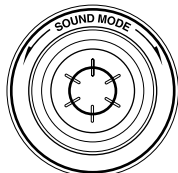

The **SOUND MODE** indicator also lights up on the display.

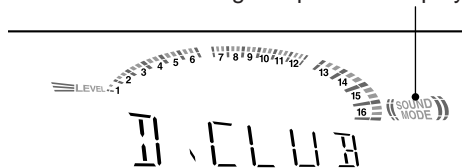

- The sound modes change as follows:

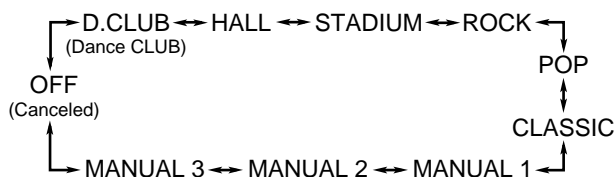

D.CLUB*: Increases resonance and bass.

HALL*: Adds depth and brilliance to the sound.

STADIUM*: Adds clarity and spreads the sound, like in an outdoor stadium.

SEA (Sound Effect Amplifier) modes:

ROCK: Boosts low and high frequency. Good for acoustic music.

POP: Good for vocal music.

CLASSIC: Good for classical music.

Manual modes:


MANUAL 1/2/3:


Your individual mode stored in memory. See “Creating Your Own Sound Modes—Manual Mode” on page 14.

OFF: The sound mode is canceled. The **SOUND MODE** indicator goes off.

- * Surround elements are added to the SEA element to create a being-there feeling in your room.

When one of these modes is selected, the **SOUND MODE** indicator lights up as — 

While one of the SEA modes (including manual modes) without surround elements is selected, the **SOUND MODE** indicator lights up as — 

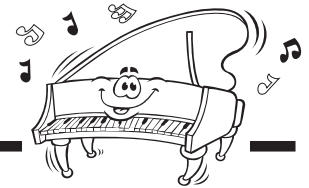

Creating Your Own Sound Modes —Manual Mode


 
You can create SEA patterns to suit your preference. These changed settings can be stored in the MANUAL 1, MANUAL 2, and MANUAL 3 modes.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.


On the unit ONLY:

- 1 Select one of the preset sound modes.
 - If you want to add the surround elements in your SEA pattern, select one of the sound modes (D.CLUB, HALL, or STADIUM) before starting the procedure below. (See “Selecting the Sound Modes” on page 13.)

- 2 Press and hold SET until “SEA CONT” appears on the display.

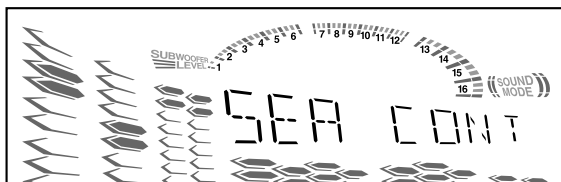



Ex.: When “D.CLUB” is selected as the sound mode.

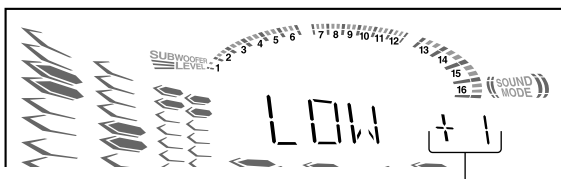


Current level appears.

- 3 Adjust the SEA pattern.


- 1) Turn ◀◀ / ▶▶ to select the frequency range to adjust (LOW, MID or HIGH).
- 2) Press ▶▶ or ◀◀ to adjust the level (–3 to +3) of the selected frequency range.
- 3) Repeat steps 1) and 2) to adjust the level of the other frequency ranges.

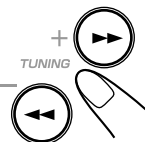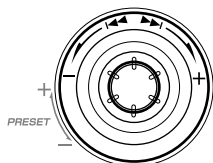



- 4 Press SET again.

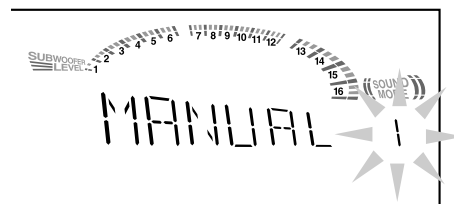

- 5 Turn ◀◀ / ▶▶ to select one of the MANUAL 1, MANUAL 2, and MANUAL 3 modes into which you want to store the SEA pattern.

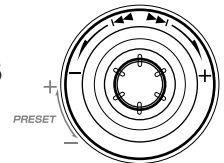

- 6 Press SET.

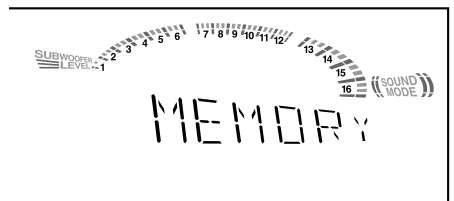 

The SEA pattern you have created is stored into the MANUAL mode selected in step 5.

To use your own sound mode

Select MANUAL 1, MANUAL 2, or MANUAL 3 mode. See “Selecting the Sound Modes” on page 13.



notes When you unplug the AC power cord or if a power failure occurs

The setting will be erased in a few days. If this happens, set the manual sound modes again.

Listening to FM and AM Broadcasts



Tuning into a Station

1 Press FM/AM.

The unit automatically turns on and tunes into the previously received station (either FM or AM).

- Each time you press the button, the band alternates between FM and AM.



2 Start searching for stations.

On the unit:


Press and hold TUNING + or - for more than 1 second.

On the remote control:

Press and hold + (▶▶) or - (◀◀) for more than 1 second.

The unit starts searching for stations and stops when a station of sufficient signal strength is tuned in.

- If a program is broadcast in stereo, the ST (stereo) indicator lights up.

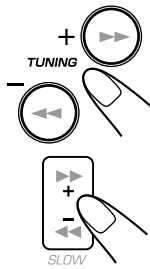

On the unit ONLY:



1 Tune into the station you want to preset.

- See "Tuning into a Station."


2 Press SET.



3 Turn PRESET + / - to select a preset number.

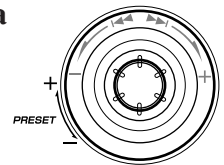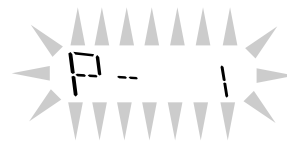

4 Press SET.

 

The tuned station in step 1 is stored in the preset number selected in step 3.

- Storing a new station on a used number erases the previously stored one.

To stop searching, press TUNING + or - (+ ▶▶) or - (◀◀) on the remote control).



When you press TUNING + or - (+ ▶▶) or - (◀◀) on the remote control) briefly and repeatedly

The frequency changes step by step.



When you unplug the AC power cord or if a power failure occurs

The preset stations will be erased in a few days. If this happens, preset the stations again.

To change the FM reception mode

When an FM stereo broadcast is hard to receive or noisy, press FM MODE while holding down SHIFT on the remote control so that the MONO indicator lights up on the display. Reception improves.



To restore the stereo effect, press FM MODE again while holding down SHIFT so that the MONO indicator goes off from the display. In stereo mode, you can hear stereo sounds when a program is broadcasted.

Presetting Stations

You can preset 30 FM and 15 AM stations.

In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction. You can preset the stations you want into memory by following the presetting method.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 2 again.

Tuning into a Preset Station

1 Press FM/AM.

The unit automatically turns on and tunes into the previously received station (either FM or AM).

- Each time you press the button, the band alternates between FM and AM.



2 Select a preset number.

On the unit:

Turn PRESET + / -.

On the remote control:

Press the number buttons.



Ex.: For preset number 5, press 5.

For preset number 15, press +10, then 5.

For preset number 20, press +10, then 10.

For preset number 25, press +10, +10, then 5.

For preset number 30, press +10, +10, then 10.

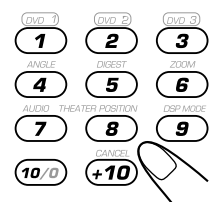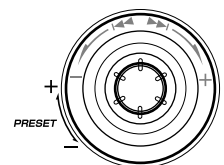

Receiving FM Stations with RDS —Only for CA-MXDVA9R

Continued 

RDS (Radio Data System) allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc.

When tuned to an FM station which provides the RDS service, the RDS indicator lights up on the display.

With the unit, you can receive the following types of RDS signals.

PS (Program Service):

Shows commonly known station names.

PTY (Program Type):

Shows types of broadcast programs.

RT (Radio Text):

Shows text messages the station sends.

EON (Enhanced Other Networks):

Provides the information about the types of the programs sent by other RDS stations.



More about RDS


 
- Some FM stations do not provide RDS signals.
- RDS services vary among FM RDS stations. For details on RDS services in your area, check with local radio stations.
- RDS may not work correctly if the received station is not transmitting the signals properly or if the signal strength is weak.

Changing the RDS Information

You can see RDS information on the display while listening to an FM station.

Press DISPLAY.

- Each time you press the button, the display changes to show the following information:

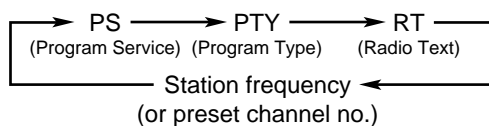

If no PS, PTY, or RT signals are sent by a station “NO PS,” “NO PTY,” or “NO RT” appears in the display.



If the unit takes time to show the RDS information received from a station

“WAIT PS,” “WAIT PTY,” or “WAIT RT” may appear on the display.

Searching for Programs by PTY Codes (PTY Search)

One of the advantages of RDS is that you can locate a particular kind of program by specifying the PTY codes.

- For details on the PTY codes, see “Appendix C—Description of the PTY Codes” on page 49.

 
To search for a program using the PTY codes

REMEMBER you must preset FM RDS stations to use the PTY codes. If not yet done, see page 15.


- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

On the remote control ONLY:


- 1 Press **PTY/EON** while holding down **SHIFT** until “PTY” and “SELECT” alternately appear on the display.



 - Each time you press the buttons, RDS operation mode changes as follows:



- 2 Press **CONTROL +** or **-** until the **PTY** code you want appears on the display.

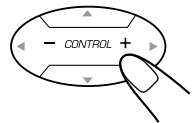

- Each time you press the button, the PTY codes change as follows:

 
NEWS ⇄ AFFAIRS ⇄ INFO ⇄ SPORT ⇄
 EDUCATE ⇄ DRAMA ⇄ CULTURE ⇄
 SCIENCE ⇄ VARIED ⇄ POP M ⇄ ROCK M ⇄
 M.O.R. M ⇄ LIGHT M ⇄ CLASSICS ⇄
 OTHER M ⇄ WEATHER ⇄ FINANCE ⇄
 CHILDREN ⇄ SOCIAL A ⇄ RELIGION ⇄
 PHONE IN ⇄ TRAVEL ⇄ LEISURE ⇄ JAZZ ⇄
 COUNTRY ⇄ NATIONAL ⇄ OLDIES ⇄
 FOLK M ⇄ DOCUMENT ⇄
 (back to the beginning)

- 3 Press **PTY/EON** while holding down **SHIFT** again.

While searching, “SEARCH” and the selected PTY code alternate on the display.


The unit searches 30 preset FM stations, stops when it finds the one you have selected (“FOUND” appears), and tunes in that station.

- If no program is found, “NOT” and “FOUND” appear on the display and the unit returns to the last received station.



To stop searching any time during the process

Press **PTY/EON** while holding down **SHIFT** during search.

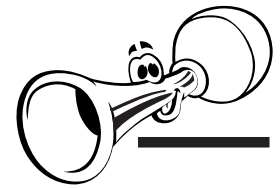

Switching to a Program Type of Your Choice Temporarily

By receiving EON (Enhanced Other Networks) data sent by FM RDS stations, the EON function allows the unit to switch temporarily to a broadcast program of your choice (TA, NEWS, or INFO) from a different station.

- The EON function only works when you are listening to a preset FM RDS stations providing EON data.
- The EON indicator lights while receiving a station with the EON data.

To activate the EON function

 
REMEMBER you must preset FM RDS stations to use the EON function. If not yet done, see page 15.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

On the remote control ONLY:



1 Press PTY/EON while holding down SHIFT until “EON” and “SELECT” alternately appear on the display.

- Each time you press the button, RDS operation mode changes as follows:




2 Press CONTROL + or - until the EON data type you want appears on the display.

The selected EON data type indicator also flashes.

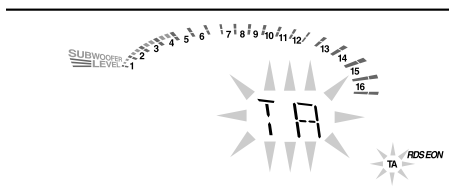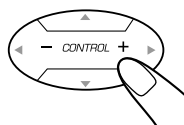

 - Each time you press the button, the EON data types change as follows:



- TA:** Traffic announcement
- NEWS:** News
- INFO:** Program the purpose of which is to impart advice in the widest sense.
- OFF:** The EON function is canceled. The EON data type indicator (TA, NEWS, INFO) goes off.

3 Press PTY/EON while holding down SHIFT again.

The EON data type indicator stops flashing and remains lit.

Now, the EON function is activated. See “How the EON function actually works.”

How the EON function actually works:

CASE 1

If there is no station broadcasting the program you have selected

The unit continues tuning in the current station.



When a station starts broadcasting the program you have selected, the unit automatically switches to the station. The indicator of received PTY code starts flashing.



When the program is over, “EON END” appears on the display, and the unit goes back to the previously tuned station, but the EON function still remains activated.

CASE 2

If there is a station broadcasting the program you have selected

The unit tunes in the program. The indicator of received PTY code starts flashing.



When the program is over, “EON END” appears on the display, and the unit goes back to the previously tuned station, but the EON function still remains activated.

CASE 3

If the FM station you are listening to is broadcasting the program you have selected

The unit continues to receive the station but the indicator of received PTY code starts flashing.



When the program is over, “EON END” appears on the display, and the indicator of received PTY code stops flashing and remains lit, but the EON function still remains activated.









More about the EON function

- The EON data sent from some stations may not be compatible with this unit. In this case, the EON function may not work correctly.
- While listening to a program tuned in by the EON function, the station does not change even if another network station starts broadcasting a program of the same EON data.
- The EON function is canceled when you change the source to disc, TAPE, or AUX, while it is temporarily canceled when you change the source to AM.

Discs you can play

This unit has been designed to play back discs having the marks listed below.

Disc Type	Mark (Logo)	Video Format	Region Code Number*
DVD VIDEO		England: PAL Australia: PAL Others: NTSC	England: 2 Australia: 4 Others: 1 or ALL
			
Video CD			—
Audio CD		—	—
CD-R**		—	—
CD-RW**		—	—

- On some discs, their actual operations may be different from what is explained in this manual.
- The following discs cannot be played back; DVD-AUDIO, DVD-ROM, DVD-RAM, DVD-R, DVD-RW, S-VIDEO CD, CD-ROM, CD-I (CD-I Ready), Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
- Continued use of irregular shape discs (heart-shape, octagonal, etc.) can damage the unit.

* Note on Region Code

DVD players and DVD Video discs have their own Region Code numbers. You can only playback DVD discs recorded with proper video format and region code. Confirm the Region Code shown on the rear of the unit.



** Note on CD-R and CD-RW

 
User-edited CD-Rs (CD-Recordable) and CD-RWs (CD-Rewritable) can be played back only if they are already “finalized.”

- You can play back your original CD-Rs or CD-RWs recorded in music CD format. (However, they may not be played back depending on their characteristics or recording conditions.)
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- Some CD-Rs or CD-RWs may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player’s lens is dirty.
- CD-RWs may require a longer readout time. This is caused by the fact that the reflectance of CD-RWs is lower than for regular CDs.

IMPORTANT:

Before performing any operations for DVD and VCD, make sure of the following.

- Check the connection with the TV.
- Turn on the TV and select the correct input on the TV to view the pictures or on-screen menus/indications on the TV screen.


If “” appears on the screen when pressing a button, the disc cannot accept an operation you have tried to do.

Disc Structure

DVD

A DVD disc consists of **Titles**, and each title may be divided into some **Chapters**.

For example, if a DVD disc contains some movies, each movie may have its own title number, and it may be further divided into some chapters.

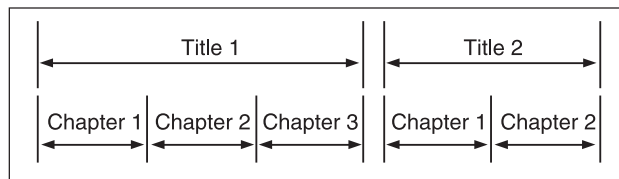

How sounds are recorded on DVD

The digital audio format used for DVD differs among discs and it is written on the package or disc itself.


This unit can only reproduce the sound recorded in the following audio formats:

- **Linear PCM**—This is the same format used for Audio CDs and Video CDs.
- **Dolby Digital**—This is an encoding method for audio signals. By compressing audio signals, it can record up to 5.1 multichannel signals—the right front channel, left front channel, center channel, and right rear channel, left rear channel and LFE signals.
 - While playing back a disc encoded with Dolby Digital on this unit, the DOLBY DIGITAL lamp on the front panel lights up. If it has multichannel signals—5.1ch, Surround mode is automatically activated.
- **MPEG Multichannel**—This is a compression format for PAL/SECAM DVD software. MPEG Multichannel is 5.1ch multi surround using MPEG Audio coding format.

VCD and CD

A VCD or CD disc consists of **Tracks**.

In general, each song has its own track number. (On some discs, each track may also be divided by Indexes.)

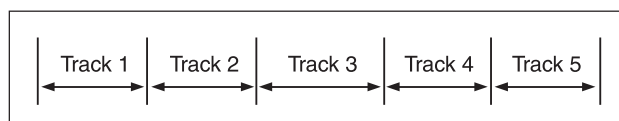




When playing back a VCD with the Playback Control (PBC*) function, you can select what to view using the menu shown on the TV screen. While operating a VCD using the menu, some of the functions such as Time Search may not work.

* A VCD recorded with the PBC function has its own menus, such as a list of the songs of the disc.


DVD Features

Some DVDs contain several multi-angle views, audio languages and subtitles.


When you find the following marks on the DVD or its package, you can select these elements recorded on the DVD.

	Multi-angle views are recorded on the disc. The number inside the mark indicates the total number of the recorded multi-angle views.
	Several audio languages are recorded on the disc. The number inside the mark indicates the total number of the recorded audio languages.
	Subtitles are recorded on the disc. The number inside the mark indicates the total number of the recorded subtitles.

 To check the current settings, press DISPLAY once while playing back a disc. Current disc information appears on the TV screen as follows. And also the current channel information appears on the display by pressing DISPLAY on the unit. (See page 50.)



- If you press the button twice, the disc playing information appears. (See page 21.)

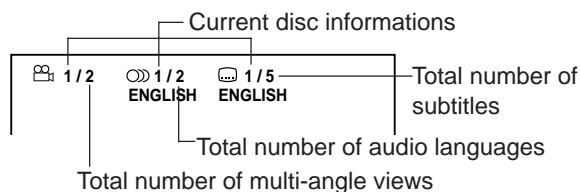

To erase the on-screen indication, press DISPLAY repeatedly until the indications disappear from the TV screen.

 
Selecting the Multi-Angle View

While playing a disc containing multi-angle views, you can view the same scene at different angles.

On the remote control ONLY:




1 Press ANGLE while holding down SHIFT.

The on-screen indication appears on the TV.



2 Press CONTROL + or - to select a desired multi-angle view.

- Each time you press the button, the view angle changes.

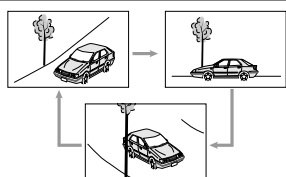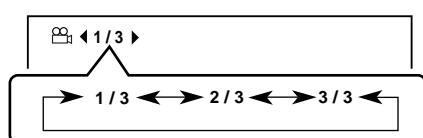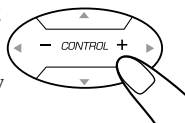

Ex.: When the disc has 3 multi-angle views.

Selecting the Audio Language

 
While playing a disc containing audio languages (sound tracks), you can also select the language (sound) to listen to.

- You can set your favorite audio language as the initial audio language. (See page 37.)

On the remote control ONLY:



1 Press AUDIO while holding down SHIFT.

The on-screen indication appears on the TV.



2 Press CONTROL + or - to select a desired audio language.

- Each time you press the button, the audio language changes.

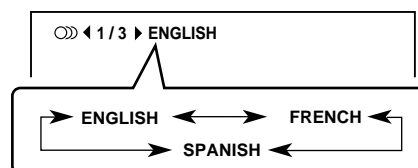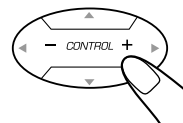

Ex.: When the disc has 3 selections—English, French, and Spanish.



If you press AUDIO while holding SHIFT when playing back a VCD

The on-screen indication changes to “STEREO,” “L” and “R” each time you press the buttons.

Selecting the Subtitle

While playing a disc containing subtitles in different languages, you can select the subtitle to be displayed on the TV screen.

 
- You can set your favorite subtitle language as the initial language shown on the screen. (See page 37.)

On the remote control ONLY:

1 Press SUBTITLE.



The on-screen indication appears on the TV.

- Each time you press the button, the subtitle setting turns on and off.



2 Press CONTROL + or - to select a desired subtitle language.

- Each time you press the button, the subtitle language changes.

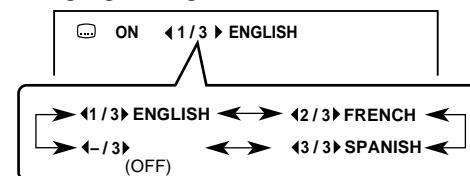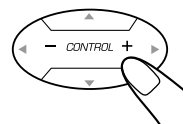


Ex.: When the disc has 3 selections—English, French, Spanish and no subtitle (OFF).

To show no subtitle, select “-.”


This unit cannot accept any disc operations while reading disc contents.

Loading Discs


On the unit ONLY:

1 Press  for the disc tray (DVD1, DVD2, or DVD3) you want to load a disc onto.

The unit automatically turns on and the disc tray comes out.

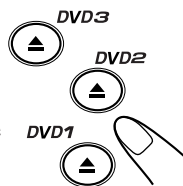


2 Place a disc correctly on the circle of the disc tray, with its label side up.

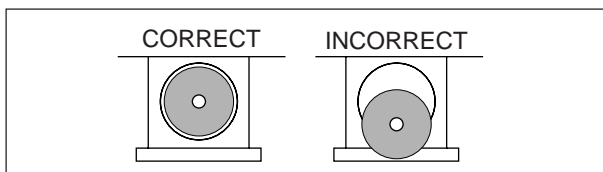

- When using a single disc (8 cm), place it on the inner circle of the disc tray.

3 Press the same  you have pressed in step 1.


The disc tray closes, and the corresponding disc number lamp and disc indicator light up on the display.

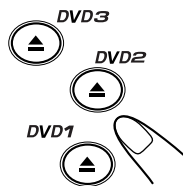

4 Repeat steps 1 to 3 to place other discs.



 
When loading more than one disc continuously

When you press  for the next tray you want to place another disc onto, the first disc tray automatically closes and then the next tray comes out.



About the disc indicators

Each disc indicator corresponds to the disc tray of the same number.

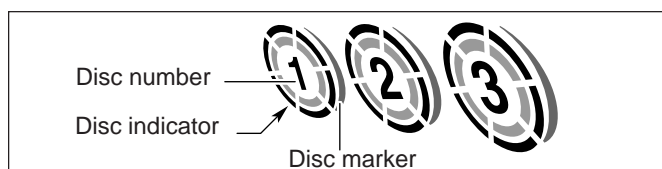

- The disc marker lights up for the disc number you have selected.
- The disc indicator rotates while the corresponding disc is being played.
- The disc indicator goes off when the unit has detected that there is no disc on the corresponding disc tray.



VCD/CD playback sequence during Continuous play


When 3 VCDs or CDs are loaded on the disc trays, they are played in one of the following sequences.

- When DVD1 is pressed : DVD1 ⇒ DVD2 ⇒ DVD3 (then stops)
- When DVD2 is pressed : DVD2 ⇒ DVD3 ⇒ DVD1 (then stops)
- When DVD3 is pressed : DVD3 ⇒ DVD1 ⇒ DVD2 (then stops)
- * When only 2 VCDs or CDs are loaded, they are played in the same order, but the disc tray without a disc is skipped.
- * This function cannot be used for VCD with the PBC function and DVD.

Common Basic Disc Operations

While playing a disc, you can do the following operations.

To exchange discs during playback of another

Press  corresponding to a disc, not playing or selected currently, to eject and exchange the disc.

If you exchange discs during play, the current play will not stop.

To stop play for a moment

Press DVD  (or  on the remote control).

While pausing, the elapsed playing time flashes on the display.

To resume playing, press DVD  again (or press DVD  on the remote control).

DVD Playback

- To play back a VCD or CD see page 22.
- Playback will stop when a disc menu appears on the TV screen. **If a menu appears while playing, see “Menu-Driven Playback—DVD/VCD with PBC Function” on page 24.**

1 Load discs.

2 Select the disc number button you want to play.

 
On the unit:

Press one of the disc number buttons (DVD1, DVD2, or DVD3).



On the remote control:

Press one of the disc number buttons (DVD 1, DVD 2, or DVD 3) while holding down SHIFT.



The unit starts reading the disc contents and “DVD” is shown on the display. Then the total title number appears.


- Playback starts from the first chapter of the first title and the disc number lamp starts flashing.

While playing back a disc encoded with Dolby Digital, the DOLBY DIGITAL lamp on the front panel lights up. If it has multichannel signals—5.1ch, the Surround mode is automatically activated.

While playing back an MPEG Multichannel disc, the Surround mode is automatically activated.

- Using the on-screen menus, you can adjust the speaker settings for 5.1ch Surround mode depending on your room situation. (See page 38.)
- While playing back a multichannel disc, the front left and the front right signals are output when—
—hearing a disc through headphones.
—hearing a disc through AUX OUT jacks.
—recording onto tapes.
- You can also confirm the current channel setting by pressing DISPLAY on the unit. (See page 50.)

Title numbers of the currently playing disc.
(Numbers exceeding 16 are not displayed.)

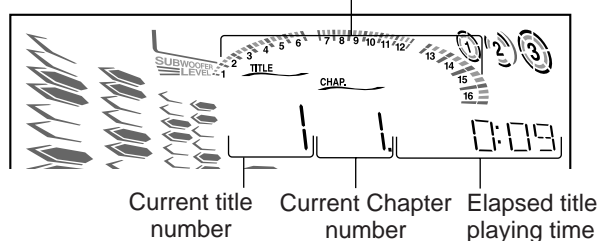

To stop playing, press ■.


- This unit can memorize the stop point of DVD, and when you start playback again by pressing DVD ►/|| (or DVD ► on the remote control), playback starts from the beginning of a chapter previously stopped—Resume play. To use Resume play, you need to turn on the Resume function. (See page 40.)
- To stop completely, press ■ twice.

To remove the disc, press ▲ for the corresponding disc tray.

To go to another chapter

Turn |◀◀/▶▶| during playback (or press |◀◀ or ▶▶| on the remote control).

- |◀◀: Goes back to the beginning of the current or previous chapters.
- ▶▶: Skips to the beginning of the next or succeeding chapters.

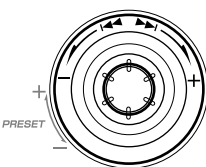

To go to a particular title or chapter directly using the number buttons on the remote control

- Pressing the number buttons before playback allows you to start playing from the title number you want.
- Pressing the number buttons during playback allows you to start playing from the chapter number of the currently playing title you want.

Ex.: To select number 5, press 5.

To select number 10, press 10.

To select number 20, press +10 then 10.

To select number 23, press +10, +10 then 3.

To use Time Search and Chapter Search on the TV screen



- You cannot use this function while using Random play.

On the remote control ONLY:

1 Press PLAY MODE during play.
The play mode screen appears.

2 Press CONTROL + or – to move to “TIME SEARCH” or “CHAP. SEARCH,” then press ENTER.

“GO TO _: _: _” for Time Search or “GO TO CHAPTER = ” for Chapter Search appears on the TV screen.

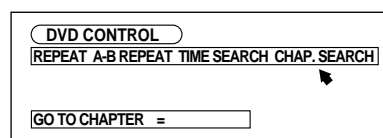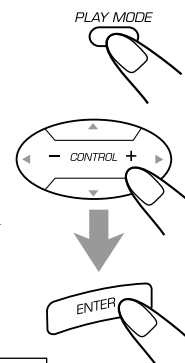

Ex.: When “CHAP. SEARCH” is selected.


3 Enter desired playing time or chapter number by pressing the number buttons.

- You can only use Time Search within a currently playing title.

Ex.: To enter the time of “0:23:45,” press 0, 2, 3, 4 and 5. (Always enter all 5 digits.)

To enter chapter number 23, press 2 and 3.

To enter chapter number 3, press 3.

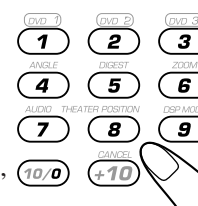

To cancel misentry for Time Search, press CONTROL –. Each time you press the button the last number you entered is erased. (You cannot erase a chapter number.)

4 Press ENTER.

The unit starts playback of the selected point.



 
 
To erase the on-screen indication, press PLAY MODE again.

To show the on-screen indication

You can show the following information on the TV screen while playing back a disc.

To show the on-screen indication, press DISPLAY while playing a disc.

- Each time you press the button, the indication on the TV screen changes as follows:



DISC 3 TITLE 3 CHAP. 2 TIME 1:33:33 BITRATE 3.3 Mbps				
①	②	③	④	⑤
①: Current disc number	②: Current title number	③: Current chapter number	④: Elapsed playing time of the current title	⑤: Transmission rate

VCD/CD Playback

- To play back a DVD see page 20.
- While playing a VCD with the PBC function loaded on the disc trays, the playback will stop when a disc menu appears. **If a menu appears while playing a VCD with PBC function, see “Menu-Driven Playback—DVD/VCD with PBC Function” on page 24.**

1 Load discs.

2 Select the disc number button you want to play.


On the unit:

Press one of the disc number buttons (DVD1, DVD2, or DVD3).



On the remote control:


Press one of the disc number buttons (DVD 1, DVD 2, or DVD 3) while holding down SHIFT.

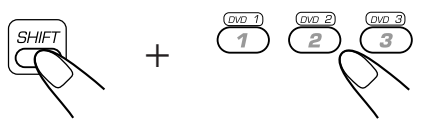

The unit starts reading the disc contents and “VCD” or “CD” is shown on the display. Then the total playing time appears. (When VCD with the PBC function is loaded, only “PBC” appears.)

Playback starts from the first track of the selected disc and the disc number lamp starts flashing.

Track numbers of the currently playing disc. (Numbers exceeding 16 are not displayed.)

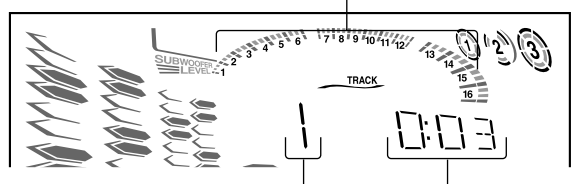

Current track number Elapsed track playing time

To stop playing, press ■.


- This unit can memorize the stop point of VCD, and when you start VCD playback again by pressing DVD ►/|| (or DVD ► on the remote control), playback starts from where it has been stopped—Resume play. When using Resume play on VCD with the PBC function, the playback starts from the earlier point you stop. To use Resume play, you need to turn on the Resume function. (See page 40.)
- To stop completely, press ■ twice.

To remove the disc, press ▲ for the corresponding disc tray.

To go to another track

Turn ◀◀◀ / ▶▶▶ during playback (or press ◀◀◀ or ▶▶▶ on the remote control).

- ◀◀◀: Goes back to the beginning of the current or previous tracks.
- ▶▶▶: Skips to the beginning of the next or succeeding tracks.

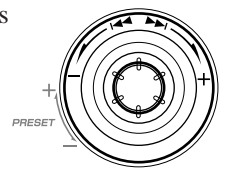

To go to a particular track directly using the number buttons on the remote control


Pressing the number buttons before or during play allows you to start playing from the track number you want.

Ex.: To select number 5, press 5.

To select number 10, press 10.

To select number 20, press +10 then 10.

To select number 23, press +10, +10 then 3.

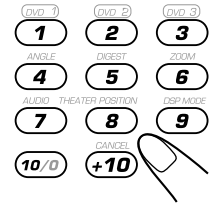

To use Time Search on the TV screen

- You cannot use this function while a VCD with the PBC function is played back.
- You cannot use this function while using Random play.

On the remote control ONLY:

1 Press PLAY MODE during play.


The play mode screen appears.




2 Press CONTROL + or - to move to “TIME SEARCH,” then press ENTER.

“GO TO _:_:” appears on the TV screen.

“GO TO _:_:” appears on the TV screen.

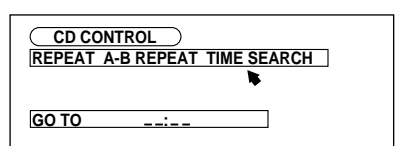


Ex.: When CD is a playing source.

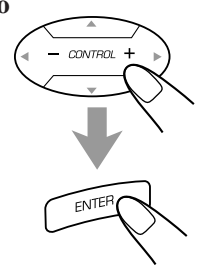

3 Enter desired playing time by pressing the number buttons.


- You can only use Time Search within a currently playing track.
- Ex.: To enter the time of "03:45," press 0, 3, 4 and 5. (Always enter all 4 digits.)

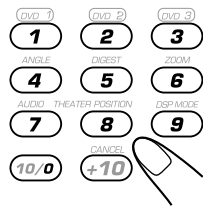

To cancel misentry for Time Search, press CONTROL -. Each time you press the button the last number you entered is erased.

4 Press ENTER.

 The unit starts playback from the selected point.




To erase the on-screen indication, press PLAY MODE again.

To show the on-screen indication

You can show the following information on the TV screen while playing back a disc.

 To show the on-screen indication, press DISPLAY while playing a disc.



Ex.: When VCD with the PBC function is a playing source.			
①	Current disc number		
②	Current track number		
③	Elapsed playing time of the current track		
④	<ul style="list-style-type: none"> "PBC" is shown when a VCD with the PBC function is played. "EACH" is shown when a VCD without the PBC function or a CD is played. 		

To erase the on-screen indication, press DISPLAY again.


Searching for a Particular Point

You can search for a particular portion while playing a disc—Forward/Reverse Search.

Forward Search

To fast-forward the chapter or track, press ►► while playing a disc.


- Each time you press the button, the search speed changes as follows:

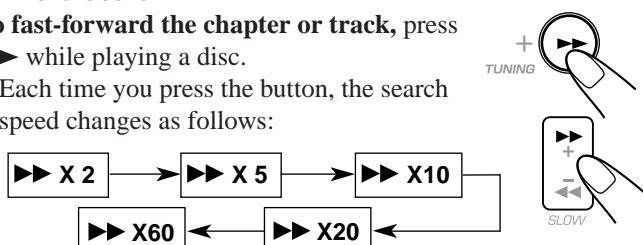

Reverse Search

To fast-reverse the chapter or track, press ◀◀ while playing a disc.

- Each time you press the button, the search speed changes as follows:

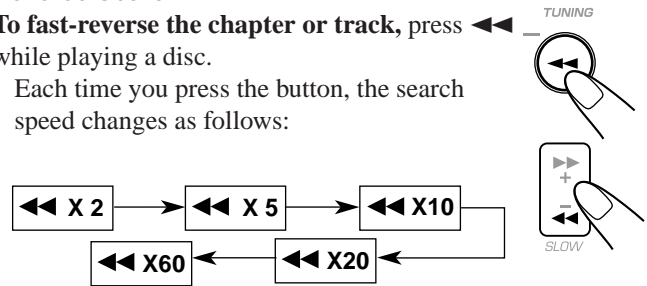

To go back to normal play, press DVD ►/|| (or DVD ► on the remote control).

No sound comes out during Forward/Reverse Search.


Prohibiting Disc Ejection—Tray Lock

You can prohibit disc ejection from the unit and can lock discs.

- This operation is possible only when the source is the DVD/VCD/CD player.

On the unit ONLY:

To prohibit disc ejection, press ▲ for any disc tray while holding down ■. (If there is any disc tray opened, close it first.)

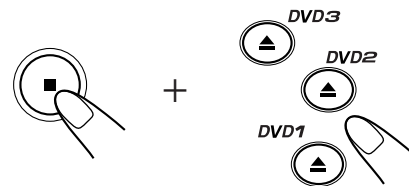

"LOCKED" appears for a while, and the loaded discs are locked.

To cancel the prohibition and unlock the discs, press ▲ for any disc tray while holding down ■.

"UNLOCKED" appears for a while, and the loaded discs are unlocked.



If you try to eject discs

"LOCKED" appears to inform you that the Tray Lock is in use.

Menu-Driven Playback—DVD/VCD with PBC Function

Menu Operations

Menu-driven playback is possible while playing back a DVD with menu-driven features or a VCD with the Playback Control (PBC) function.

■ When playing a DVD

 
DVD discs generally have their own menus or title lists. A menu usually contains various information about the disc and playback selections. On the other hand, a title list usually contains titles of movies and of songs recorded.

On the remote control ONLY:

1 Press MENU or TITLE.

A menu or title list appears on the TV screen.


- On some discs, a menu or title list will automatically appear without pressing MENU or TITLE.



2 Press Cursor (▲ / ▼ / ► / ◀) to select a desired item on the menu or on the title list, then press SELECT.

The unit starts playback of the selected item.

- On some discs, you can also select items by pressing the number buttons corresponding to the item numbers listed.

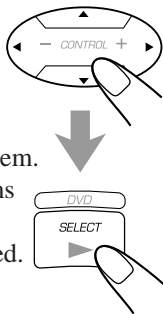

To erase the menu or title list

Press MENU or TITLE.

- If “⊘” appears on the screen when pressing TITLE in step 1, the disc does not have a menu listing titles.
- If “⊘” appears on the screen when pressing MENU in step 1, the disc does not have a menu. You can use MENU only while playing a disc.

■ When playing a VCD

When a VCD with the Playback Control function (PBC) is detected, the PBC indicator lights up on the display. The PBC function allows you to operate the VCD using menus. When you start playback, a menu automatically appears on the TV screen.

- A menu may be a list of items, divided screens, or some moving pictures. (See “PBC operation concept” on the right.)

To return to the previous menu

Press RETURN.

To cancel the PBC function

Press ■ to stop playback, then press MENU.

- Each time you press MENU, the PBC function turns on and off alternately.

To restore the PBC function, press REPEAT on the unit repeatedly until the REPEAT indicator goes off from the display. Then press DVD 1, DVD 2 or DVD 3 to play a VCD with the PBC function.

- If you press DVD ►/■ on the unit or SELECT on the remote control when the PBC indicator on the display is turned off and a VCD disc stops playing, the VCD will be played back with the PBC function off.



While playing back a VCD with the PBC function


A-B Repeat is only usable as the playing back mode.



Even though you turn on the PBC function while a VCD is played back.

The PBC function remains off.

PBC operation concept

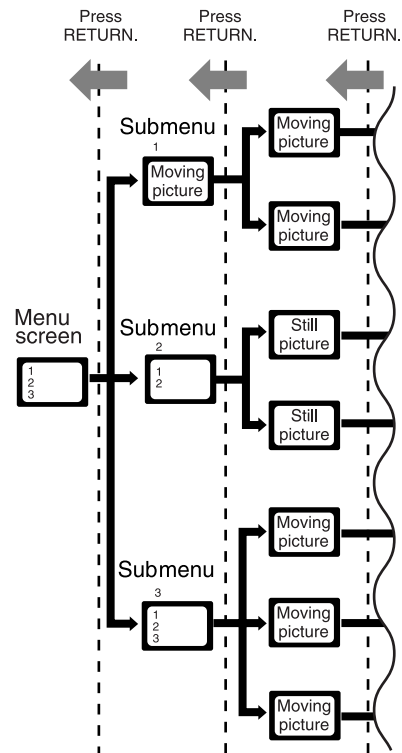

Selecting Playback Modes

This unit cannot accept any disc operations while reading disc contents.

Programming the Playing Order of the Titles and Tracks—Program Play

You can arrange the order in which the titles (for DVD) and tracks (for VCD and CD) play before you start playing. **You can program up to 18 steps.**

- When you use Program play for a VCD with the PBC function activated, the PBC function is turned off.
- Program play cannot be used on some DVD discs.

On the unit:

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 2 again.

1 Load discs.

- If the current playing source is not the DVD/VCD/CD player press DVD ►/||, then ■ before going to the next step.

2 Press PROGRAM so that “PROGRAM” appears on the display.




The PRGM (program) indicator also lights up on the display.




- If a program has been stored in memory, the program is called up.

3 Press one of the disc number buttons (DVD1, DVD2 or DVD3) you want to program.

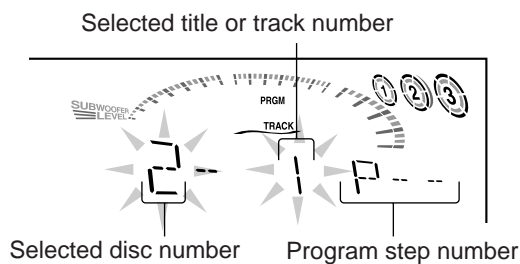

Ex.: When VCD or CD is a source disc.

4 Turn ◀◀ / ▶▶ to select a title or track number, then press SET.

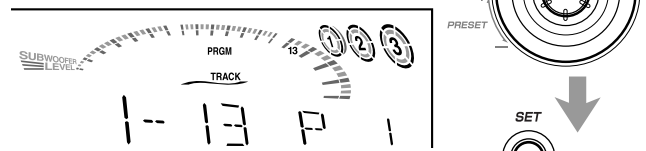

Ex.: When VCD or CD is a source disc.

5 To program another title or track from the same disc, repeat step 4.

To program another title or track from a different disc, repeat steps 3 and 4.

- Each time you select a title or track, the program item is added up to 18 steps.

6 Press DVD ►/||.

The titles and tracks are played in the order you have programmed.



To stop playing, press ■.

To go to the next title or track, turn ◀◀ / ▶▶ to the right.



Even if you turn ◀◀ / ▶▶ to the left it just goes back to the beginning of the current title or track, but cannot go back to the previous titles or tracks.

To modify the program

You can modify the program before or after playing.

To erase the last step, press CANCEL/DEMO.

- Each time you press the button, the last programmed step is erased from the program.



To add steps in the program before playing, simply select the disc number and title/track numbers you want to add by following steps 3 to 5 of the programming procedure.

To erase program completely, press ■ before or after playing.

The program you have made will be also erased,

- when you remove all the discs, and then press DVD ►/||.
- when you unplug the AC power cord.
- when a power failure occurs.

To exit from Program play mode, press PROGRAM after playing. The PRGM (program) indicator goes off. The program you have made is memorized.

To check the programmed contents

Press PLAY MODE on the remote control. The programmed contents appear on the TV screen.

To erase the play mode screen, press PLAY MODE again.

On the remote control:

1 Load discs.

- If the current playing source is not the DVD/VCD/CD player press DVD ►, then ■ before going to the next step.


2 Press PLAY MODE.

The play mode screen appears on the TV.

3 Press CONTROL + or - to move to "PROGRAM," then press ENTER.

The program screen appears.

- If a program has been stored in memory, the program is called up.
- You cannot select "PROGRAM" during Random play.

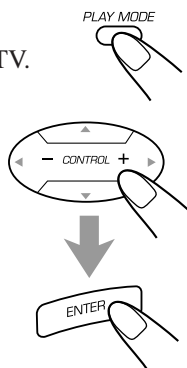

6 To program another title or track from the same disc, repeat step 5.

To program another title or track from a different disc, repeat steps 4 and 5.


- Each time you select a title or track, the program item is added up to 18 steps.

REPEAT	PROGRAM	RANDOM
1 1-18	2 2-17	3 3-16
7 1-12	8 2-11	9 3-10
13 1-6	14 2-5	15 3-4
4 1-15	5 2-14	6 3-13
10 1-9	11 2-8	12 3-7
16 1-3	17 2-2	18 1-1

REPEAT	PROGRAM	RANDOM
1	2	3
7	8	9
13	14	15
4	5	6
10	11	12
16	17	18

4 Press one of the disc number buttons (DVD 1, DVD 2 or DVD 3) you want to program while holding down SHIFT.

 The selected disc number is shown on the TV screen.



7 Press DVD ►.

The titles and tracks are played in the order you have programmed.



To stop playing, press ■.

To go to the next title or track, press ►►.



Even if you press ◀◀

It just goes back to the beginning of the current title or track, but cannot go back to the previous titles or tracks.

To modify the program

You can modify the program before or after playing.

To erase the last step, press CANCEL while holding down SHIFT.

- Each time you press the button, the last programmed step is erased from the program.

To add steps in the program before play, simply select the disc and title/track numbers you want to add by following steps 4 to 6 of the programming procedure.

To erase program completely, press CLEAR before or after playing.

The program you have made will be also erased,

- when you remove all the discs, and then press DVD ►.
- when you unplug the AC power cord.
- when a power failure occurs.

To exit from Program play mode, press PROGRAM on the unit after playing. The PRGM (program) indicator goes off. The program you have made is memorized.

To check the programmed contents

Press PLAY MODE. The programmed contents appear on the TV screen.

To erase the play mode screen, press PLAY MODE. The program you have made is memorized.

5 Press the number buttons to enter a title or track number you want to program.

 

The selected title or track number is shown on the TV screen.

Ex.: To select number 5, press 5.

To select number 10, press 10.

To select number 20, press +10 then 10.

To select number 23, press +10, +10 then 3.

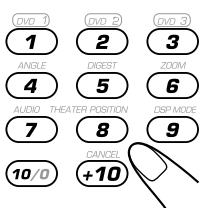

Playing at Random—Random Play

The titles and tracks of all loaded discs are played at random.

- When you use Random play for a VCD with the PBC function activated, the PBC function is turned off.
- Random Play cannot be used on some DVD discs.


On the unit:

1 Load discs.

- If the current playing source is not the DVD/VCD/CD player, press DVD ►/||, then ■ before going to the next step.

2 Press RANDOM so that “RANDOM” appears on the display.

The RANDOM indicator also lights up on the display.

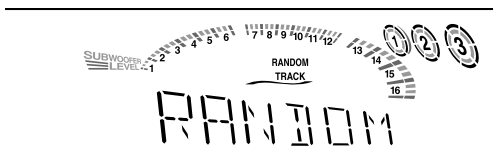

3 Press one of the disc number buttons (DVD1, DVD2 or DVD3) you want to play first.

The titles and tracks are played from the selected disc at random.

 
Random play ends when all the titles and tracks on the all loaded discs are played once.



On the remote control:


1 Load discs.

2 Press one of the disc number buttons (DVD 1, DVD 2 or DVD 3) while holding down SHIFT to select the disc you want to play, then ■.



3 Press PLAY MODE.

 The play mode screen appears on the TV.




4 Press CONTROL + or - to move to “RANDOM,” then press ENTER.

The titles and tracks are played from the selected disc at random.

Random play ends when all the titles and tracks on the all loaded discs are played once.

- You cannot select “RANDOM” during Program play.

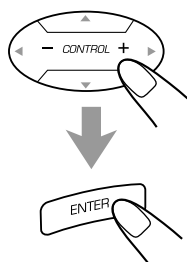

To stop playing, press ■.

- Random play also stops when the disc tray currently played is opened.

To exit from Random play mode when finished, press RANDOM on the unit. Or perform steps 3 and 4 on the remote control. Each time you press ENTER, the Random play turns on and off.

To skip the currently playing title or track, turn ◀◀ / ▶▶ to the right (or press ▶▶ on the remote control).



Even if you turn ◀◀ / ▶▶ to the left or press ◀◀ on the remote control

It just goes back to the beginning of the current title or track, but cannot go back to the previous titles or tracks.

To erase the play mode screen, press PLAY MODE.

Repeating Playback

Repeat Play

You can repeat a title, chapter or track.

- For DVD, to use Repeat play with Program play or Random play, select Repeat play after starting Program play or Random play.
- Repeat play cannot be used on some DVD discs.
- You can only use Repeat play on VCD with the PBC function deactivated. When you turn on the PBC function after Repeat play, press REPEAT repeatedly until the REPEAT indicators go off from the display.

On the remote control:

 

1 Press PLAY MODE before or during play.

The play mode screen appears on the TV.



2 Press CONTROL + or - to move to “REPEAT.”

- When DVD is a playing source, “REPEAT” cannot be selected while playing.

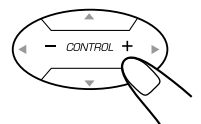


Ex.: When the playback is stopped.

3 Press ENTER repeatedly to select Repeat play mode you want.

- Each time you press the button, the Repeat play mode indication on the TV screen changes as follows:




When DVD is a playing source.

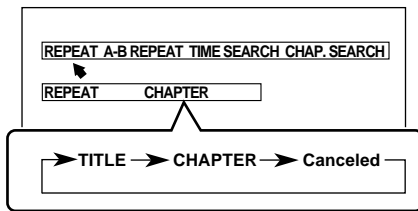

- **TITLE:** Current title will be repeated.
- **CHAPTER:** Current chapter will be repeated.

When CD or VCD is a playing source.

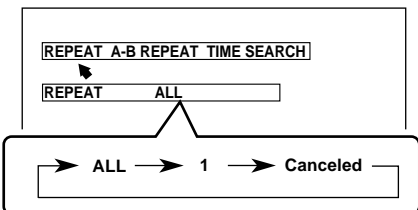

- **ALL:** All tracks on all discs will be repeated.
- **1:** Current track will be repeated.

To cancel Repeat play, perform steps 1 and 2, then press ENTER repeatedly until the REPEAT indications disappear from the TV screen.

To erase the play mode screen, press PLAY MODE.

On the unit:

 
Press REPEAT before or during play.

The REPEAT indicators also light up on the display.

- Each time you press the button, Repeat play mode changes as follows:




For DVD



- REPEAT:** Current chapter will be repeated.
- REPEAT 1:** Current title will be repeated.

 For VCD and CD



- REPEAT ALL:** All tracks on all discs will be repeated.
- REPEAT 1:** Current track will be repeated.

To cancel Repeat play, press REPEAT repeatedly until the REPEAT indicators go off from the display.

A-B Repeat

While playing, you can also select a portion you want to repeat.

- During Program play, Random play or Repeat play A-B Repeat play cannot be selected.
- A-B Repeat is not performed between different chapters or different titles on a DVD.


 
On the remote control ONLY:

1 Press PLAY MODE during play.

The play mode screen appears on the TV.




2 Press CONTROL + or - to move to "A-B REPEAT."

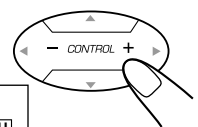

Ex.: When DVD is a playing source.

3 Press ENTER at the starting point you want to repeat (point A).

 
The A-B Repeat indication appears on the TV screen.



4 Press ENTER again at the end point you want to repeat (point B).

A-B Repeat begins.

The unit automatically locates point A and starts repeated playback of the portion between points A and B.

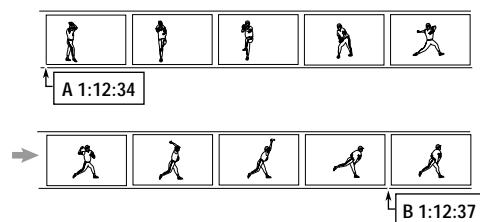

To cancel A-B Repeat play, press ENTER. A-B Repeat play is canceled and normal playback starts.

To erase the play mode screen, press PLAY MODE.

DVD/VCD Special Effect Playback

Still Picture/Frame-by-Frame Playback


You can still a picture and advance the still picture frame by frame.

Still picture

On the remote control ONLY:

Press II once during play.

A still picture appears on the TV screen.

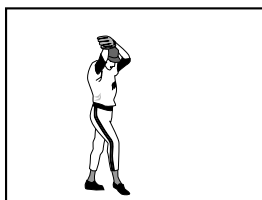

Frame-by-frame playback

On the remote control ONLY:

Press II repeatedly during play to advance the picture frame by frame.

- Each time you press the button, the picture advances frame by frame.



To go back to normal play, press DVD ►.

Viewing Continuous Still Pictures—Strobe

You can view 9 continuous still pictures.

On the remote control ONLY:

1 Press II during play at the point you want to view continuous still pictures.

A still picture appears on the TV screen.

2 Press and hold STROBE for more than 1 second.

9 continuous still pictures appear on the TV screen.

- Pressing STROBE again, next 9 still pictures appear.



To cancel strobe play, press and hold STROBE. A still picture appears. Then press DVD ► to go back to normal play.



If you press and hold STROBE for more than 1 second during normal playback

9 pictures also appear but advance at normal speed.

Slow Motion Playback—Slow

You can enjoy slow motion playback.

- Reverse slow motion playback cannot be used on some VCDs.

On the remote control ONLY:

 
1 Press II once during play.

A still picture appears on the TV screen.





2 Press SLOW + or – to start slow motion playback.

- Each time you press SLOW +, forward slow motion speed changes as follows:



  - Each time you press SLOW –, reverse slow motion speed changes as follows:



No sound is heard during slow motion playback.

To go back to normal play, press DVD ►.

Zoom in the Picture—Zoom


 
You can zoom a picture by 2 times.

On the remote control ONLY:

1 Press ZOOM while holding down SHIFT during play.

“ZOOM” appears on the TV screen.


- Each time you press ZOOM while holding down SHIFT, the picture is zoomed in and out alternately.

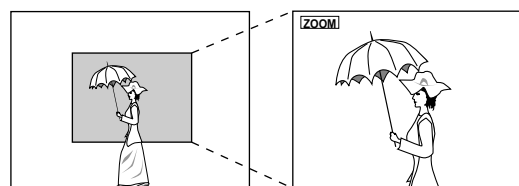


Normal

Zoom

2 Press Cursor (▲ / ▼ / ► / ◀) to select the position you want to zoom in.

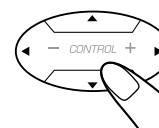

To go back to normal play, press ZOOM while holding down SHIFT.

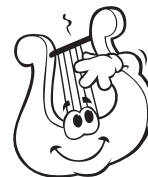

Viewing the Desired Chapters/Tracks—Digest

You can view 9 opening scenes of chapters or tracks at a time and select desired scene from those displayed on the TV screen directly.

 
- You cannot use this function on VCD with the PBC function.

On the remote control ONLY:

1 Press DIGEST while holding down SHIFT when the disc is stopped playing or during play back.


The opening scene appears in sequence (up to 9 pictures at a time) on the TV screen.

- When DVD is a source disc and stopped, the opening scene of each title appears.
- When DVD is a source disc and played back, the opening scene of each chapter in the current title appears.
- When VCD without the PBC function is loaded, the opening scene of each track appears.




2 Press Cursor (▲ / ▼ / ► / ◀) to move to a scene you want to start play back.

- If there are more than 9 scenes, you can see next 9 scenes. To go to the next screen press NEXT, and to go back to the previous screen press PREV.

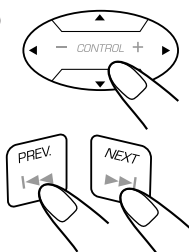

3 Press SELECT or ENTER.

Playback starts from the selected scene.

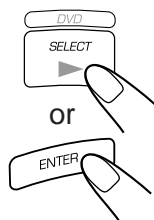

Selecting the Picture Brightness—Theater Position

You can select picture brightness from among three options according to the source program, lighting condition of the room and/or personal preference.

On the unit:

 

Press THEATER POSITION during play.

On the remote control:

Press THEATER POSITION while holding down SHIFT during play.

The theater position indication appears on the TV screen.

- Each time you press THEATER POSITION, the theater position changes as follows. The picture brightness becomes darker as the number increases.

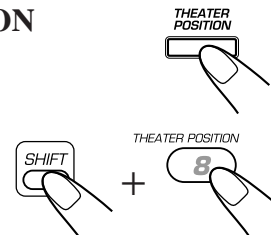

To cancel the function, select “THEATER OFF.”


Playing Back Tapes




You can play back type I, type II, and type IV tapes without changing any settings.

Playing Back a Tape

- 1 Press EJECT (▲) for the deck you want to use.**

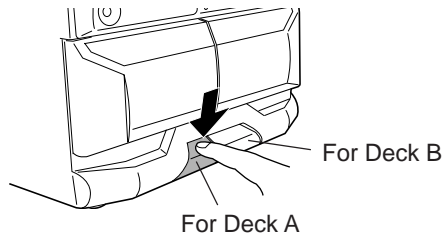


- 2 Put a cassette in with the exposed part of the tape down.**

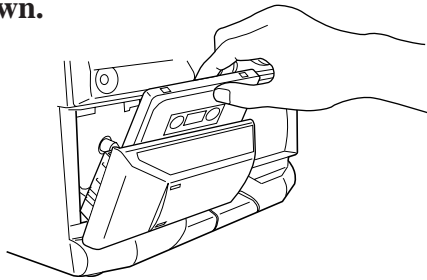

- 3 Close the cassette holder gently.**

If you put cassettes in both decks A and B, the last deck you have closed is selected.

 To operate the other deck, press TAPE A/B (or press TAPE A/B while holding SHIFT on the remote control).



- 4 Press TAPE ◀▶.**

The tape play starts and the tape direction indicator (▶ or ◀) on the display starts flashing slowly to indicate the tape running direction.

- Each time you press the button, the tape direction changes.
 - ▶ : plays the front side.
 - ◀ : plays the reverse side.
- If no cassette is inserted, “NO TAPE” appears on the display.



When the tape plays to the end, the deck automatically stops if the Reverse Mode is off. (See “To play both sides repeatedly—Reverse Mode.”)

To stop playing, press ■.

To fast-wind to the right or to the left, press ▶▶ or ◀◀ while the tape is not running.

The tape direction indicator (▶ or ◀) starts flashing quickly on the display.

To remove the cassette, press ▲ EJECT for deck A or EJECT ▲ for deck B.

To play both sides repeatedly—Reverse Mode

Reverse Mode works for both decks at the same time.

When it is in use, the tape automatically reverses at the end of a side and the unit starts playing for the other side of the tape, and repeats the same process.

To use Reverse Mode, press REVERSE MODE so that the Reverse Mode indicator on the display lights up like—(↔).



To cancel Reverse Mode, press the button again so that the Reverse Mode indicator on the display lights up like—↔.



When Reverse Mode is on with cassettes in both decks A and B

After the reverse (◀) side of the tape finishes playing, the tape in the other deck starts playing.


Locating the Beginning of a Song—Music Scan

You can use Music Scan to locate the beginning of a song. Music Scan searches for blank portions that usually separate recorded songs, then plays the next song.

To find the beginning of the current song

During play, press ▶▶ or ◀◀ in the **opposite direction** to the tape play.

The tape direction indicator of the opposite direction to the tape play starts flashing slowly.

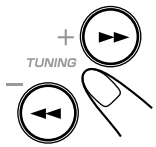


Searching stops automatically at the beginning of the current song, and the current song starts automatically.

To find the beginning of the next song

During play, press ▶▶ or ◀◀ in the **same direction** as the tape play.

The tape direction indicator of the same direction as the tape play starts flashing slowly and quickly alternately.

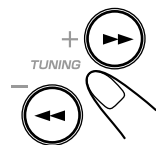

Searching stops automatically at the beginning of the next song, and the next song starts automatically.



Music Scan works by detecting a 4-second long blank between each song, so it will not work well in the following cases

- No blank at the beginning of a song.
- Noise (often caused by much use or poor quality dubbing) which fills the blank.
- Long, very soft passages or pauses in a song.



The use of the C-120 or thinner tape is not recommended, since characteristic deterioration may occur and this tape easily jams in the pinch-rollers and the capstans.

Using DSP Surround Mode



In order to reproduce a more acoustic sound field in your listening room while playing any source, you can use following DSP Surround modes.

- DSP Surround mode can be also used for a disc encoded with Dolby Digital 5.1ch and with MPEG Multichannel.

You can select one of the following DSP Surround modes according to your preference.

S (Small) THEATER:	Reproduces the sound field of a small theater (where the seating capacity about 300).
L (Large) THEATER:	Reproduces the sound field of a large theater (where the seating capacity about 1,000).
LIVECLUB:	Gives the feeling of a live music club with a low ceiling.
PAVILION:	Gives the spacious feeling of a pavilion with a high ceiling.
CHURCH:	Gives the spacious feeling of a majestic church with a high ceiling.

Activating and Adjusting the DSP Surround Mode

You can use the DSP Surround mode for any source you like.

 
On the remote control:

Only when using the remote control, you can adjust the delay time of the surround speakers.

1 Press DSP MODE, while holding down SHIFT, to select a desired DSP Surround mode.



- Each time you press the button, the DSP Surround mode changes as follows:





- When one of the DSP Surround modes is activated, the SURROUND lamp on the unit lights up.

2 Press LEVEL SELECT repeatedly until “DELAY” appears on the display.



3 Press LEVEL + / – to adjust the delay time.

 - Each time you press the button, the delay time changes as follows:

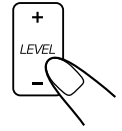

As the number increases, the delay time increases so that you can obtain much larger sound field.


- This setting does not affect the delay time setting of the “SPEAKER SETTING.” (See page 38.)

To cancel the DSP Surround mode, select “OFF” in step 1 so that the SURROUND lamp goes off.


On the unit:

When using the buttons on the unit, you can activate the DSP Surround modes, but cannot make delay time adjustment.

Press DSP SURROUND > or < to select a desired DSP Surround mode.

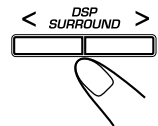

 - Each time you press the button, the DSP Surround mode changes as follows:



- When one of the DSP Surround modes is activated, the SURROUND lamp on the unit lights up.

To cancel the DSP Surround mode, select “OFF” so that the SURROUND lamp goes off.



When you use one of sound modes with surround elements—D.CLUB, HALL, STADIUM (see page 13)

You can set these sound modes together with the DSP Surround modes, but the surround elements of these sound modes are changed to the DSP Surround mode.

Recording

IMPORTANT:

 
- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic embodied therein.
- The recording level is automatically set correctly, so it is not affected by the VOLUME, the SUBWOOFER LEVEL, the SOUND MODE, and the DSP Surround controls. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.
- If recordings you have made have excessive noise or static, the unit may be too close to a TV. Increase the distance between the TV and the unit.
- You can use type I tape for recording.

To protect your recording

Cassettes have two small tabs on the top to protect from unexpected erasure or re-recording.

To protect your recording, remove these tabs.

To re-record on a protected tape, cover the holes with adhesive tape.




To keep the best recording and playback sound quality

If the heads, capstans, and pinch rollers of the cassette decks become dirty, the following will occur:

- Impaired sound quality
- Discontinuous sound
- Fading
- Incomplete erasure
- Difficulty in recording

To clean the heads, capstans, and pinch rollers

Use a cotton swab moistened with alcohol.

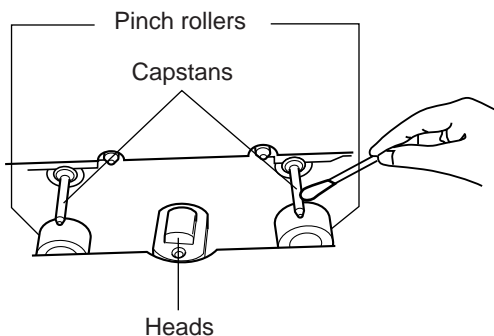


To demagnetize the heads

Turn off the unit, and use a head demagnetizer (available at electronics and audio shops).

Recording a Tape on Deck B

On the unit ONLY:

1 Press EJECT ▲ for the deck B.

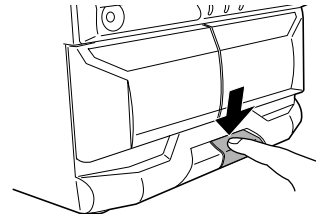

2 Put a recordable cassette into deck B.

3 Close the cassette holder gently.

4 Start playing the source—FM, AM (MW/LW), DVD/VCD/CD player, deck A, or auxiliary equipment connected to AUX jacks.

- When the source is VCD or CD, you can also use VCD/CD Direct Recording (see page 34) and Auto Edit Recording (see page 35).
- When the source is deck A, you can also use the dubbing method. (See “Dubbing Tapes” on page 34.)

5 Check the tape direction of deck B.

- If the tape direction is not correct, press TAPE ◀▶ twice then ■ to change the tape direction.

6 Press REC START/STOP.

The REC (recording) indicator lights up on the display and recording starts.

- If no cassette is inserted, “NO TAPE” appears on the display. If a protected tape is inserted, “NO REC” appears on the display.



 
To stop recording immediately, press ■.

To remove the cassette, press EJECT ▲ for deck B.

To record on both sides—Reverse Mode

Press REVERSE MODE so that the Reverse Mode indicator lights up like—(↔).

- When using the Reverse Mode for recording, start recording in the forward (▶) direction first. Otherwise, recording will stop when recording is done only on one side (reverse) of the tape.




To cancel Reverse Mode, press the button again so that the Reverse Mode indicator lights up like—(↔).

Dubbing Tapes

You can record from one tape to another.

On the unit ONLY:

1 Press TAPE ◀▶, then ■.

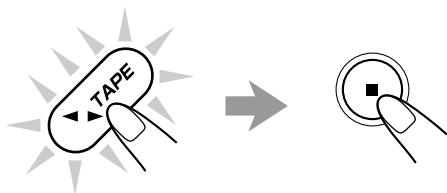

2 Put the source cassette in deck A, and a recordable cassette in deck B.

- Put the cassettes in both decks so that the tapes will run in the forward (▶) direction.

3 Press DUBBING.

The **REC** (recording) indicator lights up on the display and dubbing starts.



To stop dubbing, press ■ so that both decks (A and B) stop.

To record on both sides—Reverse Mode

Press REVERSE MODE so that the Reverse Mode indicator lights up like—(↔).



To cancel Reverse Mode, press the button again so that the Reverse Mode indicator lights up like—→.

VCD/CD Direct Recording

You can easily record sound of a VCD without the PBC function or CD onto a tape.

- You can also record the tracks in order you have made the program.
- This function cannot be used for recording DVDs.

On the unit ONLY:

1 Put a recordable cassette into deck B.

2 Load discs with the label side up.

3 Press one of the disc number buttons (DVD1, DVD2, or DVD3) to select the disc, then ■.



4 Press CD REC START.

“CD REC” appears, and the **REC** (recording) indicator lights up on the display.

Deck B starts recording and the DVD/VCD/CD player starts playing.

When the recording is done, “CD REC FINISHED” appears on the display, and the DVD/VCD/CD player and deck B stop.



To stop recording, press REC START/STOP or ■, so that a 4-second blank portion is created on the recording tape. (Remember a 4-second blank is important when using Music Scan—see page 31.)



To record on both sides—Reverse Mode

Press REVERSE MODE so that the Reverse Mode indicator lights up like—(↔).



- When using the Reverse Mode for VCD/CD Direct Recording, start recording in the forward (▶) direction first. When the tape reaches its end while recording a song in the forward direction (▶), the last song will be re-recorded at the beginning of the reverse side (◀).

If you start recording on the reverse side (◀), recording will stop when recording is done only on one side (reverse) of the tape.

To cancel Reverse Mode, press the button again so that the Reverse Mode indicator lights up like—→.



Auto Edit Recording


By using Auto Edit Recording, you can record disc tracks to fit the tape. Auto Edit Recording makes a program by selecting disc tracks in numerical order. However, to prevent the end of the last track on the front side from being cut off, the last track is selected so as to fit on the remaining tape length.

- This function cannot be used for recording DVD and VCD.


On the unit ONLY:

1 Load discs with the label side up.

2 Press EDIT.

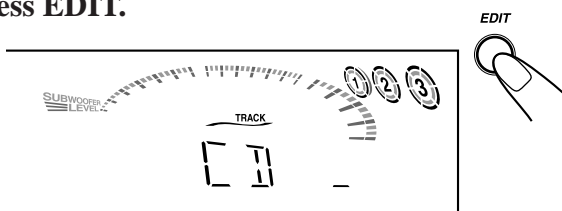

3 Press the disc number button (DVD1, DVD2, or DVD3) for the disc you want to record from.

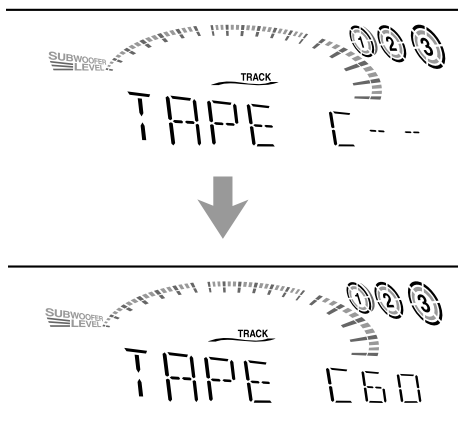

The optimum tape length for the disc appears.


To change the tape length manually

If the tape length selected is not satisfactory, you can change the tape length by turning |◀◀ / ▶▶|.


You can select the tape length among the following — 40, 46, 50, 54, 60, 64, 70, 74, 80, 84, and 90.

4 Press SET.

 - Each time you press the button, the tracks to be recorded on the front side (“SIDE-A”) and on the reverse side (“SIDE-B”) alternate.




Tracks to be recorded on the reverse side (SIDE-B) appear.

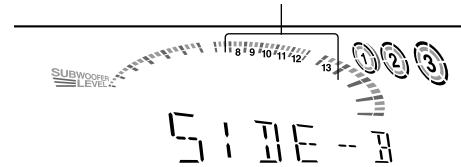

5 Put a recordable cassette of appropriate length into deck B.

6 Press REVERSE MODE so that the Reverse Mode indicator lights up like (↔).

 - Without turning on the Reverse Mode (↔), recording will stop when the front side of the tape is recorded.



7 Press CD REC START.

“TAPE SIDE-A STAND-BY” appears, and the REC (recording) indicator lights up on the display.

Deck B starts recording then, and about 10 seconds later, the DVD/VCD/CD player starts playing.

When the recording is done, “CD REC FINISHED” appears on the display, and the DVD/VCD/CD player and deck B stop.

- If a tape has not been rewound, deck B will rewind the tape before it starts recording.
- A 10-second blank portion is automatically created at the beginning of each side of the tape.



To stop recording, press REC START/STOP or ■, so that a 4-second blank portion is created on the recording tape. (Remember a 4-second blank is important when using Music Scan—see page 31.)


 

To cancel Auto Edit Recording

Press CANCEL/DEMO or ■ before or after recording.

Using the on-screen menus, you can store the initial selection for subtitle languages and audio languages (sound) for DVD playback as well as other settings.


- The on-screen menu disappears if no operation is done for five minutes.

Buttons you use to operate on-screen menus (on the remote control)


	<ul style="list-style-type: none"> • Press to show or erase the on-screen menu.
	<ul style="list-style-type: none"> • Press to select the item.
	<ul style="list-style-type: none"> • Press to enter into sub-menu. • Press to enter your selection.

On-screen menus


- **LANGUAGE menu (see page 37)**

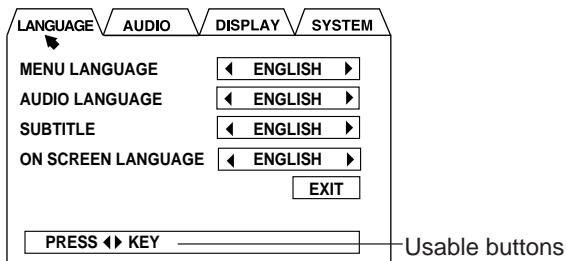


- **AUDIO menu (see page 37)**

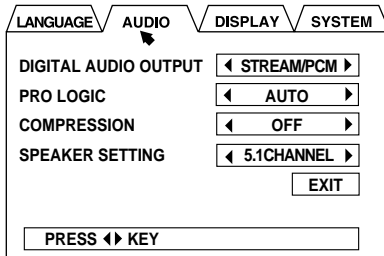

- **DISPLAY menu (see page 39)**

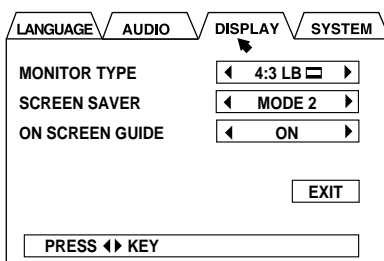

- **SYSTEM menu (see page 40)**

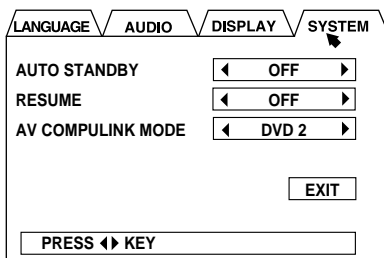

Basic Procedure

The on-screen menu appears only when the selected source is DVD or VCD on the DVD/VCD/CD player and the disc is not played back.


On the remote control ONLY:

1 Press CHOICE.

LANGUAGE menu appears.

2 Press Cursor ► or ◀ to move to the menu you want—LANGUAGE, AUDIO, DISPLAY, or SYSTEM.


Selected item changes its color to green.

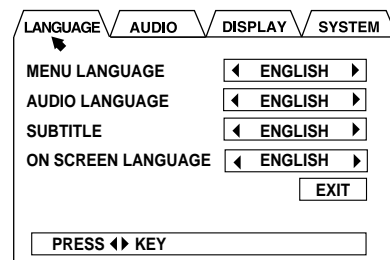

Ex.: When selecting LANGUAGE menu.

3 Press Cursor ▼ or ▲ to move to an item you want to set.

Selected item changes its color to green.

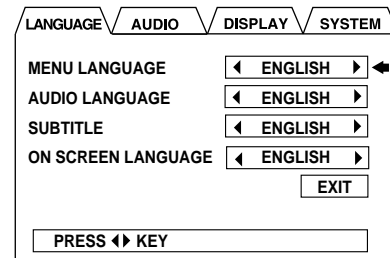

Ex.: When selecting "MENU LANGUAGE."

4 Press Cursor ► or ◀ to select a proper setting you want.

- When selecting "EXPERT" for "SPEAKER SETTING" on AUDIO menu, press ENTER. (See page 38.)

5 To set the other items on the same menu, repeat steps 3 and 4.

To set the other items on the different menus, repeat steps 2 to 4.


6 When finished, press Cursor ▼ to move to "EXIT," then press ENTER.

The on-screen menu disappears.

To exit from the on-screen menu any time during the above procedure, press CHOICE. The settings you have done by that time will be stored.

Changing the Initial Language Settings

On LANGUAGE menu, you can select the following initial languages.

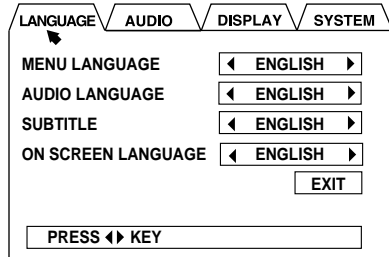


- **MENU LANGUAGE** : Select the DVD menu language.
Selectable languages—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (Language code: see page 51.)
- **AUDIO LANGUAGE** : Select the initial language for audio sound language.
Selectable languages—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (Language code: see page 51.)
- **SUBTITLE** : Select the initial language for subtitles.
Selectable languages—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (Language code: see page 51.)
- **ON SCREEN LANGUAGE** :
Select the language for the on-screen menus and indications.
Selectable languages:
—ENGLISH, DEUTSCH (German), FRANCAIS (French) for England
—ENGLISH, ESPAÑOL (Spanish), 中国語 (Chinese) for Australia
—ENGLISH, ESPAÑOL (Spanish), FRANCAIS (French) for others

NOTICE: The original language will be selected as the initial language regardless of your setting in the following cases.

- If the language you have selected is not recorded on the disc.
- If the disc is programmed to be played back in the original language.

Changing the Various Audio Settings

On AUDIO menu, you can change the following sound settings.

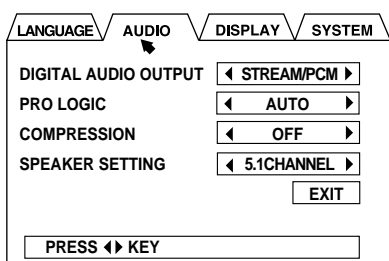

• DIGITAL AUDIO OUTPUT :

Set the output signal type through the OPTICAL DIGITAL OUTPUT terminal. (For the output signal types, see page 49.)

- Select “**STREAM/PCM**” when connecting an amplifier or a decoder compatible with DTS, Dolby Digital and MPEG Multichannel.
- Select “**PCM ONLY**” when connecting a digital recording device such as an MD recorder, DAT deck, etc.
- Select “**DOLBY DIGITAL/PCM**” when connecting an amplifier or a decoder compatible only with Dolby Digital.

• PRO LOGIC :

Set the output signal type.

- Select “**AUTO**” to output original signals recorded in discs.
- Select “**ON**” to automatically decode into Pro Logic format. You cannot use this setting for a DVD with Linear PCM.
- Select “**OFF**” to down mix multichannel source to the front left and the front right.
By selecting “**OFF**,” you can enjoy full range stereo sound when using headphones, hearing through AUX OUT jacks, and recording.
- The PRO LOGIC lamp on the front panel lights up when—
—setting “**PRO LOGIC**” to “**ON**” when playing back any disc except Dolby Digital 5.1ch and MPEG Multichannel discs.
—setting “**PRO LOGIC**” to “**AUTO**” when playing back a Dolby Surround Pro Logic disc.

When playing back a CD, set this item to “**AUTO**” or “**OFF**.” You cannot show the on-screen menu when CD is the playing source. Show the on-screen menu by selecting a DVD or VCD as a playing source or remaining the disc tray opened, and change the setting.

• COMPRESSION :

Compress the dynamic range (difference between the maximum and minimum sound levels) while playing a source encoded with Dolby Digital. This is useful when listening at a low volume level.

- Select “**ON**” to apply dynamic compression.
- Select “**OFF**” not to apply dynamic compression (full dynamic range recorded on the original disc.)


• SPEAKER SETTING :

Set the speaker’s output level and delay time according to your speaker setting in your listening room. (See page 38.)

- Select “**5.1CHANNEL**” if all the speakers are located at the same distance from the listening position.
- Select “**EXPERT**” if you cannot locate all the speakers at the same distance from the listening position. Select “**EXPERT**” to enter EXPERT SPEAKER SETTING menu, then press ENTER.


More about "SPEAKER SETTING"

The following example shows the ideal speaker locations for surround reproduction in your listening room.

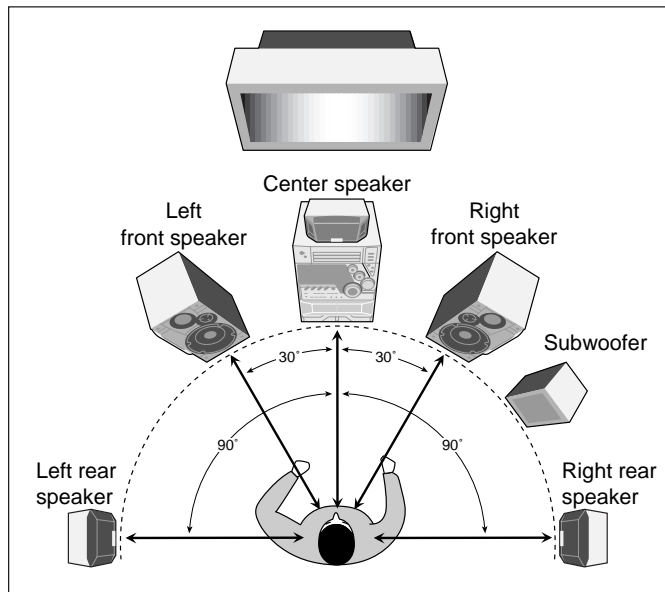

If you can locate the speakers as the above example, you can select "5.1CHANNEL" for your speaker setting.

If you can NOT do as above, select "EXPERT," then press ENTER. EXPERT SPEAKER SETTING menu appears and you can adjust the output level and delay time for the center and rear speakers.

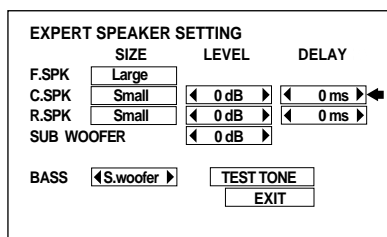

- You cannot adjust the speaker size (SIZE) settings.

On EXPERT SPEAKER SETTING menu, you can set the following:

- C.SPK-LEVEL:** Adjust the output level for the center speaker. (See page 39.)
- R.SPK-LEVEL:** Adjust the output level for the rear speakers. (See page 39.)
- SUB WOOFER-LEVEL:** Adjust the output level for the subwoofer. (See page 39.)
- C.SPK-DELAY:** Adjust the delay time for the center speaker. (See the right.)
- R.SPK-DELAY:** Adjust the delay time for the rear speakers. (See the right.)
- BASS:** Select the speaker for bass output. (See page 39.)


"EXPERT" adjustment procedure

■ Adjusting the delay time for the center and rear speakers

You can adjust the delay time of the sounds from the center speaker and from the rear speakers, comparing to that of the sound from the front speakers.

If the distance to the center speaker and/or rear speakers from your listening position is almost the same as that to the front speakers, select "0 ms" (the default setting for "5.1CHANNEL" settings).

- 1 msec increase (or decrease) in delay time corresponds to 1 foot (30 cm) increase (or decrease) in distance.

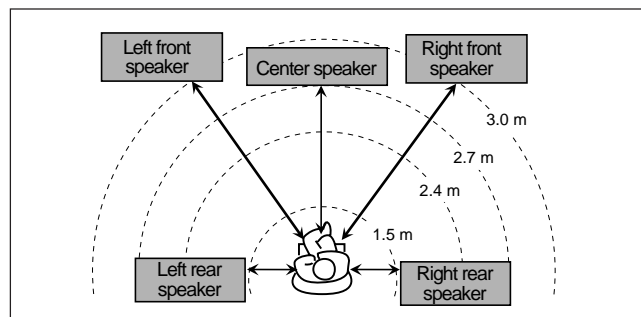

Ex.: In this case, set "C.SPK-DELAY" to "-4 ms" and "R.SPK-DELAY" to "-5 ms."

1 Display EXPERT SPEAKER SETTING menu.

- See page 36.

2 Press Cursor (▲ / ▼ / ▶ / ◀) to move ◀ to "C.SPK-DELAY," then press ENTER.

3 Press Cursor ▶ or ◀ to select "-4 ms," then press ENTER.

- Adjustable range for the center speaker delay time is from "-5 ms" to "0 ms."

4 Press Cursor ▼ or ▲ to move ◀ to "R.SPK-DELAY," then press ENTER.

5 Press Cursor ▶ or ◀ to select "-5 ms," then press ENTER.

- Adjustable delay time for rear speakers is "-5 ms," "-10 ms" and "-15 ms."

Now you can also adjust the speaker output level and select the speaker for the bass output. (See page 39.)

6 When finished, press Cursor (▲ / ▼ / ▶ / ◀) to move ◀ to "EXIT," then press ENTER.

EXPERT SPEAKER SETTING menu disappears.

■ Adjusting the center and rear speaker output levels

You can adjust the speaker output level for the center speaker and rear speakers.

You can adjust the output level while listening to the test tone.

- Make adjustments so that the sound level of the selected speaker is set at the same level as that of the front speakers.
- To output test tone properly, turn off the sound mode and the DSP Surround mode before entering on-screen menu.

1 Display EXPERT SPEAKER SETTING menu.

- See page 36.

2 Press Cursor (▲ / ▼ / ► / ◀) to move ◀ to “TEST TONE,” then press ENTER.

“TEST TONE” changes its color to green and test tone comes out of in the following sequence—left front speaker, center speaker, right front speaker, right rear speaker, and left rear speaker.

- Test tone is output only when the tray loaded with a DVD is selected.

3 Press Cursor (▲ / ▼ / ► / ◀) to move ◀ to “C.SPK–LEVEL” or “R.SPK–LEVEL,” then press ENTER.

4 Press Cursor ► or ◀ to adjust the output level, then press ENTER.

- You can adjust the output level from “–6 dB” to “+6 dB.”

5 Repeat steps 3 and 4 to adjust the other speaker output level.

6 Press Cursor (▲ / ▼ / ► / ◀) to select “TEST TONE,” then press ENTER.

Test tone stops.

7 When finished, press Cursor (▲ / ▼ / ► / ◀) to move ◀ to “EXIT,” then press ENTER.

EXPERT SPEAKER SETTING menu disappears.

■ Selecting the speaker for bass output

You can select the speaker for bass output according to your preference.

1 Display EXPERT SPEAKER SETTING menu.

- See page 36.

2 Press Cursor (▲ / ▼ / ► / ◀) to move ◀ to “BASS,” then press ENTER.

3 Press Cursor ► or ◀ to select your desired setting.

- **L/R** : to output the bass signals through the subwoofers built-in the supplied front speakers.
- **S.woofer** : to output the bass signals through the subwoofer connected to the SUB-WOOFER 5.1ch OUT jack.

4 When finished, press Cursor (▲ / ▼ / ► / ◀) to move ◀ to “EXIT,” then press ENTER.

EXPERT SPEAKER SETTING menu disappears.

■ Adjusting the subwoofer output levels

You can adjust the output level according to your preference.

1 Display EXPERT SPEAKER SETTING menu.

- See page 36.

2 Press Cursor (▲ / ▼ / ► / ◀) to move ◀ to “SUB WOOFER,” then press ENTER.

- You can adjust the output level from “–6 dB” to “+6 dB.”


3 Press Cursor ► or ◀ to adjust the output level, then press ENTER.

4 When finished, press Cursor (▲ / ▼ / ► / ◀) to move ◀ to “EXIT,” then press ENTER.

EXPERT SPEAKER SETTING menu disappears.

Changing the Display Settings

On DISPLAY menu, you can change the following display settings.

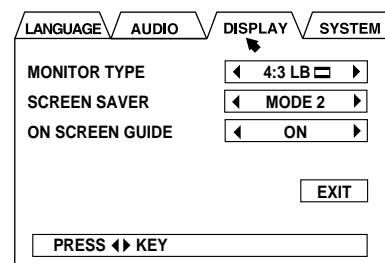

• MONITOR TYPE :

Set the monitor type to use while playing back a DVD recorded with 16:9 wide screen video signal.

Selectable types—4:3 LB , 16:9 WIDE, 4:3 PS
(See page 40.)

• SCREEN SAVER :

Select the screen saver to prevent a TV monitor from burning out.

- Select “MODE 1” to activate the screen saver by making the TV screen dark.
- Select “MODE 2” to activate the screen saver by showing the original screen-saver.
- Select “OFF” to deactivate this function.

When “MODE 1” or “MODE 2” is selected, screen saver functions if still (static) picture is shown for more than 5 minutes.


• ON SCREEN GUIDE :

By watching the on-screen indications shown on the TV screen, you can confirm what you are doing while operating the DVD player.

- Select “ON” to show the on-screen indications.
- Select “OFF” to deactivate this function.




■ Monitor types

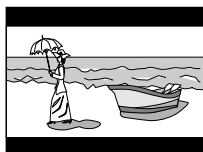


- **4:3 LB (Letter Box)** : Select this when viewing on TV whose aspect ratio is 4:3.

While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

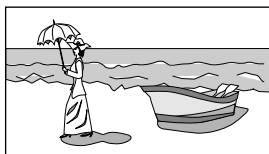

- **16:9 WIDE**: Select this when viewing on TV whose aspect ratio is 16:9.

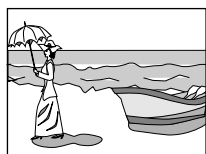


- **4:3 PS (Pan Scan)** : Select this when viewing on TV whose aspect ratio is 4:3.

While viewing a wide screen picture, the black bars do not appear, however, the left and right edge sides of the pictures will not be shown on the screen.

- **Even if “4:3 PS ” is selected**, the screen size may become “4:3 LB ” while playing some DVDs. This depends on how the DVD is programed and recorded.
- **If a disc (or some portions of the disc) is recorded with the video signals of 4:3 aspect ratio**, this setting does not take effect. The pictures are displayed with full 4:3 aspect ratio or with 4:3 Letter Box.

Changing the System Settings

On SYSTEM menu, you can change the following settings.

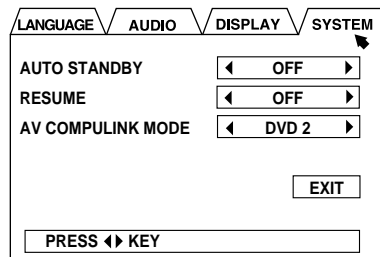

- **AUTO STANDBY** : You can turn off (into standby) the unit automatically.
 - Select “**30**” to turn off the unit automatically if no operation is done for 30 minutes.
 - Select “**60**” to turn off the unit automatically if no operation is done for 60 minutes.
 - Select “**OFF**” to deactivate this function.

- **RESUME** : This unit can memorize the stop-point where DVD or VCD playback stops. When the playback is selected again, it starts from where it has been stopped—Resume play.
 - Select “**ON**” to activate Resume play.
 - Select “**OFF**” to deactivate Resume play. Playback always starts from the beginning.

- **AV COMPULINK MODE** : When connecting this unit to a JVC's TV with the AV COMPULINK remote control system, select the proper setting.
 - Select “**DVD 1**” when connecting this unit to the COMPONENT VIDEO or INPUT-2 terminals on a TV.
 - Select “**DVD 2**” when connecting this unit to the INPUT-1 terminals on a TV.
 - Select “**DVD 3**” when connecting this unit to the INPUT-2 terminals on a TV.

* For AV COMPU LINK control system, see page 46.

Using the Parental Lock



Setting the Parental Lock Level

Using this function, you can restrict playback of DVD containing violent scenes (and those not suitable for your family members).

- This function is only possible for the DVDs containing such rating level information (Level 1 to Level 8).



On the remote control ONLY:

Before setting the parental lock, make sure that no disc is loaded on the currently selected tray.

1 Press ENTER while holding down ■.

PARENTAL LOCK screen appears.

- When you set the parental lock for the first time, ◀ points “Country Code.” (Go to step 3.)
- When you change the parental lock settings, ◀ points “PASSWORD.”

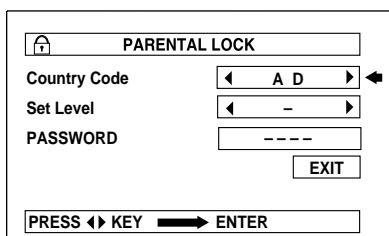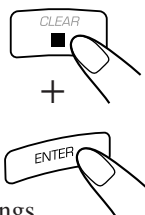


Initial PARENTAL LOCK screen

2 Press the number buttons (0 – 9) to enter the current password (4 digits), then press ENTER.

- ◀ moves to “Country Code.”
- If you enter a wrong password, “WRONG! RETRY...” appears. Enter correct password again.


3 Press Cursor ▶ or ◀ to select a proper country code, then press ENTER.

- ◀ moves to “Set Level.”
- For each country code, see pages 52 and 53.

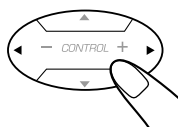

4 Press Cursor ▶ or ◀ to select a parental lock level, then press ENTER.

 - ◀ moves to “PASSWORD.”
- Each time you press the button, the parental lock level changes as follows. Discs rated higher than the selected level are restricted.



- If you do not want to make any restriction, select “-.”

5 Press the number buttons (0 – 9) to enter new password (4 digits), then press ENTER.

- ◀ moves to “EXIT.”

6 Press ENTER.

The parental lock level is set and PARENTAL LOCK screen disappears from the TV.




To exit from PARENTAL LOCK screen any time during the above procedure, press ENTER while holding down ■.



If you do not enter new password The setting you have done is not stored.

Unlocking the Parental Lock Temporarily


Some discs cannot be played back at all when the parental lock is set. If you insert such a disc and try to play, the following PARENTAL LOCK screen appears on the TV. You can unlock the parental lock setting temporarily on this screen.

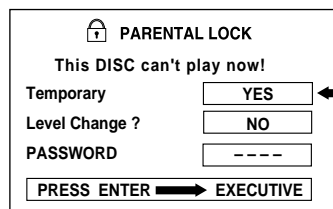

On the remote control ONLY:

1 Press Cursor ▲ or ▼ to select “YES,” then press ENTER.

- ◀ moves to “PASSWORD.”
- If you do not unlock the parental lock (do not see the loaded DVD), move ◀ to “NO” for “Level Change ?.” PARENTAL LOCK screen disappears.

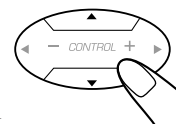


2 Press the number buttons (0 – 9) to enter the current password (4 digits).

- If you enter a wrong password, “WRONG! RETRY...” appears. Enter correct password again.

3 Press ENTER.

 The parental lock is temporarily unlocked and PARENTAL LOCK screen disappears.



If you enter wrong password 3 times, “WRONG! CAN’T CHANGE!” appears on the screen. ◀ moves to “EXIT” and Cursor ▲ and ▼ do not work. When you forget your password, enter “8888.”

There are three timers available—Daily Timer, Recording Timer, and Sleep Timer.

Before using the timers, you need to set the clock built in the unit. (See page 11.)

Using Daily Timer

With Daily Timer, you can wake to your favorite music or radio program. You can set the timer whether the unit is on or off (on standby).

How Daily Timer actually works

The unit automatically turns on, set the volume level to the preset level, and starts playing the specified source when the on-time comes (the ☉ indicator continues flashing while the timer is operating). Then, when the off-time comes (“OFF” flashes just before the off-time), the unit automatically turns off (on standby).

The Daily timer works everyday automatically. If you do not want to use the Daily timer, turn off the Daily timer. (See “To turn off or on Daily Timer after its setting is done” on the next page.) The timer setting remains in memory until you change it.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.
- To correct a misentry while setting the timer, press CANCEL/DEMO.


Before you start...

- *When using a DVD or VCD as the source to play—*
 - Make sure that a TV is set to turn on at the setting time and the correct input mode is selected.
 - Make sure there is a disc on the selected disc number tray.
- *When using a CD as the source to play—*
 - Make sure there is a disc on the selected disc number tray.
- *When using a tape as the source to play—*
 - Make sure that a tape is in the deck whose deck indicator (A or B) is lit on the display.
 - Make sure that the tape direction is correct.
- *When using tuner as the source to play—*
 - Set the preset stations.
- *When using the external component as the source to play—*
 - Set the timer equipped on the external component at the same time.


On the unit ONLY:

- 1 Press **CLOCK/TIMER** repeatedly until “DAILY” appears on the display.

☉ indicator lights up and DAILY (Daily Timer) indicator also starts flashing on the display.

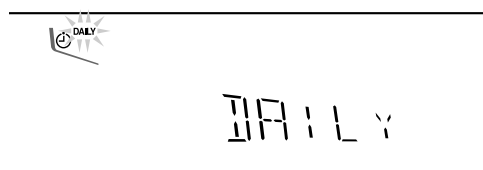

- Each time you press the button, the timer setting modes change as follows:

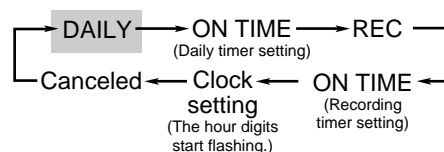


- 2 Press **CLOCK/TIMER** again.

“ON TIME” appears for 2 seconds on the display, then the unit enters on-time setting mode.




- 3 Set the on-time you want the unit to turn on at.

- 1) Turn ◀◀ / ▶▶ to set the hour, then press SET.
 - 2) Turn ◀◀ / ▶▶ to set the minute, then press SET.
- “OFF TIME” appears for 2 seconds on the display, then the unit enters off-time setting mode.

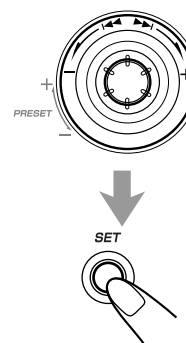


- 4 Set the off-time you want the unit to turn off (on standby) at.

- 1) Turn ◀◀ / ▶▶ to set the hour, then press SET.
 - 2) Turn ◀◀ / ▶▶ to set the minute, then press SET.
- The unit enters source selecting mode.

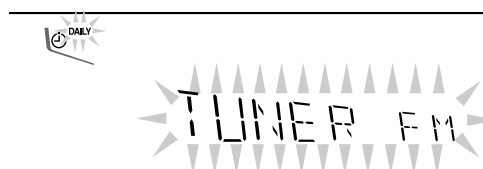

5 Turn **◀◀ / ▶▶** to select the source to play, then press **SET**.

 - The source changes as follows:



TUNER FM: tunes into a specified preset FM station.

→ Go to step 6.

TUNER AM: tunes into a specified preset AM station.

→ Go to step 6.

DISC- - -: plays a disc from a specified title or track of a specified disc. → Go to step 6.

TAPE: plays a tape in deck A or B.

→ Go to step 7.

AUX: plays an external source. → Go to step 7.

6 When selecting “TUNER FM” or “TUNER AM”

Turn **◀◀ / ▶▶** to select the preset station number, then press **SET**.

The unit enters volume setting mode.

When selecting “DISC- - -”


 
1) Turn **◀◀ / ▶▶** to select the disc number, then press **SET**.

2) Turn **◀◀ / ▶▶** to set the title or track number, then press **SET**.

The unit enters volume setting mode.

7 Turn **◀◀ / ▶▶** to set the volume level.


- The volume level changes as follows:

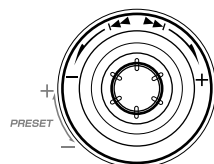


- If you select “VOL - -,” the volume is set to the last level when the unit has been turned off.

8 Press **SET** to complete the Daily Timer setting.

 The DAILY (Daily Timer) indicator stops flashing and remains lit. The settings you have done are shown on the display in sequence.



9 Press **STANDBY/ON** **⏻/⏻** to turn off the unit (on standby) if you have set the Daily Timer with the unit turned on.

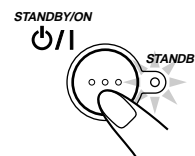

If the unit is turned on when the on-time comes

Daily Timer does not work.



Even if you unplug the AC power cord or if a power failure occurs

Once you set the timer, the timer setting may remain stored in memory for a few days. In this case, check whether the timer setting still remains or not.

To turn off or on Daily Timer after its setting is done

1 Press **CLOCK/TIMER** repeatedly until “DAILY” appears on the display.



2 To turn off the Daily Timer, press **CANCEL/DEMO**.

CANCEL/DEMO

 
⏻ indicator and the DAILY (Daily Timer) indicator go off from the display (“OFF” appears for a while).



The Daily Timer is canceled, but the setting for the Daily Timer remains in memory.

To turn on the Daily Timer, press **SET**.


⏻ indicator and the DAILY (Daily Timer) indicator light up on the display. The settings you have done are shown on the display in sequence for your confirmation.



Using Recording Timer

With Recording Timer, you can make a tape of a radio broadcast automatically. You can set the timer whether the system is on or off.

How Recording Timer actually works

The unit automatically turns on, tunes into the specified station, sets the volume level to "VOL MIN," and starts recording when the on-time comes (the  indicator continues flashing while the timer is operating). Then, when the off-time comes ("OFF" flashes just before the off-time), the unit automatically turns off (on standby).


The timer setting remains in memory until you change it.


- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 2 again.
- To correct a misentry while setting the timer, press CANCEL/DEMO.

On the unit ONLY:


1 Put a recordable cassette into deck B.

2 Press CLOCK/TIMER repeatedly until "REC" appears on the display.

 indicator lights up and the REC (Recording Timer) indicator also starts flashing on the display.

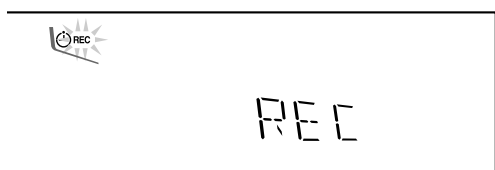

- Each time you press the button, the timer setting modes change as follows:

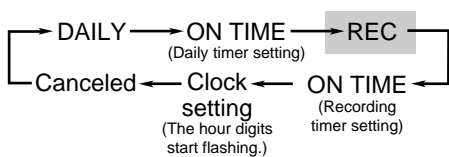






3 Press CLOCK/TIMER again.

"ON TIME" appears for 2 seconds on the display, then the unit enters on-time setting mode.





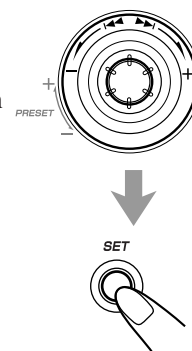

4 Set the on-time you want the unit to turn on at.





- 1) Turn  /  to set the hour, then press SET.
 - 2) Turn  /  to set the minute, then press SET.
- "OFF TIME" appears for 2 seconds on the display, then the unit enters off-time setting mode.



5 Set the off-time you want the unit to turn off (on standby) at.


- 1) Turn  /  to set the hour, then press SET.
 - 2) Turn  /  to set the minute, then press SET.
- The unit enters preset station selecting mode.


6 Select the preset station.

- 1) Turn  /  to select the band ("TUNER FM" or "TUNER AM"), then press SET.
- 2) Turn  /  to select a preset channel number, then press SET.

The REC (Recording Timer) indicator stops flashing and remains lit. The settings you have done are shown on the display in sequence.

7 Press STANDBY/ON to turn off the unit (on standby) if necessary.

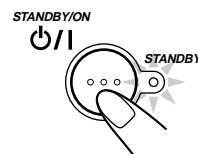

If you want to listen to another source while recording
Press REC START/STOP or  to stop recording. Without stopping it, you cannot change the source.



Even if you unplug the AC power cord or if a power failure occurs

Once you set the timer, the timer setting may remain stored in memory for a few days. In this case, check whether the timer setting still remains or not.



To turn off or on Recording Timer after its setting is done

1 Press **CLOCK/TIMER** repeatedly until “REC” appears on the display.



 
2 To turn off the Recording Timer, press **CANCEL/DEMO**.



⊖ indicator and the REC (Recording Timer) indicator go off from the display (“OFF” appears for a while).

The Recording Timer is canceled, but the setting for the Recording Timer remains in memory.

To turn on the Recording Timer, press **SET**.



⊖ indicator and the REC (Recording Timer) indicator light up on the display. The settings you have done are shown on the display in sequence for your confirmation.

Using Sleep Timer

With Sleep Timer, you can fall asleep to sound. You can set Sleep Timer only while the unit is turned on.

How Sleep Timer actually works

The unit automatically turns off after the specified time length passes.

 
On the remote control ONLY:

1 Press **SLEEP**.

The time length until the shut-off time appears and the SLEEP indicator starts flashing on the display.



- Each time you press the button, the time length changes as follows:



2 Wait for about 5 seconds after specifying the time length.

The SLEEP indicator stops flashing and remains lit.

To check the remaining time until the shut-off time, press SLEEP once so that the remaining time until the shut-off time appears for about 5 seconds.

To change the shut-off time, press SLEEP repeatedly until the desired time length appears on the display.

To cancel the setting, press SLEEP repeatedly so that the SLEEP indicator goes off.


- Sleep Timer is also canceled when you turn off the unit.

Timer Priority


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are examples.

Recording Timer has priority over Daily Timer and Sleep Timer.

- If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

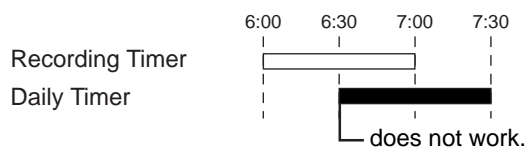

- If Recording Timer is set to come on while Sleep Timer is operating, Sleep Timer will not work (the SLEEP indicator does not go off).

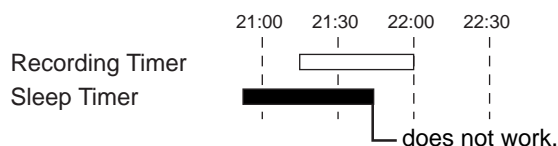

Using AV COMPU LINK Control System



The AV COMPU LINK control system allows you to use JVC's TV with simple operations.

To use AV COMPU LINK control system, you need to connect this unit and a TV through the AV COMPU LINK terminals.

- You can connect a TV that has AV COMPU LINK II or AV COMPU LINK EX terminals.

AV COMPU LINK Connection

Connect a TV by using a SCART cable or video cord (see pages 9 and 10) then also connect it by using a cord with monaural mini-plugs (not supplied).

- You need to set "AV COMPULINK MODE" correctly to use AV COMPU LINK control system. (See page 40.)

Available operations


You can use following functions by using AV COMPU LINK control system.

Automatic power on/off

The connected TV turns on and off along with this unit. When you turn on the unit the connected TV automatically turns on and changes the input mode to the appropriate position. Also when you turn off the unit, the connected TV automatically turns off.

One-touch disc play

Simply by inserting or playing back a disc, you can enjoy the playback view on the TV without setting other switches manually.

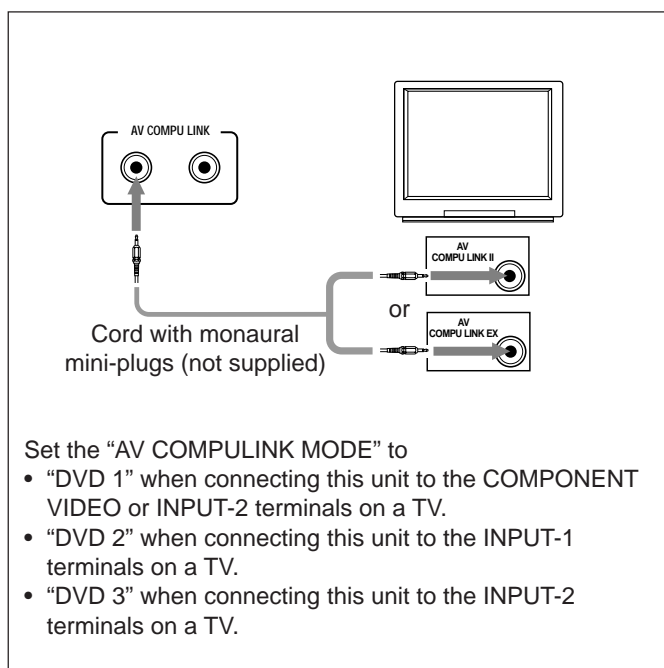


Appendix A—Maintenance

To get the best performance of the unit, keep your discs, tapes, and mechanism clean.

Handling discs



- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.

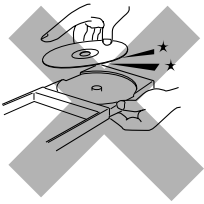

- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.




To clean the disc

Wipe the disc with a soft cloth in a straight line from center to edge.



DO NOT use any solvent—such as conventional record cleaner, spray, thinner, or benzine—to clean the disc.

Handling cassette tapes

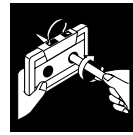

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose, it may get stretched, cut, or caught in the cassette.



- Be careful not to touch the tape surface.



- Avoid the following places to store the tape:
 - In dusty places
 - In direct sunlight or heat
 - In moist areas
 - Near a magnet

Cleaning the unit

• Stains on the unit

Should be wiped off with a soft cloth. If the unit is heavily stained, wipe it with a cloth soaked in water diluted neutral detergent and wrung well, then wipe clean with a dry cloth.

• Since the unit may deteriorate in quality, become damaged or get its paint peeled off, be careful about the followings.

- DO NOT wipe it with a hard cloth.
- DO NOT wipe it strong.
- DO NOT wipe it with thinner or benzine.
- DO NOT apply any volatile substance such as insecticides to it.
- DO NOT allow any rubber or plastic to remain in contact with it for a long time.

Appendix B—Troubleshooting

If you are having a problem with your unit, check this list for a possible solution before calling for service. If you cannot solve the problem from the hints given here, or the unit has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Cause	Action
Unable to cancel the display demonstration.	Other buttons are pressed to cancel the display demonstration.	Press CANCEL/DEMO on the unit. (See page 10.)
No sound is heard.	<ul style="list-style-type: none"> • Connections are incorrect or loose. • You are playing a disc encoded with DTS Digital Surround. 	<ul style="list-style-type: none"> • Check all connections and make corrections. (See pages 6 to 10.) • This unit cannot output DTS sound without connecting a decoder compatible with DTS Digital Surround (with “DIGITAL AUDIO OUTPUT” to “STREAM/PCM”—See page 37.)
Hard to listen to broadcasts because of noise.	<ul style="list-style-type: none"> • Antennas are disconnected. • The AM loop antenna is too close to the unit. • The FM antenna is not properly extended and positioned. 	<ul style="list-style-type: none"> • Reconnect the antennas correctly and securely. • Change the position and direction of the AM loop antenna. • Extend the FM antenna at the best position.
The disc sound is discontinuous.	The disc is scratched or dirty.	Clean or replace the disc. (See page 47.)
The disc tray does not open or close.	<ul style="list-style-type: none"> • The AC power cord is not plugged in. • Trays are locked. 	<ul style="list-style-type: none"> • Plug the AC power cord. • Unlock the trays. (See page 23.)
The disc does not play.	The disc is placed upside down.	Place the disc with the label side up.
The disc reading time is too long or the disc cannot be ejected by pressing ▲ .	The disc is placed upside down.	Change source to another one (ex. FM/AM), eject the disc, and place it with the label side up.
Impossible to turn off Pro Logic while playing back a CD.	“ON” is selected as Pro Logic setting.	Show the on-screen menu by selecting a DVD or VCD as a playing source or leaving the disc tray opened, then change the Pro Logic setting to “AUTO” or “OFF.” (See page 37.)
No picture appears on the screen.	<ul style="list-style-type: none"> • The video cord is not connected correctly. • An incorrect input has been selected on the TV or monitor. 	<ul style="list-style-type: none"> • Connect the video cord correctly. • Select the correct input on the TV or monitor.
DVD does not play back.	Parental lock is in use.	Unlock the parental lock. (See page 41.)
The left and right edges of the picture are missing on the screen.	“4:3 PS <input type="checkbox"/> ” is selected when viewing on a conventional TV (aspect ratio 4:3).	Select “4:3 LB <input type="checkbox"/> .
No subtitle appears on the display though you have selected the initial subtitle language.		Some DVDs are programed to always display no subtitle initially. If this happens, press SUBTITLE on the remote control after starting play. (See page 37.)
Audio language is different from the one you have selected as the initial audio language.		Some DVDs are programed to always use the original language initially. If this happens, press AUDIO while holding down SHIFT on the remote control after starting play. (See page 37.)
Impossible to record.	Small tabs on the top of the cassette are removed.	Cover the holes with adhesive tape.
Operations are disabled.	The built-in microprocessor may malfunction due to external electrical interference.	Unplug the AC power cord and then plug it back in.
Unable to operate the unit from the remote control.	<ul style="list-style-type: none"> • The path between the remote control and the remote sensor on the unit is blocked. • The batteries are exhausted. 	<ul style="list-style-type: none"> • Remove the obstruction. • Replace the batteries.

Appendix C—Description of the PTY Codes

NEWS:	News.
AFFAIRS:	Topical program expanding or enlarging upon the news — debate, or analysis.
INFO:	Program the purpose of which is to impart advice in the widest sense.
SPORT:	Program concerned with any aspect of sports.
EDUCATE:	Educational programs.
DRAMA:	All radio plays and serials.
CULTURE:	Programs concerning any aspect of national or regional culture, including language, theatre, etc.
SCIENCE:	Programs about natural sciences and technology.
VARIED:	Used for mainly speech-based programs like quizzes, panel games and personality interviews.
POP M:	Commercial music of current popular appeal.
ROCK M:	Rock music.
M.O.R. M:	Current contemporary music considered to be “easy-listening.”
LIGHT M:	Instrumental music, and vocal or choral works.
CLASSICS:	Performances of major orchestral works, symphonies, chamber music, etc.
OTHER M:	Music not fitting into any of the other categories.
WEATHER:	Weather reports and forecasts.

FINANCE:	Stock Market reports, commerce, trading etc.
CHILDREN:	Programs targeted at a young audience.
SOCIAL A:	Programs about sociology, history, geography, psychology and society.
RELIGION:	Religious programs.
PHONE IN:	Involving members of the public expressing their views either by phone or at a public forum.
TRAVEL:	Travel information.
LEISURE:	Programs about recreational activities.
JAZZ:	Jazz music.
COUNTRY:	Songs which originate from, or continue the musical tradition of the American Southern States.
NATIONAL:	Current popular music of the nation or region in that country’s language.
OLDIES:	Music from the so-called “golden age” of popular music.
FOLK M:	Music which has its roots in the musical culture of a particular nation.
DOCUMENT:	Program concerning factual matters, presented in an investigative style.

Classification of the PTY codes for some FM stations may be different from the above list.

Appendix D—Output Signals Through the OPTICAL DIGITAL OUTPUT Terminal

They differ according to the “DIGITAL AUDIO OUTPUT” setting. (See page 37.)

DIGITAL AUDIO OUT Playback disc	Output Signals		
	STREAM	DOLBY DIGITAL/PCM	PCM ONLY
DVD with 48 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM
with 96 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM
with Dolby Digital	Dolby Digital bitstream	Dolby Digital bitstream	48 kHz, Linear PCM
with DTS Digital Surround	DTS bitstream		
with MPEG Audio	MPEG bitstream	48 kHz, Linear PCM	48 kHz, Linear PCM
Video CD, Audio CD	44.1 kHz, 16 bit Linear PCM	44.1 kHz, 16 bit Linear PCM	44.1 kHz, 16 bit Linear PCM
Audio CD with DTS	DTS bitstream	44.1 kHz, 16 bit Linear PCM	44.1 kHz, 16 bit Linear PCM

Appendix E—Channel Display

Current outputting channel appears on the display when you press DISPLAY. (See page 19.)

DOLBY DIGITAL

Display	LFE	Channel
1/0 CH		C ONLY
1/0.1 CH	ON	C ONLY
2/0 CH		L/R
2/0.1 CH	ON	L/R
2/0 CH		L/R (L0/R0)
2/0.1 CH	ON	L/R (L0/R0)
2/0 CH		L/R/S (Lt/Rt)
2/0.1 CH	ON	L/R/S (Lt/Rt)
3/0 CH		L/C/R
3/0.1 CH	ON	L/C/R
2/1 CH		L/R/S
2/1.1 CH	ON	L/R/S
3/1 CH		L/C/R/S
3/1.1 CH	ON	L/C/R/S
2/2 CH		L/R/LS/RS
2/2.1 CH	ON	L/R/LS/RS
3/2 CH		L/C/R/LS/RS
3/2.1 CH	ON	L/C/R/LS/RS

Linear PCM and DTS

Display	Channel
1 CH	Monaural
2 CH	2 ch stereo
3 CH	3 ch
4 CH	4 ch
5 CH	5 ch
6 CH	6 ch
7 CH	7 ch
8 CH	8 ch

MPEG

Display	Channel
2/0 CH	Monaural
2/0.1 CH	2 ch stereo
2/2 CH	3 ch
3/0 CH	4 ch
2/2.1 CH	5 ch
3/0.1 CH	6 ch
3/2 CH	7 ch
3/2.1 CH	8 ch
2/0 CH	(down mix)

Appendix F—Language Code for On-Screen Menu

This code list is used when you select a language of on-screen menus. (See page 37.)

Code	Language	Code	Language	Code	Language
AA	Afar	IK	Inupiak	RN	Kirundi
AB	Abkhazian	IN	Indonesian	RO	Rumanian
AF	Afrikaans	IS	Icelandic	RU	Russian
AM	Ameharic	IW	Hebrew	RW	Kinyarwanda
AR	Arabic	JI	Yiddish	SA	Sanskrit
AS	Assamese	JW	Javanese	SD	Sindhi
AY	Aymara	KA	Georgian	SG	Sangho
AZ	Azerbaijani	KK	Kazakh	SH	Serbo-Croatian
BA	Bashkir	KL	Greenlandic	SI	Singhalese
BE	Byelorussian	KM	Cambodian	SK	Slovak
BG	Bulgarian	KN	Kannada	SL	Slovenian
BH	Bihari	KO	Korean (KOR)	SM	Samoan
BI	Bislama	KS	Kashmiri	SN	Shona
BN	Bengali, Bangla	KU	Kurdish	SO	Somali
BO	Tibetan	KY	Kirghiz	SQ	Albanian
BR	Breton	LA	Latin	SR	Serbian
CA	Catalan	LN	Lingala	SS	Siswati
CO	Corsican	LO	Laothian	ST	Sesotho
CS	Czech	LT	Lithuanian	SU	Sundanese
CY	Welsh	LV	Latvian, Lettish	SV	Swedish
DA	Danish	MG	Malagasy	SW	Swahili
DZ	Bhutani	MI	Maori	TA	Tamil
EL	Greek	MK	Macedonian	TE	Telugu
EO	Esperanto	ML	Malayalam	TG	Tajik
ET	Estonian	MN	Mongolian	TH	Thai
EU	Basque	MO	Moldavian	TI	Tigrinya
FA	Persian	MR	Marathi	TK	Turkmen
FI	Finnish	MS	Malay (MAY)	TL	Tagalog
FJ	Fiji	MT	Maltese	TN	Setswana
FO	Faroese	MY	Burmese	TO	Tonga
FY	Frisian	NA	Nauru	TR	Turkish
GA	Irish	NE	Nepali	TS	Tsonga
GD	Scots Gaelic	NL	Dutch	TT	Tatar
GL	Galician	NO	Norwegian	TW	Twi
GN	Guarani	OC	Occitan	UK	Ukrainian
GU	Gujarati	OM	(Afan) Oromo	UR	Urdu
HA	Hausa	OR	Oriya	UZ	Uzbek
HI	Hindi	PA	Panjabi	VI	Vietnamese
HR	Croatian	PL	Polish	VO	Volapuk
HU	Hungarian	PS	Pashto, Pushto	WO	Wolof
HY	Armenian	PT	Portuguese	XH	Xhosa
IA	Interlingua	QU	Quechua	YO	Yoruba
IE	Interlingue	RM	Rhaeto-Romance	ZU	Zulu

Appendix G—Country Code for Parental Lock

Continued 

This code list is used when you set a country code for parental lock. (See page 41.)

Code	Country	Code	Country	Code	Country
AD	Andorra	CM	Cameroon	GR	Greece
AE	United Arab Emirates	CN	China	GS	South Georgia and the South Sandwich Islands
AF	Afghanistan	CO	Colombia	GT	Guatemala
AG	Antigua and Barbuda	CR	Costa Rica	GU	Guam
AI	Anguilla	CU	Cuba	GW	Guinea-Bissau
AL	Albania	CV	Cape Verde	GY	Guyana
AM	Armenia	CX	Christmas Island	HK	Hong Kong
AN	Netherlands Antilles	CY	Cyprus	HM	Heard Island and McDonald Islands
AO	Angola	CZ	Czech Republic	HN	Honduras
AQ	Antarctica	DE	Germany	HR	Croatia
AR	Argentina	DJ	Djibouti	HT	Haiti
AS	American Samoa	DK	Denmark	HU	Hungary
AT	Austria	DM	Dominica	ID	Indonesia
AU	Australia	DO	Dominican Republic	IE	Ireland
AW	Aruba	DZ	Algeria	IL	Israel
AZ	Azerbaijan	EC	Ecuador	IN	India
BA	Bosnia and Herzegovina	EE	Estonia	IO	British Indian Ocean Territory
BB	Barbados	EG	Egypt	IQ	Iraq
BD	Bangladesh	EH	Western Sahara	IR	Iran (Islamic Republic of)
BE	Belgium	ER	Eritrea	IS	Iceland
BF	Burkina Faso	ES	Spain	IT	Italy
BG	Bulgaria	ET	Ethiopia	JM	Jamaica
BH	Bahrain	FI	Finland	JO	Jordan
BI	Burundi	FJ	Fiji	JP	Japan
BJ	Benin	FK	Falkland Islands (Malvinas)	KE	Kenya
BM	Bermuda	FM	Micronesia (Federated States of)	KG	Kyrgyzstan
BN	Brunei Darussalam	FO	Faroe Islands	KH	Cambodia
BO	Bolivia	FR	France	KI	Kiribati
BR	Brazil	FX	France, Metropolitan	KM	Comoros
BS	Bahamas	GA	Gabon	KN	Saint Kitts and Nevis
BT	Bhutan	GB	United Kingdom	KP	Korea, Democratic People's Republic of
BV	Bouvet Island	GD	Grenada	KR	Korea, Republic of
BW	Botswana	GE	Georgia	KW	Kuwait
BY	Belarus	GF	French Guiana	KY	Cayman Islands
BZ	Belize	GH	Ghana	KZ	Kazakhstan
CA	Canada	GI	Gibraltar	LA	Lao People's Democratic Republic
CC	Cocos (Keeling) Islands	GL	Greenland	LB	Lebanon
CF	Central African Republic	GM	Gambia	LC	Saint Lucia
CG	Congo	GN	Guinea		
CH	Switzerland	GP	Guadeloupe		
CI	Côte d'Ivoire	GQ	Equatorial Guinea		
CK	Cook Islands				
CL	Chile				

Code	Country	Code	Country	Code	Country
LI	Liechtenstein	PE	Peru	TJ	Tajikistan
LK	Sri Lanka	PF	French Polynesia	TK	Tokelau
LR	Liberia	PG	Papua New Guinea	TM	Turkmenistan
LS	Lesotho	PH	Philippines	TN	Tunisia
LT	Lithuania	PK	Pakistan	TO	Tonga
LU	Luxembourg	PL	Poland	TP	East Timor
LV	Latvia	PM	Saint Pierre and Miquelon	TR	Turkey
LY	Libyan Arab Jamahiriya			TT	Trinidad and Tobago
MA	Morocco	PN	Pitcairn	TV	Tuvalu
MC	Monaco	PR	Puerto Rico	TW	Taiwan
MD	Moldova, Republic of	PT	Portugal	TZ	Tanzania, United Republic of
MG	Madagascar	PW	Palau		
MH	Marshall Islands	PY	Paraguay	UA	Ukraine
ML	Mali	QA	Qatar	UG	Uganda
MM	Myanmar	RE	Réunion	UM	United States Minor Outlying Islands
MN	Mongolia	RO	Romania		
MO	Macau	RU	Russian Federation	US	United States
MP	Northern Mariana Islands	RW	Rwanda	UY	Uruguay
		SA	Saudi Arabia	UZ	Uzbekistan
MQ	Martinique	SB	Solomon Islands	VA	Vatican City State (Holy See)
MR	Mauritania	SC	Seychelles		
MS	Montserrat	SD	Sudan	VC	Saint Vincent and the Grenadines
MT	Malta	SE	Sweden		
MU	Mauritius	SG	Singapore	VE	Venezuela
MV	Maldives	SH	Saint Helena	VG	Virgin Islands (British)
MW	Malawi	SI	Slovenia	VI	Virgin Islands (U.S.)
MX	Mexico	SJ	Svalbard and Jan Mayen	VN	Viet Nam
MY	Malaysia	SK	Slovakia	VU	Vanuatu
MZ	Mozambique	SL	Sierra Leone	WF	Wallis and Futuna Islands
NA	Namibia	SM	San Marino		
NC	New Caledonia	SN	Senegal	WS	Samoa
NE	Niger	SO	Somalia	YE	Yemen
NF	Norfolk Island	SR	Suriname	YT	Mayotte
NG	Nigeria	ST	Sao Tome and Principe	YU	Yugoslavia
NI	Nicaragua	SV	El Salvador	ZA	South Africa
NL	Netherlands	SY	Syrian Arab Republic	ZM	Zambia
NO	Norway	SZ	Swaziland	ZR	Zaire
NP	Nepal	TC	Turks and Caicos Islands	ZW	Zimbabwe
NR	Nauru	TD	Chad		
NU	Niue	TF	French Southern Territories		
NZ	New Zealand				
OM	Oman	TG	Togo		
PA	Panama	TH	Thailand		

CA-MXDVA9R

Output Power (IEC 268-3/DIN)

FRONT SUBWOOFERS:

80 W per channel, min. RMS, driven into 6 Ω at 63 Hz with no more than 10% total harmonic distortion.

FRONT MAIN SPEAKERS:

40 W per channel, min. RMS, driven into 6 Ω at 1 kHz with no more than 10% total harmonic distortion.

SURROUND (REAR and CENTER) SPEAKERS:

20 W per channel, min. RMS, driven into 16 Ω at 1 kHz with no more than 10% total harmonic distortion.

Audio input sensitivity/Impedance

(Measured at 1 kHz, with tape recording signal 300 mV)

AUX: 410 mV/50 k Ω

Audio output level

AUX: 290 mV

Dolby Digital 5.1ch subwoofer (LFE) output level

(measured when playing Dolby Digital 5.1ch track with LFE of 30 Hz at 0 dBFS)

SUB-WOOFER 5.1ch OUT: 170 mV

Digital output: OPTICAL DIGITAL OUTPUT

Signal wave length: 660 nm

Output level: -15 dBm to -12 dBm

AV OUT

COMP.: 1 V(p-p)/75 Ω

S-Video:

Y (luminance) 1 V(p-p)/75 Ω

C (chrominance, burst) 0.286 V(p-p)/75 Ω

RGB: 0.7 V(p-p)/75 Ω

Speakers/Impedance

FRONT SUBWOOFERS: 6 Ω – 16 Ω

FRONT MAIN SPEAKERS: 6 Ω – 16 Ω

SURROUND SPEAKERS: 16 Ω – 32 Ω

Tuner

FM tuning range: 87.5 MHz – 108.0 MHz

AM tuning range: MW: 522 kHz – 1 629 kHz

LW: 144 kHz – 288 kHz

DVD player

Disc capacity: 3 discs

Readable disc: DVD Video, Video CD, Audio CD, CD-R, CD-RW

Video format: PAL

Frequency response

DVD, fs=48 kHz: 16 Hz to 22 000 Hz

DVD, fs=96 kHz: 16 Hz to 44 000 Hz

CD, VCD: 16 Hz to 20 000 Hz

Dynamic range: 85 dB

Signal-to-noise ratio: 90 dB

Wow and flutter: Immeasurable

Cassette deck

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

General

Power requirement: AC 230 V \sim , 50 Hz

Power consumption: 175 W (at operation)

29 W (on standby; with power saving off — Normal Mode)

1.8 W (on standby; with power saving on — Ecology Mode)

Dimensions (approx.): 265 mm x 335 mm x 401 mm (W/H/D)

Mass (approx.): 10.3 kg

Supplied accessories

See page 6.

Design and specifications are subject to change without notice.

CA-MXDVA9 for Australia

Output Power (IEC 268-3/DIN)

FRONT SUBWOOFERS:

80 W per channel, min. RMS, driven into 6 Ω at 63 Hz with no more than 10% total harmonic distortion.

FRONT MAIN SPEAKERS:

40 W per channel, min. RMS, driven into 6 Ω at 1 kHz with no more than 10% total harmonic distortion.

SURROUND (REAR and CENTER) SPEAKERS:

20 W per channel, min. RMS, driven into 16 Ω at 1 kHz with no more than 10% total harmonic distortion.

Audio input sensitivity/Impedance

(Measured at 1 kHz, with tape recording signal 300 mV)

AUX: 410 mV/50 kΩ

Audio output level

AUX: 290 mV

Dolby Digital 5.1ch subwoofer (LFE) output level

(measured when playing Dolby Digital 5.1ch track with LFE of 30 Hz at 0 dBFS)

SUB-WOOFER 5.1ch OUT: 170 mV

Digital output: OPTICAL DIGITAL OUTPUT

Signal wave length: 660 nm

Output level: -15 dBm to -12 dBm

VIDEO OUT

COMP.: 1 V(p-p)/75 Ω

S-video:

Y (luminance) 1 V(p-p)/75 Ω

C (chrominance, burst) 0.286 V(p-p)/75 Ω

Speakers/Impedance

FRONT SUBWOOFERS: 6 Ω – 16 Ω

FRONT MAIN SPEAKERS: 6 Ω – 16 Ω

SURROUND SPEAKERS: 16 Ω – 32 Ω

Tuner

FM tuning range: 87.5 MHz – 108.0 MHz

AM tuning range: 522 kHz – 1 629 kHz

DVD player

Disc capacity: 3 discs

Readable disc: DVD Video, Video CD, Audio CD, CD-R, CD-RW

Video format: PAL

Frequency response

DVD, fs=48 kHz: 16 Hz to 22 000 Hz

DVD, fs=96 kHz: 16 Hz to 44 000 Hz

CD, VCD: 16 Hz to 20 000 Hz

Dynamic range: 85 dB

Signal-to-noise ratio: 90 dB

Wow and flutter: Immeasurable

Cassette deck

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

General

Power requirement: AC 240 V \sim , 50 Hz

Power consumption: 175 W (at operation)

29 W (on standby; with power saving off
— Normal Mode)

1.8 W (on standby; with power saving on
— Ecology Mode)

Dimensions (approx.): 265 mm x 335 mm x 401 mm (W/H/D)

Mass (approx.): 10.3 kg

Supplied accessories

See page 6.

Design and specifications are subject to change without notice.

CA-MXDVA9 except Australia

Output Power

FRONT SUBWOOFERS:

90 W per channel, min. RMS, driven into 6 Ω at 63 Hz with no more than 10% total harmonic distortion.

FRONT MAIN SPEAKERS:

45 W per channel, min. RMS, driven into 6 Ω at 1 kHz with no more than 10% total harmonic distortion.

SURROUND (REAR and CENTER) SPEAKERS:

25 W per channel, min. RMS, driven into 16 Ω at 1 kHz with no more than 10% total harmonic distortion.

Audio input sensitivity/Impedance

(Measured at 1 kHz, with tape recording signal 300 mV)

AUX: 410 mV/50 kΩ

Audio output level

AUX: 290 mV

Dolby Digital 5.1ch subwoofer (LFE) output level

(measured when playing Dolby Digital 5.1ch track with LFE of 30 Hz at 0 dBFS)

SUB-WOOFER 5.1ch OUT: 170 mV

Digital output: OPTICAL DIGITAL OUTPUT

Signal wave length: 660 nm

Output level: -15 dBm to -12 dBm

AV OUT

COMP.: 1 V(p-p)/75 Ω

S-video:

Y (luminance) 1 V(p-p)/75 Ω

C (chrominance, burst) 0.286 V(p-p)/75 Ω

Speakers/Impedance

FRONT SUBWOOFERS: 6 Ω – 16 Ω

FRONT MAIN SPEAKERS: 6 Ω – 16 Ω

SURROUND SPEAKERS: 16 Ω – 32 Ω

Tuner

FM tuning range: 87.5 MHz – 108.0 MHz

AM tuning range:

At 9 kHz intervals: 531 kHz – 1 710 kHz

At 10 kHz intervals: 530 kHz – 1 710 kHz

DVD player

Disc capacity: 3 discs

Readable disc: DVD Video, Video CD, S-Video CD, Audio CD, CD-R, CD-RW

Video format: NTSC

Frequency response

DVD, fs=48 kHz: 16 Hz to 22 000 Hz

DVD, fs=96 kHz: 16 Hz to 44 000 Hz

CD, VCD: 16 Hz to 20 000 Hz

Dynamic range: 85 dB

Signal-to-noise ratio: 90 dB

Wow and flutter: Immeasurable

Cassette deck

Frequency response

Normal (type I): 50 Hz – 14 000 Hz

Wow and flutter: 0.15% (WRMS)

General

Power requirement: AC 110 V / AC 127 V / AC 220 V / AC 230 V – AC 240 V \sim (adjustable with the voltage selector), 50 Hz / 60 Hz

Power consumption: 175 W (at operation)
29 W (on standby)

Dimensions (approx.): 265 mm x 335 mm x 401 mm (W/H/D)


Mass (approx.): 10.3 kg

Supplied accessories

See page 6.

Design and specifications are subject to change without notice.

Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia, and U.K.)

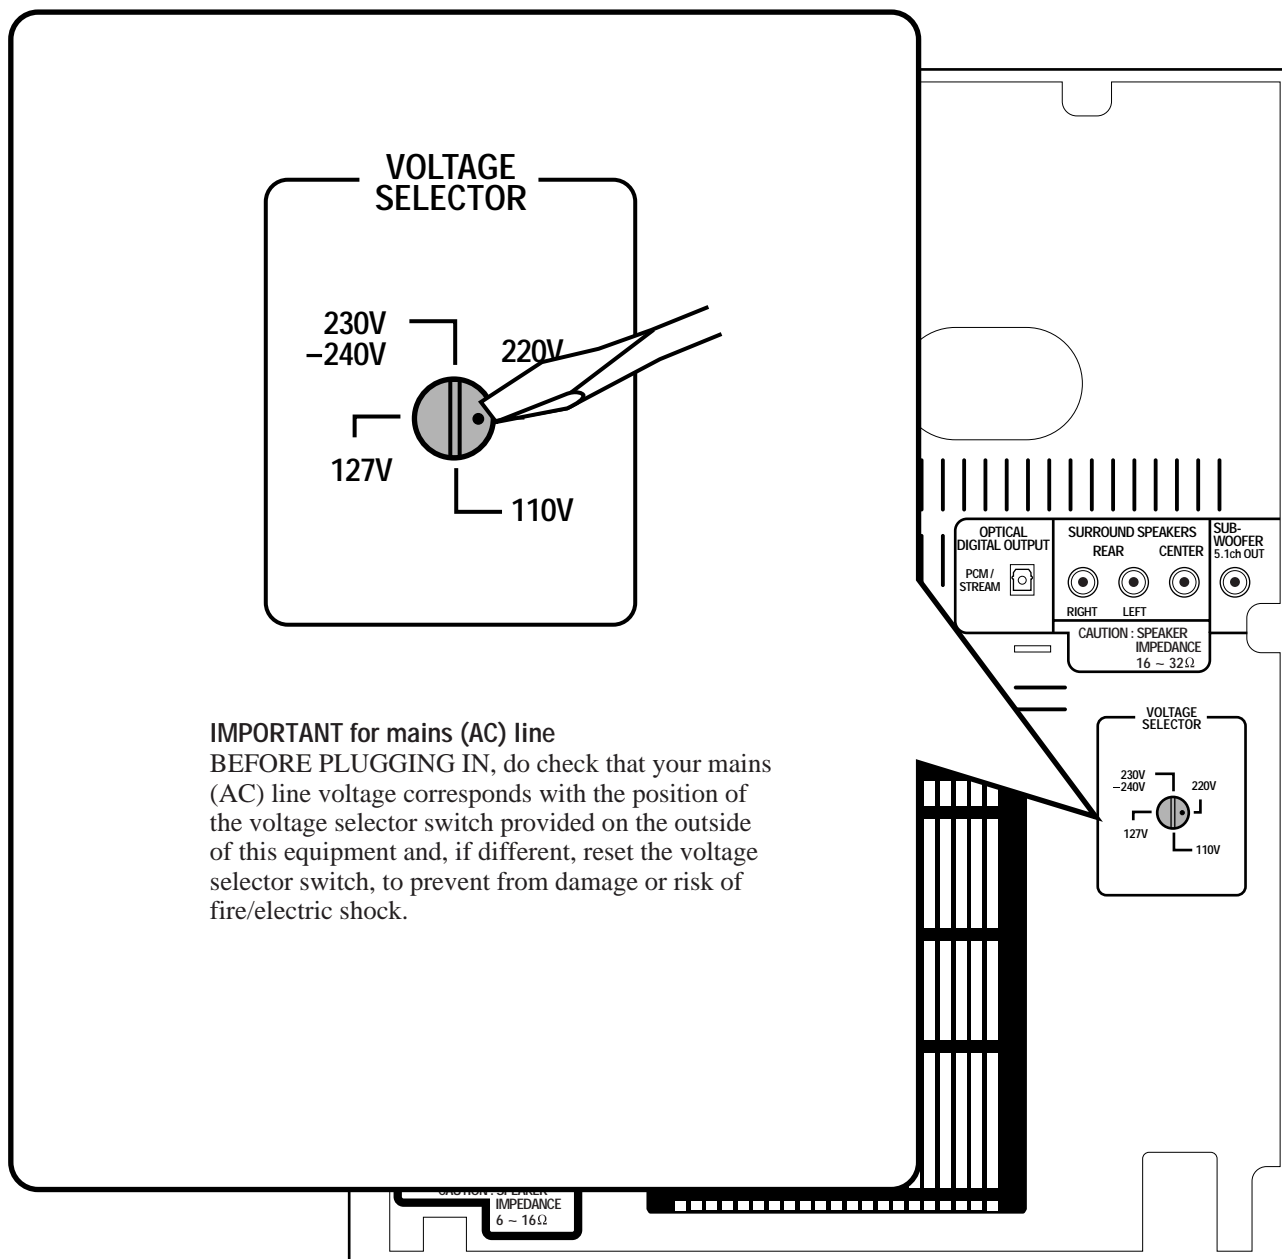


JVC

VICTOR COMPANY OF JAPAN, LIMITED

JVC INSTRUCTIONS

SPEAKER SYSTEM

SP-MXDVA9R

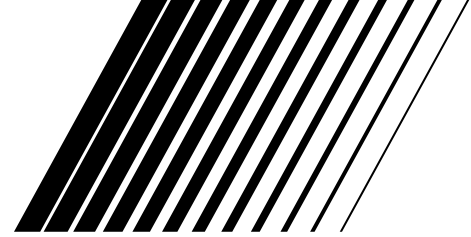

BEDIENUNGSANLEITUNG: LAUTSPRECHERSYSTEM
MANUEL D'INSTRUCTIONS: SYSTEME DES ENCEINTES
GEBRUIKSAANWIJZING: LUIDSPREKERSYSTEEM
MANUAL DE INSTRUCCIONES: SISTEMA DE ALTAVOCES

ISTRUZIONI: SISTEMA DI ALTOPARLANTI
BRUKSANVISNING: HÖGTALARSYSTEM
VEJLEDNING: HØJTTALERSYSTEM
KÄYTTÖOHJE: KAIUTINJÄRJESTELMÄ

This system consists of the following systems:
Dieses System besteht aus den folgenden Systemen:
Cette chaîne comprend les enceintes suivantes:
Dit systeem bestaat uit de volgende onderdelen:
Este sistema se compone de los cuatro siguientes:

Questo sistema consiste dei seguenti sistemi:
Detta högtalarsystem består av följande högtalare:
Dette system består af følgende systemer:
Tämä järjestelmä koostuu seuraavista laitteista:

FRONT SPEAKER SYSTEM : SP-MXG79
FRONTLAUTSPRECHERSYSTEM : SP-MXG79
ENCEINTES AVANT: SP-MXG79
VOORLUIDSPREKERSYSTEEM : SP-MXG79
SISTEMA DE ALTAVOCES DELANTEROS : SP-MXG79

SISTEMA DIFFUSORI ANTERIORI : SP-MXG79
FRÄMRE HÖGTALARE : SP-MXG79
FRONTHØJTTALERSYSTEM : SP-MXG79
ETUKAIUTTIMIT : SP-MXG79

CENTER SPEAKER SYSTEM : SP-DSC99TN
SURROUND SPEAKER SYSTEM : SP-DSS99TN
MITTENLAUTSPRECHERSYSTEM : SP-DSC99TN
RUNDUMLAUTSPRECHERSYSTEM : SP-DSS99TN
ENCEINTE CENTRALE : SP-DSC99TN
ENCEINTES SURROUND : SP-DSS99TN
MIDDENLUIDSPREKERSYSTEEM : SP-DSC99TN
SURROUNDLUIDSPREKERSYSTEEM : SP-DSS99TN
SISTEMA DE ALTAVOZ CENTRAL : SP-DSC99TN
SISTEMA DE ALTAVOCES PERIMÉTRICOS : SP-DSS99TN

SISTEMA DIFFUSORE CENTRALE : SP-DSC99TN
SISTEMA DIFFUSORI SURROUND : SP-DSS99TN
MITTHÖGTALARE : SP-DSC99TN
SURROUNDHÖGTALARE : SP-DSS99TN
CENTERHØJTTALERSYSTEM : SP-DSC99TN
SURROUNDHØTTALERSYSTEM : SP-DSS99TN
KESKIKAIUTIN : SP-DSC99TN
YMPÄRISTÖTILAKAIUTTIMIT : SP-DSS99TN

— SAFETY INSTRUCTIONS —

“SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read the operating instructions before you attempt to use the equipment.
Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.
Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
Do be careful with glass panels or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way — switch off, withdraw the mains plug and consult your dealer.
DON'T remove any fixed cover as this may expose dangerous voltages.
DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this.
Special arrangements may need to be made for infirm of handi-capped people.
DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.
DON'T listen to headphones at high volume as such use can permanently damage your hearing.
DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishing.
Overheating will cause damage and shorten the life of the equipment.
DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.
DON'T allow electrical equipment to be exposed to rain or moisture.
ABOVE ALL
— NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case.
— this could result in a fatal electrical shock;
— NEVER guess or take chances with electrical equipment of any kind
— it is better to be safe than sorry!

Thank you for purchasing JVC speakers.
Before you begin using them, please read the instructions carefully to be sure you get the best possible performance. If you have any questions, consult your JVC dealer.

Vielen Dank für den Kauf dieser JVC-Lautsprecher.
Lesen Sie bitte diese Bedienungsanleitung vor Ingebrauchnahme sorgfältig durch, um stets optimale Ergebnisse zu erzielen. Wenden Sie sich bei etwaigen Fragen bitte an Ihren JVC Händler.

Nous vous remercions pour l'achat de ces enceintes JVC.
Avant de les utiliser, lire ces instructions avec attention pour en obtenir les meilleures performances possibles. En cas de questions, consulter votre revendeur JVC.

Dank u voor de aanschaf van deze JVC luidsprekers.
Lees alvorens over te gaan tot aansluiten, deze gebruiksaanwijzing door zodat u de best mogelijke prestaties zult verkrijgen. Neem contact op met de JVC dealer indien u vragen heeft.

Le estamos muy agradecidos por haber adquirido estos altavoces de JVC.
Antes de utilizarlos, sírvase leer las instrucciones detenidamente a fin de obtener el mejor rendimiento posible. Si tienen alguna pregunta, acuda a su agente de JVC.

Grazie per aver acquistato questi altoparlanti della JVC.
Prima di cominciare l'uso degli altoparlanti, leggete attentamente le istruzioni per assicurare le migliori prestazioni. Qualora sorgessero dei dubbi, rivolgetevi al vostro rivenditore JVC.

Tack för ditt val av dessa JVC-högtalare.
Innan du kopplar in högtalarna i din ljudanläggning bör du för att få maximala prestanda från högtalarna läsa igenom bruksanvisningen noggrant. Kontakta din JVC-återförsäljare om du har frågor eller känner dig osäker.

Tak for købet af JVC-højttalerne.
Gennemlæs venligst vejledningen omhyggeligt før de tages i brug, så De kan opnå den bedst mulige ydelse. Forhør hos Deres JVC forhandler hvis De har nogen spørgsmål.

Kiitos siitä että päädyit valinnassasi JVC-kaiuttimiin.
Ennen kuin alat käyttää niitä, lue käyttöohje huolellisesti, jotta ne toimisivat parhaalla mahdollisella tavalla. Jos Sinulla on kysyttävää ota yhteys JVC-edustajaan.

FRONT SPEAKER SYSTEM : SP-MXG79

FRONTLAUTSPRECHERSYSTEM : SP-MXG79

ENCEINTES AVANT: SP-MXG79

VOORLUIDSPREKERSYSTEEM : SP-MXG79

SISTEMA DE ALTAVOCES DELANTEROS : SP-MXG79

SISTEMA DIFFUSORI ANTERIORI : SP-MXG79

FRÄMRE HÖGTALARE : SP-MXG79

FRONTHØJTTALERSYSTEM : SP-MXG79

ETUKAIUTTINET : SP-MXG79

SPEAKER FOR A/V COMBINATION

SP-MXG79 have magnetically-shielded design for placement adjacent to TVs and monitors without causing color aberrations. However, color may be affected as a result of how the speaker system is installed. Therefore, be careful of the following:

1. When placing these speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers. Wait at least 30 minutes after the system is installed before turning on the TV's power.
2. If another speaker system has been set up near the TV set, that system may cause color unevenness in the TV's picture.
3. In spite of the shielded design of these speakers, some types of TV's may be affected by them. If this happens, move the speakers a short distance from the TV set.

LAUTSPRECHERBOXEN FÜR AUDIO/VIDEO-KOMBINATION

Die SP-MXG79 haben eine magnetisch abgeschirmte Konstruktion zur Aufstellung neben Fernsehern oder Monitoren, ohne Farbverfälschung zu verursachen.

Je nach Aufstellungsart können aber trotz dieser Konstruktion u.U. Farbverfälschungen verursacht werden.

Achten Sie darum bei der Aufstellung auf folgendes:

1. Bei Aufstellung dieser Boxen in der Nähe eines Fernsehers den Netzschalter des Fernsehers ausschalten oder seinen Netzstecker aus der Steckdose ziehen, bevor die Boxen installiert werden. Mindestens 30 Minuten nach der Installation des Systems warten, bis der Fernseher eingeschaltet wird.
2. Wenn ein anderes Lautsprechersystem in der Nähe des Fernsehers aufgestellt ist, kann das andere System Farbverfälschungen hervorrufen.
3. Trotz der abgeschirmten Konstruktion dieser Boxen können manche Fernseher von ihnen beeinflusst werden. Wenn dies der Fall ist, müssen die Boxen etwas weiter entfernt vom Fernseher aufgestellt werden.

HAUT-PARLEURS POUR COMBINAISON A/V

Le SP-MXG79 est conçu avec un blindage magnétique pour permettre de le placer proche des téléviseurs ou des moniteurs sans causer de distorsions dans les couleurs. Toutefois, les couleurs peuvent être affectées en fonction de l'installation des enceintes acoustiques. Par conséquent, faire attention aux points suivants:

1. Pour placer ces haut-parleurs près d'un téléviseur, couper l'alimentation avec l'interrupteur principal du téléviseur, ou le débrancher avant l'installation du système pour remettre l'alimentation du téléviseur. Une fois le système installé, attendre au moins 30 minutes avant de mettre le téléviseur sous tension.
2. Si d'autres enceintes acoustiques ont été placées près du téléviseur, ces enceintes peuvent causer une irrégularité dans l'image du téléviseur.
3. En dépit de la conception blindée ces enceintes, certains téléviseurs peuvent être affectés par elles. Si cela arrive, éloigner légèrement les enceintes du téléviseur.

LUIDSPREKER VOOR A/V KOMBINATIE

De SP-MXG79 is magnetisch afgeschermd zodat deze in de buurt van een TV en monitor kan worden geplaatst en hierbij de kleuren op het scherm van deze toestellen niet door de luidspreker worden aangetast.

Indien de luidspreker echter op een verkeerde wijze wordt geïnstalleerd, worden de kleuren mogelijk wel aangetast.

Let daarom op het volgende:

1. Wanneer u deze luidsprekers in de buurt van een TV plaatst, moet u de spanningsschakelaar van de TV in de uit-stand drukken of de stekker uit het stopcontact trekken alvorens u de luidsprekers installeert.
Wacht vervolgens tenminste 30 minuten nadat het systeem is geïnstalleerd alvorens de spanning van de TV weer in te schakelen.
2. Indien er een andere luidspreker bij de TV wordt geplaatst, kan die luidspreker mogelijk een negatieve invloed op de kleuren van het beeld hebben.
3. Het kan voorkomen dat deze magnetisch afgeschermd luidsprekers een negatieve invloed op bepaalde typen TV's heeft.

ALTOPARLANTE PER COMBINAZIONE A/V

Il modello SP-MXG79 presenta una costruzione protetta magneticamente per una installazione adiacente ai televisori e monitori senza causa aberrazioni del colore.

Comunque, il colore può essere influenzato negativamente come risultato dell'installazione del sistema degli altoparlanti.

1. Quando si mettono questi altoparlanti vicino ad un televisore, disattivare l'interruttore dell'alimentazione principale del televisore oppure scollegarlo prima di installare gli altoparlanti.
Aspettare almeno 30 minuti dopo che il sistema è installato e prima di attivare l'alimentazione del televisore.
2. Se un'altro sistema di altoparlanti è stato regolato vicino al televisore, questo sistema può causare una irregolarità del colore dell'immagine del televisore.
3. Malgrado la protezione di questi altoparlanti, alcuni tipi di televisori possono essere influenzati negativamente da loro.
Se questo si produce, spostare gli altoparlanti ad una distanza corta dal televisore.

HÖGTALARE FÖR LJUD/VIDEOANLÄGGNING

SP-MXG79 är en magnetiskt avskärmd högtalare som kan placeras intill en TV -mottagare eller monitor utan att det uppstår färgskiftningar på bildskärmen.

Det kan emellertid ändå hända att färgbilden påverkas, beroende på hur högtalaren monterats.

Observera därför följande:

1. Tryck på huvudströmbrytaren på TV:n för att slå av strömmen, eller koppla ur TV:ns nätkabel, innan högtalaren placeras nära en TV.
Vänta i minst 30 minuter efter att högtalaren monterats, innan strömmen till TV:n slås på.
2. En annan högtalare, som placerats nära TV:n, kan orsaka färgskiftningar på bildskärmen.
3. Trots att denna högtalare är magnetiskt avskärmd, kan det hända att vissa typer av TV-apparater ändå påverkas av den.
Flytta i så fall högtalaren lite längre bort från TV:n

ALTAVOZ PARA COMBINACIÓN A/V

El modelo SP-MXG79 tiene una construcción protegida magneticamente para una colocación contigua de los televisores y monitores sin causar aberraciones de color.

Sin embargo, el color puede ser afectado como resultado del modo de instalar el sistema de altavoces.

1. Al colocar los altavoces cerca de un televisor, desactivar el interruptor de alimentación principal del televisor o desconectarlo antes de instalar los altavoces.
Esperar a lo menos 30 minutos después de instalar el sistema y antes de activar la alimentación del televisor.
2. Si otro sistema del altavoz ha sido ajustado cerca del televisor, este sistema puede causar una desigualdad de color en la imagen del televisor.
3. A pesar de la protección de estos altavoces, algunos tipos del televisores pueden estar afectados por ellos. En este caso, mover los altavoces a una distancia corta de la unidad del televisor.

HØJTTALERE TIL A/V-KOMBINATION

SP-MXG79 er magnetisk afskærmede og kan således placeres indtil TV-apparater og monitorer uden at farverne påvirkes.

Farverne kan imidlertid påvirkes afhængig af, hvordan højttalersystemet installeres.

Der skal derfor tages hensyn til følgende:

1. Ved placering af højttalerne i nærheden af et TV-apparat, skal der slukkes for apparatet eller det skal kobles fra nettet før højttalerne installeres.
Vent så i mindst 30 minutter efter højttalerinstallationen før der tændes for TV-apparatet igen.
2. Hvis der er andre højttalere i TV-apparatets nærhed kan disse påvirke farvegengivelsen.
3. Selvom højttalerne er magnetisk afskærmet, kan farverne alligevel, afhængig af TV-modellen, påvirkes. Hvis dette indtræffer, bør højttalerne placeres lidt længere væk fra TV-apparatet.


A/V-YHDISTELMÄÄ VARTEN OLEVA KAIUTIN

Malli SP-MXG79 on magneettisuojattu, joten sen voi sijoittaa TV-vastaanottimien ja monitorien viereen ilman että kuva vääristyy. Väriin sattaa kuitenkin tulla muutoksia sen mukaan, kuinka kaiutinjärjestelmä on asennettu.

Kiinnitä huomiota seuraaviin seikkoihin:

1. Kun asetat nämä kaiuttimet TV-vastaanottimen lähelle, katkaise vastaanottimen päävirtakytkin tai irrota se seinäkoskettimesta, enne kuin asennat kaiuttimet.
Asennettuasi järjestelmän odota ainakin 30 minuuttia ennen kuin kytket TV- vastaanottimen virran päälle.
2. Mikäli toinen kaiutinjärjestelmä on sijoitettu TV-vastaanottimen lähelle, järjestelmä saattaa aiheuttaa värin epätasaisuutta TV-kuvassa.
3. Vaikka nämä kaiuttimet on suojustu, ne saattavat aiheuttaa häiriöitä jonkin tyyppisille TV-vastaanottimille. Jos näin käy, tulee kaiuttimet siirtää pienen etäisyyden päähän TV-vastaanottimesta.

Connection
Anschluß
Raccordement
Aansluiting
Conexión
Ansluiting
Tilslutning
Liitântä

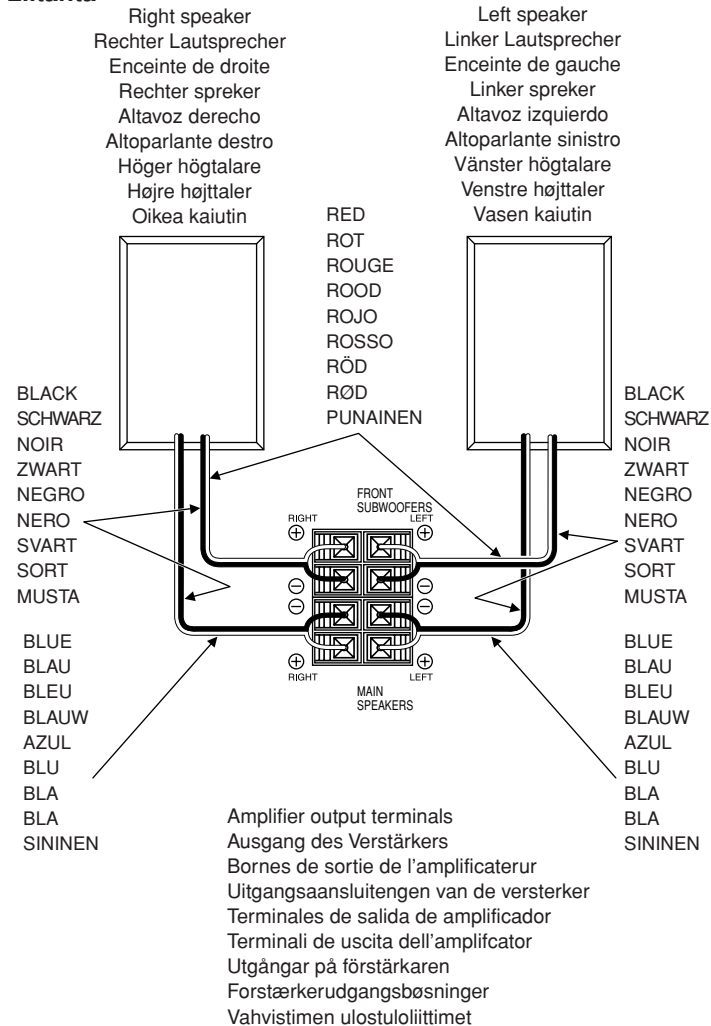

CONNECTION

- DON'T use other amplifier to operate this speaker system except for CA-MXDVA9R.
- Turn off power to the whole system before connecting the speakers to the amplifier.
- The maximum power handling capacity of the SP-MXDVA9R main speaker is 55 W/Front Subwoofer is 110 W. Excessive input will result in abnormal noise and possible damage. In cases where the signals described below are applied to the speakers, even if the signals are below the maximum allowable input, they may cause an overload and burn the wiring of the speakers. Be sure to lower the amplifier volume beforehand.
 - 1) Noise during FM tuning.
 - 2) High level signals containing high frequency components produced by a tape deck in the fast forward mode.
 - 3) Click noise produced when turning power of other components on and off.
 - 4) Click noise produced when connecting or disconnecting cords with the power on.
 - 5) Click noise produced when the cartridge is replaced with the power on.
 - 6) Click noise produced when operating amplifier switches.
 - 7) Continuous high frequency oscillation or high pitch electronically produced musical instrument sound.
 - 8) Howling when using a microphones.

SPECIFICATIONS

Type	: 3-way 3-speaker Bass-Reflex Type Twin Hyper Power-Drive Subwoofer (Magnetically-shielded type)
Speakers	
Front Subwoofer	: 14.0 cm (5-9/16 in.) cone × 1
Main woofer	: 16.0 cm (6-5/16 in.) cone × 1
Tweeter	: 5 cm (2 in.) cone × 1
Power Handling Capacity	
Front Subwoofer	: 110 W
Main Speaker	: 55 W
Impedance	
Front Subwoofer	: 6 Ω
Main Speaker	: 6 Ω
Frequency Range	
Front Subwoofer	: 29 Hz—310 Hz
Main Speaker	: 70 Hz—32 000 Hz
Sound Pressure Level	
Front Subwoofer	: 76 dB/W·m (Average of 50 Hz—100 Hz)
Main Speaker	: 87 dB/W·m (Average of 400 Hz—800 Hz)
Dimensions (W × H × D)	: 286 mm × 335 mm × 365 mm (11-5/16 in. × 13-1/4 in. × 14-3/8 in.)
Mass	: 6.3 kg (13.9 lbs) each

Design and specifications subject to change without notice.

ANSCHLUSS

- Verwenden Sie zum Betrieb dieses Lautsprechersystems keinen anderen Verstärker, ausgenommen CA-MXDVA9R.
- Schalten Sie vor dem Anschluß der Lautsprecher an den Verstärker die Spannungsversorgung des gesamten Systems aus.
- Der Hauptlautsprecher des Modells SP-MXDVA9R kann maximal eine Leistung von 55 W handhaben, während der vordere Subwoofer maximal 110 W handhaben kann. Eine Überlastung führt zu Verzerrungen und möglicherweise zu Beschädigungen. Signale der unten beschriebenen Art können, auch wenn sie unter dem maximal zulässigen Eingang liegen, eine Überlastung verursachen und die Lautsprecherwicklungen durchbrennen. Verringern Sie vorher die Lautstärke des Verstärkers.
 - 1) Geräusche beim Einstellen von UKW-Sendern.
 - 2) Hochpegelige Signale mit Hochfrequenz-Anteilen, die von Tonbanddecks beim Schnellvorspulen erzeugt werden.
 - 3) Klickgeräusche, wenn die Spannungsversorgung anderer Komponenten ein- und ausgeschaltet wird.
 - 4) Klickgeräusche, wenn Kabel angeschlossen oder abgetrennt werden, während die Spannungsversorgung eingeschaltet ist.
 - 5) Klickgeräusche, wenn der Tonabnehmer des Plattenspielers ausgewechselt wird, während die Spannungsversorgung eingeschaltet ist.
 - 6) Klickgeräusche, die beim Betätigen von Schaltern des Verstärkers erzeugt werden.
 - 7) Ständige Hochfrequenzschwingungen oder elektronisch erzeugte Töne von Musikinstrumenten mit hohen Tonhöhen.
 - 8) Rückkopplungen von Mikrofonen.

TECHNISCHE DATEN

Typ	: 3-Weg, 3-Lautsprecher-Baßreflexbox Twin Hyper Power-Drive Subwoofer (Magnetisch abgeschirmter Typ)
Lautsprecher	
Vorderer Subwoofer	: 14.0 cm Konus × 1
Hauptwoofer	: 16.0 cm Konus × 1
Hochtöner	: 5 cm konus × 1
Belastbarkeit	
Vorderer Subwoofer	: 110 W
Hauptlautsprecher	: 55 W
Impedanz	
Vorderer Subwoofer	: 6 Ω
Hauptlautsprecher	: 6 Ω
Frequenzbereich	
Vorderer Subwoofer	: 29 Hz bis 310 Hz
Hauptlautsprecher	: 70 Hz bis 32 000 Hz
Schalldruckpegel	
Vorderer Subwoofer	: 76 dB/W·m (Durchschnitt von 50 Hz bis 100 Hz)
Hauptlautsprecher	: 87 dB/W·m (Durchschnitt von 400 Hz bis 800 Hz)
Abmessungen (B × H × T)	: 286 mm × 335 mm × 365mm
Gewicht	: Je 6,3 kg

Technische Änderungen vorbehalten.

RACCORDEMENT

- NE PAS utiliser d'autre amplificateur que le CA-MXDVA9R pour faire fonctionner les enceintes.
- Mettre hors circuit tout le système avant de raccorder les enceintes à l'amplificateur.
- La puissance maximale admissible de l'enceinte principale SP-MXDVA9R est de 55 W, et celle du caisson de grave avant de 110 W. En dépassant la puissance admissible, cela provoquera des bruits anormaux et détériorera les enceintes. Au cas où les signaux décrits ci-dessous sont envoyés aux enceintes, et même si ces signaux sont inférieurs à la puissance d'entrée maximum admissible, ils risquent de provoquer une surcharge ou même un incendie. S'assurer de bien diminuer le volume sonore de l'amplificateur.
 - 1) Parasites durant une syntonisation FM.
 - 2) Signaux de niveau élevé contenant des composants à haute fréquence, comme ceux générés par une platine d'enregistrement en mode avance rapide.
 - 3) Cliquetis se produisant lorsque d'autres appareils sont mis en ou hors circuit.
 - 4) Cliquetis se produisant lorsque des appareils sont branchés ou dé-branchés alors que leur alimentation est en circuit.
 - 5) Cliquetis se produisant lorsque la cellule d'une platine tourne-disque est changée alors que l'alimentation est en circuit.
 - 6) Cliquetis se produisant lorsque les commandes de l'amplificateur sont manipulées.
 - 7) Oscillations continues à haute fréquence ou sons très aigus provenant d'instruments de musique électroniques.
 - 8) Hurlements dus à l'utilisation de micros.

CARACTÉRISTIQUES

Typ	: Enceinte 3 voies, 3 haut-parleurs type à réflexion des basses Twin Hyper Power-Drive Subwoofer (Type à protection magnétique)
Haut-parleurs	
Caisson de grave avant	: conique de 14.0 cm × 1
Principal	: conique de 16.0 cm × 1
Aigus	: conique de 5 cm × 1
Puissance maximale admissible	
Caisson de grave avant	: 110 W
Haut-parleur principal	: 55 W
Impédance	
Caisson de grave avant	: 6 Ω
Haut-parleur principal	: 6 Ω
Bande passante	
Caisson de grave avant	: 29 Hz—310 Hz
Haut-parleur principal	: 70 Hz—32 000 Hz
Pression sonore	
Caisson de grave avant	: 76 dB/W·m (Moyenne de 50 Hz à 100 Hz)
Haut-parleur principal	: 87 dB/W·m (Moyenne de 400 Hz à 800 Hz)
Dimensions (L × H × P)	: 286 mm × 335 mm × 365mm
Masse	: 6,3 kg chaque

Présentation et caractéristiques modifiables sans préavis.

AANSLUITINGEN

- Gebruik GEEN andere versterker dan de CA-MXDVA9R om dit luidsprekersysteem aan te sturen.
- Schakel de spanning van alle aangesloten componenten uit alvorens de luidsprekers met de versterker te verbinden.
- Het maximaal te verwerken ingangsvermogen van de SP-MXDVA9R hoofd-luidspreker is 55 W, van de voor-subwoofer 110 W. Te hoge ingang kan in abnormale geluidsreproductie en in beschadigingen resulteren.

Overbelasting en verbranding van de bedrading kan worden veroorzaakt, wanneer de hieronder beschreven signalen naar de luidsprekers worden gevoed, zelfs wanneer de signalen onder het maximaal toegestane ingangsvermogen zijn. Verminder eerst het volume van de versterker.

- 1) Ruis, zoals dit optreedt tijdens afstemming op een FM-zender.
- 2) Hoogfrequentie signalen van een hoog niveau, zoals die tijdens het vooruitspoelen van een tapedeck worden geproduceerd.
- 3) Klikkende geluiden, die worden veroorzaakt door het in- en uitschakelen van de netspanning van andere componenten.
- 4) Klikkende geluiden, zoals die worden geproduceerd bij het tot stand brengen of verbreken van aansluitingen terwijl de netspanning is ingeschakeld.
- 5) Klikkende geluiden, zoals die optreden bij het vervangen van het element van een draaitafel terwijl de netspanning is ingeschakeld.
- 6) Klikkende geluiden, zoals die worden geproduceerd door bediening van de schakelaars van de versterker.
- 7) Voortdurende hoogfrequentie-oscillatie, of hoogtonige, elektronisch geproduceerde geluiden van muziekinstrumenten.
- 8) Rondzingend geluid bij gebruik van microfoons.

TECHNISCHE GEGEVENS

Type	: 3-weg 3-luidsprekers 4 bass reflex Twin Hyper Power-Drive Subwoofer (Magnetisch afgeschermd)
Luidsprekers	
Voor-subwoofer	: 14.0 cm kegeltipe × 1
Hoofdwoofer	: 16.0 cm kegeltipe × 1
Tweeter	: 5 cm kegeltipe × 1
Maximale vermogen	
Voor-subwoofer	: 110 W
Hoofdluidspreker	: 55 W
Impedantie	
Voor-subwoofer	: 6 Ω
Hoofdluidspreker	: 6 Ω
Frekwentiebereik	
Voor-subwoofer	: 29 Hz—310 Hz
Hoofdluidspreker	: 70 Hz—32 000 Hz
Geluidsdrukniveau	
Voor-subwoofer	: 76 dB/W·m (Gemiddeld 50 Hz—100 Hz)
Hoofdluidspreker	: 87 dB/W·m (Gemiddeld 400 Hz—800 Hz)
Afmetingen (B × H × D)	: 286 mm × 335 mm × 365mm
Gewicht	: Elk 6,3 kg

Veranderingen in technische gegevens et ontwerp onder voorbehoud.

CONEXIÓN

- NO utilice ningún otro amplificador para operar este sistema de altavoces excepto CA-MXDVA9R.
- Desactive la alimentación de todo el sistema antes de conectar los altavoces al amplificador.
- La capacidad máxima de potencia del altavoz principal SP-MXDVA9R es de 55 W, y del Subwoofer delantero es de 110 W. Uná entrada excesiva resultará en ruido anormal y posibles daños.

En casos donde las señales descritas más abajo se apliquen a los altavoces, aunque las mismas resulten menores que la entrada máxima permisible, pueden causar una sobrecarga y quemar el cableado de los altavoces. Asegúrese de disminuir el volumen del amplificador con anterioridad.

- 1) Ruido durante la sintonía en FM.
- 2) Señales de alto nivel que contengan componentes de alta frecuencia producidos por un magnetófono en el modo de avance rápido.
- 3) Ruidos de conmutación provocados al encender y apagar otros componentes.
- 4) Ruido de conmutación al conectar o desconectar cables con los componentes encendidos.
- 5) Ruido de conmutación cuando se reemplaza la cápsula con los componentes encendidos.
- 6) Ruido de conmutación provocados por la operación de los selectores del amplificador.
- 7) Continua oscilación de alta frecuencia o de sonidos de tonos altos provocados por instrumentos electrónicos.
- 8) Aullidos a utilizar micrófonos.

ESPECIFICACIONES

Tipo	: Reflex bajo con 3-altavoces y 3 vias Twin Hyper Power-Drive Subwoofer (Tipo de protección magnética)
Altavoces	
Subwoofer delantero	: Tipo cónico de 14.0 cm × 1
Principal	: Tipo cónico de 16.0 cm × 1
De agudos	: Tipo cónico de 5 cm × 1
Capacidad de potencia	
Subwoofer delantero	: 110 W
Principal	: 55 W
Impedancia	
Subwoofer delantero	: 6 Ω
Principal	: 6 Ω
Gama de frecuencias	
Subwoofer delantero	: 29 Hz—310 Hz
Principal	: 70 Hz—32 000 Hz
Nivel de presión acústica	
Subwoofer delantero	: 76 dB/W·m (Promedio de 50Hz—100Hz)
Principal	: 87 dB/W·m (Promedio de 400Hz—800Hz)
Dimensiones (An × Al × Prf)	: 286 mm × 335 mm × 365mm
Peso	: 6,3 kg cada uno

El diseño y las especificaciones están sujetos a cambio sin aviso.

COLLEGAMENTO

- NON usare un amplificatore diverso dal modello CA-MXDVA9R per utilizzare questo sistema di altoparlanti.
- Spegnete la corrente dell'intero sistema prima di collegare gli altoparlanti all'amplificatore.
- La potenza massima sostenibile dall'altoparlante principale del SP-MXDVA9R è 55 W, quella del Subwoofer anteriore è 110 W. Un ingresso eccessivo causerà un suono anormale e è possibili danni.

Nel caso in cui i segnali descritti qui sotto vengono applicati agli altoparlanti, possono causare un sovraccarico e bruciare il cablaggio degli altoparlanti, anche se i segnali siano al di sotto dell'ingresso massimo ammesso.

Assicuratevi di diminuire il livello del volume dell'altoparlante prima di procedere.

- 1) Generazione di rumore durante la sintonizzazione FM.
- 2) Segnali di alto livello che contengono dei componenti ad alta frequenza riprodotti da una piastra a cassette nel modo di avanzamento rapido.
- 3) Si sentirà uno scatto quando accendete o spegnete la corrente degli altri componenti.
- 4) Si sentirà uno scatto quando collegate o scollegate i cavi con la corrente accesa.
- 5) Si sentirà uno scatto quando viene sostituita la cartuccia con la corrente accesa.
- 6) Si sentirà uno scatto quando vengono usati gli interruttori dell'amplificatore.
- 7) Oscillazione continua ad alta frequenza o suoni acuti da strumenti musicali elettronici.
- 8) Ululato quando usate i microfoni.

SPECIFICAZIONI

Tipo	: Reflex basso con 3-altoparlanti e 3 vie Twin Hyper Power-Drive Subwoofer (Tipo a schermatura magnetica)
Altoparlanti	
Subwoofer anteriore	: Cono da 14.0 cm × 1
Woofer principale	: Cono da 16.0 cm × 1
Tweeter	: Cono da 5 cm × 1
Capacità di potenza	
Subwoofer anteriore	: 110 W
Altoparlante principale	: 55 W
Impedenza	
Subwoofer anteriore	: 6 Ω
Altoparlante principale	: 6 Ω
Gamma di frequenza	
Subwoofer anteriore	: 29 Hz—310 Hz
Altoparlante principale	: 70 Hz—32 000 Hz
Livello di pressione sonora	
Subwoofer anteriore	: 76 dB/W·m (Gamma di frequenza: 50—100 Hz)
Altoparlante principale	: 87 dB/W·m (Gamma di frequenza: 400—800 Hz)
Dimensioni (L × A × P)	: 286 mm × 335 mm × 365mm
Massa	: 6,3 kg ciascuno

Il disegno e le specifiche sono soggetti a cambiamenti senza preavviso.

ANSLUTNING

- Använd INTE någon annan förstärkare än CA-MXDVA9R till att driva detta högtalarsystem med.
 - Slå av strömmen i alla apparater i ljudanläggningen innan högtalarna ansluts till förstärkaren.
 - Den maximala effekthanteringskapaciteten för huvudhögtalaren SP-MXDVA9R är 55 watt och för den främre lågbashögtalaren 110 watt. Brus uppstår i ljudet och högtalarna kan skadas om de matas med för hög effekt. I situationerna som beskrivs nedan kan högtalarna också överbelastas och kabeltråden inne i högtalarna brännas sönder, fastän högtalarnas effekt inte har överskridits.
Sänk därför ljudstyrkan på förhand.
- 1) Brus under inställning av FM-radiostationer.
 - 2) Starka, högfrekventa signaler från ett kassettdäck under snabbspolning framåt.
 - 3) Ljudbangar som uppstår när andra apparater i anläggningen slås till och från.
 - 4) Skrapljud som uppstår när anslutningskablar ansluts eller kopplas från medan strömmen är på.
 - 5) Skrapljud som uppstår när pickupelementet på en skivspelare byts medan strömmen är på.
 - 6) Ljudbangar som uppstår när du använder förstärkarens omkopplare.
 - 7) Kontinuerliga, högfrekvenssvängningar eller högfrekvent ljud från elektroniska musikinstrument.
 - 8) Akustisk återkoppling (tjutande ljud) vid bruk av mikrofoner.

TEKNISKA DATA

Typ	: 3-vägs, 3-elements basreflexhögtalare Twin Hyper Power-Drive Subwoofer (Magnetiskt avskärmat)
Högtalarelement:	
Främre lågbashögtalare	: 14.0 cm kon × 1
Huvudbaselement	: 16.0 cm kon × 1
Diskantelement	: 5 cm kon × 1
Effekthanteringskapacitet	
Främre lågbashögtalare	: 110 W
Huvudhögtalare	: 55 W
Impedans	
Främre lågbashögtalare	: 6 Ω
Huvudhögtalare	: 6 Ω
Frekvensomfång	
Främre lågbashögtalare	: 29 Hz—310 Hz
Huvudhögtalare	: 70 Hz—32 000 Hz
Ljudtrycksnivå	
Främre lågbashögtalare	: 76 dB/W·m (50—100 Hz i genomsnitt)
Huvudhögtalare	: 87 dB/W·m (400—800 Hz i genomsnitt)
Yttermått (B × H × D)	: 286 mm × 335 mm × 365mm
Vikt	: 6,3kg perst.

Rätt till ändringar av utförande och specifikationer förbehålles utan föregående meddelande.

TILSLUTNING

- Anvend IKKE anden forstærker end CA-MXDVA9R til drift af dette højttalersystem.
- Sluk for strømmen til hele systemet før højttalerne forbindes til forstærkeren.
- Maksimal belastningsevne for SP-MXDVA9R hovedhøjttaleren er 55 W, mens den er 110 W for front-subwooferen.
For kraftigt indgangssignal vil resultere i unormal støj og muligvis beskadigelse.

I tilfælde hvor højttalerne udsættes for signaler beskrevet nedenfor, kan der forekomme overbelastning og overbrænding af ledningerne i højttalerne selv om signalstyrken er under den maksimale tilladte værdi. Husk derfor at sænke højttalerlydstyrken i forvejen.

- 1) Støj under FM-afstemning.
- 2) Signaler med høje niveauer der indeholder højfrekvente komponenter dannet af en båndoptager der er indstillet til hurtig fremspoling.
- 3) Klikstøj dannet når der tændes eller slukkes for strømmen til andre komponenter.
- 4) Klikstøj der dannes når ledninger tilsluttes eller tages ud af forbindelse mens der er tændt for strømmen.
- 5) Klikstøj der dannes når pickuppen udskiftes mens der er tændt for strømmen.
- 6) Klikstøj der dannes når forstærkerens omskiftere betjenes.
- 7) Fortsat høj frekvenssvingning, eller en højlyd dannet af et elektronisk instrument.
- 8) Hyletoner når der anvendes en mikrofon.

SPECIFIKATIONER

Type	: 3-vejs basrefleks-højttaler med 3-elementer Twin Hyper Power-Drive Subwoofer (Magnetisk afskærmet type)
Højttalere	
Front-subwoofer	: 14,0 cm membran × 1
Hoved-højttaler	: 16,0 cm membran × 1
Diskantenhed	: 5 cm membran × 1
Belastningskapacitet	
Front-subwoofer	: 110 W
Hovedhøjttaler	: 55 W
Impedans	
Front-subwoofer	: 6 Ω
Hovedhøjttaler	: 6 Ω
Frekvensområde	
Front-subwoofer	: 29 Hz—310 Hz
Hovedhøjttaler	: 70 Hz—32 000 Hz
Lydtryksniveau	
Front-subwoofer	: 76 dB/W·m (Gennemsnit på 50 Hz—100 Hz)
Hovedhøjttaler	: 87 dB/W·m (Gennemsnit på 400 Hz—800 Hz)
Mål (B × H × D)	: 286 mm × 335 mm × 365 mm
Vægt	: 6,3 kg hver

Design og specifikationer kan blive ændret uden varsel.

LIITÄNTÄ

- ÄLÄ käytä muuta vahvistinta tämän kaiutinjärjestelmän käyttöön paitsi mallille CA-MXDVA9R.
- Katkaise koko järjestelmän virta ennen kuin suoritat liitännät kaiuttimista vahvistimeen.
- SP-MXDVA9R pääkaiuttimen suurin tehonkäsittelykyky on 55 W, etuapubassokaiuttimen 110 W. Liiallinen antoteho aiheuttaa epänormaalia kohinaa ja jopa vahinkoa.
Tapauksissa, missä kaiuttimet joutuvat alla kuvattujen signaalien kohteeksi, vaikka signaalit olisivat alle sallitun maksimi antotehon, ne saattavat aiheuttaa ylikuormitusta ja polttaa kaiuttimien johdot.
Vähennä siis vahvistimen äänenvoimakkuutta jo ennalta.
 - 1) Kohinaa FM-virityksen aikana.
 - 2) Kasettidekistä eteenpäinkelauksen aikana muodostuneet vahvat, korkeataajuuksisia komponentteja sisältävät signaalit.
 - 3) Klik-ääni, joka syntyy silloin kun toisten osien virta kytketään ja katkaistaan.
 - 4) Klik-ääni, joka syntyy silloin kun kytketään tai irrotetaan johtoja virran ollessa päällä.
 - 5) Klik-ääni, joka syntyy silloin kun vaihdetaan hylsy virran ollessa päällä.
 - 6) Klik-ääni, joka syntyy silloin kun käytetään vahvistimen kytkimiä.
 - 7) Jatkuva korkea värähtely tai elektronisesti tuotettu korkea soittimen ääni.
 - 8) Ulinaa mikrofonia käytettäessä.

TEKNISET TIEDOT

Tyyppi	: 3-tie, 3 kaiuttimen bassorefleksi Twin Hyper Power-Drive Subwoofer (Magneettisesti suojattu tyyppi)
Kaiuttimet:	
Etuapubassokaiutin	: 14,0 cm karitomuotoinen × 1
Pääbasso	: 16,0 cm karitomuotoinen × 1
Diskantti	: 5,0 cm karitomuotoinen × 1
Enimmäisteho	
Etuapubassokaiutin	: 110 W
Pääkaiutin	: 55 W
Impedanssi	
Etuapubassokaiutin	: 6 Ω
Pääkaiutin	: 6 Ω
Taajuusala	
Etuapubassokaiutin	: 29 Hz—310 Hz
Pääkaiutin	: 70 Hz—32 000 Hz
Äänenpainetaso	
Etuapubassokaiutin	: 76 dB/W·m (Keskimäärin 50 Hz—100 Hz)
Pääkaiutin	: 87 dB/W·m (Keskimäärin 400 Hz—800 Hz)
Mitat (L × K × S)	: 286 mm × 335 mm × 365 mm
Paino	: 6,3 kg perst.

Oikeudet muutoksiin pidätetään.

CENTER & SURROUND SPEAKER SYSTEM

CENTER SPEAKER SYSTEM : SP-DSC99TN
SURROUND SPEAKER SYSTEM : SP-DSS99TN
MITTENLAUTSPRECHERSYSTEM : SP-DSC99TN
RUNDUMLAUTSPRECHERSYSTEM : SP-DSS99TN
ENCEINTE CENTRALE : SP-DSC99TN
ENCEINTES SURROUND : SP-DSS99TN
MIDDENLUIDSPREKERSYSTEEM : SP-DSC99TN
SURROUNDLUIDSPREKERSYSTEEM : SP-DSS99TN
SISTEMA DE ALTAVOZ CENTRAL : SP-DSC99TN
SISTEMA DE ALTAVOCES PERIMÉTRICOS : SP-DSS99TN

SPEAKER FOR A/V COMBINATION

SP-DSC99TN have a magnetically-shielded design for placement adjacent to TVs and monitors without causing color aberrations. However, color may be affected as a result of how the speaker system is installed. Therefore, be careful of the following:

1. When placing these speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers. Wait at least 30 minutes after the system is installed before turning on the TV's power.
2. If another speaker system has been set up near the TV set, that system may cause color unevenness in the TV's picture.
3. In spite of the shielded design of these speakers, some types of TV's may be affected by them. If this happens, move the speakers a short distance from the TV set.

HOW TO INSTALL SURROUND SPEAKERS

- This equipment is not magnet-proof. If it is placed near a TV set, color on a TV screen may become uneven. If the case of installation, therefore, locate it at sufficient distance from the TV set.
- The speakers of this system are designed to stand on the side or on the bottom, whichever you prefer.
- When setting the speaker on such as a high shelf, be sure to fix them to the shelf by using such as metal braces: this a precaution against the speakers falling off due to shelf trembling.

CAUTION: Attaching the speakers on the wall

The speakers are designed to be attached on the wall. When attaching them on the wall, have them attached to the wall by a qualified person.

DO NOT hang the speakers by yourself to avoid an unexpected danger of their falling from the wall, caused by incorrect attachment or weakness in the wall.

LAUTSPRECHERBOXEN FÜR AUDIO/VIDEO-KOMBINATION

Die SP-DSC99TN haben eine magnetisch abgeschirmte Konstruktion zur Aufstellung neben Fernsehern oder Monitoren, ohne Farbverfälschung zu verursachen.

Je nach Aufstellungsart können aber trotz dieser Konstruktion u.U. Farbverfälschungen verursacht werden.

Achten Sie darum bei der Aufstellung auf folgendes:

1. Bei Aufstellung dieser Boxen in der Nähe eines Fernsehers den Netzschalter des Fernsehers ausschalten oder seinen Netzstecker aus der Steckdose ziehen, bevor die Boxen installiert werden. Mindestens 30 Minuten nach der Installation des Systems warten, bis der Fernseher eingeschaltet wird.
2. Wenn ein anderes Lautsprecher-System in der Nähe des Fernsehers aufgestellt ist, kann das andere System Farbverfälschungen hervorrufen.
3. Trotz der abgeschirmten Konstruktion dieser Boxen können manche Fernseher von ihnen beeinflusst werden. Wenn dies der Fall ist, müssen die Boxen etwas weiter entfernt vom Fernseher aufgestellt werden.

AUFSTELLEN DER SURROUND-BOXEN

- Dieses Modell hat keine magnetische Abschirmung. Bei der Wahl des Aufstellorts ist daher ein ausreichend großer Abstand zu Fernsehgeräten einzuhalten, da andernfalls die Farbwiedergabe beeinträchtigt wird.
- Die Lautsprecher des Systems lassen sich nach Wunsch mit ihrer Seitenwand oder mit ihrer Unterseite aufstellen.
- Bei Regaleinbau müssen die Lautsprecher mit Metallklammern in ihrer Lage gesichert werden, damit sie nicht bei Erschütterungen herunterfallen.
- Die Boxen lassen sich vertikal oder horizontal an der Wand aufhängen.

ACHTUNG: Bei der Wandmontage der Lautsprecher folgendes beachten!

Die Lautsprecher sind für die Wandmontage konzipiert. Die Wandmontage muß aber durch einen qualifizierten Fachmann erfolgen.

Die Lautsprecher NICHT SELBST aufhängen, da ansonsten die Gefahr besteht, daß sie aufgrund fehlerhafter Wandmontage oder mangelnder Tragfähigkeit der Wand herunterfallen.

SISTEMA DIFFUSORE CENTRALE : SP-DSC99TN
SISTEMA DIFFUSORI SURROUND : SP-DSS99TN
MITTHÖGTALARE : SP-DSC99TN
SURROUNDHÖGTALARE : SP-DSS99TN
CENTERHØJTTALERSYSTEM : SP-DSC99TN
SURROUNDHØTTALERSYSTEM : SP-DSS99TN
KESKIKAIUTIN : SP-DSC99TN
YMPÄRISTÖTILAKAIUTTIMIT : SP-DSS99TN

HAUT-PARLEURS POUR COMBINAISON A/V

Le SP-DSC99TN est conçu avec un blindage magnétique pour permettre de le placer proche des téléviseurs ou des moniteurs sans causer de distorsions dans les couleurs. Toutefois, les couleurs peuvent être affectées en fonction de l'installation des enceintes acoustiques. Par conséquent, faire attention aux points suivants:

1. Pour placer ces haut-parleurs près d'un téléviseur, couper l'alimentation avec l'interrupteur principal du téléviseur, ou le débrancher avant l'installation du système pour remettre l'alimentation du téléviseur. Une fois le système installé attendre au moins 30 minutes avant de mettre le téléviseur sous tension.
2. Si d'autres enceintes acoustiques ont été placées près du téléviseur, ces enceintes peuvent causer une irrégularité dans l'image du téléviseur.
3. En dépit de la conception blindée ces enceintes, certains téléviseurs peuvent être affectés par elles. Si cela arrive, éloigner légèrement les enceintes du téléviseur.

COMMENT INSTALLER LES HAUT-PARLEURS CENTRAL ET SURROUND

- Cet équipement n'est pas protégé contre le magnétisme. S'il est placé près d'un téléviseur, les couleurs de l'écran de télévision peuvent être affectées. Il faut donc installer ces enceintes à une distance suffisante d'un téléviseur.
- Les enceintes de ce système sont conçues pour être posées horizontalement ou verticalement, comme préféré.
- Lors de l'installation des enceintes sur une étagère élevée, etc. toujours les fixer à l'étagère avec des attaches métalliques ou dispositifs équivalents, comme précaution contre une chute des enceintes si l'étagère oscille.

ATTENTION: Fixation des enceintes au mur

Les enceintes sont conçues pour être fixées au mur. Ce travail doit être fait par une personne compétente.

NE LE FAITES PAS vous-même pour éviter tout risque de chute d à une mauvaise fixation ou un manque de solidité du mur.

LUIDSPREKER VOOR A/V KOMBINATIE

De SP-DSC99TN is magnetisch afgeschermd zodat deze in de buurt van een TV en monitor kan worden geplaatst en hierbij de kleuren op het scherm van deze toestellen niet door de luidspreker worden aangetast.

Indien de luidspreker echter op een verkeerde wijze wordt geïnstalleerd, worden de kleuren mogelijk wel aangetast.

Let daarom op het volgende:

1. Wanneer u deze luidsprekers in de buurt van een TV plaatst, moet u de spanningschakelaar van de TV in de uit-stand drukken of de stekker uit het stopcontact trekken alvorens u de luidsprekers installeert. Wacht vervolgens tenminste 30 minuten nadat het systeem is geïnstalleerd alvorens de spanning van de TV weer in te schakelen.
2. Indien er een andere luidspreker bij de TV wordt geplaatst, kan die luidspreker mogelijk een negatieve invloed op de kleuren van het beeld hebben.
3. Het kan voorkomen dat deze magnetisch afgeschermd luidsprekers een negatieve invloed op bepaalde typen TV's heeft.

INSTALLEREN VAN DE SURROUNDLUIDSPREKERS

- Dit toestel is niet anti-magnetisch. Het televisiebeeld kan daarom door dit toestel worden gestoord indien deze twee toestellen dicht bij elkaar zijn geplaatst. Plaats de toestellen daarom niet te dicht bij elkaar.
- De luidsprekers van dit toestel kunnen naar uw persoonlijke voorkeur horizontaal of vertikaal worden geplaatst.
- Bevestig de luidsprekers met beugels indien deze op een hoge plank of dergelijke worden geplaatst. De luidsprekers kunnen door trillingen anders mogelijk vallen.

OPGEPAST: de luidsprekers tegen de muur bevestigen

De luidsprekers zijn ontworpen voor bevestiging tegen de muur. Laat dit werkje opknappen door een bekwame persoon.

Hang de luidsprekers NIET zelf op om te vermijden dat ze onverwachts naar beneden vallen ten gevolge van een slechte bevestiging of een zwakke wandstructuur.

ALTAVOZ PARA COMBINACIÓN A/V

El modelo SP-DSC99TN tiene una construcción protegida magnéticamente para una colocación contigua de los televisores y monitores sin causar aberraciones de color.

Sin embargo, el color puede ser afectado como resultado del modo de instalar el sistema de altavoces.

1. Al colocar los altavoces cerca de un televisor, desactivar el interruptor de alimentación principal del televisor o desconectarlo antes de instalar los altavoces.

Esperar a lo menos 30 minutos después de instalar el sistema y antes de activar la alimentación del televisor.

2. Si otro sistema del altavoz ha sido ajustado cerca del televisor, este sistema puede causar una desigualdad de color en la imagen del televisor.
3. A pesar de la protección de estos altavoces, algunos tipos del televisores pueden estar afectados por ellos. En este caso, mover los altavoces a una distancia corta de la unidad del televisor.

CÓMO INSTALAR LOS ALTAVOCES DE ENTORNO

- Este equipo no tiene protección antimagnética. Si se lo coloca junto a un televisor, los colores en la pantalla pueden verse afectados. Si se da este caso, ubicar el equipo a más distancia del televisor.
- Los altoparlantes de este sistema han sido diseñados de manera que puedan ser utilizados en posición vertical o bien en posición horizontal, según se prefiera.
- Al ubicar los altoparlantes en lugares altos tales como repisas es importante asegurarlos correctamente con trabas para evitar el riesgo que caigan al moverse la repisa.

PRECAUCION: Instalación de los altavoces en la pared Los altavoces se han diseñado para fijarse a la pared. Cuando los instale en la pared, solicite a una persona cualificada que lo haga por usted.

NO cuelgue usted mismo los altavoces para evitar que puedan desprenderse debido a una instalación incorrecta o a la debilidad de la pared.

ALTOPARLANTE PER COMBINAZIONE A/V

Il modello SP-DSC99TN presenta una costruzione protetta magneticamente per una installazione adiacente ai televisori e monitori senza causa aberrazioni del colore.

Comunque, il colore può essere influenzato negativamente come risultato dell'installazione del sistema degli altoparlanti.

1. Quando si mettono questi altoparlanti vicino ad un televisore, disattivare l'interruttore dell'alimentazione principale del televisore oppure scollegarlo prima di installare gli altoparlanti. Aspettare almeno 30 minuti dopo che il sistema è installato e prima di attivare l'alimentazione del televisore.
2. Se un'altro sistema di altoparlanti è stato regolato vicino al televisore, questo sistema può causare una irregolarità del colore dell'immagine del televisore.
3. Malgrado la protezione di questi altoparlanti, alcuni tipi di televisori possono essere influenzati negativamente da loro. Se questo si produce, spostare gli altoparlanti ad una distanza corta dal televisore.

COME INSTALLARE GLI ALTOPARLANTI CIRCOSTANTI

- Questa unità non è protetta contro la calamita. Se viene messa vicina a un posto di televisione, il colore dello schermo di televisione diventerà disuniforme. Se si effettua il montaggio, posizionarla a una certa distanza dal posto di televisione.
- Gli altoparlanti di questo sistema sono stati concepiti per stare al lato oppure sul fondo, come desiderato.
- Quando gli altoparlanti devono essere messi su un scaffale a muro alto, assicurarsi che siano fissati allo scaffale usando dei sostegni metallici, come precauzione contro la caduta degli altoparlanti in caso di vibrazioni dello scaffale.

ATTENZIONE: Fissaggio degli altoparlanti alla parete

Gli altoparlanti devono essere fissati alla parete da una persona qualificata.

NON provvedere personalmente al fissaggio degli altoparlanti alla parete per evitare il rischio che cadano a causa di una procedura di fissaggio non corretta o della debolezza della parete.

HÖGTALARE FÖR LJUD/VIDEOANLÄGGNING

SP-DSC99TN är en magnetiskt avskämd högtalare som kan placeras intill en TV-mottagare eller monitor utan att det uppstår färgskiftningar på bildskärmen.

Det kan emellertid ändå hända att färgbilden påverkas, beroende på hur högtalaren monterats.

Observera därför följande:

1. Tryck på huvudströmbrytaren på TV:n för att slå av strömmen, eller koppla ur TV:ns nätkabel, innan högtalaren placeras nära en TV. Vänta i minst 30 minuter efter att högtalaren monterats, innan strömmen till TV:n slås på.
2. En annan högtalare, som placerats nära TV:n, kan orsaka färgskiftningar på bildskärmen.
3. Trots att denna högtalare är magnetiskt avskämd, kan det hända att vissa typer av TV-apparater ändå påverkas av den. Flytta i så fall högtalaren lite längre bort från TV:n.

PLACERING/MONTERING AV AKUSTISKA HÖGTALARE

- Denna utrustning är inte magnetiskt avskämd. Om den ställs när en TV-mottagare, kan TV-bildens färger bli ojämna. Ställ därför utrustningen på tillräckligt avstånd från TV-mottagaren.
- Högtalarna kan användas stående på sidan eller på undersidan, vilket som önskas.
- Om högtalarna ställs högt upp på t.ex. en hylla, skall du sätta fast dem i hyllan med metallbeslag eller liknande, detta för att förhindra att högtalarna faller ned om hyllan stöts till.

VARNING: Montering av högtalarna på en vägg

Högtalarna är avsedda för väggmontering. De bör endast hängas på väggen av en person med tillräcklig erfarenhet.

Häng INTE högtalarna på väggen själv, eftersom det finns risk att de ramlar ned om monteringen görs fel eller väggen inte är tillräckligt stark.

HÖJTTALERE TIL A/V/-KOMBINATION

SP-DSC99TN er magnetisk afskærmede og kan således placeres indtil TV-apparater og monitorer uden at farverne påvirkes.

Farverne kan imidlertid påvirkes afhængig af, hvordan højttalersystemet installeres.

Der skal derfor tages hensyn til følgende:

1. Ved placering af højttalerne i nærheden af et TV-apparat, skal der slukkes for apparatet eller det skal kobles fra netter før højttalerne installeres.

Vent så i mindst 30 minutter efter højttalerinstallationen før der tændes for TV-apparatet igen.

2. Hvis der er andre højttalere i TV-apparatets nærhed kan disse påvirke farvegengivelsen.
3. Selvom højttalerne er magnetisk afskærmet, kan farverne alligevel, afhængig af TV-modellen, påvirkes. Hvis dette indtræffer, bør højttalerne placeres lidt længere væk fra TV-apparatet.

HVORDAN SURROUND HÖJTTALERSYSTEMET INSTALLERES

- Disse højttalere er ikke beskyttede mod magnetisme. Hvis de anbringes i nærheden af et fjernsyn, kan det bevirke, at farverne på skærmen flyder ud. Det er derfor vigtigt, at højttalerne placeres på god afstand af fjernsynet.
- Højttalerne er beregnet til at stå på siden eller undersiden, som det foretrækkes.
- Hvis højttalerne anbringes højt på en hyld, bør de fastgøres til hylden ved hjælp af metalbeslag. Dette forhindrer, at højttalerne falder ned på grund af at hylden ryster.

ADVARSEL: Montering af højttalerne på væggen

Højttalerne er designet til montering på væg. Få højttalerne monteret på væggen af en kvalificeret person.

HÆNG IKKE højttalerne op selv, da de herved kan risikere at falde ned på grund af forkert montering eller svagheder i væggen.

A/V-YHDISTELMÄÄ VARTEN OLEVA KAIUTIN

Malli SP-DSC99TN on magneettisuojattu, joten sen vo sijoittaa TV-vastaanottimien ja monitorien viereen ilman että kuva vääristyy.

Väriin sattaa kuitenkin tulla muutoksia sen mukaan, kuinka kaiutinjärjestelmä on asennettu.

Kiinnitä huomiota seuraaviin seikkoihin:

1. Kun asetat nämä kaiuttimet TV-vastaanottimen lähelle, katkaise vastaanottimen päävirtakytkin tai irrota se seinäkoskettimesta, enne kuin asennat kaiuttimet. Asennettuasi järjestelmän odota ainakin 30 minuuttia ennen kuin kytket TV-vastaanottimen virran päälle.
2. Mikäli toinen kaiutinjärjestelmä on sijoitettu TV-vastaanottimen lähelle, järjestelmä saattaa aiheuttaa värin epätasaisuutta TV-kuvassa.
3. Vaikka nämä kaiuttimet on suojattu, ne saattavat aiheuttaa häiriöitä jonkin tyyppisille TV-vastaanottimille. Jos näin käy, tulee kaiuttimet siirtää pienen etäisyyden päähän TV-vastaanottimesta.

SURROUND-KAIUTTIMIEN ASENTAMINEN

- Laite ei ole suojattu magneettisuudelta. Jos se asetetaan TV:n lähelle, TV-kuvan väri saattaa olla epätasainen. Laite on asennettava tarpeeksi kauas TV-vastaanottimista.
- Tämän järjestelmän kaiuttimet on tarkoitettu asetettaviksi kyljelleen tai pohja alas.
- Kun kaiuttimet asetetaan esim. Korkealle hyllylle, aseta hyllyjen reunoiille metalliset tms. Kiinnittimet, jotta kaiuttimet eivät pääse putoamaan hyllyn väristessä.

HUOMAUTUS: kaiuttimien seinäasennus

Kaiuttimet on suunniteltu seinäasennusta varten. Seinäasennus tulee antaa ammattitaitoisen asentajan tehtäväksi.


ÄLÄ itse asenna kaiuttimia seinään. Tällöin vältät virheellisen asennuksen tai heikon seinärakenteen aiheuttaman kaiuttimen putoamisvaaran.

Amplifier connection
Verstärkeranschluß
Raccordement à l'amplificateur
Aansluiting op de versterker
Anslutning till en förstärkare
Conexión al amplificador
Collegamento dell'amplificatore
Forstærkertilslutning
Vahvistimen liitäntä

Center speaker
Mittenslautsprecher
Enceinte centrale
Middenluidspreker
Altavoz central

Diffusore centrale
Mitthögtalare
Centerhöjtalar
Keskikaiutin


Amplifier output terminals
Ausgang des Verstärkers
Bornes de sortie de l'amplificateur
Uitgangsaansluitingen van de versterker
Terminali de uscita de amplificador
Terminali de uscita dell'amplificator
Utgångar på förstärkaren
Forstærkerudgangsøsninger
Vahvistimen ulostuloliittimet

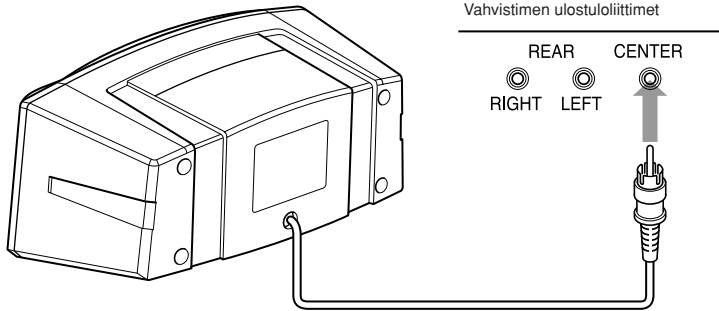


Surround speakers
Rundumlautsprecher
Enceintes surround
Surroundluidsprekers
Altavoces perimétricos

Diffusori surround
Surroundhögtalare
Surroundhöttalar
Ympäristötilkakaiuttimet

Amplifier output terminals
Ausgang des Verstärkers
Bornes de sortie de l'amplificateur
Uitgangsaansluitingen van de versterker
Terminali de uscita de amplificador
Terminali de uscita dell'amplificator
Utgångar på förstärkaren
Forstærkerudgangsøsninger
Vahvistimen ulostuloliittimet

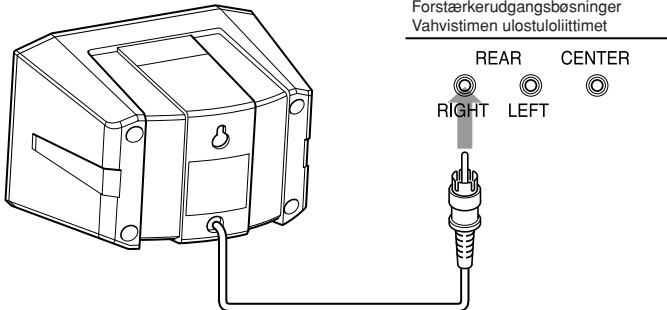

Wall mounting hole
Loch für Wandmontage
Trou de montage à mur
Gaatje voor wandmontering
Orificio para montaje en la pared
Foro di montaggio al muro
Hål för väggmontering
Monteringshul i væggen
Aukko seinään asennusta varten

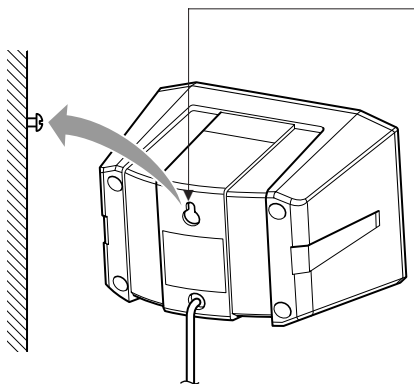

CONNECTION

A pin plug is attached to the tip or the speaker cord. If the speaker connection terminal on the amplifier to which the speaker is to be connected is a pin jack, connect the left-hand speaker's lead to the left terminal, and the right-hand speaker's lead to the right terminal.

- Turn off power of all equipment before connecting the speakers to the amplifier.
- The nominal impedance of the SP-DSC99TN is 16 Ω. Connect them to your amplifier with the load impedance of 16 Ω .
- The nominal impedance of the SP-DSS99TN is 16 Ω. Connect them to an amplifier with the load impedance of 16 Ω speaker.
- The maximum power handling capacity is shown in the SPECIFICATIONS. Excessive input to the speaker will result in abnormal noise and possible damage. The following cases described below may cause an overload of the speakers. Be sure to lower the amplifier volume beforehand.
 - 1) Noise during FM tuning.
 - 2) High level signals containing high frequency components produced by a tape deck in the fast forward mode.
 - 3) Click noise produced when turning power of other components on and off.
 - 4) Click noise produced when connecting or disconnecting cords with the power on.
 - 5) Click noise when the cartridge is replaced with the power on .
 - 6) Click noise produced when operating amplifier switches.
 - 7) Continuous high frequency oscillation or high pitch musical instrument sound.
 - 8) Howling or feed back when using a microphones.

SPECIFICATIONS

SP-DSC99TN

Type	: Full range bass-reflex type (Magnetically-shielded type)
Speaker	
Full range	: 8 cm (3-3/16 in.) cone × 1
Power Handling Capacity	: 30 W
Impedance	: 16 Ω
Frequency Range	: 70 Hz—25 000 Hz
Sound Pressure Level	: 84 dB/W·m
Dimensions (W × H × D)	: 245 mm × 110 mm × 145 mm (9-11/16 in. × 4-3/8 in. × 5-3/4 in.)
Mass	: 0.8 kg (1.8 lbs)

SP-DSS99TN

Type	: Full range bass-reflex type
Speaker	
Full range	: 8 cm (3-3/16 in.) cone × 1
Power Handling Capacity	: 30 W
Impedance	: 16 Ω
Frequency Range	: 85 Hz—20 000 Hz
Sound Pressure Level	: 83 dB/W·m
Dimensions (W × H × D)	: 160 mm × 110 mm × 136 mm (6-5/16 in. × 4-3/8 in. × 5-3/8 in.)
Mass	: 0.55 kg (1.3 lbs)

Design and specifications subject to change without notice.

ANSCHLUSS

Das Ende der Lautsprecherleitung ist mit einem Stifstecker ausgerüstet. Ist die Lautsprecheranschlußlemme des Verstärkers, woran der Lautsprecher angeschlossen wird, mit einer Anschlußbüchse ausgerüstet, dann wird die Leitung des linken Lautsprechers an die Anschlußklemme Links und der rechte Lautsprecher an die Anschlußklemme Rechts angeschlossen.

- Alle Geräte der Anlage ausschalten, bevor die Boxen an den Verstärker angeschlossen werden.
- Die Nenn-Impedanz der Lautsprecher-Systeme SP-DSC99TN beträgt 16 Ω. Schließen Sie sie an einen Verstärker mit einer Last-impedanz von 16 Ω an.
- Die Nenn-Impedanz der Lautsprecher-Systeme SP-DSS99TN beträgt 16 Ω. Schließen Sie sie an einen Verstärker mit einer Last-impedanz von 16 Ω an.
- Die maximale Belastbarkeit ist in den TECHNISCHEN DATEN aufgeführt. Zu starke Belastung der Boxen hat anomale Störgeräusche und mögliche Schäden zur Folge. In den folgenden Fällen können die Boxen überlastet werden. Immer vorher die Lautstärke niedriger einstellen.
 - 1) Geräusche beim Einstellen von UKW-Sendern.
 - 2) Hochpegelige Signale mit Hochfrequenz-Anteilen, die von Tonbanddecks beim Schnellvorspulen erzeugt werden.
 - 3) Klickgeräusche, wenn die Spannungsversorgung anderer Komponenten ein- und ausgeschaltet wird.
 - 4) Klickgeräusche, wenn Kabel angeschlossen oder abgetrennt werden, während die Spannungsversorgung eingeschaltet ist.
 - 5) Klickgeräusche, wenn der Tonabnehmer des Plattenspielers ausgewechselt wird, während die Spannungsversorgung eingeschaltet ist.
 - 6) Klickgeräusche, die beim Betätigen von Schaltern des Verstärkers erzeugt werden.
 - 7) Kontinuierliche Oszillation bei hohen Frequenzen oder hohen Tönen von Musikinstrumenten.
 - 8) Bei Verwendung eines Mikrofons treten Pfeif- oder andere Rückkopplungsgeräusche auf.

TECHNISCHE DATEN

SP-DSC99TN

Typ	: Vollbereich-Baßreflextyp (magnetisch abgeschirmt)
Lautsprecher Vollbereich	: 8 cm Konus × 1
Belastbarkeit	: 30 W
Impedanz	: 16 Ω
Frequenzgang	: 70 Hz—25 000 Hz
Schalldruckpegel	: 84 dB/W·m
Abmessungen (B × H × T)	: 245 mm × 110 mm × 145 mm
Gewicht	: 0,8 kg

SP-DSS99TN

Typ	: Vollbereich-Beßreflextyp
Lautsprecher Vollbereich	: 8 cm Konus × 1
Belastbarkeit	: 30 W
Impedanz	: 16 Ω
Frequenzgang	: 85 Hz—20 000 Hz
Schalldruckpegel	: 83 dB/W·m
Abmessungen (B × H × T)	: 160 mm × 110 mm × 136 mm
Gewicht	: 0,55 kg

Technische Änderungen vorbehalten.

RACCORDEMENT

Un contact à fiche est fixé à l'extrémité du cordon d'enceinte. Dans le cas où la borne d'enceinte de l'amplificateur à brancher est d'un jack de contact, installer alors l'enceinte à gauche sur la borne gauche et sur la borne droite lorsqu'il s'agit de celle à droite.

- Couper l'alimentation de toute la chaîne avant de raccorder les haut-parleurs à l'amplificateur.
- L'impédance nominale des enceintes SP-DSC99TN est de 16 Ω. Les raccorder à un amplificateur ayant une impédance de charge de haut-parleur de 16 Ω.
- L'impédance nominale des enceintes SP-DSS99TN est de 16 Ω. Les raccorder à un amplificateur ayant une impédance de charge de haut-parleur de 16 Ω.
- La puissance maximale admissible est indiquée sur les CARACTERISTIQUE TECHNIQUES. Une entrée plus grande peut produire des bruits anormaux et abîmer les haut-parleurs. Dans les cas où les signaux décrits ci-après sont appliqués aux haut-parleurs, même si les signaux sont inférieurs à l'entrée maximale disponible, ils peuvent produire une surcharge et griller le bobinage des haut-parleurs. Bien baisser le volume de l'amplificateur au préalable.
 - 1) Bruit pendant la syntonisation FM.
 - 2) Signaux de haut niveau contenant des composantes haute fréquence produites par une platine à bande en mode d'avance rapide.
 - 3) Bruit de déclic produit en commutant l'alimentation d'autres éléments.
 - 4) Bruit de déclic produit en raccordant ou débranchant des cordons avec l'alimentation présente.
 - 5) Bruit de déclic lorsque la cartouche est remplacée avec l'alimentation présente.
 - 6) Bruit de déclic produit en manipulant les commutateurs de l'amplificateur.
 - 7) Oscillation continue haute fréquence ou hauteur élevée produite électroniquement par le son d'un instrument de musique.
 - 8) Hurlissement en utilisant des microphones.

CARACTERISTIQUES

SP-DSC99TN

Typ	: Type bass reflex à gamme complète (Type à protection magnétique)
Haut-parleur Gamme complète	: Conique de 8 cm × 1
Puissance admissible	: 30 W
Impédance	: 16 Ω
Gamme de fréquence	: 70 Hz—25 000 Hz
Spensibilité	: 84 dB/W·m
Dimensions (L × H × P)	: 245 mm × 110 mm × 145 mm
Masse	: 0,8 kg

SP-DSS99TN

Typ	: Type bass reflex à gamme complète
Haut-parleur Gamme complète	: Conique de 8 cm × 1
Puissance admissible	: 30 W
Impédance	: 16 Ω
Gamme de fréquence	: 85 Hz—20 000 Hz
Spensibilité	: 83 dB/W·m
Dimensions (L × H × P)	: 160 mm × 110 mm × 136 mm
Masse	: 0,55 kg

Présentation et caractéristiques modifiables sans préavis.

AANSLUITINGEN

Een pinstekker is bevestigd aan het uiteinde van het luidsprekerssnoer.

Indien de aansluiting voor de luidspreker op de verterker aan welke de luidspreker op de links aansluiting, en de draad van de rechtse luidspreker op de rechts aansluiting aan.

- Schakel de spanning van alle apparatuur uit alvorens de luidspreker met de versterker te verbinden.
- De nominale impedantie van de SP-DSC99TN bedraagt 16 Ω . Sluit de luidsprekers aan op een versterker met een laadimpedantie van 16 Ω .
- De nominale impedantie van de SP-DSS99TN bedraagt 16 Ω . Sluit de luidsprekers aan op een versterker met een laadimpedantie van 16 Ω .
- Het maximale vermogen is aangegeven in het gedeelte TECHNISCHE GEGEVENS.

Als een te sterk vermogen naar de luidspreker wordt gevoerd, zal dit resulteren in ruis en mogelijk beschadiging van de luidspreker. De luidsprekers worden mogelijk in de hieronder beschreven gevallen overbelast. Verlaag daarom in deze gevallen het volume van de versterker.

- 1) Ruis, zoals dit optreedt tijdens afstemming op een FM-zender.
- 2) Hoogfrequentie signalen van een hoog niveau, zoals die tijdens het vooruitspoelen van een tapedeck worden geproduceerd.
- 3) Klikkende geluiden, die worden veroorzaakt door het in- en uitschakelen van de netspanning van andere componenten.
- 4) Klikkende geluiden, zoals die worden geproduceerd bij het tot stand brengen of verbreken van aansluitingen terwijl de netspanning is ingeschakeld.
- 5) Klikkende geluiden, zoals die optreden bij het vervangen van het element van een draaitafel terwijl de netspanning is ingeschakeld.
- 6) Klikkende geluiden, zoals die worden geproduceerd door bediening van de schakelaars van de versterker.
- 7) Doorlopende hoge frequentie schommelingen of geluid van instrument met hoge tonen.
- 8) Een huilend geluid of feedback bij gebruik van een mikrofoon.

CONEXIÓN

Una clavija monopolar está fijada al extremo del cordón del altavoz. Si el terminal de conexión para altavoz en el amplificador al cual se conectará el altavoz es un jack monopolar, conecte el cable del altavoz izquierdo al terminal izquierdo, y el cable de altavoz derecho al terminal derecho.

- Desactivar la alimentación de todo el equipo antes de conectar el altoparlante al amplificador.
- La impedancia nominal des SP-DSC99TN es de 16 Ω . Conecte los altavoces a un amplificador con una impedancia de carga de 16 Ω .
- La impedancia nominal des SP-DSS99TN es de 16 Ω . Conecte los altavoces a un amplificador con una impedancia de carga de 16 Ω .
- La capacidad de uso de la alimentación máxima se indica en la sección de las ESPECIFICACIONES.

Una entrada excesiva del altavoz causará ruido anormal y posibilidad de daño. Los casos descritos a continuación pueden ocasionar una sobrecarga de los altavoces. Asegúrese de que el volumen del amplificador sea reducido de antemano.

- 1) Ruido durante la sintonía en FM.
- 2) Señales de alto nivel que contengan componentes de alta frecuencia producidos por un magnetófono en el modo de avance rápido.
- 3) Ruidos de conmutación provocados al encender y apagar otros componentes.
- 4) Ruido de conmutación al conectar o desconectar cables con los componentes encendidos.
- 5) Ruido de conmutación cuando se reemplaza la cápsula con los componentes encendidos.
- 6) Ruido de conmutación provocados por la operación de los selectores del amplificador.
- 7) Oscilación de frecuencia elevada continua o sonido de instrumento musical de tono elevado.
- 8) Zumbido o feed back cuando se utiliza un micrófono.

TECHNISCHE GEGEVENS

SP-DSC99TN

Type	: Full-range bass-reflex type (Magnetisch afgeschermd)
Luidspreker	
Full-range	: 8 cm Kegeltype \times 1
Toegestane vermogenverwerking:	30 W
Impedantie	: 16 Ω
Frekwentiebereik	: 70 Hz—25 000 Hz
Geluidrukniveau	: 84 dB/W·m
Afmetingen (B \times H \times D)	: 245 mm \times 110 mm \times 145 mm
Gewicht	: 0,8 kg

SP-DSS99TN

Type	: Full-range bass-reflex type
Luidspreker	
Full-range	: 8 cm Kegeltype \times 1
Toegestane vermogenverwerking:	30 W
Impedantie	: 16 Ω
Frekwentiebereik	: 85 Hz—20 000 Hz
Geluidrukniveau	: 83 dB/W·m
Afmetingen (B \times H \times D)	: 160 mm \times 110 mm \times 136 mm
Gewicht	: 0,55 kg

Veranderingen in technische gegevens en ontwerp onder voorbehoud.

ESPECIFICACIONES

SP-DSC99TN

Tipo	: Tipo bajo reflex de gamma completa (Tipo de protección magnética)
Altavoz	
Gamma completa	: Tipo cónico do 8 cm \times 1
Potencia máxima	: 30 W
Impedancia	: 16 Ω
Gamma de frecuencia	: 70 Hz—25 000 Hz
Nivel de presión sonora	: 84 dB/W·m
Dimensiones (An \times Al \times Prf)	: 245 mm \times 110 mm \times 145 mm
Peso	: 0,8 kg

SP-DSS99TN

Tipo	: Tipo bajo reflex de gamma completa
Altavoz	
Gamma completa	: Tipo cónico do 8 cm \times 1
Potencia máxima	: 30 W
Impedancia	: 16 Ω
Gamma de frecuencia	: 85 Hz—20 000 Hz
Nivel de presión sonora	: 83 dB/W·m
Dimensiones (An \times Al \times Prf)	: 160 mm \times 110 mm \times 136 mm
Peso	: 0,55 kg

El diseño y las especificaciones están sujetos a cambios sin aviso.

COLLEGAMENTO

Uno spinotto a spillo viene fissato all'estremità del cordone degli altoparlanti. Se il morsetto di collegamento degli altoparlanti sull'amplificatore al quale è collegato l'altoparlante è un jack a spillo, collegare il filo dell'altoparlante della sinistra al morsetto di sinistra, e il filo dell'altoparlante della destra, al morsetto di destra.

- Disattivare l'alimentazione di tutta l'attrezzatura prima di collegare l'altoparlante all'amplificatore.
- L'impedenza nominale del modello SP-DSC99TN è 16 Ω. Collegare gli altoparlanti ad un amplificatore con un'impedenza di carico per altoparlanti di 16 Ω.
- L'impedenza nominale del modello SP-DSS99TN è 16 Ω. Collegare gli altoparlanti ad un amplificatore con un'impedenza di carico per altoparlanti di 16 Ω.
- La capacità di uso dell'alimentazione massima viene mostrata nella sezione delle SPECIFICAZIONI.

Un ingresso eccessivo dell'altoparlante risulterà rumore anormale e possibilità di danno. I casi descritti di seguito possono causare un sovraccarico degli altoparlanti. Assicurarsi che il volume dell'amplificatore sia ridotto in anticipo.

- 1) Generazione di rumore durante la sintonizzazione FM.
- 2) Segnali di alto livello che contengono dei componenti ad alta frequenza riprodotti da una piastra a cassette nel modo di avanzamento rapido.
- 3) Si sentirà uno scatto quando accendete o spegnete la corrente degli altri componenti.
- 4) Si sentirà uno scatto quando collegate o scollegate i cavi con la corrente accesa.
- 5) Si sentirà uno scatto quando viene sostituita la cartuccia con la corrente accesa.
- 6) Si sentirà uno scatto quando vengono usati gli interruttori dell'amplificatore.
- 7) Oscillazione di alta frequenza continua oppure suono dello strumento musicale di tono alto.
- 8) Ronzio oppure feed back quando si utilizza un microfono.

SPECIFICAZIONI

SP-DSC99TN

Tipo : Tipo basso reflex a gamma completa
(Tipo a protezione magnetica)

Altoparlanti

Gamma completa : Cono da 8 cm × 1
Capacità di potenza : 30 W
Impedenza : 16 Ω
Gamme di frequenza : Da 70 Hz a 25 000 Hz
Livello della pressione sonora : 84 dB/W·m
Dimensioni (L × A × P) : 245 mm × 110 mm × 145 mm
Massa : 0,8 kg

SP-DSS99TN

Tipo : Tipo basso reflex a gamma completa

Altoparlanti

Gamma completa : Cono da 8 cm × 1
Capacità di potenza : 30 W
Impedenza : 16 Ω
Gamme di frequenza : Da 85 Hz a 20 000 Hz
Livello della pressione sonora : 83 dB/W·m
Dimensioni (L × A × P) : 160 mm × 110 mm × 136 mm
Massa : 0,55 kg

Il disegno e le specifiche sono soggetti a cambiamenti senza preavviso.

ANSLUTNING

En stiftkontakt sitter i ändan av högtalarledningen. Om förstärkarens högtalaruttag är ett uttag för stiftkontakter, skall du ansluta den vänstra högtalarens ledning till det vänster kanal uttaget och den högra högtalarens ledning till det höger kanal uttaget.

- Slå av strömmen till samtliga komponenter före högtalarnas anslutning till förstärkaren.
- Nominell impedans för SP-DSC99TN är 16 Ω. Anslut salunda högtalarna till en förstärkare avsedd för en belastning med 16 Ω högtalare.
- Nominell impedans för SP-DSS99TN är 16 Ω. Anslut salunda högtalarna till en förstärkare avsedd för en belastning med 16 Ω högtalare.
- Högtalarnas maximala effekthanteringskapacitet anges i TEKNISKA DATA.

För hög nivå leder till störningar i ljudet via högtalarna och kan orsaka skador på högtalarna. De situationer som beskrivs nedan kan leda till överbelastning av högtalarna. Var noga med att först sänka volymnivån på förstärkaren.

- 1) Brus under inställning av FM-radiostationer.
- 2) Starka, högfrekventa signaler från ett kassettdäck under snabbavspelning.
- 3) Ljudbangar som uppstår när andra apparater i anläggningen slås till och från.
- 4) Skrapljud som uppstår när anslutningskablar ansluts eller kopplas från.
- 5) Skrapljud som uppstår när pickupelementet på en skivspelare byts.
- 6) Ljudbangar som uppstår när du använder förstärkarens omkopplare.
- 7) Kontinuerliga högfrekventa svängningar eller instrumentalt ljud med höga toner.
- 8) Tjut eller rundgång som uppstår när mikrofon används.

TEKNISKA DATA

SP-DSC99TN

Typ : Basreflexhögtalare för hela frekvensområdet
(Magnetiskt avskärmat)

Högtalarelement

Täcker hela frekvensområdet : 8 cm Kon × 1
Effect : 30 W
Impedans : 16 Ω
Frekvensomfång : 70 Hz—25 000 Hz
Verkningsgrad : 84 dB/W·m
Ytermått (B × H × D) : 245 mm × 110 mm × 145 mm
Vikt : 0,8 kg

SP-DSS99TN

Typ : Basreflexhögtalare för hela frekvensområdet

Högtalarelement

Täcker hela frekvensområdet : 8 cm Kon × 1
Effect : 30 W
Impedans : 16 Ω
Frekvensomfång : 85 Hz—20 000 Hz
Verkningsgrad : 83 dB/W·m
Ytermått (B × H × D) : 160 mm × 110 mm × 136 mm
Vikt : 0,55 kg

Rätt till ändringar av utförande och specifikationer förbehålles utan föregående meddelande.

TILSLUTNING

Der sidder en stikpropp for enden af højttalerkablet. Hvis højttaleren skal tilsluttes, er en stik-jack, skal den venstre højttalers kabel sættes i den venstre klemterminal og den højre højttalers kabel i den højre klemterminal.

- Sluk for strømmen i al udrustningen før højttalerne tilsluttes forstærkeren.
- Den nominelle impedans for SP-DSC99TN er 16 Ω. Tilslut dem til en forstærker med en belastningsimpedans for 16 Ω højttaler.
- Den nominelle impedans for SP-DSS99TN er 16 Ω. Tilslut dem til en forstærker med en belastningsimpedans for 16 Ω højttaler.
- Maksimal effektkapacitet angives i afsnittet SPECIFIKATIONER. Hvis højttalerne drives med for høj effekt, opstår der forvrængning og højttalerne kan beskadiges. Normalt set, fås ca. Situationerne, som beskrives nedenfor, kan resultere i overbelastning af højttalerne. Pas på at skrue ned for volumen før disse situationer opstår.
 - 1) En FM-tuner frembringer kraftig støj underfor stationsindstillingsområdet.
 - 2) En kassettebåndoptager kan frembringe en stor udgangseffekt under hurtig fremsporing. Denne udgangseffekt indeholder normalt højfrekvente komponenter med fejlfunktion til følge.
 - 3) Nogle forstærkere og tunere udvikler en meget høj stødimpedans, når der tændes eller slukkes for dem.
 - 4) Når kredsløbet er stømførende med højeffektsniveau, kan der opstå en skadelig stødimpedans, når en forbindelsesledning, en mikrofon eller lignende tilsluttes eller tages ud af forbindelse.
 - 5) Der kan opstå stødimpedans, når pladespillerens pickup trækkes af eller sættes på.
 - 6) Vedvarende støj med højfrekvente komponenter kan frembringes af en oscillator, et elektronisk musikinstrument eller lignende.
 - 7) Kontinuerlige, høje frekvenssvingninger eller musikinstrumenter med høj tonehøjde.
 - 8) Hysten eller tilbagekobling ved brug af mikrofoner.

SPECIFIKATIONER

SP-DSC99TN

Type	: Fuldområdes basrefleks-type (Med magnetisk afskærmning)
Højttaler	
Bredbånd	: 8 cm membran × 1
Belastningskapacitet	: 30 W
Impedans	: 16 Ω
Frekvensområde	: 70 Hz—25 000 Hz
Lydtryksniveau	: 84 dB/W·m
Mål (B × H × D)	: 245 mm × 110 mm × 145 mm
Vægt	: 0,8 kg

SP-DSS99TN

Type	: Fuldområdes basrefleks-type
Højttaler	
Bredbånd	: 8 cm membran × 1
Belastningskapacitet	: 30 W
Impedans	: 16 Ω
Frekvensområde	: 85 Hz—20 000 Hz
Lydtryksniveau	: 83 dB/W·m
Mål (B × H × D)	: 160 mm × 110 mm × 136 mm
Vægt	: 0,55 kg

Design og specifikationer kan blive ændret uden varsel.

LIITÄNTÄ

Kaiutinjohdon päähän on kiinnitetty nastapistoke. Jos siinä vahvistimessa, johon kaiutin aiotaan liittää, on nastaliitin kaiutinliittimenä, liitä vasemmanpuoleisen kaiuttimen johto vasen ja oikeanpuoleisen kaiuttimen johto punaiseen oikea.

- Katkaise kaikkien laitteiden virta, ennen kuin liität kaiuttimen vahvistimeen.
- Mallien SP-DSC99TN nimellinen impedanssi on 16 Ω. Kytke ne vahvistimeen, jonka kuormitusimpedanssi on sama kuin 16 Ω kaiuttimen.
- Mallien SP-DSS99TN nimellinen impedanssi on 16 Ω. Kytke ne vahvistimeen, jonka kuormitusimpedanssi on sama kuin 16 Ω kaiuttimen.
- Maksimi tehon käsittelykyky näkyy osassa TEKNISET TIEDOT. Liian suuri kaiutintulo aiheuttaa epänormaalia hälyä ja mahdollisia vaurioita.

Alla kuvatuissa tapauksissa kaiuttimet saattavat ylikuormittua. Vähennä vahvistimen äänenvoimakkuutta ennalta käsin.

- 1) Kohinaa FM-virityksen aikana.
- 2) Kasettidekistä etteenpäinkelauksen aikana muodostuneet vahvat, korkeataajuuksisia komponentteja sisältävät signaalit.
- 3) Klik-ääni, joka syntyy silloin kun toiste osien virta kytketään ja katkaistaan.
- 4) Klik-ääni, joka syntyy silloin kun kytketään tai irrotetaan johtoja virran ollessa päällä.
- 5) Klik-ääni, joka syntyy silloin kun vaihdetaan hylsy virran ollessa päällä.
- 6) Klik-ääni, joka syntyy silloin kun käytetään vahvistimen kytkimiä.
- 7) Jatkuvaa korkeataajuuksista värähtelyä tai soittimen korkeaa ääntä.
- 8) Ulvontaa tai takaisinsyöttöä mikrofoneja käytettäessä.

TEKNISET TIEDOT

SP-DSC99TN


Tyyppi	: Täydellinen bassorefleksi (Magnettisesti suojattua tyyppiä)
Kaiuttimet	
Täysi asteikko	: 8 cm kartio × 1
Enimmäisteho	: 30 W
Impedanssi	: 16 Ω
Taajuusalue	: 70 Hz—25 000 Hz
Äänenpainetaso	: 84 dB/W·m
Mitat (L × K × S)	: 245 mm × 110 mm × 145 mm
Paino	: 0,8 kg

SP-DSS99TN

Tyyppi	: Täydellinen bassorefleksi
Kaiuttimet	
Täysi asteikko	: 8 cm kartio × 1
Enimmäisteho	: 30 W
Impedanssi	: 16 Ω
Taajuusalue	: 85 Hz—20 000 Hz
Äänenpainetaso	: 83 dB/W·m
Mitat (L × K × S)	: 160 mm × 110 mm × 136 mm
Paino	: 0,55 kg

Oikeudet muutoksiin pidätetään.

NOTICE

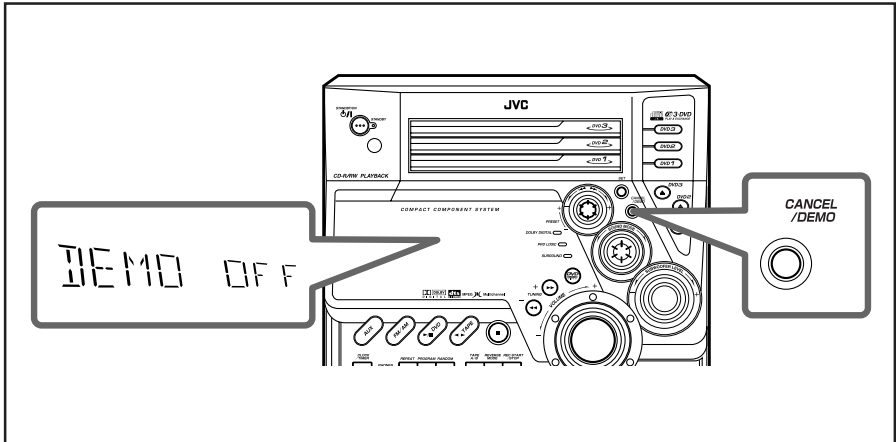

Display Demonstration

When connecting the AC power cord into a wall outlet, the unit automatically starts display demonstration.

To cancel the display demonstration, press CANCEL/DEMO until “DEMO OFF” appears on the display.

- For more detailed information about demonstration, see page 10.

GV40261-006A
[A, B, UJ]

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>