

JVC



ENGLISH

中文



ภาษาไทย

CD/CASSETTE RECEIVER

CD / 卡座收音組合機

เครื่องเล่นซีดี/เทปคลาสเซต

KW-XC828

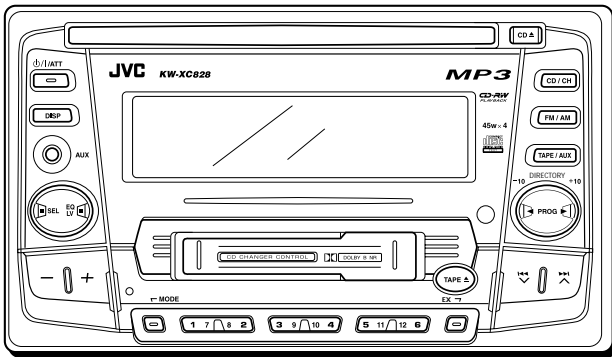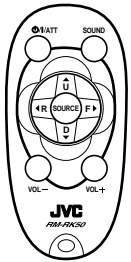

MP3

COMPACT
disc
DIGITAL AUDIO
TEXT

CD-RW
PLAYBACK

For installation and connections, refer to the separate manual.

有關安裝和連接方法，分別參閱操作手冊。

เพื่อการติดตั้งและการเชื่อมต่อ โปรดอ้างอิงคู่มือที่แยกมา

INSTRUCTIONS

使用說明書

คู่มือการใช้งาน

LVT0835-001A

IMPORTANT FOR LASER PRODUCTS

Precautions:


1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION on Volume Setting

CDs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a CD and adjust it as required during playback.

How to reset your unit

Press the reset button on the front panel using a ball-point pen or similar tool.

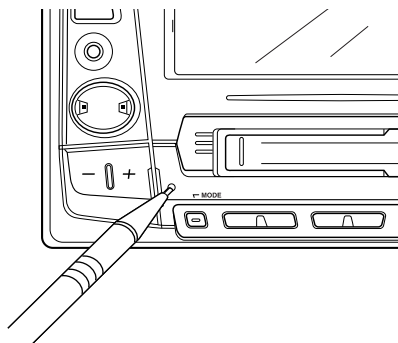

Note:

Your preset adjustments – such as preset channels or sound adjustments – will be erased.

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

CONTENTS

How to reset your unit	2	SOUND ADJUSTMENTS	25
LOCATION OF THE BUTTONS	4	Adjusting the sound	25
Control panel	4	Reinforcing the bass sound	25
Remote controller	5	Selecting preset sound modes	26
Preparing the remote controller	6	Storing your own sound adjustments	27
BASIC OPERATIONS	7	LEVEL METER SETTING	28
RADIO OPERATIONS	8	Selecting level meter patterns	28
Listening to the radio	8	OTHER MAIN FUNCTIONS	29
Storing stations in memory	9	About the demonstration mode	
Tuning in to a preset station	10	(DEMO MODE)	29
Other convenient tuner functions	11	Setting the clock	29
CD OPERATIONS	12	Changing general settings (PSM)	30
Playing a CD	12	Assigning names to the sources	33
Locating a track or a particular portion		EXTERNAL COMPONENT OPERATIONS ...	34
on a CD	13	CD CHANGER OPERATIONS	35
Selecting CD playback modes	14	Playing CDs	35
Playing a CD Text	15	Selecting CD playback modes	37
Other convenient CD functions	15	ADDITIONAL INFORMATION	38
MP3 INTRODUCTION	16	Handling cassettes	38
What is MP3?	16	Handling discs	39
How are MP3 files recorded and		TROUBLESHOOTING	40
played back?	16	SPECIFICATIONS	43
MP3 OPERATIONS	18		
Playing an MP3 disc	18		
Locating a file or particular portion			
on an MP3 disc	19		
Selecting MP3 playback modes	21		
TAPE OPERATIONS	22		
Listening to a tape	22		
Finding the beginning of a tune	23		
Other convenient tape functions	24		

BEFORE USE

*For safety....

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.


*Temperature inside the car....

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.




LOCATION OF THE BUTTONS

Control panel

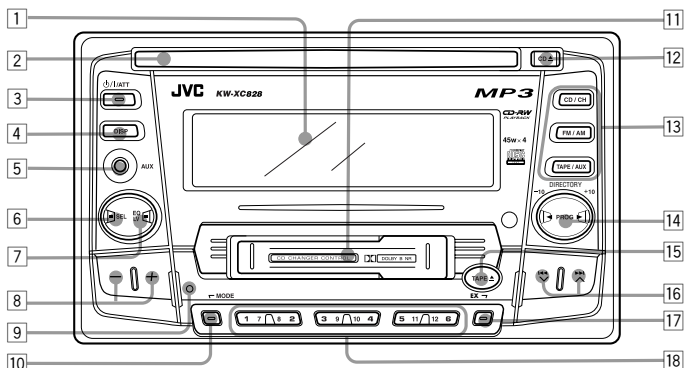

Display window

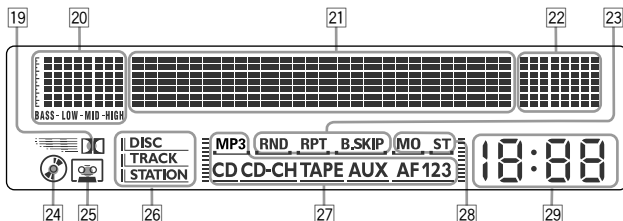

Control panel


- 1 Display window
- 2 CD loading slot
- 3 **⏻/ATT** (standby/on / attenuator) button
- 4 DISP (display) button
- 5 Auxiliary input jack
- 6 SEL (select) button
- 7 EQ LV (Equalizer/Level) button
- 8 + / - buttons
- 9 Reset button
- 10 MODE button
- 11 Cassette compartment
- 12 CD **▲** (eject) button
- 13 Source buttons
 - CD/CH button
 - FM/AM button
 - TAPE/AUX button
- 14 **◀** PROG **▶** button
 - +10 / -10 button
- 15 TAPE **▲** (eject) button
- 16 **◀◀** / **▶▶** buttons
- 17 EX (extra) button
- 18 Number buttons

Display window

- 19 Dolby NR indicator
- 20 S.BASS EQ (Super Bass/Equalizer) level / level meter
- 21 Main display
- 22 Level meter
- 23 Play mode indicators
RND (random), RPT (repeat),
B.SKIP (blank skip)
- 24 CD indicator
- 25 TAPE indicator
- 26 Text name indicators
DISC, TRACK, STATION
- 27 Source indicators
MP3, CD, CD-CH (CD-changer), TAPE, AUX,
F1, F2, F3, A
- 28 Tuner reception indicators
MO (monaural), ST (stereo)
- 29 Clock display



Remote controller

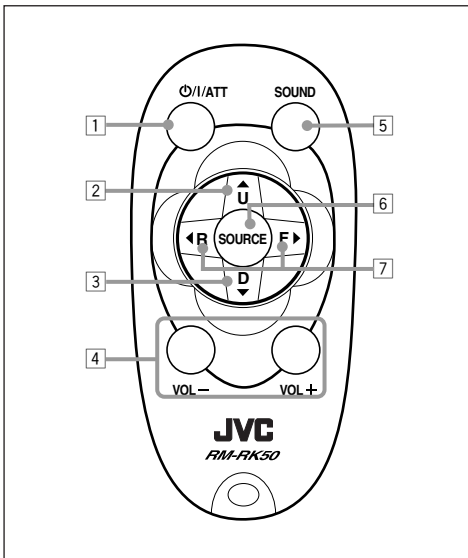

1 Functions the same as the $\text{\textcircled{P}}/ATT$ button on the main unit.

- 2
- Changes the band while listening to the radio.
 - Skips to the first file of the next directory if pressed while listening to an MP3 disc.
 - Changes the tape direction while listening to a tape.
 - Selects disc numbers in the increasing order, and starts playing while listening to the CD changer.

- 3
- Selects preset numbers in the increasing order while listening to the radio.
 - Skips to the first file of the previous directory if pressed while listening to an MP3 disc.
 - Selects disc numbers in the decreasing order, and starts playing while listening to the CD changer.

4 Functions the same as the +/- buttons on the main unit.

Note:

This button does not function for the preferred setting mode (PSM) adjustment.

5 Selects the sound mode.
Each time you press the button, the EQ (equalizer) mode changes.

6 Selects the source.
Each time you press SOURCE, the source changes.


- 7
- Searches stations while listening to the radio.
 - Fast-forwards or reverses the track/file if pressed and held while listening to any disc.
 - Skips to the beginning of the next tracks or goes back to the beginning of the current (or previous) track/file if pressed briefly while listening to any disc.
 - Fast-forwards or rewinds a tape and find a beginning of a tune (MMS) while listening to a tape. To release this operation, press button 2 then starts playback.



Preparing the remote controller

Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

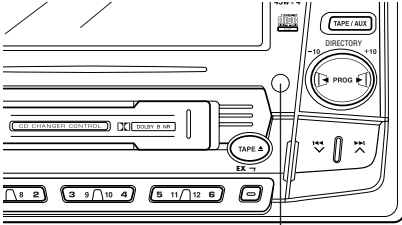


Remote sensor

Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.

1. Remove the battery holder.


- 1) Push out the battery holder in the direction indicated by the arrow using a ball-point pen or a similar tool.
- 2) Remove the battery holder.

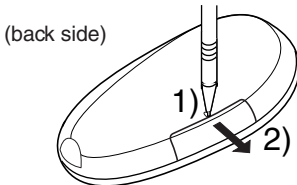

(back side)

2. Place the battery.


Slide the battery into the holder with the + side facing upwards so that the battery is fixed in the holder.

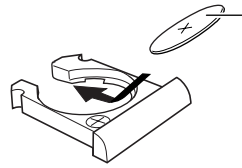

Lithium coin battery (product number: CR2025)

3. Return the battery holder.

Insert again the battery holder pushing it until you hear a clicking sound.

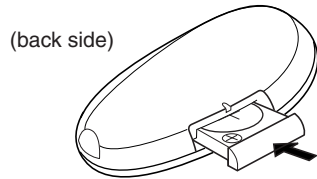


(back side)

WARNING:

- Store the battery in a place where children cannot reach.
If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short, disassemble or heat the battery or dispose it in a fire.
Doing any of these things may cause the battery to give off heat, crack or start a fire.
- Do not leave the battery with other metallic materials.
Doing this may cause the battery to give off heat, crack or start a fire.
- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack or start a fire.
- Do not poke the battery with tweezers or similar tools.
Doing this may cause the battery to give off heat, crack or start a fire.

CAUTION:


DO NOT leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time. Otherwise, it may be damaged.

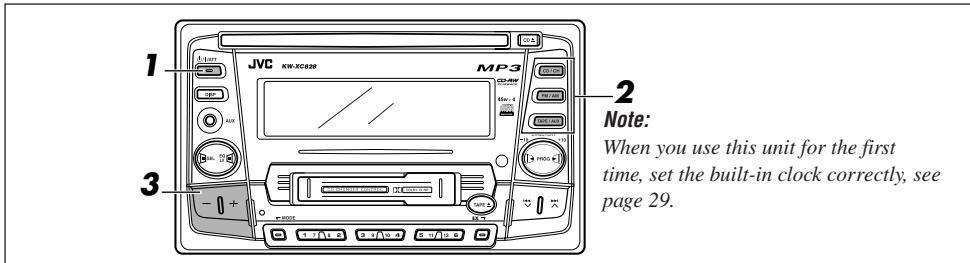

Note:
When you use this unit for the first time, set the built-in clock correctly, see page 29.

1 Turn on the power.

 ⏻/I/ATT “HELLO!” appears on the display.



Note on One-Touch Operation:
When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

2 Select the source.



- Each time you press CD/CH, the source changes to CD* and CD-changer (or external component)** alternately.



- Each time you press FM/AM, the band changes to FM (FM1, FM2, FM3) and AM.





- Each time you press TAPE/AUX, the source changes to TAPE*** and external component (AUX INPUT) alternately.

* If a disc is not in the loading slot, you cannot select CD as the source to play. (“NO DISC” will appear on the display.)
 ** Without connecting the CD changer or the external component, you cannot select it as the source to play.
 *** If a cassette is not in the cassette compartment, you cannot select TAPE as the source to play. (“NO TAPE” will appear on the display.)

To operate the tuner, see pages 8 – 11.
 To play the CD, see pages 12 – 15.
 To play the MP3 disc, see pages 18 – 21.
 To operate the tape deck, see pages 22 – 24.
 To operate the external components, see page 34.
 To operate the CD changer, see pages 35 – 37.

3 Adjust the volume.

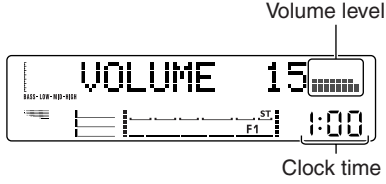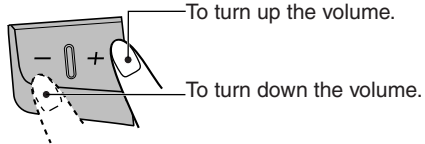

4 Adjust the sound as you want (see pages 25 – 27).

- If you need to change the level meter pattern, see page 28.


To drop the volume in a moment

Press **⏻/I/ATT** briefly while listening to any source. “ATT” starts flashing on the display, and the volume level will drop in a moment. To resume the previous volume level, press the button briefly again.

To turn off the power

Press **⏻/I/ATT** for more than 1 second. “SEE YOU” appears, then the unit turns off.

- If you turn off the power while listening to a disc, disc play will start from where playback has been stopped previously, next time you turn on the power.
- If you turn off the ignition key without turning off this unit, the unit will automatically turn on when you turn on the ignition key next time. If the last selected source is ready for playback (ex. a disc or a tape is in the unit), playback starts automatically.

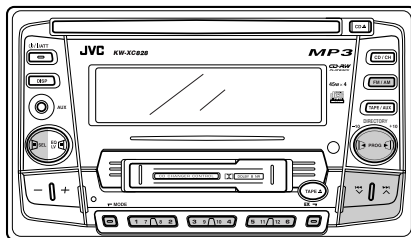


Listening to the radio

You can use either automatic searching or manual searching to tune in to a particular station.


Searching for a station automatically: Auto search

 - 1 Select the band (FM1, FM2, FM3 or AM).





Note:

 This receiver has three FM bands (FM1, FM2, and FM3). You can use any one of them to listen to an FM broadcast.



Selected band appears.

 - 2 Start searching for a station.

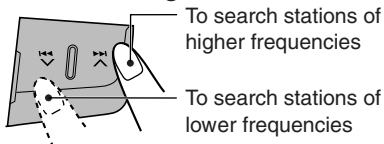

When a station is received, searching stops.


To stop searching before a station is received, press the same button you have pressed for searching.

Searching for a station manually: Manual search


- 1 Select the band (FM1, FM2, FM3, or AM).



- 2 Press and hold \blacktriangleright \blacktriangle or \blacktriangleleft \blacktriangledown until "M (manual)" starts flashing on the display.

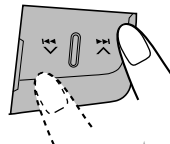

- 3 Tune in to a station you want while "M" is flashing.

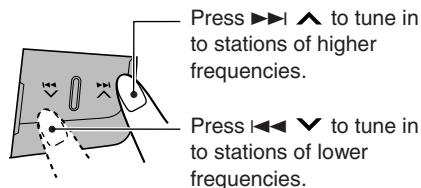

- If you release your finger from the button, the manual mode will automatically turn off after 5 seconds.
- If you hold down the button, the frequency keeps changing (in 50 kHz intervals for FM and 9 kHz for AM) until you release the button.

Storing stations in memory

You can use one of the following methods to store broadcasting stations in memory.

- Automatic preset: SSM (Strong-station Sequential Memory)
- Manual preset
- Storing your favorite station into the EX button

 
Automatic preset: SSM

You can preset 6 local stations in each FM band (FM1, FM2, and FM3).

1 Select the band (FM1, FM2, or FM3).



2 Press MODE repeatedly until “SSM” appears.



3 Press SEL.



“--SSM--” appears, then disappears when automatic preset is over.

Local stations with the strongest signals are searched for and stored automatically in the band you have selected (FM1, FM2, and FM3). These stations are preset in the number buttons — No. 1 (lowest frequency) to No. 6 (highest frequency). When automatic preset is over, the station stored in number button 1 will be automatically tuned in.

Manual preset

 

You can preset up to 6 stations in each band (FM1, FM2, FM3, and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset channel number 1 of the FM1 band



1 Select the FM1 band.



2 Tune in to a station (in this example, of 88.3 MHz).

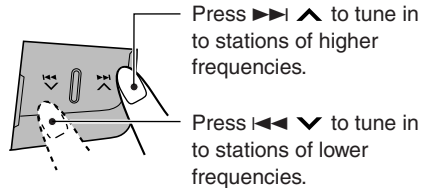

  3 Press and hold the number button (in this example, 1) for more than 2 seconds.



“P1” flashes for a few seconds.

4 Repeat the above procedure to store other stations into other preset numbers.



Storing your favorite station into the EX (extra) button


You can preset an FM or AM station (such as your favorite station or traffic announcement station); and recall it by one touch operation even if the unit is turned off.

EXAMPLE: Storing an FM station of 88.3 MHz into the EX button


1 Select the FM1 band.



2 Tune in to a station (in this example, of 88.3 MHz).

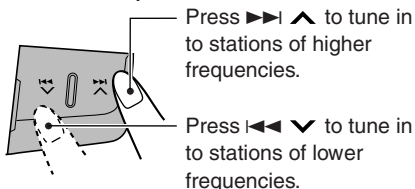

 3 Press and hold the EX button until "EX" flashes.



"EX" flashes on the display.

 
Notes:

- A previously preset station is erased when a new station is stored.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.


Tuning in to a preset station

You can easily tune in to a preset station. Remember that you must store stations first. If you have not stored them yet, see page 9.

1 Select the band (FM1, FM2, FM3, or AM) you want.



 2 Select the number (1 - 6) for the preset station you want.



To tune in the favorite station (EX)


EX Press EX so that the unit automatically turns on (if it has been off). Your favorite station is tuned in.

- If you press the button again, the previous source will be played back again.

Other convenient tuner functions

Scanning broadcast stations

1 Select "SCAN."

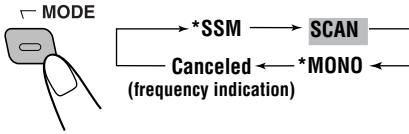

* When receiving an FM stereo broadcast.

2 Start scanning.

 


Each time a broadcast is tuned in, scanning stops for about 5 seconds (tuned frequency number flashes on the display), and you can check what program is now being broadcasted.

If you want to listen to that program, press MODE button again to stop scanning.

Showing an assigned name

If you have assigned a name to a station frequency, the display shows its assigned name after the station frequency is displayed. When the station name is displayed, the STATION indicator lights up on the display (see page 33).



Lights up.

To confirm the station frequency while the assigned name is shown, press DISP (display). Each time you press the button, the assigned name and the station frequency alternate on the display.


Note:

If no name is assigned, "NO NAME" will appear when you press DISP.

Selecting FM reception mode

When an FM stereo broadcast is hard to receive, follow the procedure below:

1 Select "MONO."

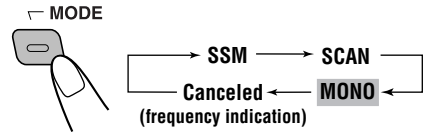


2 Select FM reception mode.



FM reception mode turns on ("MONO ON") and off ("MONO OFF") alternately.

 When the monaural mode is turned on, the sound you hear becomes monaural but reception will be improved.




Lights up when receiving an FM broadcast in stereo.






CD OPERATIONS

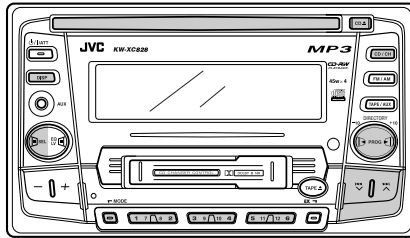

Playing a CD

1 Insert a disc into the loading slot.

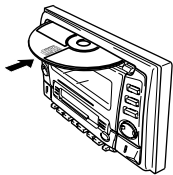

The unit turns on, draws a CD and starts playback automatically.



CD indicator lights up.

Total track number of the inserted disc Total playing time of the inserted disc



Current track Elapsed playing time



Notes:

- When a CD is inserted upside down, the CD automatically ejects.
- When you play a CD Text, the disc title and performer appear on the display. Then the current track title appears on the display, followed by the track number and elapsed playing time. See also "Playing a CD Text" (page 15) and "Selecting the scroll mode – SCROLL" (page 32).
If a CD Text includes much text information, some may not appear on the display.
- If you play a CD with assigned name (see page 33), the assigned name appear on the display, followed by the track number and elapsed playing time. See also "Showing an assigned name" on page 15.

To stop play and eject the CD

Press CD ▲.

CD play stops and the CD automatically ejects from the loading slot ("EJECT" appears on the display). The source changes to the last selected source.

Notes:

- If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)
- You can eject the CD even when the unit is turned off.
- If you change the source, CD play also stops (without ejecting the disc).
Next time you select "CD" as the source, CD play starts from where playback has been stopped previously.


Note on One-Touch Operation:

When a CD is already in the loading slot, pressing CD/CH turns on the unit and starts playback automatically.



Locating a track or a particular portion on a CD


To fast-forward or reverse the track

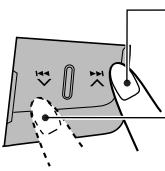

Press and hold **▶▶** **▲** while playing a CD, to fast-forward the track.

Press and hold **◀◀** **▼** while playing a CD, to reverse the track.


To go to the next tracks or the previous tracks

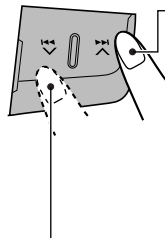


Press **▶▶** **▲** briefly while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.

Press **◀◀** **▼** briefly while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

 
To skip 10 tracks



 1 Press **MODE** repeatedly until “◀-10 +10▶” appears.




2 Press **+10** or **-10** button.

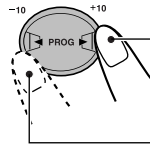

Press **+10** while playing a CD, to skip 10 tracks at a time.

Press **-10** while playing a CD, to skip back 10 tracks at a time.

 To go to a particular track directly



Press the number button corresponding to the track number to start its playback.



- To select a track number from 1 – 6: Press 1 (7) – 6 (12) briefly.
- To select a track number from 7 – 12: Press and hold 1 (7) – 6 (12) for more than 1 second.



Selecting CD playback modes

To play back tracks repeatedly (Repeat Play)




You can play back the current track repeatedly.

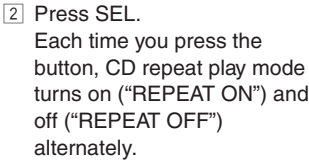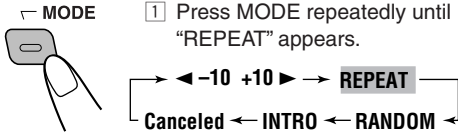

When the repeat mode is turned on, the RPT indicator lights up on the display.

To play back tracks at random (Random Play)

 


You can play back all tracks on the CD at random.

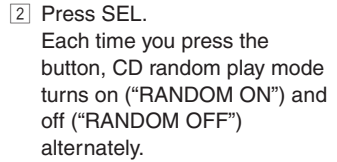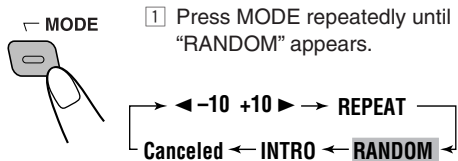

When the random mode is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.

To play back only intro (Intro scan)

 You can play back the first 15 seconds of each track sequentially.

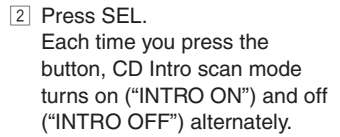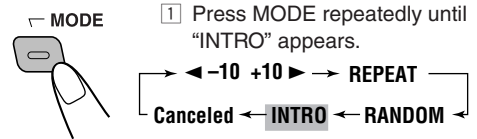


When the Intro scan mode is turned on, the current track number flashes.




Playing a CD Text

In a CD Text, some information about the disc (its disc title, performer and track title) is recorded. You can show these disc information on the display.

 
1 Select text display mode while playing a CD Text.



 
Each time you press the button, the display changes as follows:



 When disc information appears on the display, the corresponding name indicator lights up.



 When a disc title/performer is displayed.



When a track title is displayed.

 
Notes:

- You can use the scroll mode to show the disc information on the display. See also "Selecting the scroll mode – SCROLL" on page 32.
- When you press DISP (display) while playing a conventional CD, "NO NAME" appears for the disc title/performer (unless you have assigned a name to the CD) and the track title.

Other convenient CD functions

Showing an assigned name

You can assign names to conventional CDs. If you have assigned a name to a CD, the assigned name appear on the display, followed by the current track number and elapsed playing time. When the CD name is displayed, the DISC indicator lights up on the display (see page 33).



Lights up

To confirm the current track number and elapsed playing time while the assigned name is shown, press DISP (display).

Each time you press the button, the assigned name and current track number/elapsed playing time alternate on the display.

Note:

 
You cannot assign a name to a CD Text or an MP3 disc.

Prohibiting CD ejection

You can prohibit the CD ejection and can "lock" a CD in the loading slot.



While pressing CD/CH, press and hold CD ▲ for more than 2 seconds. "CD ▲" flashes on the display for a while, and the CD is locked and cannot be ejected.



To cancel the prohibition and "unlock" the CD, press and hold CD ▲ for more than 2 seconds again, while pressing CD/CH. "EJECT OK" flashes on the display for a while, and the CD is "unlocked."



MP3 INTRODUCTION

What is MP3?

MP3 is an abbreviation of Motion Picture Experts Group (or MPEG) Audio Layer 3*. MP3 is simply a file format with a data compression ratio of 1:10 (128 Kbps**). That means, by using MP3 format, one CD-R or CD-RW can contain 10 times as much data volume as a regular CD can.

* This player is not compatible with the data encoded with Layer 1 and 2 formats.

** Bit rate is the average number of bits that one second of audio data will consume. The unit used is Kbps (1000 bits/second). To get a better audio quality, choose a higher bit rate. The most popular bit rate for encoding is 128 Kbps.

This unit is incorporated with an MP3 decoder. You can play back MP3 files (tracks) recorded on CD-Rs, CD-RWs, and CD-ROMs.

Compatible with ID3v1

Extra information data such as album title, performer name, song title, recording year, music genre and a brief comment can be stored within an MP3 file.

This unit can show ID3v1 tags (album name, performer name and song title) on the display.

- Some characters cannot be shown correctly.
- This unit is not compatible with ID3v2.

Other Main Features in this unit:

- Maximum number of directories/files: 289 (Total)
- Available characters:A–Z, 0–9, _(underscore)
- Maximum number of characters for file name (ISO 9660 Level 1):12 (inclusive of separation mark—“.” and extension code—“mp3”) (ISO 9660 Level 2): 31 (inclusive of separation mark—“.” and extension code—“mp3”) (Joliet): 64 (inclusive of separation mark—“.” and extension code—“mp3”)
- Maximum number of characters for directory name: 64

Precautions when recording MP3 files on a CD-R or CD-RW

This unit can only read MP3 files that are recorded in the format that is compliant with ISO 9660 Level 1, Level 2 or Joliet.

How are MP3 files recorded and played back?

MP3 “files (tracks)” can be recorded in “directories (folders)”—in PC terminology. During recording, the files and directories can be arranged in a way similar to arranging files and directories/folders of computer data.

“Root” is similar to the root of a tree. Every file and directory can be linked to and be accessed from the root.

Playback order, file search order, and directory search order of the MP3 files recorded on a disc are determined by the writing (or encoding) application; therefore, playback order may be different from the one you have intended while recording the directories and the files.


The illustration on the next page shows an example of how MP3 files are recorded on a CD-R or CD-RW, how they are played back, and how they are searched on this unit.


 

Notes:

- The unit can read a CD-ROM containing MP3 files. However, if non-MP3 files are recorded together with MP3 files, this unit will take a longer time to scan the disc. It may also cause the unit to malfunction.
- The unit cannot read or play an MP3 file without the extension code—mp3.
- The unit is not compatible with Playlist*.

* A playlist is a simple text file, used on a PC, which enables users to make their own playback order without physically rearranging the files.

MP3 directory/file configuration

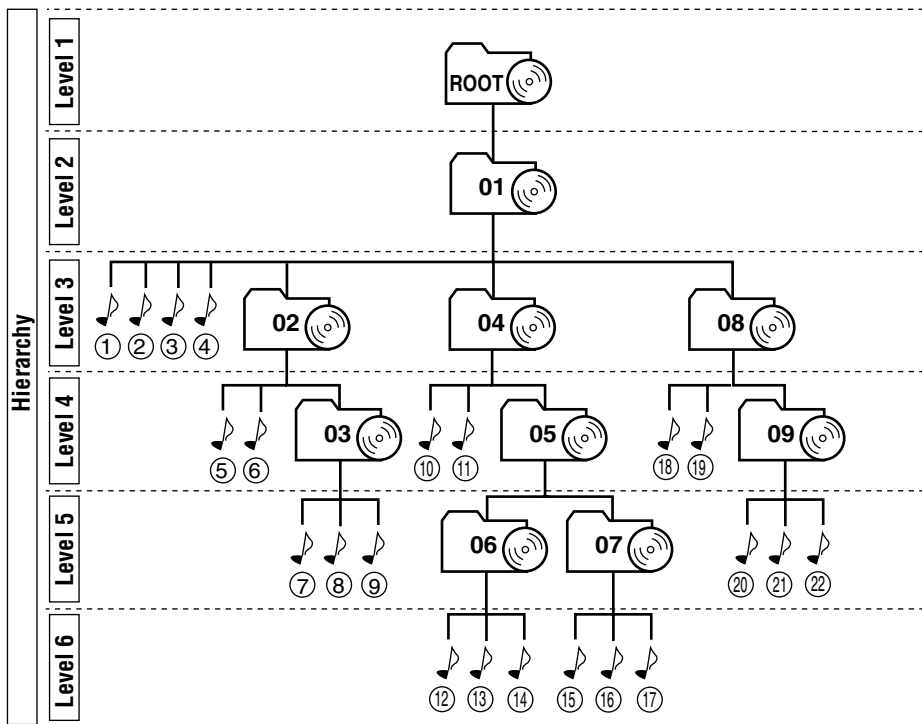


	: Root
	: Directories
	: MP3 files

Note:

There is no limit on the number of the hierarchy levels (nested directories). However, up to 8 hierarchy levels is recommended for stable operations.

MP3 playback/search order


- The numbers in circles below the MP3 files (🎵) indicate the playback order and search order of the MP3 files. Normally this unit plays back MP3 files in the recorded order.
- The numbers inside the directories indicate the playback order and search order of the directories on an MP3 disc. Normally this unit plays back MP3 files in the directories in the recorded order.

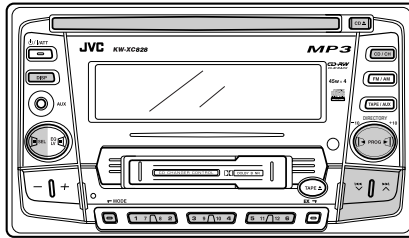

Refer also to “CD OPERATIONS” on pages 12 to 15.

Playing an MP3 disc

- 1 Insert an MP3 disc into the loading slot.

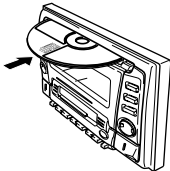

The unit turns on, draws an MP3 disc and starts playback automatically.

Ex.: When the disc contains 13 directories and 125 MP3 files.



Lights up



MP3 indicator Lights up

Playback starts automatically from the first file of the first directory once file check is completed. Then, the display changes to show the following:

- When “TAG ON” is selected (initial setting: see page 32)

Album name/performer name (directory name)* → Track title (file name)* → Elapsed playing time

* If an MP3 file does not have ID3 tags, directory name and file name appear.

 
- When “TAG OFF” is selected
Directory name and file name appear.

Notes:

- All the files on the disc will be played repeatedly until you stop playback—All File Repeat Play.
- MP3 discs require a longer readout time**.
(It differs due to the complexity of the directory/file configuration.)


**Readout time is the time taken by the unit to scan or check the disc for files and file information.

To change the display information




While playing back an MP3 file, you can change the file information shown on the display. Each time you press DISP (display), the display changes to show the following:

 - When “TAG ON” is selected (initial setting: see page 32)



- * If an MP3 file does not have ID3 tags, directory name and file name appear.

 - When “TAG OFF” is selected



Notes:

- You can use the scroll mode to show the disc information on the display. See also “Selecting the scroll mode – SCROLL” on page 32.
- If you change the setting from “TAG OFF” to “TAG ON” while playing an MP3 file, the tag display will be activated when the next file starts playing.

To stop play and eject the disc

Press CD .

Disc play stops and the disc automatically ejects from the loading slot (“EJECT” appears on the display). The source changes to the last selected source.


If you change the source, the disc play also stops (without ejecting the disc this time).


Notes:

- If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (Disc play will not start this time.)
- You can eject the disc even when the unit is turned off.


Locating a file or a particular portion on an MP3 disc

To fast-forward or reverse the file

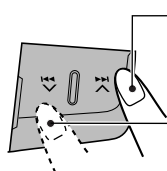



Press and hold  while playing an MP3 disc, to fast-forward the file.





Press and hold  while playing an MP3 disc, to reverse the file.

To go to the next files or the previous files

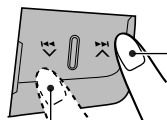


Press  briefly while playing an MP3 disc, to go ahead to the beginning of the next file. Each time you press the button consecutively, the beginning of the next file is located and played back. (See “MP3 playback/search order” on page 17.)

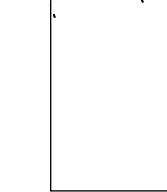


Press  briefly while playing an MP3 disc, to go back to the beginning of the current file. Each time you press the button consecutively, the beginning of the previous file is located and played back. (See “MP3 playback/search order” on page 17.)


To skip 10 files

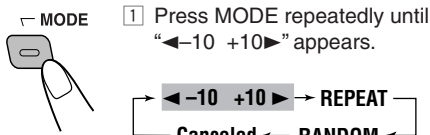

2 Press +10 or -10 button.

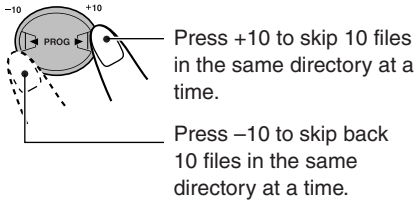

To skip to the next directory or the previous directory—either on the same hierarchy level or on a different hierarchy level

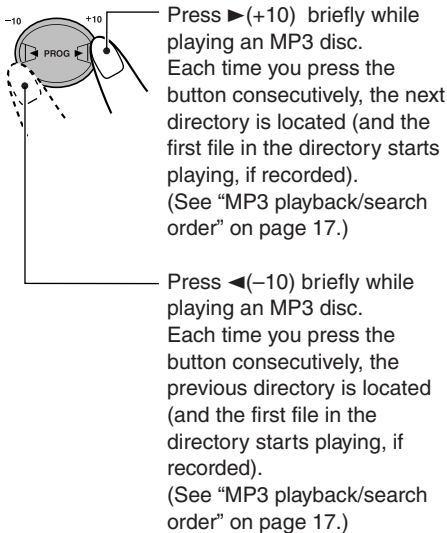

Note:

If the directory does not contain any MP3 files, it is skipped.

To go to a particular directory directly

IMPORTANT:

To directly select the directories using the number button(s), it is required that directories are assigned 2 digit numbers at the beginning of their directory names. (This can only be done during the recording of CD-Rs or CD-RWs.)

- Ex.: If directory name is "01 ABC"
 → press 1 to go to directory 01 ABC
 If directory name is "1 ABC"
 → cannot directly select this directory.
 If directory name is "12 ABC"
 → press and hold 6 (12) to go to directory 12 ABC

Press the number button corresponding to the directory number to start playing the first file in the selected directory.



- To select a directory number from 01 – 06: Press 1 (7) – 6 (12) briefly.
- To select a directory number from 07 – 12: Press and hold 1 (7) – 6 (12) for more than 1 second.

 
Notes:

- If "MP3" flashes on the display after you have selected a directory, it means that the directory does not contain any MP3 files.
- You cannot directly select a directory with a number greater than 12.


To select a particular file in a directory, press >>> ^ or <<< v after selecting the directory.

Selecting MP3 playback modes

To play back tracks repeatedly (Repeat Play)



 1 Press MODE repeatedly until "REPEAT" appears.




2 Press SEL. Each time you press the button, repeat play mode changes as follows:





Mode	RPT Indicator	Plays repeatedly
REPEAT1 ON	Lights	The current file (or specified file).
REPEAT2 ON	Flashes	All files of the current directory (or specified directory).
REPEAT OFF	Goes off	Canceled.

 To play back tracks at random (Random Play)



  1 Press MODE repeatedly until "RANDOM" appears.




2 Press SEL. Each time you press the button, random play mode changes as follows:



Mode	RND Indicator	Plays at random
RANDOM1 ON	Lights	All files of the current directory, then the files of the next directory, and so on.
RANDOM2 ON	Flashes	All files of all directories.
RANDOM OFF	Goes off	Canceled.




TAPE OPERATIONS

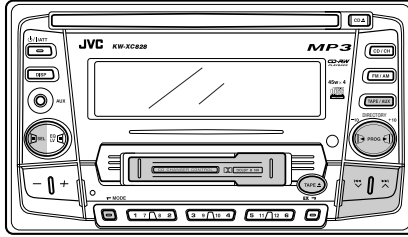

Listening to a tape

You can play back type 1 (normal) tapes.

- 1 Insert a cassette into the cassette compartment.**

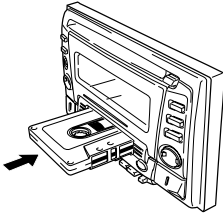

The unit turns on and tape play starts automatically.
When one side of the tape reaches its end during play, the other side of the tape automatically starts playing. (Auto Reverse)



 
Tape indicator flashes.

Note on One-Touch Operation:

When a cassette is already in the cassette compartment, pressing TAPE/AUX turns on the unit and starts tape play automatically.

- 2 Turn on or off the Dolby B NR* as needed.**


MODE **1** Press MODE repeatedly until "DOLBY B" appears.



- 2** Press SEL.




 Each time you press the button, the Dolby B NR turns on ("DOLBY ON") and off ("DOLBY OFF").





This indicator lights up when the Dolby B NR is turned on.

- 3 Select the tape direction.**

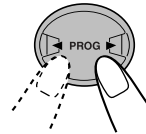

  Each time you press the button, the tape direction changes alternately.



* Manufactured under license from Dolby Laboratories.
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.




To stop play and eject the cassette

Press **TAPE** ▲.

Tape play stops and the cassette automatically ejects from the cassette compartment. If you change the source, the tape play also stops (without ejecting the cassette this time).

- You can also eject the cassette by pressing **TAPE** ▲ with the unit turned off.

To fast-forward and rewind a tape

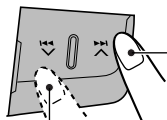

Press **▶▶** ▲ for more than 1 second to fast-forward the tape. When the tape reaches its end, the tape is reversed and playback starts from the beginning of the other side.

Press **◀◀** ▼ for more than 1 second to rewind the tape. When the tape reaches its end, playback of the same side starts.

To stop fast-forward and rewind at any position on the tape, press ◀ PROG ▶.

Tape play starts from that position on the tape.

Note:


When the tape reaches its end while fast-forwarding, the tape direction will be changed automatically.

Finding the beginning of a tune

Multi Music Scan allows you to automatically start playback from the beginning of a specified tune. You can specify up to 9 tunes ahead or before the current tune.


During playback

1 Specify where (how many tunes ahead of or before the current tune) the tune you want is located.

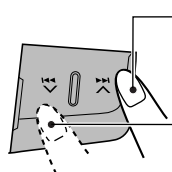

To locate a tune ahead of the current tune on the tape.

 To locate a tune before the current tune on the tape.



Each time you press the button, the number changes up to ± 9 .

When the beginning of the specified tune is located, playback starts automatically.



Notes:

- While locating a specified tune:
 - If the tape is rewound to its beginning, playback starts from the beginning of that side.
 - If the tape is fast-forwarded to the end, it is reversed and played from the beginning of the other side.
- In the following cases, Multi Music Scan may not operate correctly:
 - Tapes with tunes having long pianissimo passages (very quiet parts) or non-recorded portions.
 - Tapes with short non-recorded sections.
 - Tapes with high level noise or humming between tunes.
 - The Dolby NR setting does not match. For example, if the tape is recorded with the Dolby C NR.

Other convenient tape functions

Skipping blank portions on the tape



You can skip blank portions between the tunes (Blank Skip).

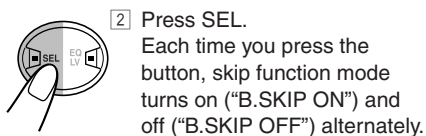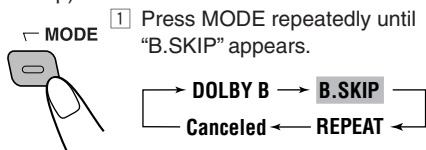

When this function is on, the B.SKIP indicator lights up on the display and the unit skips blank portions of 15 seconds or more, fast-forwards to the next tune, then starts playing it.

Playing the current tune repeatedly

You can play the current tune repeatedly (Repeat Play).

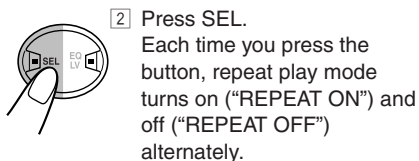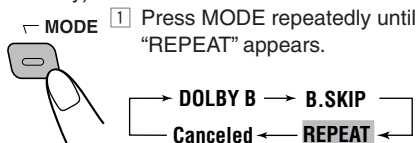

Notes:

In the following cases, Blank Skip and Repeat Play may not operate correctly:

- Tapes with tunes having long pianissimo passages (very quiet parts) or non-recorded portions.
- Tapes with short non-recorded sections.
- Tapes with high level noise or humming between tunes.
- The Dolby NR setting does not match. For example, if the tape is recorded with the Dolby C NR.

Prohibiting tape ejection

You can prohibit the tape ejection and can "lock" a tape in the cassette compartment.



While pressing TAPE/AUX, press and hold TAPE ▲ for more than 2 seconds. "TAPE ▲" flashes on the display for a while, and the tape is locked and cannot be ejected.



To cancel the prohibition and "unlock" the tape, press and hold TAPE ▲ for more than 2 seconds again, while pressing TAPE/AUX. "EJECT OK" flashes on the display for a while, and the tape is "unlocked."



 
Adjusting the sound

You can adjust the sound characteristics to your preference.

1 Select the item you want to adjust.




Each time you press the button, the adjustable items change as follows:




Reinforcing the bass sound

You can also adjust the level of Super Bass.

 1 Select "S.BASS."



 
While adjusting Super Bass, S. BASS level flashes.



As the number increases, Super Bass level also increases.


Indication	To do:	Range
FADER*	Adjust the front and rear speaker	R06 (rear only) F06 (front only)
BAL (Balance)	Adjust the left and right speakers	L06 (left only) R06 (right only)
VOLUME	Adjust the volume	00 (min.) 50 (max.)

2 Adjust the level within the range of "00" to "08."

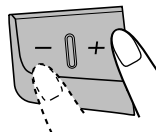

* If you are using a two-speaker system, set the fader level to "00."

2 Adjust the level.

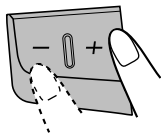

Note:

 
 
Normally + / - buttons work for volume adjustment. So you do not have to select "VOLUME" to adjust the volume level.




Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre.

1 Select "EQ."



2 Select the sound mode.

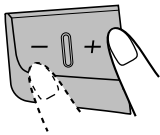


The sound mode changes as follows:

- | | | | | | |
|---------|---|-------------------------|---|------------|---|
| FLAT | ↔ | Hard Rock | ↔ | R & B* | ↔ |
| POP | ↔ | JAZZ | ↔ | DanceMusic | ↔ |
| Country | ↔ | Raggae | ↔ | Classic | ↔ |
| USER** | ↔ | (back to the beginning) | | | |

* Rhythm and Blues

** If you want to adjust and store your original sound mode (USER), see "Storing your own sound adjustments" on page 27.

 EQ level changes as you select the sound mode.



Ex.: When you select "R & B"

To cancel the sound mode, select "FLAT" in step 2.

Note:

You can adjust the sound mode to your preference, and store it in memory.

To store a sound mode separately for each playback source (EQ Link)

Once you select a sound mode, it is stored in memory. It will be recalled every time you select the same source. A sound mode can be stored for each of the following sources — FM1, FM2, FM3, AM, CD, tape, external components and the EX (extra) button (see page 10).

• See also "Changing general settings (PSM)" on page 30.

1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display.

2 Press ►►▲ or ◀◀▼ to select "EQ LINK (Equalization Link)."

3 Press + to select "LINK ON."

4 Press SEL (select) to finish the setting.

To cancel EQ Link, repeat the same procedure and select "LINK OFF" by pressing – in step 3.

• When "EQ LINK" is set to "LINK ON"

The selected sound mode and Super Bass level can be stored in memory for the current source.

Each time you select the same source, the same sound mode is also recalled, and shown after the source name.

• When "EQ LINK" is set to "LINK OFF"

 
 
The selected sound mode effect applies to all the sources selected.

Storing your own sound adjustments

You can adjust the sound modes to your preference and store your own adjustments in memory (USER sound mode).

- There is a time limit in doing the following procedure. If the setting is cancelled before you finish, start from step 1 again.

1 Select "EQ."



2 Select sound elements to adjust.



Each time you press the button, the sound elements to adjust change as follows:

LOW FREQ.* → LOW LEVEL →
MID FREQ.* → MID LEVEL →
HIGH FREQ.* → HIGH LEVEL →
(back to the beginning)

FREQ. (LOW, MID, HIGH):

Select the center frequency to adjust.


LEVEL (LOW, MID, HIGH):

Adjust the enhancement level.

* By pressing ►►|▲ or |◄◄▼, you can directly move as follows:




3 Adjust the selected sound element.

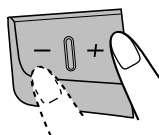

- Refer to the table below for adjusting the selected sound element.

Indication	Range
LOW FREQ.	50 Hz , 80 Hz , 120 Hz
LOW LEVEL	-06 (min.) — +06 (max.)
MID FREQ.	700 Hz , 1 kHz , 2 kHz
MID LEVEL	-06 (min.) — +06 (max.)
HIGH FREQ.	8 kHz , 12 kHz
HIGH LEVEL	-06 (min.) — +06 (max.)

 EQ level adjusted flashes.



EX.: When you adjust "LOW FREQ."

4 Repeat step 2 and 3 to adjust the other sound elements.

5 Store the adjustments.



Your setting is stored in USER sound mode.

 


LEVEL METER SETTING


Selecting level meter patterns

You can select any one from 7 different level meter patterns or a demonstration of all the patterns.

1 Select "L.V. METER."



2 Press +/- to select the level meter pattern.

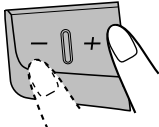

Each time you press the button, the level meter changes as follows:

ALL DEMO ↔ Standard ↔ SideWinder ↔ Full Size ↔ Spin ↔ Double ↔ HIGH WAY ↔ Dolphin ↔ OFF ↔ (back to the beginning)

 
Level meter patterns

1. ALL DEMO (default setting)

Demonstrates all the level meter patterns, each for 20 seconds.


2. Standard

Standard level meter.




3. SideWinder

 Level meter is displayed horizontally.




4. Full Size

 Level meter is displayed on the main display.




5. Spin

 Spin in the right meter.




6. Double

 Waves are displayed on both level meters.



7. HIGH WAY

 As if you were driving along a highway.



8. Dolphin

A dolphin is swimming in the main display.



9. OFF

No level meter is displayed.

About the demonstration mode (DEMO MODE)


When shipped from the factory, "DEMO" is set to "DEMO ON" in this unit. The demonstration will start automatically if no sound comes in for 3 minutes. (See page 31.)

To deactivate the demonstration mode


- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display.



- 2 Press ►►|▲ or ◀◀|▼ to select "DEMO."

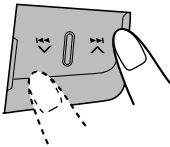

- 3 Press - to select "DEMO OFF."

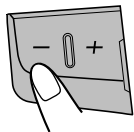

- 4 Press SEL (Select) to finish the setting.




Setting the clock

After installation, set the built-in clock correctly.


- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (See page 31.)




- 2 If "CLOCK HOUR" does not appear, press ►►|▲ or ◀◀|▼ repeatedly until it appears.

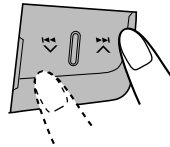

- 3 Adjust the hour.

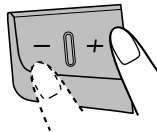


- 4 Press ►►|▲ or ◀◀|▼ until "CLOCK MIN (minute)" appears on the display.

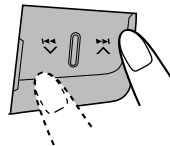

CONTINUED TO THE NEXT PAGE

5 Adjust the minute.

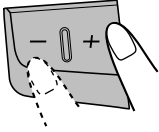

6 Finish the setting.



To check the current clock time while the unit is turned off, press DISP (display).

The power turns on, the clock time is shown for 5 seconds, then the power turns off.

Changing general settings (PSM)

You can change the settings for this unit by using the PSM (Preferred Setting Mode) control.


Basic Procedure

- There is a time limit in doing the following procedure. If the setting is canceled before you finish, start from step 1 again.


- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (See page 31.)**



- 2 Select a PSM item you want to adjust. (See page 31.)**

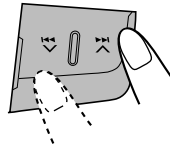

- 3 Adjust the PSM item selected.**

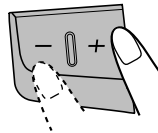
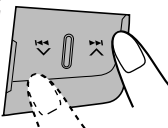
 


- 4 Repeat steps 2 and 3 to adjust the other PSM items if necessary.**

- 5 Finish the setting.**



Preferred Setting Mode (PSM) items

		 1 Hold.		 2 Select.		 3 Set.		Factory-preset settings	See page
		-	+						
DEMO	Demonstration mode	DEMO OFF	DEMO ON	DEMO ON			31		
CLOCK HOUR	Hour adjustment	Back	Advance	1:00			29		
CLOCK MIN	Minute adjustment	Back	Advance						
CLOCK DISP	Clock display	CLOCK OFF	CLOCK ON	CLOCK OFF			31		
EQ LINK	Sound control memory linkage	LINK ON	LINK OFF	LINK OFF			26		
DIMMER	Dimmer mode	DIM OFF ←→ DIM ON ↵ DIM AUTO ←↵		DIM AUTO			32		
CONTRAST	Display contrast	CONTRAST 1 – CONTRAST 10		CONTRAST 5			32		
SCROLL	Scroll mode	SCRL ONCE ←→ SCRL AUTO ↵ SCRL OFF ←↵		SCRL ONCE			32		
EXT INPUT	External input selection	CD CHANGER	LINE INPUT	CD CHANGER			32		
AUX ADJ	Auxiliary input level adjustment	A.ADJ 00 – A.ADJ 05		A.ADJ 00			32		
TAG DISP	Tag display	TAG OFF	TAG ON	TAG ON			32		

Turning the demo mode on or off – DEMO MODE

You can turn the demo mode on or off. When shipped from the factory, "DEMO ON" is selected.

- **DEMO OFF:** Turns the demo mode off.
- **DEMO ON:** Turns the demo mode on. The demonstration will start automatically if no sound comes in for 3 minutes.

Note:

If the unit has been reset (and the power is on), demonstration will start if no sound comes in for about 15 seconds.

Setting the clock display – CLOCK DISP

You can set the clock to be shown on the display when the unit is turned off.

When shipped from the factory, the clock is set not to be shown on the display.

- **CLOCK OFF:** Clock display is turned off.
- **CLOCK ON:** Clock display is turned on.

Note:

If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery.

Selecting the dimmer mode – DIMMER

When you turn on the car headlights, the display automatically dims (Auto Dimmer).

When shipped from the factory, Auto Dimmer mode is activated.

- DIM OFF: Cancels Auto Dimmer.
- DIM ON: Always dims the display.
- DIM AUTO: Activates Auto Dimmer.

Note:

Auto Dimmer equipped for this unit may not work correctly on some vehicles, particularly on those having a control dial for dimming.

In this case, set the dimmer mode to “DIM ON” or “DIM OFF.”

Adjusting the display contrast level – CONTRAST

You can adjust the display contrast level among 1 (dark) to 10 (bright). When shipped from the factory, the display contrast level is set at level 5.

Selecting the scroll mode – SCROLL

You can select the scroll mode for the disc information.

When shipped from the factory, Auto Scroll mode is set to “SCRL ONCE”

- SCRL ONCE: Scrolls only once.
- SCRL AUTO: Repeats the scroll (5-second intervals in between).
- SCRL OFF: Cancels Auto Scroll.

Selecting the external component to use – EXT INPUT

You can connect the external component to the CD changer jack on the rear using the Line Input Adaptor KS-U57 (not supplied).

To use the external component as the playback source through this unit, you need to select which component – CD changer or external component – to use.

When shipped from the factory, CD changer is selected as the external component.

- CD CHANGER: To use the CD changer.
- LINE INPUT: To use the external component other than CD changer.

Notes:

- If the current source is CD changer or external component, this setting does not appear.
- For connecting the Line Input Adaptor KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).

Adjusting the auxiliary input level – AUX ADJ

Adjust the auxiliary input level properly when an external component is connected to the auxiliary input jack.

When shipped from the factory, the auxiliary (AUX) input level is set at level 00.

If the input level of the connected component is not high enough, increase the input level properly. Without adjusting the line input level, you may be surprised at a loud sound when you change the source from the external component to another source.

Turning the tag display on or off – TAG DISP

An MP3 file can contain file information called “ID3 Tag” where its album name, performer, track title, etc. are recorded.

There are two versions—ID3v1 (ID3 Tag version 1) and ID3v2 (ID3 Tag version 2). This unit is compatible only with ID3v1.

When shipped from the factory, “TAG ON” is selected.

- TAG ON: Turns on the ID3 tag display while playing MP3 files.
* If an MP3 file does not have ID3 tags, directory and file name appear.

Note:

If you change the setting from “TAG OFF” to “TAG ON” while playing an MP3 file, the tag display will be activated when the next file starts playing.

- TAG OFF: Turns off the ID3 tag display while playing MP3 files. (Only the directory name and file name can be shown.)


Assigning names to the sources

You can assign names to station frequencies, CDs, and the external component connected to the auxiliary (AUX) input jack. After assigning a name, it will appear on the display when you select the source.

Sources	Maximum number of the characters
Station frequencies*	Up to 10 characters (up to 32 station frequencies including both FM and AM)
CDs** and CD changer**	Up to 32 characters (up to 40 discs)
External component ("AUX INPUT" only)	Up to 10 characters


* You cannot assign a name to a station frequency stored in the EX (extra) button.
 ** You cannot assign a name to a CD Text or an MP3 disc.

1 Select a source you want to assign a name to.

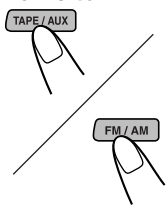


When you select a source, the power automatically comes on. Each time you press the button, the source changes as described on page 7.


2 Press and hold SEL (select) for more than 2 seconds while pressing DISP (display).

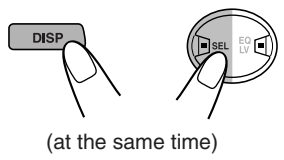

 
3 Select the character set you want while "DISP" is flashing.



Each time you press the button, the character set changes as follows:

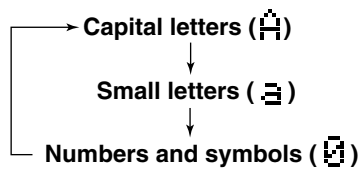


4 Select a character.

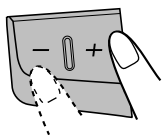

About the available characters, see page 38.

5 Move the cursor to the next (or previous) character position.

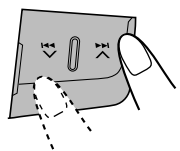

6 Repeat steps 3 to 5 until you finish inputting the name.

7 Finish the procedure while the last selected character is flashing.

To erase the input characters

To erase all the characters at a time, press and hold DISP (display) for more than 1 second procedure described above.

Notes:


- When you try to assign a name to the 33rd station frequency or 41st CD, "NAME FULL" appears on the display. (In this case, delete unwanted names before assignment.)
- When the CD changer is connected, you can assign names to disc in the CD changer. These names can also be shown on the display if you insert the discs in this unit.



EXTERNAL COMPONENT OPERATIONS



MD player, etc.

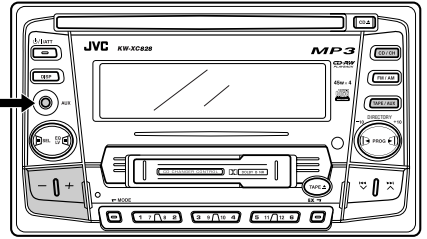

You can connect two external components to this unit.

Connect one to the auxiliary (AUX) input jack on the control panel, and the other to the CD changer jack on the rear.

Preparations:

 
- For connecting the Line Input Adaptor KS-U57 and the external component, refer to the Installation/ Connection Manual (separate volume).
- Before operating the external component connected to the CD changer jack, select the external input correctly. (See "Selecting the external component to use – EXT INPUT" on page 32.)

1 Select the external component.

AUX INPUT: Press TAPE/AUX repeatedly to select the component connected to the AUX jack on the control panel.




LINE INPUT: Press CD/CH repeatedly to select the component connected to the CD changer jack.



- If "LINE INPUT" does not appear on the display, see page 32 and select the external input ("Selecting the external component to use – EXT INPUT").

2 Turn on the connected component and start playing the source.


3 Adjust the volume.

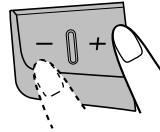

If the input level of the external component connected to the auxiliary (AUX) input jack is not high enough, increase the input level properly.

Without adjusting the input level, you may be surprised at a loud sound when you change the source from the external component to another. (See "Adjusting the auxiliary input level – AUX ADJ" on page 32.)

CD CHANGER OPERATIONS

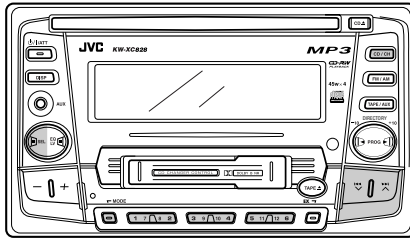

We recommend that you use one of the CH-X series with your unit.

If you have another CD automatic changer, consult your JVC car audio dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:

- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 – RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

 
Note on One-Touch Operation:

When you press CD/CH, the power automatically comes on. You do not have to press / ATT to turn on the power.

Note:


If you play a CD with assigned name (see page 33), the assigned name appear on the display, followed by the track number and elapsed playing time.

To change the display information



While playing back a CD, you can change the information shown on the display.

 Each time you press DISP (display), the display changes to show the following:




Playing CDs

Select the CD automatic changer (CD-CH).




Playback starts from the first track of the first disc.
All tracks of all discs are played back.

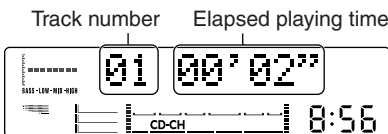

* If no name is assigned, "NO NAME" will appear.




To fast-forward or reverse the track

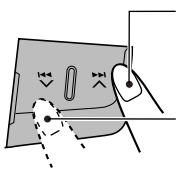

Press and hold **▶▶ ▲** while playing a CD, to fast-forward the track.

Press and hold **◀◀ ▼** while playing a CD, to reverse the track.

To go to the next tracks or the previous tracks

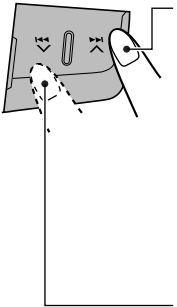


Press **▶▶ ▲** briefly while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.

Press **◀◀ ▼** briefly while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.



To go to a particular disc directly

 
Press the number button corresponding to the disc number to start its playback (while CD changer is playing).



- To select a disc number from 1 – 6: Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12: Press and hold 1 (7) – 6 (12) for more than 1 second.

 Ex.: When disc number 3 is selected.

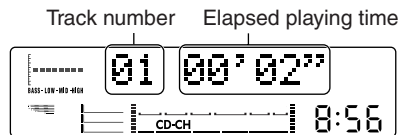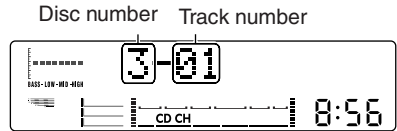



Selecting CD playback modes

To play back tracks repeatedly (Repeat Play)



1 Press MODE repeatedly until "REPEAT" appears.




2 Press SEL. Each time you press the button, CD repeat play mode changes as follows:



Mode	RPT Indicator	Plays repeatedly
REPEAT1 ON	Lights	The current track (or specified track).
REPEAT2 ON	Flashes	All tracks of the current disc (or specified disc).
REPEAT OFF	Goes off	Canceled.

 To play back tracks at random (Random Play)



1 Press MODE repeatedly until "RANDOM" appears.




2 Press SEL. Each time you press the button, CD random play mode changes as follows:



Mode	RND Indicator	Plays at random
RANDOM1 ON	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RANDOM2 ON	Flashes	All tracks of all discs inserted in the magazine.
RANDOM OFF	Goes off	Canceled.

 To play back only intro (Intro scan)



1 Press MODE repeatedly until "INTRO" appears.




2 Press SEL. Each time you press the button, CD intro scan mode changes as follows:




Mode	Indicator	Plays the beginnings (15 seconds)
INTRO1 ON	Track number flashes	Of all tracks on all inserted discs.
INTRO2 ON	Disc number flashes	Of the first track on each inserted disc.
INTRO OFF	None	Canceled.

 Track number



EX.:When "INTRO1 ON" is selected.

 Disc number



EX.:When "INTRO2 ON" is selected.



ADDITIONAL INFORMATION

Available characters

- You can use the following characters to assign names to station frequencies, CDs, and external component. (See page 33.)
- You can display the information (album title, performer name, song title, etc.) as ID3v1 tags when you playback an MP3 file with this unit. (See pages 16 and 41.)

Capital letters

A	B	C	D	E
F	G	H	I	J
K	L	M	N	O
P	Q	R	S	T
U	V	W	X	Y
Z	space			

Small letters

a	b	c	d	e
f	g	h	i	j
k	l	m	n	o
p	q	r	s	t
u	v	w	x	y
z	space			


Numbers and symbols

0	1	2	3	4
5	6	7	8	9
!	”	#	\$	%
&	'	()	*
+	,	-	.	/
:	;	<	=	>
?	@	_	`	space

Handling cassettes


The cassette deck built in this unit requires very little attention, but you will be able to extend the life of the cassette deck if you follow the instructions right column.

To clean the heads

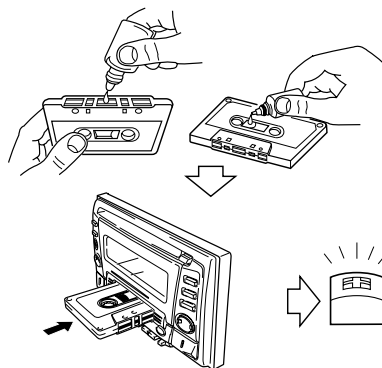

- Clean the heads after every 10 hours of use using a wet-type head cleaning tape (available at an audio store). When the head becomes dirty, you may realize the following symptoms:
 - Sound quality is reduced.
 - Sound level decreases.
 - Sound drops out.
- Do not play dirty or dusty tapes.
- Do not touch the highly-polished head with any metallic or magnetic tools.

To keep the tape clean

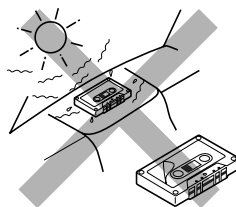

- Always store the tapes in their storage cases after use.
- Do not store tapes in the following places:
 - Subject to direct sunlight
 - With high humidity
 - At extremely hot temperatures

CAUTIONS:

- Do not play the tapes with peeling labels; otherwise, they can damage the unit.
- Tighten tapes to remove slack since loose tape may become entangled with the mechanism.
- Do not leave a cassette in the cassette compartment after use, as the tape may become slack.



The function below is also provided to ensure the longer life of the cassette deck.

Ignition key-off release

When you turn off the ignition key with a cassette in the compartment, the unit automatically releases the tape from its head.

Handling discs

The CD player built in this unit has been designed to play back the CDs bearing the following marks.



You can also play back your original CD-Rs (Recordable) and CD-RWs (Rewritable) either in audio CD format or in MP3 format.

How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

Center holder



- Always hold the disc by the edges. Do not touch its recording surface.

When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs into the cases after use.


To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.

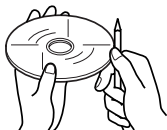

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

CAUTIONS:

- Do not insert 8 cm discs (single CDs) into the loading slot. (Such discs cannot be ejected.)
- Do not insert any disc of unusual shape — like a heart or flower; otherwise, it will malfunction.
- Do not expose discs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

When playing a CD-R or CD-RW

You can play back your original CD-Rs or CD-RWs recorded in audio CD format or in MP3 format. (However, they may not be played back depending on their characteristics or recording conditions.)

- User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already “finalized.”
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- Some CD-Rs or CD-RWs may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player’s lens is dirty.
- CD-Rs or CD-RWs are susceptible to high temperatures or high humidity; so do not leave them inside your car.
- CD-RWs may require a longer readout time. (This is caused by the fact that the reflectance of CD-RWs is lower than for regular CDs.)



TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Causes	Remedies
General	• Sound is sometimes interrupted.	Connections are not good.	Check the cords and connections.
	• Sound cannot be heard from the speakers.	The volume control is turned to the minimum level.	Adjust it to the optimum level.
		Connections are incorrect.	Check the cords and connections.
• This unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button on the front panel (see page 2.)	
FM/AM	• SSM automatic preset does not work.	Signals are too weak.	Store stations manually.
	• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
Disc Playback	• Disc cannot be played back.	Disc is inserted upside down.	Insert the disc correctly.
	• Disc sound is sometimes interrupted.	You are driving on rough roads.	Stop disc play while driving on rough roads.
		Disc is scratched.	Change the disc.
		Connections are incorrect.	Check the cords and connections.
	• “NO DISC” appears on the display.	No disc is in the loading slot (or in the magazine.)	Insert disc.
		Disc is inserted incorrectly.	Insert it correctly.
	• Disc can neither be played back nor ejected.	The CD player may function incorrectly.	Press and hold both the ⏮/I/ATT and CD ▲ buttons at the same time for several seconds.
	• “EJECT ERR” appears on the display.	The disc was interrupted ejection or insertion.	Press CD ▲ , or press both the ⏮/I/ATT and CD ▲ buttons together to clear the message.
• CD-R/CD-RW cannot be played back. • Tracks cannot be skipped on CD-R/CD-RW.	CD-R/CD-RW is not finalized.	<ul style="list-style-type: none"> • Change a finalized CD-R/CD-RW. • Finalize the CD-R/CD-RW with the component which you used for recording. 	



Symptoms	Causes	Remedies
<ul style="list-style-type: none"> Disc cannot be played back. 	No MP3 files are recorded on the disc.	Change the disc.
	MP3 files do not have the extension code—mp3 in their file names.	Add the extension code—mp3 to their file names.
	MP3 files are not recorded in the format compliant with ISO 9660 Level 1 or 2.	Change the disc. (Record MP3 files using a compliant application.)
<ul style="list-style-type: none"> Files skip, or 00'00" appears and playback stops. 	Files are encoded in Layer 1 or Layer 2 format.	Insert a disc that contains files encoded in Layer 3 format.
<ul style="list-style-type: none"> Noise is generated. 	The file played back is not an MP3 file (although it has the extension code—mp3).	Skip to another file or change the disc. (Do not add the extension code—mp3 to non-MP3 files.)
<ul style="list-style-type: none"> A longer readout time is required ("FILE CHECK" keeps flashing on the display). 	Readout time varies due to the complexity of the directory/file configuration.	Do not use too many hierarchies and directories. Also, do not record any other types of audio tracks together with MP3 files.
<ul style="list-style-type: none"> Files cannot be played back as you have intended them to play. 	Playback order is determined when the files are recorded.	_____
<ul style="list-style-type: none"> Elapsed playing time is not correct. 	This sometimes occurs during play. This is caused by how the files are recorded on the disc.	_____
<ul style="list-style-type: none"> "MP3" flashes on the display. 	There are no MP3 files in the current directory.	Select another directory.
<ul style="list-style-type: none"> "NO FILES" appears on the display for a while, then the disc ejects automatically. 	There are no MP3 files in this disc.	Insert a disc that contains MP3 files.
<ul style="list-style-type: none"> Correct characters are not displayed. (Tag Display, e.g. album name) 	This unit can only display alphabets (capital: A–Z, small: a–z) and numbers.	_____

MP3 Playback



	Symptoms	Causes	Remedies
Tape Playback	• A cassette tape cannot be inserted.	You have tried to insert a cassette in the wrong way.	Insert the cassette with the exposed tape facing right.
	• Cassette tapes become hot.	This is not a malfunction.	_____
	• Tape sound is at very low level and sound quality is degraded.	The tape head is dirty.	Clean it with a head cleaning tape.
CD Changer	• "NO MAGAZINE" appears on the display.	No magazine is in the CD changer.	Insert the magazine.
	• "RESET 8" appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
	• "RESET 1 – RESET 7" appears on the display.	_____	Press the reset button of the CD changer.
	• The CD changer does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button on the front panel (see page 2.)

About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying. We recommend that you stop CD play while driving on such rough roads.

**Having TROUBLE with operation?
Please reset your unit
Refer to page of How to reset your unit**

SPECIFICATIONS

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 45 W per channel

Rear: 45 W per channel

Continuous Power Output (RMS):

Front: 17 W per channel into 4 Ω ,
40 Hz to 20 000 Hz at no more
than 0.8% total harmonic
distortion.

Rear: 17 W per channel into 4 Ω ,
40 Hz to 20 000 Hz at no more
than 0.8% total harmonic
distortion.

Load Impedance: 4 Ω (4 to 8 Ω allowance)

Equalizer Control Range:

LOW: ± 12 dB (50 Hz, 80 Hz, 120 Hz)

MID: ± 12 dB (700 Hz, 1 kHz, 2 kHz)

HIGH: ± 12 dB (8 kHz, 12 kHz)

Frequency Response: 40 Hz to 20 000 Hz

Signal-to-Noise Ratio: 70 dB

Auxiliary input jack:

3.5 mm dia. stereo mini jack

Line-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 108.0 MHz

AM: 531 kHz to 1 602 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical
pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

MP3 decoding format: MPEG1/2 Audio Layer 3

Max. Bit Rate: 320 Kbps

CASSETTE DECK SECTION

Wow and Flutter: 0.1 % (WRMS)

Fast-Wind Time: 100 sec. (C-60)

Frequency Response: 30 Hz to 16 000 Hz
(Normal tape)

Signal-to-Noise Ratio: (Normal tape)

Dolby B NR ON: 65 dB

Dolby B NR OFF: 56 dB

Stereo Separation: 40 dB

GENERAL

Power Requirement:

Operating Voltage: DC 14.4 V (11 V to 16 V
allowance)

Grounding System: Negative ground

Allowable Working Temperature:

0°C to +40°C

Dimensions (W x H x D):

Installation Size:

178 mm x 100 mm x 150 mm

Front Panel Size:


170 mm x 96 mm x 20 mm

Mass: 2.2 kg (excluding accessories)

*Design and specifications subject to change without
notice.*

KW-XC828


راديو مع مشغل اشرة كاسيت/CD

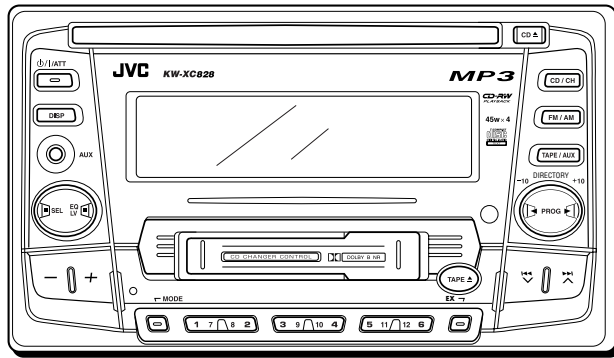

MP3

**COMPACT
disc
DIGITAL AUDIO
TEXT**

**CD-RW
PLAYBACK**

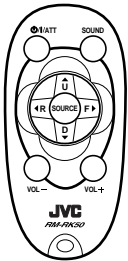

لعمليات التركيب والتوصيلات، يرجى مراجعة كتيب التعليمات المنفصل.

دليل التعليمات

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>