 
 


JX-CD7000

jWIN[®]

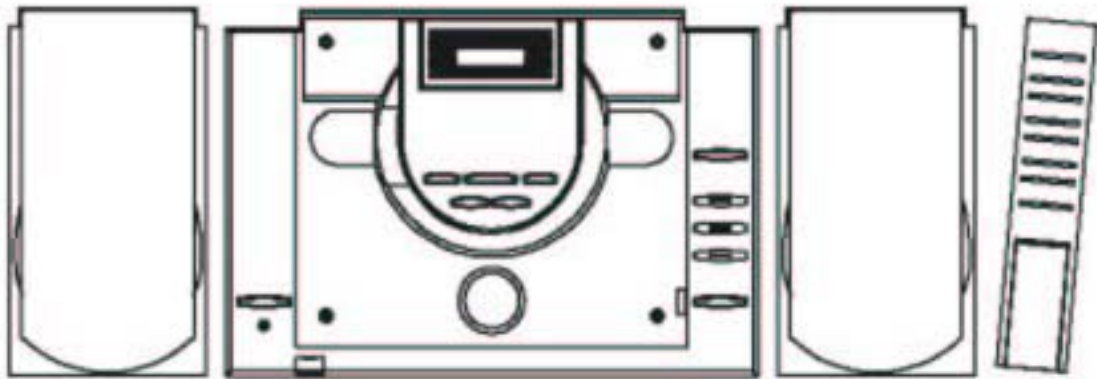

INSTRUCTION MANUAL

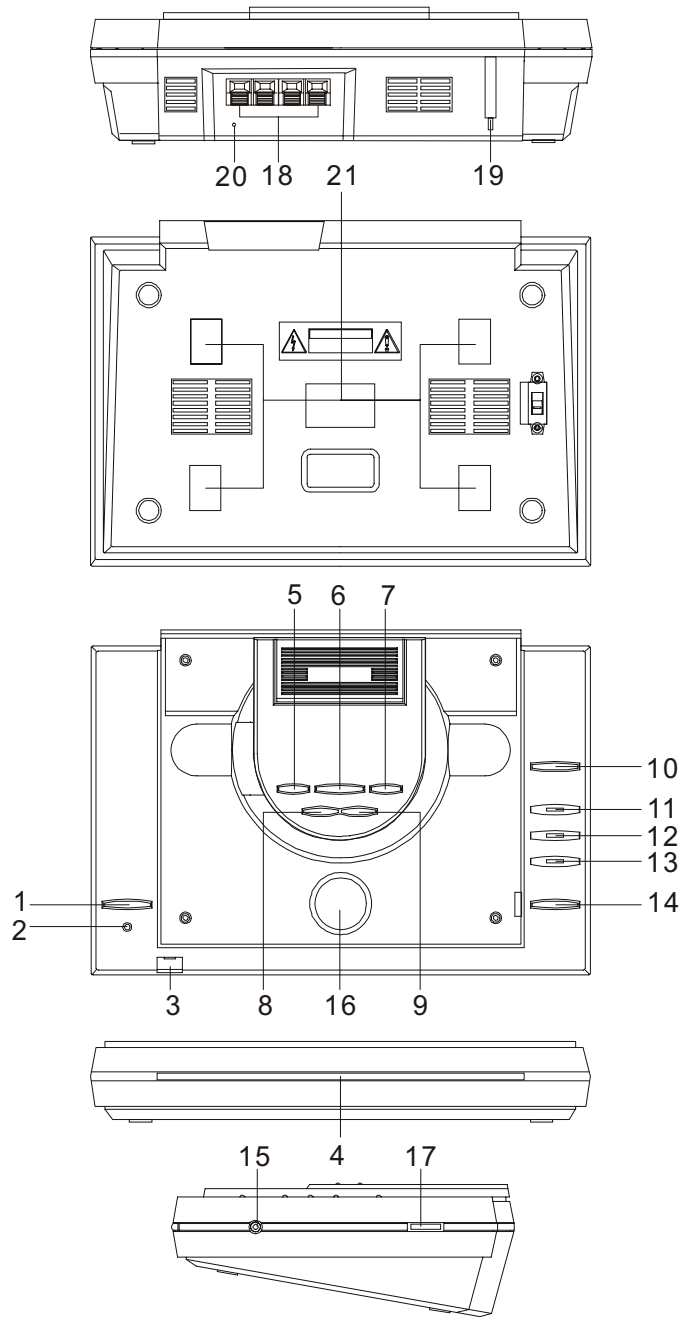

To achieve the utmost in enjoyment and performance, please read this manually carefully before attempting to operate the unit in order to become familiar with its features, and assure you years of faithful, trouble free performance and listening pleasure.

Important Notes

- * Keep instructions the safety and operating instructions should be retained for future reference.
- * Avoid installing the unit in locations described below:
 - Please exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
 - On top of other stereo equipment that radiate too much heat.
 - Places locking ventilation or dusty places.
 - Places subject to constant vibration.
 - Humid or moist places.
- * Make sure not to obstruct the ventilation opening.
- * Operate turning controls and switches as instructed in the manual.
- * Before turning on the power for the first time, make certain the power cord is properly installed.
- * Store your tapes or CD in a cool area to avoid damage from heat.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personal.

Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside, refer all servicing to qualified service personal.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER(OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONAL.



DANGEROUS VOLTAGE

Conductor dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.



ATTENTION

The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING.

Note:

This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.


This CD player includes micro-processors which may malfunction as a result of external electrical interference or noise. If the CD player is not working properly, disconnect the power source and then reconnect it.

› **FEATURES AND CONTROLS**

- | | |
|-------------------------------------|-----------------------------|
| 1. POWER BUTTON | 12. AM / FM / FM ST. SWITCH |
| 2. STANDBY | 13. CD / RADIO SWITCH |
| 3. IR SENSOR | 14. CD DOOR OPEN BUTTON |
| 4. POWER INDICATOR / MUTE INDICATOR | 15. HEADPHONE JACK |
| 5. CD DISPLAY BUTTON | 16. DISPLAY WINDOW |
| 6. SKIP / SEARCH BUTTON | 17. TUNING KNOB |
| 7. REPEAT BUTTON | 18. SPEAKER TERMINAL |
| 8. STOP BUTTON | 19. AC POWER CORD |
| 9. PLAY / PAUSE BUTTON | 20. FM ANTENNA |
| 10. VOLUME UDOWN & UP BUTTON | 21. MOUNTING HOLE |
| 11. BASS ON / OFF SWITCH | |


› **REMOTE CONTROL**

 1. POWER BUTTON
2. PLAY / PAUSE BUTTON
3. STOP BUTTON
4. SKIP / SEARCH BUTTON
5. REPEAT BUTTON
6. CD DISPLAY BUTTON
7. MUTE BUTTON
8. VOLUME DOWN / UP BUTTON

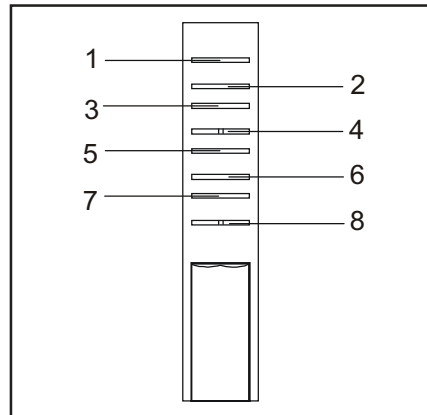

› **PUTTING THE BATTERIE INTO THE REMOTE CONTROL UNIT**

 Press down of the compartment cover, and slide the cover off open the compartment.
Place the two accessory (UM3), (AA), (R6) batteries in the remote control according to the polarity markings (“+” and “-”) inside the compartment and on the batteries.
Place the cover over the compartment, press down lightly, and push it upward until it snaps on.

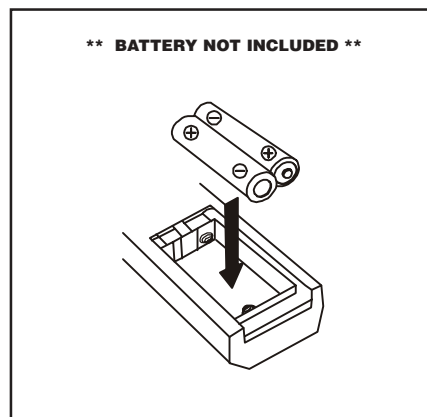

› **FM ANTENNA**

FM antenna wire for better FM reception.

› **ADJUSTING THE SOUND**

Press the volume +/- buttons to set the sound level. For increased bass at all volume levels, switch the BASS SWITCH on to boost the low frequency sound. To mute the sound, press MUTE button on the remote control the POWER ON indicator will flash. To resume the sound, press the MUTE button again or just press the volume +/- button to disable the MUTE function.

› **RADIO OPERATION**

Set the FUNCTION switch to RADIO.

FM

Select FM mode band selector switch. Turn the TUNING control to select the required station. The FM stereo indicator light will show a stereo broadcast is being received. Fully extend the FM antenna and adjust its direction for best FM reception.

MW

Select MW on band selector switch. Turn the TUNING control to select the required station. For operation on AM the set control a built-in ferrite aerial which is directional. Therefore, the set should be positioned for the best signal strength.

FM STEREO RECEPTION

For reception of a FM stereo broadcast station, set the MW / FM / FM ST. switch to FM ST. position. The FM ST. will indicator on the LCD display when a FM STEREO broadcast is being received.

› **LISTENING TO COMPACT DISC (CD)**

The LCD indicator always shown the tracks of a disc or program which are still to be played. It works in all modes, in stop modes, all tracks of the disc or the program are shown.

Playing The Entire Disc

1. Playback will start by pressing PLAY/PAUSE, the indicator then appears.
Playback starts with the first track. The display shown the current track number and its elapsed time.
2. To interrupt playback, press PLAY/PAUSE. The time elapse indicator will flash.
3. To resume playback, press PLAY/PAUSE again.
4. To stop playback, press STOP.

Selection A Different Track During Play

1. Press SKIP FORWARD /BACKWARD button on the unit (or remote), the required track number appears in the display.
2. Press PLAY/PAUSE button to starting playing. Starting again with the track that is currently playing.
3. Press SKIP F.R. button once.
4. The track will be started again from the beginning.

Starting Again With The Track That Is Currently Playing

1. Press SKIP F.R. once.
2. The track will be started again from the beginning.

Stopping Play

 
1. Press STOP if you wish to stop play. The disc and track number which can be played will now appear in the display.
2. Open the CD door on the unit to remove the CD.

> **COMPACT DISC**

1. Always use a compact discs bearing the mark as shown.



2. Notes on handling discs
Removing the disc from its storage case and loading it.
 - * Do not touch the reflective recorded surface.
 - * Do not stick paper or write anything on the surface.
 - * Do not bend the disc.

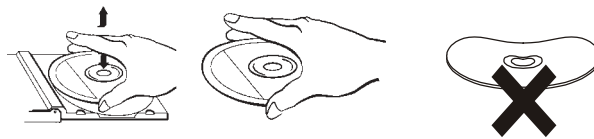

3. Storage
 - * Store the disc in its case.
 - * Do not expose discs to direct sunlight or high temperatures, high humidity or dusty places.
4. Cleaning a disc
 - * Should the disc become soiled, wipe off dust, dirt and fingerprints with a soft cloth.
 - * The disc should be cleaned from the center to the edge.

FROM THE CENTRE TO THE EDGE



CORRECT

 


INCORRECT

- * Never use benzene, thinners, record cleaner fluid or anti static spray.
- * Be sure to close the CD door so the lens is not contaminated by dust.
- Do not touch the lens.

› **CD DISPLAY WINDOW**

- A. PLAY INDICATOR
- C. TRACK NUMBER DISPLAY
- D. REPEAT INDICATOR

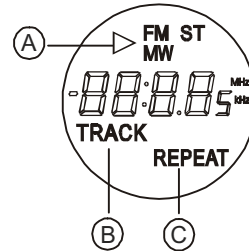

› **REPEAT PLAY**

When playing CD, if you desire to repeat the same track only, press REPEAT button once and the "REPEAT" display will light up and flash. If repeat all, press the REPEAT button twice and the "REPEAT" display will light up and not flash. To cancel repeat play, press the STOP button twice until the repeat indicator disappeared.

› **SPECIFICATION**

POWER SUPPLY :	AC 230V~ 50Hz DC 12V
OUTPUT POWER :	1.8 WATTS RMS x 2
UNIT DIMENSION :	291(L) X 201(W) X 77(H) mm
SPEAKER DIMENSION :	110(L) X 162(W) X 205(H) mm
N.W. :	2.85KG

RADIO SECTION

FREQUENCY RANGE :	FM 87.5 – 108 MHz MW 530 - 1600 kHz
-------------------	--

CASSETTE SECTION

TAPE SPEED :	4.76 CM/SEC.
FREQUENCY RESPONSE :	125Hz - 8 KHz

COMPACT DISC SECTION

OPTICAL PICKUP :	3 – BEAM LASER
FREQUENCY RESPONSE :	100Hz – 16 KHz

REVISED 1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>