

jWIN

TEL: 516-626-7188
FAX: 516-626-7105

Website: www.jwin.com

jWIN

Splash-Proof AM / FM Radio with Alarm Clock



JX-M59

INSTRUCTION MANUAL

Please read this manual carefully before operating and save it for future reference.

HAVE A QUESTION? PLEASE VISIT WWW.JWIN.COM

© 2008 jWIN Electronics Corp. All rights reserved. No portion of this printed material or product enclosed herewith including design, shape and graphics, may be reproduced or transmitted in any form without the expressed written consent of jWIN Electronics Corp. by any means, electronic or mechanical, including photocopying, recording or use of an information storage and retrieval system. Any unauthorized distribution or reproduction of this printed material or product, or any portion thereof, will be prosecuted to the fullest possible extent of the law.

www.jwin.com

MAINTENANCE TROUBLESHOOTING GUIDE AND SPECIFICATIONS

Cleaning the Unit

1. The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, Use caution when cleaning and wiping the plastic parts.
2. If the cabinets become dusty wipe them with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinets.
3. If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

Caution: never allow any water or other liquids to get inside the unit while cleaning.

Troubleshooting Guide

If you experience difficulties in the use of this unit, please check the following before calling for Customer Service.

- Noise or distorted sound when playing the radio.
 - Radio station may not be properly tuned. Tune to desired radio frequency again.
 - The radio signal is weak. Reposition the unit for better reception.
- No radio sound
 - Radio may not be turned on, Turn the VOLUME/ON/OFF knob clockwise until you hear a click.
 - Batteries may not be installed. Install four (4) fresh AA batteries in the battery compartment.
- Alarm does not go off at set time
 - The alarm setting may not be on. Follow instructions for setting the alarm and putting it in the set mode.
 - Time may not be set properly. Check the time settings of the Alarm.
 - AM or PM may not be chosen properly. Make sure that you choose AM or PM according to your need.


Specifications

- AM: 530kHz – 1710kHz, FM: 88MHz – 108MHz
- Power Requirement
Batteries: 6V (4 x "AA" batteries, not included)
- Unit Dimensions (W x H x D): Approx. 8" x 6.5" x 1.2" (203mm x 165mm x 30mm)
- Unit Weight: Approx. 0.64 lbs (0.29 kg)


USER SAFETY GUIDE

IMPORTANT SAFETY PRECAUTIONS

1. This unit has been constructed to resist mild steam and light splashes from the shower or bath only. It should not be operated under running water and under no circumstances should it be fully immersed in water.
2. If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment.

	<p>Dispose of old batteries safely. Do not throw them into a fire.</p>
---	--

IMPORTANT SAFETY INSTRUCTIONS

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained in a secure place for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be observed.
4. **FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
5. **HEAT** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
6. **POWER SOURCES** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
7. **CLEANING** - The appliance should be cleaned with a dry cloth.
8. **OBJECT AND LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the device's openings.
9. **CARTS AND STANDS** - The appliance should be used only with a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
 
10. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service professional when:
 - a. Objects have fallen into, or liquid has been spilled into the appliance's apertures.
 - b. The appliance has been exposed to rain.
 - c. The appliance has been dropped and suffered damage.
 - d. The appliance does not appear to operate normally, or exhibits a change in performance.

USER SAFETY GUIDE

IMPORTANT SAFETY INSTRUCTIONS – CONTINUED

11. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user's operating instructions. All other servicing should be referred to qualified service professional.
12. **BATTERY USAGE** – To prevent battery leakage, which may result in bodily injury, property damage or damage to the unit, follow these instructions:
 - a. Install all batteries correctly according to the polarity (+ -) as marked on the unit.
 - b. Do not mix old and new batteries, carbon and alkaline, etc.
 - c. Remove batteries from the unit when the device will not be used for an extended period of time.
13. **LEAD AND MERCURY** - This product may contain lead and/or mercury. Disposal of these materials may be regulated by your local authorities due to environmental considerations. For more detailed disposal or recycling information, please contact your local authorities or the EIA (Electronic Industries Alliance) – <http://www.eiae.org>

IMPORTANT NOTES

1. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
2. Keep this manual in a safe place for future reference.

You can help to protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal center.



TO A USER IN USA

This equipment has been tested and found to comply with the limits for a Radio Receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- If necessary, consult the dealer or an experienced radio / TV technician for additional suggestions.

OPERATIONAL INSTRUCTIONS

Setting the Clock

1. Press the **MODE** button four (4) times. The month will appear on the LCD screen
2. Press the **SET** button to select the month and press the **MODE** button to confirm.
3. With each confirmed setting, the setting mode will advance: date, hour, minute.
4. Follow the same procedure to set each function.
5. Press the **SET** button to save all settings and return to normal mode.

Setting the Alarm

1. Press the **MODE** button once. "AL" will appear on the bottom left corner of the LCD screen and the time will blink.
2. Press the **SET** button repeatedly to choose from the following
 - a. Alarm mode only
 - b. Alarm and Hourly Beep modes
 - c. Hourly Beep mode only
 - d. No Alarm or Beep
3. Press the **MODE** button to select the hour.
4. Press the **SET** button repeatedly to set the hour.
5. Repeat the above process to set the minute.
6. Press the **MODE** button to set the alarm time.
7. Press the **MODE** or **SET** button to turn off the alarm.
8. Choose the **2-d** to disable the Alarm or Beep.

Listening to the Radio


1. Turn the **VOLUME/ON/OFF** knob clockwise until you hear a click.
2. Adjust the volume using the **VOLUME/ON/OFF** knob. Find a comfortable listening level.
3. Press either AM and FM buttons to select a radio band.
4. Adjust the **TUNING** knob to obtain the desired radio station.
5. To turn off the radio, turn the **VOLUME/ON/OFF** knob counter clockwise until you hear a click.

Tips for Getting Better Reception

1. This unit has the built-in AM/FM antennas. Thus, an external FM wire antenna is not required to be installed on this unit to receive the FM radio. However, if you reside in the poor reception area and want to enhance the FM radio reception more, you might move and rotate the unit for better reception.
2. To get better AM radio reception, be sure to place the unit vertically and reposition it if there are noises on the AM station.

GETTING STARTED


Location of Controls on the Main Unit

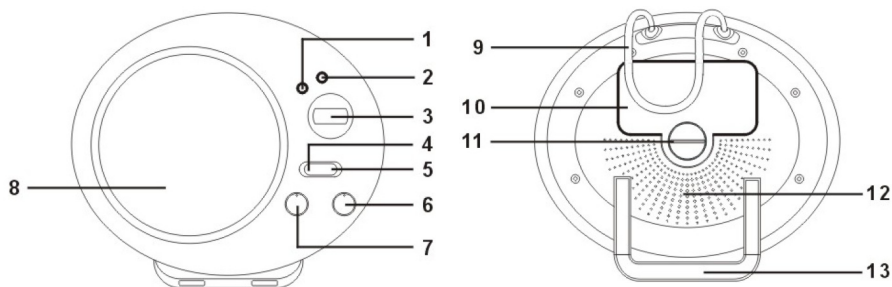

1. Mode button	6. Tuning knob	11. Battery door open knob
2. Set button	7. Power On/Off/Volume knob	12. Speaker
3. Clock display	8. Mirror	13. Table Stand
4. AM band button	9. Nylon (rope) hanger	
5. FM band button	10. Battery door	

Using the Stand for the Desktop Use


To place this unit on the desktop, simply pull the integrated stand out and gently place it on your desktop.

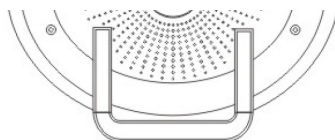

Installing batteries

This unit operates on 4 "AA" (or UM-3) batteries (not included).

1. Open the **BATTERY COMPARTMENT** door by rotating the tab and lift up the lid. The **BATTERY COMPARTMENT** is located on the back of the unit.
2. Insert 4 "AA" alkaline batteries, following the polarity (+/-) as indicated inside the **BATTERY COMPARTMENT**.
3. Close the **BATTERY COMPARTMENT** cover.

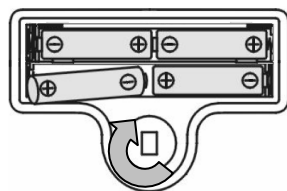

Important Note: Please protect the environment. Dispose of old batteries properly throw the according to your local regulations.

USER SAFETY GUIDE

COMPLIANCE OF FCC RULE

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPLASH RESISTANCE

This unit has been constructed to resist mild steam and light splashes from the shower or bath only. It should not be operated under running water and under no circumstances should it be fully immersed in water. This unit isn't a water-resistant device.

GETTING STARTED

Thank you for purchasing JX-M59. Unpack the package and make sure all the accessories and main unit are put aside so they will not be lost. We recommend that you retain the original carton and packaging materials for future use, should you transport or ship the unit in the future.

Splash-proof AM / FM radio with alarm clock

- Splash-proof design with circular mirror on the front
- Completely self-contained for portable operation
- Liquid crystal display (LCD)
- Integrated AM / FM radio
- Clock display with alarm function
- Built-in speaker and stand

In the Box

- Splash-proof Mirror with AM / FM Radio
- Suction Cups



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>