



KAMBROOK

Strip Wall Heater

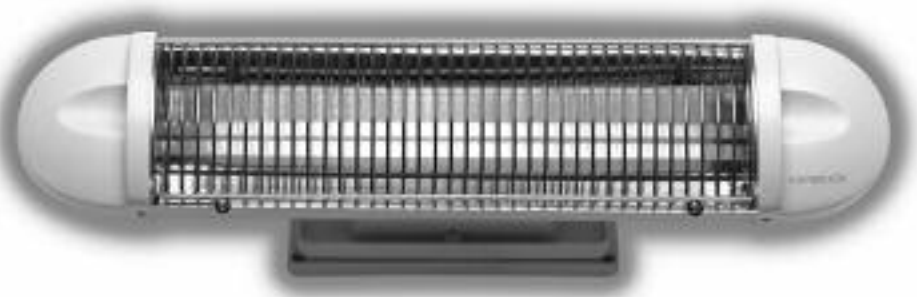

KNOW YOUR KAMBROOK STRIP WALL HEATER

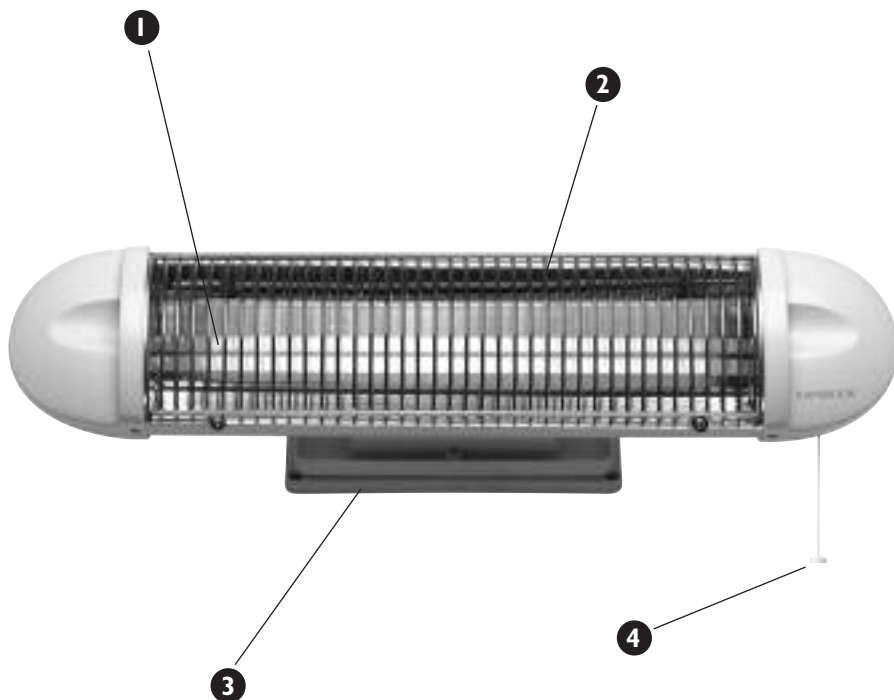

1. Heater elements
2. Safety grill
3. Wall mounting bracket
4. On/off pull cord

BEFORE USING YOUR RADIANT HEATER, PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

IMPORTANT PRECAUTIONS READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS HEATER.

When using electrical appliances, basic precautions should always be followed, including the following:

**USE ONLY 230/240V a.c. EARTHED
SUPPLY**

- Remove packing supports from elements before using.
- Keep combustible materials such as drapes and other furnishing away from heater.
- Your Radiant Strip Heater is designed for wall mounting only.
DO NOT mount on ceiling or floor.
- The heater must **NOT** be located immediately below a socket outlet.
- Extreme caution is necessary when this heater is used by or near children or invalids.
- Young children should be supervised to ensure they do not play with the heater.
- Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
- Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.
- Do not use outdoors.
- Place unit well clear of heat sensitive surfaces
- When in the ON position the neon light will illuminate.
- Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- To prevent a possible fire, allow ample space around the heater (at least 1.7m at front) and do not block front grill in any manner. Check the elements and grill from time to time for accumulated dust.
- To disconnect heater switch the control setting to the OFF position, then switch off at the power outlet prior to removing the plug from its outlet.
- Do not insert or allow foreign objects to pass through the element guard as this may cause an electric shock, fire or damage the heater.
- Do not touch hot metal surfaces.
- **DO NOT IMMERSE** in any liquid or allow liquids to be spilt on heater.
- Do not allow power cord to contact hot metal surfaces.
- Set the control setting to the OFF position then Unplug from power outlet and allow heater to cool down before cleaning or storing.
- Do not use the heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

- Use this heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury and voids all warranties.

INSTALLATION AND OPERATING

1. Remove your heater from its carton, unwind the cord to its full length. Remove all protective packaging
2. Your heater must be wall mounted and no closer than 25cm to ceiling, 200cm to floor, 25cm to side walls.
3. Remove the mounting bracket from the rear of the heater and secure to the wall, with the five screws supplied.

NOTE: Fixed wire installations should be performed by a qualified electrician.

4. Hook heater base onto mounting bracket on wall.
5. Connect power (230/240V a.c.) by plugging into an earthed power point and switch on.
6. To switch heater on pull cord, until it clicks and the neon light illuminates
7. To switch heater off pull cord again, until it clicks and the neon light goes out.

CARE AND MAINTENANCE

- Always turn heater off and switch off at power outlet then unplug the heater before cleaning
- Use only a clean, dry cloth to clean the external surfaces of the heater only.
- Do not attempt to remove the front grill of the heater.
- Use a vacuum cleaner regularly to remove dust and fluff from the element and grill.
- If the unit has accumulated dust around the elements and grill that cannot be removed with the use of a vacuum cleaner, have a qualified service agent clean the unit.
- DO NOT operate the heater in this condition.
- Do not attempt to open the case of the heater at anytime, there are no customer serviceable parts inside.
- When not in use, pack the heater in its original box for best protection and store in a cool, clean and dry location.



KAMBROOK 12 MONTH WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Greenmount, Auckland Phone 0800 273 845 Fax 0800 288 513. For spare parts phone 0800 273 845.

If claiming under this guarantee the product must be returned freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record unless you are making a claim

KAMBROOK



Kambrook 4 Kingston Town Close Oakleigh, Victoria 3166, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 0800 273 845 Customer Service Fax 0800 288 513

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>