

# KAMBROOK



**Kambrook** 4 Kingston Town Close Oakleigh, Victoria 3166, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** (New Zealand) Mono Place Ellerslie, Auckland, New Zealand  
Customer Service Line/Spare Parts 0800 253 007 Customer Service Fax 0800 263 001

# KAMBROOK



## Essentials Can Opener



## KAMBROOK SAFETY

Welcome to Kambrook and your new Essentials Can Opener

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:

### **READ ALL INSTRUCTIONS THOROUGHLY BEFORE ACTIVATING THE APPLIANCE AND RETAIN THEM FOR FUTURE REFERENCE.**

Ensure that the power source to be used is the same as the voltage requirements of the product.

Always switch off at the power outlet and then unplug when the appliance is not in use and before cleaning.

Never immerse the power cord, plug or can opener body in any liquid.

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

Do not leave this appliance unattended while plugged into the power source.

Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

Do not place on or near a hot gas burner, electric element, or in a heated oven.

This appliance is suitable for domestic use only. Do not use this appliance for anything other than its intended use.

Do not use outdoors.


The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Regularly inspect the supply cord, plug and actual appliance for any damage.

If found damaged in any way, immediately cease use of the appliance and return the appliance to the nearest authorised Kambrook Service Centre for examination, replacement or repair.

Please call 1800 800 634 for Service Centre details in Australia.

## FEATURES OF YOUR KAMBROOK ESSENTIALS CAN OPENER

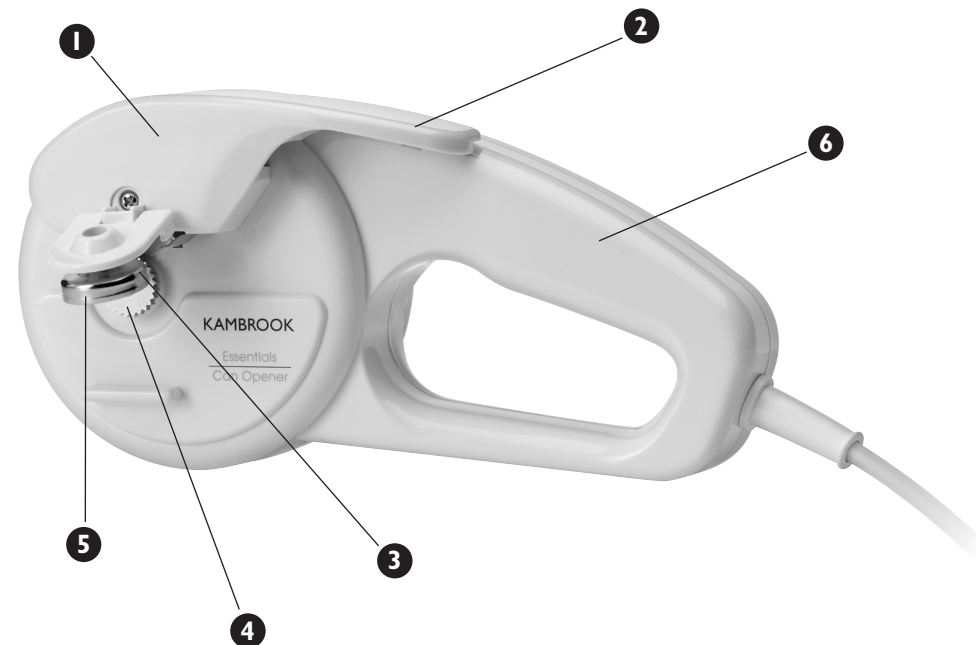

1. Cutter assembly
2. Finger-tip pressure 'On/Off' control lever
3. Cutting blade
4. Drive wheel
5. Magnetic lid holder
6. Easy grip handle

## USING YOUR KAMBROOK ESSENTIALS CAN OPENER

1. Before use, always ensure that the cutter assembly and magnetic lid holder are correctly positioned (See Fig 1).



The cutter assembly fits into the keyhole opening at the top of the Essentials Can Opener, above the drive wheel. Ensure that the post is pushed all the way into the keyhole and that the control lever is pressed firmly against the Essentials Can Opener body. Position the magnetic lid holder up or down until it is in a horizontal position (Fig 1).

2. Insert the two pin plug into a 230/240 volt power outlet and turn the power on.
3. Hold the control lever in the upright position. Position the can under the support bar so that the rim of the can rests on top of the drive wheel, tilting the can at a slight angle towards the main body of the unit (Fig 2).



4. Whilst holding the can, firmly press the control lever down, piercing the lid of the can. This holds the can and starts the cutting action. Ensure the magnetic lid holder is in contact with the lid of the can.
5. When the can begins to turn, it is no longer necessary to hold down the control lever.
6. When the can is fully open, the Essentials Can Opener will stop automatically.
7. To remove cans, support the can with one hand and lift the control lever with your thumb on your other hand. The lid will remain attached to the magnetic lid holder (Fig 3).



**⚠ CAUTION :** Be careful when removing the lid from the magnet, as the cut edge is sharp.

**Dented/damaged cans:** Occasionally, badly dented cans will cause the Essentials Can Opener to stall. If this happens, grasp the dented can and guide it through the cutting action manually until the damaged areas are open.

**Jammed cans:** To continue opening a can that has become jammed, raise the control lever and release the can. Begin cutting the can again in a new position on the can lip.

## CARE AND CLEANING

Your Kambrook Essentials Can Opener is designed so that the cutter assembly removes for easy cleaning.

To ensure best performance keep the cutter assembly clean.

Turn the power off and unplug the cord from the power outlet before cleaning.

Remove the cutter assembly by raising the lever to its most upright position, and sliding it towards you.

**Drive Wheel:**

Wipe with a damp cloth to thoroughly clean; use a small brush to remove accumulated dirt.

**Motor Housing:**

Wipe over with a damp cloth.

Do not use harsh abrasives or cleaners to clean any parts of your Essential Can Opener, as these may scratch the parts.

Do not wash any parts in a dishwasher, as the hot water temperatures and harsh detergents may ultimately warp and scratch these parts.

**⚠ NEVER IMMERSE THE ESSENTIALS CAN OPENER OPEN IN WATER OR OTHER LIQUID.**



## KAMBROOK 12 MONTH REPLACEMENT WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades and mixing containers.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

YOUR PURCHASE RECORD (Please complete)

Attach purchase receipt here.

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER (If applicable) \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

Please don't return purchase record unless you are making a claim

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>