



KAMBROOK

12 MONTH WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

YOUR PURCHASE RECORD (Please complete)

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Attach a copy of purchase receipt here.

Please don't return purchase record unless you are making a claim

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 271 3980 Fax 0800 288 513. For spare parts phone 09 271 3980.

If claiming under this guarantee the product must be returned to freight prepaid.

KAMBROOK



Kambrook 461 Plummer Street, Port Melbourne 3207, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook New Zealand, Private Bag 9441 I, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 09 271 3980 Customer Service Fax 0800 288 513

KAMBROOK




Clock Radio



Features of Kambrook Clock Radio

1. Large Snooze button
2. Tuning indicator
3. Tuning dial
4. Tuning adjustment
5. AM/FM switch
6. Volume control
7. Blue LED display
8. Auto-Buzzer-Off switch
9. Battery back-up compartment (not shown)
10. AC Power cord (not shown)
11. Time
12. FM wire antenna (not shown)
13. Alarm
14. Sleep
15. Alarm off
16. Hour
17. Minute

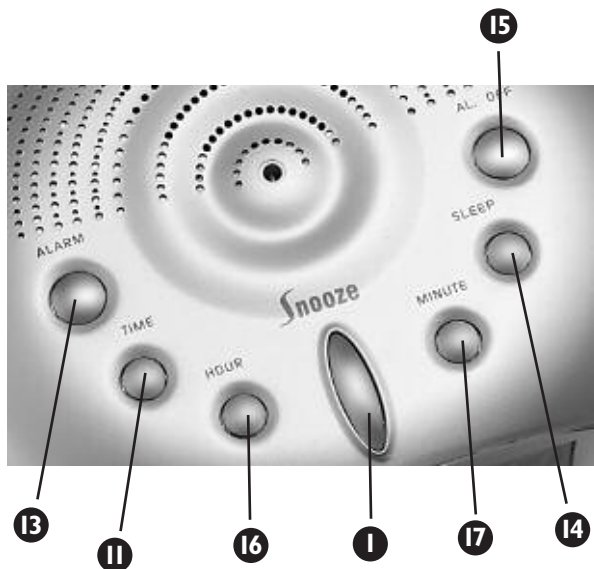

POWER SUPPLY:

AC power: 230-240 Volt, 50Hz

DC power: 9 Volt battery type (not provided) for clock back up system only. An alkaline battery type is recommended. For optimum performance, this battery should be replaced every 6 months.

Insert the AC power cord (10) into a convenient AC power outlet. Ensure the switch is in the off position, plug in the power cord and then switch on at the AC power outlet.

Connect the 9V battery inside the compartment at the bottom of the unit (9)

Back-up system: Ensures that the unit will continue to operate as normal during an AC power disruption (in order to preserve the battery life the display will not light). All clock settings will be kept in the memory, however, the clock time may require adjustment for exact accuracy. If this battery is not installed, the display will blink 12:00 to indicate that you have to reset the time and alarm settings.

SETTING THE TIME:

Press and hold the time button (11) and press the Hour (16) or Minute (17) to adjust to your desired time.

Release time (11) to store your settings in memory.

LISTENING TO THE RADIO:

Switch the function selector to the on position (8)

Switch to AM or FM position with the band selector (5)

For better reception in FM, extend the antenna (12). In AM rotate the unit.

Adjust the volume (6) the desired level
Select your desired radio station by using the Tuning dial, indicator and adjustment controls (2, 3 and 4)

To stop listening to the radio switch the function button to the off position (8)

SETTING THE ALARM AND WAKE-UP MODE

Alarm – Press and hold the alarm button (13) and press the hour (16) or minute (17) buttons to adjust your desired time, then release the alarm button (13) to store your setting in memory.

Select your alarm mode to Auto for radio, buzzer (for alarm sound) or off to switch off the alarm.

STOPPING THE ALARM

The alarm is programmed to run for 1 hour 59 minutes.

Snooze (1): Press to stop the alarm temporarily, the alarm will ring again in approximately 9 minutes.

Alarm off (15): Press to stop the alarm and it will sound again 24 hours later

OFF (8): Select to OFF position to turn off the alarm permanently, the alarm indicator/s will go off.

SLEEPING TO MUSIC

Select FM or AM by Band selector (5) then press sleep (14), the sound will come on for 59 minutes. To change this sleep time, press and hold sleep (14) and use the time setting buttons to select the desired time. To turn off the music earlier press snooze (1).

CARE AND MAINTENANCE

Use only a clean, dry cloth to clean the external surfaces of the radio only. Do not attempt to open the case of the radio at anytime, there are no customer serviceable parts inside. Have the radio serviced by a qualified service agent should the unit require access to internal components. When not in use, pack the radio in its original box for best protection and store in a cool, clean and dry location.

IMPORTANT

Do not throw batteries in fire!

This radio is designed for indoor use only. Do not immerse in water or allow liquids to come in contact with the radio.

The supply plug shall remain readily operable.

No objects filled with water shall be placed on the apparatus. The apparatus shall not be exposed to dripping or splashing.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>